


72-181

Removal and installation of window lift

Preliminary jobs:

Door liner removed ([72-100](#)).

Operation no. of operation texts and work units or standard texts and flat rates:

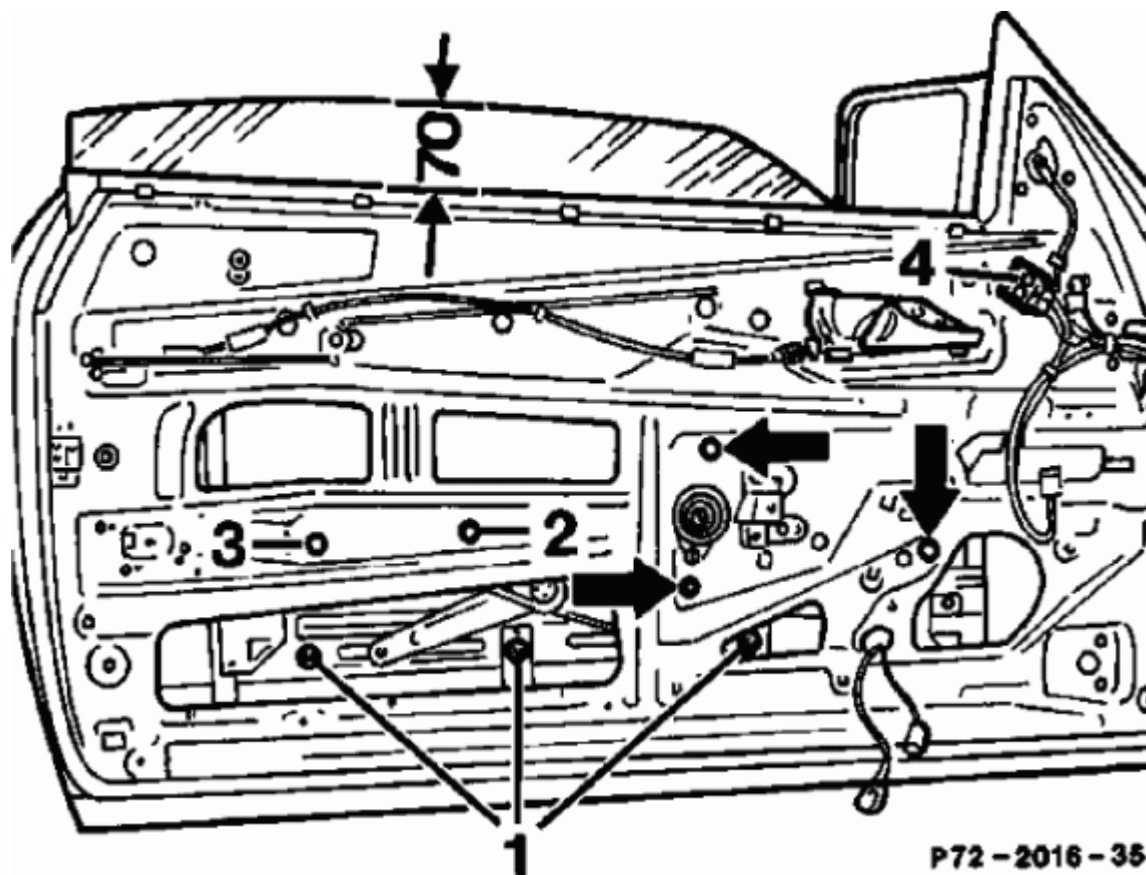

Air duct and door loudspeaker	remove.
Door foil	pull off and remove.
Crank window	position approx. 70 mm in front of bottom stop.
Screws (1) on window lift rail (3 each)	screw out.
Nuts (2 and 3) on sliding rail	screw out.
Crank window	roll up and clamp in place.
Rivets (arrows) 3 each	drill out, use 7 mm bit.

Electrical wiring	disconnect at cable connector (4) and expose cable.
Window lift	extend on inside door panel (2 hooks and 2 threaded bolts on sliding rail).
Window lift	remove through installation opening at bottom.
Rest of rivets on window lift and door shaft	remove.
Window lift	insert into inside door panel with sliding rail (2 hooks and 2 threaded bolts on sliding rail).
Window lift	fasten with rivets part No. 002 990 02 97 (3 each) and rivet pliers on inside door panel.
Nuts (2 and 3) screw onto sliding rail	tighten nut (3) while pressing down slightly.
Crank window retaining rail on window lift rail	insert and fasten (observe 3 sheet metal tabs).
Electrical cable	lay and connect at cable connector (4) so that colors match.
Crank window	adjust (72-195).
Door foil	glue on, replace damaged foils.
Air duct and door loudspeaker	install and connect.
Door liner	install.

Commercially available tools


Lever riveter Model HN1 Item no. 71 000 19	Gesipa Blindniettechnik GmbH Nordenstraße 1339 6082 Mörfelden-Walldorf
--	--

Note

The window lift motor can be removed and installed without removing the window lift (see repair instructions 82-600).


Removal, installation

- 1 Remove air duct and door loudspeaker. Pull off door foil.
- 2 Open crank window so that the screws on the window lift rail are accessible through the door cutout at the bottom.

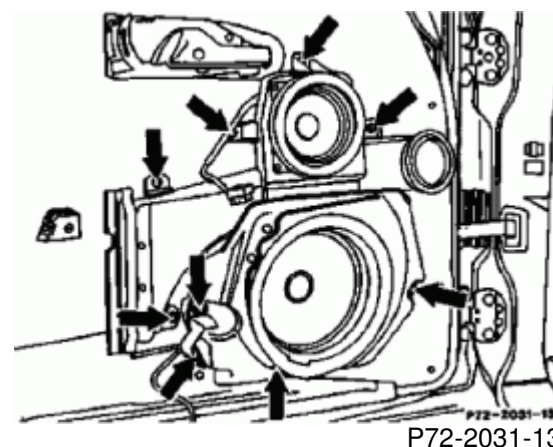


P72-2031-13

- 3 Screw out screws (3 each) on window lift rail and nuts (2 each) on sliding rail (arrows).

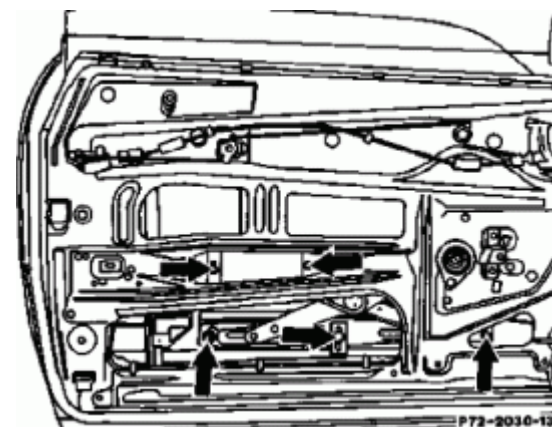


P72-2030-13

- 4 Close crank window and clamp in place.
- 5 Drill off rivet heads (3 each) for fastening window lift, use 7 mm bit (arrows).

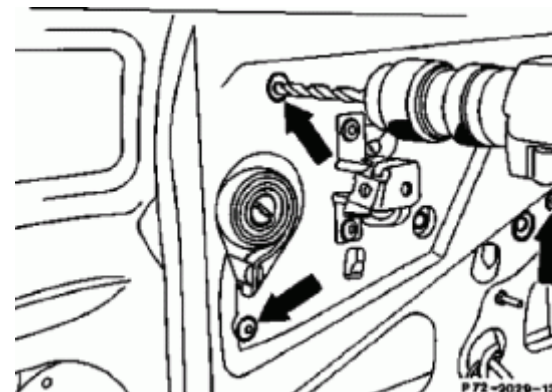

P72-2029-13


- 6 Disconnect electrical cables at cable connector and expose cable.

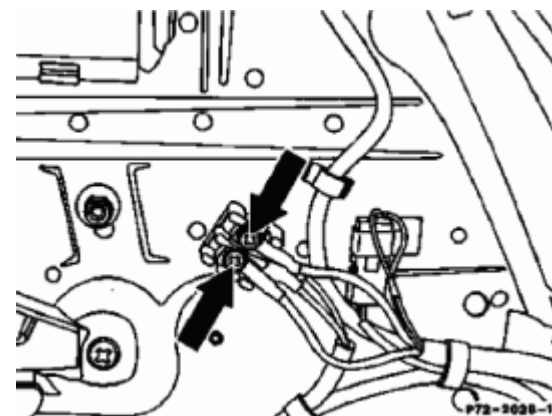

P72-2028-13


- 7 Extend window lift on inside door panel (2 hooks on base plate and 2 threaded bolts on sliding rail) and remove through installation opening at bottom

P72-2028-13

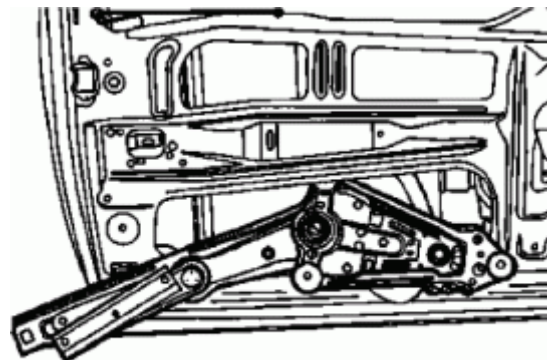


- 8 Remove remaining pieces of rivets in window lift or out of door shaft.

P72-2027-13
P72-2027-13

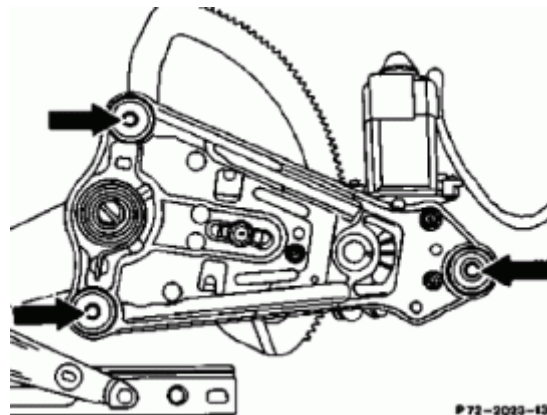


P72-2023-13
P72-2023-13


- 9 Insert window lift into inside door panel together with sliding rail.

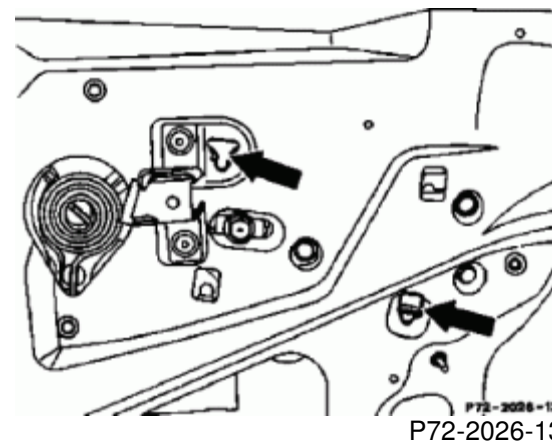


- 10 Fasten window lift on inside door panel with rivets part No. 002 990 02 97 (3 each) and rivet pliers.

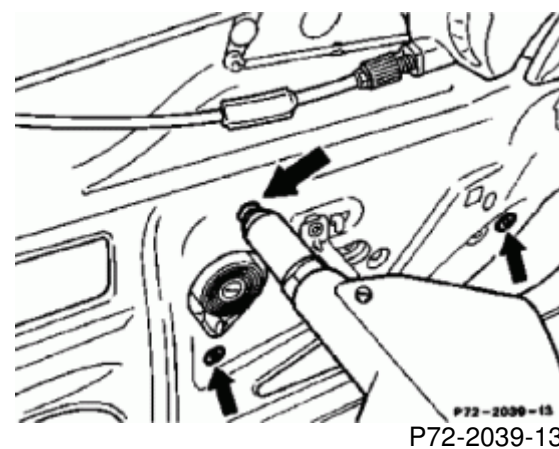


- 11 Screw nuts (2 each) onto threaded bolts on sliding rail; tighten rear nut with slight pressure downward.

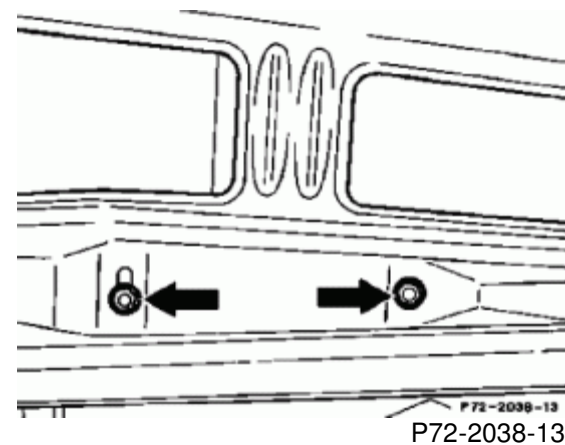

- 12 Lower crank window and position in window lift rail together with retaining rail (3 tabs) and fasten.

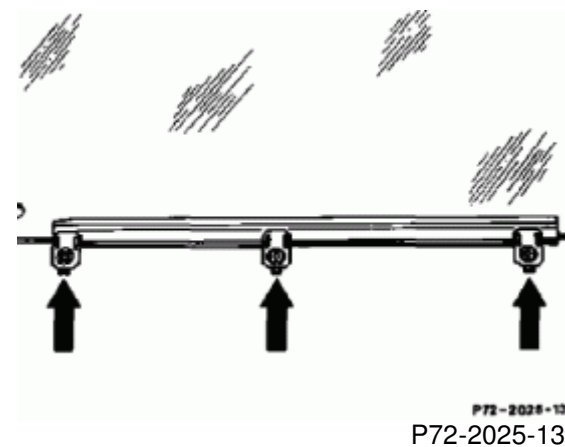


- 13 Route electrical cables and connect at cable connector so that colors match.
- 14 Install crank window ([72-195](#)).
- 15 Glue on door foil, replaced damaged door foils.

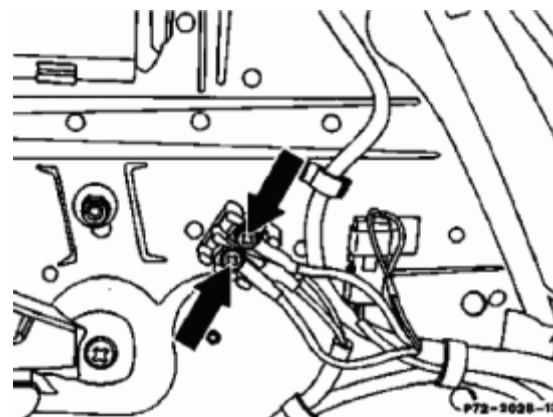

P72-2028-13

16 Screw on air duct and door loudspeaker and connect.

17 Install door liner.

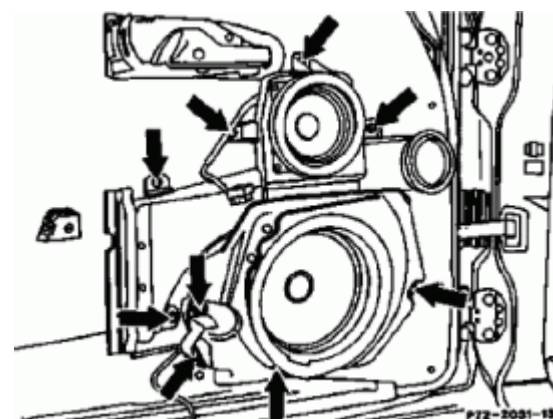

P72-2031-13