## Command Reference: ReadDiversionRightsFromStateMod()


## Read diversion right data from a StateMod diversion rights file

## StateCU and StateMod Command

Version 3.09.00, 2010-01-26

The ReadDiversionRightsFromStateMod() command reads diversion rights from a StateMod diversion rights file. The diversion rights can then be manipulated and output with other commands.

The following dialog is used to edit the command and illustrates the syntax of the command.

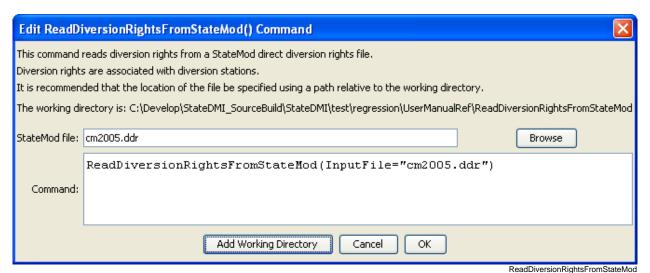

ReadDiversionRightsFromStateMod() Command Editor

The command syntax is as follows:

ReadDiversionRightsFromStateMod(Parameter=Value,...)

## **Command Parameters**

Parameter	Description	Default
InputFile	The name of the StateMod diversion rights file to	None – must be
	be read.	specified.