## Command Reference: ReadReservoirRightsFromStateMod()


## Read reservoir right data from a StateMod reservoir rights file

**StateMod Command** 

Version 3.09.01, 2010-02-01

The ReadReservoirRightsFromStateMod() command reads reservoir rights from a StateMod reservoir rights file. The reservoir rights can then be manipulated and output with other commands.

The following dialog is used to edit the command and illustrates the syntax of the command.

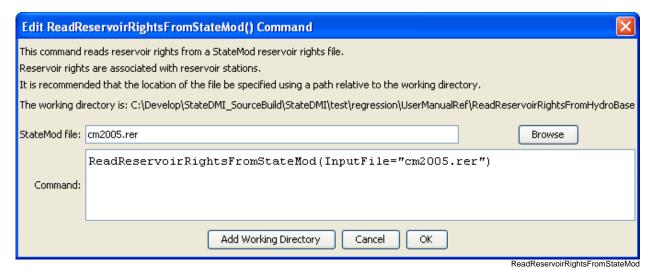

ReadReservoirRightsFromStateMod() Command Editor

The command syntax is as follows:

ReadReservoirRightsFromStateMod(Parameter=Value,...)

## **Command Parameters**

Parameter	Description	Default
InputFile	The name of the StateMod reservoir rights file to	None – must be
	read.	specified.