
Command Reference: FillInstreamFlowRight()

Fill instream flow right data

StateMod Command Version 3.09.01, 2010-02-02

The FillInstreamFlowRight() command fills missing data in existing instream flow rights. The following dialog is used to edit the command and illustrates the syntax of the command.

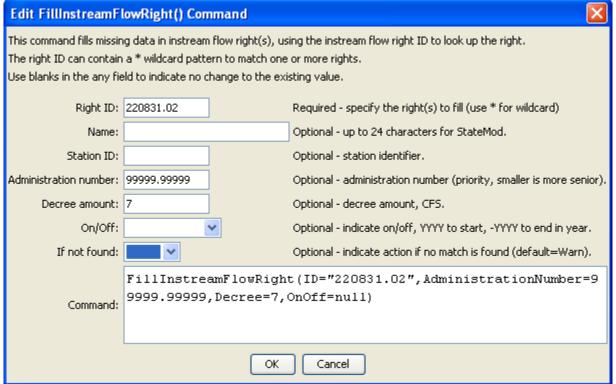

FillInstreamFlowRight() Command Editor

FillInstreamFlowRight

The command syntax is as follows:

FillInstreamFlowRight(Parameter=Value,...)

Command Parameters

Parameter	Description	Default
ID	A single instream flow right identifier	None – must be specified.
	to match or a pattern using wildcards	
	(e.g., 20*).	
Name	The name to be assigned for all	If not specified, the original
	matching instream flow right	value will remain.
	identifiers with missing name.	
StationID	The instream flow station identifier to	If not specified, the original
	be assigned for all matching instream	value will remain.
	flow right identifiers with missing	
	instream flow station identifier.	
AdministrationNumber	The administration number to be	If not specified, the original
	assigned for all matching instream	value will remain.
	flow right identifiers with missing	
	administration number.	
Decree	The water right decree to be assigned	If not specified, the original
	for all matching instream flow right	value will remain.
	identifiers with missing administration	
	decree.	
OnOff	The on/off switch to be assigned for	If not specified, the original
	all matching instream flow right	value will remain.
	identifiers with missing on/off switch,	
	either 1 for on or 0 for off, a positive	
	4-digit year to turn the right on	
	starting in the year, or a negative 4-	
	digit year to turn the right off starting	
	in the year.	
IfNotFound	Used for error handling, one of the	Warn
	following:	
	• Fail – generate a failure	
	message if the ID is not matched	
	• Ignore – ignore (don't add and	
	don't generate a message) if the	
	ID is not matched	
	Warn – generate a warning	
	message if the ID is not matched	