
Command Reference: SetOutputYearType()

Set the output year type for time series and other data

General Command

Version 3.08.02, 2010-01-07

The SetOutputYearType() command sets the output year type for time series and other time-dependent data (e.g., the order of monthly efficiencies in the StateMod diversion stations file depends on the year type). The output period used with SetOutputPeriod() should always use calendar month and year, even if other than calendar year are used for the output year type. The following dialog is used to edit this command and illustrates the syntax of the command.

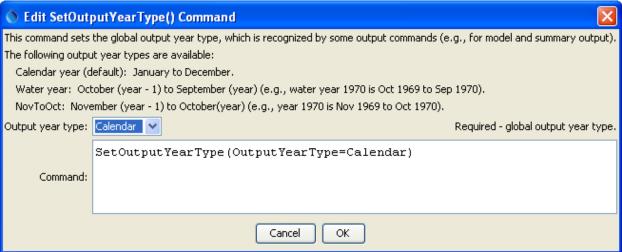

SetOutputYearType() Command

SetOutputYearType

The command syntax is as follows:

SetOutputYearType(Parameter=Value,...)

Command Parameters

Parameter	Description	Default
OutputYearType	The output year type, one of:	None – must be specified.
	Calendar – each year is Jan – Dec.	
	NovToOct – each year is Nov of the	
	previous year to Oct of the current year	
	Water – each water year is Oct of the	
	previous year to Sep of the current year.	