


220
200
180
160
140
120
100
80
60
40
20
0
-20

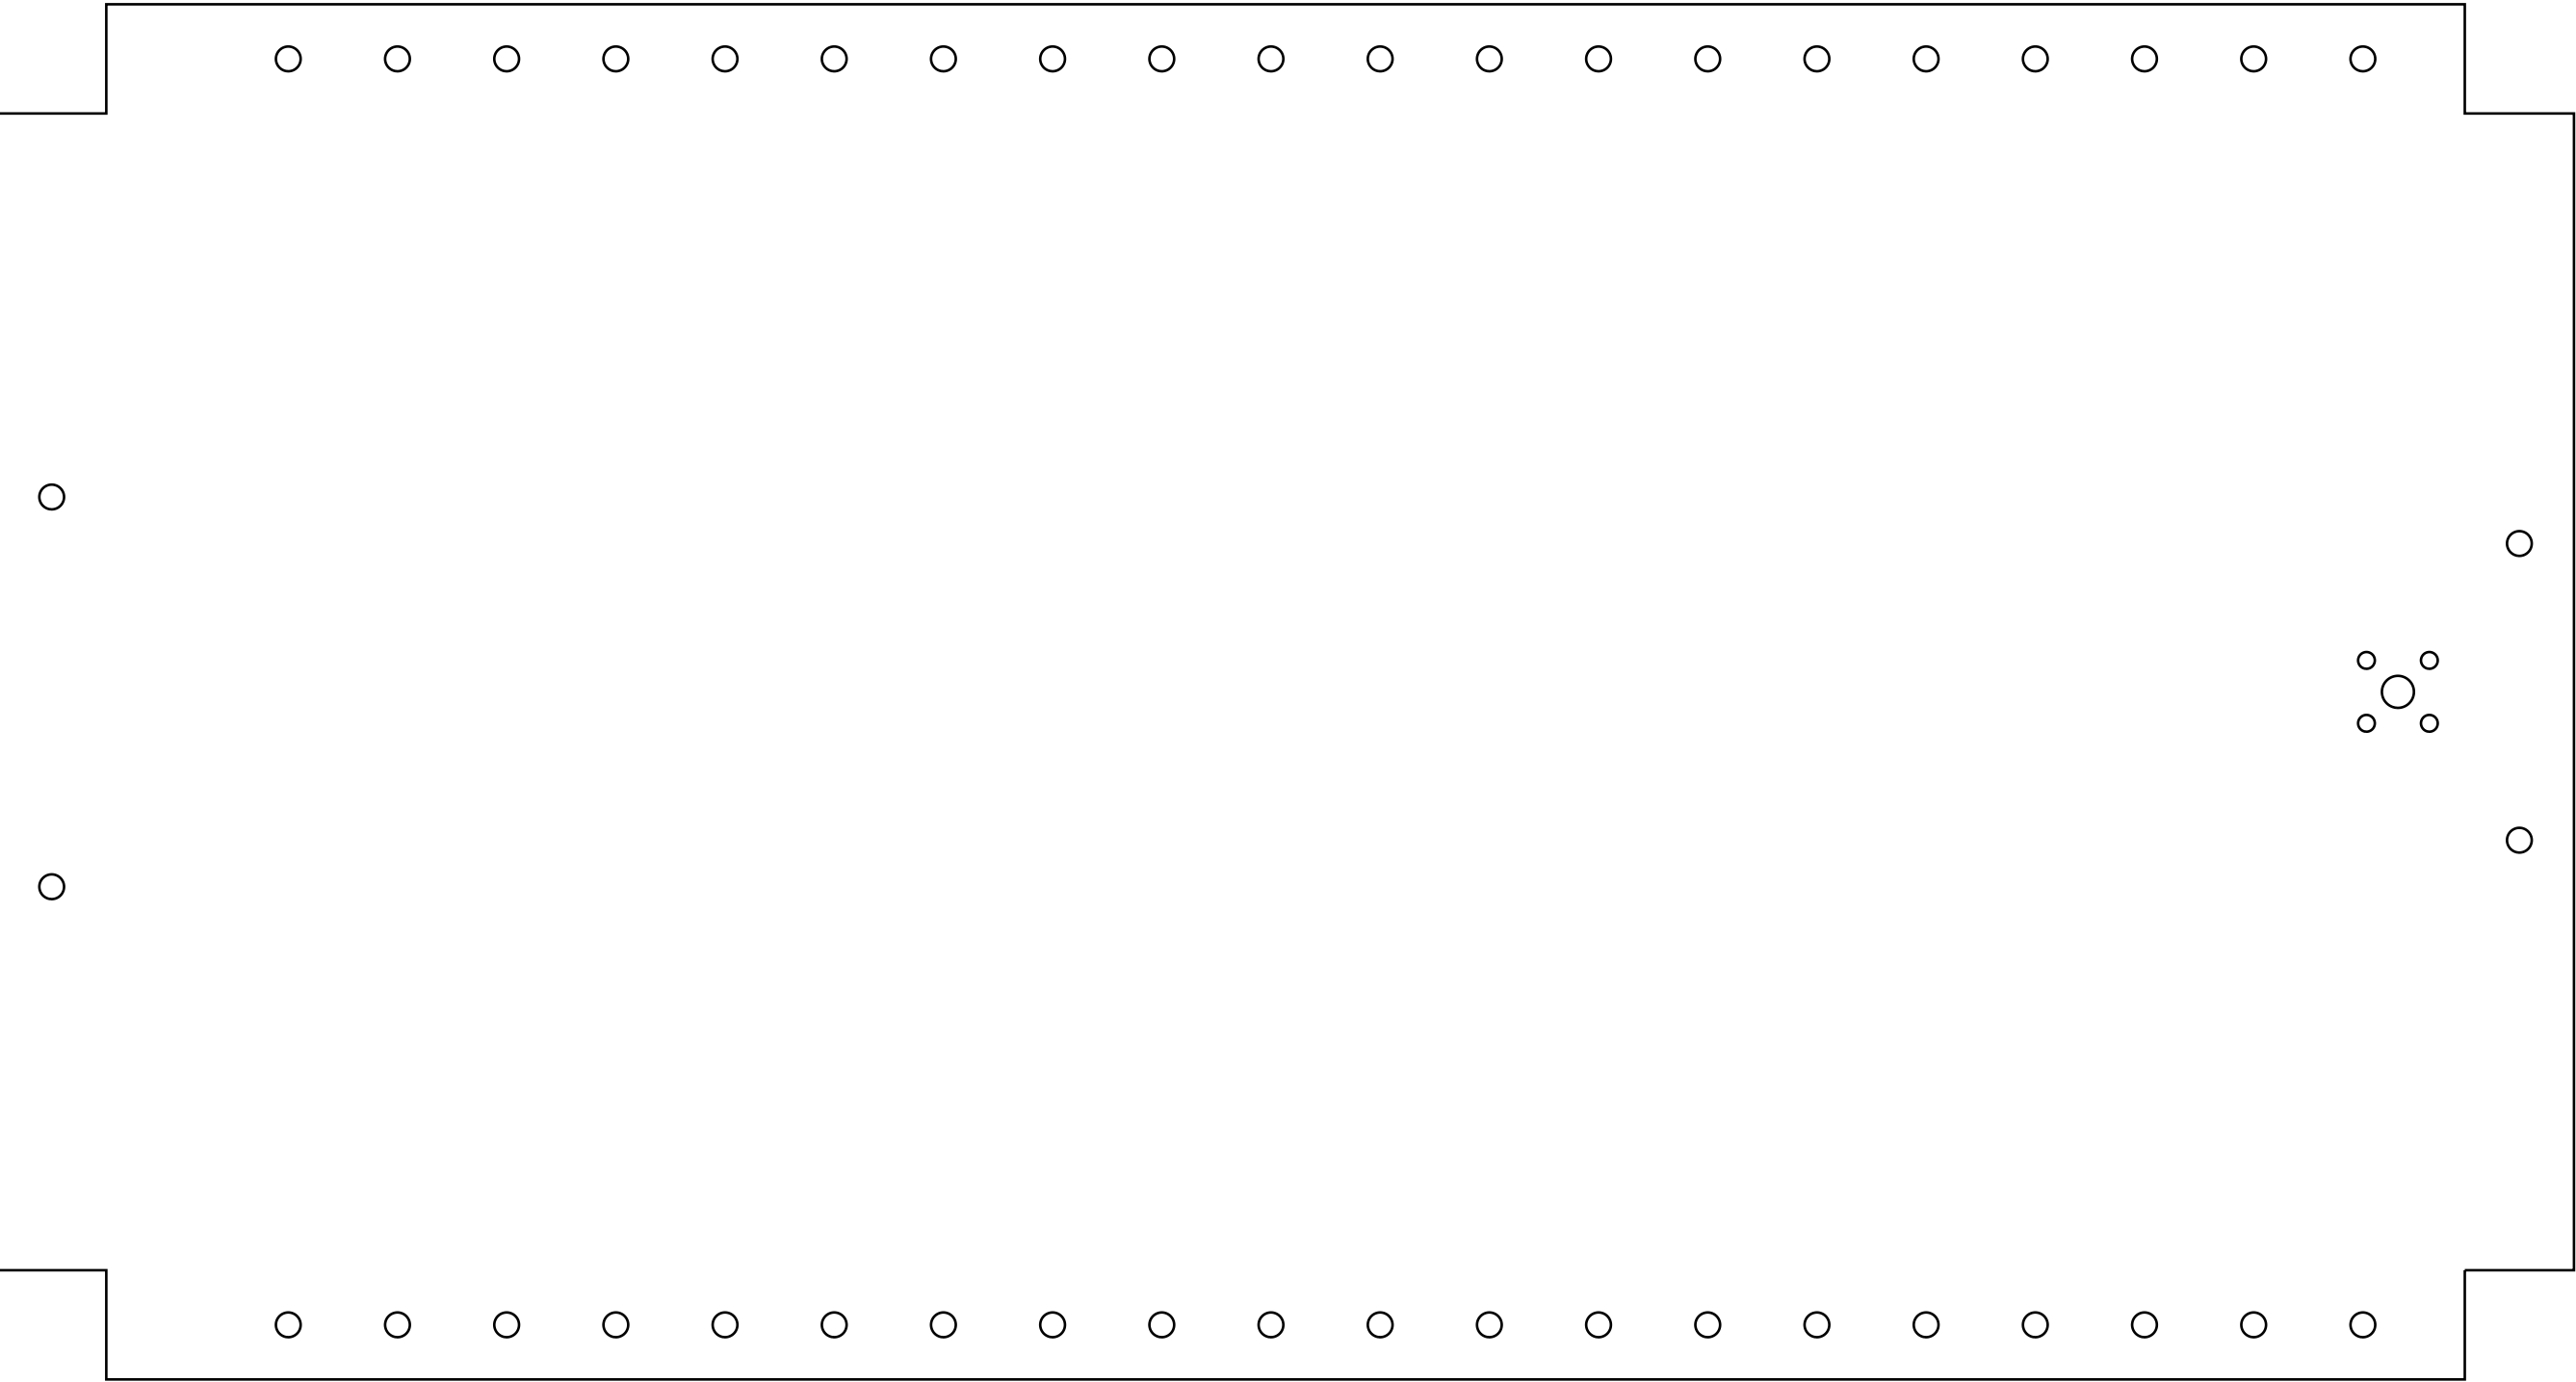

Scale is to calibrate actual printed dimension. Check both X and Y. Measure between tick 0 and last tick

-20 0 20 40 60 80 100 120 140 160 180 200 220 240 260 280 300 320 340 360 380