

PARTS LIST		
No.	PARTS No.	PARTS LIST
1	E30194-30A	SWITCH BOX
2	C0551019P	AC INLET-(ROHS) NC-179-F4.8
3	C0550144P	FUSE HOLDER-(ROHS) MF56(ROHS)
4	C1600167P	FUSE(BE25W/163175)(PBF) MC3A25W
5	L90066019A	AC HARNESS
6	F0100091A	JL CRAMP ATC 17(U-13G)
7	P4110400A	FLANGE NUT-(三面) M4
8	C1700054L	COUNTER(0.5V/HARNESS) NY60354-NY6%
9	F9007600A	COUNTER COVER
10		PAN HD SEMI THICK SCREWS-(3個) M3X6
11	H9000792A	PETTEPLE JFW-5(SD10)
12	F9007601A	COUNTER HOLDER
13	L9005606B	CABINET HARNESS
14		TERMINAL & CONNECTORS-(24) OE-2
15		CONVEX(CV-100)(黒色) CV-100K
16		
17		
18		
19		
20		
21		
22		
23		
24		
25		


The diagram shows the internal components of the cabinet assembly. Part 1 is the top cover. Part 2 is a power outlet. Part 3 is a terminal block. Part 4 is a terminal block. Part 5 is a terminal block. Part 6 is a terminal block. Part 7 is a terminal block. Part 8A is a label indicating the location of part 8.


This diagram provides a detailed view of the power cord connection area. It shows the AC inlet (part 1), fuse holder (part 2), and fuse (part 3). The power cord is connected to the AC inlet through a crimp terminal (part 4) and a flange nut (part 5). The fuse is held in place by a fuse holder (part 6).

This diagram shows a close-up of the AC inlet (part 1) and the fuse holder (part 2). The fuse (part 3) is inserted into the fuse holder. The fuse holder is secured to the AC inlet with a flange nut (part 5).

CABINET ASSY [3]


CABINET ASSY [4]

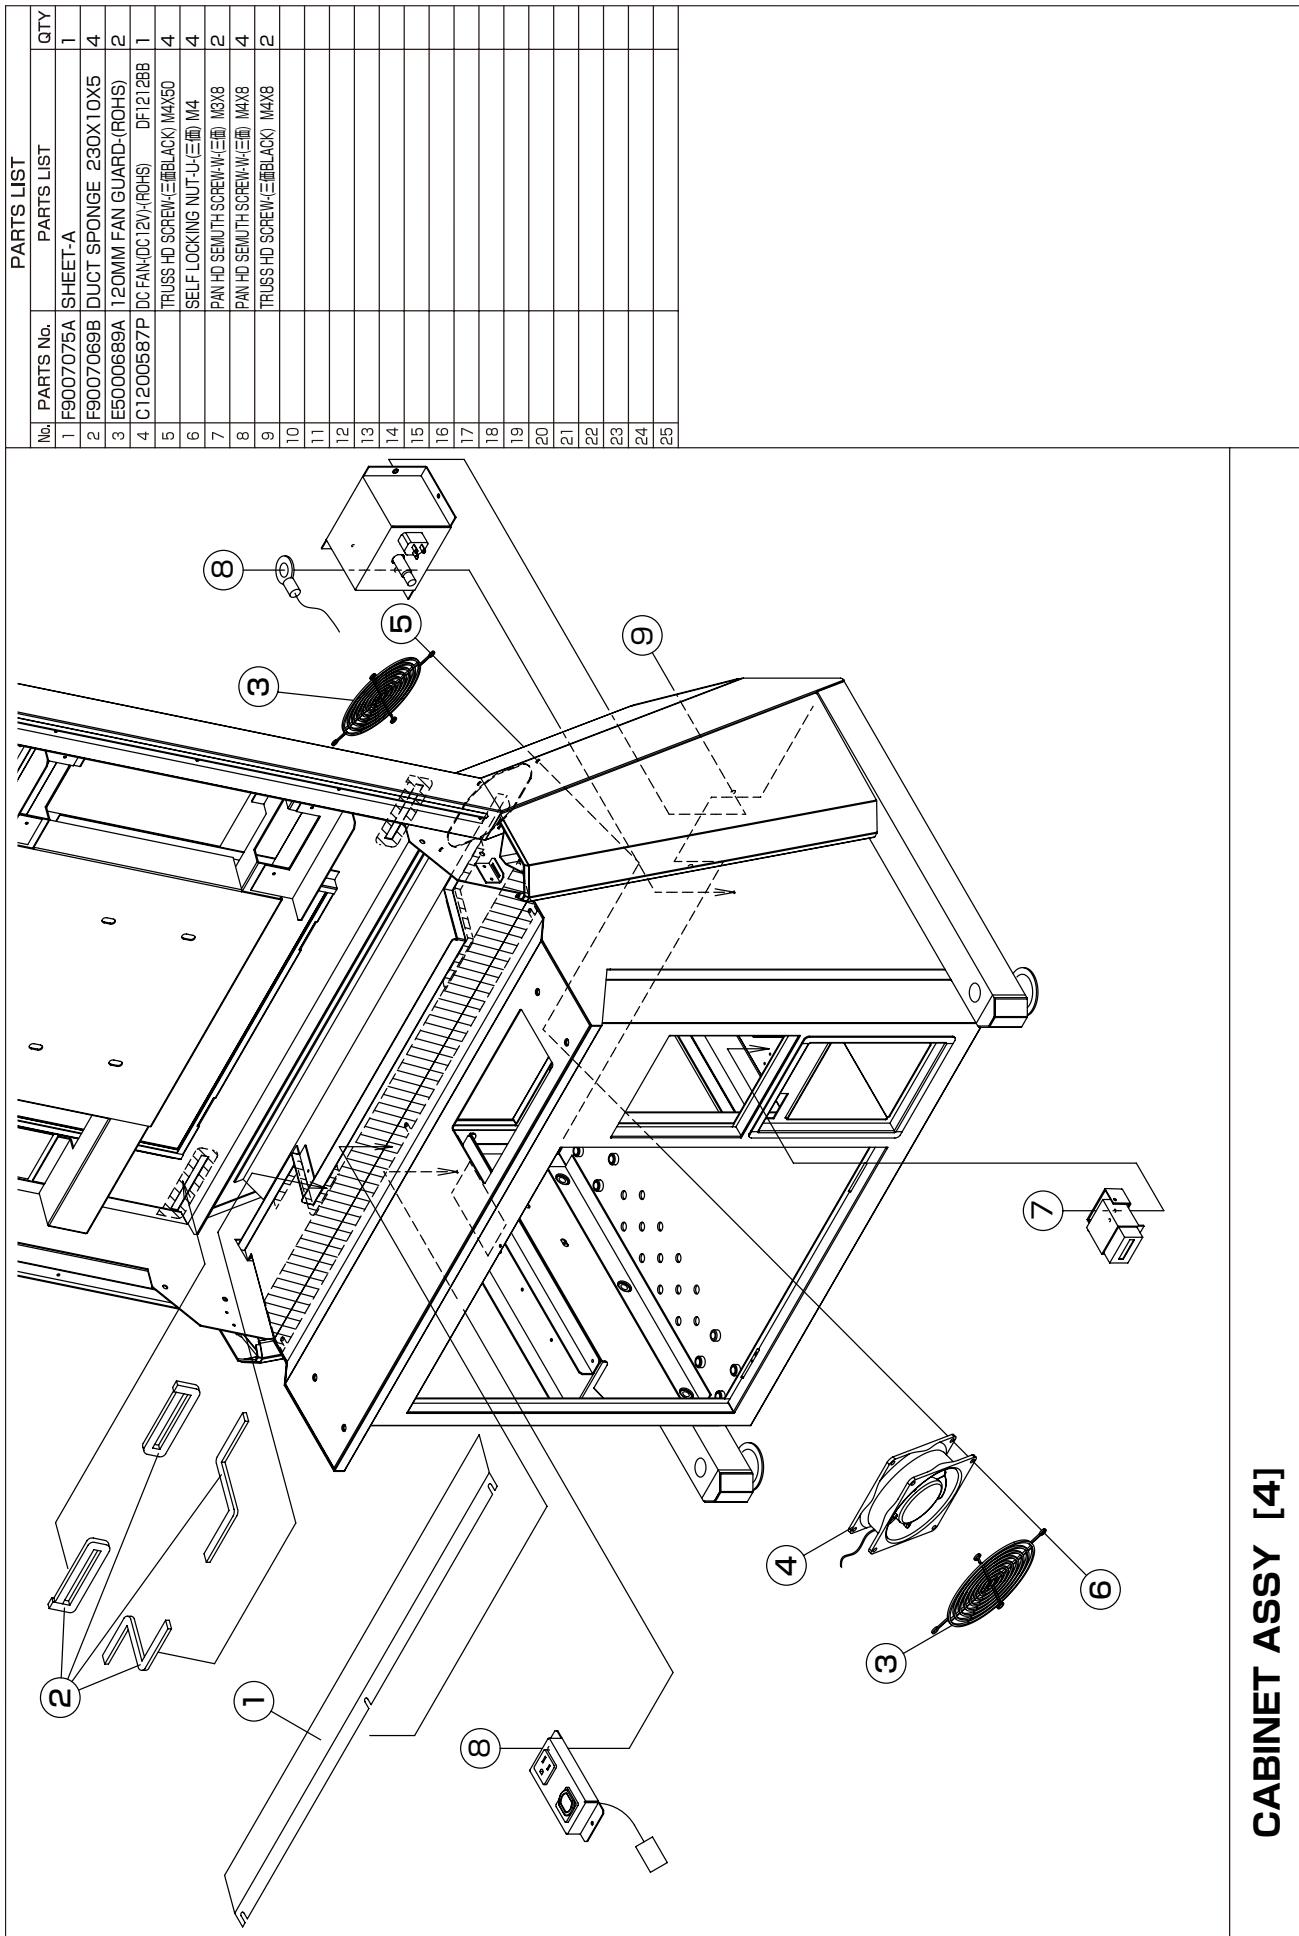

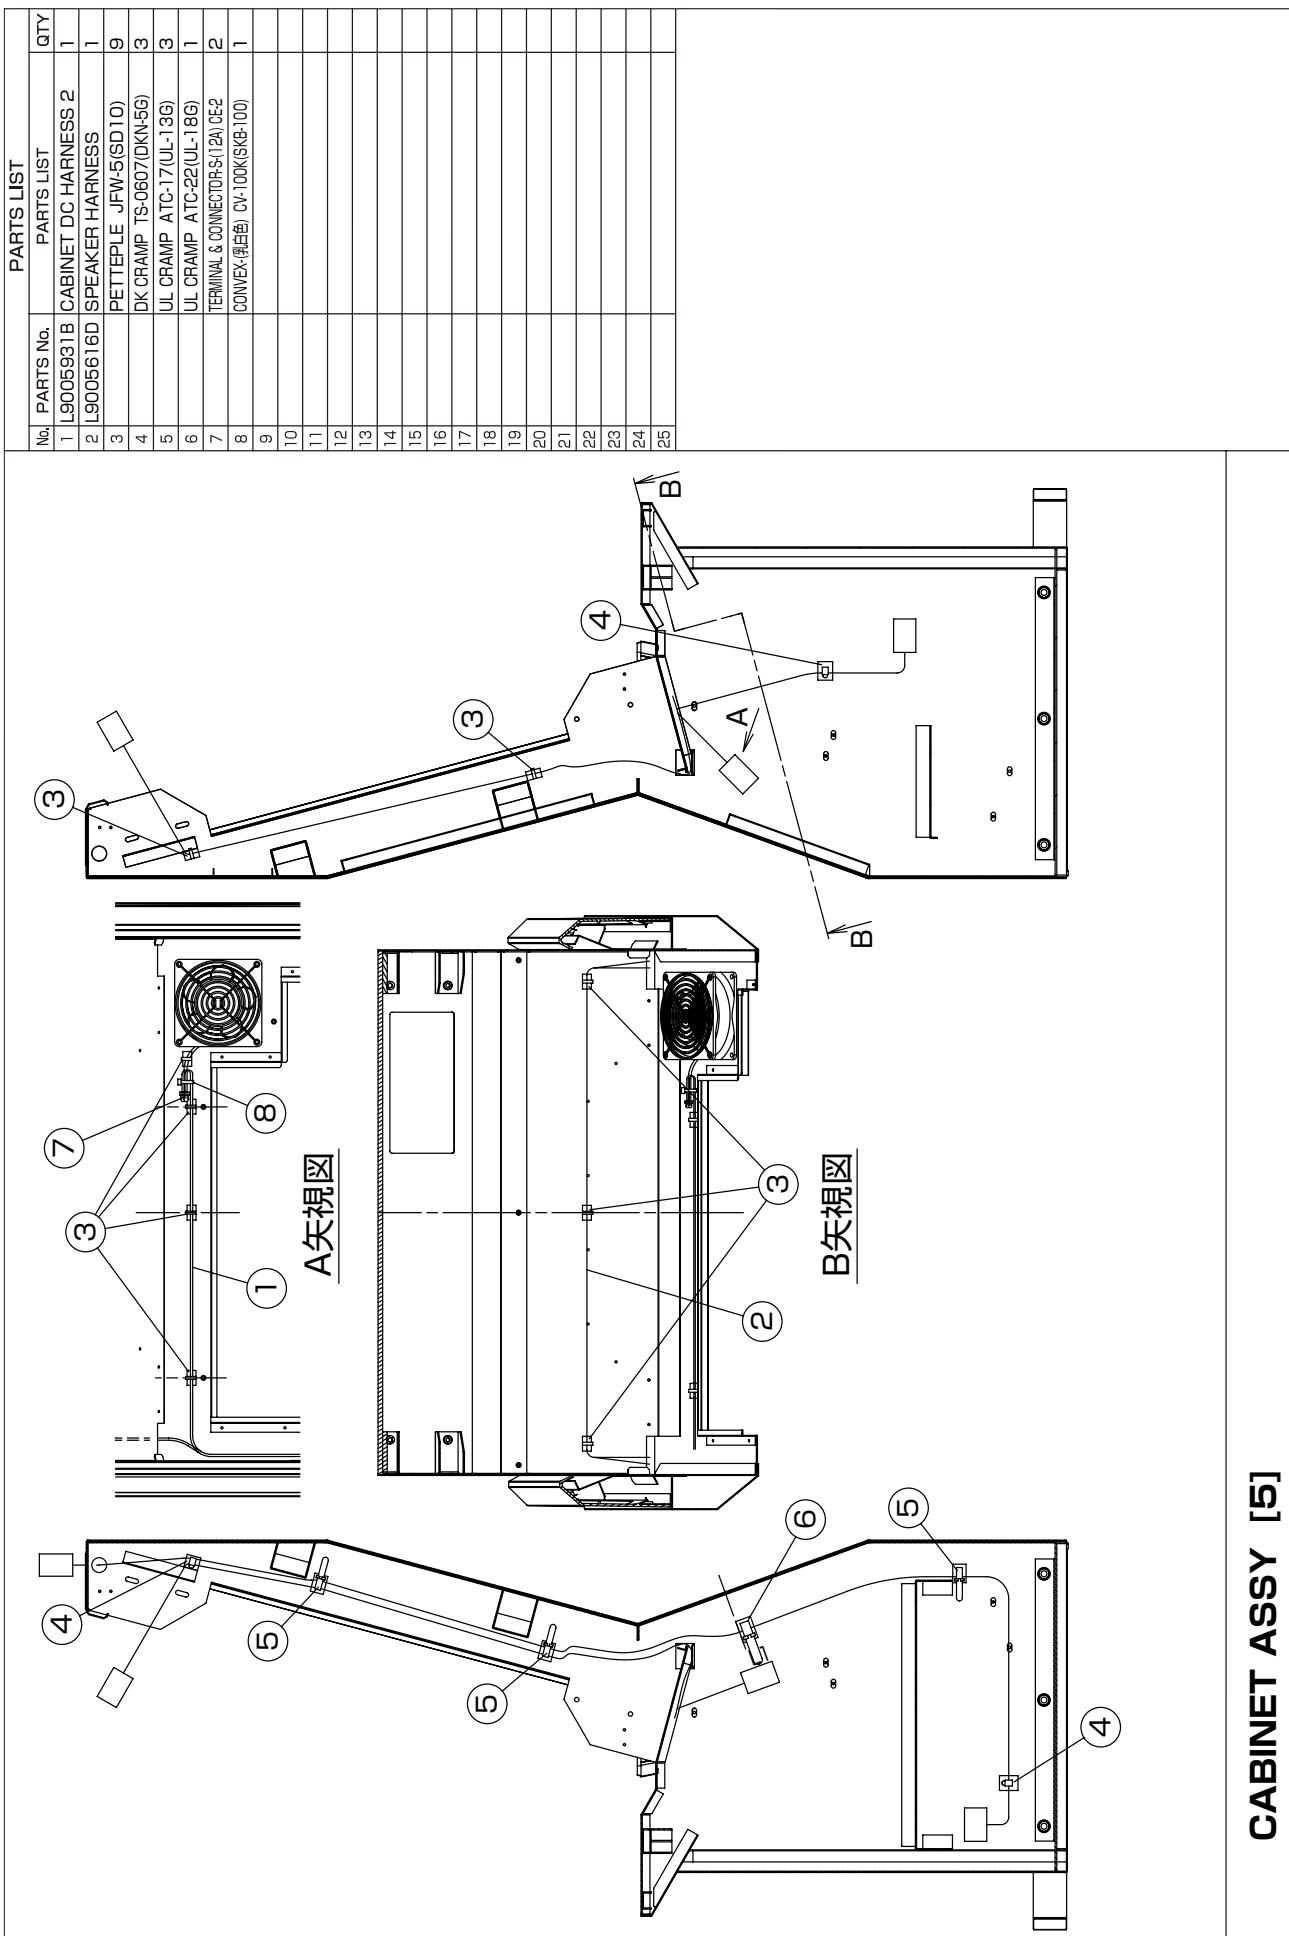

CABINET ASSY [5]


CABINET ASSY [6]

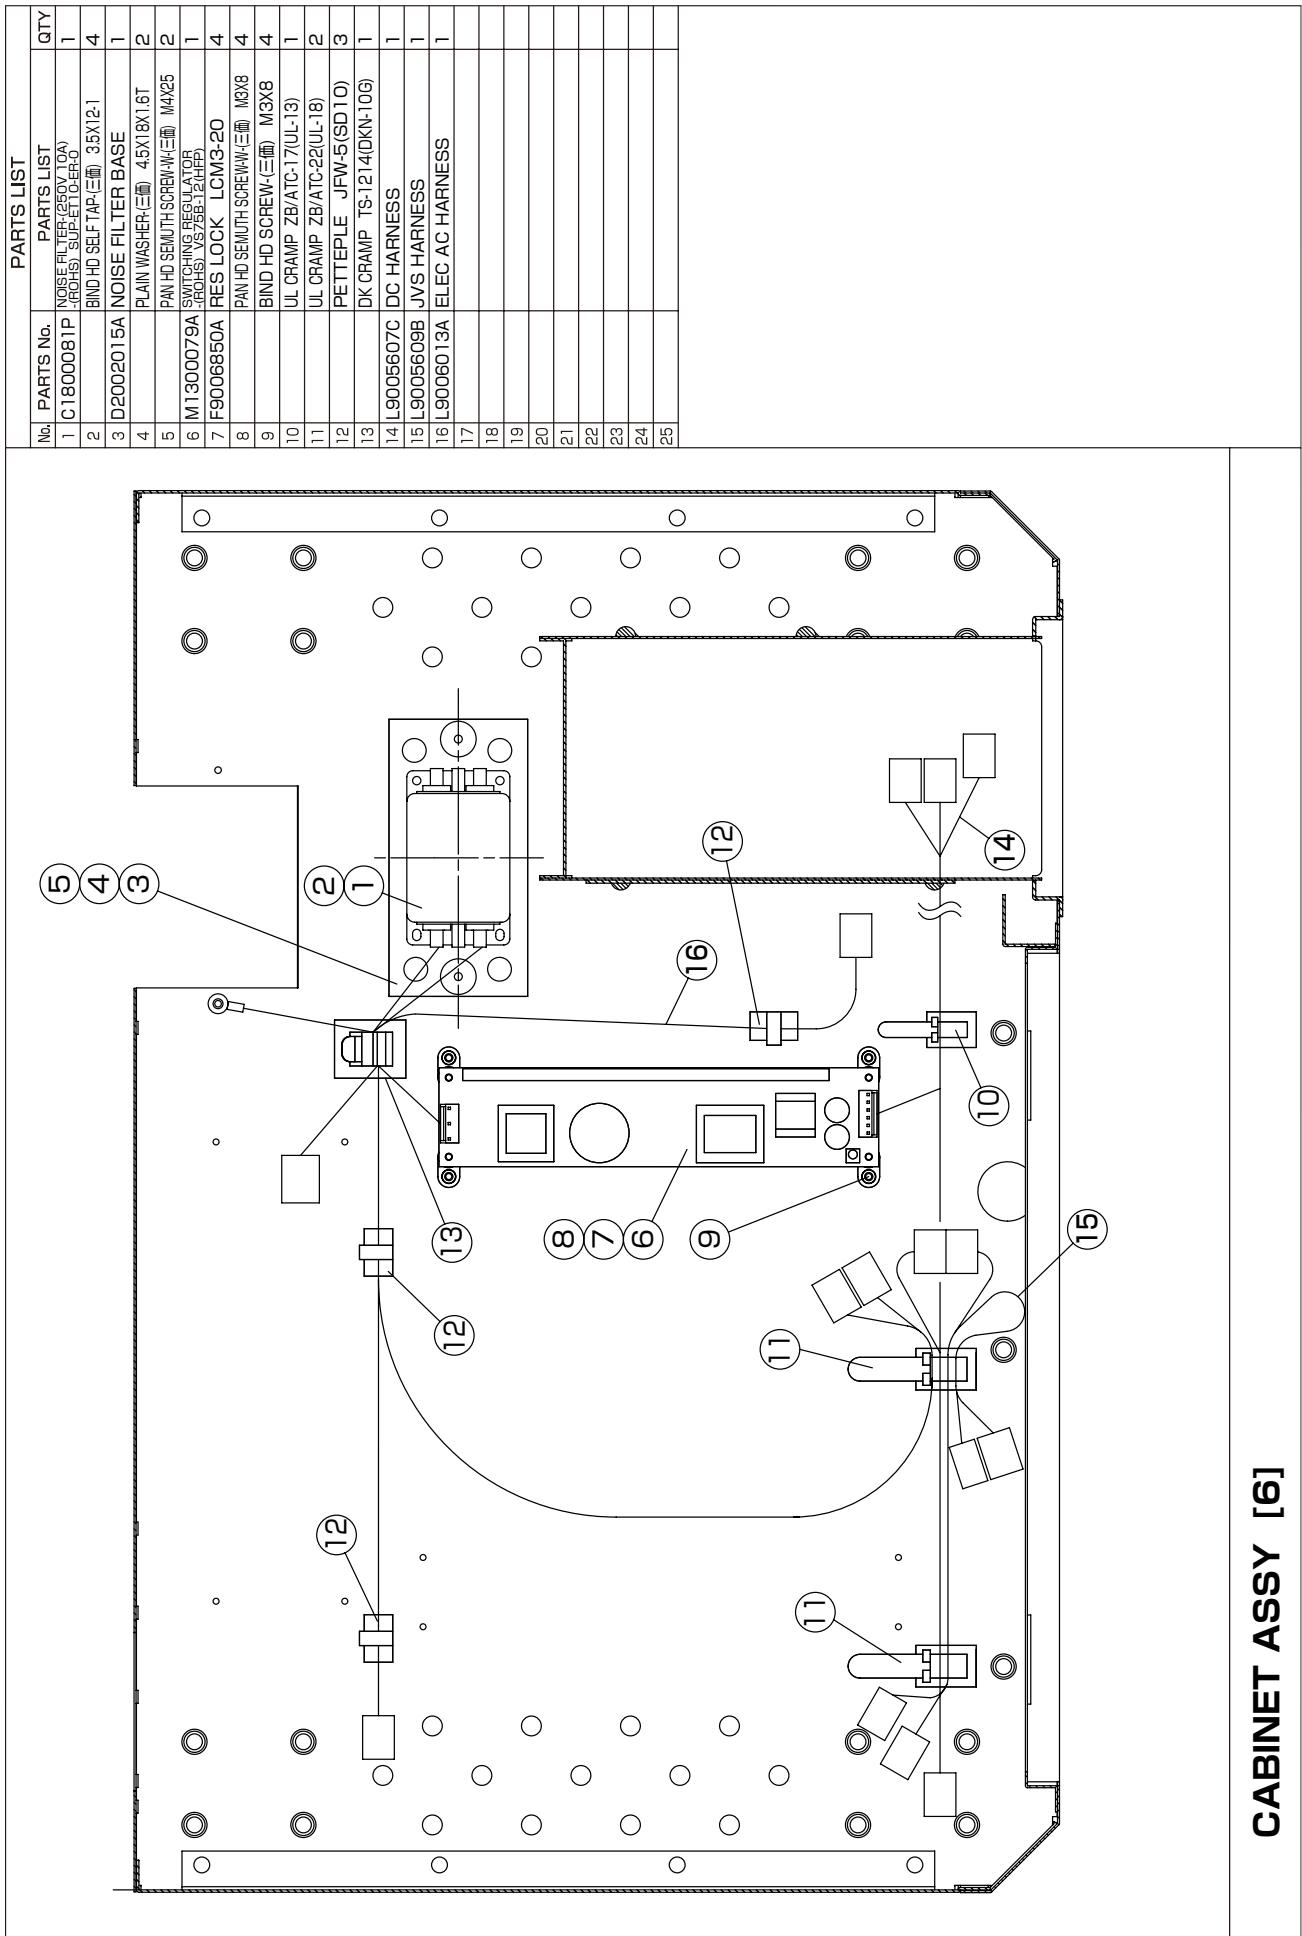


PARTS LIST			
No.	PARTS No.	PARTS LIST	QTY
1	L9005604B	CABINET AC HARNESS	1
2	L9005617A	USB CABLE-(AB)-(1.0M)	1
3	DK CRAMP 1S-0607(DKN-5G)	DK CRAMP	5
4	UL CRAMP ATC-17(UL-13)	UL CRAMP	2
5	TL CRAMP TL-18A	TL CRAMP	3
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			
22			
23			
24			
25			

CABINET ASSY [7]

CABINET ASSY [8]

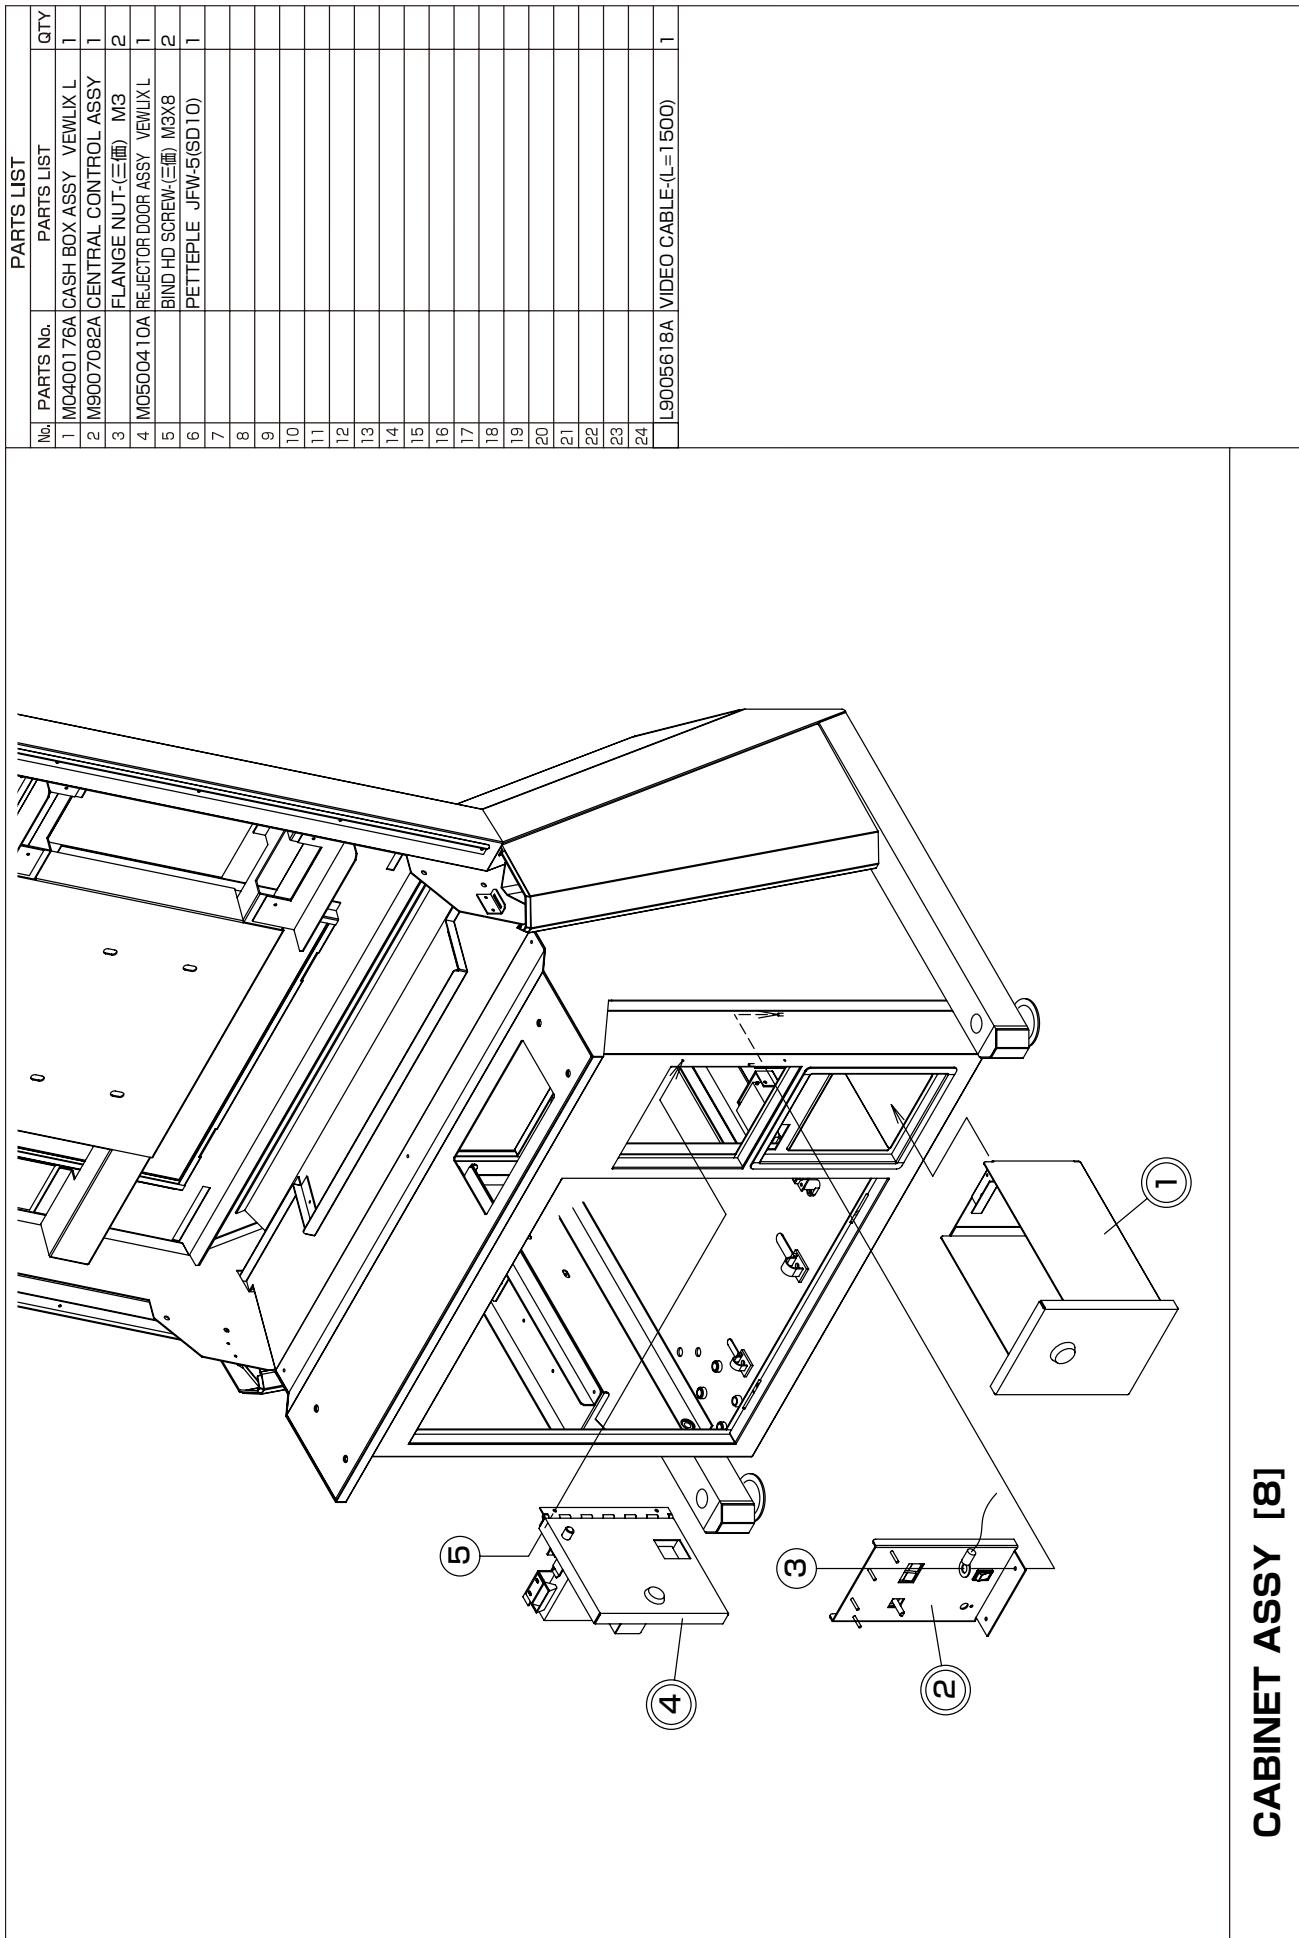



PARTS LIST		
No.	PARTS No.	PARTS LIST
1	E3102137B	SPACE PLATE BASE 2
2	E3018369A	SPACE PLATE BRACKET 4
3		PLAIN WASHER-(三面) 4
4		SELF LOCKING NUT-(四面) M4 8
5	M9007771A	SPEAKER BOX ASSY VENIXL 2
6	M9007767A	FLAT SPEAKER BOX ASSY VENIXL 2
7		WING BOLT-(三面) M4X16 8
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		
21		
22		
23		
24		
25		

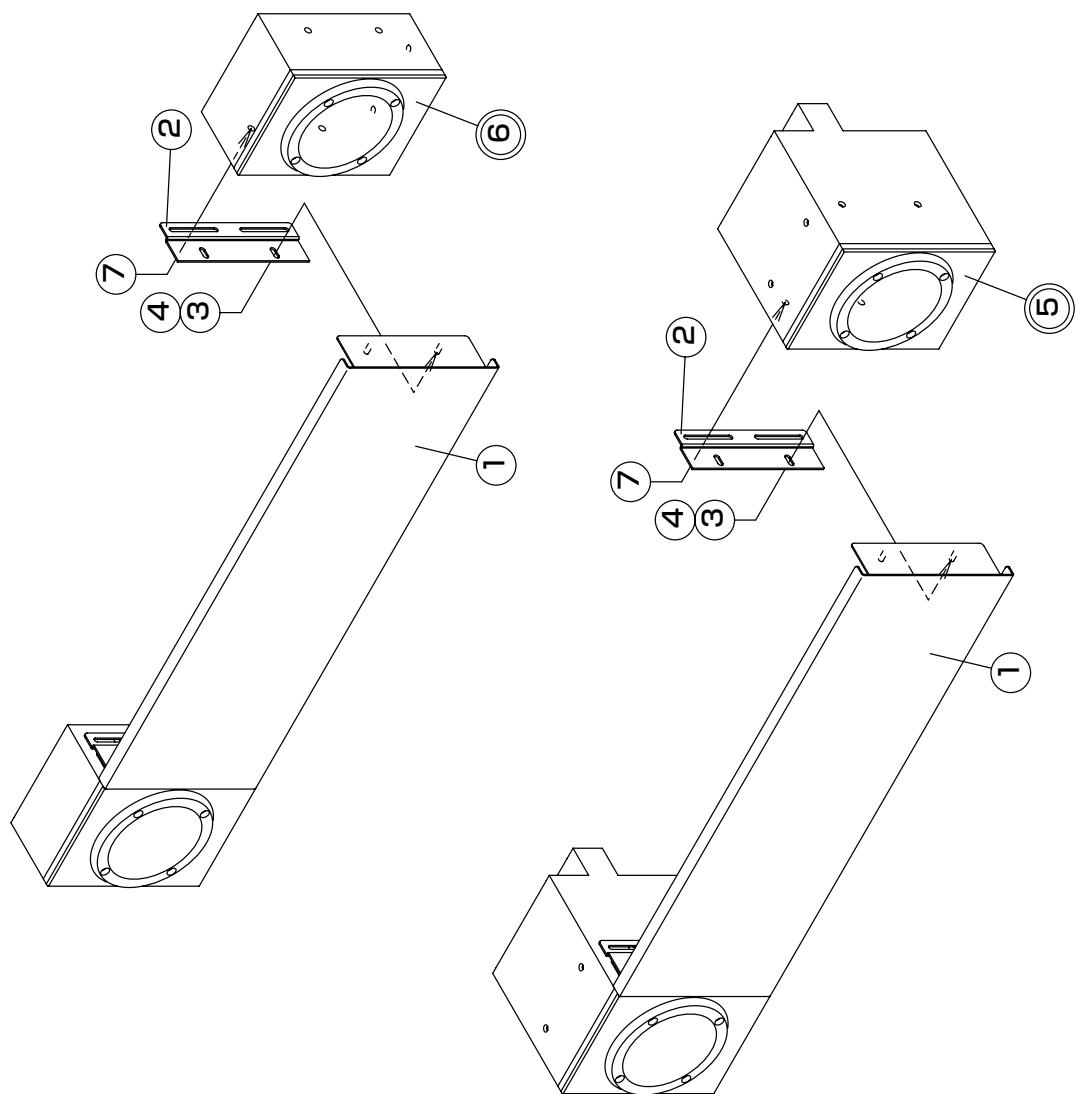

CABINET ASSY [9]


CABINET ASSY [10]

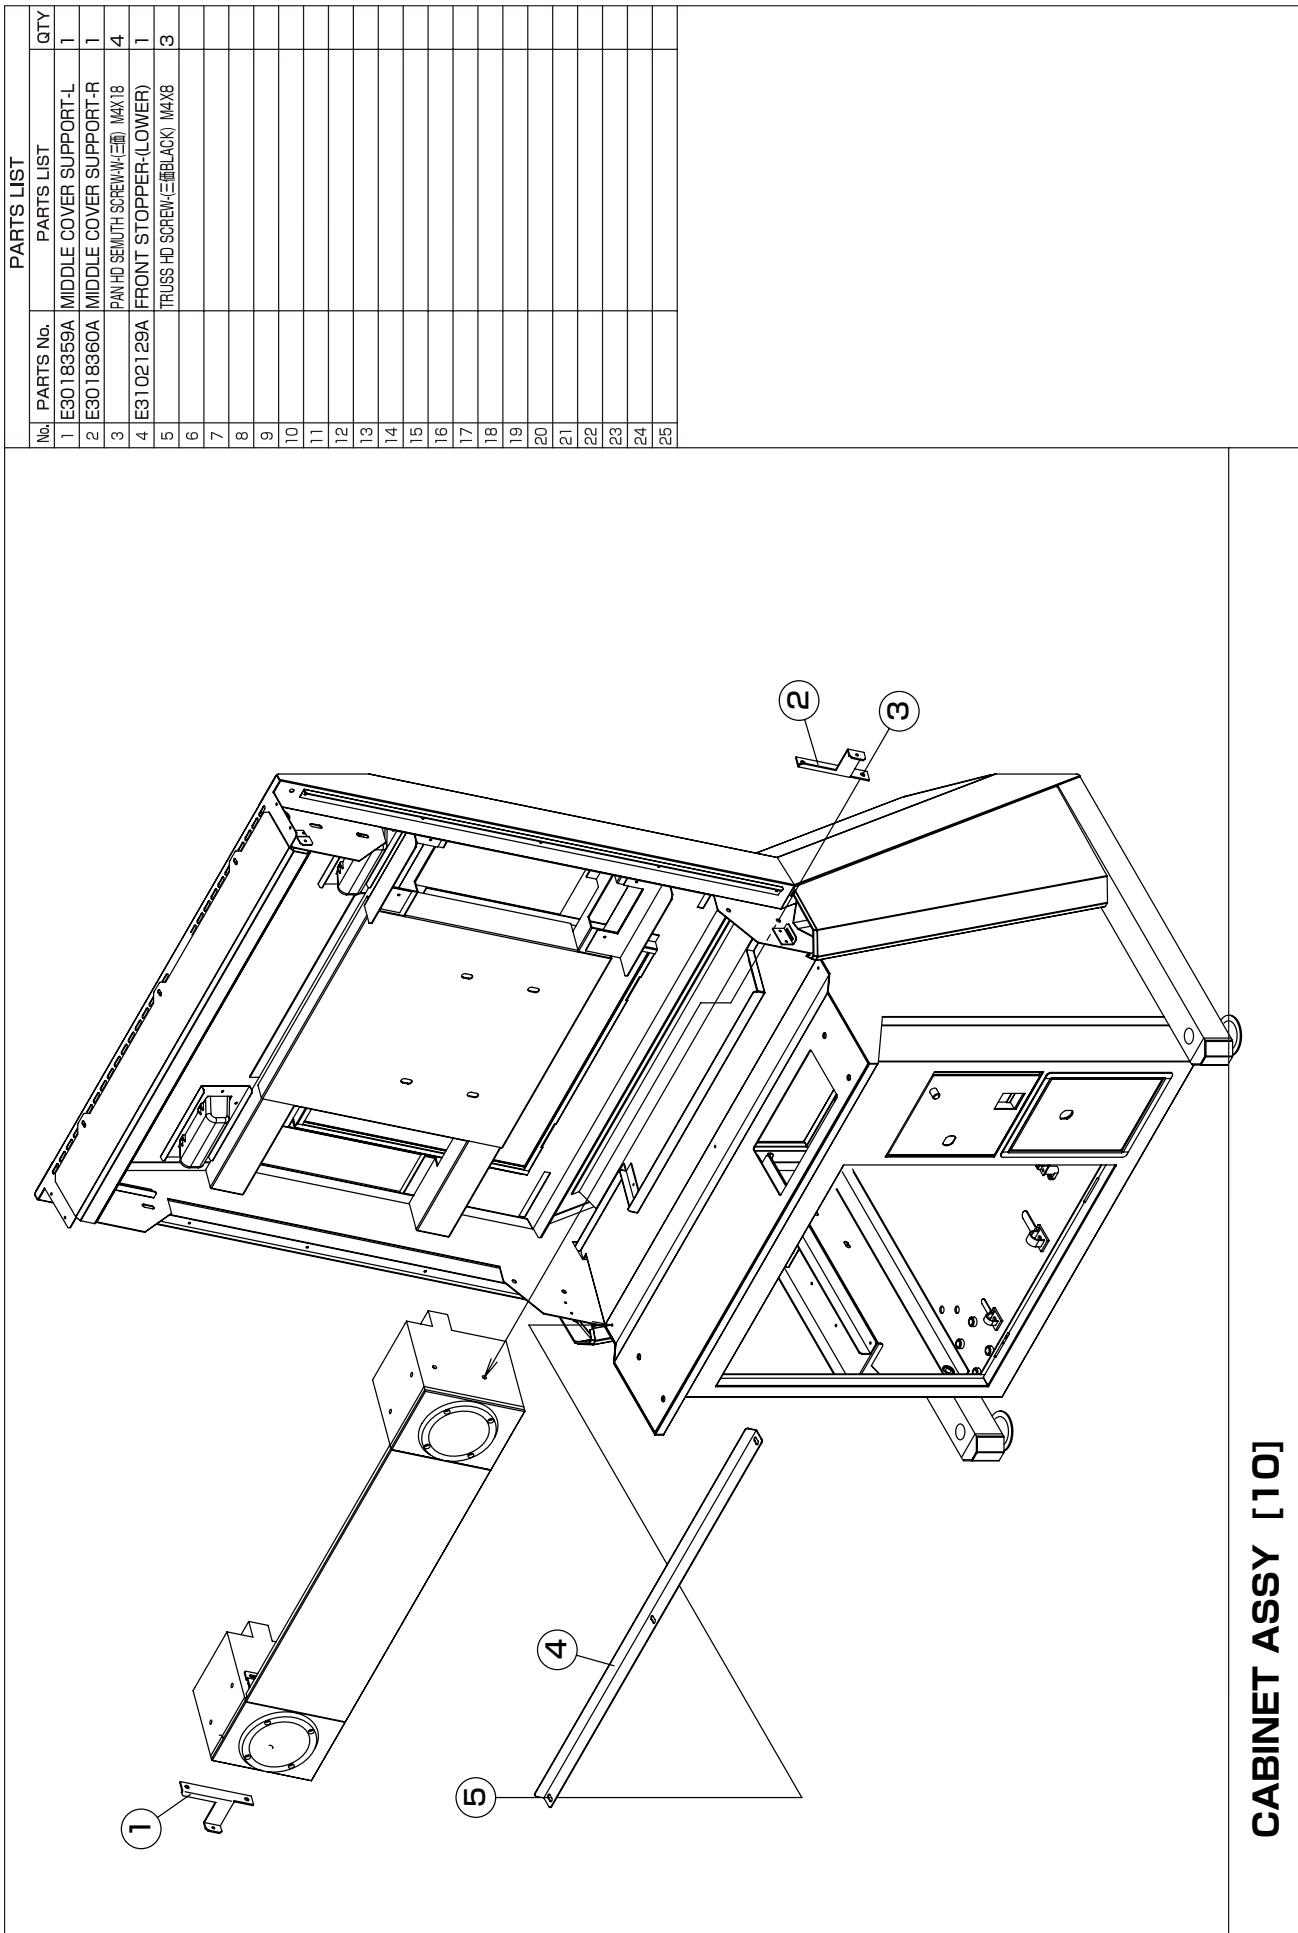

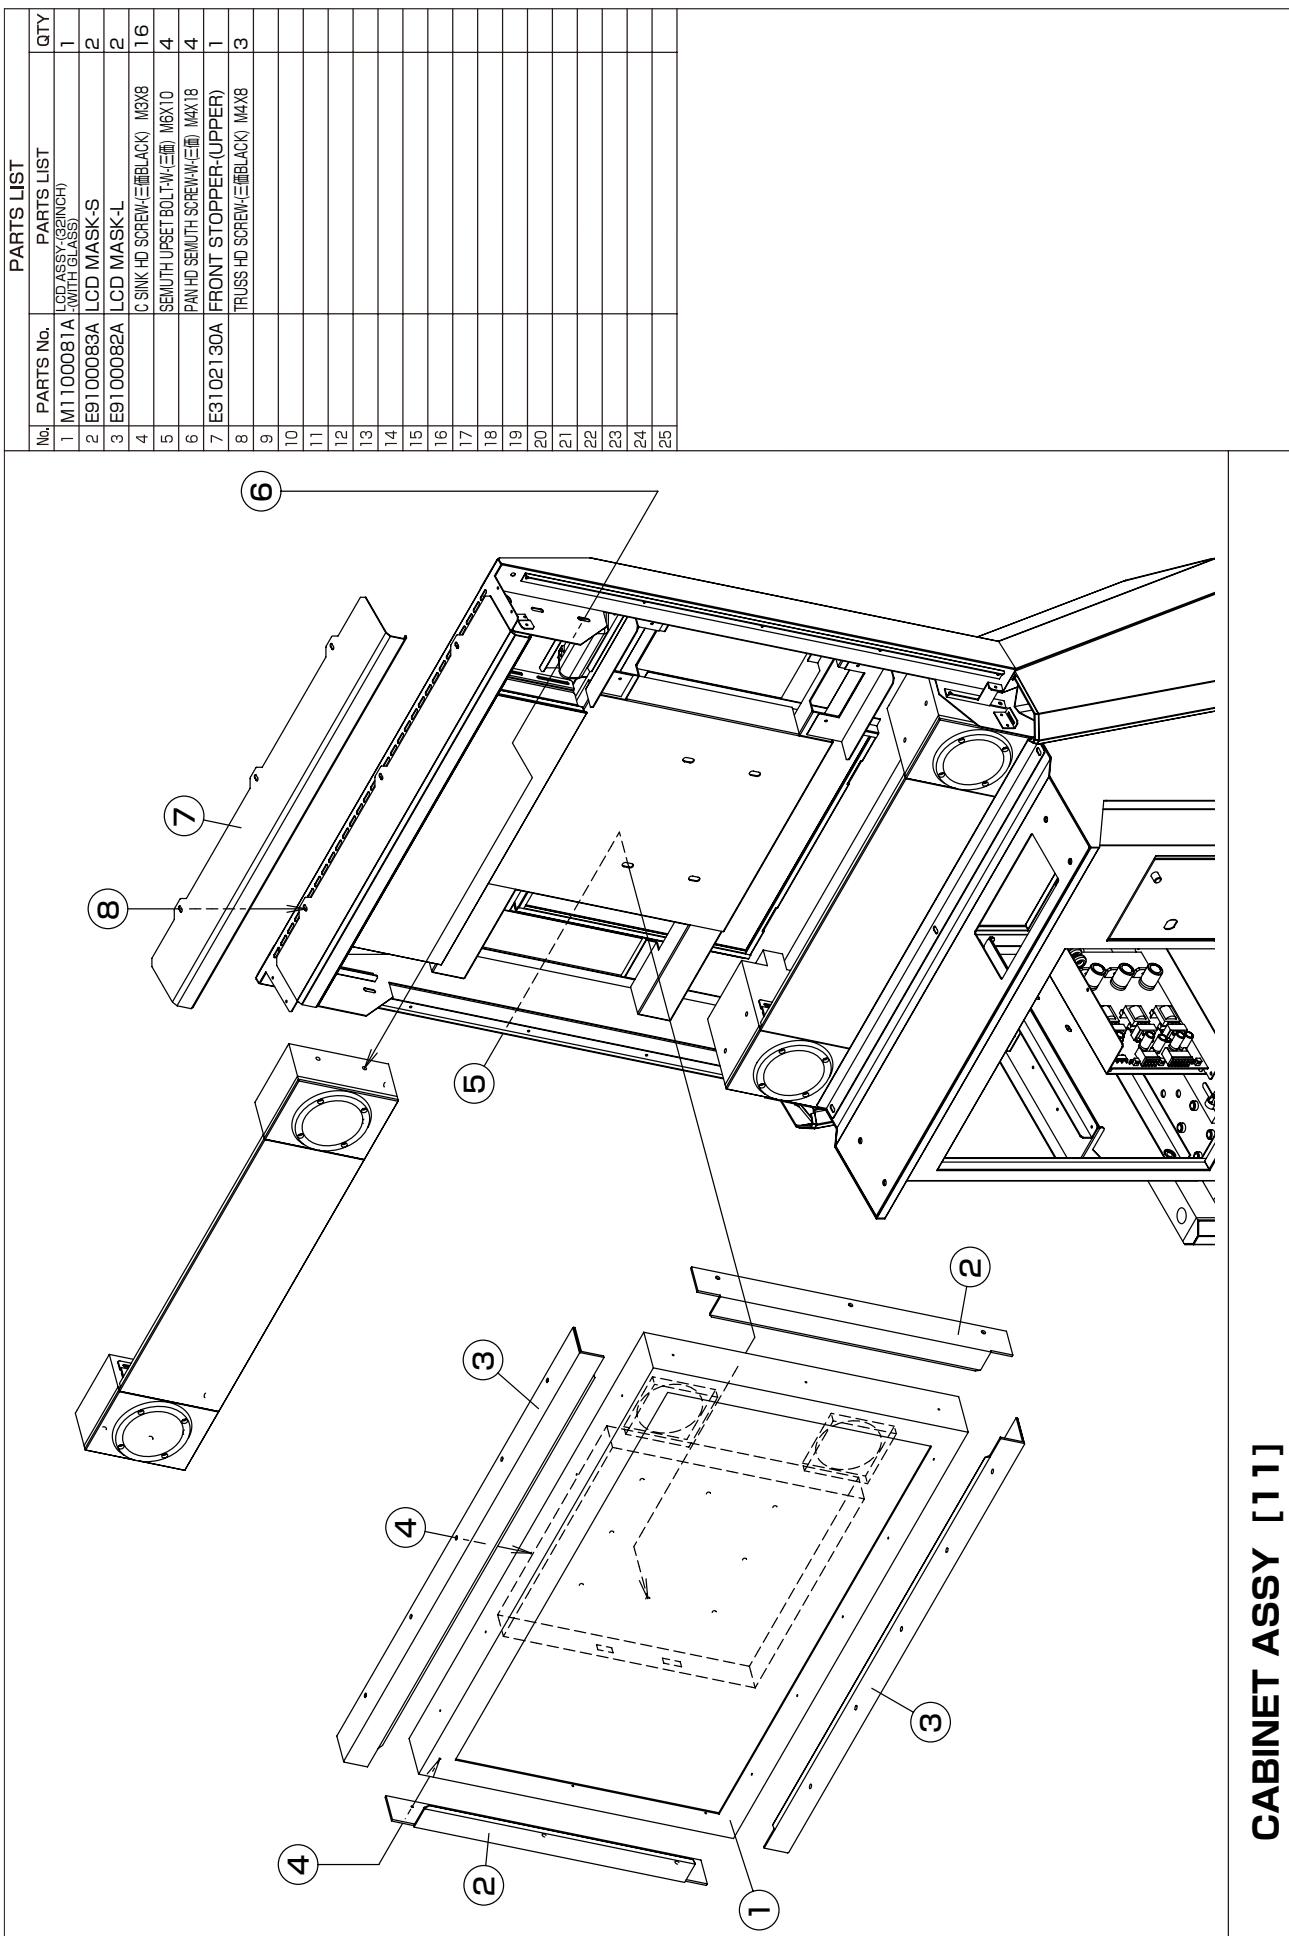

CABINET ASSY [11]


CABINET ASSY [12]

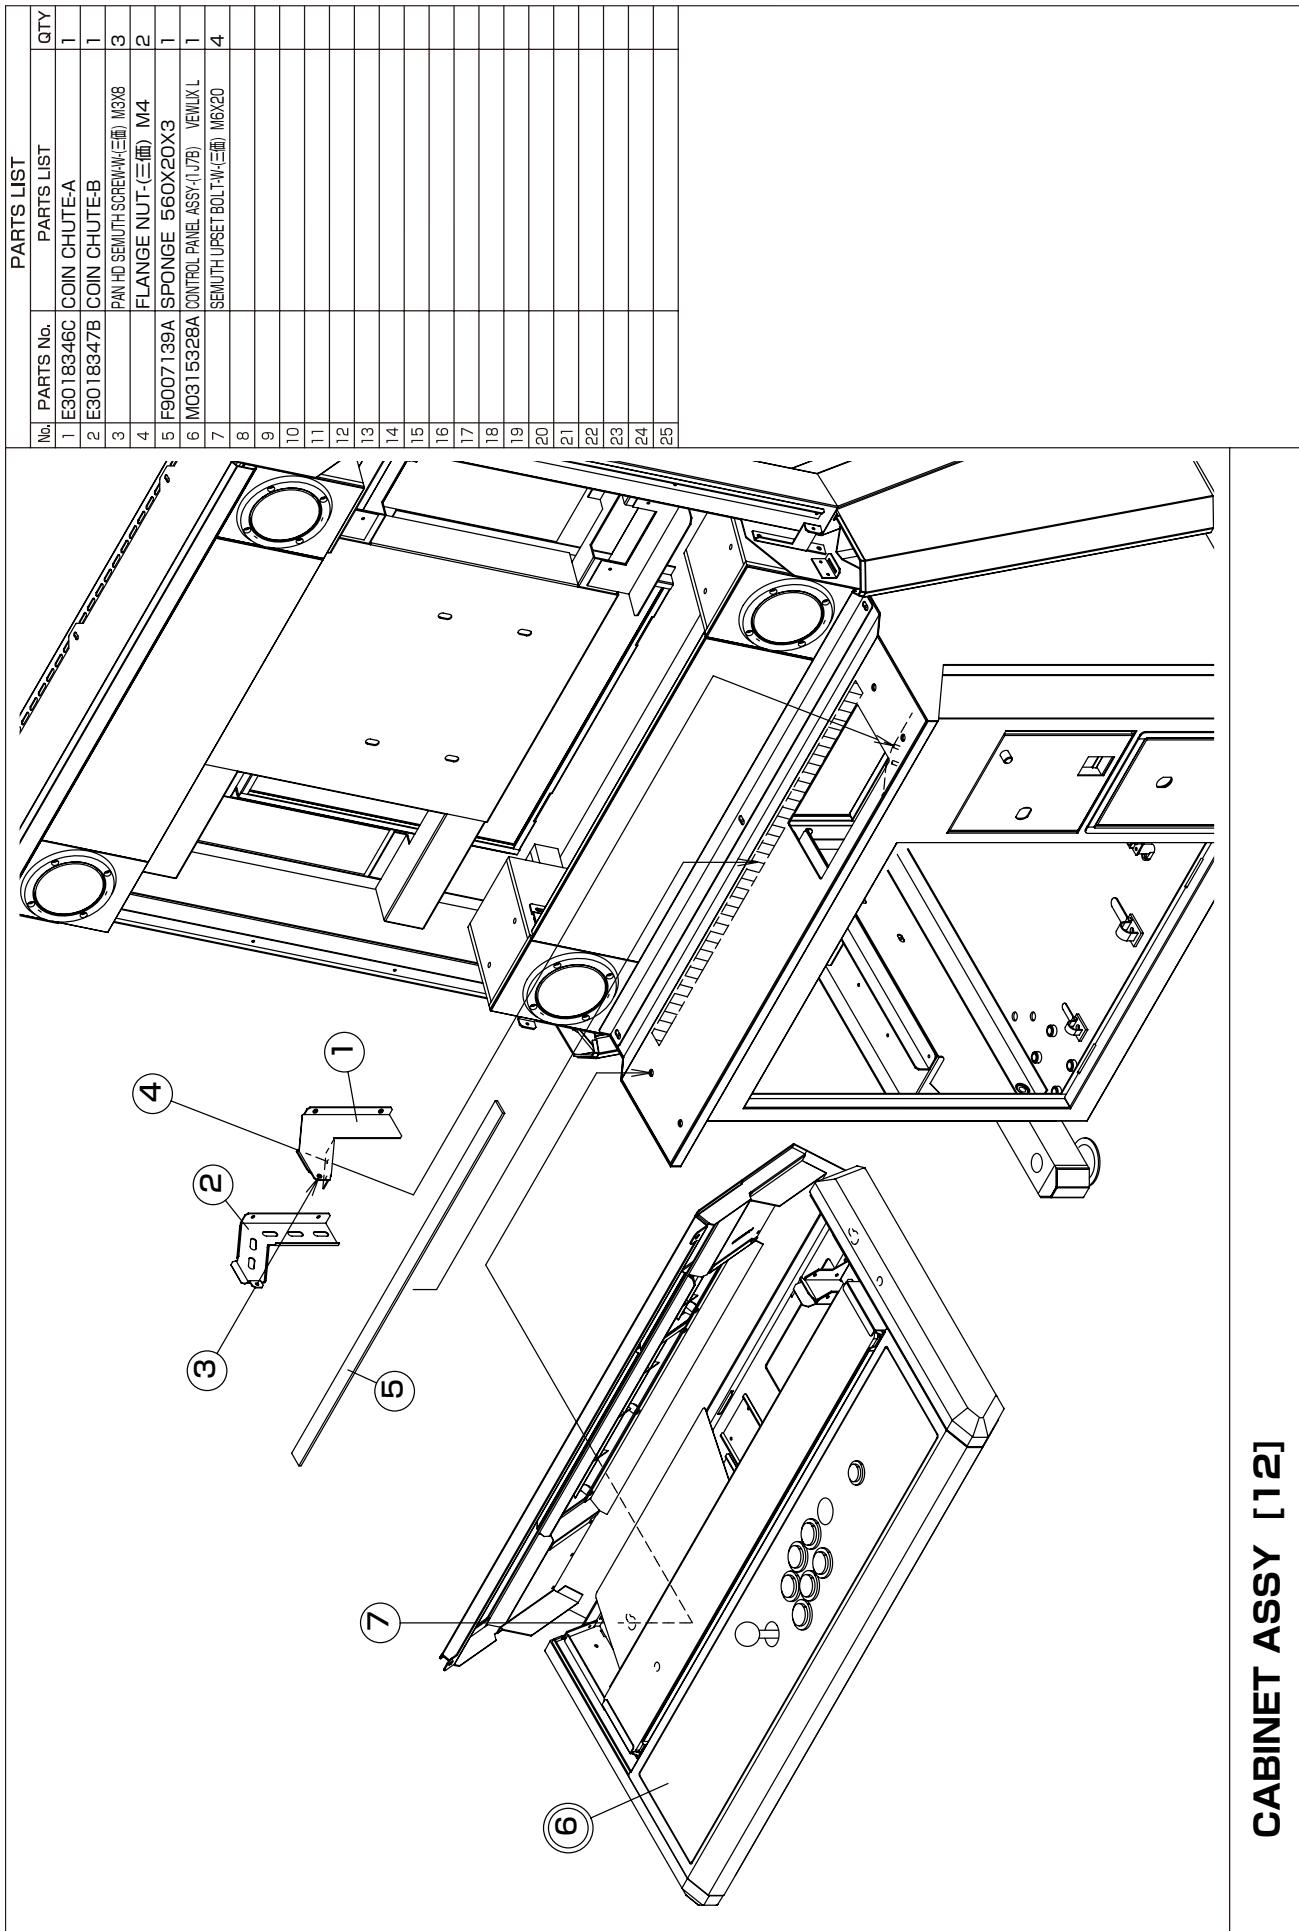

PARTS LIST		
No.	PARTS No.	PARTS LIST
1	M9007769A	SIDE COVER ASSY-L VEWLXL 1
2	M9007770A	SIDE COVER ASSY-R VEWLXL 1
3		BIND LOW HD SCREW<3個>M4X6 2
4		PAN HD SEMUTH SCREW<3個>M4X6 2
5	M9007772A	TITLE ASSY VEWLIX L 1
6		PAN HD SEMUTH SCREW<3個>M4X8 4
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		
21		
22		
23		
24		
25		

CABINET ASSY [13]


CABINET ASSY [14]

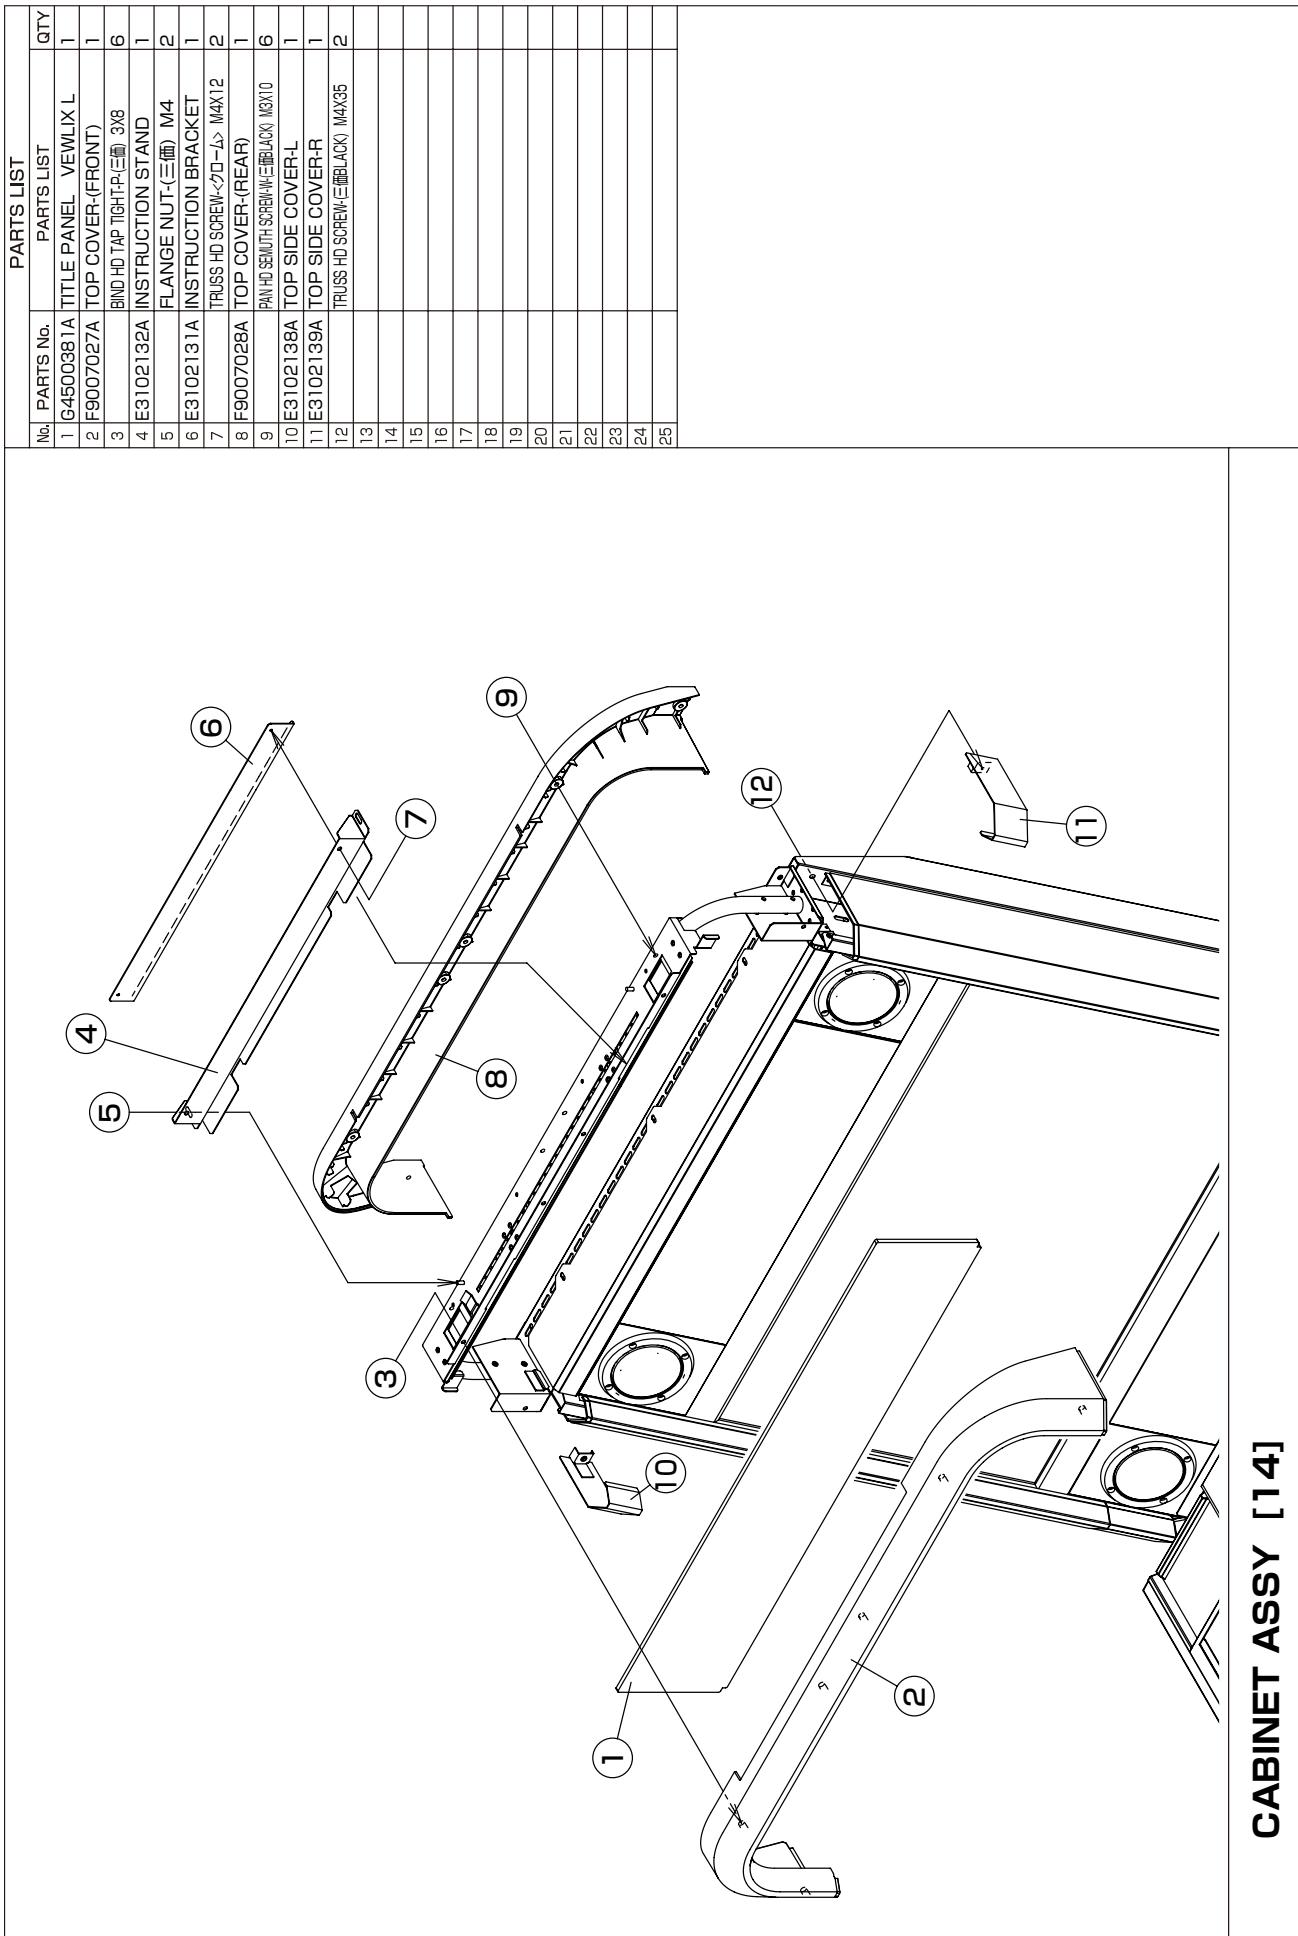

PARTS LIST		
No.	PARTS No.	PARTS LIST
1	D2002016A	POB BASE BOARD
2		PLAIN WASHER(三重) 4SX18X1.6t
3		WING BOLT(三重) M4X25
4	E3102128A	FRONT DOOR
5	F9007099A	SHEET-B
6	E5000662A	LOCK & KEY(SINGLE)(IRON) F750MNSDS
7	E3018357A	LOCK PLATE
8	E3102122A	BACK DOOR(UPPER)
9	E3102121A	BACK DOOR(LOWER)
10	E5000662A	LOCK & KEY(163-R06) F750MNSDS
11	E3102133A	LAN COVER PLATE
12		TRUSS HD SCREW(三重BLACK) M4X8
13		
14		
15		
16		
17		
18		
19		
20		
21		
22		
23		
24		
25		

CABINET ASSY [15]


CABINET ASSY [16]

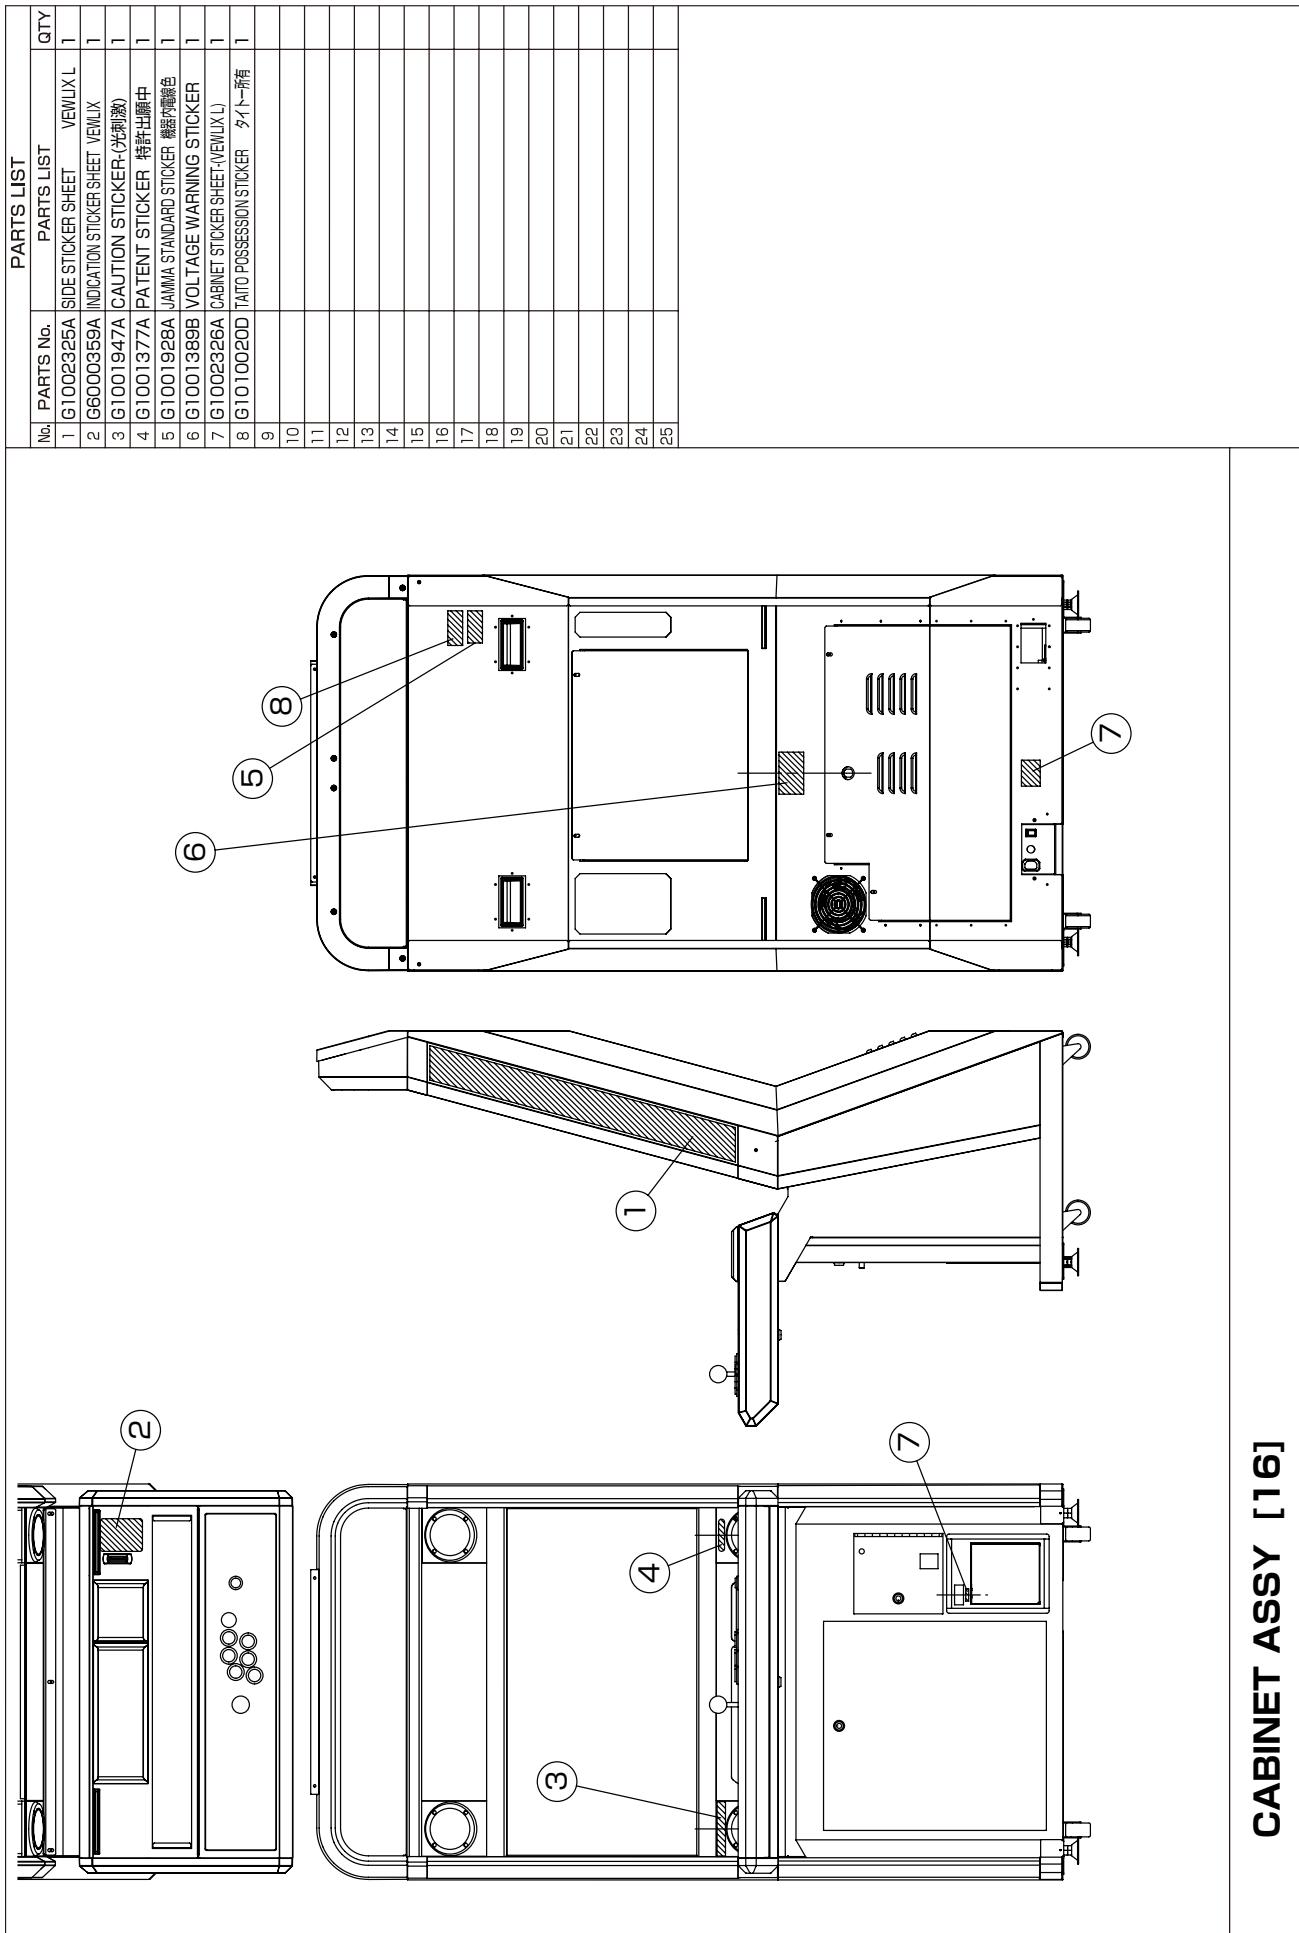


PARTS LIST		
No.	PARTS No.	PARTS LIST
1	F9007025A	SIDE COVER LOWER-L 1
2	E3018366A	SIDE COVER LOWER BRACKET-L 1
3		BIND HD TAP(TIGHT-P-(E)) 3X8 6
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		
21		
22		
23		
24		
25		

SIDE COVER LOWER ASSY-L


PARTS LIST		
No.	PARTS No.	PARTS LIST
		QTY
1	F9007026A	SIDE COVER LOWER-R
2	E3018367A	SIDE COVER LOWER BRACKET-R
3		BND HD TAP TIGHT P-()
4		3/8
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		
21		
22		
23		
24		
25		

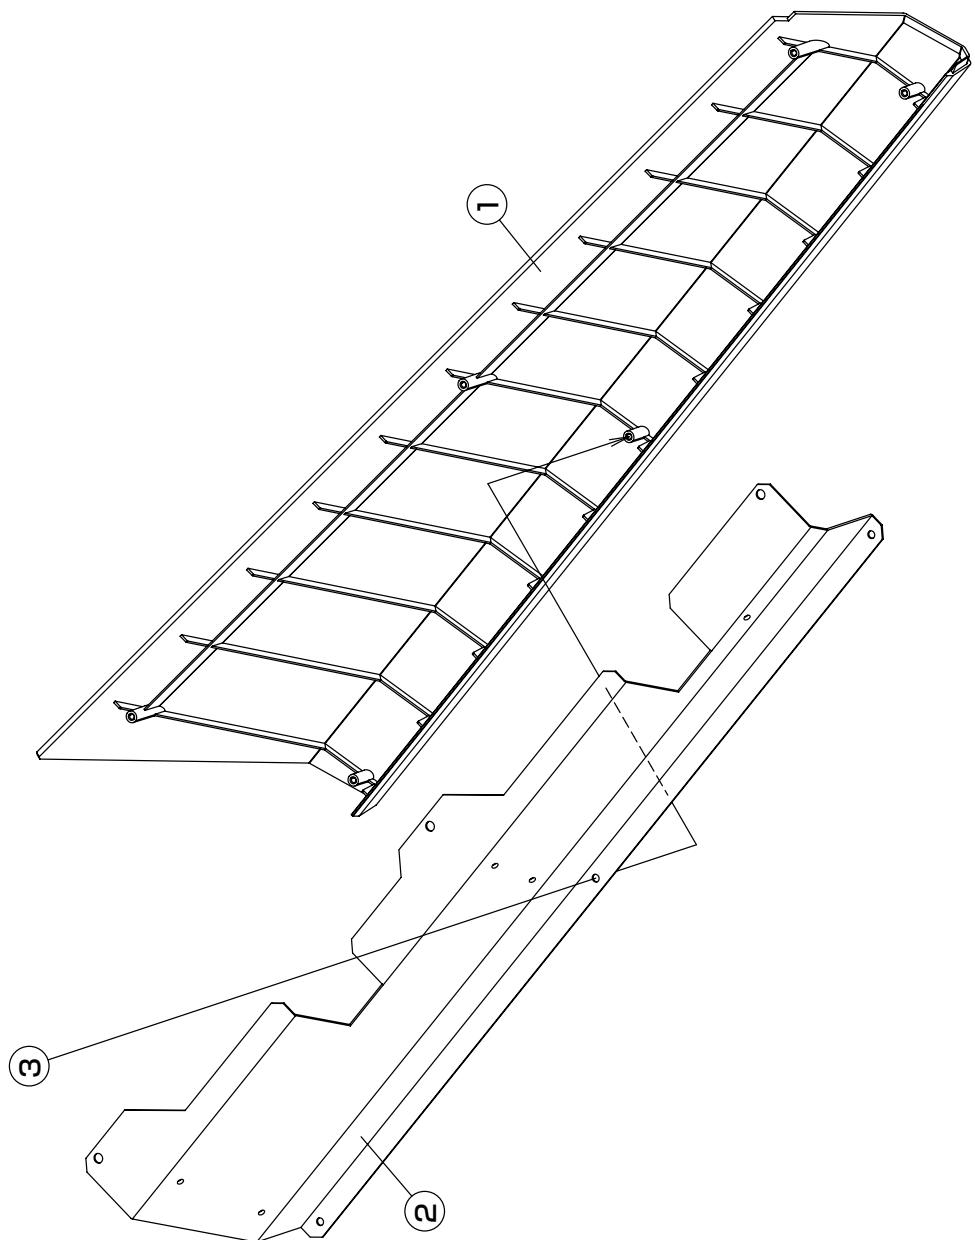

SIDE COVER LOWER ASSY-R

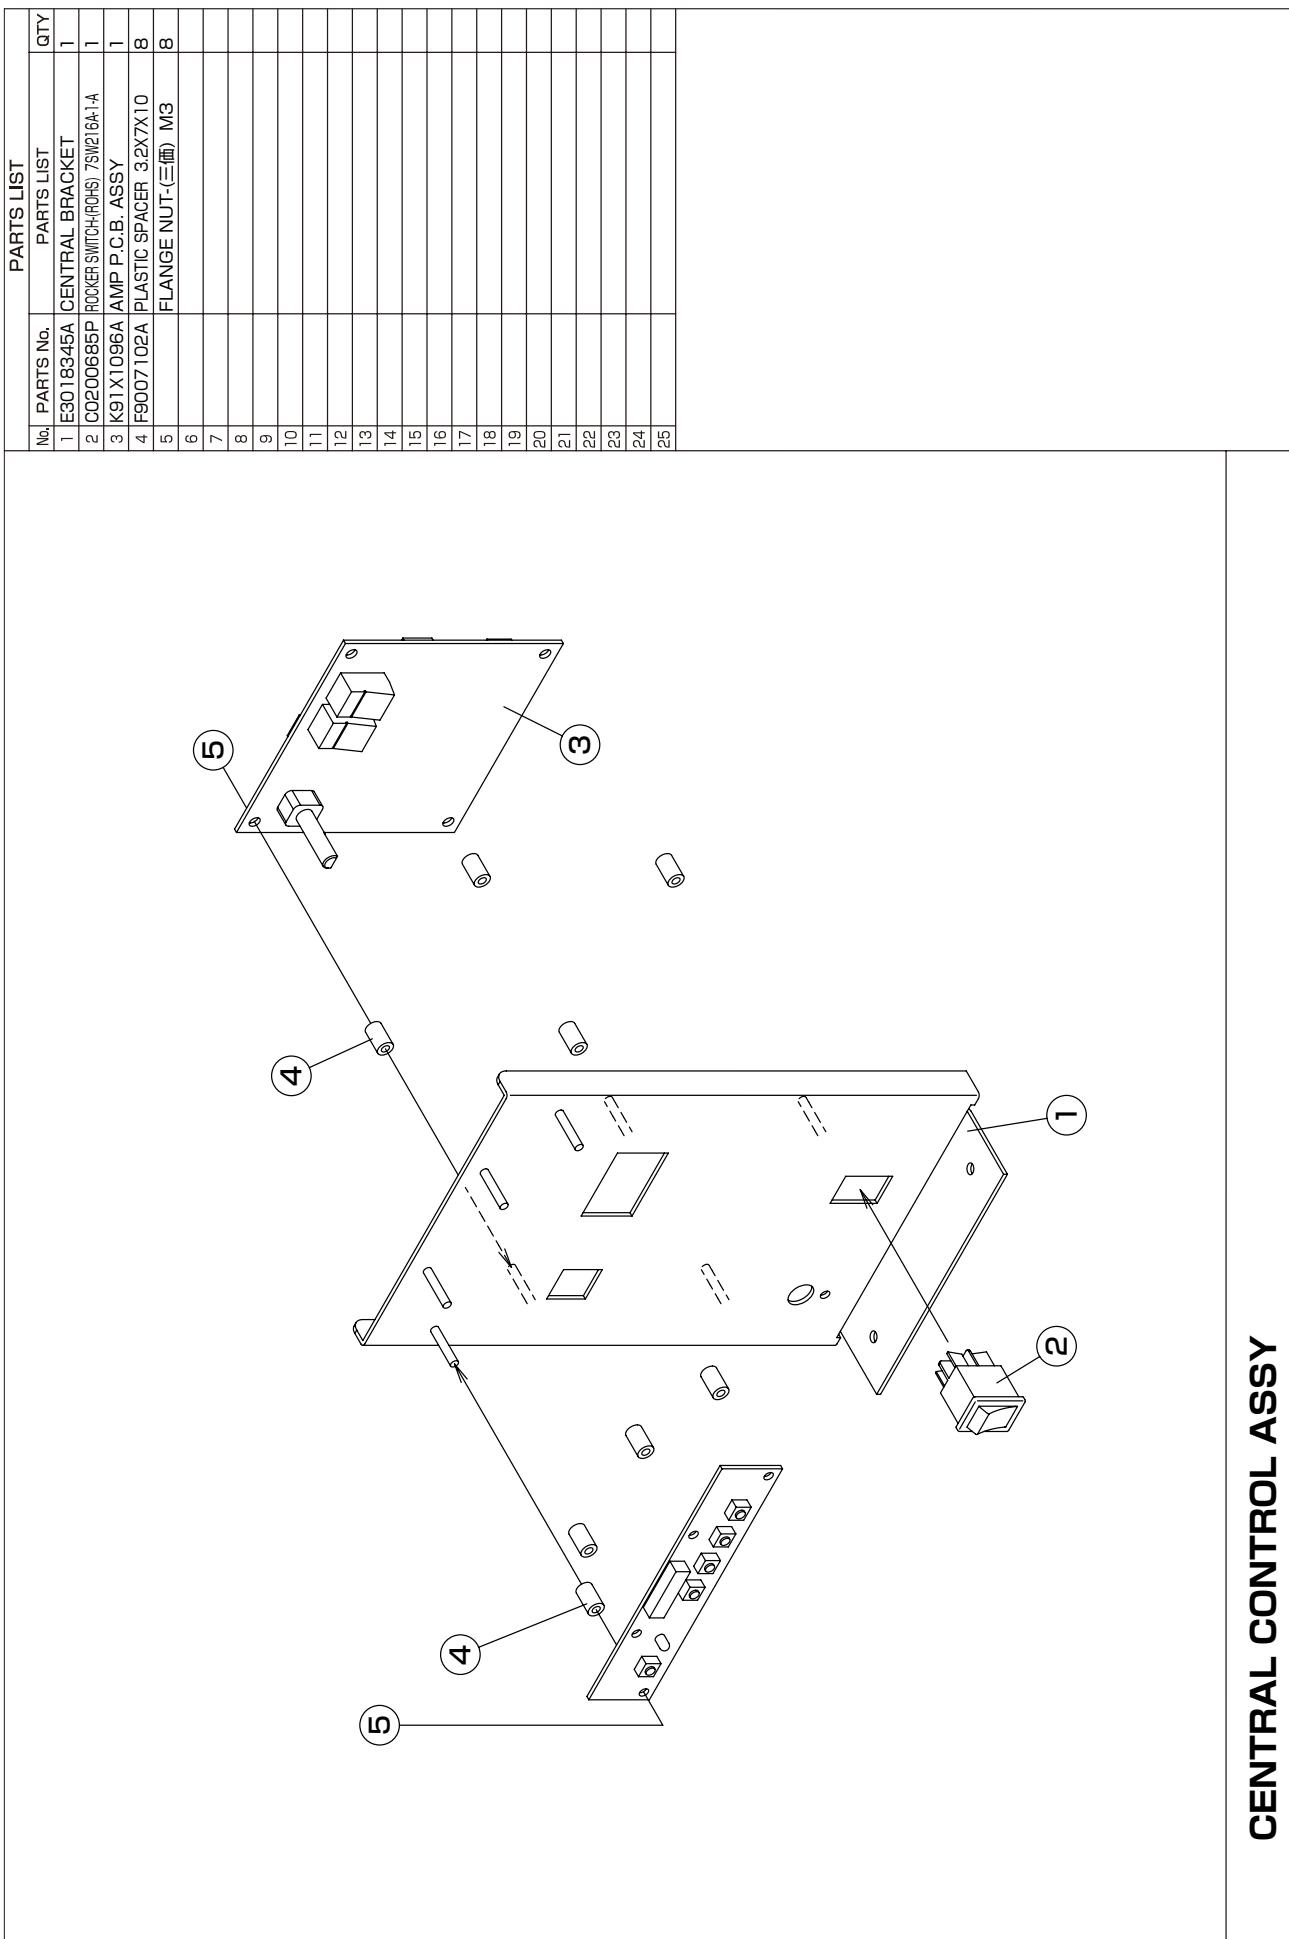


REJECTOR DOOR ASSY

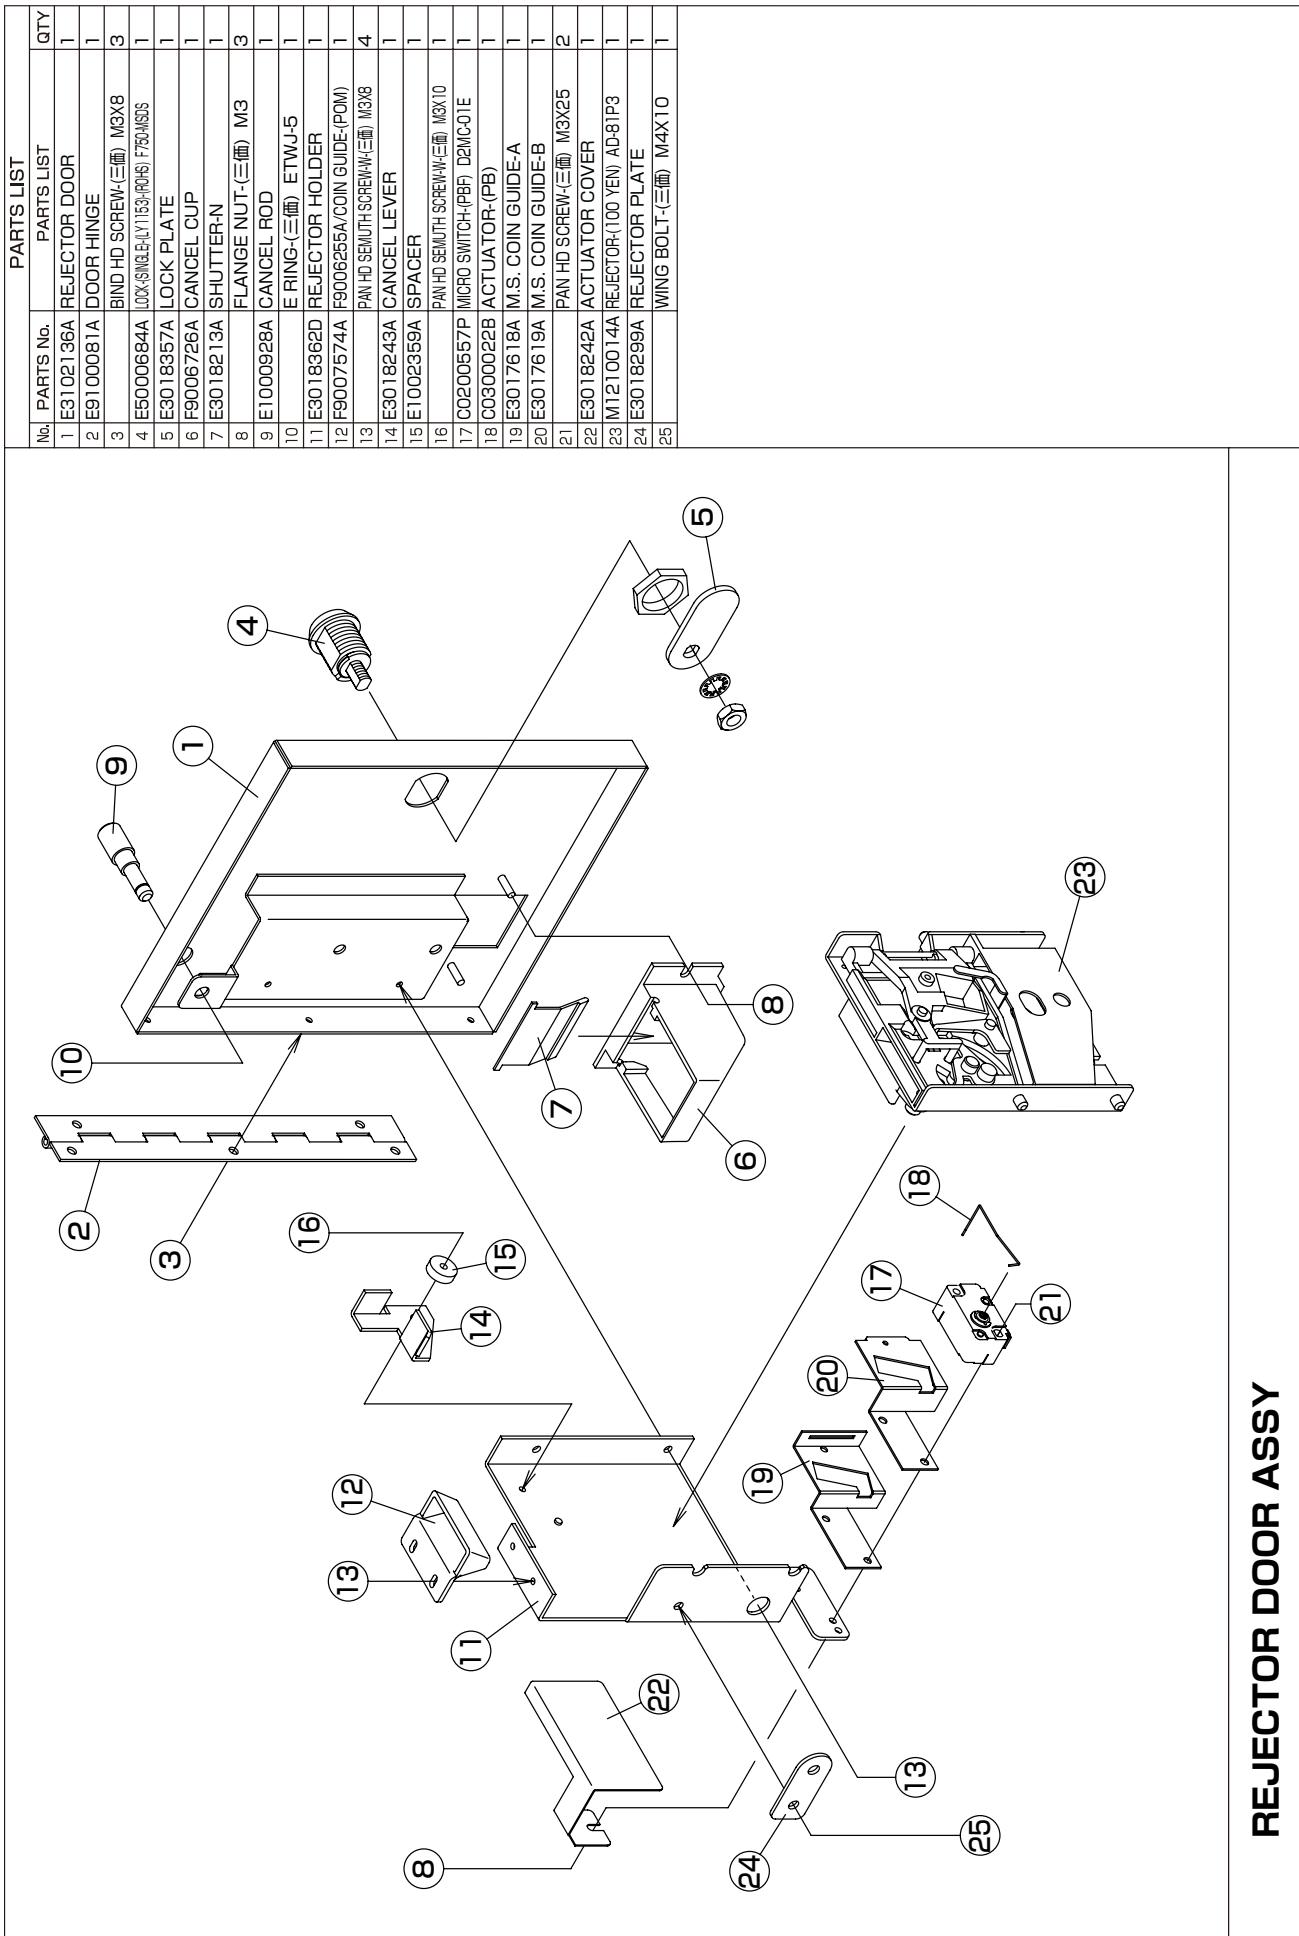

PARTS LIST		
No.	PARTS No.	PARTS LIST
1	E3102124A	CASH BOX
2	E5000678A	KIND LOCK-LARGE RING (-ROD) F830-LARGE RING
3	E3018225A	LOCK PLATE-(Z LOCK)
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		
21		
22		
23		
24		
25		

CASH BOX ASSY

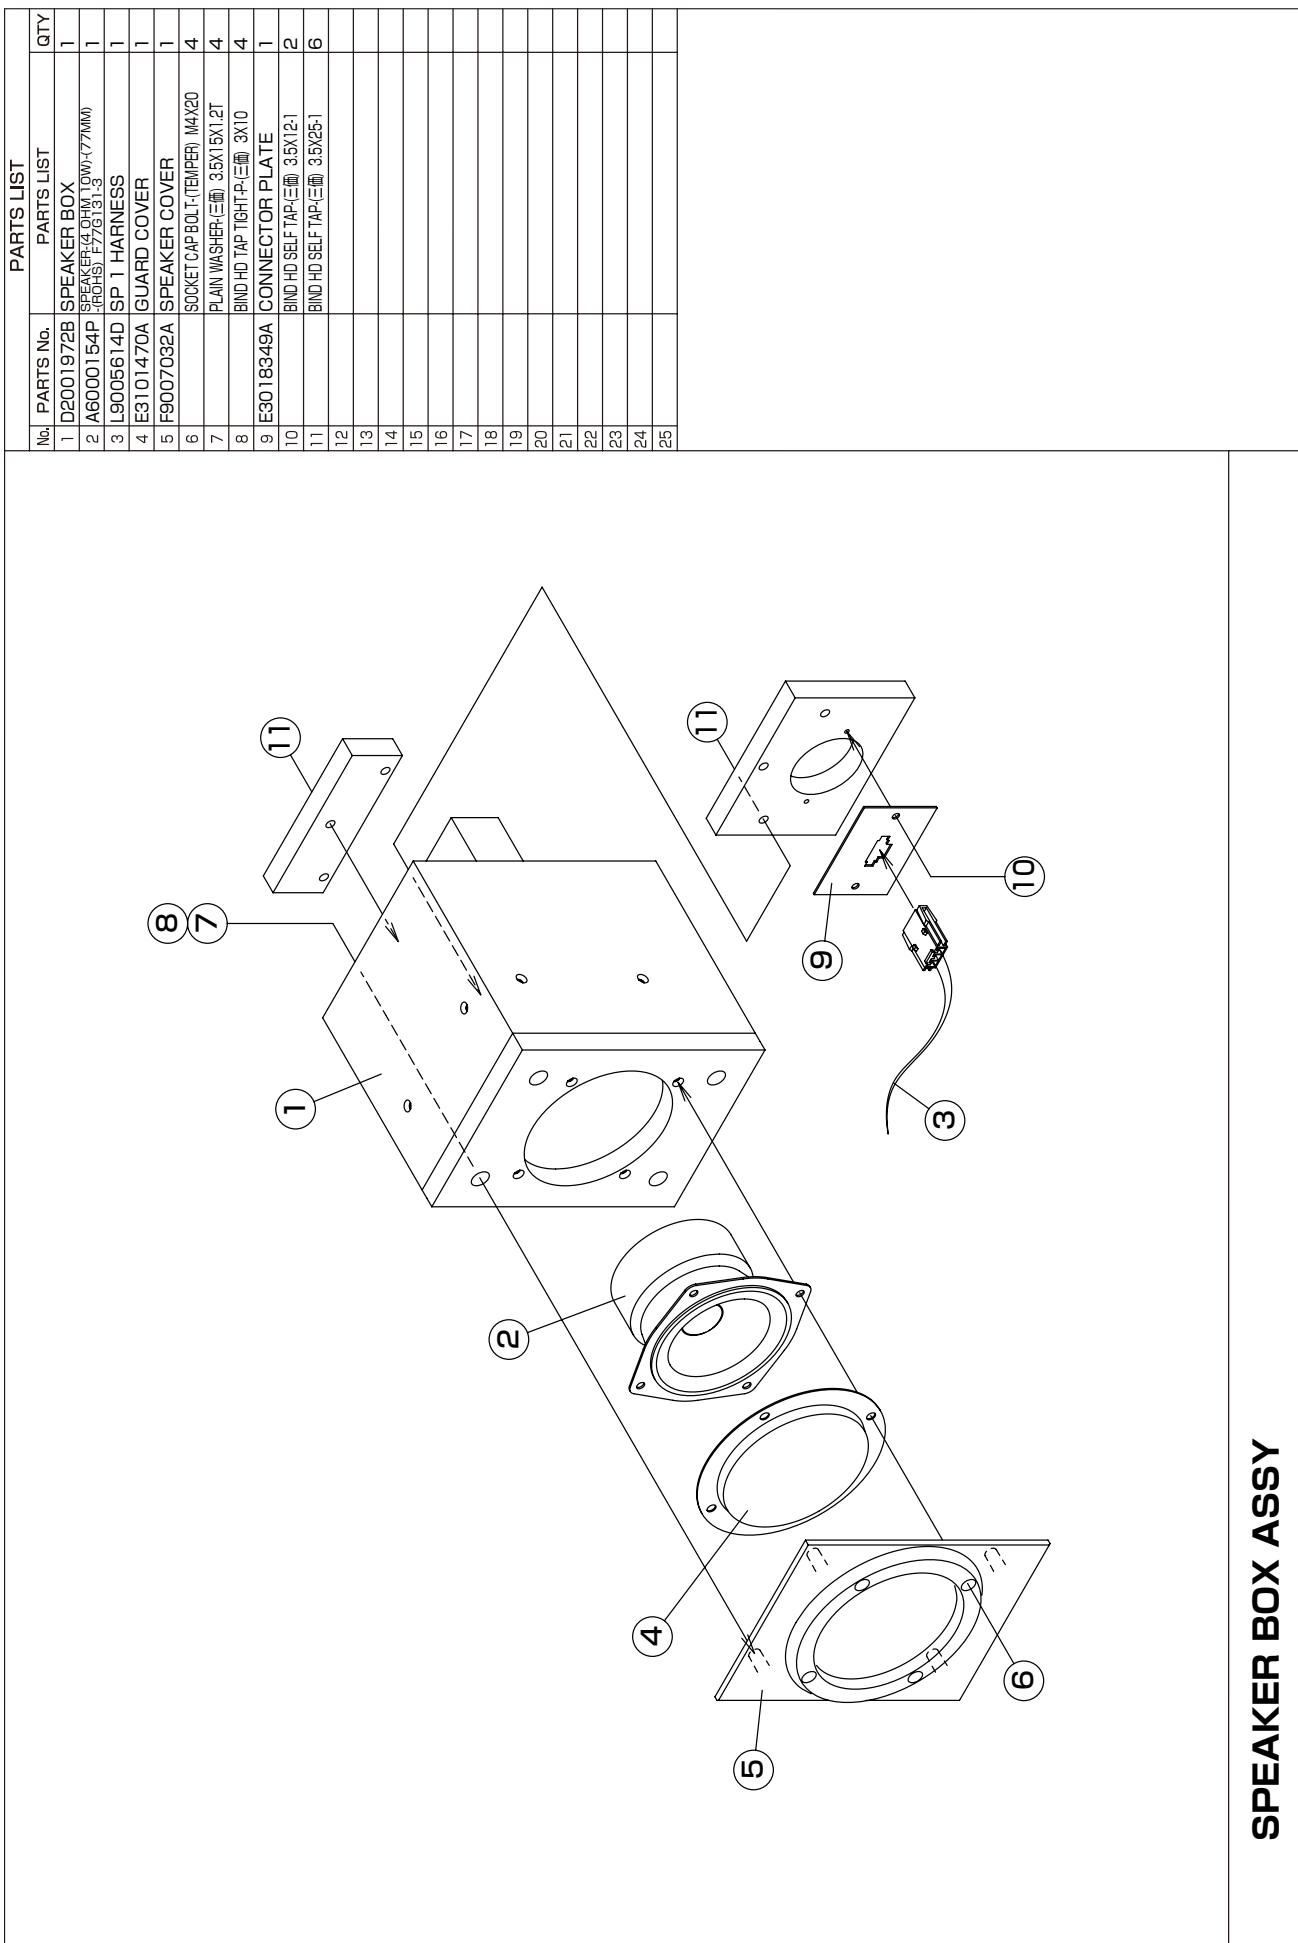


SPEAKER BOX ASSY

PARTS LIST		
No.	PARTS No.	PARTS LIST
1	A6000156P	FLAT PANEL SPEAKER(RHHS) FPS022N 1
2	E3101514A	FLAT SPEAKER BRACKET 1
3		PAN HD SEMIUTS SCREWS(3.5BLACK) M3X5 6
4	E3101513A	FLAT SPEAKER BASE 1
5	L9005615D	SP 2 HARNESS 1
6	D2001970B	FLAT SPEAKER BOX 1
7	E3101470A	GUARD COVER 1
8	F90007032A	SPEAKER COVER 1
9		SOCKET CAP BOLT(TEMPER) MAX20 4
10		PLAIN WASHER(3mm) 3.5X15X1.2T 4
11		BIND HD TAP TIGHT-P(3mm) 3X10 4
12	E3018349A	CONNECTOR PLATE 1
13		BIND HD SELF TAP(3mm) 3.5X12.1 2
14		BIND HD SELF TAP(3mm) 3.5X25.1 4
15		
16		
17		
18		
19		
20		
21		
22		
23		
24		
25		

FLAT SPEAKER BOX ASSY

CONTROL PANEL ASSY-(1J7B) [1]

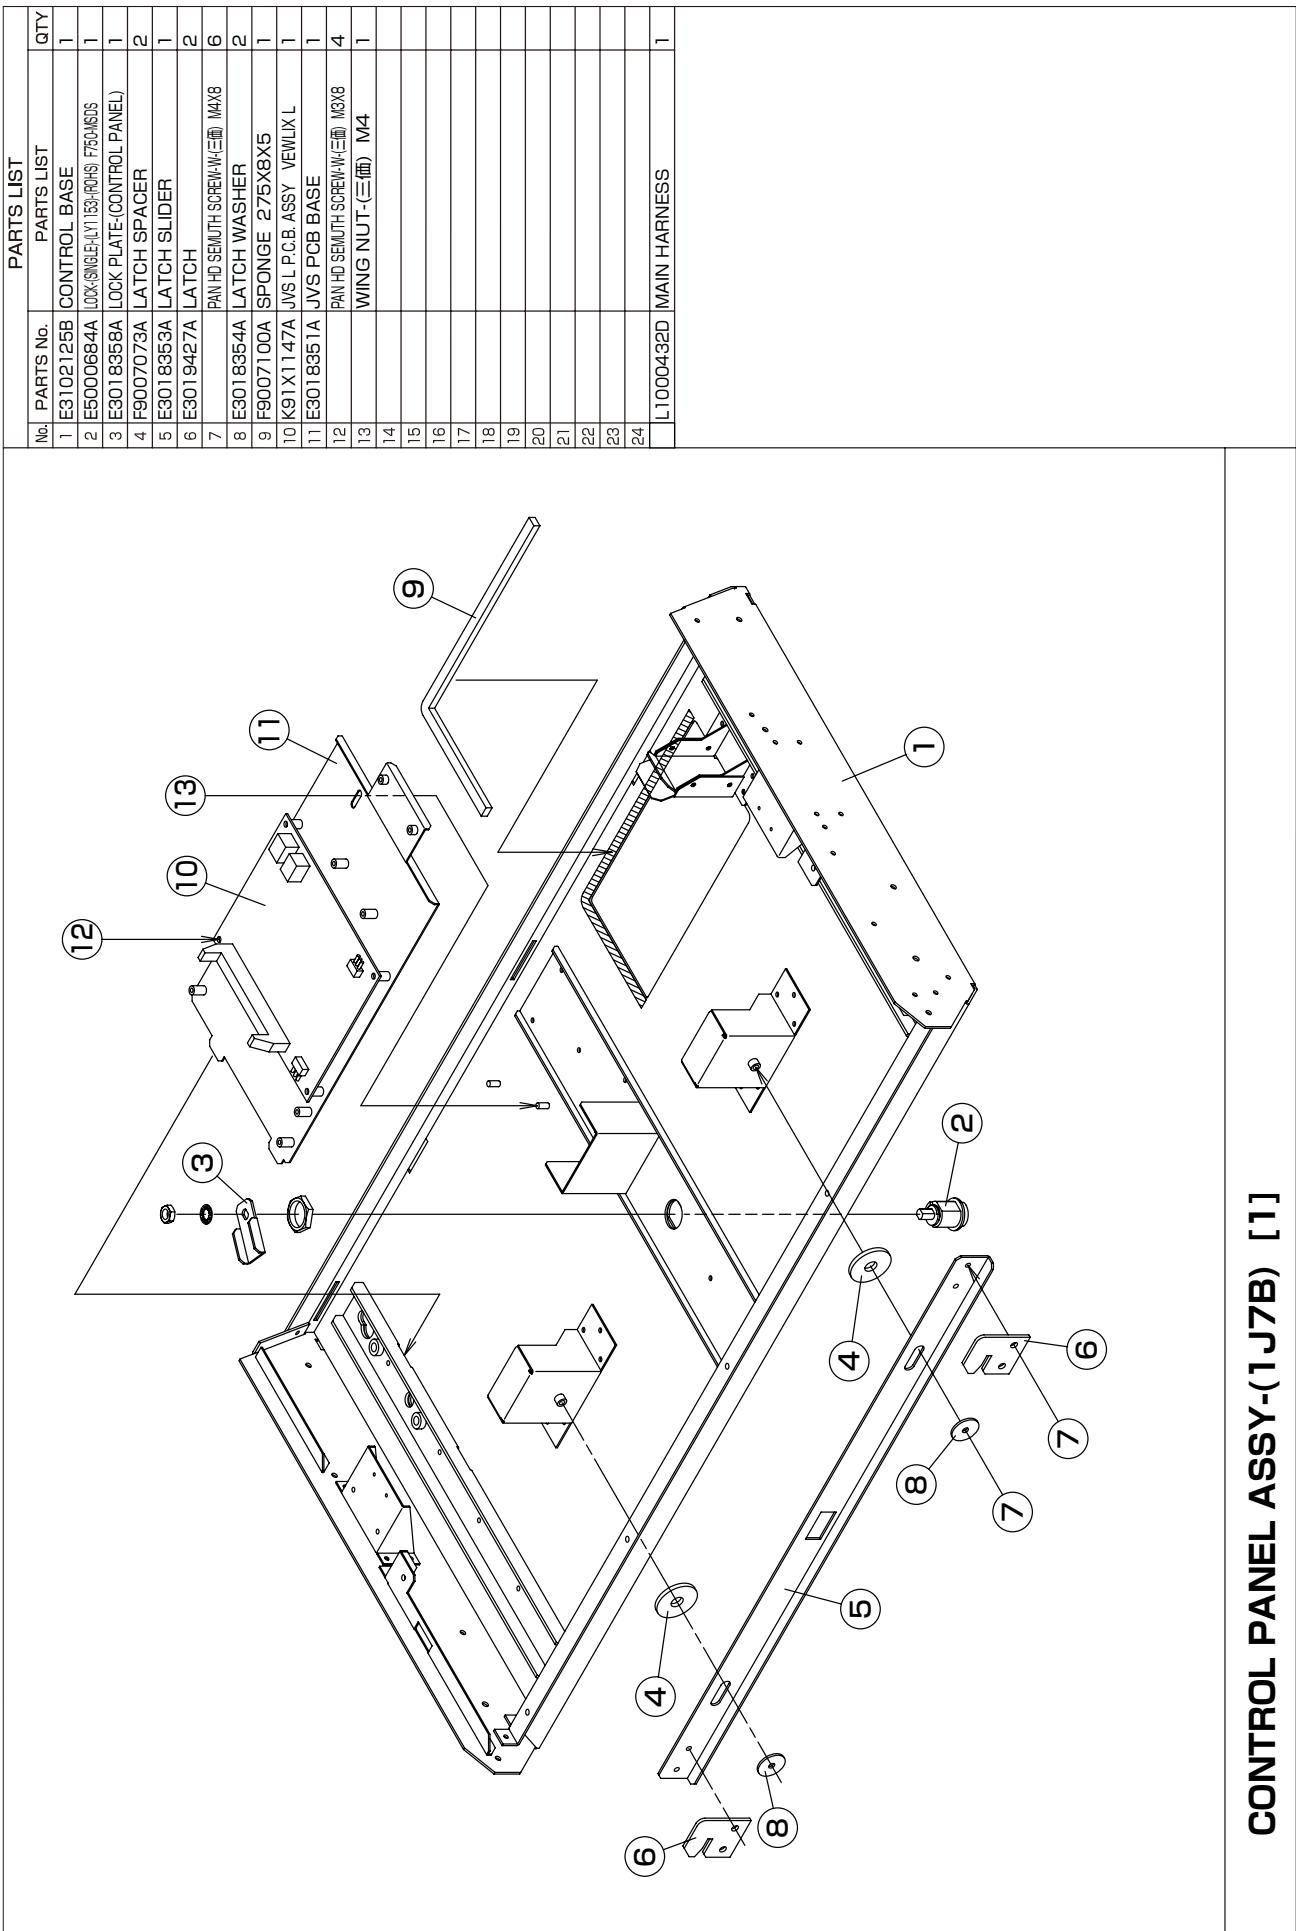


PARTS LIST			
No.	PARTS No.	PARTS LIST	QTY
1	E3101511A	EEFL BASE	1
2	F9007076A	SPONGE 745X6X5	2
3	F9007077A	WATER GUARD-A	1
4			
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			
22			
23			
24			
25			

A矢規図


B矢規図

CONTROL PANEL ASSY-(1J7B) [2]

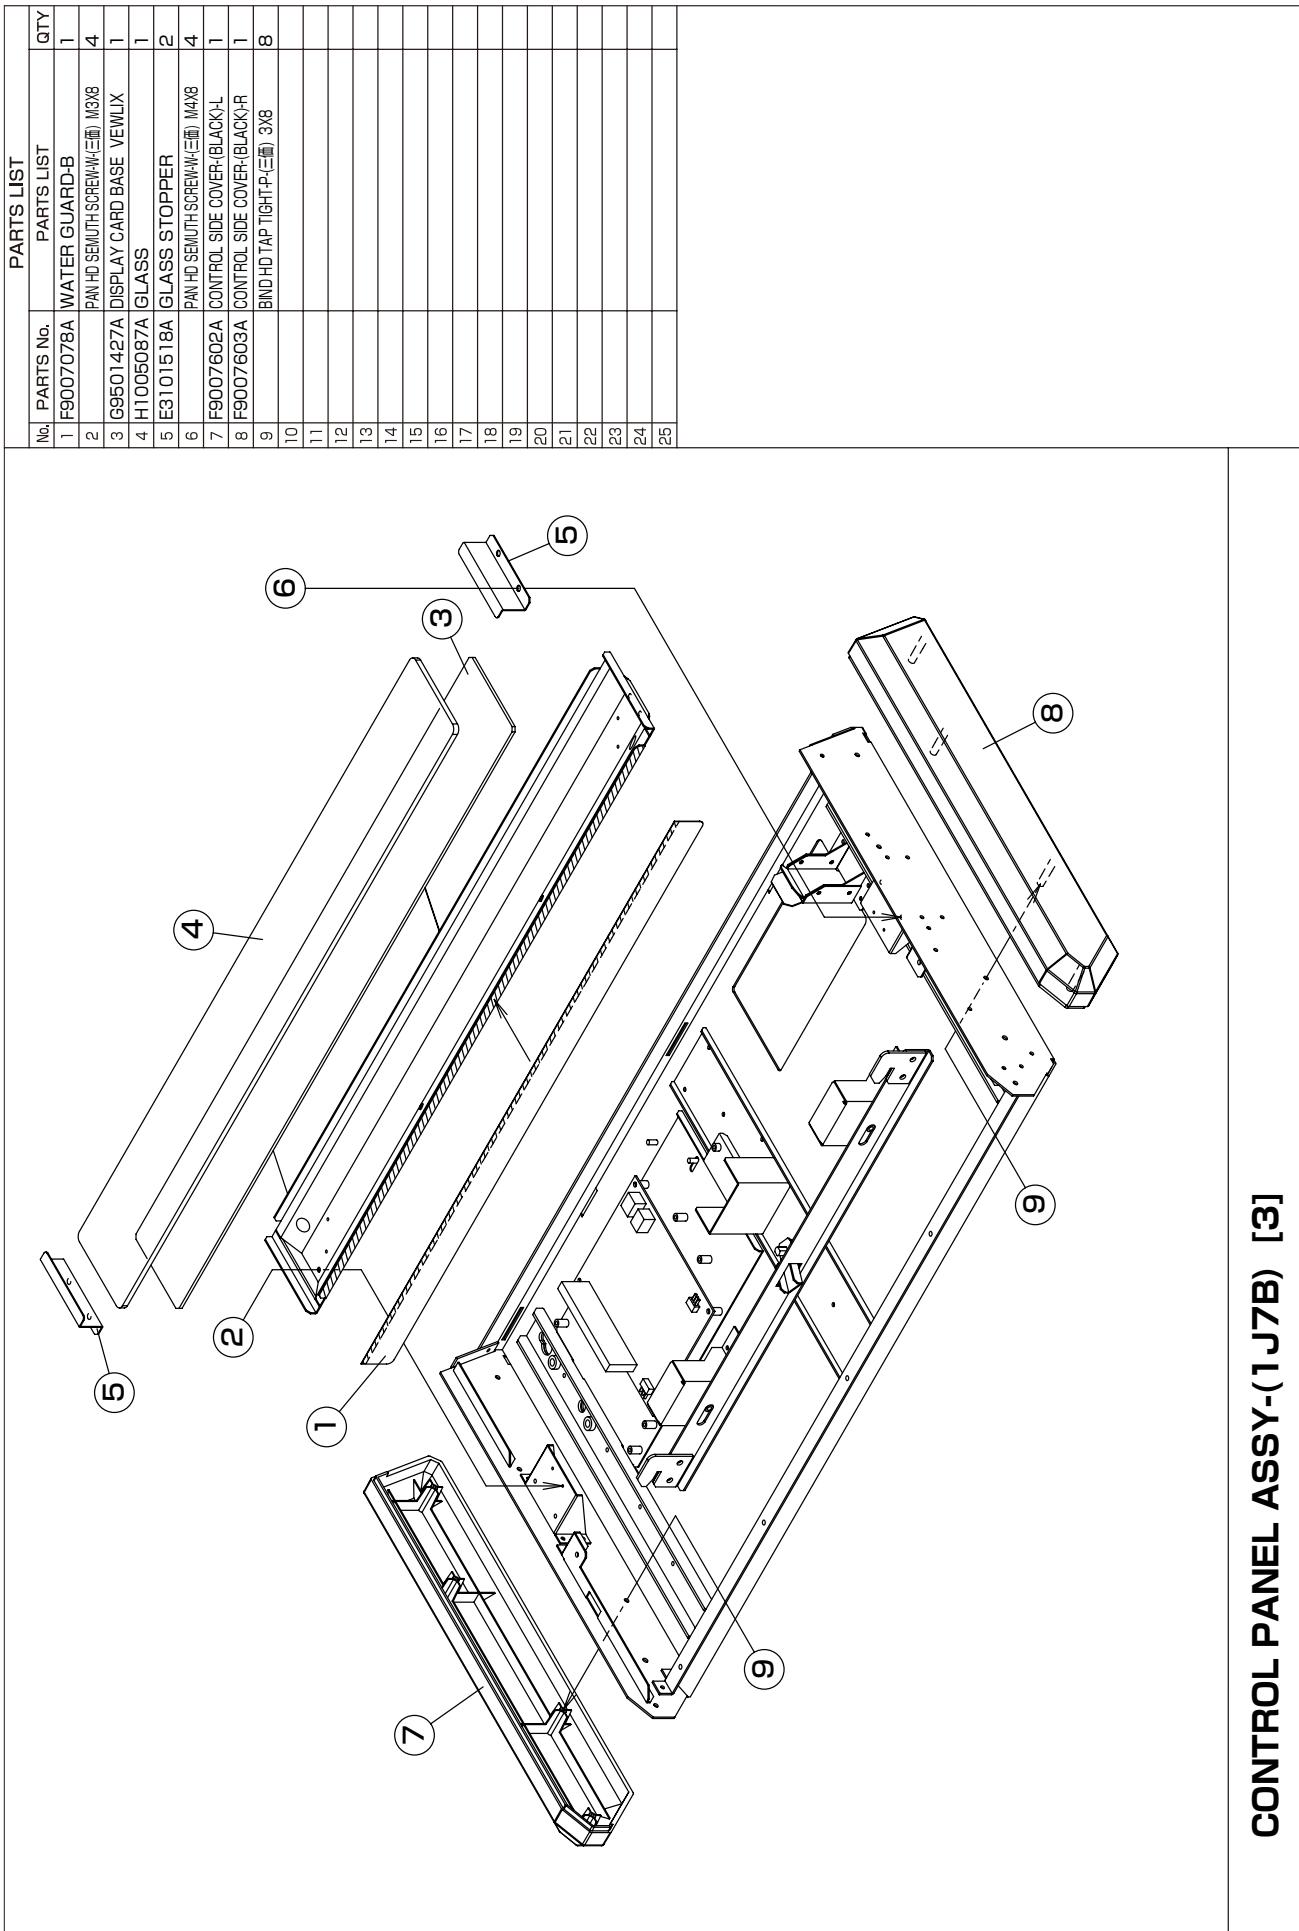


CONTROL PANEL ASSY-(1J7B) [3]

PARTS LIST			
No.	PARTS No.	PARTS LIST	QTY
1	E3102127A	CONTROL COVER-(REAR)	1
2	F9007040A	COIN ENTRY MOLDING-ROHS	1
3	E3018348A	COIN ENTRY PLATE-(100YEN)	1
4		PAN HD SEMI TH SCREW(M4×30) M3X8	2
5	F9007021A	EXTRA SPACE COVER-L	1
6	F9007022A	EXTRA SPACE COVER-R	1
7		PAN HD SEMI TH SCREW(M4×30) M4X8	10
8	F9007020A	ASHTRAY STOPPER	2
9		BIND HD TAP (GHTP-E) 3/8	6
10		CROSS RECESSED ROLLET SCREW M4X7	2
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			
22			
23			
24			
25			

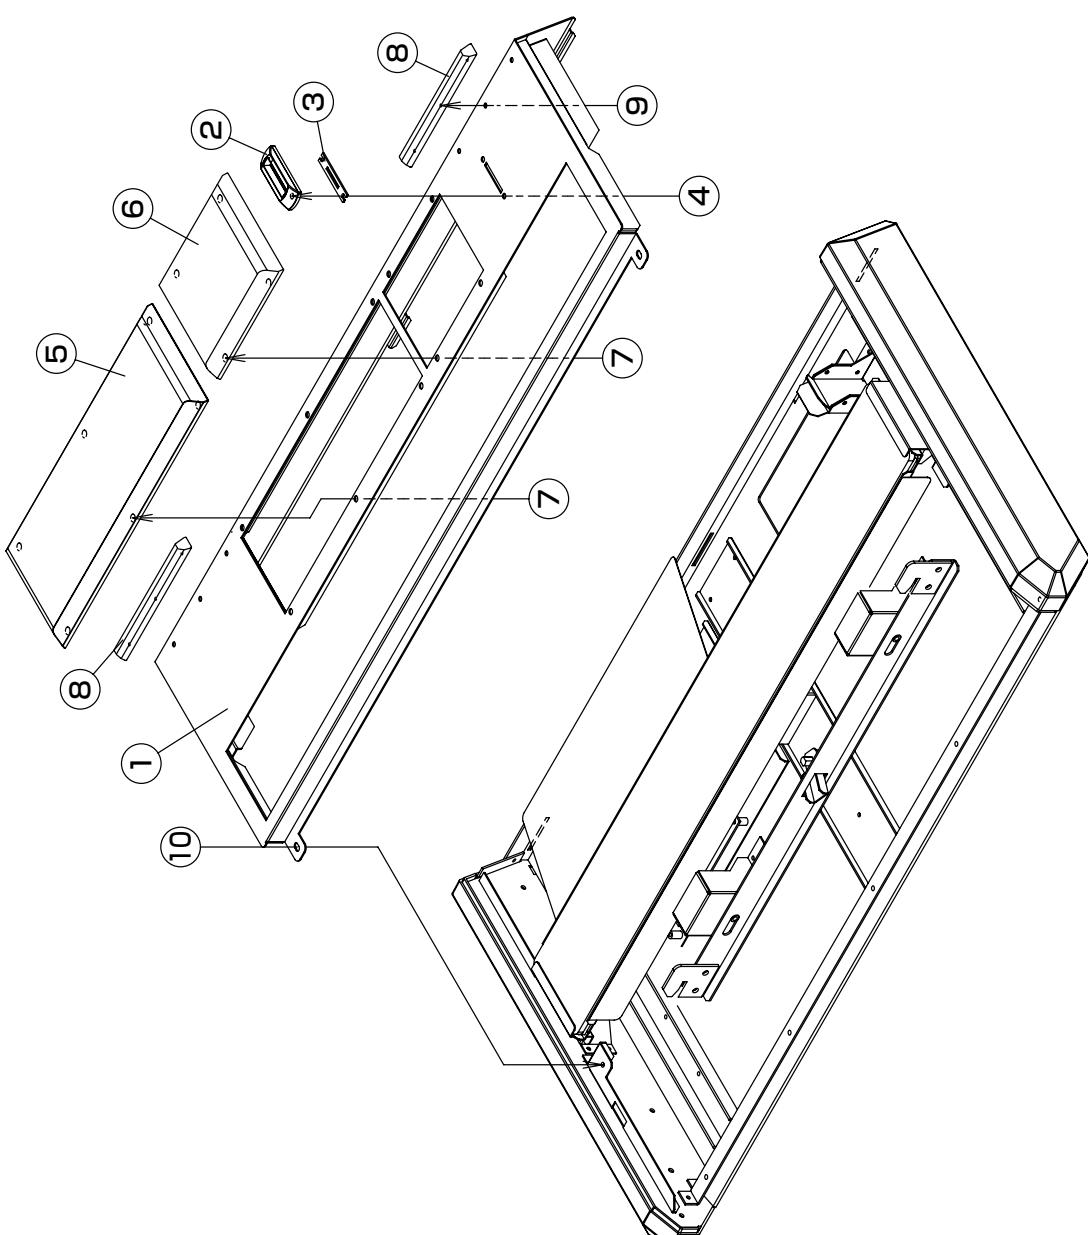


CONTROL PANEL ASSY-(1J7B) [4]

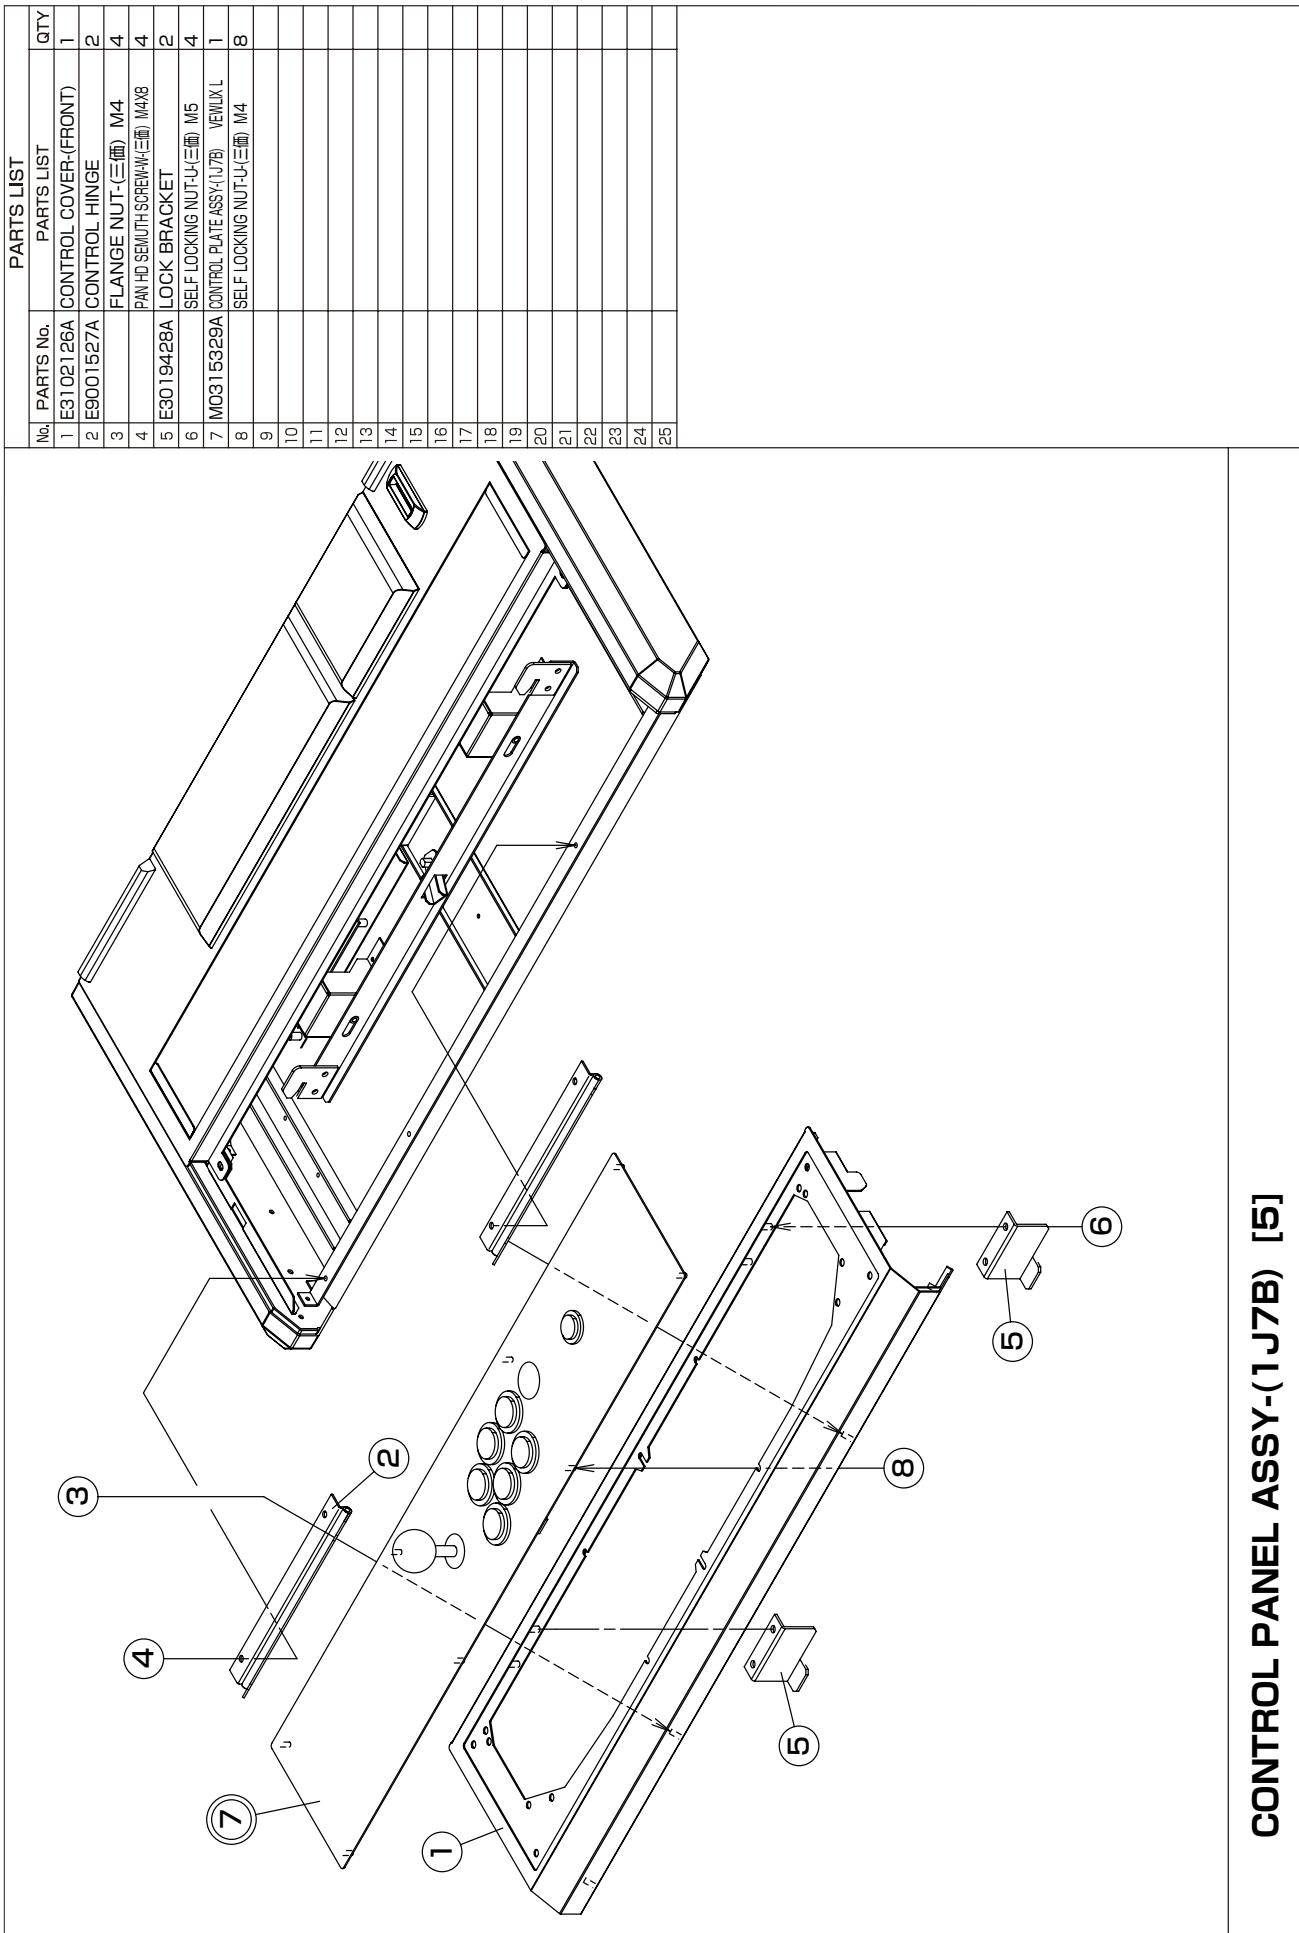

CONTROL PANEL ASSY-(1J7B) [5]

PARTS LIST			
No.	PARTS No.	PARTS LIST	QTY
1	E3102110A	CONTROL PLATE-(1J7B)	1
2	G5500501A	CONTROL STICKER-(1J7B) VENIXL	1
3	M1000442A	JOYSTICK(WHITE,ROHS JE-TB8/SK/W	1
4	E3018350A	JOYSTICK BRACKET	1
5		PANHD SEMIUT SCREW(W-3#) M4X15	2
6		SELF LOCKING NUT-L4-(3#) M4	6
7	C0200688P	PUSH SW.(SPST HORN DOME 12V)-WHITE,PAF DESS-0W	6
8	C0200687P	PUSH SW.(SPST HORN DOME 12V)-WHITE,PAF DESS-24W	1
9	F9001053A	BUTTON COVER D-30 DP-1187	1
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			
22			
23			
24			
	L3000570C	K HARNESS-(1J6B)	1

CONTROL PLATE ASSY-(1J7B)

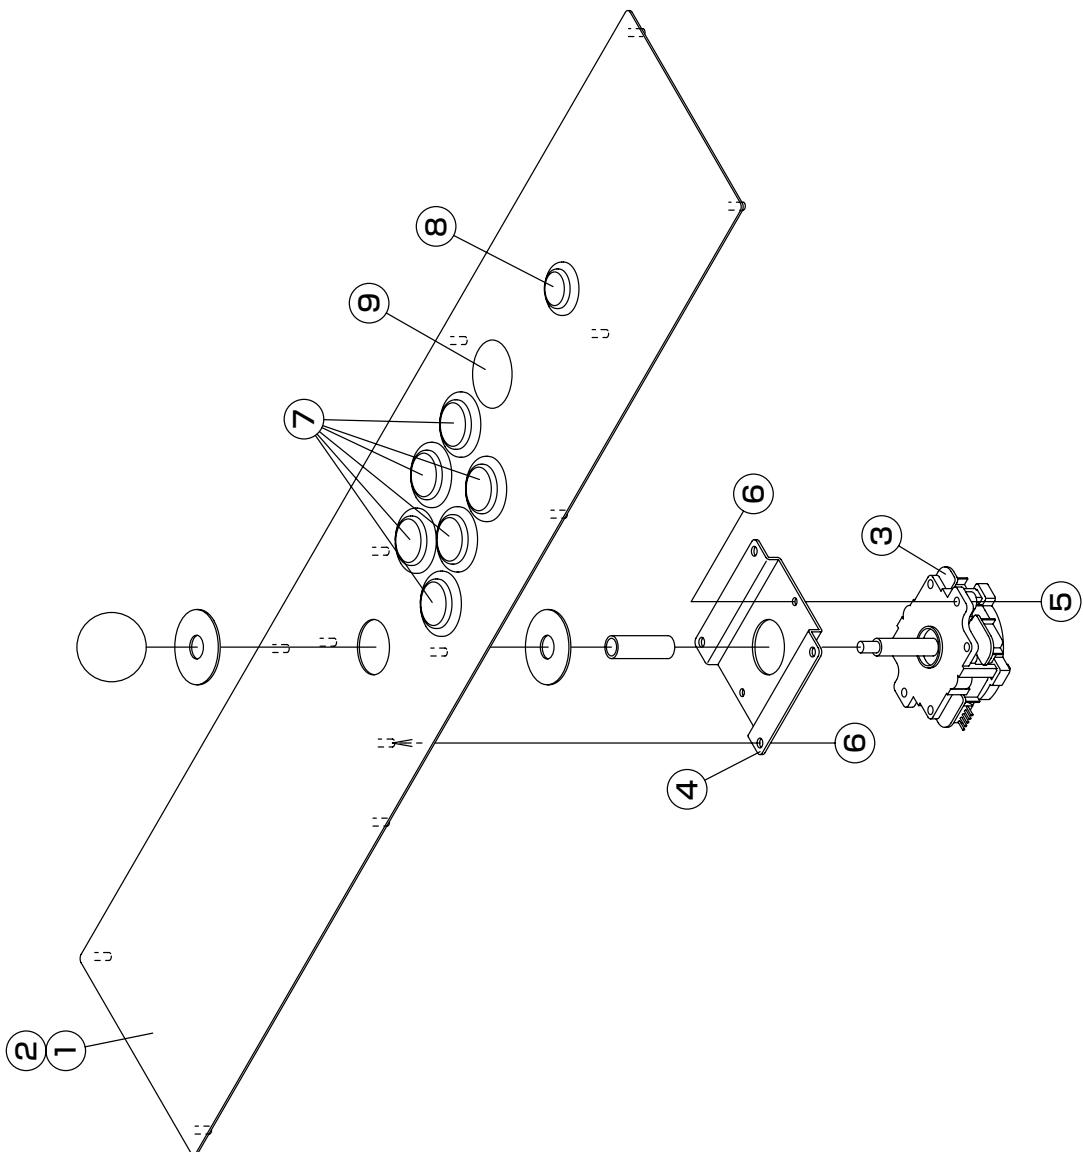


PARTS LIST			
No.	PARTS No.	PARTS LIST	QTY
1	E3018364A	SIDE COVER BASE-L	1
2	E3018375A	MIDDLE COVER GUIDE-L	1
3		PAN HD SEMIUTSCREW(Φ3.0) M4X8	4
4	F9007029A	SIDE COVER-L	1
5		BINDHOTAP(IGHTP-(E)) 3/8	3
6	E3102134A	MIDDLE SIDE COVER-L	1
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			
22			
23			
24			
25			

SIDE COVER ASSY-L

PARTS LIST			
No.	PARTS No.	PARTS LIST	QTY
1	E3018365A	SIDE COVER BASE-R	1
2	E3018376A	MIDDLE COVER GUIDE-R	1
3		PAN HD SEMIUTSCREW(4×30) M4X8	4
4	F9007030A	SIDE COVER-R	1
5		BINDING TAP (IGHTP-35) 3/8	3
6	E3102135A	MIDDLE SIDE COVER-R	1
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			
22			
23			
24			
25			

SIDE COVER ASSY-R

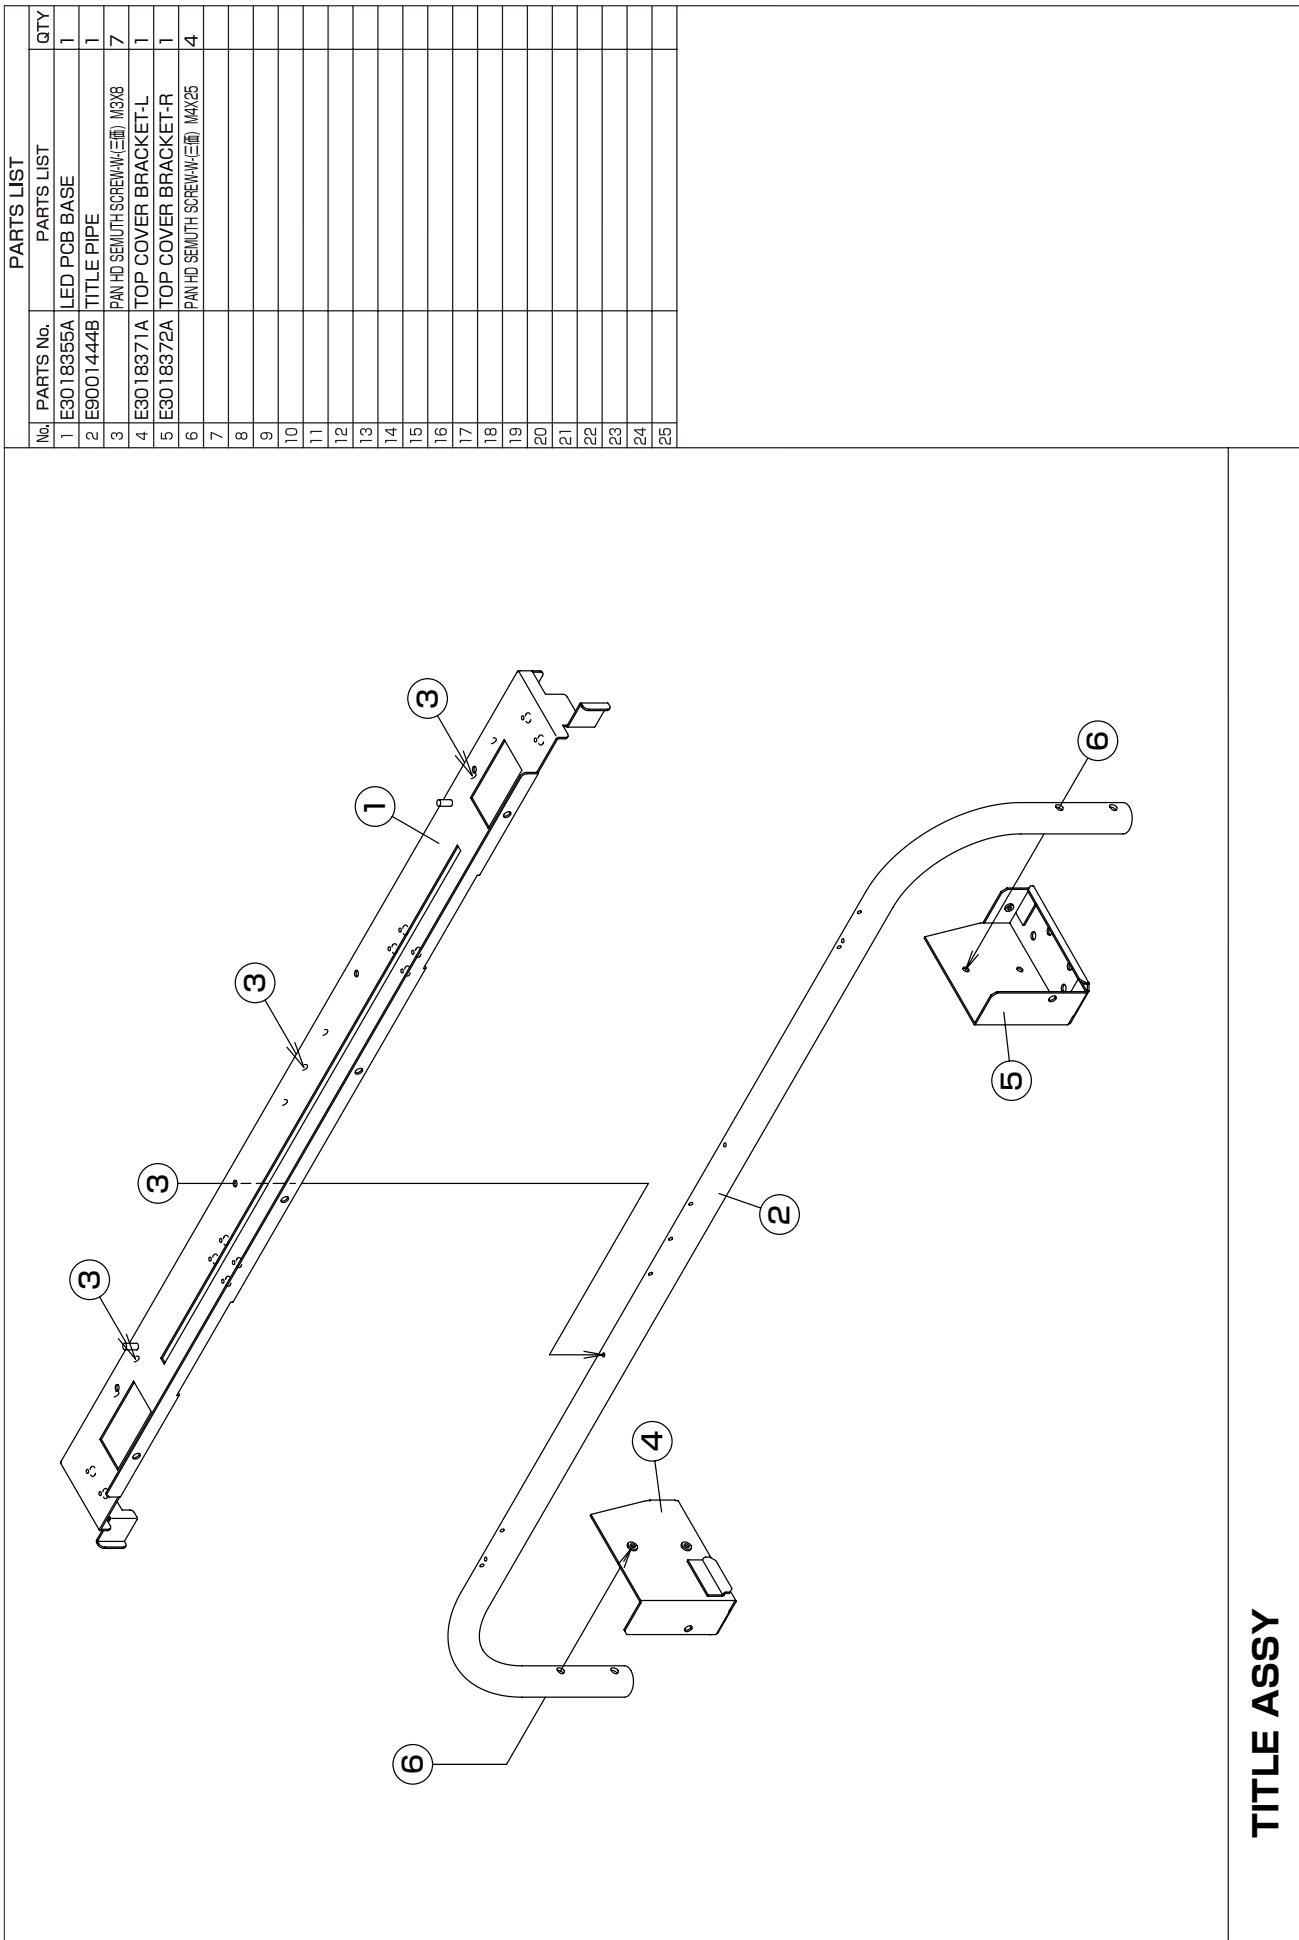



TITLE ASSY

PARTS LIST			
No.	PARTS No.	PARTS LIST	QTY
1	F9007604A	INSTRUCTION PANEL VEWLXL	1
2	F9007071A	INSTRUCTION COVER	1
3		TRUSS AD SCREW<クローバー> M4X10	5
4		HEX CAP NUT<クローム> M4	5
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			
22			
23			
24			
25			

INSTRUCTION PANEL ASSY

配線図

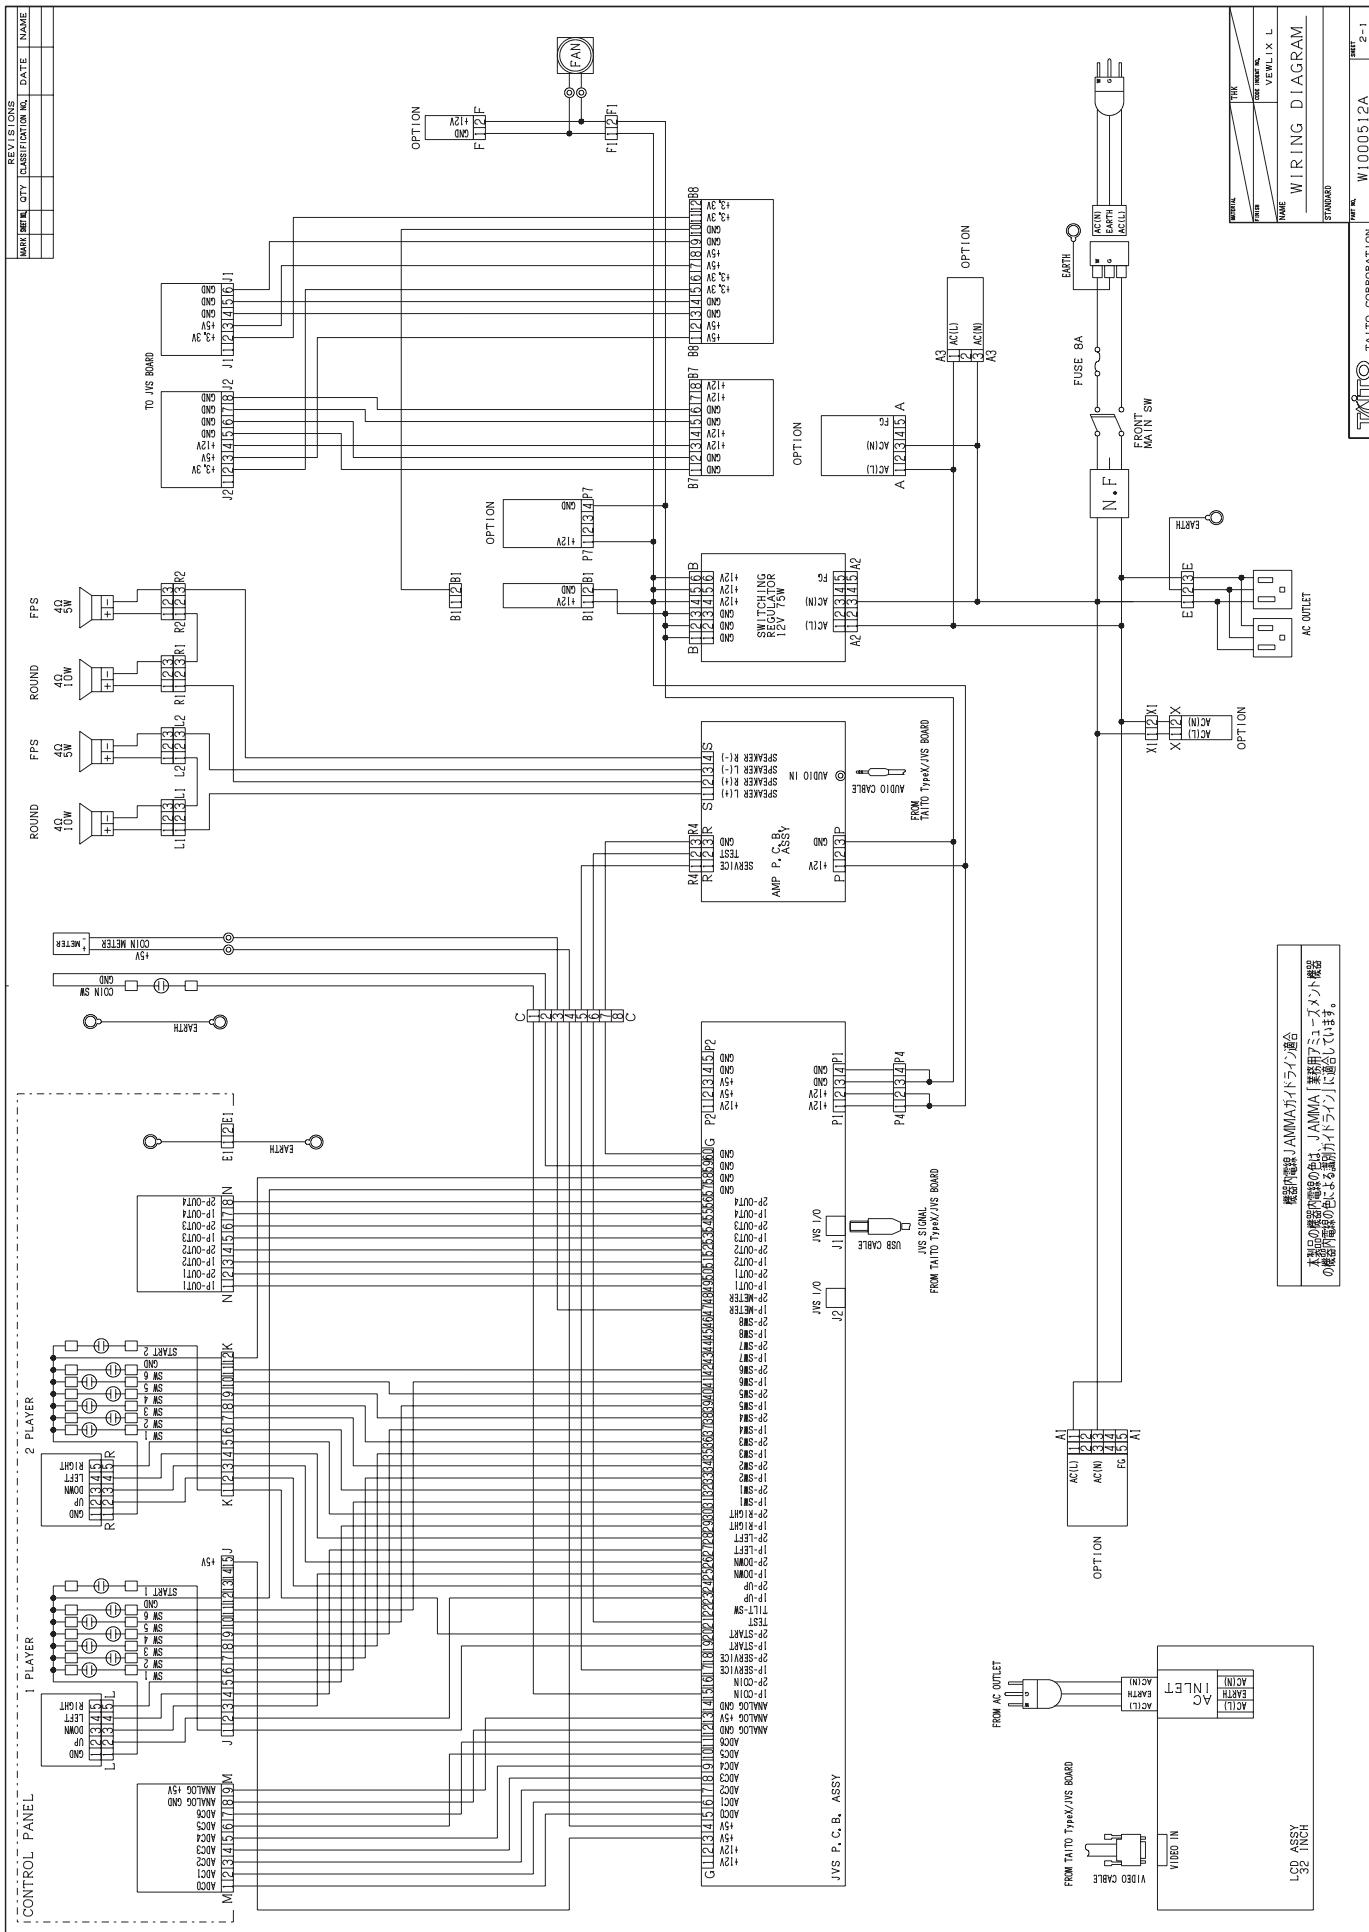

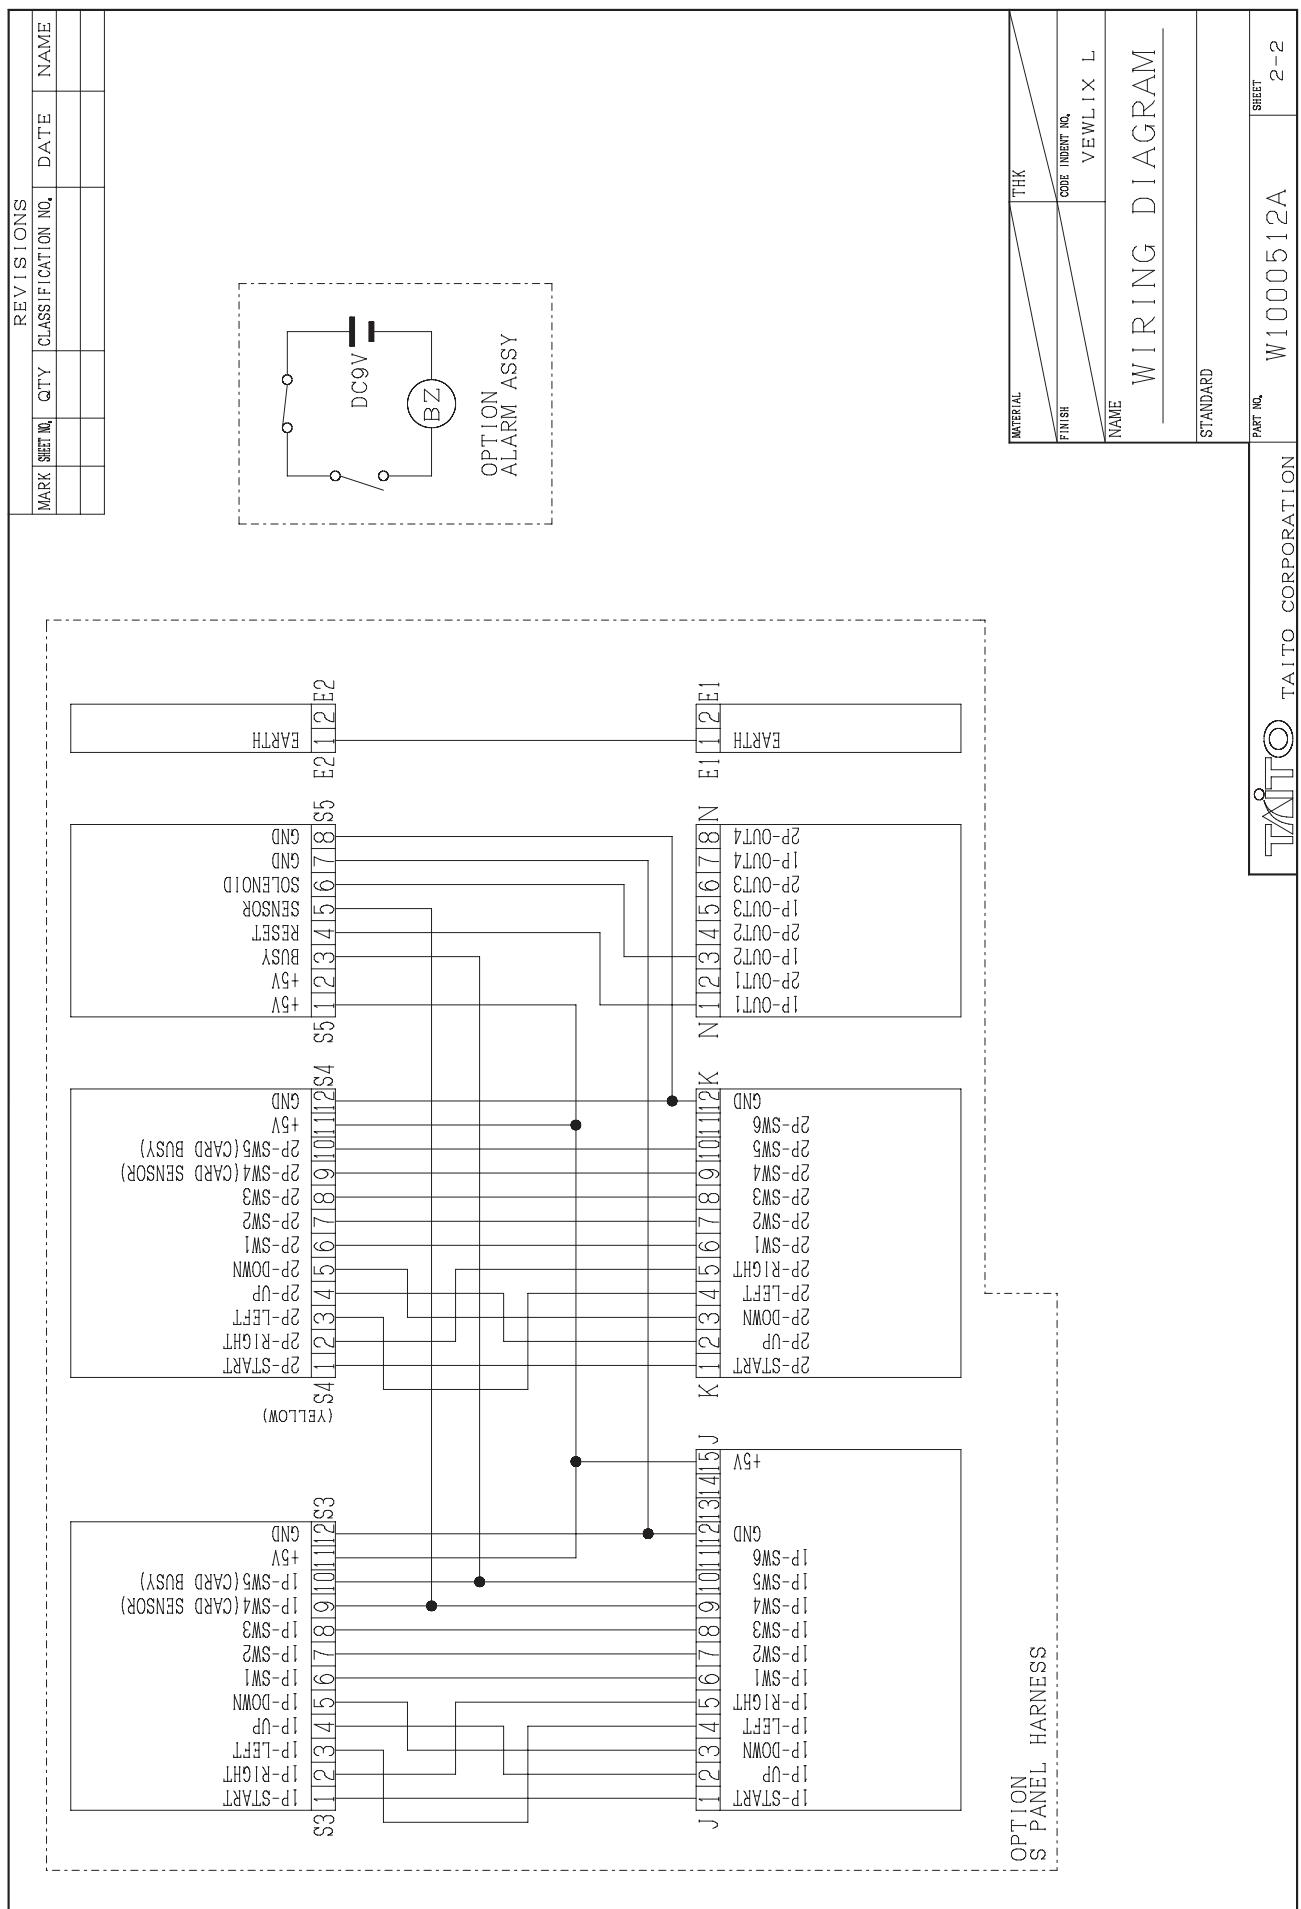

修理案内

本機についての修理依頼や部品のご注文の際には、次頁に添付の「先出し依頼発注書」「出張修理依頼発注書」「メンテナンスパーツ発注書」に必要事項を記入してFAXにて、下記お問い合わせ先までお知らせください（用紙はコピーしてお使いください）。

なお、本機の取扱いに関するご相談につきましても、お問い合わせ先にて行っております。

本製品の部品の供給期間を製造打ち切り後5年間とさせて頂きます。

ただし、やむを得ない理由により供給期間内であってもご注文をお受けできなくなる部品がありますので、あらかじめご了承ください。なお、お客様からの需要を考慮しまして、供給期間を延長することもあります。

詳しくは下記お問い合わせ先までご連絡ください。

【お問い合わせ先】

(株) タイトー TECH事業部

〒243-0498 神奈川県海老名市下今泉 3-11-1

PHONE 046-235-9510(代表) FAX 046-235-9882

受付時間：平日9時～12時、13時～17時45分 (NESYSご契約窓口は17時00分まで)
：土曜日は一部窓口の対応、日曜祝日は全休となります。

●代表番号着信後、各担当への接続は電話機のプッシュボタンで番号を選択して頂きます。

- ①番を選択 …… サービスセンター(故障・先貸出し・訪問修理お問い合わせ窓口)
e-mail : service-info@taitotech.com
- ②番を選択 …… パーツセンター(メンテナンスパーツ)
e-mail : parts-info@taitotech.com
- ③番を選択 …… リペアセンター(現物修理)
- ④番を選択 …… ネットワークゲーム契約関連お問い合わせ窓口 (NESYSご契約窓口)
- ⑤番を選択 …… その他 お問い合わせ窓口

※年末年始・GW・お盆期間中の対応に付きましては別途ご案内致します。

※通話料金はお客様のご負担になります。

また、下記Webサイトからも部品・先出し品をご注文頂けます。
本取扱説明書の記載事項に変更が生じた場合も下記Webサイトに掲載いたします。

TAITOTECH (タイトーテック) <http://www.taitotech.com/>

※Webサイトご利用にはユーザー登録が必要です。（登録料無料）

先出し依頼発注書

依頼日： 年 月 日

注文書NO _____

(株) タイトー TECH事業部

サービスセンター

〒243-0498 神奈川県海老名市下今泉3-11-1
TEL : 046-235-9510 FAX : 046-235-9882
e-mail : service-info@taitotech.com

※機械名記入欄（必ず御記入願います）

※機械番号記入欄（必ず御記入願います）

※故障内容記入欄（具体的に御記入願います）

※依頼品記入欄

	部品番号	部品名	数量	備考
1				
2				
3				

※依頼元

依頼元名：	御担当者：	TEL：
		FAX：
住所：〒		

※納品先 依頼元と同じ 請求先と同じ

納品先名：	御担当者：	TEL：
		FAX：
住所：〒		

※御請求先 依頼元と同じ 納品先と同じ

御請求先名：	御担当者：	TEL：
		FAX：
住所：〒		

出荷希望日： 年 月 日

発送運賃： 着払い 立替元払い

備考欄：

注：※マークの項目は必ず御記入願います。

出張修理依頼発注書

依頼日： 年 月 日

注文書NO

(株) タイトー TECH事業部

サービスセンター

〒243-0498 神奈川県海老名市下今泉3-11-1
TEL: 046-235-9510 FAX: 046-235-9882
e-mail: service-info@taitotech.com

※機械名記入欄（必ず御記入願います）

※機械番号記入欄（必ず御記入願います）

※故障内容記入欄（具体的に御記入願います）

※依頼元

依頼元名：	御担当者：	TEL：
		FAX：

住所：〒

※訪問先

依頼元と同じ

請求先と同じ

訪問先名：	御担当者：	TEL：
		FAX：

住所：〒

※御請求先

依頼元と同じ

納品先と同じ

御請求先名：	御担当者：	TEL：
		FAX：

住所：〒

訪問希望日： 年 月 日

備考欄：

注：※マークの項目は必ず御記入願います。

以下当社記入欄

御依頼ありがとうございます。訪問日程に関しては以下の通りとなっております。

年 月 日に より訪問致します。

訪問日等詳細に関しては、 より御連絡致します。

メンテナンスパーツ発注書

依頼日： 年 月 日

注文書NO _____

(株) タイトー TECH事業部 パーツセンター

〒243-0498 神奈川県海老名市下今泉3-11-1
TEL : 046-235-9510 FAX : 046-235-9882
e-mail : parts-info@taitotech.com

依頼元

依頼元名：	御担当者：	TEL：
		FAX：
住所：〒		

納品先 依頼元と同じ 請求先と同じ

納品先名：	御担当者：	TEL：
		FAX：
住所：〒		

御請求先 依頼元と同じ 納品先と同じ

御請求先名：	御担当者：	TEL：
		FAX：
住所：〒		

依頼品記入欄

	部品番号	部品名	数量	備考
1				
2				
3				
4				
5				
6				
7				
8				

出荷希望日： 年 月 日

まとめ出荷希望する場合はチェック
(全部そろってからの出荷になります)

発送運賃： 着払い 立替元払い

お支払い方法： 御請求先一括払い 代金引換

備考欄：

株式会社 **タイトー**[®]

本社 東京都渋谷区代々木3-22-7

© TAITO CORP. 2008 PRINTED IN JAPAN
無断転載を禁じます。