

Load control panel

HD4673	HS4673	N4673	067206	573985
HC4673	L4673	NT4673	067207	573991

Description

The load control panel is a device that enables displaying the status of the loads controlled by the load control central unit, item F521, and force their operation independently from the central unit itself. It is therefore possible to:

- Force the priority of the load: in this case the central unit cannot disable the load for 4 hours.
- Re-enable a load disabled by the central unit: the duration of this operation lasts for 4 hours, unless the button is pressed manually.

The device consists of 2 modules, so that it can be installed in supports of the Livinglight and Axolute series. It has 4 buttons on the front for forcing the load and 4 red LEDs that indicate the status of the load:

- OFF with load ON
- ON steady, load disconnected due to overload.
- ON flashing (1s ON, 1s OFF), load forcing.
- ON, flashing at 1 s in programming phase and flashing at 125 ms in self-learning phase.

The load control panel is equipped, at the front, under the cover, with a programming button and, at the back, it has a bay for 7 configurators: P1-ab, P2-a, P2-b, P1-cd, P2-c, P2-d, M.

Technical data

Operating power supply with SCS BUS: 18 – 27 Vdc
Max. current draw: 7 mA ; Operating temperature: 0 – 40°C

Configuration

If the device is installed in a My Home system it can be configured in two ways:


- PHYSICAL CONFIGURATION, inserting the configurators in position.
- Configuration via MYHOME_Suite software package, downloadable from www.homesystems-legrandgroup.com; this mode has the advantage of offering many more options than the physical configuration.

For a list of the procedures and their meanings, please refer to the instructions in this sheet and to the "Function Descriptions" help section in the MYHOME_Suite software package.

Self-learning configuration

To assign each of the buttons on the load control panel to the actuator of the load to be controlled, the procedure is as follows:

- 1) Press the programming/self-learning button; all the LEDs will start blinking (1s ON, 1s OFF).

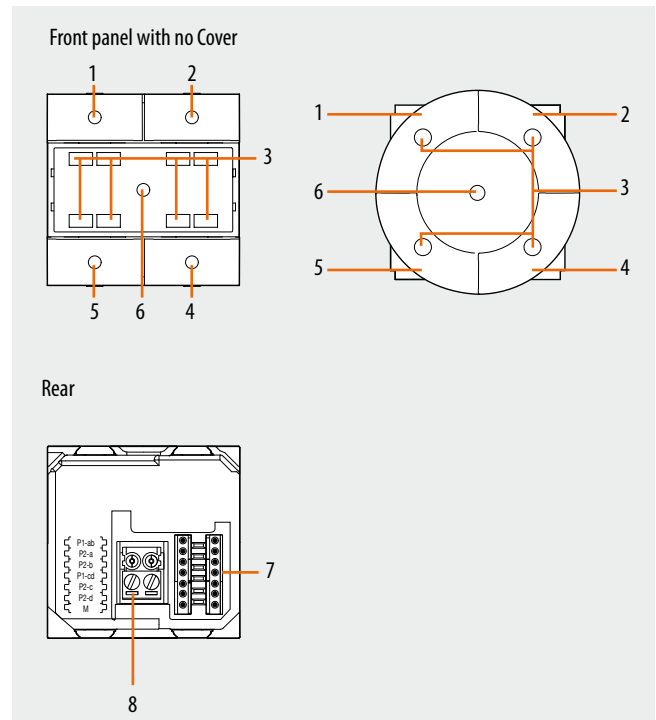

Legend

1. Button a
2. Button b
3. Programming/load status indication LED
4. Button d
5. Button c
6. Programming/self-learning button
7. Configurator socket
8. BUS clamp

2) Press the button (a, b, c, d on the panel) that you want to assign to the load, the LED assigned to it will begin to flash with a frequency of 125 ms, while the other LEDs of the device will switch off.

3) Press the button of the actuator that you want to assign to the load control panel.

4) Repeat steps 2 and 3 for all the buttons (including any button that you have already assigned in case you want to change it).

5) Briefly press the programming/self-learning button to exit programming.

WARNING: The socket of configurator M must be configured on 1 and all the other sockets P1-ab=P2-a=P2-b=P1-cd=P2-c=P2-d=0.

Load control panel

HD4673 **HS4673** **N4673** **067206** **573985**
HC4673 **L4673** **NT4673** **067207** **573991**

Virtual and physical configuration

Virtual configuration (MYHOME_Suite)		Physical configuration ¹⁾
Function	Parameter / setting	
Priority	0-63	P1 - ab address of tens for the loads assigned to buttons "a" and "b", values from 0 to 6.
		P2 - a address of units for the load assigned to button "a", values from 0 to 9.
		P2 - b address of units for the load assigned to button "b", values from 0 to 9.
		P1 - cd address of tens for the loads assigned to buttons "c" and "d", values from 0 to 6.
		P2 - c address of units for the load assigned to button "c", values from 0 to 9.
		P2 - d address of units for the load assigned to button "d", values from 0 to 9.
		M=0,1; mode, value 0, the device can be physically configured; value 1, the device can be configured with the self-learning procedure.

To use "Phase" (Single, 1, 2, 3), use MYHOME_Suite virtual configuration.

NOTE 1): For example: if I have to control the actuators with priority 5, 6, 12, 13, the load control panel must be configured in the following way: P1-ab=0; P2-a=5; P2-b=6; P1-cd=1; P2-c=2; P2-d=3. In this case button "a" is assigned to the actuator with priority 5, button "b" the actuator with priority 6, button "c" the actuator with priority 12 and button "d" the actuator with priority 13. In the load control system the highest priority that can be configured on the actuators is 63, so if at P1-ab the connected configurator is 6 at P2-a or P2-b the connected configurator can be at most 3.