

MyHOME

Temperature control unit

HC/HS/HD/L/N/NT 4695

AM 5875

User manual



Temperature control unit

User manual

MyHOME



Contents

Introduction and standard functions	4
The control unit: use it immediately!	4
Customizations	11
Access the Control unit menus	11
The Main menu	11
Display the zone state	12
The Mode menu	13
Setup	18
The SETUP menu	18
Programming	26
The programming menu	26

Introduction and standard functions

The control unit: use it immediately!


The temperature control unit 4695 is a control and adjustment device for MyHOME temperature control systems.

It can be used for heating and air-conditioning systems and its various programming possibilities let you adjust the temperature for each hour of the day and, in a differentiated way, for every day of the week, in each zone of the system.

You can choose to use a standard program (already saved but which you can change as required) or create a new one by a simple programming procedure.


At any time a large backlit display shows the program set, the system state and the room temperature.

The temperature control unit is made up of a fixed base connected to the system bus and with pull-off front, to let the user program it and change the batteries more easily.

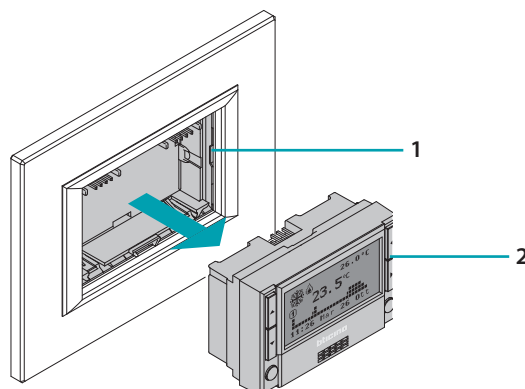

1. Base
2. Pull-off front


The front

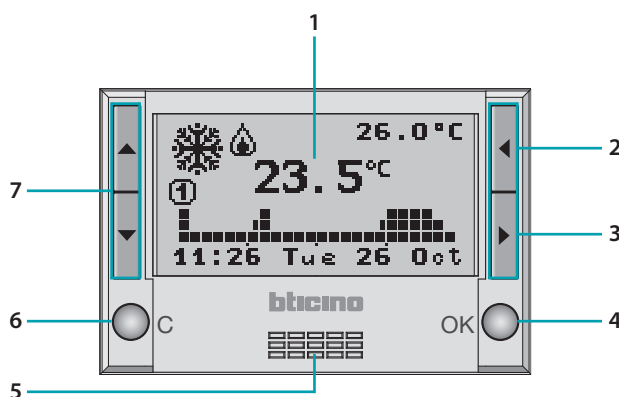

1. **Graphic display:** displays the messages which guide the programming operations and the system state.
2. **◀ selection key:** while the main screen is displayed, when the local zone manages fan-coil actuators it can cycle between the operation speeds; inside the menu it can scroll any functions to the left.
3. **▶ selection key:** while the main screen is displayed, when the local zone manages fan-coil actuators it can cycle between the operation speeds; inside the menu it can scroll any functions to the right.
4. **OK key:** enters the main menu, confirms the displayed selection or the entered data.
5. **Sensor:** measures the temperature of the local probe.
6. **C key:** cancels the selection and returns to the previous page.
Keep it pressed to return to the main screen.
7. **▲ ▼ Scroll keys:** these let you change the set temperature while the main screen is being viewed just on the local zone; when inside the menu, you can scroll the list of the options available.

The display

During normal operation the graphic display shows the following background information:

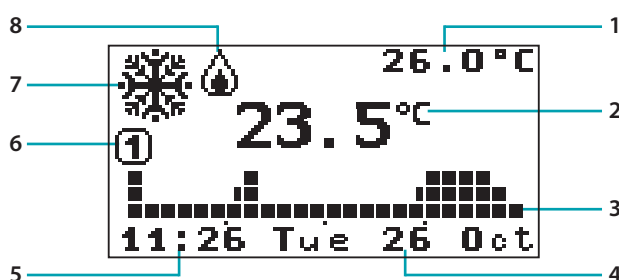


1. Expected temperature
2. Temperature measured
3. Mode set information
4. Date
5. Time
6. Weekly program
7. System state winter
7. Load on

The main screen


When the Control unit display shows the main screen, depending on the mode set using the ▲▼ keys you can vary the temperature by $\pm 3^{\circ}\text{C}$.

- **weekly or holidays:** variation of the whole profile
- **manual or timed:** variation of the setpoint

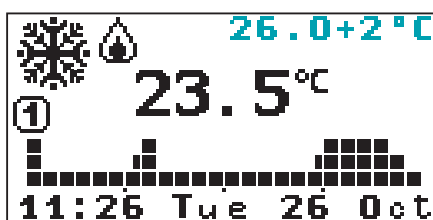


With the ► key you can cycle between the mode selected (E.g.: Weekly), Antifreeze or Thermal protection and OFF and select the mode displayed by pressing OK.


The icon of the mode selected flashes (in weekly mode the range corresponding to the current time flashes). If not confirmed or, after 10 seconds of inactivity from the last time a key is pressed, the operation is cancelled and the main screen is displayed with the current mode.

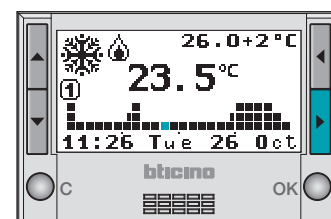

To set the mode of operation displayed:
Confirm with the OK key

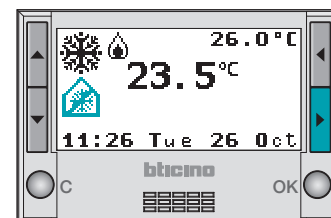

The Control unit now manages the local zone according to the new mode.
Instead the other zones still follow the program previously set from the menu.

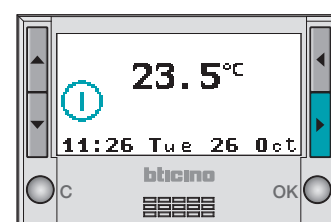


Editing the offset with the ▲▼ keys and the cycling between the modes with the ► key only have effect on the local zone and not on the whole system.

Mode symbols

Depending on the mode of operation selected the display has the following symbols:

Weekly


Daily temperature profile and active program number

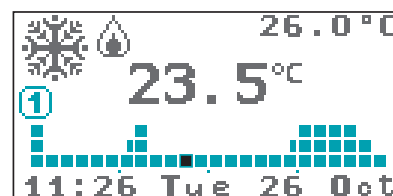

The range corresponding to the current time will flash on the graph (for example, 11:26 will flash on the square corresponding to the time from 11:00 to 12:00).


Manual

Manual mode Icon (hand)

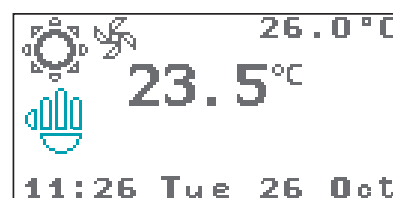


Holiday

Icon of the mode, time and date of Holiday program end

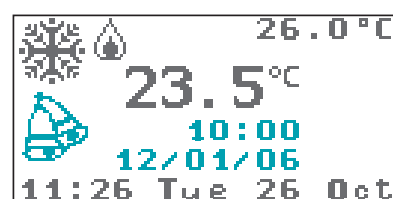


Holidays

Antifreeze or Thermal protection Icon, time and date of Holidays program end

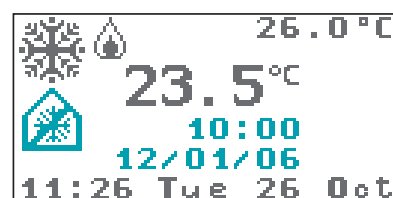


Timed

Manual mode Icon, number of hours and minutes to the end of the Timed program

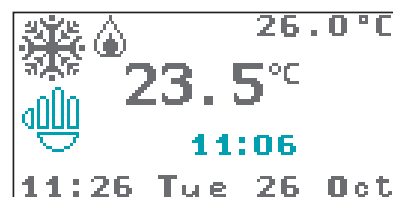


OFF

OFF mode Icon

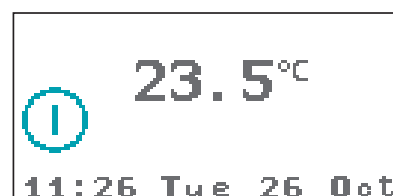

Antifreeze


Antifreeze (winter)
or Thermal protection (summer) mode Icon

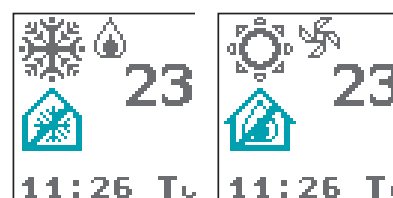

Signalling symbols

External temperature


Icon signalling connection outside probe and temperature measured.

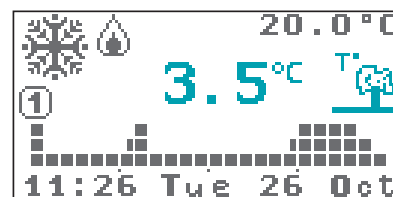

Every 2 seconds the display of the external temperature and the room temperature alternates.

Fan-coil


The display shows whether the loads associated to the local zone are fan-coil.

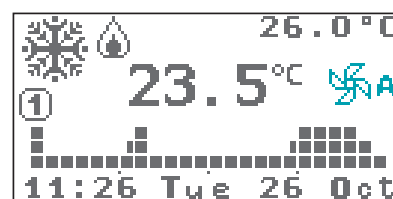

The indication of the fan speed management mode appears at the side of the icon: "A" automatic; "1" minimum, "2" medium and "3" maximum

Battery

Battery flat signal icon

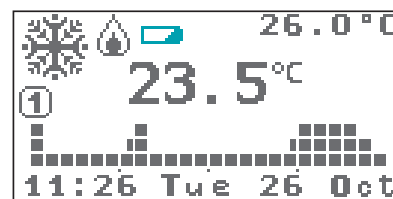


The display shows when the battery voltage drops below 2V; if the device does not have batteries the icon does not appear.

Fault symbols

Caution


Fault signal icon.

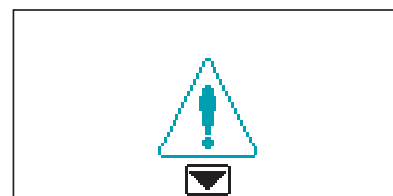

If there is an error on one of the controlled zones the triangular caution icon is displayed. Press any key to access the Diagnostic menu.

If the problem is not solved the Control unit will continue to give a signal on the main screen.

If both the battery flat signal and the zone error signal appear, the icons will be displayed alternately.

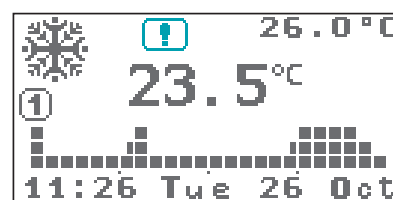


Screen saver


You can customise the Control unit display at rest by selecting one of the 4 Screen savers.

Temperature only

displays the temperature measured (factory setting)

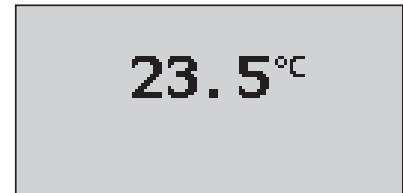


Temperature and date/time

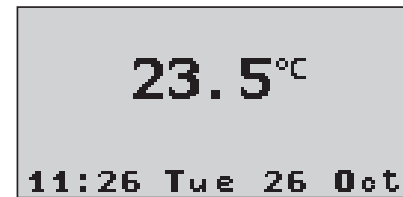

Main screen

displays the main screen, with all the information on the mode selected

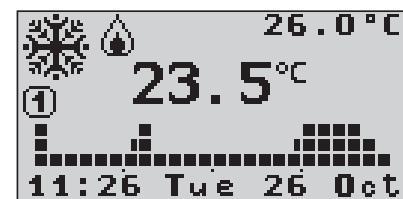

Off


the display remains off



With any Screen saver selected, if the battery is flat its icon is shown.

Changing the batteries

When the display shows the following symbol  change the batteries.
The entered data are saved when the batteries are being changed

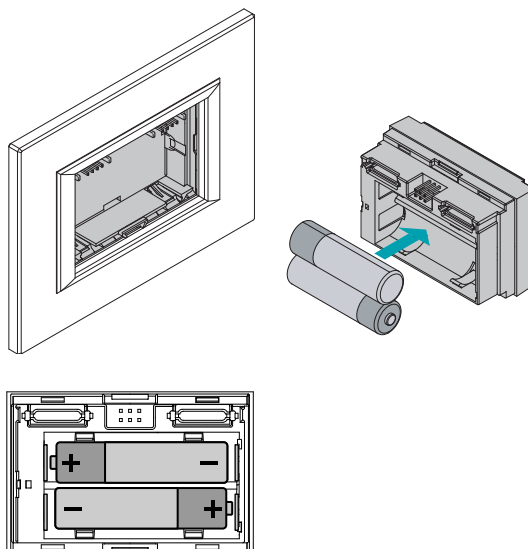

- Take the Control unit out of its base
- Put in 2 LR6/AA 1.5V alkaline batteries respecting the polarities shown in the drawing.



*The device is supplied from bus. The two batteries are just used for the programming from PC operations when the Control unit is not inserted on its base and to avoid being out of step with the time when there is no power supply from the bus.
The device can however be installed without the aid of batteries. Do not leave the batteries in the device when there will be no power from the bus for a long time, because they would go flat in a few days.*


Customizations

This manual describes the standard functions of use and customization of the Control unit by the final user, leaving out the configuration and maintenance parts intended for the installer and given in the Installation manual in the CD.


Access the Control unit menus

If the Screen saver is active, press any key to enter the main screen.

Press the OK key to access the **MAIN MENU**

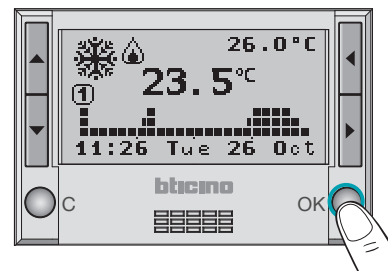

Select the menu required with the ▲ ▼ keys

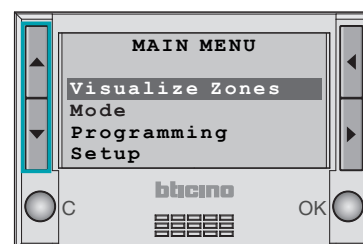

The Main menu

The following menus can be found inside the Main menu:

Visualize zones: can display the state of the zone selected, unlike the main menu, no parameter (setpoint or change mode) can be edited here.

Mode: can select the Control unit mode of operation:

- Weekly
- Manual
- Holiday
- Holidays
- Timed
- Antifreeze or Thermal protection
- OFF

Programming: can change the following functioning modes of your system:

- Weekly
- Holiday

Setup: can edit the following parameters:– Estate/Inverno

- Summer/Winter
- Temperature
- Date/time
- Standard time
- Remote control
- Contrast
- Screen saver
- Language
- External temperature


Maintenance: see the Installation Manual

Display the zone state


Can display the following information on the state of the zone selected:

- measured zone temperature
- expected zone temperature (apart from in the OFF mode)
- summer/winter symbol (apart from in the OFF mode)
- load state (ON/OFF)
- information on the mode selected
- zone name
- any error on the zone
- any fan-coil mode symbol


Enter the Main menu, Visualize zones is already selected, press OK to confirm

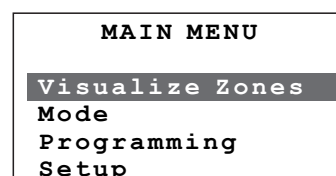


Select the zone (E.g. ZONE 2) with the ▲▼ keys

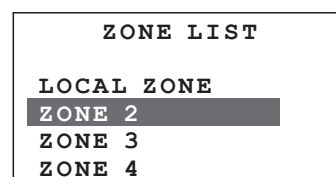


The Control unit performs a probe enquiry

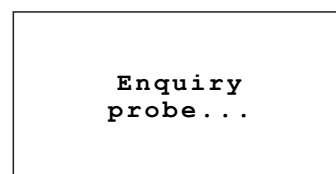

OK to confirm

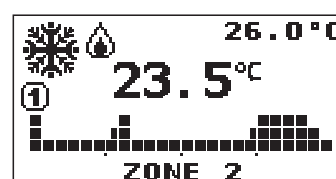

You can visualize another zone with the ▲▼ keys, or press C to return to the previous screen.

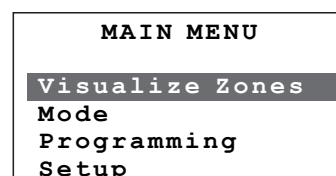

In the Control unit configuration phase your installer will have customized the zones with a name which identifies them better in the system (E.g.: LIVING ROOM, BEDROOM etc...) while in these examples the factory configuration has been kept. The zone with the factory name set in "LOCAL ZONE" is the zone controlled directly by the Control unit, thanks to its internal sensor.




Unlike the main menu, no parameter (such as setpoint or change mode) can be edited here by means of the keys; you can only visualize the zone state completely.

The Mode menu

This menu lets you select your system's mode of operation. For example, selecting the Weekly mode and setting one of the 3 programs or Manual setting a fixed temperature for all the zones etc...


The active mode is marked by the highlighted identification number.

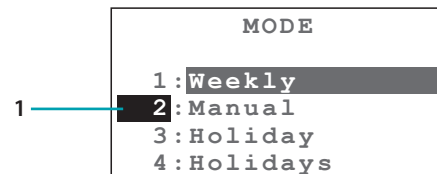

1. Active mode

To access the MODE menu:

With the ▲▼ keys select **Mode**

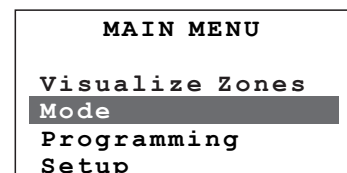

OK to confirm



The operations performed from the menu change the modes for the whole system.

Select the Weekly mode


In the Weekly mode your system works automatically following the set programming. You can choose from 3 programs which can be customized (see Chapter "Programming"). In these you can have different temperatures over the 24 hours and for each day of the week as you require.

With the ▲▼ keys select **Weekly**




OK to confirm

With the ▲▼ keys select the weekly program required

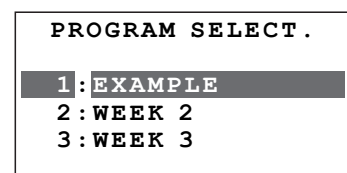

OK to confirm

The main screen is displayed, showing the program set.

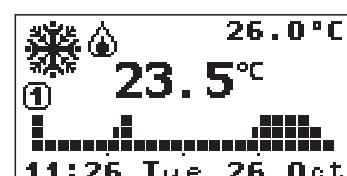

Select the Manual mode

This can set a constant temperature in all the system zones.

With the ▲ ▼ keys select **Manual**

MODE	
1: Weekly	
2: Manual	
3: Holiday	
4: Holidays	

OK to confirm

With the ▲ ▼ keys increase or decrease the temperature value by 0.5°C

MANUAL	
Temperature	20.0

OK to confirm

The main screen is displayed, showing the program set.

Select the Holiday mode

The Holiday mode can select a particular daily profile for a set period. The program is run until the programmed date and time. At the end of this the weekly program selected will be reset.

With the ▲ ▼ keys select **Holiday**

MODE	
1: Week	
2: Manual	
3: Holiday	
4: Holidays	

OK to confirm

With the ▲ ▼ keys increase or decrease the figure selected

With the ◀ ▶ keys position the cursor on the date and time figure to modify

HOLIDAYS	
up to	00:00
of	08/07/07

OK to confirm

With the ▲ ▼ keys select the weekly program which will be activated at the end of the Holiday day

END HOLIDAYS	
1: EXAMPLE	
2: WEEK 2	
3: WEEK 3	

OK to confirm

The main screen is displayed, showing the program set.

Select the Holidays mode

When you are away you can activate this mode which lets you keep the system in Antifreeze or Thermal protection mode until the set date and time. At the end of this the weekly program selected will be reset.

With the ▲ ▼ keys select **Holidays**

MODE	
1:	Weekly
	: Manual
3:	Holiday
4:	Holidays

OK to confirm

With the ▲ ▼ keys increase or decrease the figure selected
With the ◀ ▶ keys position the cursor on the date and time figure to modify

HOLIDAYS	
up to	00:00
of	08/07/07

OK to confirm

With the ▲ ▼ keys select the weekly program which will be activated at the end of the Holidays period

END HOLIDAYS	
1:	EXAMPLE
2:	WEEK 2
3:	WEEK 3

OK to confirm

The main screen is displayed, showing the program set.

Select the Timed mode

Lets you run the manual mode on all the zones for a set time.

With the ▲ ▼ keys select **Timed**

MODE	
2:	Manual
3:	Holiday
4:	Holidays
5:	Timed

OK to confirm

With the ▲ ▼ keys increase or decrease the temperature by 0.5, hours and minutes by 1.
With the ◀ ▶ keys change from temperature to hours and minutes

TIMED	
Temp:	20.0
Time:	00:00

OK to confirm

Select the OFF mode

Lets you switch all the system zones OFF.

With the ▲ ▼ keys select **OFF**

MODE	
3 :	Holiday
4 :	Holidays
5 :	Timed
6 :	OFF

OK to confirm

Select Antifreeze or Thermal protection

Lets you set the Antifreeze (Winter) or Thermal protection (Summer) temperature in all the system zones.

- Antifreeze (7°C factory value)
- Thermal protection (35C factory value)

With the ▲ ▼ keys select **Antifreeze**

MODE	
4 :	Holidays
5 :	Timed
6 :	OFF
7 :	Antifreeze

OK to confirm


Setup

The SETUP menu


This menu lets you customise some Control unit operation settings, without the risk of affecting its correct working.

To access the SETUP menu:

With the ▲ ▼ keys select **Setup**

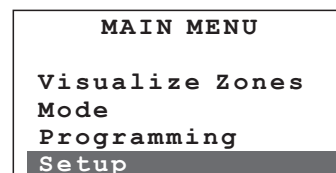


OK to confirm

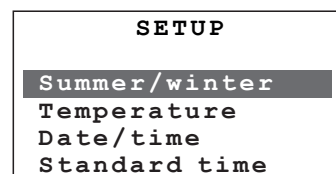

Set Summer/Winter operation

With this operation you can set the system mode of operation (default is Winter):
Summer = cooling, Winter = heating

With the ▲ ▼ keys select **Summer/Winter**

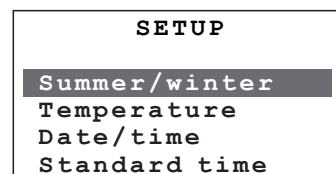

OK to confirm

the display shows the mode of operation set: **Winter**



OK to confirm

the display shows the new setting: **Summer**



C to return to the previous page



*Before performing the switching, perform all the operations on the hydraulic system necessary for it to work correctly.
When switching the Antifreeze (for Winter) or Thermal protection (for Summer) mode is set.*

Set the Temperature levels

With this operation you can set the Antifreeze or Thermal protection T* temperature and the temperature levels T1, T2 and T3 used in the weekly programs.

In the factory settings the 3 levels are the same for all the zones:

Winter: T* = 7.0°C T1 = 18.0°C T2 = 20°C T3 = 22°C

Summer: Tp = 35.0°C T1 = 20.0°C T2 = 23°C T3 = 25°C

With the ▲ ▼ keys select **Temperature**

SETUP	
Summer/winter	
Temperature	
Date/time	
Standard time	

OK to confirm

With the ▲ ▼ keys select ALL ZONES or the single zone

TEMPERATURE	
ALL ZONES	
LOCAL ZONE	

OK to confirm

With the ▲ ▼ keys select the temperature level

TEMPERATURE	
T* :	7.0C
T1 :	18.0C
T2 :	20.0C
T3 :	22.0C

OK to confirm

With the ▲ ▼ keys select the temperature level required (increment + 0.5°C)

TEMPERATURE	
T* :	7.0C
T1 :	15.0C
T2 :	20.0C
T3 :	22.0C

C to cancel

OK to confirm

C to return to the previous page

TEMPERATURE	
ALL ZONES	
LOCAL ZONE	




To guarantee correct system working the Control unit automatically checks that T3 is higher than T2 and T2 higher than T1.

Set current Date and Time


For your system to work correctly it is important that the date and time set are correct.

With the ▲ ▼ keys select **Date/time**

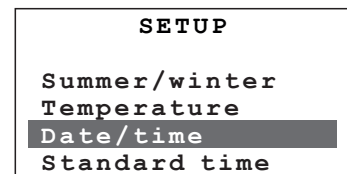

OK to confirm


the display shows the date and time set.

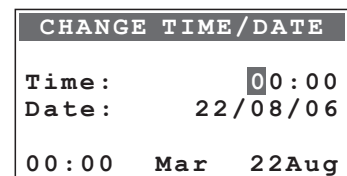

Set current date and time:

With the ▲ ▼ keys increase/decrease the selected figure by + 1

With the ◀ ▶ keys scroll the date/time figures

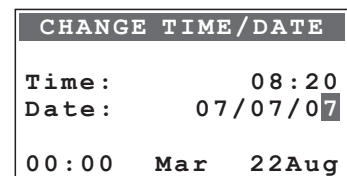

OK to confirm

Set the Standard time

For the standard time you can set one of the following modes:

Manual: the standard time must be updated manually

Automatic: changes summer/winter time automatically, according to the following rule:

– changes to summer time on the last Sunday of March at 02:00

– returns to winter time on the last Sunday of October at 03:00

With the ▲ ▼ keys select **Standard time**




OK to confirm

The display shows the screen indicating the state set (Manual).



OK to switch from Manual to Automatic

The display shows the screen indicating the state set (Automatic).

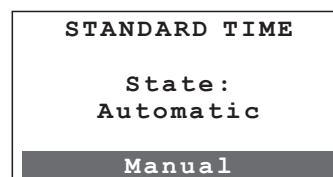


C to return to the previous page

Enable/disable the remote control

You can enable/disable the remote control for remote management via your system's MyHome portal. Remote management lets you know and control the temperature of each zone remotely and edit the mode of operation. For more information consult your MyHOME installer.

With the ▲ ▼ keys select **Remote control**

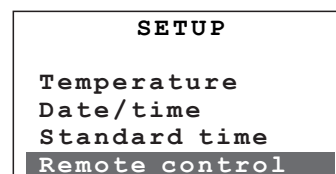

OK to confirm

The display shows the screen indicating the state set (enabled).



OK to switch from enabled to disabled

The display shows the screen indicating the state set (disabled).




C to return to the previous page

Adjust the display Contrast


Here you can adjust the graphic display contrast value for the best reading.

With the ▲ ▼ keys select **Contrast**

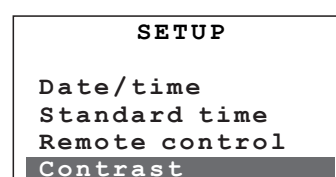


OK to confirm

With the ▲ ▼ keys adjust the contrast level

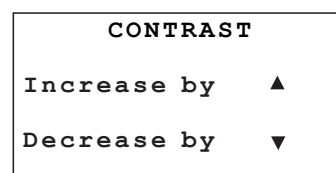

OK to confirm

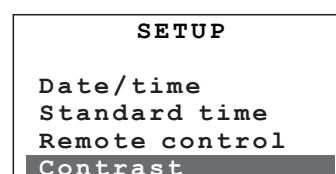


C to return to the previous page

Select the Screen saver

You can select from the following screen savers:


- **Temp. only** - displays the measured temperature only
- **emp./Date/Time** - displays the measured temperature and date/time
- **Main** - displays the complete main screen
- **Off** - the display is completely OFF

With the ▲ ▼ keys select **Screen saver**

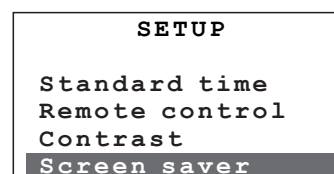


OK to confirm

The display shows the selection set.

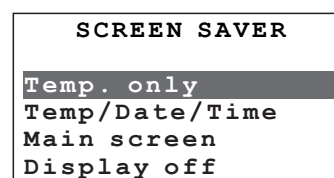

With the ▲ ▼ keys select the Screen saver (e.g. Main screen)

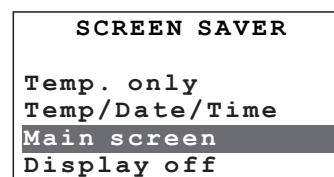


OK to confirm

Select the Language


Selects the language for the menu (default is italian).

With the ▲ ▼ keys select **Language**

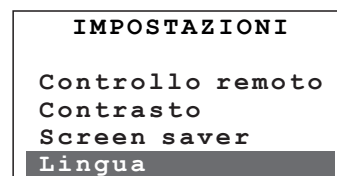


OK to confirm


The display shows the language set.

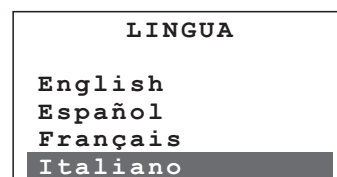

With the ▲ ▼ keys select the language required (e.g. English)

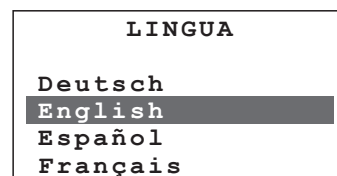


OK to confirm

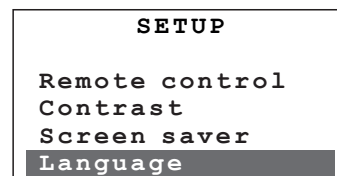

Set the external temperature


You can activate the display of the temperature from an external probe, if this has been correctly installed in the system.

With the ▲ ▼ keys select **External temperature**

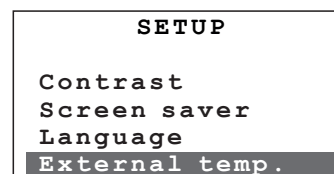


OK to confirm


With the ▲ ▼ keys scroll the probe address values 1÷9

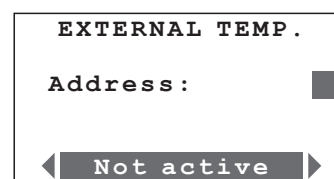

With the ◀ ▶ keys change the state of activation Not active/Active

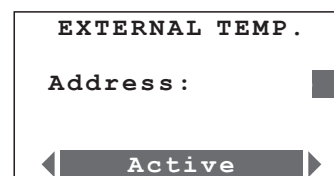

OK to confirm

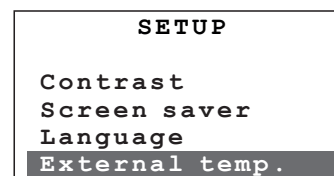

Programming

The programming menu

Using the Programming menu you can customise the following modes of operation of your system:

Weekly

With the weekly mode your system works automatically following the programming set. You can choose from three programs which you can customise. Inside the programs the temperature can be differentiated over 24 hours and for each day of the week as you require.

The "Example" program is preset but can be modified.


Holiday

The Holiday mode can select a particular daily profile for a set period. The program is run until the programmed date and time, after which the weekly program chosen will be reset.

To access the PROGRAMMING menu:

With the ▲ ▼ keys select **Programming**

OK to confirm

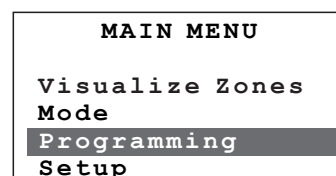

Weekly programming


Up to 3 weekly programs can be created for each of the two functions (heating and cooling). For each program it is possible to determine different daily temperature profiles (0h-24h) for every day and for every zone.

With the ▲ ▼ keys select **Weekly**


OK to confirm



The following functions are available for the program selected:

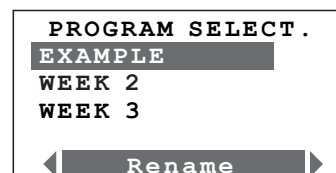

Use the ◀ ▶ keys to select the function required.

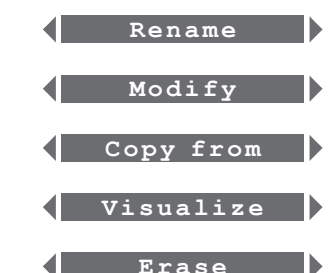

Rename a Weekly program

On selecting this function you can assign a name which better identifies the program selected (max 13 characters).

With the ▲▼ keys select the program to be renamed (E.g.: Week 2)

```

PROGRAM SELECT .
EXAMPLE
WEEK 2
WEEK 3
Rename
    
```

OK to confirm

With the ◀▶ keys to position the cursor on the character you want to change; use the ▲▼ keys to scroll the alphanumeric characters (only uppercase), numbers and special characters, starting from the one that is selected:

```

PROGRAM SELECT .
EXAMPLE
WINTER WEE
WEEK 3
Memorize
    
```

OK to confirm, C to cancel

```

PROGRAM SELECT .
EXAMPLE
WINTER WEEK
WEEK 3
Modify
    
```

Copy a Weekly program

This function lets you copy a previously programmed weekly program into another. For example copy the **EXAMPLE** program (preset in the factory) in Week 2.

```

PROGRAM SELECT .
EXAMPLE
WEEK 2
WEEK 3
Copy from
    
```

OK to confirm

With the ▲▼ keys select the program you want to copy from (E.g.: EXAMPLE)

```

COPY FROM
EXAMPLE
WEEK 2
WEEK 3
Copy from
    
```

OK to confirm

The message "Copy" is displayed


```

Copy
from: EXAMPLE
to: WEEK 2
    
```

Display a Weekly program


This function lets you display the daily profiles associated with each zone for the selected Weekly program.

With the ▲ ▼ keys select the program

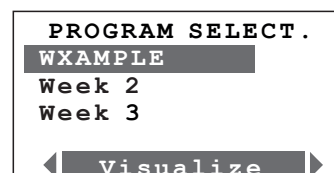


OK to confirm

With the ▲ ▼ keys select the day

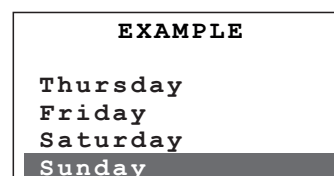


OK to confirm

With the ▲ ▼ keys select the zone

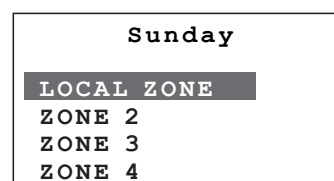


With the ▲ ▼ keys you can display the other zones
 or
 press OK or C to return to the previous page

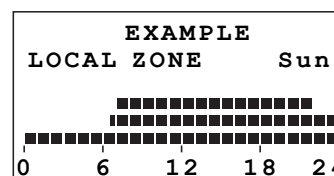

Remove a Weekly program


This function lets you remove a weekly program, thus resuming the default name, the profiles of all zones and setting the program in antifreeze or thermal protection mode.

With the ▲ ▼ keys select the program to remove

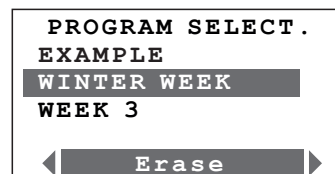


OK to confirm

With the ▲ ▼ keys select YES

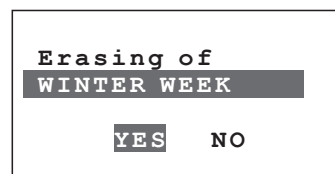

OK to confirm

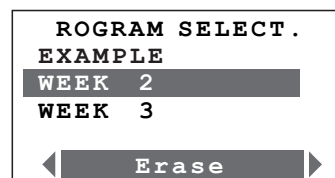

All the factory settings (profile and name) are resumed for the cancelled program.

Modify a Weekly program

On selecting this function you can modify the weekly program selected, associating a daily profile to each zone.

With the ▲ ▼ keys select the program to modify (E.g.:
EXAMPLE)

```

PROGRAM SELECT.
EXAMPLE
WEEK 2
WEEK 3
Modifv

```

OK to confirm

With the ▲ ▼ keys select the day of the week (E.g.: Sunday)

CHOICE DAY
Friday
Saturday
Sunday

◀ Modify ▶

It is possible to use the ◀ ▶ keys to select also the function:
Copy from lets you copy the program from another previously-programmed **day**.

Copy from

With the ▲ ▼ keys select the zone (E.g.: LOCAL ZONE)
OK to confirm


ZONE SELECTION
 LOCAL ZONE
 ZONE 2
 ZONE 3
 Modifv

Copy from

Visualize

It is possible to use the ◀ ▶ keys to select also the functions:

- Copy from** lets you copy the program of the selected day from another **zone**;
- Visualize** lets you display the profile of the day. The profile displayed can now be modified.

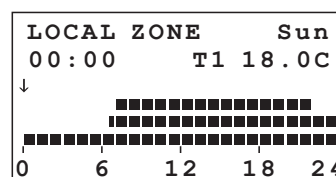

Holiday programming


Can program a daily profile for each zone (as base the Sunday profile of the Example program is associated with each zone).

With the ▲ ▼ keys select **Holiday**




OK to confirm

The following functions are available for the program selected:

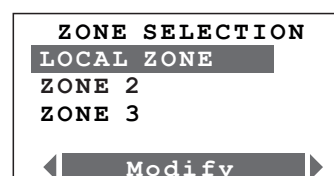


Use the ◀ ▶ keys to select the function required

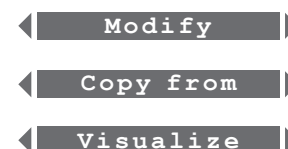

Modify


On selecting this function you can modify the daily profile associated to each zone.

With the ▲ ▼ keys select the ZONE

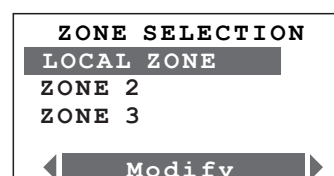

OK to confirm

The profile displayed can now be modified.

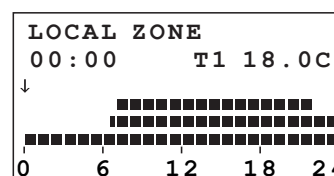

Copy from

Lets you copy the daily profile from a previously-programmed zone.

With the ▲ ▼ keys select the ZONE you want to copy the profile to

ZONE SELECTION	
LOCAL ZONE	
ZONE 2	
ZONE 3	
◀ Copy from ▶	

OK to confirm

With the ▲ ▼ keys select the ZONE you want to copy the profile from
OK to confirm

ZONE SELECTION	
LOCAL ZONE	
ZONE 2	
ZONE 3	
ZONE 4	

Display

Lets you display the daily profile associated with each zone.

With the ▲ ▼ keys select the ZONE


ZONE SELECTION	
LOCAL ZONE	
ZONE 2	
ZONE 3	
◀ Copy from ▶	

OK to confirm

The display shows the profile programmed for the zone selected

Daily profile modification tools

Information shown on the display:

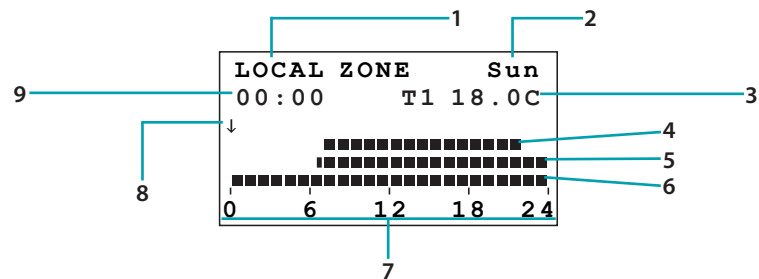

1. Zone name
2. Day
3. Temperature level
4. T3
5. T2
6. T1
7. Time axis
8. Cursor
9. Time corresponding to the cursor position

How to use the cursor keys:

◀ ▶ move the cursor along the time axis

▲ ▼ change from SCROLL mode to MODIFY in the MODIFY mode scroll the temperature levels


OK change from MODIFY mode to SCROLL in SCROLL mode confirms quitting **Modify**

C to return to the previous page without saving

There are two modes of work:

SCROLL


Characterised by an arrow-shaped cursor, lets you, using the ◀ ▶ keys, move the cursor along the time axis without making any modification to the daily profile.

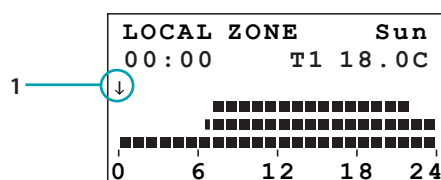

1. Arrow cursor

MODIFY

Characterised by a "pencil"-shaped cursor and by the indicated temperature level, lets you, using the ◀ ▶, keys, move the cursor along the time axis to set the temperature level selected.

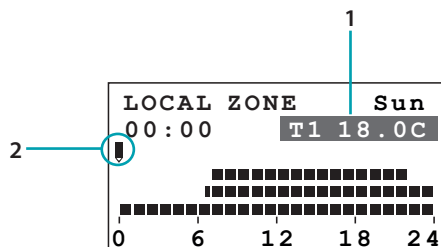

1. Temperature level

2. Pencil cursor

Create a new daily profile


We recommend you follow the procedure described in this example step by step, as a useful instrument for becoming familiar with the "Modify" and "Scroll" mode of work and the use of the cursor keys.

Example: creation of the following daily temperature profile for "Monday".

1. from 00:00 to 06:00 - 18°C (T1)
2. from 06:00 to 09:00 - 22°C (T3)
3. from 09:00 to 16:30 - 20°C (T2)
4. from 16:30 to 22:00 - 22°C (T3)
5. from 22:00 to 24:00 - 20°C (T2)

Temperature levels set T1 = 18°C T2 = 20°C T3 = 22°C

Procedure:

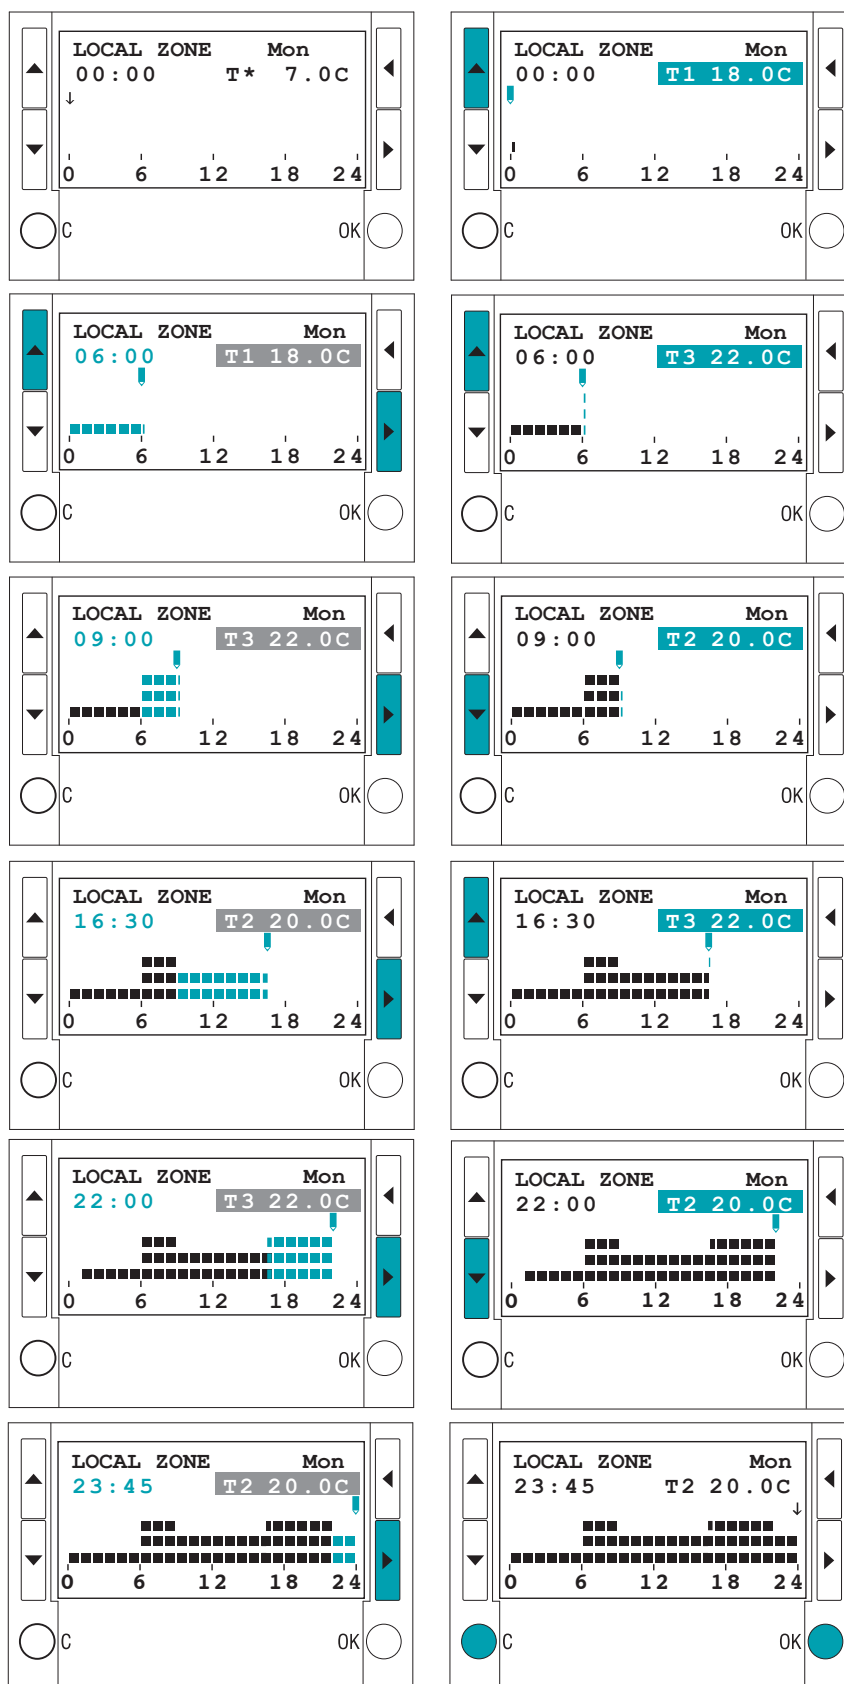

OK confirms and goes to the SCROLLING mode; C cancels and goes back to the days list.

Legrand SNC
128, av. du Maréchal-de-Lattre-de-Tassigny
87045 Limoges Cedex - France
www.legrand.com

BTicino SpA
Viale Borri, 231
21100 Varese
www.bticino.it