

Description

Control device powered at 100 – 240 Vac for dimming resistive loads, ferromagnetic transformers and electronic transformers. The loads can be adjusted via any control device and/or sensor connected and properly configured, or by using the button on the device. The actuator is able to signal any load faults such as, for example, lamp failure. The device is a component in the Lighting Management system and can also be installed in a My Home system.

Standards, Certifications, Marks

- Directive:
- Electromagnetic Compatibility Directive 2004/108/EC
- Installation regulations:
- CEI 64-8
- Product regulations:
- IEC 60669-2-1
 - EN 50428
- Environmental regulations:
- EU Directive 2002/96/EC: WEEE (Waste Electrical and Electronic Equipment)
 - EU Directive 2002/95/EC: RoHS (Restriction of Hazardous Substances)


Dimensions


Size: 6 DIN modules

Technical data

Power supply:	100 -240 Vac @ 50/60 Hz
Number of outputs:	2 x 1.7 A
Power consumption on standby:	0.9 W
Operating temperature:	(-5) – (+45) °C
Type of connection:	– RJ45 – clamp input 2 x 2.5 mm ² – clamp output 2 x 1.5 mm ² and 1 x 2.5 mm ²
Protection index:	IP20
Impact resistance:	IK04
Cable section:	2.5 mm ²

Power/Consumption of driven loads:

Incandescent lamp			Halogen lamps		
					
230 V~	2 x 400 W	2 x 1.7 A	2 x 400 W	2 x 1.7 A	
110 V~	2 x 200 W		2 x 200 W		

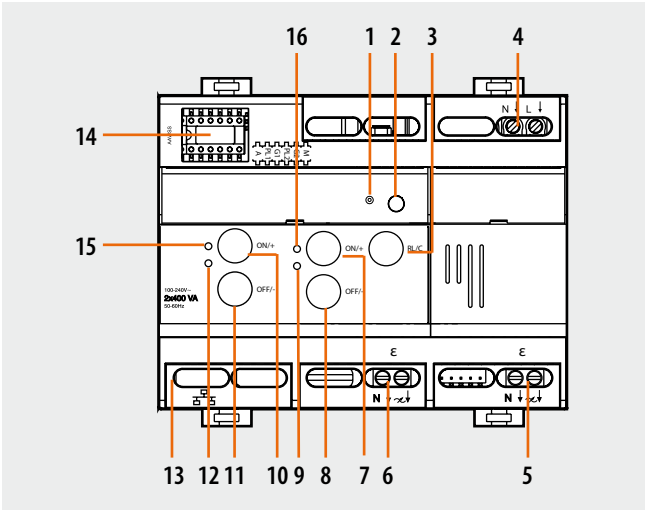

Legend

- Learn LED
- Learn pushbutton
- Button for manual load forcing
- Clamps for the connection to the 230 V ac power supply
- Load 2 connection clamps
- Load 1 connection clamps
- Load 2 adjustment/ON control button
- Load 2 adjustment/OFF control button
- Load 2 malfunctioning LED
- Load 1 adjustment/ON control button
- Load 1 adjustment/OFF control button
- Load 1 malfunctioning LED
- BUS RJ45 connector
- Configurator socket (note that this must only be used in My Home systems with the physical configuration)
- Load 1 indicator:
 - LED OFF: load OFF
 - LED ON green: load ON from 1% to 100%.
 - LED ON orange: fault with load
- Load 2 indicator:
 - LED OFF: load OFF
 - LED ON green: load ON from 1% to 100%.
 - LED ON orange: fault with load

Ferromagnetic transformers			Electronic transformers		
					
					
230 V~	2 x 400 VA	1.7 A	2 x 400 VA	2 x 1.7 A	
110 V~	2 x 200 VA		2 x 200 VA		

WARNING: Devices that operate with an electronic transformer or a ferromagnetic transformer cannot be connected on the same line

Configuration

1. Lighting Management System

When installed in a Lighting Management system, the device can be configured in the following ways:

- Plug & Go: automatic procedure for pairing devices connected to the inputs and outputs. The procedure is activated on powering the device. It is only available for Room Controllers or, in the case of other devices, paired with the Room Controllers.

- Push & Learn: procedure for pairing different connected devices or changing the assignments defined automatically in the Plug & Go procedure. For more details, please refer to the specific document.
- Software Configuration: using the Virtual Configurator software; for more details, please refer to the specific manual.

2. My Home system

If the device is installed in a My Home system it can be configured in two ways:

- PHYSICAL CONFIGURATION, inserting the configurators in position.
- Configuration via MYHOME_Suite software package, downloadable from www.homesystems-legrandgroup.com; this mode has the advantage of offering many more options than the physical configuration.

For a list of the procedures and their meanings, please refer to the instructions in this sheet and to the "Function Descriptions" help section in the MYHOME_Suite software package.

2.1 Addressing

Address type		Virtual configuration (MYHOME_Suite)	Physical configuration
Point-to-point	Room	0-10	A=1-9
	Lighting point	0-15	PL1, PL2=1-9
Group		1-255	G1, G2=1-9

2.2 Mode

Virtual configuration (MYHOME_Suite)		Physical configuration	
Function	Parameter / setting		
Master Actuator	Master	M=0	
Actuator as Slave. Receives a control sent by a Master actuator with the same address	Slave	M=SLA	
Pushbutton (ON monostable) ignores Room and General controls	Master PUL	M=PUL	
OFF delay: Master actuator with OFF control delayed on the corresponding Slave actuator. ¹⁾	0 - 255	M=1	1 minute
		M=2	2 minutes
		M=3	3 minutes
		M=4	4 minutes

NOTE 1): In the Master and Master PUL mode you can set an OFF delay of 0-255 seconds (via MYHOME_Suite) and of 1-4 minutes using the physical configuration. In the Master and Master PUL mode you can set an OFF delay of 0-255 seconds (via MYHOME_Suite) and of 1-4 minutes

using the physical configuration. Only for point-point control. The ON control activates the Master actuator and the Slave actuator at the same time. The next OFF control deactivates the Master actuator and keeps the Slave actuator active for the period of time set.

To use the "Actuator as a slave with PUL function" and adjust the "Minimum brightness level at power-on" with values 1-100, use MYHOME_Suite virtual configuration.

Maintenance

Do not use acetone, detergents for removing tar, or trichloroethylene.

Maintenance using the following products:


- Hexane (En 60669-1);
- Methylated spirit;
- Soap and water;
- Diluted ammonia;
- Bleach, diluted 10%;
- Glass detergents.

WARNING:


An initial test is required in order to use other special maintenance products.

Operating mode

When in Test mode, by pressing the pushbutton of the actuator it will be possible to enable or disable the associated load.

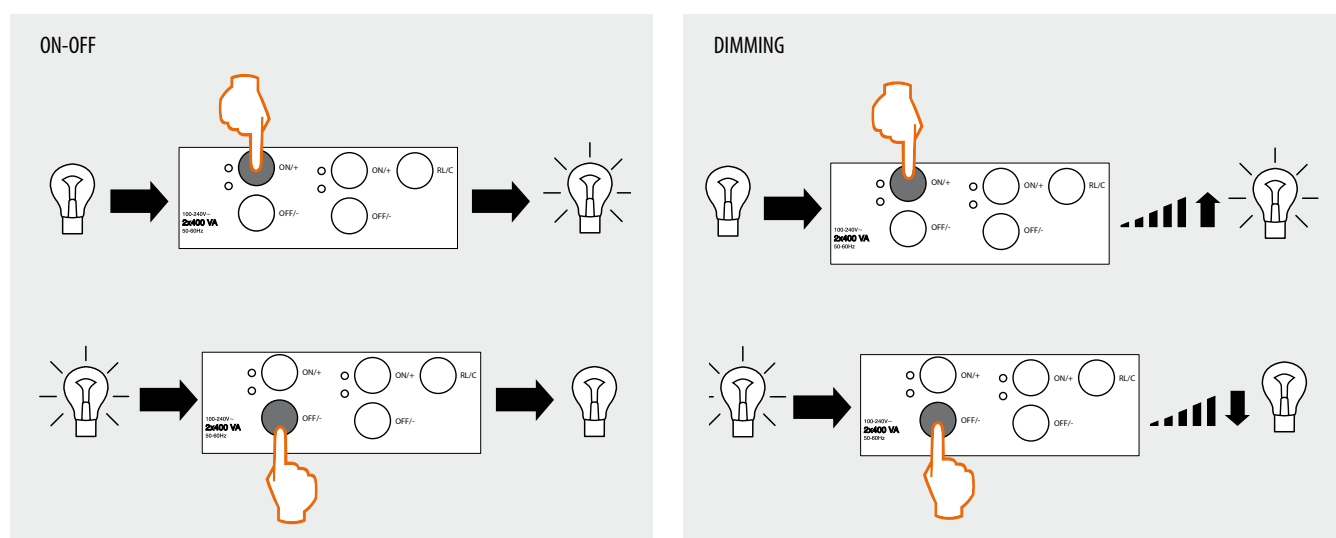

Manual forcing of the type of load

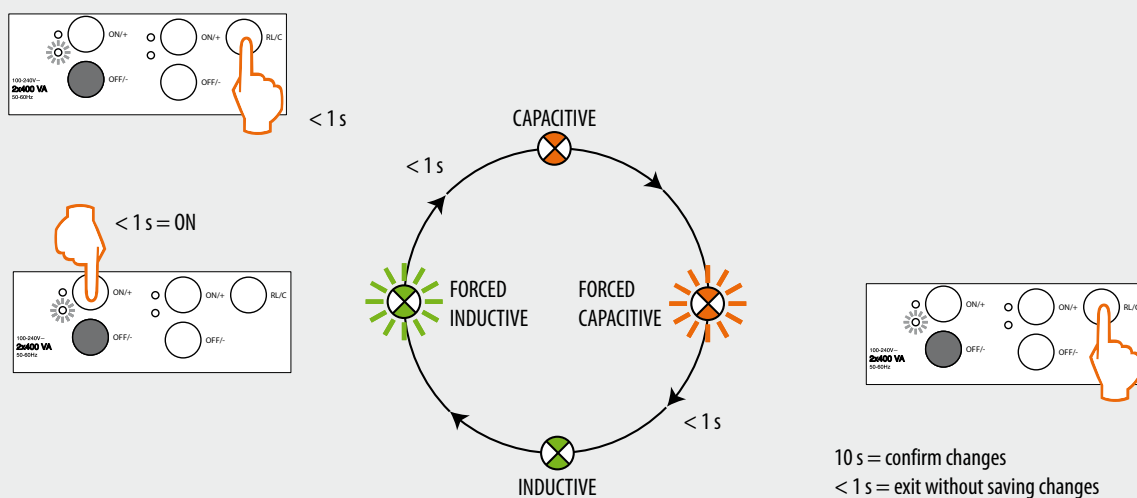

Wiring diagram

