


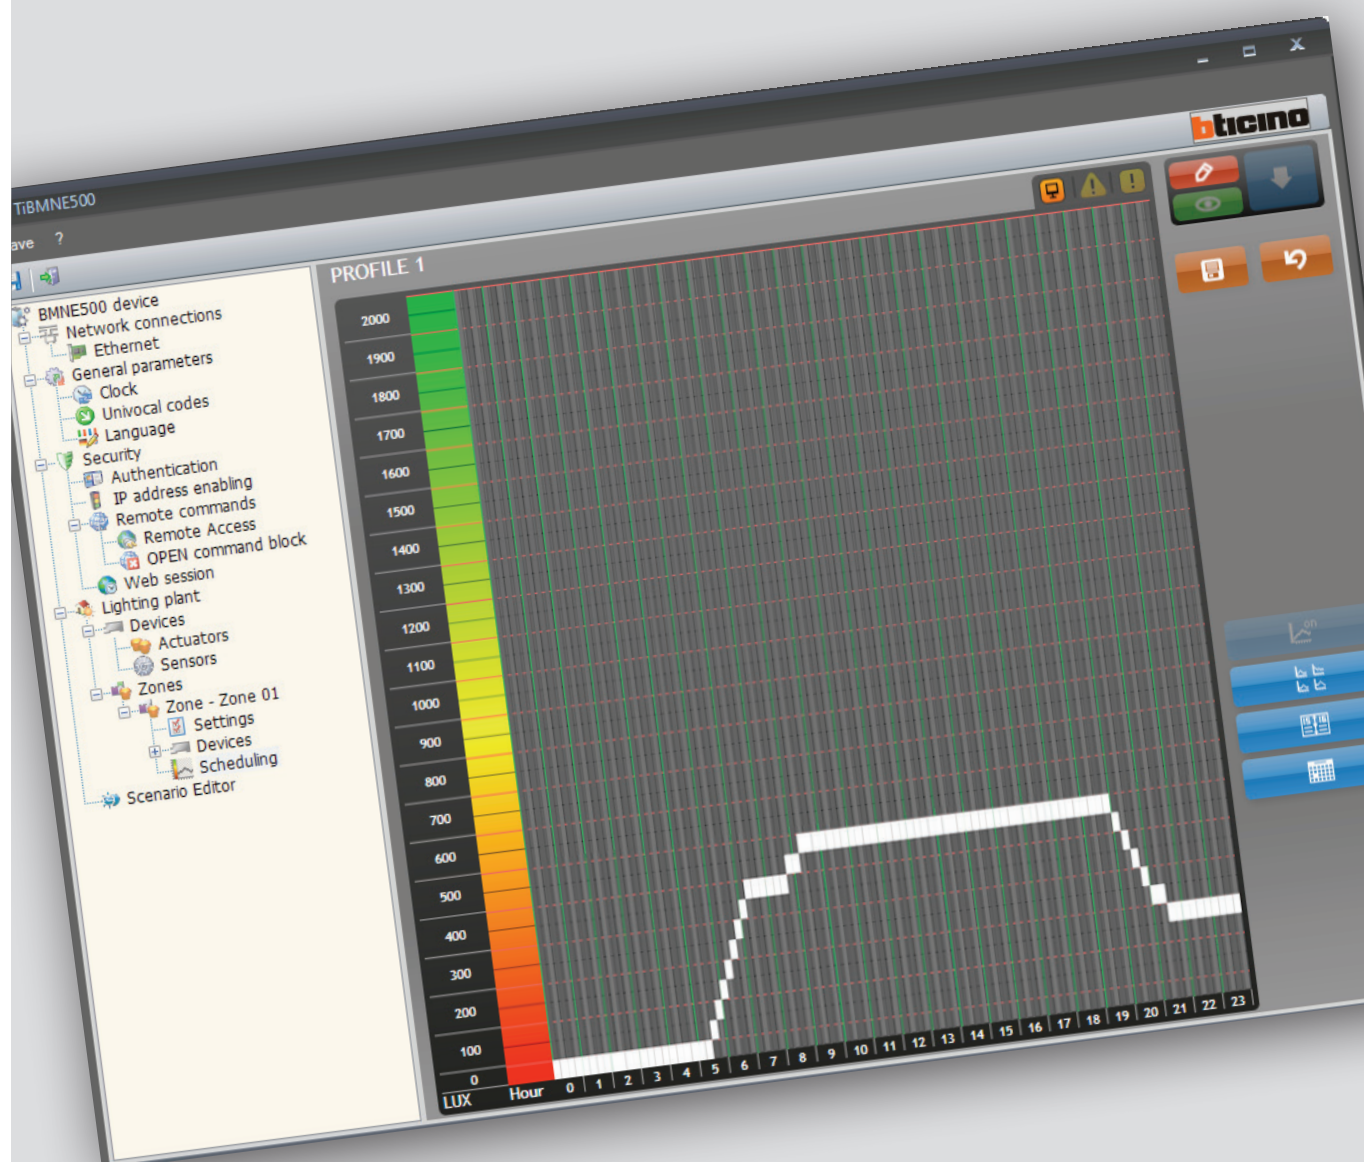



Content

1. Hardware and Software requirements	4
1.1 Hardware requirements	4
1.2 Software requirements	4
2. Fundamental concepts	4
3. The software	4
3.1 Lighting system	5
3.2 BMNE500 list	6
3.3 Pushbuttons used to add or remove devices	6
3.4 Adding a new device	7
4. Device configuration	8
4.1 Network connections	9
4.1.1 Ethernet	9
4.2 General parameters	9
4.2.1 Clock	10
4.2.2 Univocal codes	10
4.3 Safety	10
4.3.1 Authentication	11
4.3.2 IP address enabling	11
4.3.3 Remote controls	12
4.3.4 Web session	14
4.4 Devices	14
4.4.1 Actuators	15
4.4.2 Sensors	16
4.4.3 Zones	17
5. Scheduling	21
5.1 Creating a scheduling scenario	21
5.1.1 Creating a new profile	23
5.1.2 Creating the weekly program	27
5.1.3 Creating the annual program	30
6. Scenario Editor	32
6.1 Main screen	33
6.1.1. Function menus and pushbuttons	34
6.2 Exporting a collection	35
6.3 Importing scenarios from a collection	36
6.4 Creating a scenario	37
6.5 Scenario configuration	37
6.5.1. Main screen and corresponding menus	37
6.5.2. Scenario configuration	38
6.5.3. Configuring a scenario by importing data from a project	40
6.6 Families/Objects	42
6.6.1. ON/OFF Family	43
6.6.2. Motor Family	45
6.6.3. Scenario Family	45
6.6.4. Scenario control Family	47
6.6.5. Time Family	48
6.6.6. Auxiliary channels Family	50
6.6.7. Special Controls Family	51
6.6.8. Lighting technology Family	51
6.6.9. Variable Family	52
6.7 Entry fields	53
6.7.1. When it happens	53
6.7.2. Stop if it happens	53
6.7.3. Only if	54
6.7.4. Execute	54
6.8 Repeat Action	55
6.9 Execute at device restart	55
7. Download and Upload project	55
7.1 Download	55
7.2 Upload	58
7.3 Firmware update	60

1. Hardware and Software requirements

1.1 Hardware requirements

- Personal Computer with Pentium III processor
- Minimum RAM memory 1GB, recommended 2GB
- Resolution 1024 x 768
- 32 bit (XP/Vista/7) - 64 bit (Vista/7) Colours
- CD-ROM reader
- Mouse

1.2 Software requirements

- Personal Computer with Pentium III processor
- Microsoft.NET Framework 3.5 Service Pack 1



NOTE: When using the Windows 7 platform ensure that framework.net is ticked in the list of active Windows components: (Control panel / Programs and features / Click "Turn Windows features on or off" / Ensure that Microsoft.NET Framework 3.5.1 is ticked).

2. Fundamental concepts

TiBMNE500 is the BMNE500 device configuration software (zone control unit). Its main functions are:


- create the physical system configuration: actuators, dimmers, and sensors;
- define the logic zones of the system;
- define the zone illumination parameters;
- define the device parameters;
- create lighting scenarios and animations;
- define the scheduling scenarios.

The software may be a standalone application, or part of an application package for the configuration of the whole system.

3. The software


When the software is started (by default Programmi/Bticino/TiBMNE500), the following window opens, showing:

- at the top, the pushbutton and drop down menus for the selection of the functions.
- in the central section, the list of BMNE500s;
- at the bottom, other pushbuttons used to add and remove devices.

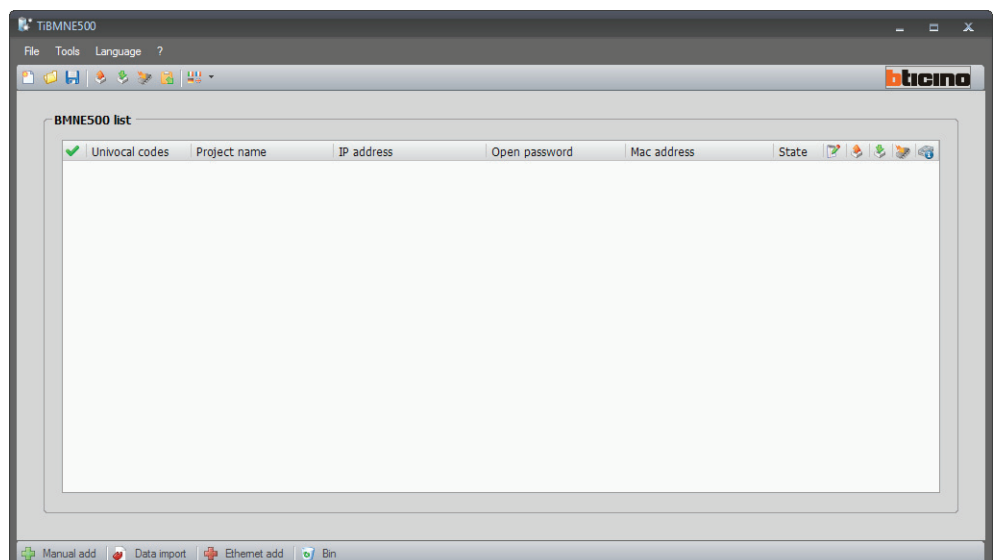


3.1 Lighting system

All the functions that can be performed with TiBMNE500 can be selected by clicking the icons on the toolbar, or by selecting the appropriate items from the drop down menus.


- The following functions can be performed using the toolbar icons:
 -  Create, Open, and Save the configuration file;
 -  Multiple configuration Receive/Send and device firmware update;
 -  Select the application language;
 -  Connect to the www.bticino.com website.
- The drop down menus includes the following functions 

File menu

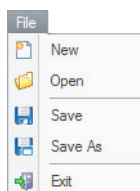

- New:** create a new project.
- Open:** open an existing project file.
- Save:** Save the current project.
- Save as:** save the current project prompting the user to enter a file name.
- Exit:** exit the program.

“Tools” menu

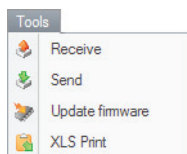


- Receive:** upload the configuration.
- Send:** download the configuration.
- Update firmware:** update the device firmware.
- XLS Print:** create an .xls file listing all the configuration files.

Language menu




Select the software language.

? Menu



- About...:** display some software information.
- Supported version:** display the BMNE500 firmware versions compatible with the program.

3.2 BMNE500 list

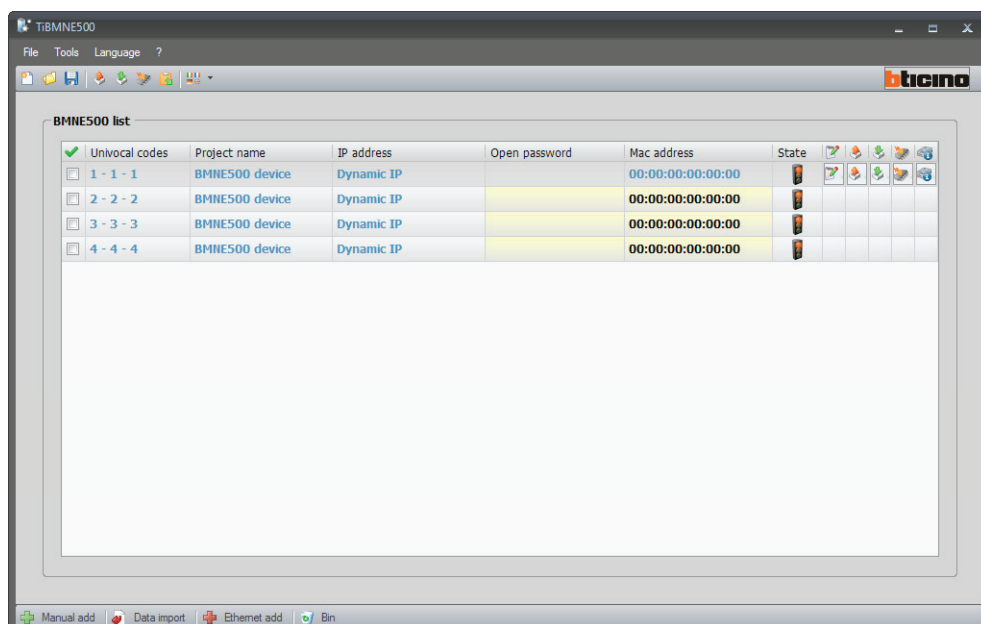

Univocal codes	Project name	IP address	Open password	Mac address	State
1 - 1 - 1	BMNE500 device	Dynamic IP		00:00:00:00:00:00	Yellow
2 - 2 - 2	BMNE500 device	Dynamic IP		00:00:00:00:00:00	Yellow
3 - 3 - 3	BMNE500 device	Dynamic IP		00:00:00:00:00:00	Yellow
4 - 4 - 4	BMNE500 device	Dynamic IP		00:00:00:00:00:00	Yellow

Each line of this table corresponds to a BMNE500 device installed on the system. The fields contain the following information:

- **Univocal codes:** these are the identification codes of the functions of the device within the system. The software checks that all three are individually univocal within the group of system devices.
- **Project name:** the device name shown on the network.
- **IP address:** network device IP address
- **Open Password:** the password used for Ethernet connection to the device. It does not have to be the same password found in the configuration.
- **Mac Address:** Machine MAC Address.
- **State:** it shows, using a coloured LED system, if the device configuration is valid:
 - Red - no configuration found.
 - Yellow - the configuration has been found but is not valid; in this case the configuration cannot be downloaded. The possible reasons for an invalid configuration are:
 - the code is not univocal, i.e. other devices with the same name already exist;
 - the Ethernet device configuration is incorrect;
 - scheduling of certain zones has not been defined.
 - an invalid mixed actuator/dimmer configuration has been performed for one or more zones;
 - Authentication login and password error.
 In all cases, it will be necessary to open the configuration and correct any mistakes.
 - Green - the configuration can be sent to the device.


3.3 Pushbuttons used to add or remove devices

All the functions that can be performed with TiBMNE500 can be selected by clicking the icons on the toolbar, or by selecting the appropriate items from the drop down menus.

- The following functions can be performed using the toolbar icons:
 -  **Manual add** this pushbutton can be used to add a device manually and define some necessary parameters.
 -  **Data import** this pushbutton can be used to add the devices already present in the .mhz file generated by YouProject.
 -  **Ethernet add** when the PC is connected to the network, this pushbutton can be used to detect the connected devices and add them to the list.
 -  **Bin** this pushbutton can be used to remove the selected devices from the project.

3.4 Adding a new device

To add a new device to the BMNE500 list use the pushbuttons in the bottom section of the window:



- When the **Manual add** pushbutton is clicked, a window opens, asking the user to:
 - enter the univocal codes relating to the functions of the device;
 - enter the device name;
 - select a fixed or a dynamic IP
 - enter the Mac Address.

Enter the device data and click **OK**.


The software checks that the univocal codes are also individually univocal; therefore, it is not possible to enter a value for one of the three functions, if this is already being used for another device present in the system.



NOTE: If the BMNE500 includes two or more devices with the same univocal code, the corresponding lines will be highlighted.

Univocal codes	Project name	IP address	Open password	Mac address	State					
1 - 1 - 1	BMNE500 device	Dynamic IP		00:00:00:00:00:00						
2 - 2 - 2	BMNE500 device	Dynamic IP		00:00:00:00:00:00						
1 - 1 - 1	BMNE500 device	Dynamic IP		00:00:00:00:00:00						
1 - 1 - 1	BMNE500 device	Dynamic IP		00:00:00:00:00:00						

- Click **Data import** to open a browsing window and search for the required .mhz files

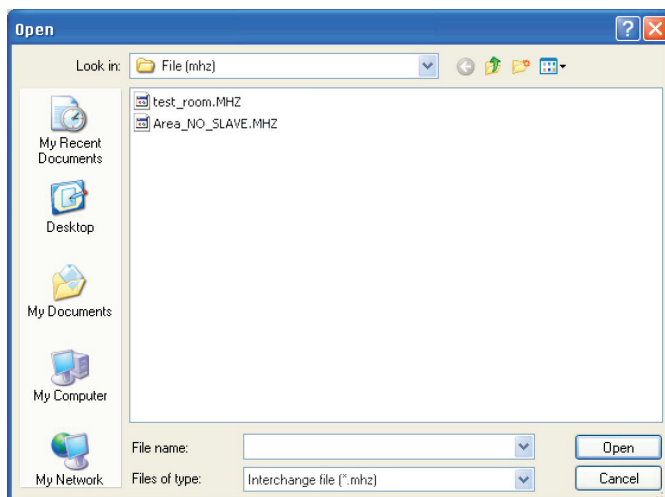

Select the desired project file and click **Open**



NOTE: When the user enters the configuration area all the zones, actuators, and sensors included in the .mhz project file generated by YouProject will already have been loaded

The devices included in the opened file will be added to the BMNE500 list.

- When **Ethernet add** is clicked, the software will search for all the BMNE500 devices present on the network

Univocal codes	Project name	IP address	Open password	Mac address	State						
☐ 1 - 1 - 1	BMNE500 device	10.39.9.82		00:03:50:00:82:03							
☐ 1 - 1 - 1	BMNE CLA	10.39.13.114		00:03:50:00:20:E3							
☐ 1 - 1 - 1	BMNE500 500 B2	10.39.13.238		00:03:50:00:1D:08							
☐ 1 - 1 - 1	BMNE 500 MKT Erba...	10.39.9.85		00:03:50:00:71:90							
☐ 1 - 1 - 1	BMNE 500 FUMAGALLI	10.39.13.34		00:03:50:00:6C:D2							
☐ 1 - 1 - 1	BMNE 500 SALA PR...	10.39.9.81		00:03:50:00:6C:B8							

A. All the lines will be highlighted in red because the same univocal code is allocated to all the devices.

B. To establish communication with the device enter the Open Password.



NOTE: This procedure is normally used when performing the upload of a system already in operation.


4. Device configuration

To access the configuration section:

- select a device from the BMNE500 list;
- click the **Configure** icon

Univocal codes	Project name	IP address	Open password	Mac address	State						
☐ 1 - 1 - 1	BMNE500 device	10.39.9.82		00:03:50:00:82:03							
☒ 2 - 2 - 2	BMNE500 device	Dynamic IP		00:00:00:00:00:00							
☐ 3 - 3 - 3	BMNE500 device	Dynamic IP		00:00:00:00:00:00							


A window will appear, with the left section showing a tree menu listing all the configuration parameters in hierarchical order.

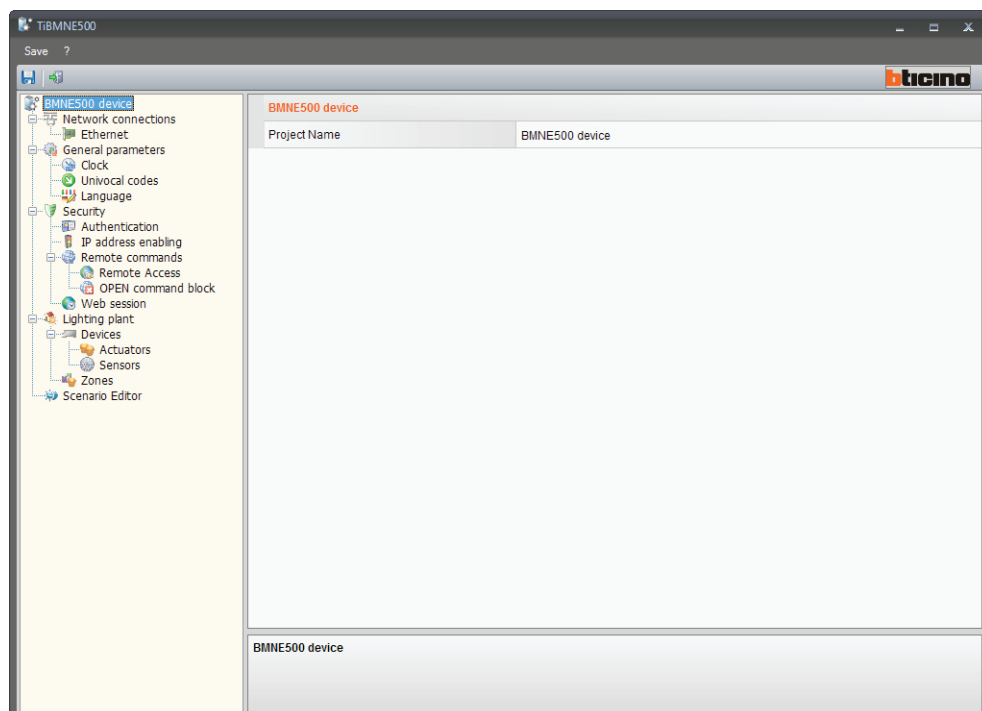


Configuration parameters

Select each element of the tree menu will display, on the right portion of the window, the corresponding content, in the form of a specific data entry mask.

4.1 Network connections

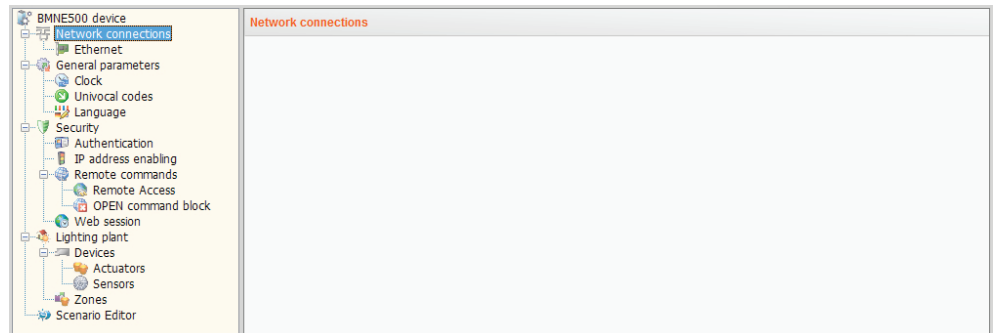


4.1.1 Ethernet

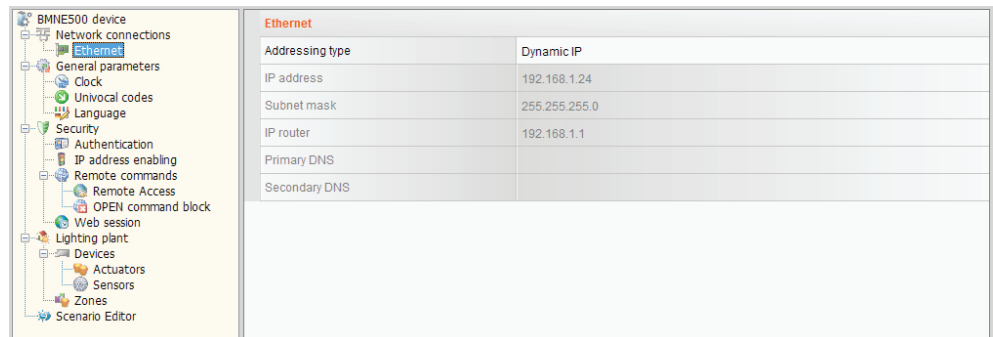

To enable Ethernet connection to the BMNE500, the following items must be configured. In alternative, the default values may also be used.

- **Addressing type** - select between fixed or dynamic IP address. (the default IP is a dynamic IP).
- **Subnet mask and IP addresses** - typical TCP/IP protocol network parameters used to identify the BMNE500 when connected to the local network.
- **IP router** - router IP address (if present). If a router is installed this field must be filled to guarantee the output services.
- **Primary and secondary DNS** - Primary and secondary IP addresses of the ISP, received at the moment of signing the contract.


4.2 General parameters

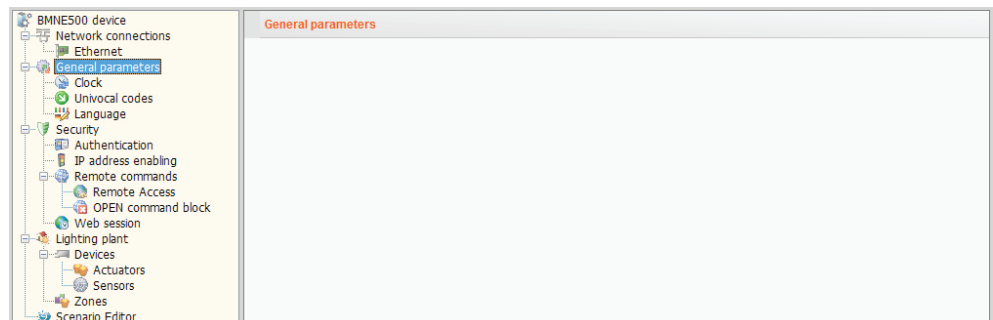

4.2.1 Clock

This function is used to set the local Time Zone, to select the Summer time, and if the device is operating as a “Master” or a “Slave” (Clock mode).

If set as Master, the clock inside the device will be used as time reference for all other Lightning Management system devices.

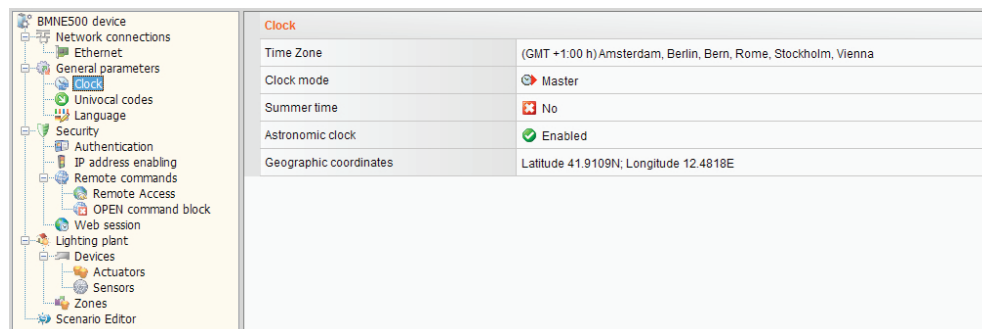


The screenshot shows the configuration interface for the BMNE500 device. On the left is a tree view with categories like Network connections, General parameters, Clock, Univocal codes, Language, Security, Authentication, IP address enabling, Remote commands, Remote Access, OPEN command block, Web session, Lighting plant, Devices, Actuators, Sensors, Zones, and Scenario Editor. The 'Clock' category is selected. The main panel displays the following settings:

Clock	
Time Zone	(GMT +1:00 h) Amsterdam, Berlin, Bern, Rome, Stockholm, Vienna
Clock mode	Master
Summer time	No
Astronomic clock	Enabled
Geographic coordinates	Latitude 41.9109N; Longitude 12.4818E

Enable the “Astronomic clock” to set the geographical coordinates of the BMNE500 device. .

4.2.2 Univocal codes

This function gives the possibility to assign to BMNE500 3 univocal addresses for the OPEN-SCS Gateway, Lighting manager, and Scenario scheduler functions, so that they can always be identified within the Lightning Management system.

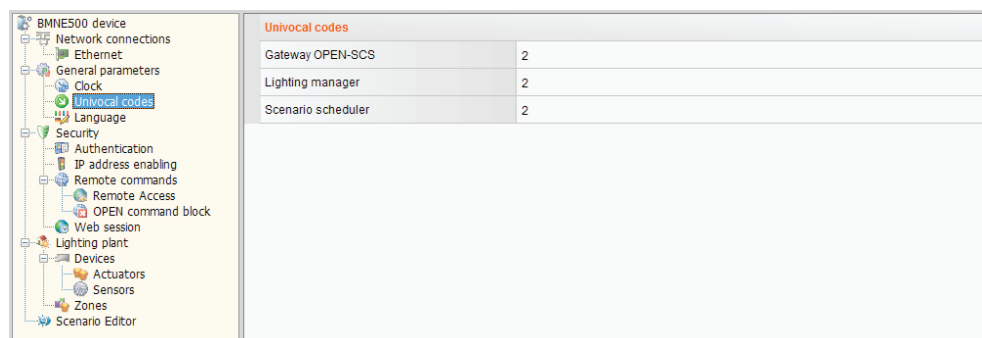

The screenshot shows the configuration interface for the BMNE500 device. On the left is a tree view with categories like Network connections, General parameters, Clock, Univocal codes, Language, Security, Authentication, IP address enabling, Remote commands, Remote Access, OPEN command block, Web session, Lighting plant, Devices, Actuators, Sensors, Zones, and Scenario Editor. The 'Univocal codes' category is selected. The main panel displays the following settings:

Univocal codes	
Gateway OPEN-SCS	2
Lighting manager	2
Scenario scheduler	2


Gateway OPEN_SCS - this is the univocal code of the OPEN-SCS translator function.

Lighting Manager - this is the univocal code of the Lighting Manager function.

Scenario scheduler - this is the univocal code of the Scenario scheduler function.

Univocal codes are present by default. The software checks that all three codes are also individually univocal; therefore, it is not possible to enter a value for one of the three functions, if this is already being used for another device present in the system. The univocity check will be performed when exiting the configuration procedure.

4.3 Safety

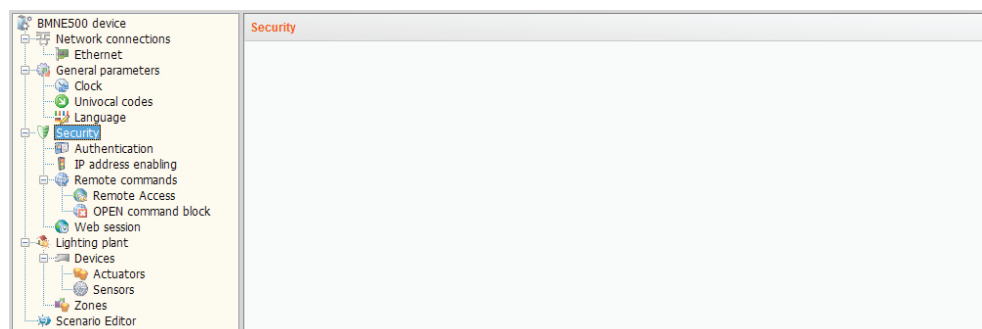

The screenshot shows the configuration interface for the BMNE500 device. On the left is a tree view with categories like Network connections, General parameters, Clock, Univocal codes, Language, Security, Authentication, IP address enabling, Remote commands, Remote Access, OPEN command block, Web session, Lighting plant, Devices, Actuators, Sensors, Zones, and Scenario Editor. The 'Security' category is selected. The main panel displays the following settings:

Security	
----------	--

4.3.1 Authentication

Authentication	
Web user	
User login	guest
User password	guest
Administrator login	admin
Administrator password	admin
Authentication	
OPEN password	12345

Web users

This section can be used to set and change the username and password required to access the gateway web pages.

- **User Login and Password**
default Login and Password "guest"
- **Administrator Login and Password**
Default login "admin", Password "admin"

Authentication


- **Open Password**
Enter the OPEN password if the device is used to remotely control the Lighting Management system using PC programs and external Services.

4.3.2 IP address enabling


This window can be used to enter various IP address intervals with, connection enabled without the need of entering the login ID or password.

IP address enabling	
IP address range 1	
Enabling	Disabled
Value	
IP address range 2	
Enabling	Disabled
Value	
IP address range 3	
Enabling	Disabled
Value	
IP address range 4	
Enabling	Disabled
Value	
IP address range 5	
Enabling	Disabled
Value	
IP address range 6	
Enabling	Disabled
Value	
IP address range 7	
Enabling	Disabled
Value	

4.3.3 Remote controls

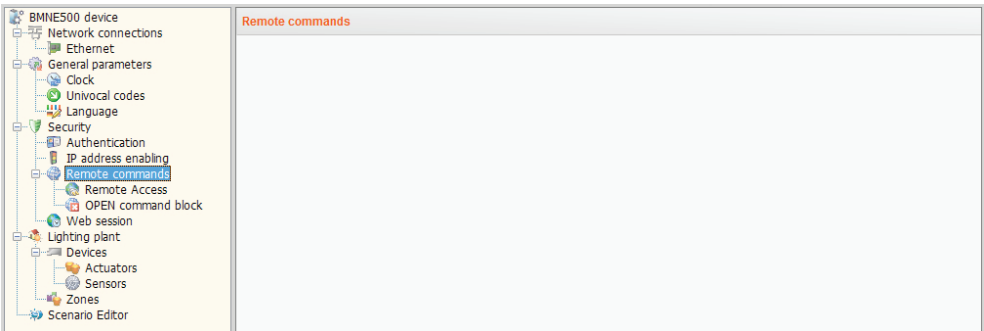

Remote Access

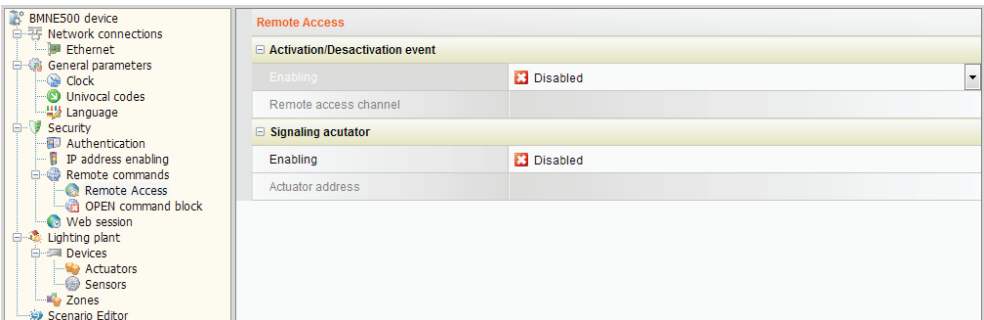

This function can be used, when required, to exclude all controls from remote enabling, thus disabling LAN and/or Internet connection of BMNE500. To do so, it will be necessary to install control devices in the Automation BUS, configured to send ON (disabling) and OFF (enabling) commands through one of the 9 auxiliary channels, ticking the box as required.

OPEN command block




In case of need, this function will give the possibility of blocking the device input OPEN commands.




The commands to be blocked are entered in the appropriate window

-  It can be used to manually add an OPEN command. Click the pushbutton to open the following window, where it will be possible to directly enter the command.

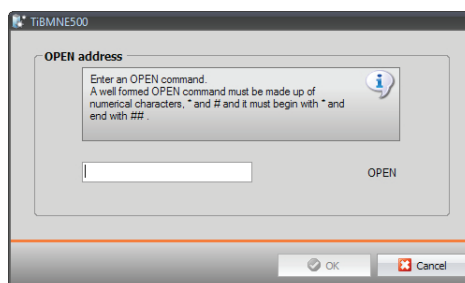


-  It can be used to automatically add an OPEN command. Click the pushbutton to open the following window, where it will be possible to create the OPEN command by selecting the configuration and the type of command to block from the appropriate menu.

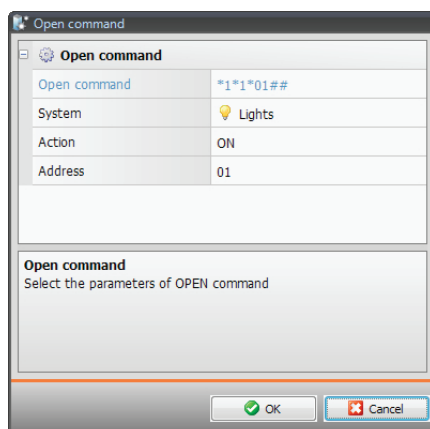

Inside the window, it is possible to edit the following fields:

- **system** - one of the following systems can be selected: scenarios, lights, automation;
- **action** - it is possible to select the type of action to be performed by the command;
- **address** - it is possible to change the command SCS address.

Click the pushbutton  to open the following window

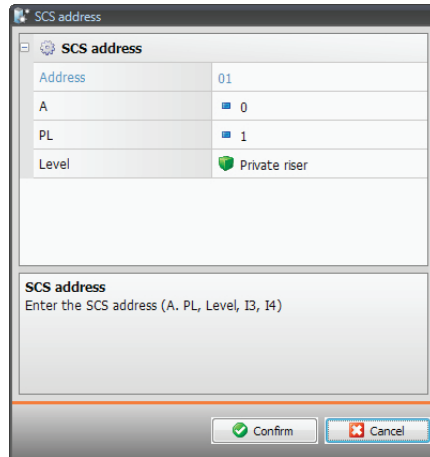

The SCS address configuration window displays the following fields:

SCS address	
Address	01
A	0
PL	1
Level	Private riser

Below the fields, there is a section titled "SCS address" with the instruction: "Enter the SCS address (A, PL, Level, I3, I4)". At the bottom, there are "Confirm" and "Cancel" buttons.

Enter the values of the A and PL configurators. If a logic configuration interface is present, select the local bus option and assign an address to the I1 and I2 configurators




NOTE: If the ethernet network doesn't work, check the status of the auxiliary channel before replacing the device. See if the ethernet was disabled by an auxiliary and, in this case, restore it from the enable button of the same auxiliary which previously has disabled it.

-  Modify the OPEN command.
-  Remove the selected OPEN command.
-  Remove all the OPEN commands.

4.3.4 Web session

In this section the user can define the time of inactivity of the web page, upon which expiry the browsing section will also expire, taking the user back to the identification page.

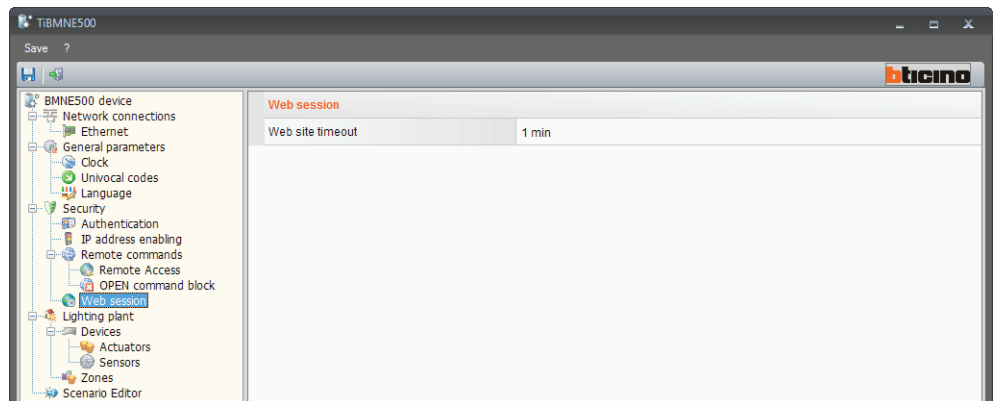


The Web session configuration window shows a tree view on the left with the following structure:

- BTBMN500 device
 - Network connections
 - Ethernet
 - General parameters
 - Clock
 - Univocal codes
 - Language
 - Security
 - Authentication
 - IP address enabling
 - Remote commands
 - Remote Access
 - OPEN command block
 - Web session**
 - Lighting plant
 - Devices
 - Actuators
 - Sensors
 - Zones
 - Scenario Editor

The right pane, titled "Web session", contains a "Web site timeout" field set to "1 min".

- **Web session timeout**
Select the web page inactivity time: 1, 2, 5 or 15 minutes.


4.4 Devices

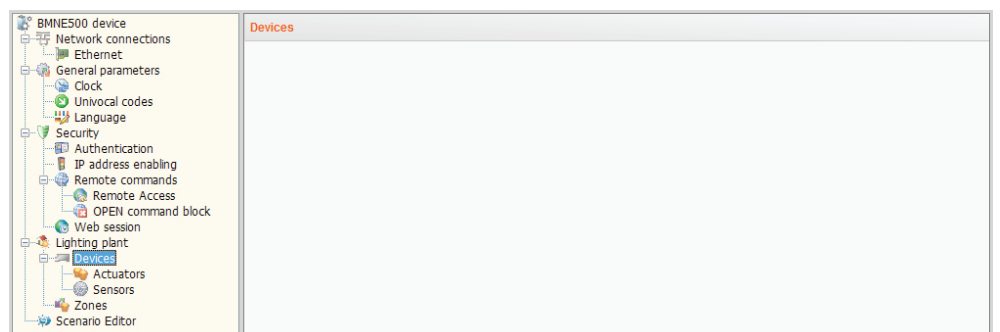

The Devices configuration window shows the same tree view as the previous window, but the right pane is titled "Devices" and is currently empty.

4.4.1 Actuators

In this window it is possible to add actuators and/or dimmers.

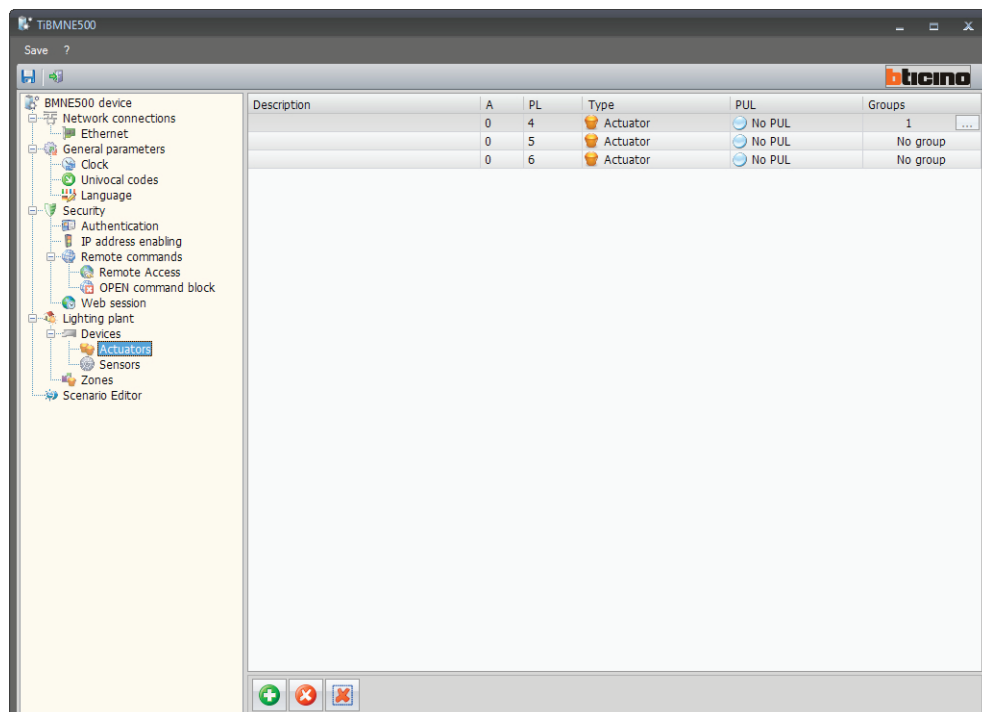


For each actuator/dimmer the following fields can be changed:

- **description:** text description of the device;
- **A configurator:** range of values from 0 to 10;
- **PL configurator:** range of values from 0 to 15.



NOTE: If the 0 address is assigned both to the A and the PL configurators, the system will display the following error message:

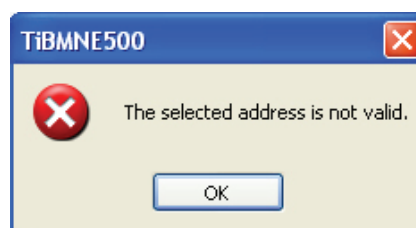


- **type:** actuator or dimmer;
- **PUL:** it indicates if the device is a PUL device or not;
- **groups:** list of the groups the actuator belongs to; it is also the identification code of the zone to which the user assigns the actuator.

Using the pushbuttons at the bottom of the window, it is possible to perform the following functions:

- : manually connect an actuator/dimmer.
- : remove the selected actuator/dimmer.
- : remove all actuators/dimmers.

4.4.2 Sensors

This window can be used to add sensors.

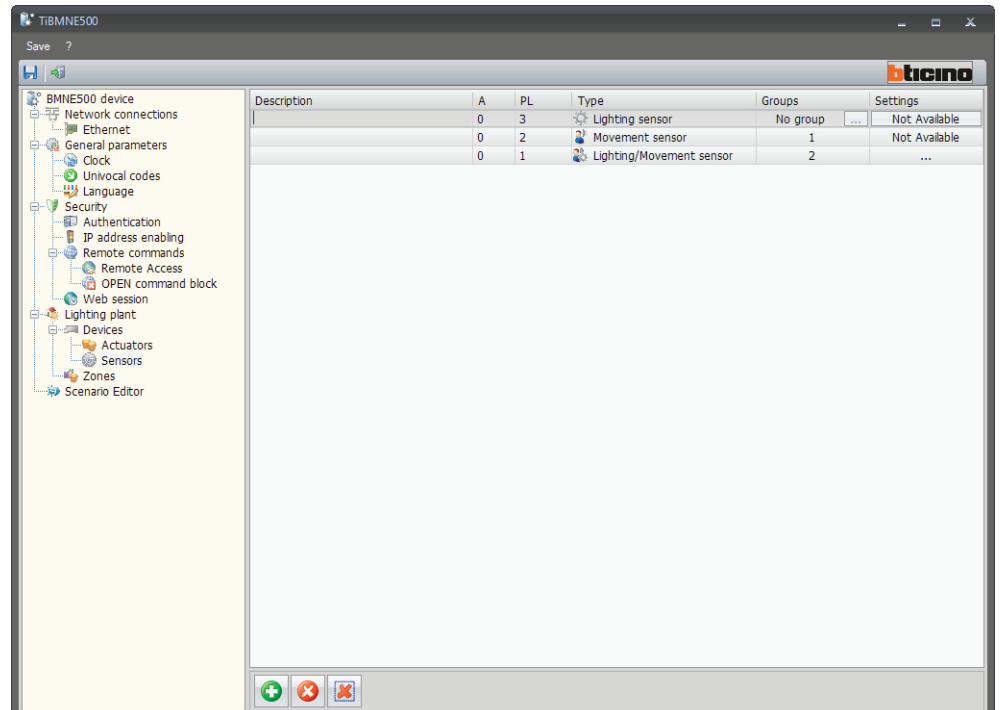


For each actuator/dimmer the following fields can be changed:


- **Description:** text description of the device;
- **A Configurator:** range of values from 0 to 10;
- **PL configurator:** range of values from 0 to 15.



NOTE: If the 0 address is assigned both to the A and the PL configurators, the system will display the following error message:

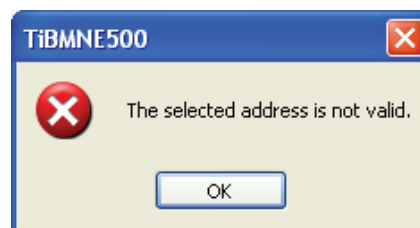

- **Type:** Light/presence sensor, Light sensor, movement sensor;
- **groups:** list of the groups the sensor belongs to; it is also the identification code of the zone to which the user assigns the sensor;
- **settings:** the settings field can only be activated if the type of sensor selected is a "light/movement sensor". In this case click the settings field to open the following window, where it will be possible to select the presence detection/lighting function to enable/disable, among the ones available.

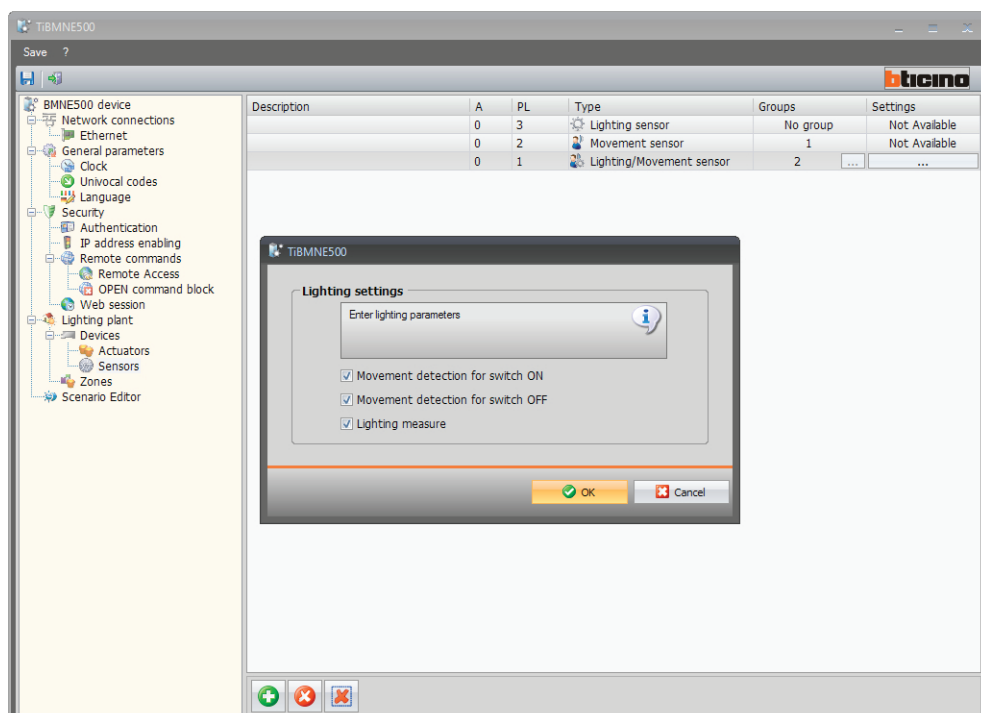


Using the pushbuttons at the bottom of the window, it is possible to perform the following functions:

- Manually connect a sensor.
- Remove the selected sensor.
- Remove all the sensors.

4.4.3 Zones

This window can be used to add zones.

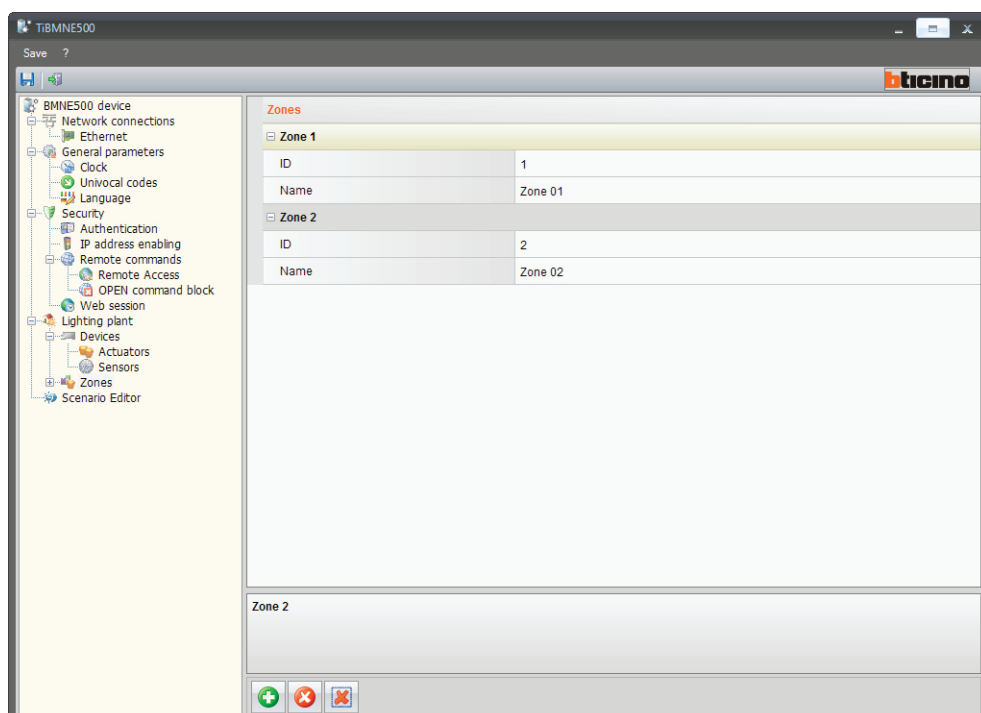

For each zone, the following fields can be changed:

- **ID:** univocal zone ID.
- **Name:** associate a name to the zone.


Using the pushbuttons at the bottom of the window, it is possible to perform the following functions:

-  Manually connect a zone.
-  Remove the selected zone.
-  Remove all the zones.



Zone structure check:

The software check that the structure of a zone is correct as far as the types of devices assigned to it are concerned; it is not possible to create a zone including both actuators and dimmers, as the zone must only consist of devices of the same type: either actuators, or dimmers only.

In case of mixed zone, in the "Actuators" area the software will highlight in red the relevant devices.

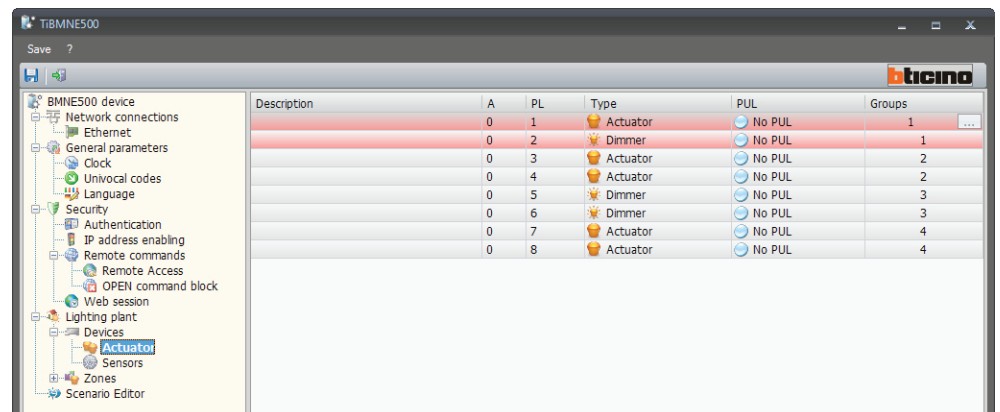

When exiting the configuration a Warning window will appear.

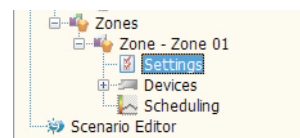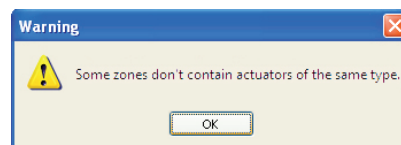


For each zone it is possible to:

- display-change the settings of the parameters of the light and presence sensors;
- display the actuators/dimmers and sensors of the zone

Parameter settings

Click Settings on the left window tree menu to display the following window, listing the parameters (editable) for the light and presence sensors.

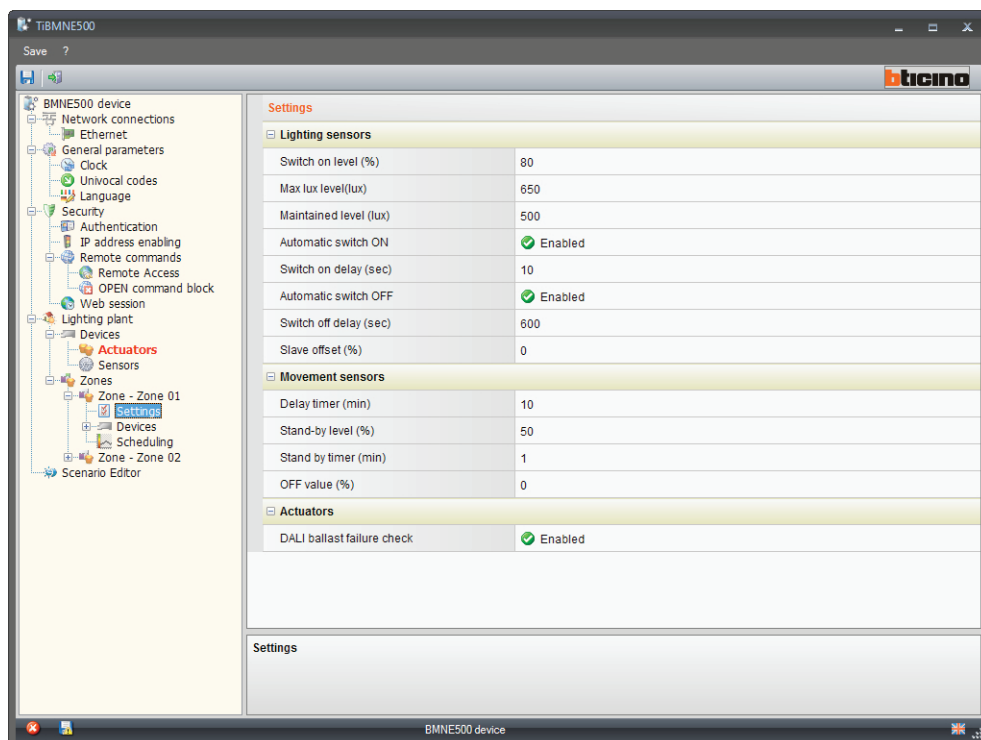

Lighting sensors

- **Switch-on level:** - percentage switch-on level of the dimmer, when movement is detected.
- **Max lux level:** maximum lighting level with a new system.
- **Maintained level:** lighting level maintained by default in the zone.
- **Automatic switch ON:** when enabled, the lighting devices will switch on if the light level is below the desired level.
- **Switch on delay:** automatic switch on time delay
- **Automatic switch OFF:** when enabled, the lighting devices will switch off if the light level is above the desired level.
- **Switch off delay:** automatic switch off time delay
- **Delta (%):** in the zone progressive regulation configuration, it represents the percentage level to be exceeded by the primary dimmer before the secondary dimmer turns on. The values recommended go from 0 to 20%.

Movement sensors

- **Delay timer:** time delay after which lighting devices go on standby, if no movement is detected. Every time movement is detected, the timer will restart from 0.
- **Stand-by level:** temporary level to which the lighting devices are brought at the expiry of the time set in the switch-off timer.
- **Stand-by timer:** time delay after which lighting devices are switched OFF, if no movement is detected. A movement detection will make the device return to the maintained level.
- **OFF value:** level to which the lighting devices are brought at the expiry of the stand by time.

Actuators

- **DALI ballast fault check:** the command enables/disables the fault check carried out by BMNE500 on ballasts managed by the different outputs of a DALI dimmer. The default condition is "Enabled": this should only be changed in case one ballast is faulty, and only if a DALI dimmer is used.

Actuators

Click **Actuators** on the left window tree menu to display the following window listing all the actuators for that zone.

Actuator 1	
Description	A
PL	4
Type	Actuator
Priority	Primary

The only editable field is the Priority field, where the type of actuator is defined. **Primary** or **Secondary**. The default value is Primary.

Sensors

Click **Sensors** on the left window tree menu to display the following window listing all the sensors for that zone.

Sensor 1	
Description	A
PL	1
Type	Lighting/Movement sensor


In this case no parameters can be changed.



IMPORTANT: In order for the configuration to be valid, the scheduling for each zone created must be set.

5. Scheduling

Click Scheduling on the left window tree menu to open the following window:

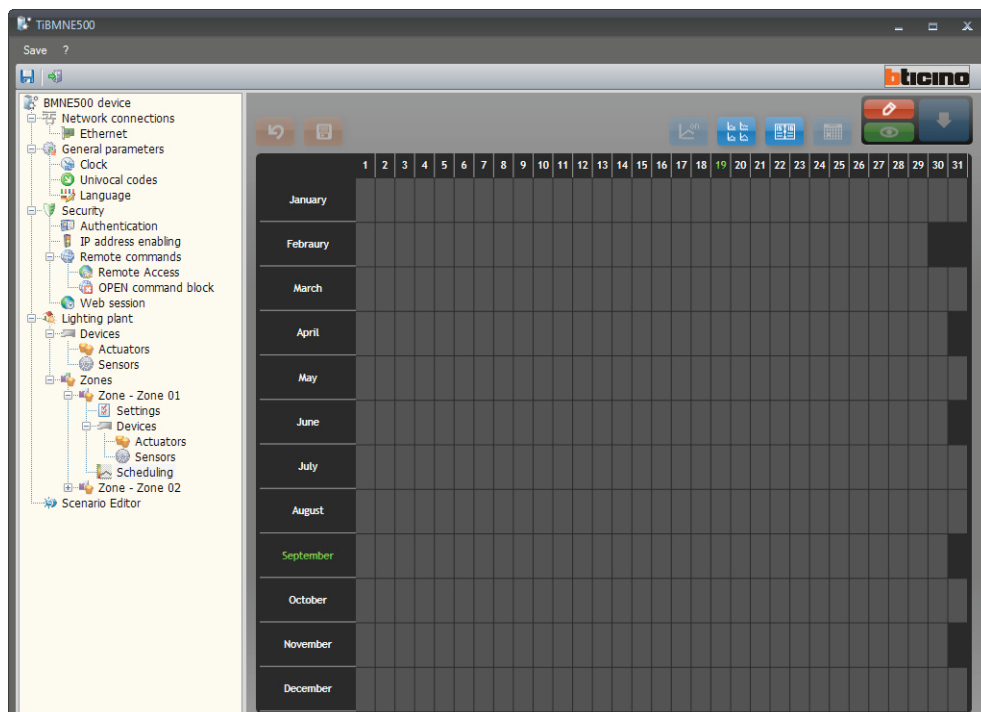


5.1 Creating a scheduling scenario


To create a correct scheduling scenario it is necessary to:

- create a profile;
- create the weekly program;
- create the annual program.

Click the Profile List icon . The following window will open, where it will be possible to create a new scheduling profile

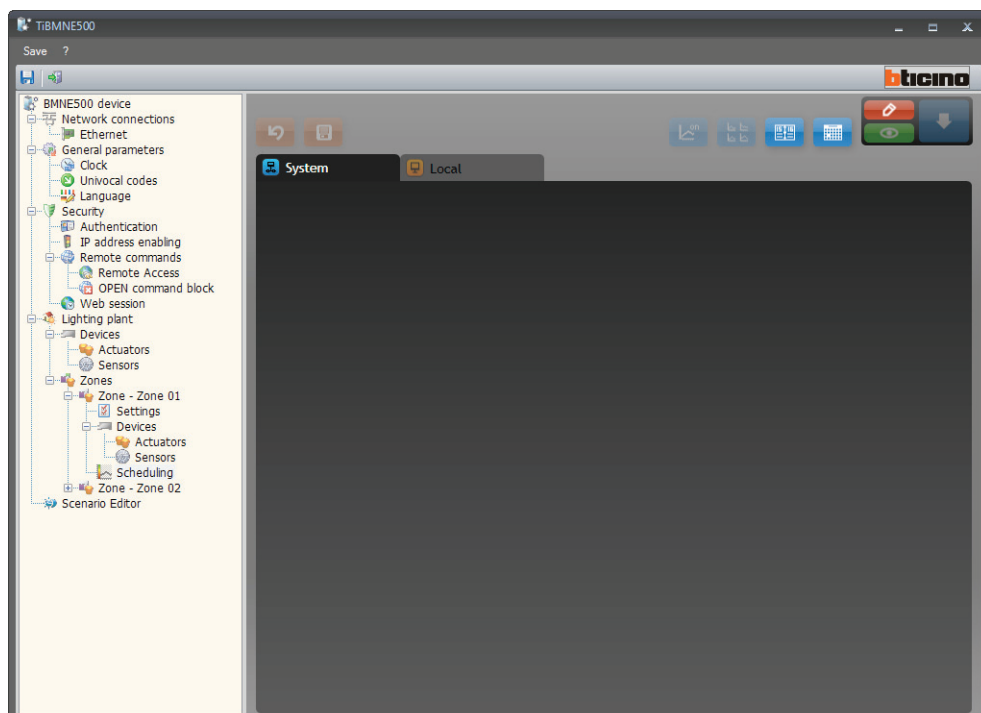


- Click the **system** tab to display all the profiles used in the annual scheduling, which will therefore be used in BMNE500.

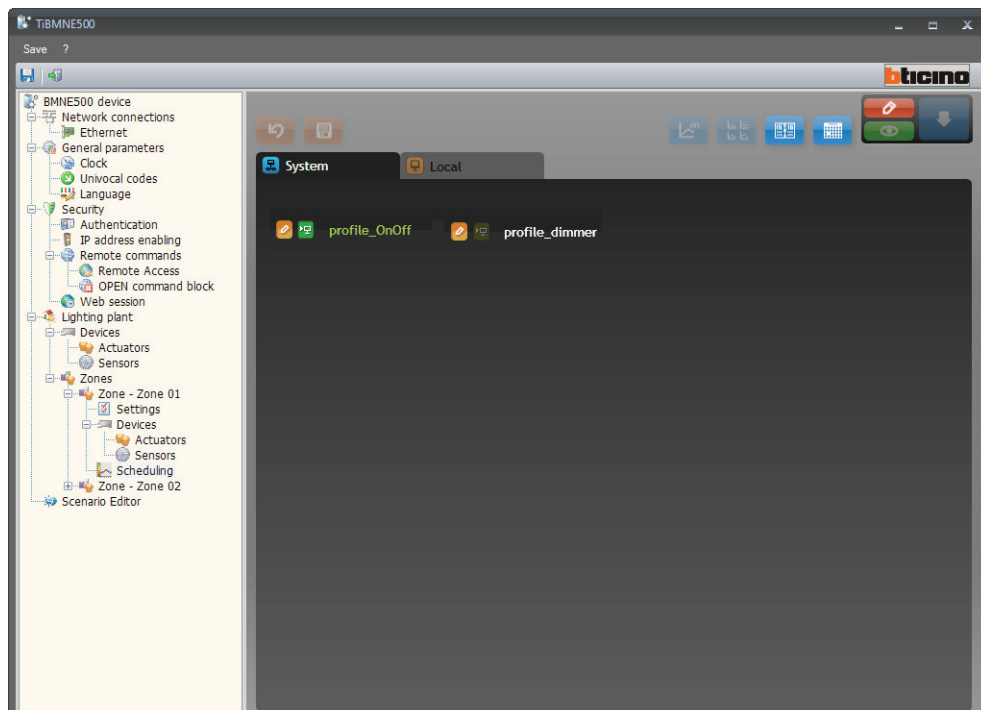

-  : Copy the profile in the Local section.
-  : Change the profile curve.

Click the **Local** tab to display all the profiles previously created on the PC

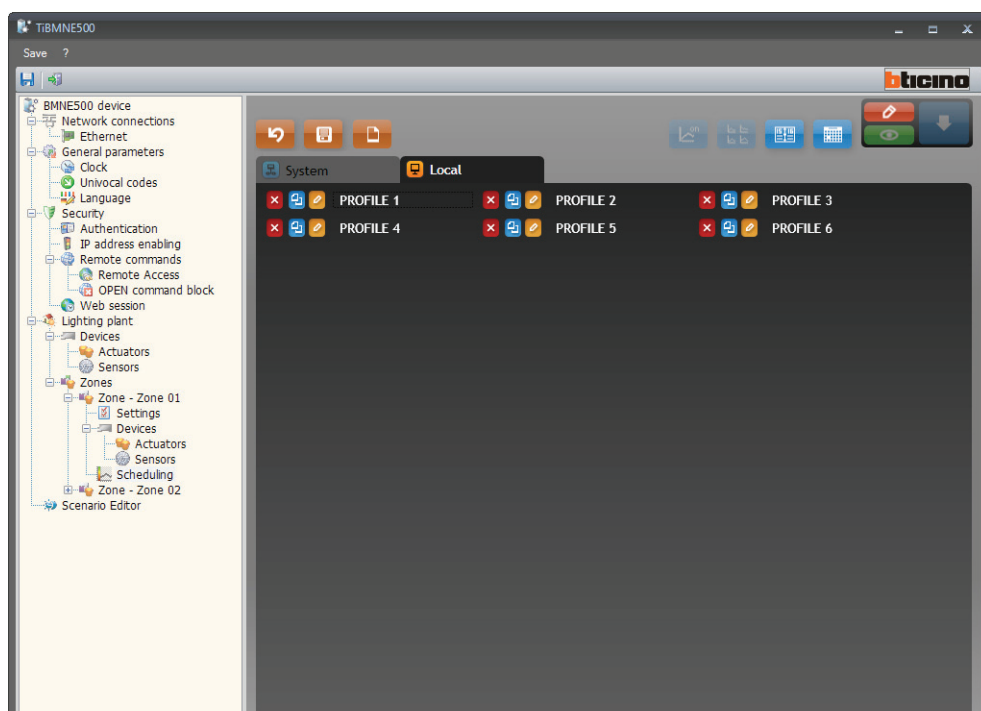

- : Delete profile.




NOTE: this function can only be used when the profile has not been used to create weekly programs.

- : Copy profile.

When this function is selected, the following mask appears, prompting the user to enter a unique name for the profile copy.

Click **Ok** to continue

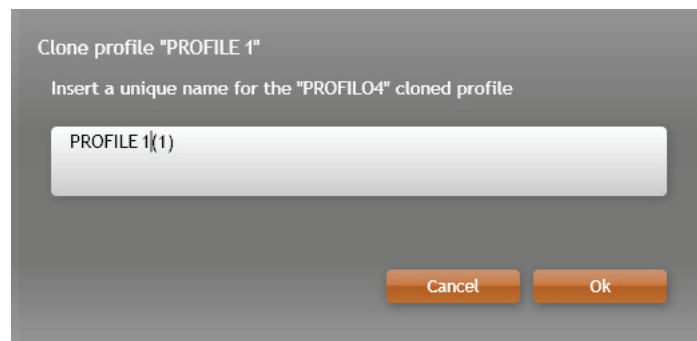


- : Change the profile curve.
- : It indicates that the same profile was used to create several weekly programs.

5.1.1 Creating a new profile

To create a new profile:



- click **Local**;
- click **New** 

The **New Profile** mask appears, prompting the user to enter the name (which must be unique) of the new profile.

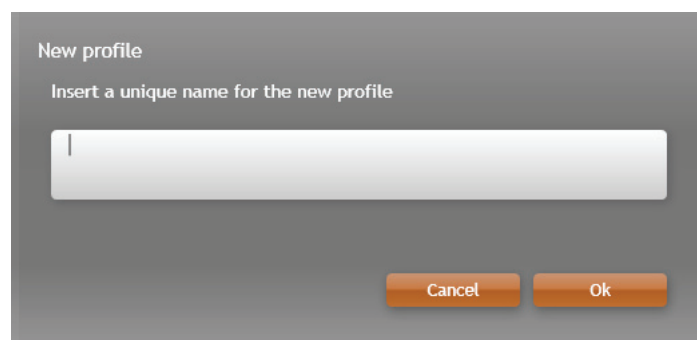


Enter the new profile name and click **Ok**

To continue with the creation of the new profile click . The following window appears, where it will be possible to customise the profile curve using the mouse.

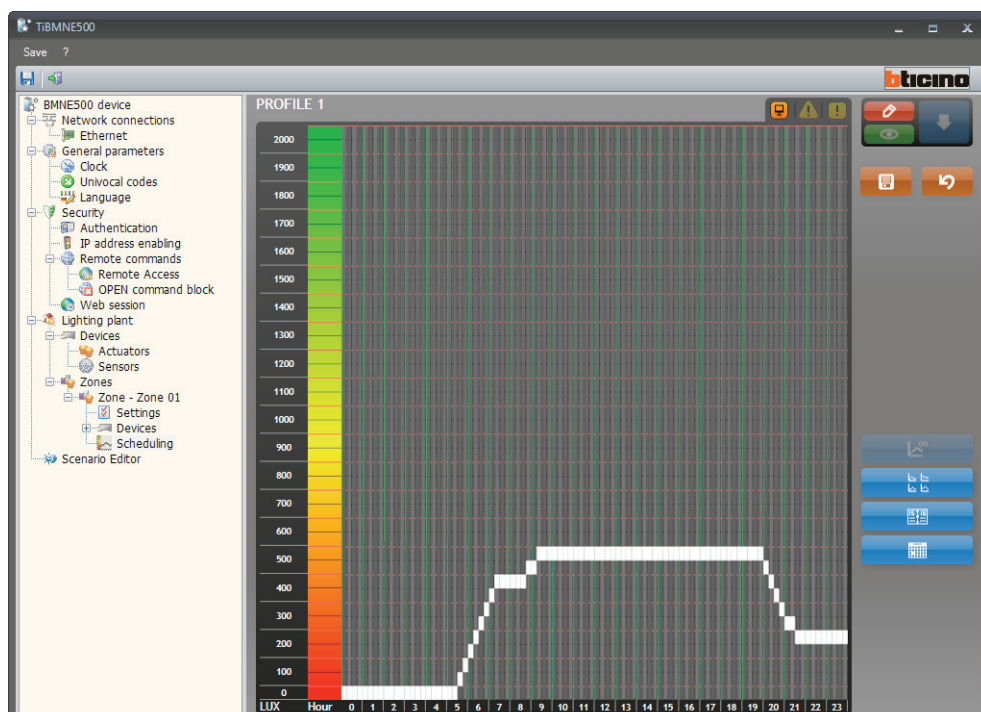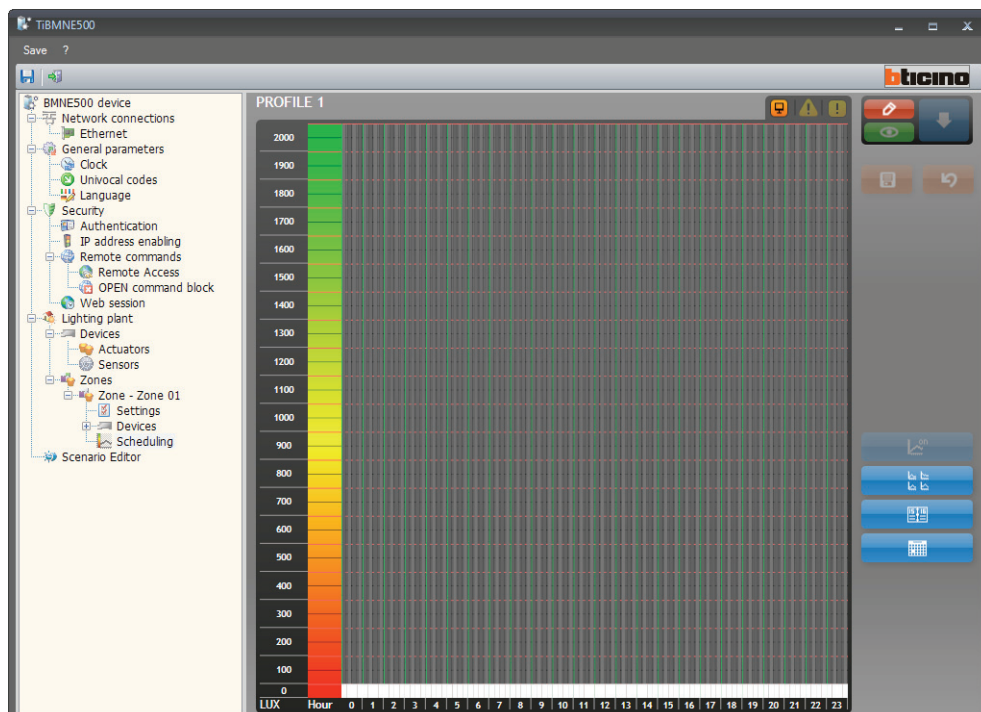


Once the new profile has been created, click the **Save** icon  to save. To cancel all changes click the **Cancel** icon .


Now click the **Weekly program** icon  to display the following window, where it will be possible to create a new weekly program.

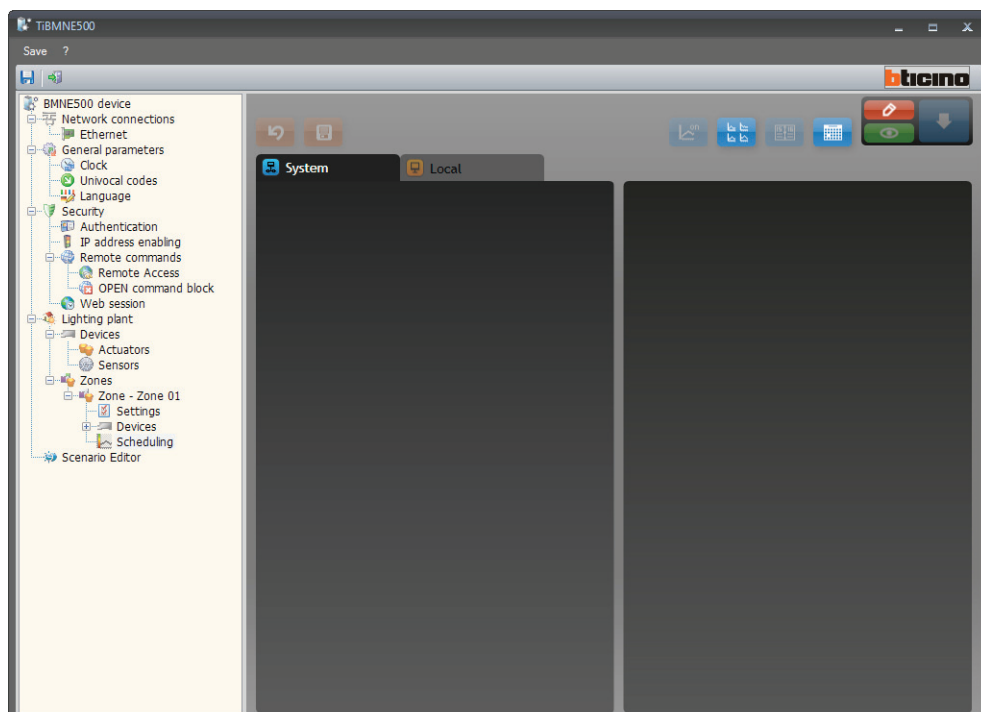

Click the **System** tab to display all the programs used in the annual scheduling, which will therefore be used in BMNE500.

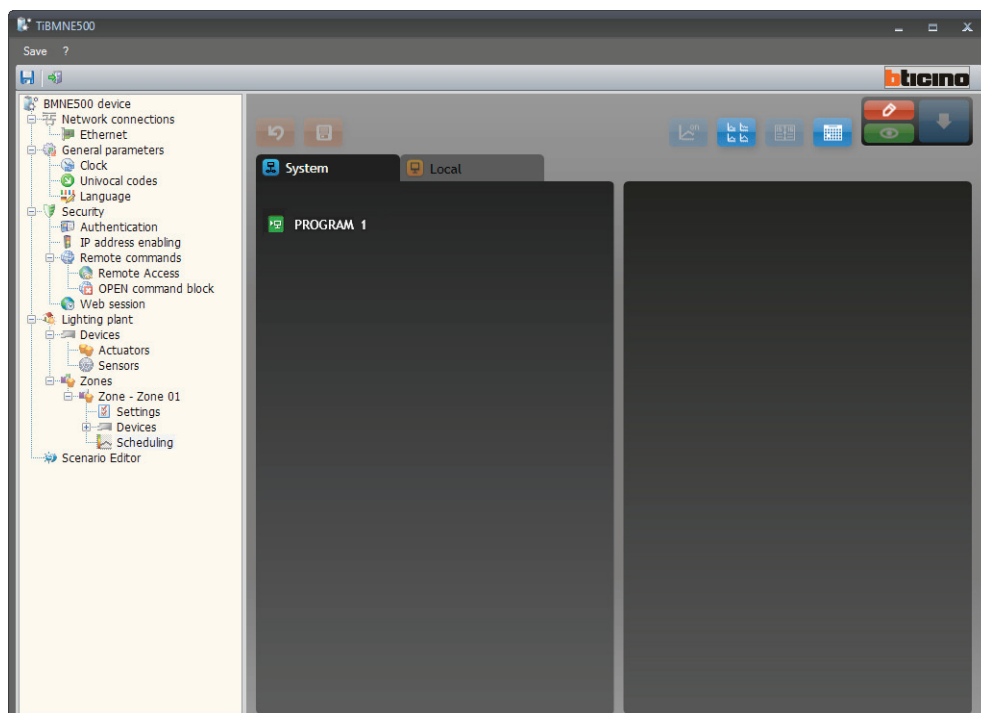


-  **Copy the program in the Local section**
 - Click the **Local** tab to display all the programs previously created on the PC

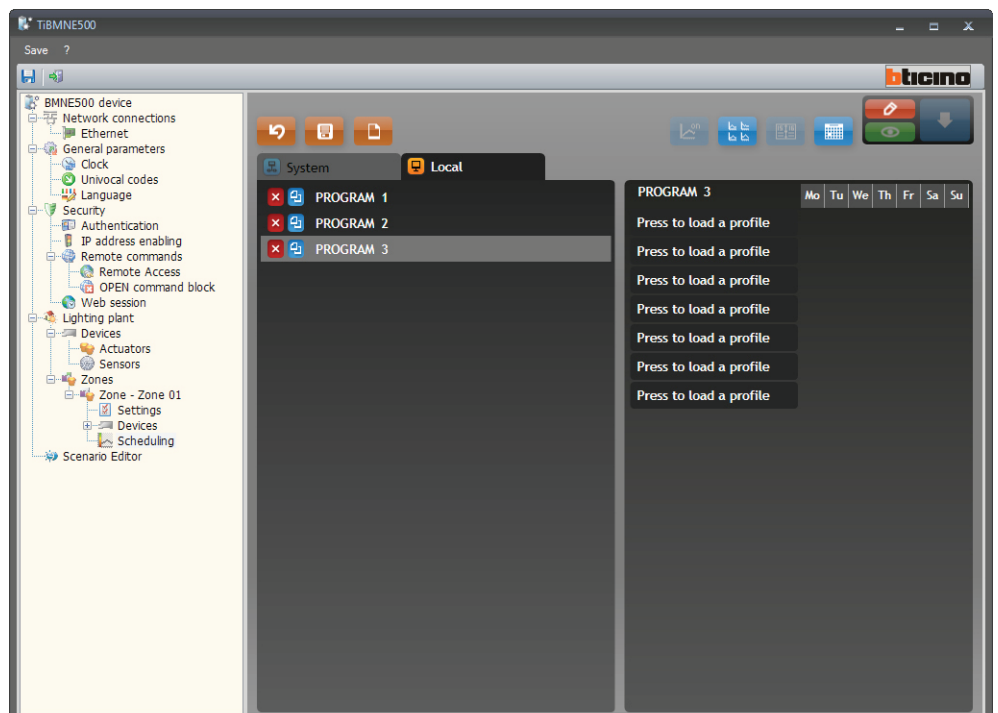

- : Delete program.
- : Copy program.

When this function is selected, the following mask appears, where the user will be prompted to enter a unique name for the program copy.

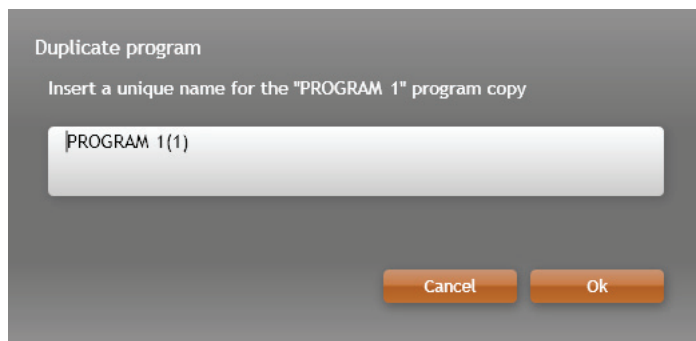

Click **Ok** to continue


5.1.2 Creating the weekly program

To create the weekly program :

- click **Local**;
- click **New** 


The **New Program** mask appears, prompting the user to enter the name (which must be unique) of the new program.

Enter the new program name and click **Ok**

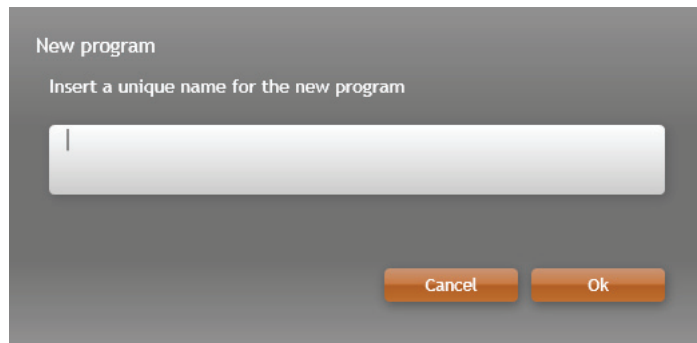


A dialog box titled "New program" with the instruction "Insert a unique name for the new program". It features a text input field and two buttons at the bottom: "Cancel" and "Ok".

The following window will appear:

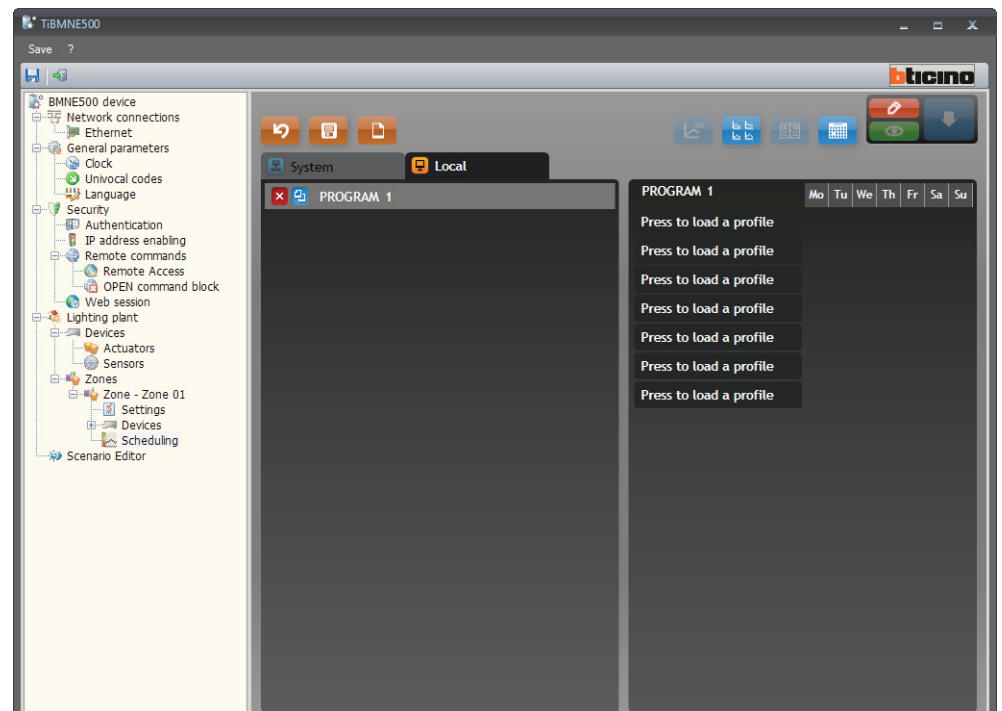


To continue with the creation of the new program click **Press to load a profile**.


The following window appears, listing all the profiles on the PC.

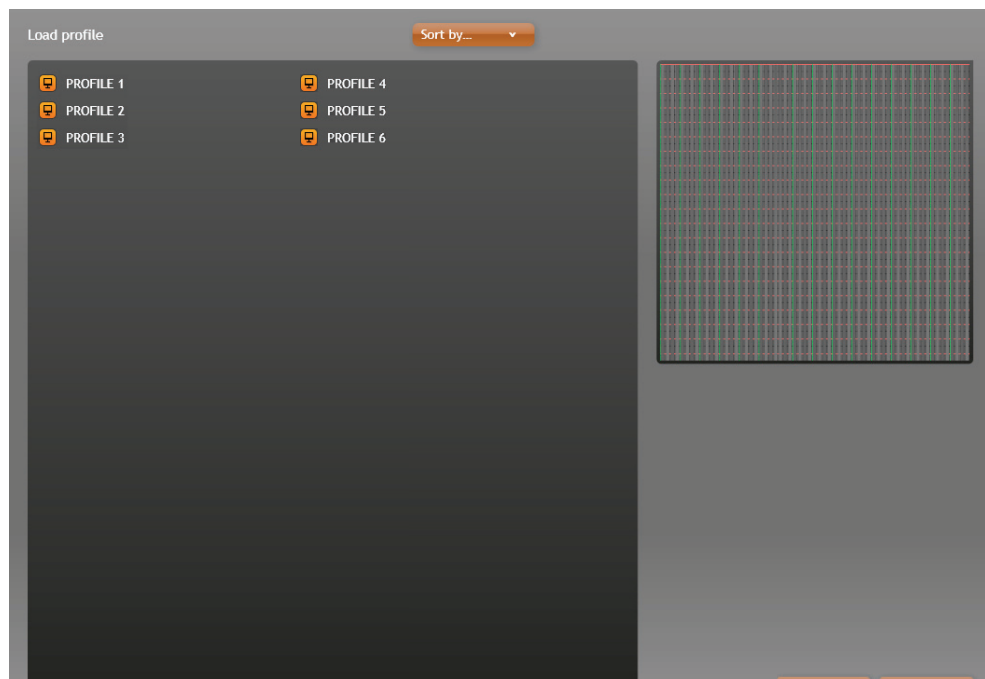

Select the profile to load and click **Ok**.

The following window will appear:

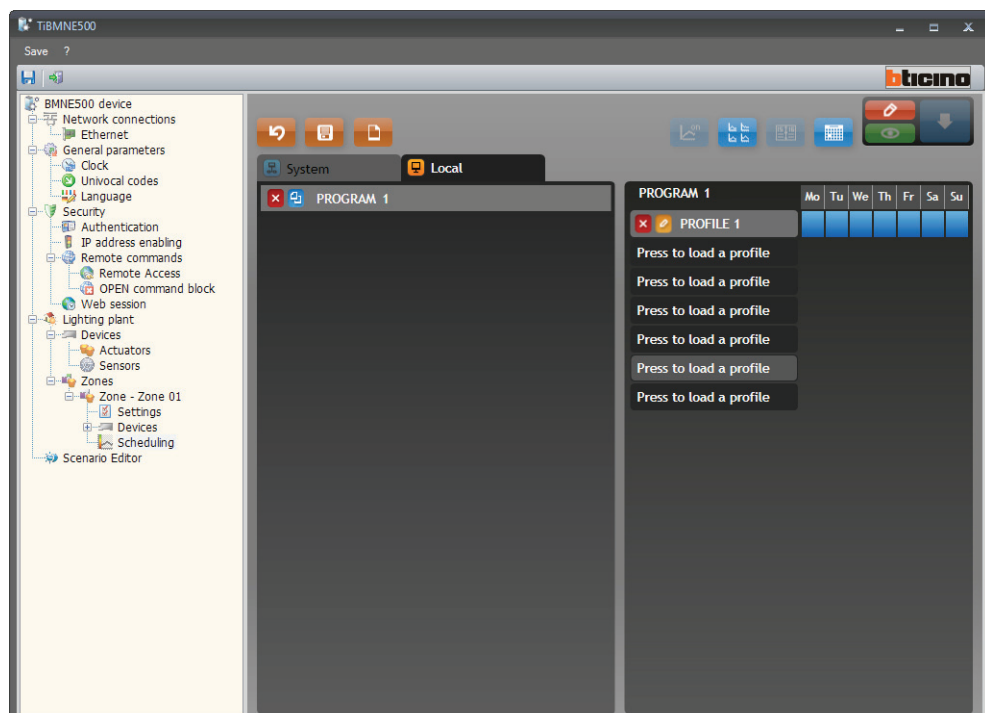


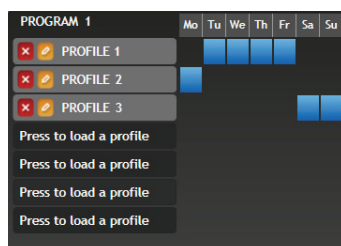

Using the mouse, for each profile select the week days during which the profile must be active.

Once the new profile has been created, click the **Save** icon  to save
To cancel all changes click the **Cancel** icon 


Now click the **Annual program** icon  to display the following window, where it will be possible to create a new annual program.

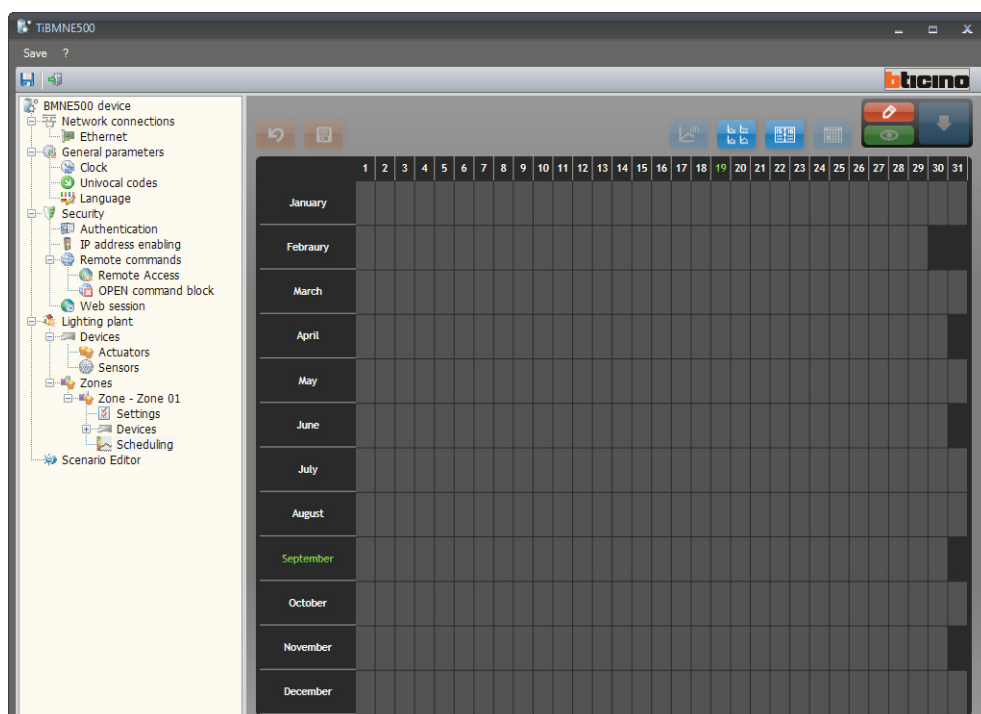


5.1.3 Creating the annual program

To create the annual program:

- using the mouse select the time interval during which one of the weekly programs previously created should be activated
- place the mouse on this interval and right click. This will open a drop down menu where the only active functions will be **Insert** and **Copy calendar**

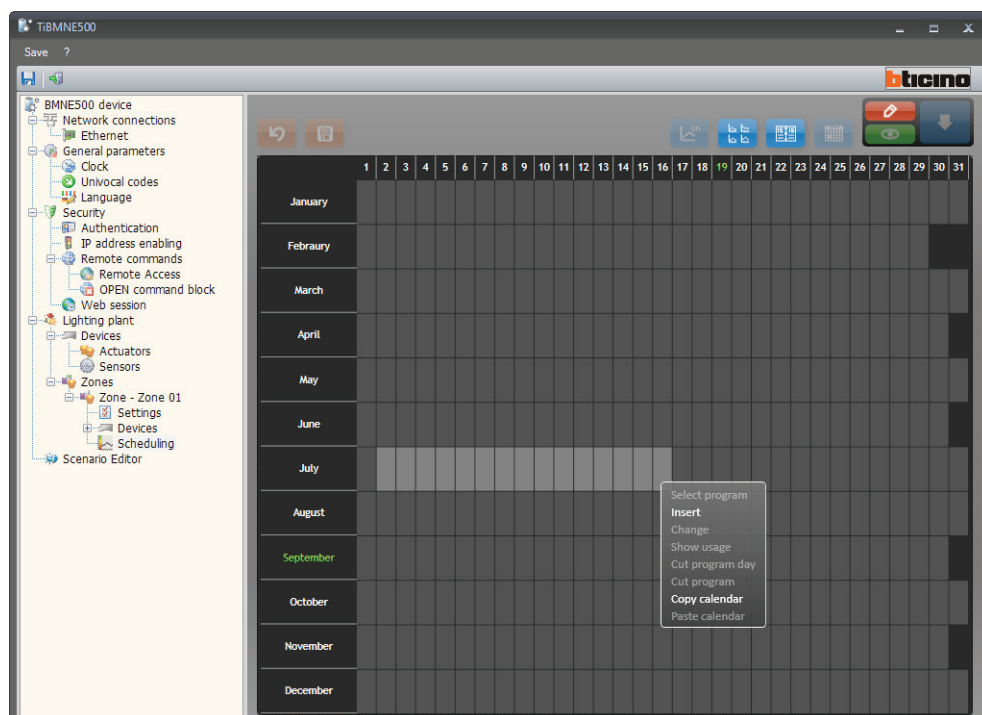


In the drop down menu select **Insert**. The following window appears, listing all the previously created weekly programs.

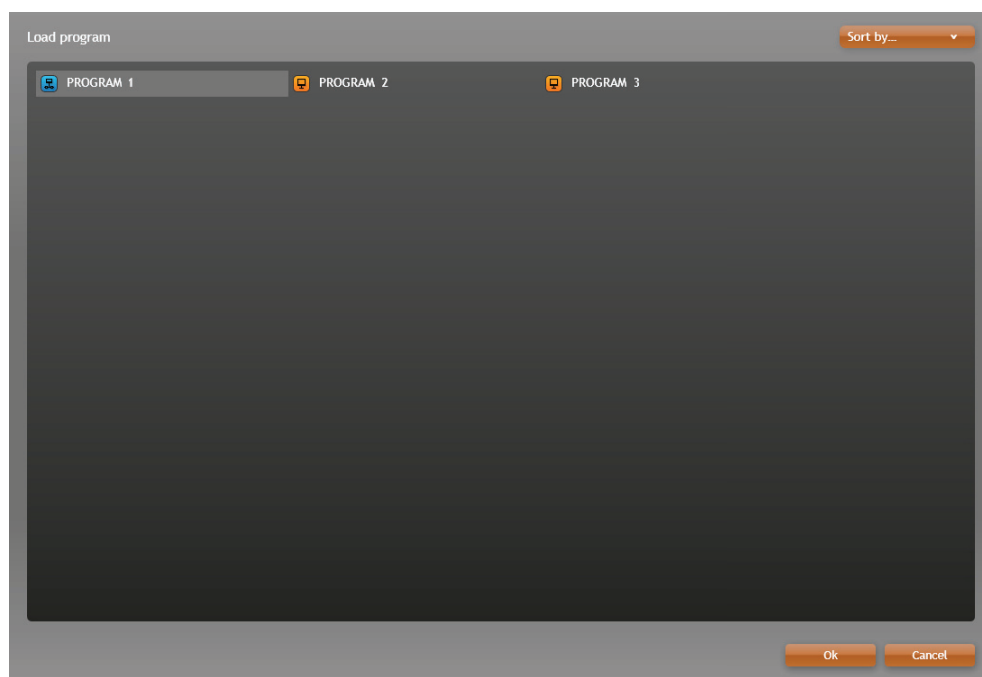


Select a program to load and click **Ok**

-  It indicates that the program belongs to the System section
-  It indicates that the program belongs to the Local section

The following window will now appear, where the time interval for which the selected weekly program has been activated is highlighted.

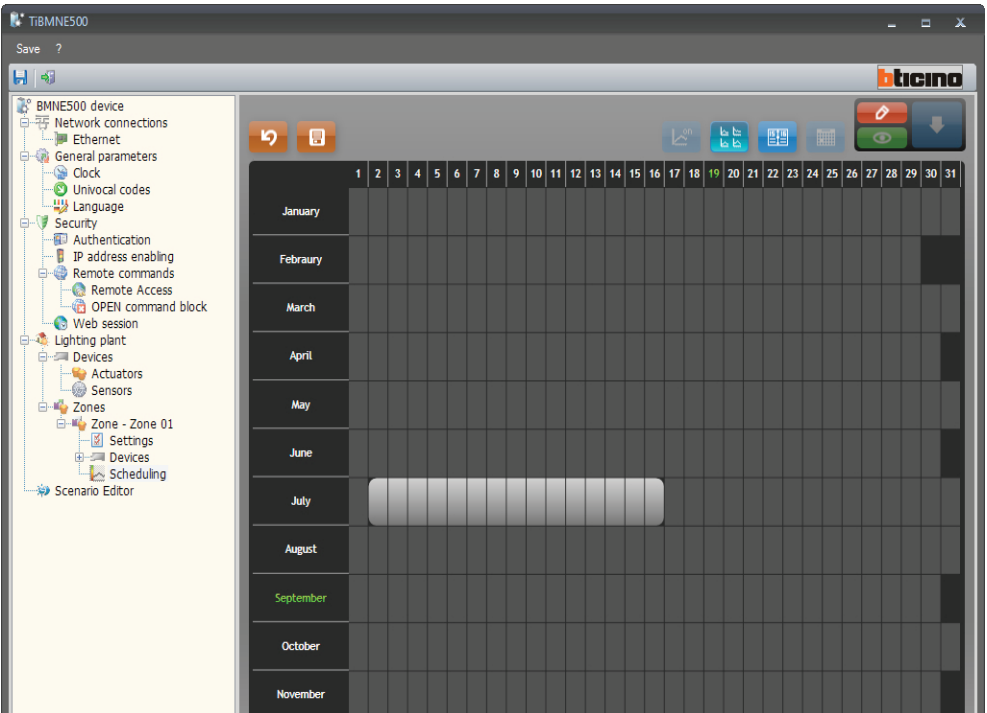

Move the mouse to the highlighted time interval and right click to open the following drop down menu:

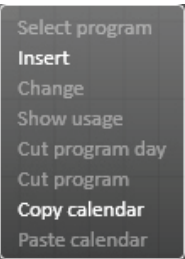

- **Select program** - select the area where the program is used
- **Insert** - insert a program
- **Change** - change the programming parameters
- **Show usage** - highlight in orange the time intervals during which the same program has been used
- **Cut program day** - remove the selected days from the program
- **Cut program** - remove the program
- **Copy calendar** - copy the program of that zone
- **Paste calendar** - paste in that zone the program copied from another zone




- NOTE:**
- Programs without profiles are removed from the calendar before being sent to the machine
 - To remove profiles from the system, they must be removed from all the programs to which they are associated
 - To remove programs from the system, they must be removed from the calendar.

Once the new profile has been created, click the **Save** icon  to save
To cancel all changes click the **Cancel** icon 




IMPORTANT: to confirm the configuration changes click the **Save** , followed by the **Exit**  icon. The following window will open, from where the configuration can be uploaded/downloaded (See Chapter 7 - Download and Upload project).

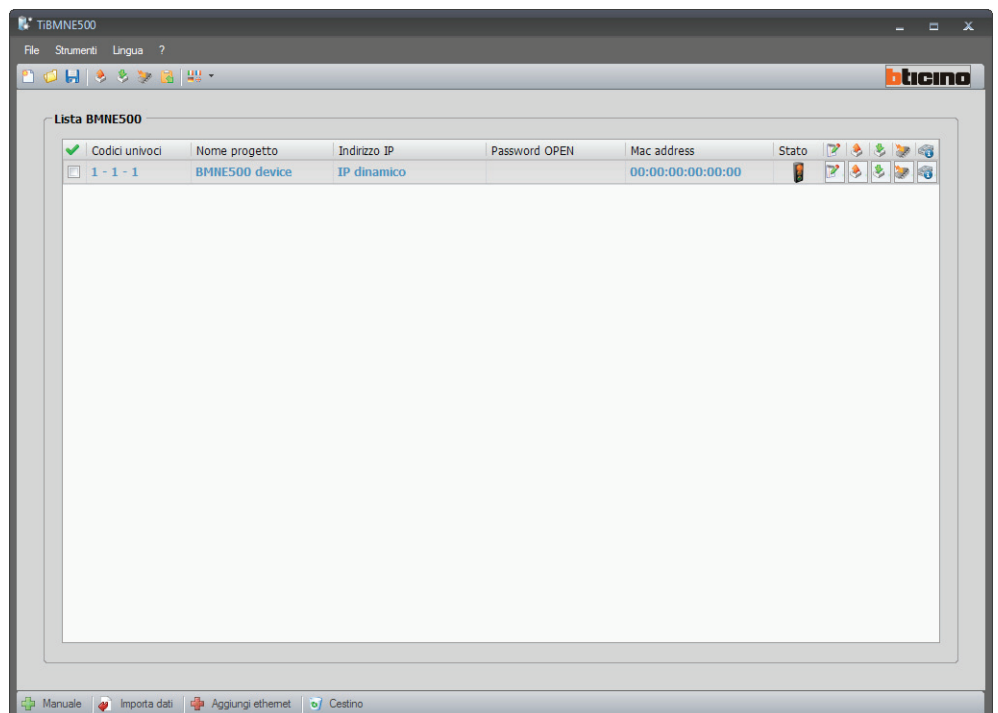


6. Scenario Editor


Click **Scenario Editor** on the left window tree menu to open the following window:

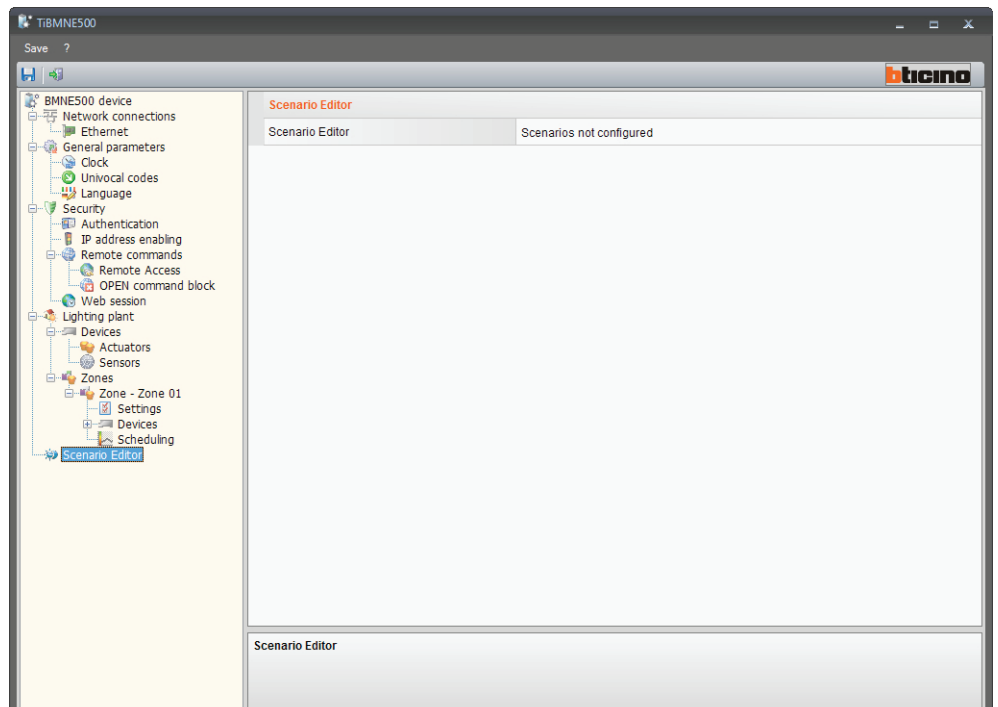

To create a new collection click Scenario Editor, followed by the  pushbutton




The following window will appear:

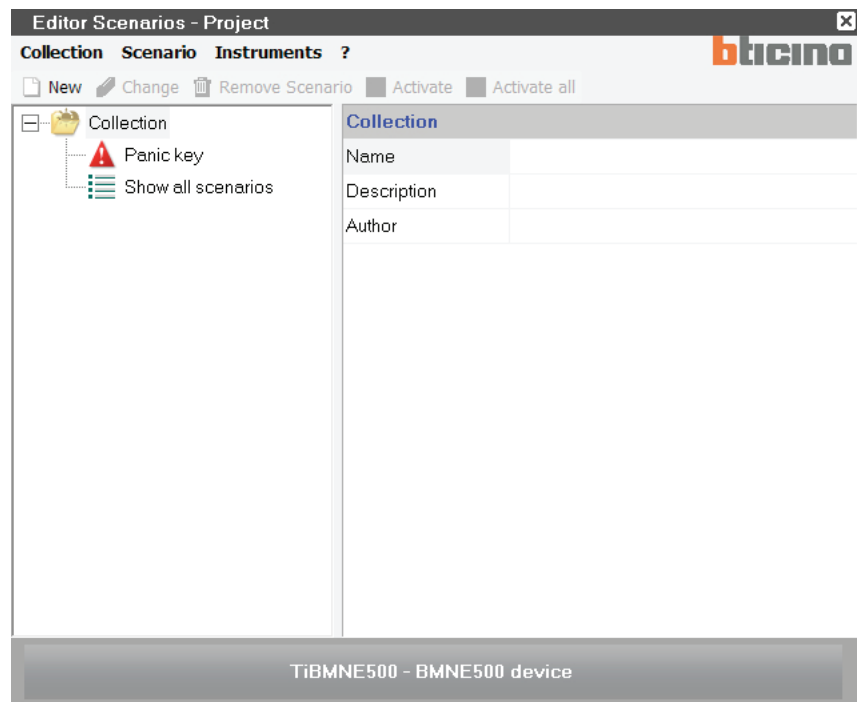

6.1 Main screen

Access the Scenario Editor to display the following window:

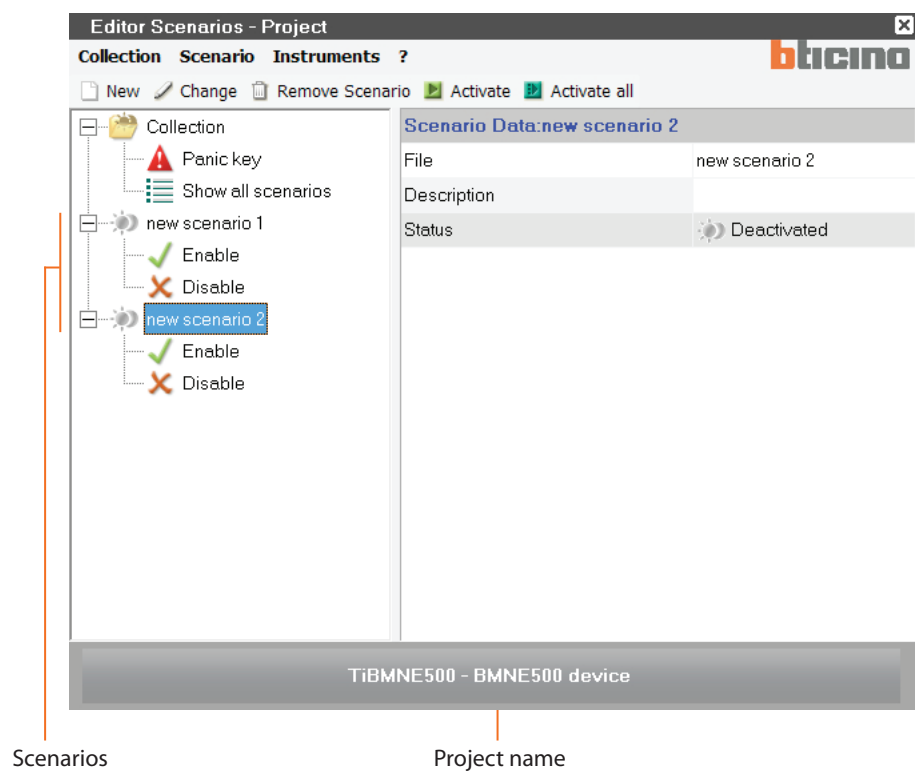



Panic key

By configuring this function it will be possible to assign to a control button of the Automation system the function of disabling all active scenarios in case of emergency.



Show all scenarios

It shows the programmed scenarios and their status on the right side of the window.

Scenarios status



Enabled

BMNE500 manages the scenario



Disabled

BMNE500 ignores the scenario



Error

The scenario is not configured correctly

6.1.1. Function menus and pushbuttons

The main functions that can be carried out using the Scenario Editor can be accessed by selecting the relevant options in the drop down menu. Many functions can also be accessed by double clicking the relevant item.

Collection menu




- **Export** - export the scenario collection so that it can be used for other projects
- **Import** - import scenarios from an existing collection
- **Exit** - exit the Scenario Editor section and return to TiBMNE500

Scenario menu



- **New** - create new scenario
- **Modify** - open the scenario editing window for the selected scenario
- **Delete** - delete the selected scenario
- **Duplicate** - create a copy of the selected scenario
- **Import scenario** - Import an existing scenario
- **Export scenario** - export the selected scenario

"Instruments" menu



- **Activate the selected scenarios** - activate the selected scenarios
- **Activate all the scenarios** - activate all programmed scenarios

? Menu




- **Info...** - display some software information

At the top of the window are the menu icons:

	New		Change		Remove Scenario		Activate		Activate all
	New	Create new scenario							
	Change	Open the window that enables the user to modify the selected scenario							
	Remove Scenario	Delete the selected scenario							
	Activate	Enable the selected scenario							
	Activate all	Enable all scenarios created							


6.2 Exporting a collection

In order to export a collection it will be necessary to first assign a name to the collection. Otherwise, when attempting to export it, the following message will appear:

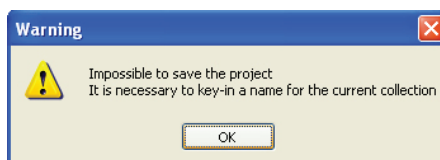


Therefore, to export a collection continue as follow:

- Select **Collection** on the left section of the window. Enter the collection name in the main window on the right

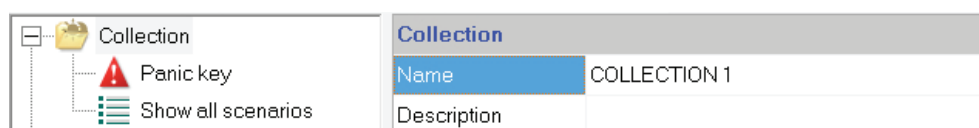


- from the drop down menu select **Export**. The following save window will appear:

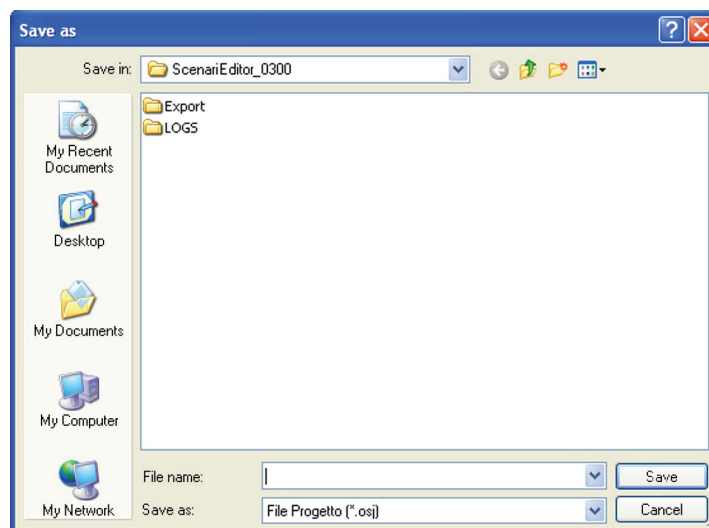

Enter the name of the collection being exported and click **Save**.


6.3 Importing scenarios from a collection

To import scenarios from a collection, in the Collection menu select **Import**. The following import window will open. Select the desired .osj file

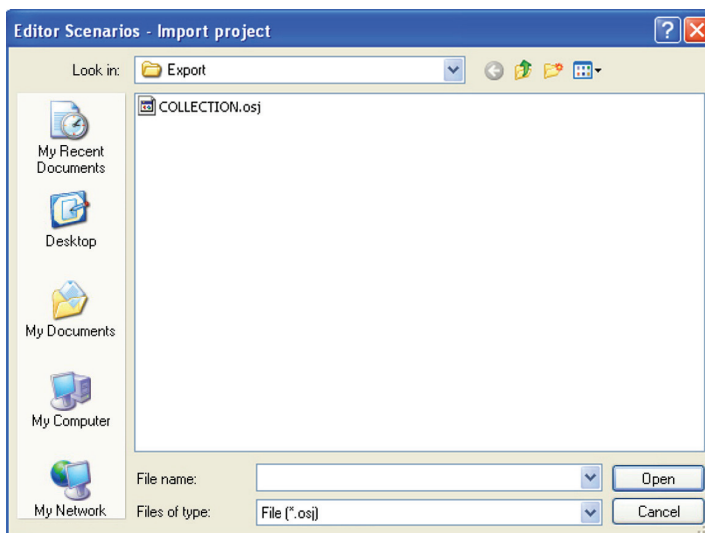

Once the desired file has been selected click **Open**

The window below will appear, for the selection of the scenario to import

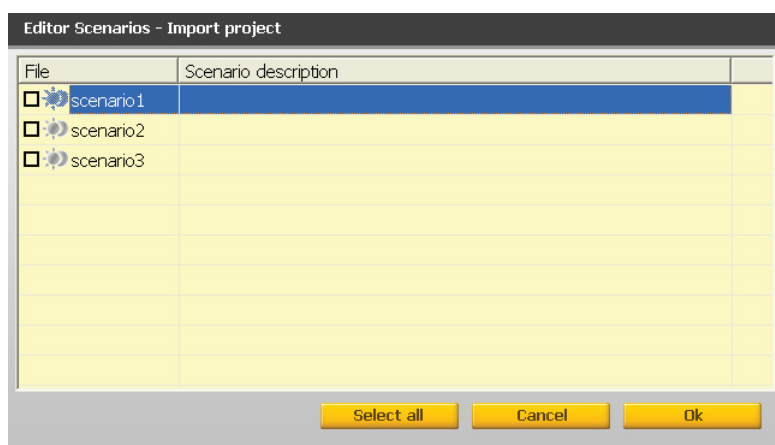


Tick the scenario to import and click **Ok**.

To import all the scenarios click **Select all**.

6.4 Creating a scenario

To create a scenario, select **New** from the **Scenario** menu. The following mask will appear, prompting the user to enter a scenario name.

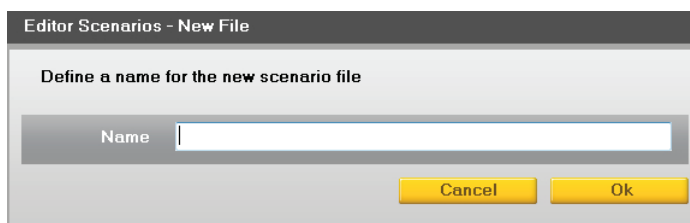

Enter the scenario name and click **Ok**.

For each scenario, it is possible to configure two buttons of the Automation system, for manually enabling or disabling the execution of the scenario itself.




6.5 Scenario configuration

To access the scenario configuration screen select **Modify** from the Scenario menu.

6.5.1. Main screen and corresponding menus

The scenario is configured using the following mask:

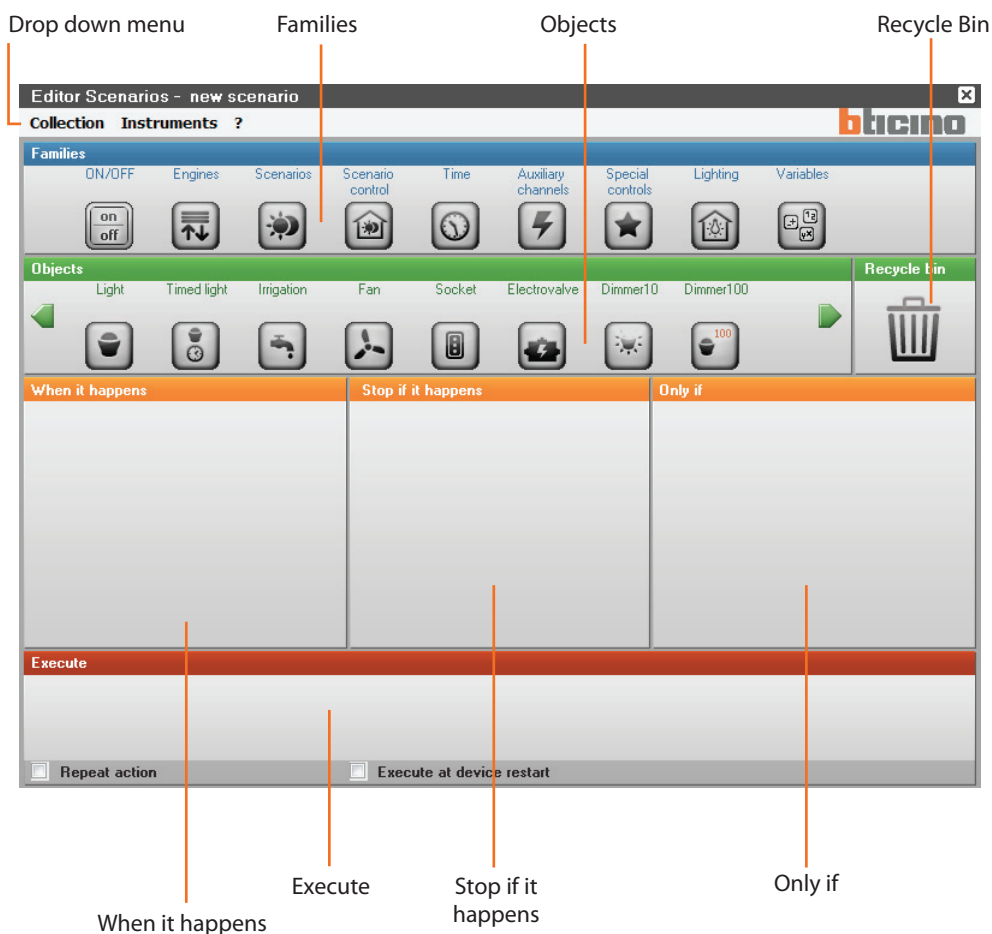

The drop down menu includes the following functions:

Collection menu

Collection	
Save scenario	Ctrl+S
Exit	

- **Save scenario** - save the current scenario
- **Exit** - exit this editing section and return to the main Scenario Editor screen

Instruments menu

Instruments	
Activate scenario	F5

- **Activate scenario** - activate the current scenario


? Menu

?	
Info . . .	


- **Info...** - display some software information

6.5.2. Scenario configuration

The first two fields of the Scenario Editor show some objects splits into families

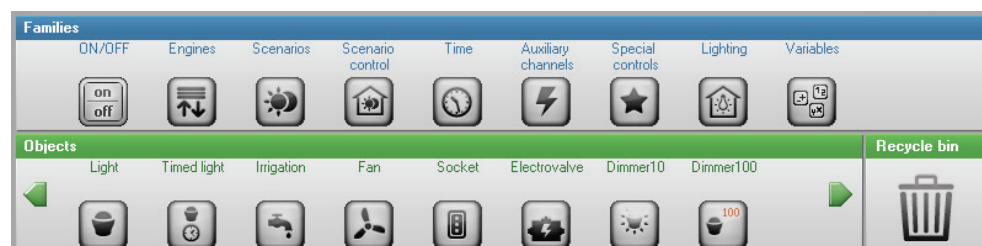

To configure the scenario drag and drop the object icons in the fields below

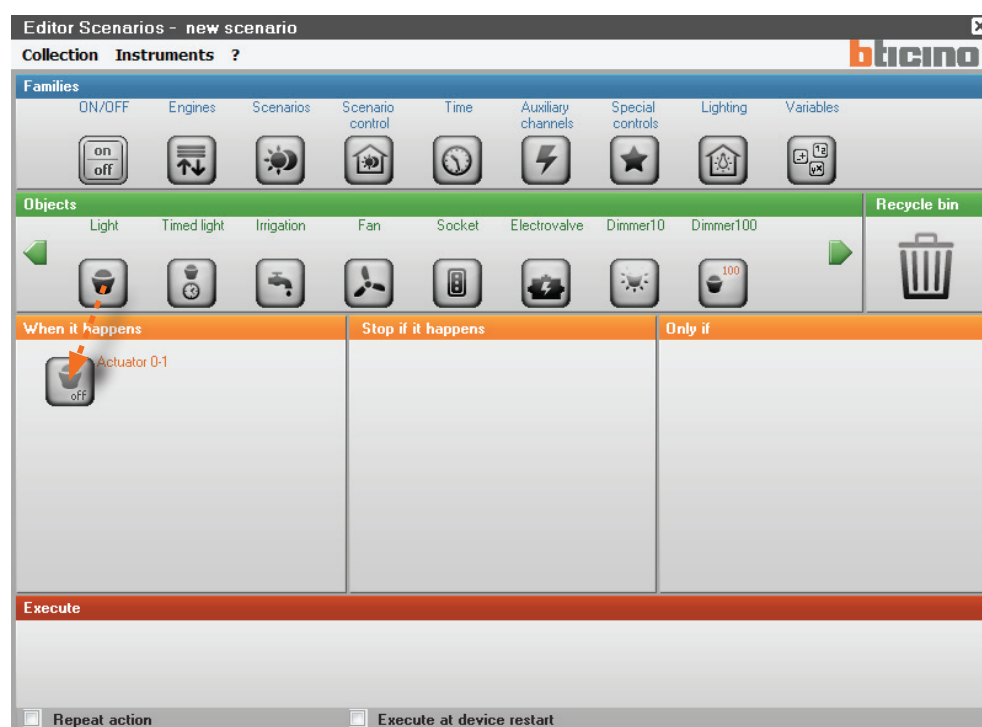

Depending on the field to which it has been dropped, the object will assume a certain meaning as described below:

- if dropped into the “**when it happens**” field the object defines the event that will activate the scenario
- if dropped into the “**stop if it happens**” field the object defines the event that will stop the scenario
- if dropped into the “**only if**” field the object defines a restriction to the execution of the scenario
- if dropped into the “**execute**” field the object defines the action or sequence of actions to be performed.-

This is the only compulsory field.




NOTE: if an object is dropped into a non relevant area, the icon of the mouse pointer will change into the unavailable symbol , to indicate that the operation cannot be performed.

Objects can be eliminated by moving them into the **Recycle Bin**.

If two or more objects are dropped into the **Only if** field, the  icon will appear between them.



Double click the  icon to display the following mask, and establish a link between the objects

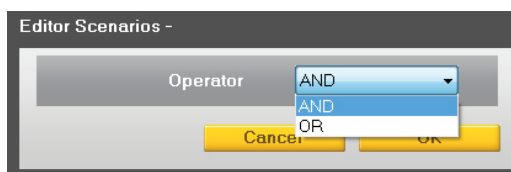


AND - the conditions defined by both objects must occur in order for the scenario to activate
OR - it is enough for one of the conditions defined by the objects to occur, in order for the scenario to activate.

6.5.3. Configuring a scenario by importing data from a project


In order to configure a scenario by importing data from a project click Import data ().

Then select **Modify** from the **Scenario** menu. A mask will appear, confirming the import data procedure.


Once the operation has been completed, the following window will appear, for the selection of the **Scenario scheduler** object corresponding to the BMNE500 being configured.

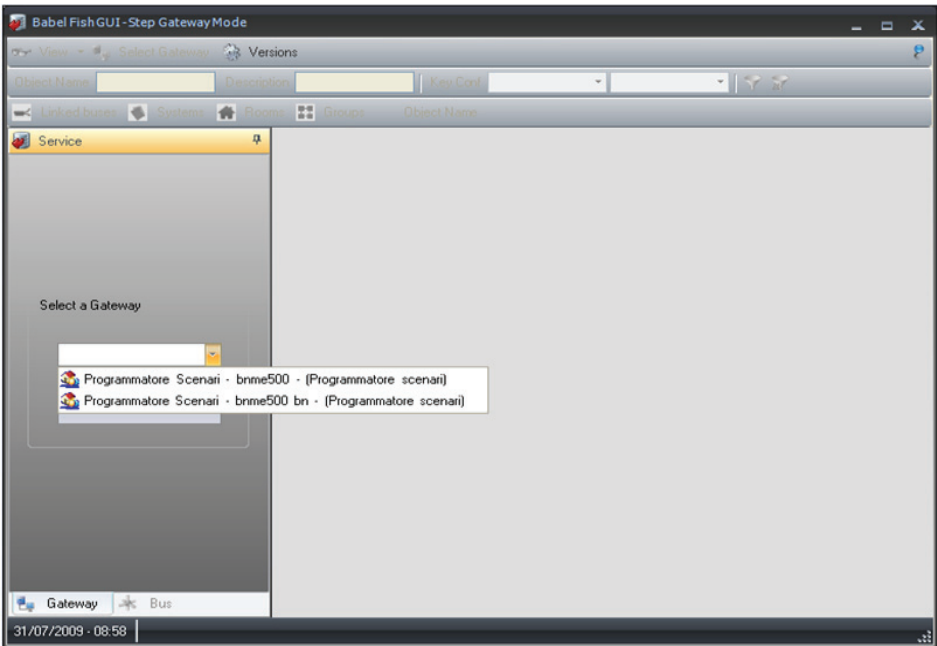

The following window opens, showing all the objects contained in the .mhz project file acquired through the import data procedure.

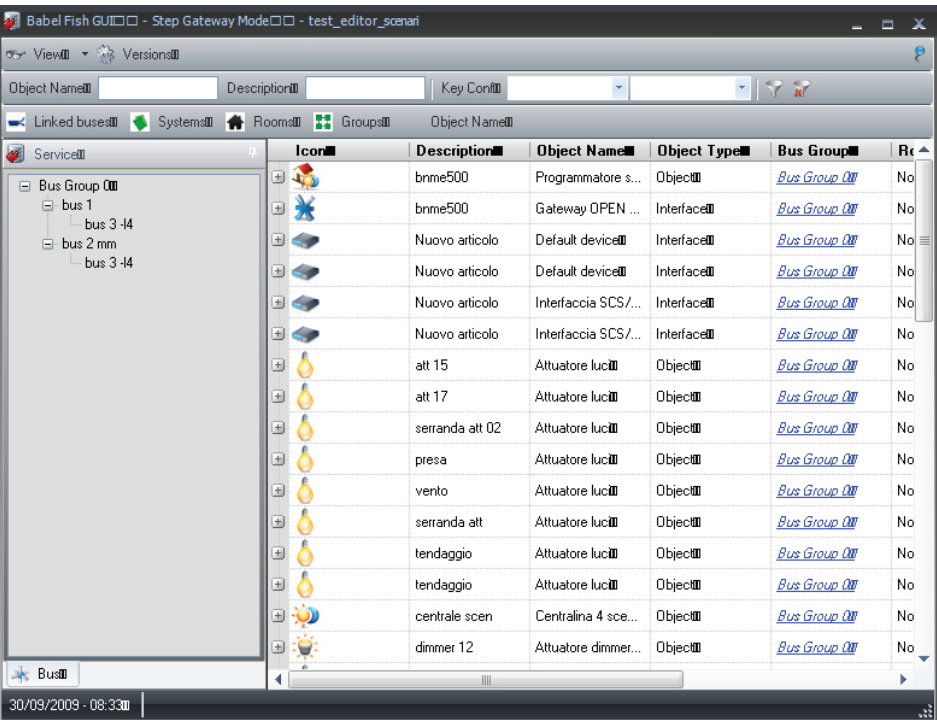

To configure the scenario drag and drop the objects from the window into the following fields: "When it happens", "Stop if it happens", "Only if", or "Execute", depending on the meaning being assigned to the object.

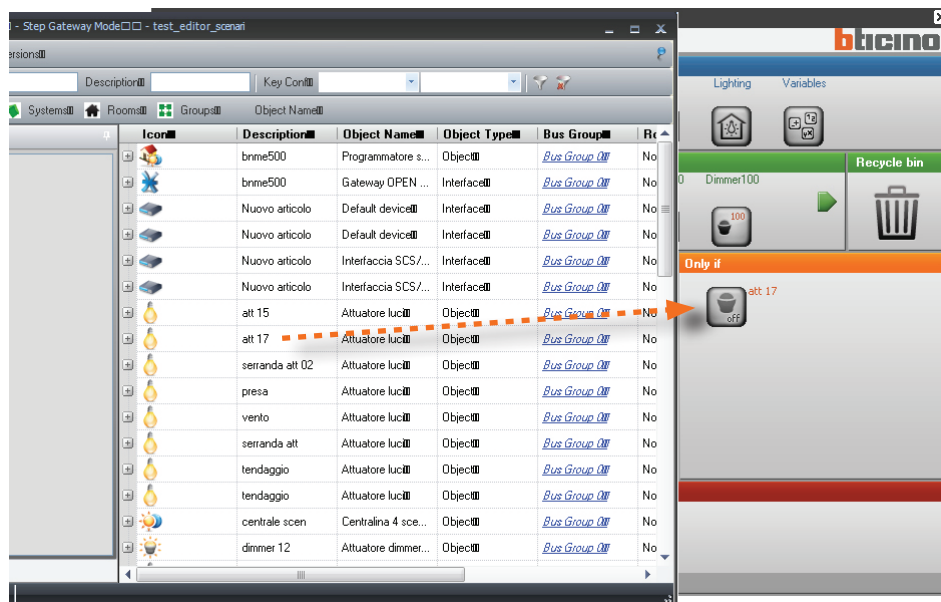

NOTE: if objects belonging to another BMNE500 are selected, these will not be added to the scenario.

Once the mouse button is released (if the object belongs to the BMNE500 that is being configured and can be dropped into the field) the object configuration mask appears, which can be customised by the user


Editor Scenarios -

Family	ON/OFF
Description	
Action	Light OFF
Object	Actuator 0-1
Level	Private riser
Interface	

Cancel Ok

6.6 Families/Objects

The **Families** field shows the icons of the functions used in **Lighting Management**. Click a function icon to show in the **Objects** field the elements making up the selected family.

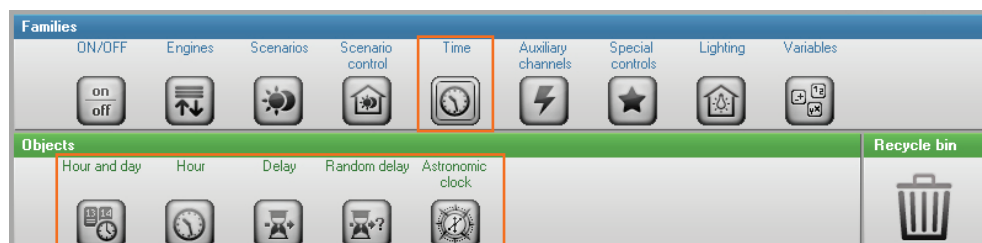

When the object is dragged and dropped into the desired field, once the mouse button is released, the object configuration mask will appear.

Editor Scenarios -

Family

ON/OFF

Description

Action

Light OFF

Object

Actuator 0-1

Level

Private riser

Interface

Cancel

Ok

The masks and the data required for the configuration can change depending on the type of object and the field where the object has been dropped to.

To configure the object, select the data from the scroll menus that can be found in the configuration mask.

Press **Ok** to confirm.

The configured object is represented in the selected field with a graphic icon indicating its status or allocated function.

The following pages show the objects belonging to the individual Lighting Management families, with their corresponding configuration masks.

6.6.1. ON/OFF Family

This family includes objects that can have ON and OFF status.



Click on the green arrows to display all the objects.

Configuration mask for the following objects: **light, irrigation, fan, socket, electrovalve, dimmer10, dimmer100, Assemblies.**

Family	ON/OFF
Description	
Action	Light OFF
Object	Actuator 0-1
Level	Private riser
Interface	
Cancel Ok	

- **Family** - the family the object belongs to
- **Description** - object description
- **Action** - action performed by the object
- **Object** - object address
- **Level** - system level
- **Interface** - interface address. Only enabled when Local BUS level is selected

Configuration mask for the **timed light** object.

Editor Scenarios -

Family	ON/OFF
Description	
Action	ON timed
Object	Actuator 0-1
Time within (hh:mm:ss)	0 : 0 : 1
Level	Private riser
Interface	
Cancel Ok	

- **Family** - family the object belongs to
- **Description** - object description
- **Action** - action performed by the object
- **Object** - object address
- **Time within (hh:mm:ss)** - ON time interval
- **Level** - system level
- **Interface** - interface address; Only enabled when Local BUS level is selected

Configuration mask for the **Dimmer100** object

Editor Scenarios -

Family	ON/OFF
Description	
Action	Dimmer ON
Object	General
Lighting	
Time within (mm:ss max 4 min.)	0 : 1
Level	Private riser
Interface	
Cancel Ok	


- **Family** - family the object belongs to
- **Description** - object description
- **Action** - action performed by the object
- **Object** - object address
- **Lighting** - light level setting The field remains inactive only if the Dimmer ON or Dimmer OFF actions are selected in the Action field
- **Time within (mm:ss max 4 min)** - time needed to increase the lighting level from 0 to 100
- **Level** - system level
- **Interface** - interface address; Only enabled when Local BUS level is selected



NOTE: the *timed light* and *irrigation* objects can only be dropped into the *Execute* field.

6.6.2. Motor Family

This family includes the objects that can have Up and Down, or Open and Close status.

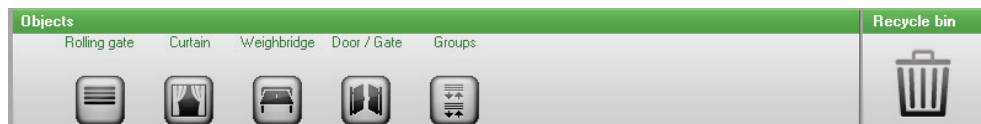

Configuration mask

The image shows a dialog box titled 'Editor Scenarios -'. It contains a configuration mask with the following fields:

- Family**: A dropdown menu.
- Engines**: A dropdown menu.
- Description**: A text input field.
- Action**: A dropdown menu with 'Rolling gate STOP' selected.
- Object**: A dropdown menu with 'Actuator 0-1' selected.
- Level**: A dropdown menu with 'Private riser' selected.
- Interface**: A dropdown menu.

At the bottom of the dialog are 'Cancel' and 'Ok' buttons.


- **Family** - family the object belongs to
- **Description** - object description
- **Action** - action performed by the object
- **Object** - object address
- **Level** - system level
- **Interface** - interface address; Only enabled when Local BUS level is selected



NOTE: the **Assemblies** object represents a group of actuators belonging to a specific Environment or Group, or responding to a General Control. It can only be dropped into the **Execute** field.

6.6.3. Scenario Family

Configuration mask for the remote control and control objects

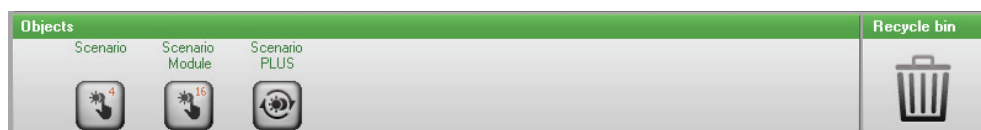

Configuration mask for the **scenario central unit** object and the **scenario module** object

The 'Editor Scenarios' dialog box contains the following fields:

- Family:** A dropdown menu.
- Description:** A text input field.
- Action:** A dropdown menu with 'Scenario 1' selected.
- Object:** A dropdown menu with 'Control unit 01' selected.
- Level:** A dropdown menu with 'Private riser' selected.
- Interface:** A dropdown menu.
- Buttons:** 'Cancel' and 'Ok' buttons at the bottom right.

- **Family** - family the object belongs to
- **Description** - object description
- **Action** - number of the scenario to activate
- **Object** - object address
- **Level** - system level
- **Interface** - interface address; Only enabled when Local BUS level is selected

Configuration mask for the **Scenario plus** object

The 'Editor Scenarios' dialog box contains the following fields:

- Family:** A dropdown menu.
- Description:** A text input field.
- Action:** A dropdown menu with 'Activate scenario' selected.
- Object:** A dropdown menu with 'Scenario 255' selected.
- Level:** A dropdown menu with 'Set level' selected.
- Object type:** A dropdown menu with 'All devices' selected.
- Switch on step:** A dropdown menu with '1%' selected.
- Buttons:** 'Cancel' and 'Ok' buttons at the bottom right.


- **Family** - family the object belongs to
- **Description** - object description
- **Action** - number of the scenario to activate
- **Object** - object address
- **Level** - switch on level of the devices
- **Type** - type of object; it is activated by setting increase/decrease level in the Action field
- **Switch-on step** - level increase/decrease %; it is activated by setting increase/decrease level in the Action field



NOTE: the *Scenario Central Unit* and *Scenario Module* objects can only be dropped into the *Execute* field, while the *Scenario Plus* object can be dropped into all the fields except the *Only if* field.

6.6.4. Scenario control Family

This family contains the command configured in CEN mode

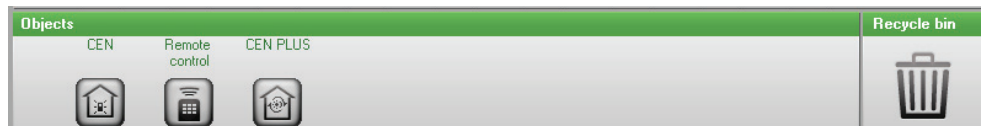

Configuration mask for the **CEN** and **Remote control** objects

 A dialog box titled 'Editor Scenarios -'. It contains the following fields:

- Family:** Scenario control
- Description:** [Empty text box]
- Action:** Button 0 Start pressure (dropdown menu)
- Object:** Control 0-1 (dropdown menu)
- Level:** Private riser (dropdown menu)
- Interface:** [Empty text box]

 At the bottom are 'Cancel' and 'Ok' buttons.

- **Family** - family the object belongs to
- **Description** - object description
- **Action** - action performed by the object
- **Object** - object address
- **Level** - system level
- **Interface** - interface address; Only enabled when Local BUS level is selected

Configuration mask for the **CEN PLUS** object

 A dialog box titled 'Editor Scenarios -'. It contains the following fields:

- Family:** Scenario control
- Description:** [Empty text box]
- Action:** Short pressure (dropdown menu)
- Object:** Control 0 (dropdown menu)
- Pushbutton:** Pushbutton 0 (dropdown menu)

 At the bottom are 'Cancel' and 'Ok' buttons.

- **Family** - family the object belongs to
- **Description** - object description
- **Action** - action performed by the object
- **Object** - object address
- **Pushbutton** - pushbutton that must be pressed on the object



NOTE: the objects can only be dropped into the *When it happens* and *Stop if it happens* fields.

6.6.5. Time Family

It includes the objects for which a time interval can be specified. The configuration masks of the objects belonging to this family change depending on the function of the selected object and its location.



• Hour and Day object

If the object is dropped into the **When it happens** or **Stop if it happens** fields, the following mask will open, where it will be possible to configure the start time and date of the scenario.

If the object is dropped into the **Only if** field, the following configuration mask will appear, split into three separate areas, where it will be possible to set the time interval during which the scenario will be performed.

1. Hour Plan

Single hour – click this button to activate the From hour field, where it will be possible to specify the exact time the scenario will be executed.

Hour band – click this button to activate the fields From hour and To hour, where it is possible to specify a time band during which the scenario will be executed.

Always – click this button to disable the From hour and To hour fields. The hour plan spans across the whole 24 hours.

2. Weekly Plan

This area can be used to select the week days during which the scenario is executed.

3. Yearly Period

Period – click this button to activate the fields From Date and To Date, where it is possible to specify the scenario validity time interval.


Always - click this button to disable the From Date and To Date fields. In this case the scenario will always be active.



NOTE: The object cannot be dropped into the **Execute** field

- **Hour object**

If the object is dropped into the **When it happens** or **Stop if it happens** fields, the following mask will open, where it will be possible to set the scenario start time.

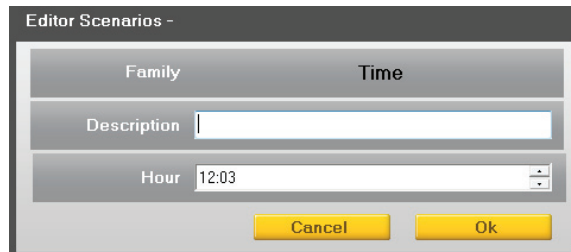


The 'Editor Scenarios -' dialog box for the Hour object. It has a title bar 'Editor Scenarios -'. Below it are two tabs: 'Family' and 'Time'. The 'Time' tab is selected. It contains a 'Description' text field, an 'Hour' spinner field set to '12:03', and 'Cancel' and 'Ok' buttons at the bottom.



NOTE: The object cannot be dropped into the **Only if** and **Execute** fields.

- **Delay object**

This object specifies a time delay before a new action is performed.

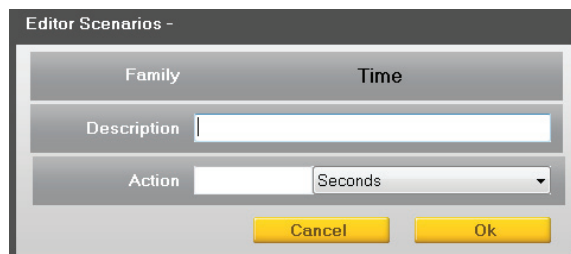


The 'Editor Scenarios -' dialog box for the Delay object. It has a title bar 'Editor Scenarios -'. Below it are two tabs: 'Family' and 'Time'. The 'Time' tab is selected. It contains a 'Description' text field, an 'Action' dropdown menu set to 'Seconds', and 'Cancel' and 'Ok' buttons at the bottom.



NOTE: The object can only be dropped into the **Execute** field.

- **Random delay object**

This object specifies a time delay before a new action is performed

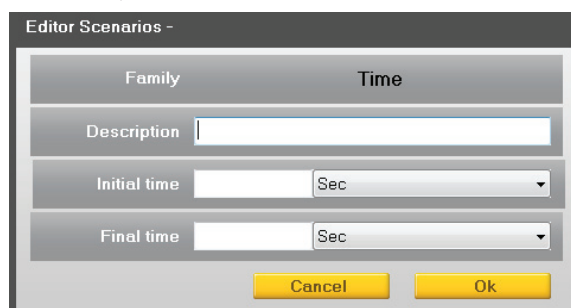


The 'Editor Scenarios -' dialog box for the Random delay object. It has a title bar 'Editor Scenarios -'. Below it are two tabs: 'Family' and 'Time'. The 'Time' tab is selected. It contains a 'Description' text field, an 'Initial time' spinner field set to 'Sec', and a 'Final time' spinner field set to 'Sec'. 'Cancel' and 'Ok' buttons are at the bottom.



NOTE: The object can only be dropped into the **Execute** field.

- **Astronomic clock object**


This Object specifies a time condition (Sunrise, Sunset, Day, or Night) to which the execution of a new scenario is linked to. It can only be dropped into the **“When it happens”**, **“Stop if it happens”**, **“Only if”** fields.

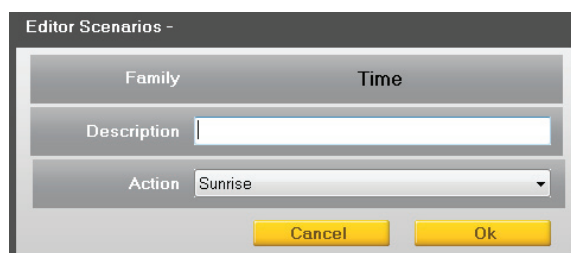

The 'Editor Scenarios -' dialog box for the Astronomic clock object. It has a title bar 'Editor Scenarios -'. Below it are two tabs: 'Family' and 'Time'. The 'Time' tab is selected. It contains a 'Description' text field, an 'Action' dropdown menu set to 'Sunrise', and 'Cancel' and 'Ok' buttons at the bottom.

6.6.6. Auxiliary channels Family

This family identifies an object consisting of ON and OFF controls managed on one of the 9 auxiliary channels.

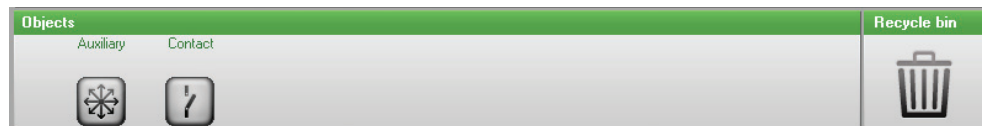

Configuration mask for the **Auxiliary** object

The screenshot shows a dialog box titled 'Editor Scenarios -'. It has a 'Family' dropdown set to 'Auxiliary channels'. Below it is a 'Description' text field. Then there is an 'Action' dropdown set to 'AUX OFF'. Below that is an 'Object' dropdown set to 'Auxiliary 1'. At the bottom right are 'Cancel' and 'Ok' buttons.

- **Family** - family the object belongs to
- **Description** - object description
- **Action** - action performed by the object
- **Object** - auxiliary channel

Configuration mask for the **Contact** object

The screenshot shows a dialog box titled 'Editor Scenarios -'. It has a 'Family' dropdown set to 'Auxiliary channels'. Below it is a 'Description' text field. Then there is an 'Action' dropdown set to 'ON'. Below that is an 'Object' dropdown set to 'Contact 1'. At the bottom right are 'Cancel' and 'Ok' buttons.

- **Family** - family the object belongs to
- **Description** - object description
- **Action** - action performed by the object (opening – OFF / closing – ON)
- **Object** - object address



NOTE: the **contact** object cannot be dropped into the **Execute** field.

6.6.7. Special Controls Family

This family allows to place in the **Execute** field the Lock/Unlock object, which action refers to a specific system actuator that can be locked in the current status.



Configuration mask

 The image shows a dialog box titled 'Editor Scenarios -'. It contains several fields for configuration:


- Family:** Special controls
- Description:** A text input field.
- Action:** A dropdown menu with 'Lock' selected.
- Object:** A dropdown menu with 'Actuator 0-1' selected.
- Level:** A dropdown menu with 'Private riser' selected.
- Interface:** A text input field.

 At the bottom right, there are 'Cancel' and 'Ok' buttons.

- **Family** - family the object belongs to
- **Description** - object description
- **Action** - action performed by the object
- **Object** - actuator address
- **Level** - system level
- **Interface** - interface address; Only enabled when Local BUS level is selected

6.6.8. Lighting technology Family

The **Zone** object is used to control the Lighting Management zones.

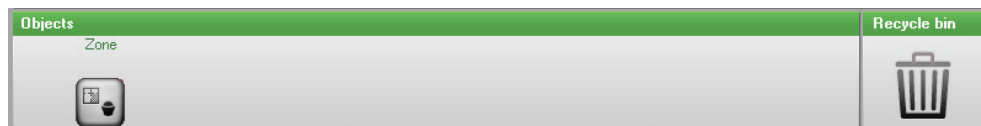

Configuration mask

 The image shows a dialog box titled 'Editor Scenarios -'. It contains several fields for configuration:

- Family:** Lighting
- Description:** A text input field.
- Action:** A dropdown menu with 'STOP up to X o'clock' selected.
- Object:** A dropdown menu with 'Zone 1' selected.
- Time (hh:mm:ss):** A time selection field with three spinners showing '0', '0', and '1'.

 At the bottom right, there are 'Cancel' and 'Ok' buttons.




NOTE: the Zone object can only be dropped into the Execute field

- **Family** - family the object belongs to
- **Description** - object description
- **Action** - action performed by the object
- **Object** - zone
- **Time** - action duration/expiry time. It depends on the selected action. The field is not active if Automatic mode is selected in the Action field

6.6.9. Variable Family

This family can be used to perform scenarios based on the status of two types of logic variables: a counter and a Boolean variable.

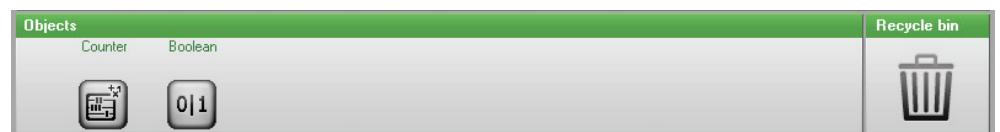

- **Counter object**

Editor Scenarios -

Family	Variables
Description	
Action	Variable value
Object	Counter 1
If value	>=
Value	0
Cancel Ok	

- **Family** – family the object belongs to
- **Description** – object description
- **Action** – action performed by the object
- **Object** – identification number of the counter on the system
- **If value/Value** – condition on the value of the counter

- **Boolean object**


Editor Scenarios -

Family	Variables
Description	
Action	True
Object	Boolean 1
Cancel Ok	

- **Family** – family the object belongs to
- **Description** – object description
- **Action** – Boolean variable value (true or false)
- **Object** – identification number of the variable on the system


6.7 Entry fields

6.7.1. When it happens

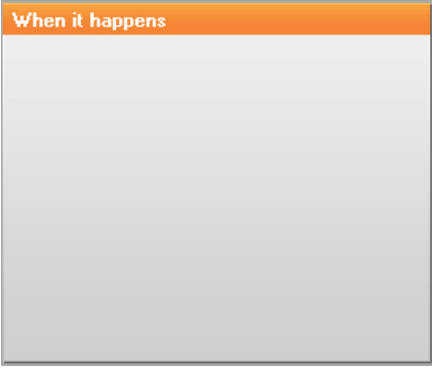A rectangular box representing an entry field. It has an orange header bar at the top with the text "When it happens" in white. The main body of the box is light gray with a subtle gradient and a thin black border.


In this field it is possible to define the event **that will activate the scenario**. Several events can be included. In this case, they will be linked to each other by an OR logic. This means that the scenario will activate if one OR the other event occurs.

6.7.2. Stop if it happens

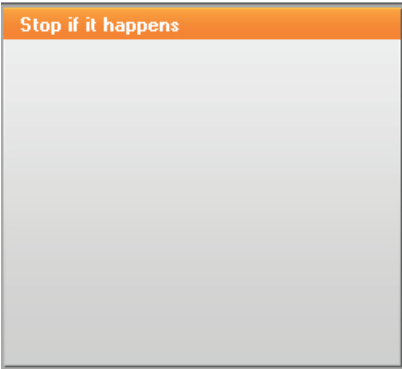A rectangular box representing an entry field. It has an orange header bar at the top with the text "Stop if it happens" in white. The main body of the box is light gray with a subtle gradient and a thin black border.

In this field it is possible to define the **event that will stop the execution of the scenario**. As for the previous field, in case of several events, these will be linked to each other by an OR logic. This means that the scenario can be stopped by one OR another event.


6.7.3. Only if

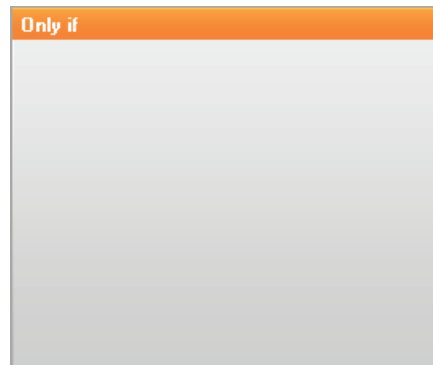

In this field it is possible to define one or more **events that will condition the execution of the scenario**.

The scenario will only be executed if the events included in this field have occurred. If several events are present, they must be linked to each other by an OR, or an AND logic operator.

- **OR - AND operators**
- If two or more objects are entered in the Only if field, the  will appear between them. Double click this icon to open a set up window, where the link between the two objects can be set:
- If **AND** is selected, both conditions defined by the objects must occur for the scenario to activate
- If **OR** is selected, it is only necessary for one condition to occur

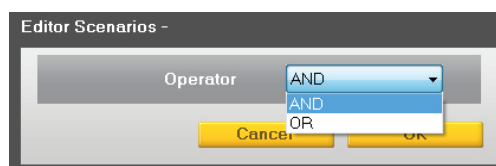

6.7.4. Execute



This field is used to define **the action to be performed by the activated scenario**.

The scenario will perform the actions in the order they are included in the field.

To place an object between two already existing ones, just drag and drop it between them (a vertical bar will appear, showing the drop position).

6.8 Repeat Action



Tick this box to keep repeating the scenario: once all the actions included in the **Execute** field have been completed, the scenario will be executed again from the beginning

6.9 Execute at device restart



Tick this box to set the system to restart the scenario that was being executed before disconnection of BMNE500, should the device be disconnected and need restarting.

7. Download and Upload project

Once the project configuration procedure has been completed, the file must be saved in the working directory, and then sent to the BMNE500 device (Download); it is also possible to receive the configuration file from the device (Upload) to perform checks/changes.


7.1 Download

To perform the configuration download on an individual device click the Send icon  in the BMNE500 list




To download the configuration on several devices proceed as follows:

- tick the devices to configure before performing the download operation
- From the Tool menus select Send

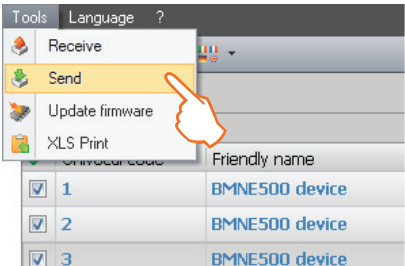


The following window will appear, where the user will be prompted to select the date and time to set on the device.

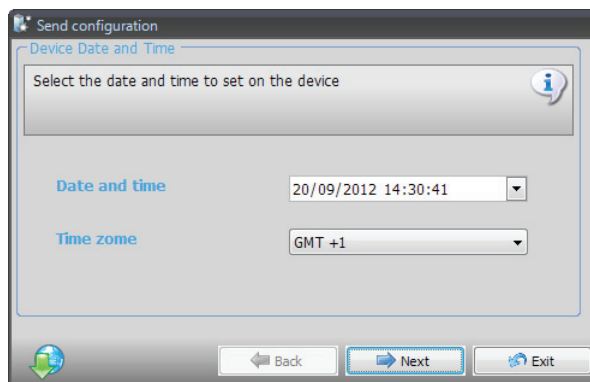

Click **Next** to continue.

A new window will open, for the selection of the mode of connection to the device.

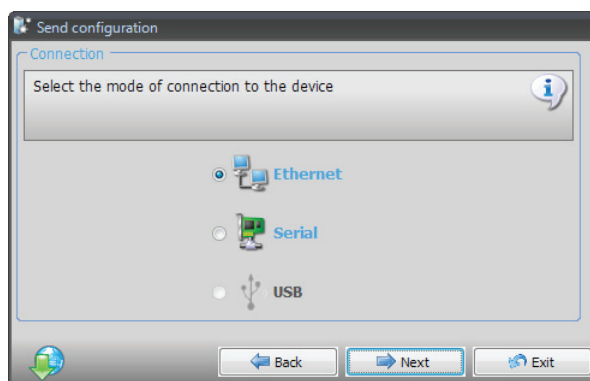


NOTE: If the configuration is to be downloaded only on one device, it will be possible to select either the Ethernet or the Serial connection. If the configuration is to be downloaded on several devices, the Ethernet connection will be used. Communication with the devices for which the Open Password or the Mac Address has not been set will not be established.

Select the system connection mode among the ones available and click **Next**.

- Ethernet mode

If Ethernet mode is selected a window will open, prompting the user to enter the device network address and the Open Password that can be found in the BMNE500 list.

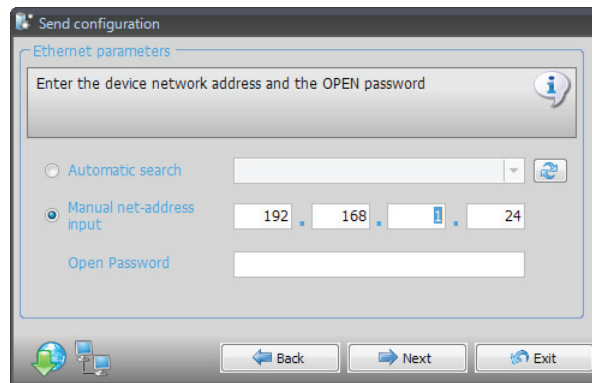


NOTE: If the device network address is not known, it can be found using the **automatic search** function.

Click **Next** to continue.

- Serial Mode


If Serial connection is selected, a window opens, prompting the user to select the serial port the device is connected to.

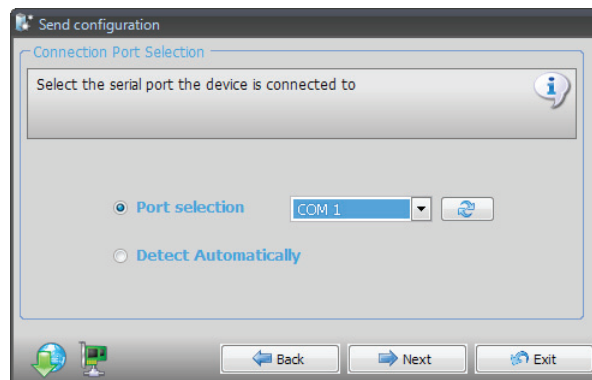

NOTE: If the device serial port is not known, it can be found using the **Detect Automatically** function.

Click **Next** to continue.

In both cases the following window will then appear:

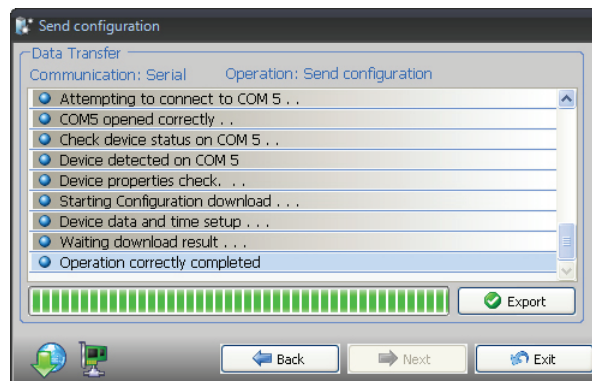

Click **Exit** to continue


7.2 Upload

To upload the configuration on a single device click the Receive icon  in the BMNE500 list.



To upload the configuration on several devices proceed as follows:

- tick the devices to configure before performing the upload operation
- From the tools menu select Receive

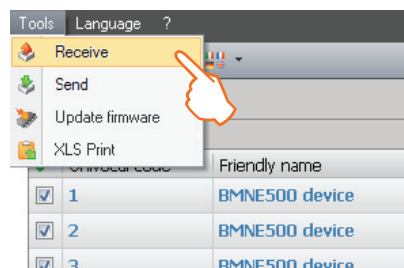


A new window will open, for the selection of the mode of connection to the device.

Select the system connection mode among the ones available and click **Next**.



NOTE: If the configuration is to be uploaded only to one device, it will be possible to select either the Ethernet or the Serial connection. If the configuration is to be uploaded to several devices, only the Ethernet connection will be used. Communication with the devices for which the Open Password or the Mac Address has not been set will not be established.

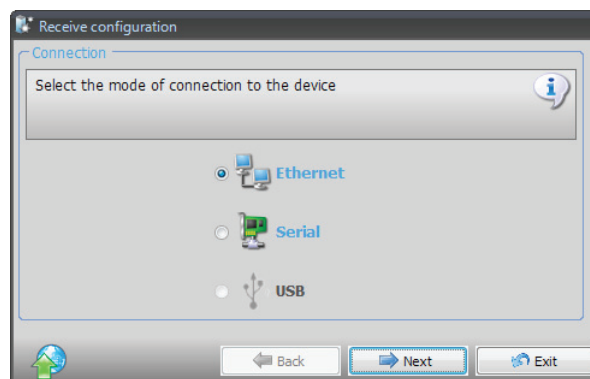

- **Ethernet mode**

If Ethernet mode is selected a window will open, prompting the user to enter the device network address and the Open Password that can be found in the BMNE500 list.

The screenshot shows a window titled 'Receive configuration' with a tab labeled 'Ethernet parameters'. Inside the window, there is a text box with the instruction 'Enter the device network address and the OPEN password'. Below this, there are two radio buttons: 'Automatic search' and 'Manual net-address input'. The 'Manual net-address input' option is selected. To the right of these radio buttons are four input fields for the IP address, with the first two containing '192' and '168', and the last one containing '24'. Below the IP fields is a text box for the 'Open Password'. At the bottom of the window, there are three buttons: 'Back', 'Next', and 'Exit'. A small icon of a computer and a globe is located at the bottom left of the window.



NOTE: If the device network address is not known, it can be found using the **Automatic search** function.

Click **Next** to continue.

- **Serial Mode**

If Serial connection is selected, a window opens, prompting the user to select the serial port the device is connected to.


The screenshot shows a window titled 'Receive configuration' with a tab labeled 'Connection Port Selection'. Inside the window, there is a text box with the instruction 'Select the serial port the device is connected to'. Below this, there are two radio buttons: 'Port selection' and 'Detect Automatically'. The 'Port selection' option is selected. To the right of these radio buttons is a dropdown menu showing 'COM 1'. Below the dropdown menu is a button with a refresh icon. At the bottom of the window, there are three buttons: 'Back', 'Next', and 'Exit'. A small icon of a computer and a globe is located at the bottom left of the window.



NOTE: If the device serial port is not known, it can be found using the **Detect automatically** function.

Click **Next** to continue.

In both cases the following window will then appear

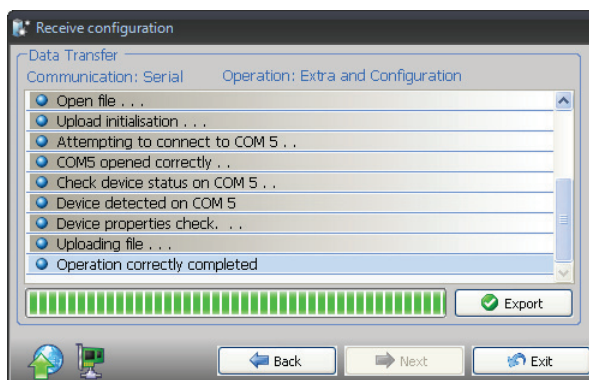

Click **Exit** to continue


7.3 Firmware update




NOTE: Before updating the gateway firmware from version 1.x to version 2.x the reading of the current configuration from the device, its saving and, at the end of the update procedure, the forwarding of the configuration to the machine will be necessary.

This function can be used to update the BMNE500 firmware using the revisions published by BTicino.


This operation can only be activated using the icon  in the BMNE500 list.

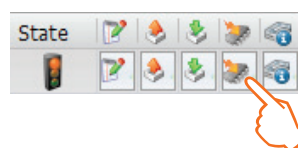

or selecting the Update Firmware function from the Tools menu

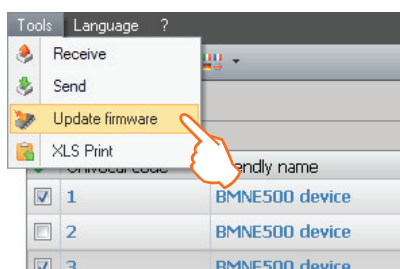


The following window will open, for the selection of the firmware file to update

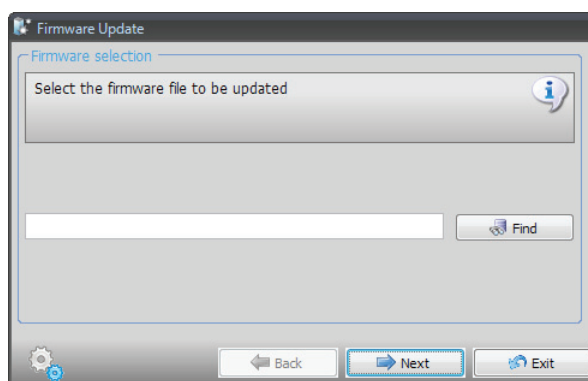

Click **Next** to continue.


A new window will open, for the selection of the mode of connection to the device.

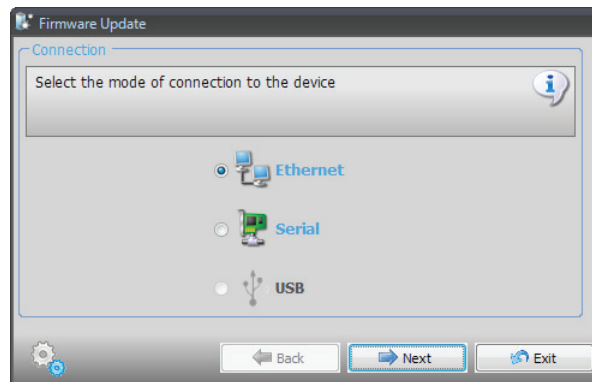

Select the system connection mode among the ones available, and click **Next**.

- **Ethernet mode**

If Ethernet mode is selected a window will open, prompting the user to enter the device network address and the Open Password that can be found in the BMNE500 list.

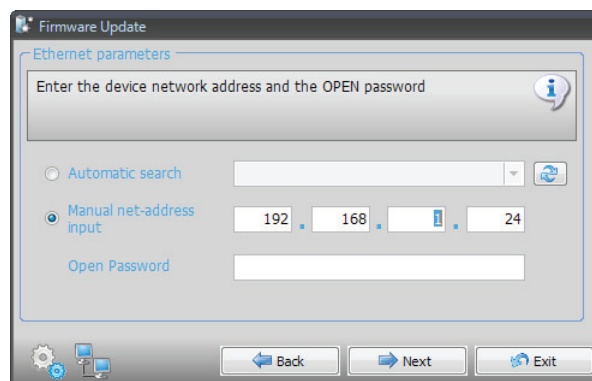


NOTE: If the device network address is not known, it can be found using the **Automatic search** function.

Click **Next** to continue.

- **Serial Mode**


If Serial connection is selected, a window opens, prompting the user to select the serial port the device is connected to.

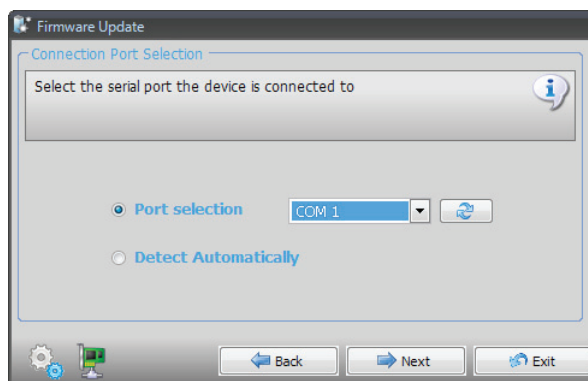

NOTE: If the device serial port is not known, it can be found using the **Detect automatically** function.

Click **Next** to continue.

In both cases the following window will then appear:

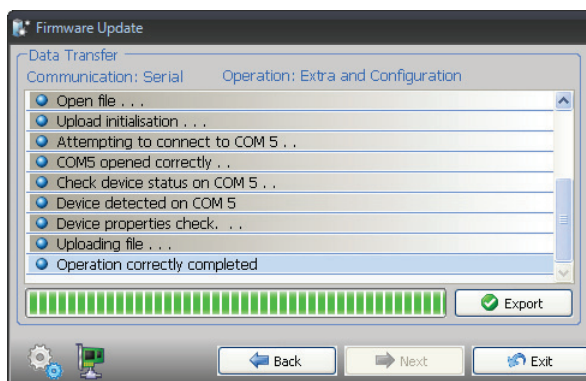

Click **Exit** to continue.

BTicino SpA

Via Messina, 38
20154 Milano - Italy
www.bticino.com