



Session 5: OMA & MEL

Date: 04 September 2020

Prepared by: wael Mohamed MFD

OMA

Company Authority

Operations Manual (OM) is issued under the authority of the Chief Operating Officer of Gulf Air, who has authorized its use by all staff of the Operations department.

The administration of Operations Manual is the responsibility of the Director Flight Operations (DFO)

OMA COVER, CONTROLE, LEP & APPROVAL

Regulatory Authority

The Operations Manual is the principle document governing the conduct of Gulf Air flight operations.




All references to the "Authority" contained in the manuals shall be deemed to refer to "Bahrain Civil Aviation Affairs".


OMA COVER, CONTROLE, LEP & APPROVAL

Regulatory Requirements

The content of the Operations Manual complies with:

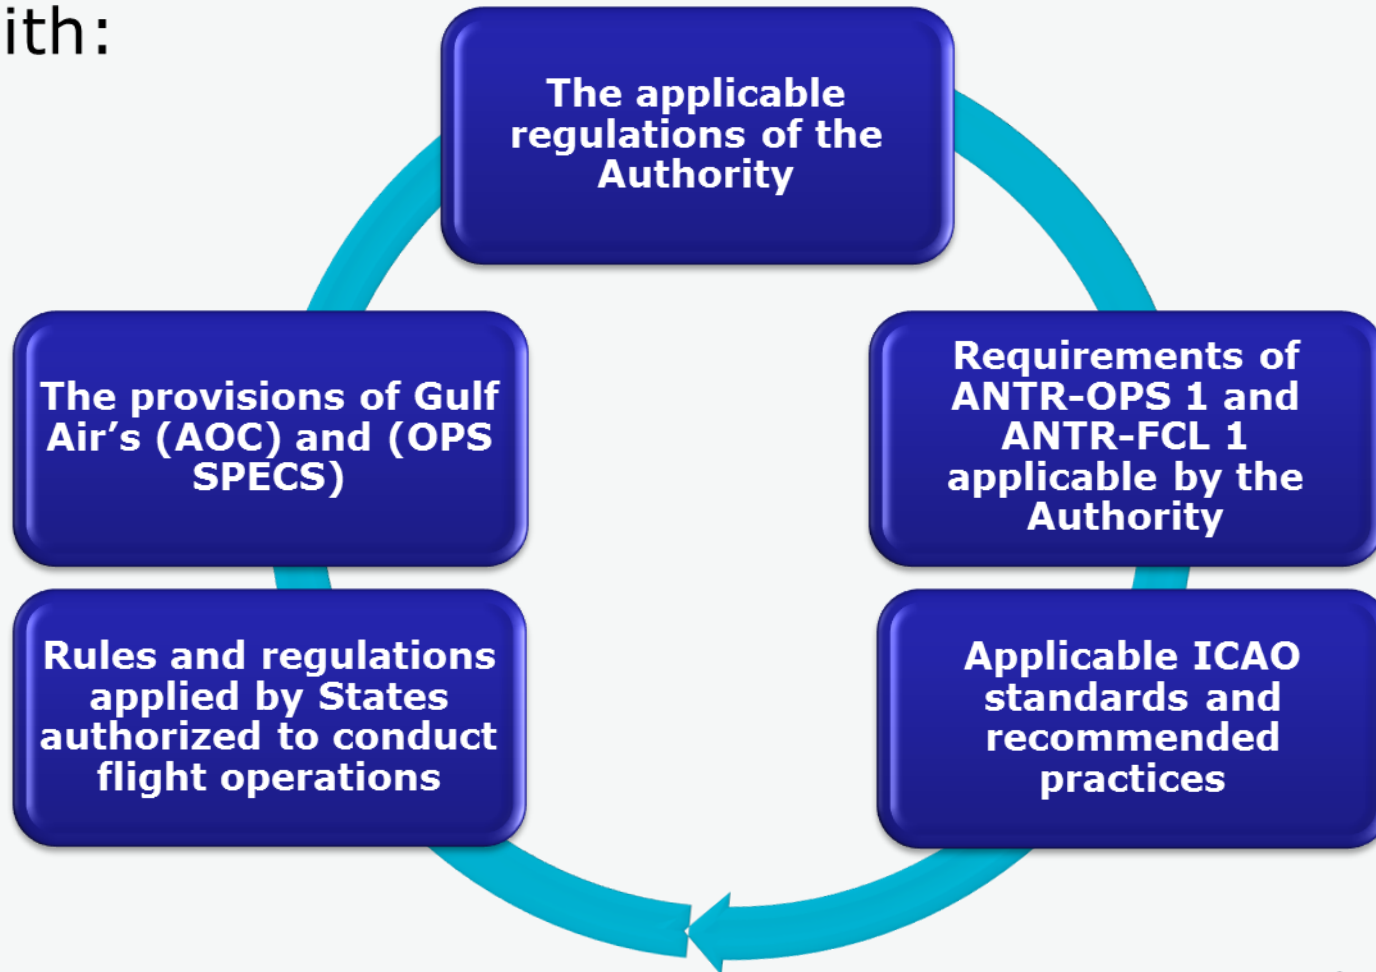

Gulf Air Operations Manual System

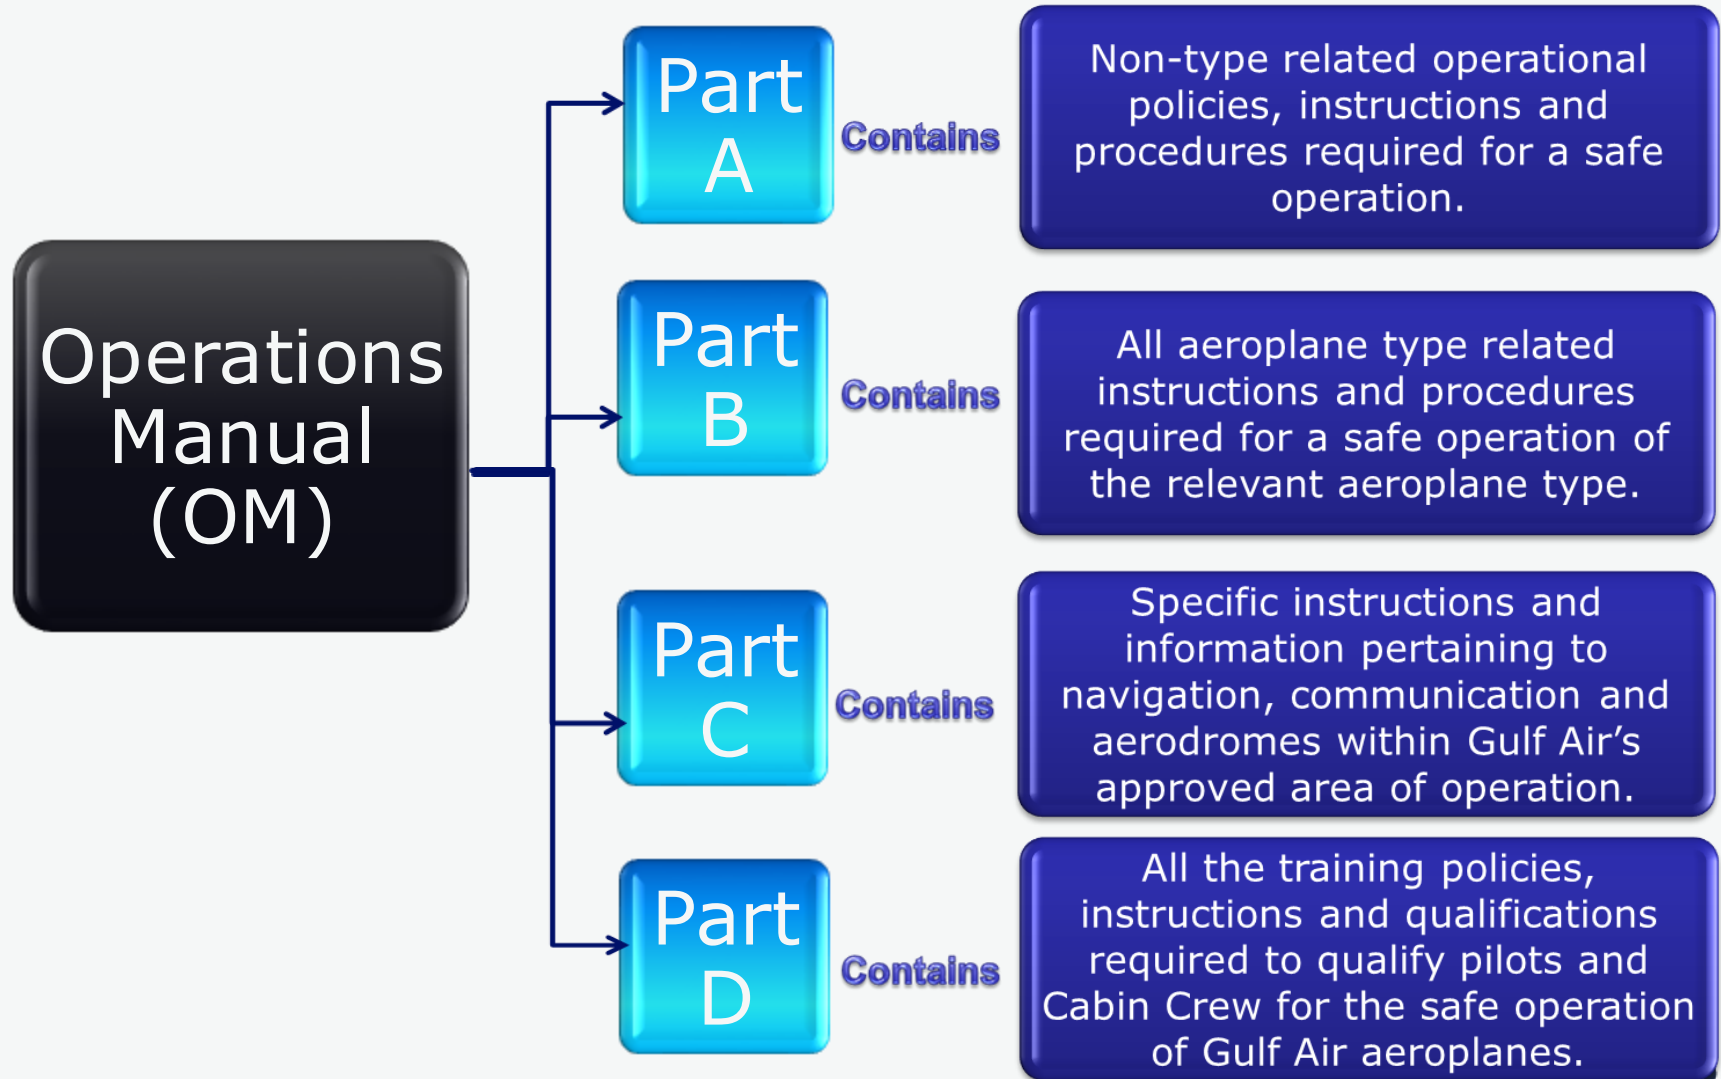

Operations Manual Part-A

Part A - General/Basic Flight Operations Manual (OMA)

ANTR OPS 1.1045, APPENDIX 1 TO 1.1045

OMA contains the non-type related operational policies, instructions and procedures required for a safe operation.

It details the duties and responsibilities of all ground and flight operations personnel and their interrelationship with the operation as a whole.

Operations Manual Part-A

Airport Operating Minimums (AOM)

AIRPORT OPERATING MINIMUM (AOM) policy is contained in OMA, Section 8.1.3. The OM is the master document and should be thoroughly read and understood. Gulf Air flights are to be carried out using instrument Flight Rules, and any Visual Flights Rules need approval from BCAA through DFO.

Gulf Air's method of determining the airport minima are approved by BCAA.

Factors affecting minima are:

- Aeroplane Capability (Flight Manual)
- State Operating Minima (Minima established by local CAA authority)
- Operator's Minima (BCAA requirement)
- Crew Minima (Qualification & experience)

Operations Manual Part-A

OMA Content

0 - ADMINISTRATION AND CONTROL OF OPERATIONS MANUAL

ANTR OPS 1.005

The Operations Manual is the principle document governing the conduct of Gulf Air flight operations. All references to “the Authority” contained herein shall be deemed to refer to the Ministry of Transportation, Civil Aviation Affairs of the Kingdom of Bahrain.

The content of the Operations Manual complies with:

1. The applicable regulations of the Authority;
2. Applicable ICAO/IATA standards and recommended practices;
3. Additional rules and regulations applied by States within which Gulf Air is authorized to conduct flight operations; and
4. The provisions of Gulf Air’s Air Operator Certificate (AOC) and Operations Specifications (OPS SPECS), as issued and approved by the Authority.

Operations Manual Part-A

OMA Content

1 - ORGANISATION AND RESPONSIBILITIES TABLE OF CONTENT.

2 - OPERATIONAL CONTROL AND SUPERVISION TABLE OF CONTENTS.

ANTR OPS 1.195

The Company has appointed managers whose organizational position, responsibilities and duties are described in Chapter 1 of this manual. These responsibilities and duties include those, which are specific to operational control and supervision.

3- QUALITY MANAGEMENT SYSTEM.

Operations Manual Part-A

OMA Content

4 - CREW COMPOSITION

ANTR OPS 1.940 (a) (1)(2)(3)

For any flight, the number and composition of the flight crew must never be less than the number required by the AOM or the AFM. This minimum number may be increased by the terms of Chapter 7. Any such increase then becomes the required minimum for Company operations,

For normal operations, all Gulf Air airplanes require a minimum of two (2) pilots consisting of the Commander and the Co-pilot.

All flight crew must hold applicable and valid licenses issued by the Authority and be suitably qualified and competent to conduct the duties assigned to them.

Operations Manual Part-A

OMA Content

5 - QUALIFICATION REQUIREMENTS

This chapter contains a description of the required licenses, ratings, qualifications (e.g., for route and aerodrome), experience, courses, training, checking and recency for operations personnel to conduct their duties.

The minimum qualifications, experience and evaluation requirements for flight and Cabin Crew training, checking and supervisory personnel are detailed in the Training Manual (OMD).

All crewmembers have to carry with them, the required licenses/certificates to exercise their duties, as detailed in OMA Ch. 8.1.12.

Although Gulf Air shall ensure that all crewmembers are qualified and current in accordance with the requirements before scheduling them for a duty by using the procedures of the rostering and the AIMS system, the crew members are also responsible for the renewal of their licenses/certificates.

Operations Manual Part-A

OMA Content

6- CREW HEALTH PRECAUTIONS

The prerequisite for a crew member to work for Gulf Air is the ability to maintain a Class 1 (or Class 2 if appropriate) aviation medical certificate issued by an Authority approved medical examiner.

Should a crew member notice that their own health and capability (including fatigue and/ or feeling unfit) or that of another crew member is affected to such a degree that the safe performance of the duty is not assured under the abovementioned aspects, they must no longer continue flight duty until the problem is resolved.

Operations Manual Part-A

OMA Content

7- FLIGHT AND DUTY TIME LIMITATIONS

ANTR OPS 1.1100

This chapter is applicable to all flight crew and cabin crew of Gulf Air.

The regulations are based on the Bahrain Civil Aviation Affairs' ANTR OPS 1 Subpart Q which specifies the limitations applicable to the flight time and flight duty periods for crew members.

These regulations also make provision for adequate rest periods to ensure that fatigue occurring either in a flight or successive flights, or accumulated over a period of time due to these and other tasks, does not endanger the safety of a flight.

Operations Manual Part-A

OMA Content

8. OPERATING PROCEDURES

8.1 FLIGHT PREPARATION INSTRUCTIONS

8.1.1- MINIMUM FLIGHT ALTITUDES TABLE OF CONTENTS

8.1.2 - CRITERIA FOR DETERMINING THE USABILITY OF AERODROMES TOC

8.1.3- METHODS FOR THE DETERMINATION OF AERODROME OPERATING MINIMA TOC.

8.1.4- EN-ROUTE OPERATING MINIMA FOR VFR FLIGHTS

8.1.5 - PRESENTATION & APPLICATION OF AERODROME & EN-ROUTE OPERATING MINIMA

Operations Manual Part-A

OMA Content

8. OPERATING PROCEDURES

8.2 GROUND HANDLING INSTRUCTIONS

8.2.1 - FUELLING/DEFUELING POLICY.

8.2.2 - AEROPLANE, PASSENGERS AND CARGO HANDLING PROCEDURES RELATED TO SAFETY TOC.

8.2.3- PROCEDURES FOR THE REFUSAL OF EMBARKATION.

8.2.4 - DE-ICING / ANTI-ICING ON THE GROUND.

Operations Manual Part-A

OMA Content

8. OPERATING PROCEDURES

8.3 FLIGHT PROCEDURES

8.3.1- VFR-IFR POLICY.

8.3.2 - NAVIGATION PROCEDURES.

8.3.3 - ALTIMETER SETTING PROCEDURES.

8.3.4- ALTITUDE ALERTING SYSTEM PROCEDURES.

8.3.5 - GROUND PROXIMITY WARNING SYSTEM (GPWS AND EGPWS) PROCEDURES TOC.

8.3.6 - POLICY AND PROCEDURES FOR THE USE OF TCAS/ ACAS.

Operations Manual Part-A

OMA Content

8. OPERATING PROCEDURES

8.3 FLIGHT PROCEDURES

8.3.1- VFR-IFR POLICY.

8.3.2 - NAVIGATION PROCEDURES.

8.3.3 - ALTIMETER SETTING PROCEDURES.

8.3.4- ALTITUDE ALERTING SYSTEM PROCEDURES.

8.3.5 - GROUND PROXIMITY WARNING SYSTEM (GPWS AND EGPWS) PROCEDURES TOC.

8.3.6 - POLICY AND PROCEDURES FOR THE USE OF TCAS/ ACAS.

Operations Manual Part-A

OMA Content

8. OPERATING PROCEDURES

8.3 FLIGHT PROCEDURES

8.3.7 - POLICY AND PROCEDURES FOR IN-FLIGHT FUEL MANAGEMENT TOC.

8.3.8 - ADVERSE AND POTENTIALLY HAZARDOUS ATMOSPHERIC CONDITIONS TOC.

8.3.9 - WAKE TURBULENCE.

8.3.10- CREW MEMBERS AT THEIR STATIONS.

8.3.11- USE OF SAFETY BELTS FOR CREW AND PASSENGERS.

8.3.12 - ADMISSION TO FLIGHT DECK.

Operations Manual Part-A

OMA Content

8. OPERATING PROCEDURES

8.3 FLIGHT PROCEDURES

8.3.13 - USE OF VACANT CREW SEATS.

8.3.14- INCAPACITATION OF CREW MEMBERS.

8.3.15 - CABIN SAFETY REQUIREMENTS.

8.3.16- PASSENGER BRIEFING PROCEDURES.

8.3.17- PROCEDURES FOR AEROPLANES OPERATED WHENEVER REQUIRED COSMIC OR SOLAR RADIATION DETECTION EQUIPMENT IS CARRIED.

8.3.18- USE OF AUTOPILOT AND AUTOTHROTTLE.

Operations Manual Part-A

OMA Content

8. OPERATING PROCEDURES

8.3 FLIGHT PROCEDURES

8.3.13 - USE OF VACANT CREW SEATS.

8.3.14- INCAPACITATION OF CREW MEMBERS.

8.3.15 - CABIN SAFETY REQUIREMENTS.

8.3.16- PASSENGER BRIEFING PROCEDURES.

8.3.17- PROCEDURES FOR AEROPLANES OPERATED WHENEVER REQUIRED COSMIC OR SOLAR RADIATION DETECTION EQUIPMENT IS CARRIED.

8.3.18- USE OF AUTOPILOT AND AUTOTHROTTLE.

Operations Manual Part-A

OMA Content

8. OPERATING PROCEDURES

8.4- ALL WEATHER OPERATIONS

8.5 - EDTO

8.6 - USE OF THE MINIMUM EQUIPMENT LIST (MEL) AND CONFIGURATION DEVIATION LIST (CDL).

8.7- NON REVENUE FLIGHTS.

8.8 - OXYGEN REQUIREMENTS.

8.9 - OPERATING PHILOSOPHY AND PROCEDURES.

Operations Manual Part-A

OMA Content

8. OPERATING PROCEDURES

8.1.6- INTERPRETATION OF METEOROLOGICAL INFORMATION.

8.1.7- DETERMINATION OF THE QUANTITIES OF FUEL AND OIL CARRIED TOC.

8.1.8- MASS AND CENTRE OF GRAVITY.

8.1.9- ATS FLIGHT PLAN.

8.1.10 - OPERATIONAL FLIGHT PLAN (OFP).

8.1.11- AEROPLANE TECHNICAL LOG.

8.1.12 - LIST OF DOCUMENTS, FORMS AND ADDITIONAL INFORMATION TO BE CARRIED ON BOARD TOC

Operations Manual Part-A

OMA Content

9 - DANGEROUS GOODS.

Certain articles or materials are defined as dangerous goods that are articles or substances capable of posing a significant risk to health, safety or property when transported by air. The carriage of such articles is regulated.

Rules concerning the safe transport of dangerous goods are defined by the ICAO in Annex 18 of the Chicago convention and in the "Technical Instructions for the safe transport of dangerous goods by air" DOC9284 AN/905 (Here after referred to as Technical Instructions).

In addition, IATA established the "Dangerous Goods Regulations" manual, in accordance with the ICAO rules and also defines the procedures and the instructions for the transport of dangerous goods.

Operations Manual Part-A

OMA Content

10- SECURITY PROCEDURES

The purpose of the Company security procedures is to protect the Company's interests, passengers, personnel and property from the effects of acts of unlawful interference including aircraft hijack or sabotage. Details of Gulf Air's security procedures are published in the Gulf Air Security Program Manual.

The relevant section of the GFSP have been included within this chapter for ease of reference. Copies of the GFSP are available from GF Security Department for reference.

Operations Manual Part-A

OMA Content

11- HANDLING, NOTIFYING AND REPORTING OF OCCURRENCES

This section details procedures that should be followed by the crew in the event of an Accident or Incident.

The objective of the occurrence reporting, data collection, investigation and analysis systems is to use the reported information to contribute to the improvement of aviation safety, and not to attribute, impose fines or take other enforcement actions.

Gulf Air operates within a Just Culture, that is, a safe, learning culture, where people are encouraged to report all safety incidents in the knowledge that this reporting will be used to continually improve safety by learning from such events, and where front line operators are not punished for actions, omissions, or decisions by them that are considered reasonable given their experience and training, but where negligence, willful violations, and malicious acts are not tolerated.

Operations Manual Part-A

OMA Content

12- RULES OF THE AIR TABLE OF CONTENTS

A full description of the Rules of the Air is contained in the OM Part C, Jeppesen Route Manual.

Operations Manual Part-A

OMA Content

13- LEASING

Whereas, the concept of aircraft leasing is straight forward the level of detail required is extremely complex and involved. Almost every department within the company will be affected to a greater or lesser degree.

This procedure is purposely restricted to those considerations that need to be taken into account by the Flight Operations Department whenever aeroplane leasing is considered.

The procedure is not exhaustive in its content. It is however intended that adherence to its content should help to ensure a regulated and coordinated progression towards a satisfactory lease agreement.

It will be found that each lease contemplated will have its own particular requirements and conditions and these may well produce the requirement to undertake research and action in areas other than discussed here.

MEL/CDL MANUALS

USE OF THE MINIMUM EQUIPMENT LIST (MEL) AND CONFIGURATION DEVIATION LIST (CDL)

MEL

The Minimum Equipment List (MEL) is a document established by Gulf Air and approved by the BCAA. The Gulf Air MEL is developed on the base of manufacturer's Master MEL (MMEL) and is customized by GFA. The MEL shall never be less restrictive than the MMEL.

B787-9 MEL is incorporated within the B787-9 Dispatch Deviation Guide (DDG).

As its name implies, the Minimum Equipment List (MEL) lists all the safety-related items for which revenue flights are permitted, even if the items are inoperative at departure. The MEL specifies the dispatch conditions:

the conditions to be fulfilled and the procedures to be performed, in order to permit the revenue flights to be flown with the inoperative item for a limited period of time. Furthermore, the MEL must take into account the area of operation including whether the aircraft is being dispatched from base or an outstation.

USE OF THE MINIMUM EQUIPMENT LIST (MEL) AND CONFIGURATION DEVIATION LIST (CDL)

CDL

The Configuration Deviation List (CDL) is a document approved by the Airworthiness Authority that originally certified the aircraft. The CDL is included in the Aeroplane Flight Manual.

B787-9 CDL is incorporated within the B787-9 Dispatch Deviation Guide (DDG).

The CDL lists the aircraft secondary airframes that may be missing for a particular operation and pictorially indicates areas of damage to the aircraft skin/structure that is considered acceptable for flight.

Any part not included in the list must be considered as necessary. It is important to repair the airplane at the first airport where repairs or replacements may reasonably be made, since additional malfunctions may require the aircraft to be taken out of service.

No more than one part or one combination of parts of one system may be missing, except otherwise specified. Parts of different systems may be simultaneously missing, unless otherwise specified in this list. Note that missing part may introduce performance penalties that are cumulative.

USE OF THE MINIMUM EQUIPMENT LIST (MEL) AND CONFIGURATION DEVIATION LIST (CDL)

Inoperative

In the MEL, any item is deemed “inoperative”, when it does not satisfactorily fulfill its intended function, regardless of the reason.

An item is deemed to be inoperative when:

1. It does not work at all, or
2. It does not ensure all functions for which it was designed, or
3. It does not consistently work within its designed operating limits or tolerances, or
4. It is requested to be considered inoperative by the dispatch conditions, or
5. It is not available due to a primary failure.

USE OF THE MINIMUM EQUIPMENT LIST (MEL) AND CONFIGURATION DEVIATION LIST (CDL)

Limits on Application

Whilst operating within the limits of the MEL / CDL, the aircraft is deemed to be airworthy and capable of operating within the specified environment.

The MEL is not intended to provide for continued operation of an aircraft for an unlimited period of time.

Repairs should be made as soon as possible within the time limit imposed by rectification Intervals.

'Maintenance base' means Bahrain if the aircraft is on scheduled maintenance input or is scheduled for a ground time at Bahrain line for more than 12 hours.

USE OF THE MINIMUM EQUIPMENT LIST (MEL) AND CONFIGURATION DEVIATION LIST (CDL)

Categorization of MEL defects and Rectification Intervals

All the MEL defects have been categorized and Rectification Intervals (A, B, C, and D) have been introduced in accordance with definitions of EASA MMEL/MEL.

1. Category A: No standard interval is specified, however, items in this category shall be rectified in accordance with the conditions stated in the Remarks column (5) of the MEL. Where a time period is specified it shall start at 00:01 on the calendar day following the day of discovery. Where a time period is specified in number of flights or flight hours, it shall start at the beginning of the first flight following the discovery of the failure.
2. Category B. Items in this category shall be rectified within three (3) consecutive calendar days, excluding the day of discovery. For example, if it was recorded at 10 a.m. on January 26th, the three days interval would begin at midnight the 26th and end at midnight the 29th.
3. Category C. Items in this category shall be rectified within ten (10) consecutive calendar days, excluding the day of discovery. For example, if it was recorded at 10a.m. on January 26th, the 10 days interval would begin at midnight the 26th and end at midnight February 5th.
4. Category D. Items in this category shall be rectified within ninety (90) consecutive calendar days, excluding the day of discovery.

USE OF THE MINIMUM EQUIPMENT LIST (MEL) AND CONFIGURATION DEVIATION LIST (CDL)

Extension of Rectification Intervals

Dispatch of the aircraft is not allowed after expiry of the Rectification Interval

specified in the MEL unless the Rectification Interval is extended in accordance with the procedures in the Technical Information Manual.

Although the concept of Rectification Interval does not exist for the CDL, all CDL items are not allowed to be left un-rectified for an unlimited period of time as stated in the Flight Manual. However, a specific time limit is required in the dispatch condition itself for some items. It is company policy that every effort be made to maintain 100 % serviceability with rectification being initiated at the first practical opportunity.

USE OF THE MINIMUM EQUIPMENT LIST (MEL) AND CONFIGURATION DEVIATION LIST (CDL)

Processing of Defects

An aircraft must not be cleared for flight with a defect cleared under the MEL/CDL unless the defect has been processed in accordance with the provisions of the MEL/CDL. The procedures may be technical and/or operational, and may involve re-configurations, forced shut offs, additional testing, etc.

Operational Procedures

An aircraft must not be dispatched with multiple MEL / CDL items inoperative without the Commander having first determined that any interface or interrelationship between inoperative systems or components will not result in degradation safety level and/or undue increase in crew workload.



The exposure to additional failures during continued operation with inoperative systems or components must also be considered in determining that an acceptable level of safety is maintained.

The MEL provides the flight crew with readily available, clear and concise directions on how they shall proceed with the operating procedures, symbolized by (O).

When applicable, operational flight plan, takeoff and landing performance and fuel requirement penalties must be taken into account due to inoperative equipment or component.

MEL formats

MEL available both in electronic version as an application on the iPad or as in PDF format on the iPad and the shear point.

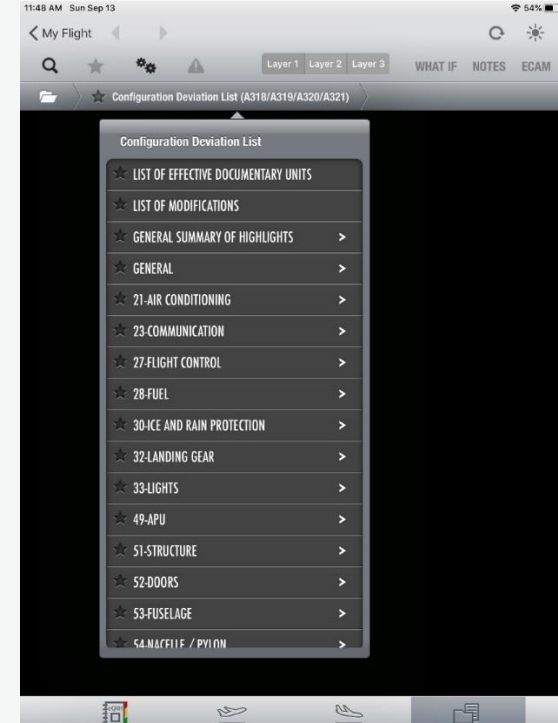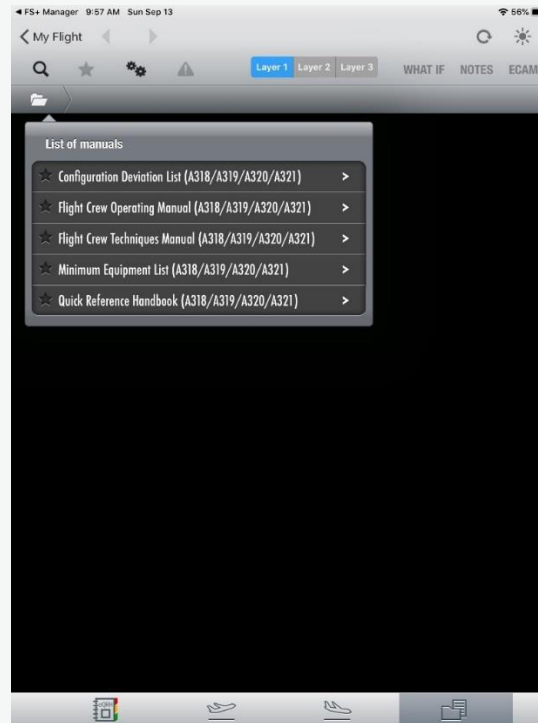

"MEL Entries" Chapter Layouts

In this chapter The specific chapter is shown at the top of the page

 A330/A340 MINIMUM EQUIPMENT LIST	MEL ENTRIES 21 - AIR CONDITIONING	
ECAM Alert: AIR HOT AIR SYS 1(2) FAULT		
Applicable to: A9C-KF		
AIRCRAFT STATUS	CONDITION OF DISPATCH	
NIL	Refer to Item 21-63-02 Hot Air Valve	
ECAM Alert: AIR PACK 1+2 FAULT		
Applicable to: A9C-KF		
AIRCRAFT STATUS	CONDITION OF DISPATCH	
NIL	Refer to Item 21-52-01D Air Conditioning Pack	
ECAM Alert: AIR PACK 1(2) OFF		
Applicable to: A9C-KF		
AIRCRAFT STATUS	CONDITION OF DISPATCH	
NIL	Refer to Item 21-52-01 Air Conditioning Pack	
ECAM Alert: AIR PACK 1(2) OVHT		
Applicable to: A9C-KF		
AIRCRAFT STATUS	CONDITION OF DISPATCH	
NIL	Refer to Item 21-52-01A Air Conditioning Pack or Refer to Item 21-52-01B Air Conditioning Pack	

Use “MEL Entries” Chapter

 A330/A340 MINIMUM EQUIPMENT LIST		MEL ENTRIES PRELIMINARY PAGES - TABLE OF CONTENTS
ME-PLP PRELIMINARY PAGES		
TABLE OF CONTENTS		V12
ME-21 Air Conditioning		
AIR HOT AIR SYS 1(2) FAULT		1/6
AIR PACK 1+2 FAULT		1/6
AIR PACK 1(2) OFF		1/6
AIR PACK 1(2) ONHT		1/6
AIR PACK 1(2) REQUL FAULT		2/6
AIR PACK VALVE 1(2) FAULT		2/6
CAB PRESS EXCESS CAB ALT		3/6
CAB PRESS FWD(AFT) OVR NOT OPEN		3/6
CAB PRESS L/D ELEV FAULT		3/6
CAB PRESS L/D DIFF PR		3/6
CAB PRESS SAFETY VALVE OPEN		3/6
CAB PRESS SYS 1(2)(1+2) FAULT		4/6
COND BRAND FAN FAULT -R		4/6
COND BRAND VENT FAULT -R		4/6
COND BULK CRG DUCT ONHT		4/6
COND BULK CRG HEAT FAULT		5/6
COND BULK CRG ISOL FAULT		5/6
COND BULK CRG VENT FAULT		5/6
COND CAB REST ISOL FAULT -R		5/6
COND DUCT ONHT		5/6
COND LAV-CAL VENT FAULT		6/6
COND L(R) L(R) CAB VENT FAULT		6/6
COND VENT SYS FAULT		6/6
COND ZONE CTUR 1(2) FAULT		6/6
COND ZONE REQUL FAULT		7/6
VENT BLOWING FAULT		7/6
VENT EXTRACT FAULT		7/6
VENT OVRD VALVE FAULT		7/6
VENT PACK BAY VENT FAULT		8/6
GFA A330/A340 FLEET		ME-PLP-TOC P 1/12
MEL		05 JUL 10

- This “MEL Entries” Chapter contains all the ECAM alerts (Warnings and Cautions).
- The ECAM alerts or MEL entries **are** classified by ATA chapters

Use “MEL Entries” Chapter

 A330/A340 MINIMUM EQUIPMENT LIST	MEL ENTRIES 21 - AIR CONDITIONING
ECAM Alert: AIR HOT AIR SYS 1(2) FAULT	
Applicable to: A9C-KF	
AIRCRAFT STATUS	CONDITION OF DISPATCH
NIL	Refer to Item 21-63-03 Hot Air Valve

One MEL entry corresponds to one ECAM alert

Each entry is made of two columns:

Use "MEL Entries" Chapter

- The "Aircraft Status" column may contain:

 الخطوط الجوية GULF AIR A330/A340 MINIMUM EQUIPMENT LIST	MEL ENTRIES 21 - AIR CONDITIONING
ECAM Alert: AIR HOT AIR SYS 1(2) FAULT	
Applicable to: A9C-KF	
AIRCRAFT STATUS	CONDITION OF DISPATCH
NIL	Refer to Item 21-63-03 Hot Air Valve

NIL :

Systematically present when no additional information is needed for dispatch

ECAM Alert: AIR PACK 1(2) REGUL FAULT	
Applicable to: A9C-KF	
AIRCRAFT STATUS	CONDITION OF DISPATCH
If associated with the PACK 1(2) IN BY PASS MODE subtitle	Refer to Item 21-52-01C Air Conditioning Pack
If associated with the PACK 1(2) RAM DOOR CLOSED subtitle	Refer to Item 21-53-04 Air Conditioning Ram Air Inlet/Outlet Flap (Door)
If there is no subtitle	Refer to Item 21-52-01A Air Conditioning Pack or Refer to Item 21-52-01B Air Conditioning Pack or Refer to Item 21-53-01 Pack Controller Channel or Refer to Item 21-53-03 Pack Temperature Control Valve

One or more **Status :**
Depending on the aircraft status, only one condition of dispatch for a single ECAM alert must be apply

Use “MEL Entries” Chapter

The “Aircraft Status” column may contain:

ECAM Alert: FUEL EXCESS AFT CG	
Applicable to: A9C-KF	
AIRCRAFT STATUS	CONDITION OF DISPATCH
Actual alert	Not applicable
False alert	Refer to Item 28-09-01 FUEL EXCESS AFT CG Alert

Actual / False Caution

“Actual” means that the system is actually failed.

“False” means that only the monitoring function is failed, but the system is operative

Use “MEL Entries” Chapter

- The “Condition of Dispatch” column may contain:

ECAM Alert: FUEL FCMC 1 FAULT	
Applicable to: A9C-KF	
AIRCRAFT STATUS	CONDITION OF DISPATCH
NIL	NO DISPATCH

NO DISPATCH:

The aircraft cannot be dispatched

ECAM Alert: FUEL EXCESS AFT CG	
Applicable to: A9C-KF	
AIRCRAFT STATUS	CONDITION OF DISPATCH
Actual alert	Not applicable Refer to Item 28-09-01 FUEL EXCESS AFT CG Alert
False alert	

Not Applicable:

The MMEL is not the appropriate document to be consulted

"MEL Items" Chapter Organization

- Within this chapter, the MMEL Items are arranged by ATA system, then by ATA sub-system
- Use "MEL Items" Chapter

MEL Item

MEL ITEMS PRELIMINARY PAGES - TABLE OF CONTENTS	
MI-PLP PRELIMINARY PAGES	
TABLE OF CONTENTS	104
MI-00 Preamble	
MI-00-01 Approval Reference	102
MI-21 Air Conditioning	
MI-21-01 Overhead Panels	
MI-21-01-01 AIR Overhead Panel	
21-01-01-01 PACK 1/2 p-w FAULT light	102
21-01-01-02 PACK 1/2 p-w OFF light	102
21-01-01-03 HOT AIR 1/2 p-w FAULT light	102
21-01-01-04 HOT AIR 1/2 p-w OFF light	102
MI-21-01-02 CABIN PRESS Overhead Panel	
21-01-02-01 CABIN PRESS MODE SEL p-w FAULT light	102
MI-21-01-03 CARGO AIR COND Overhead Panel	
21-01-03-05 BULK ISOL VALVES p-w FAULT light	102
21-01-03-06 BULK ISOL VALVES p-w OFF light	102
MI-21-01-04 VENTILATION Overhead Panel	
21-01-04-01 CAB FANS p-w OFF light	102
21-01-04-02 EXTRACT p-w FAULT light	102
21-01-04-03 EXTRACT p-w OFF light	102
MI-21-07 Indications on SD pages	
MI-21-07-01 Indications on the BLEED SD page	
21-07-01-01 Pack Flow Indication on the BLEED SD page	102
21-07-01-02 Pack Temperature Control Valve Position Indication on the BLEED SD page	102
21-07-01-03 Emergency Ram Air Inlet Indication on the BLEED SD page	102
MI-21-07-02 Indications on the CAB PRESS SD page	
21-07-02-01 EXTRACT Valve Indication on the CAB PRESS SD page	102
21-07-02-02 Pack Flow Indication on the CAB PRESS SD page	102
MI-21-07-03 Indications on the COND SD page	
21-07-03-01 FAN Indication on the COND SD page	102
21-07-03-02 Cockpit and Cabin Temperature Control Indication on the COND SD page	102
DFA A330/A340 FLEET	
MEL	
MI-PLP-TOCP 104	
05 JUL 10	

“MEL Items” Chapter Organization

- Numbering Rules for Sub-Chapters and MEL Items Use “MEL Items” Chapter Each ATA system contains a set of ATA sub-systems.

The numbering rules of those “level 2” ATA sub-systems are:

XX-00 : contains the MEL items dealing with maintenance messages on the “STATUS SD page”

XX-01 : contains the MEL items dealing with Cockpit Overhead Panel

XX-05 : contains the MEL items dealing with PFD indications

XX-06 : contains the MEL items dealing with ND indications

XX-07 : contains the MEL items dealing with SD pages indications

XX-08 : contains the MEL items dealing with EWD indications

XX-09 : contains the MEL items dealing with ECAM alert

XX-10 to 95 : follow the ATA sub-system classification

"MEL Items" Chapter Organization

- *Numbering Rules for Sub-Chapters and MEL Items*

ATA System MI-21

Use "MEL Items" Chapter

Level 1 – ATA subsystem

MI-21-01

(Overhead Panels)

Level 2 – Sub-Chapter

MI-21-01-01

MEL ITEMS PRELIMINARY PAGES - TABLE OF CONTENTS	
MI-PLP PRELIMINARY PAGES	
TABLE OF CONTENTS	104
MI-00 Preamble	
MI-00-01 Approval Reference	102
MI-21 Air Conditioning	
MI-21-01 Overhead Panels	
MI-21-01-01 AIR Overhead Panel	
21-01-01-01 PACK 1/2 pack FAULT light	102
21-01-01-02 PACK 1/2 pack OFF light	102
21-01-01-03 HOT AIR 1/2 pack FAULT light	102
21-01-01-04 HOT AIR 1/2 pack OFF light	102
MI-21-01-02 CABIN PRESS Overhead Panel	
21-01-02-01 CABIN PRESS MODE SEL pack FAULT light	102
MI-21-01-03 CARGO AIR COND Overhead Panel	
21-01-03-01 BULK SEL VALVES pack FAULT light	102
21-01-03-02 BULK SEL VALVES pack OFF light	102
MI-21-01-04 VENTILATION Overhead Panel	
21-01-04-01 CAB FANS pack OFF light	102
21-01-04-02 EXTRACT pack FAULT light	102
21-01-04-03 EXTRACT pack OFF light	102
MI-21-07 Indications on SD pages	
MI-21-07-01 Indications on the BLEED SD page	
21-07-01-01 Pack Flow Indication on the BLEED SD page	102
21-07-01-02 Pack Temperature Control Valve Position Indication on the BLEED SD page	102
21-07-01-03 Emergency Ram Air Inlet Indication on the BLEED SD page	102
MI-21-07-02 Indications on the CAB PRESS SD page	
21-07-02-01 EXTRACT Valve Indication on the CAB PRESS SD page	102
21-07-02-02 Pack Flow Indication on the CAB PRESS SD page	102
MI-21-07-03 Indications on the COND SD page	
21-07-03-01 FAN Indication on the COND SD page	102
21-07-03-02 Cooling and Cabin Temperature Control Indications on the COND SD page	102
OFA A330/A340 FLEET	MI-PLP-TOC P 1/04
MEL	05 JUL 10


MEL Item

CDL

- Operation of the aircraft without certain secondary airframe and engine parts is possible if indicated in this MCDL.
- Any part not included in this list must be considered as necessary.
- CDL MANUAL origination and layout follows the same principle as MEL.
- It is important to repair the aircraft at the first airport where repairs or replacements may reasonably be made, since additional malfunctions may require the airplane to be taken out of service.

CDL: ILLUSTRATION PAGE

AIRBUS A320-214 CONFIGURATION DEVIATION LIST	FLIGHT CONTROL FLAP TRACK MOVEABLE FAIRING PIVOT COVER
ILLUSTRATION FLAP TRACK MOVEABLE FAIRING PIVOT COVER	
Applicable to: ALL	

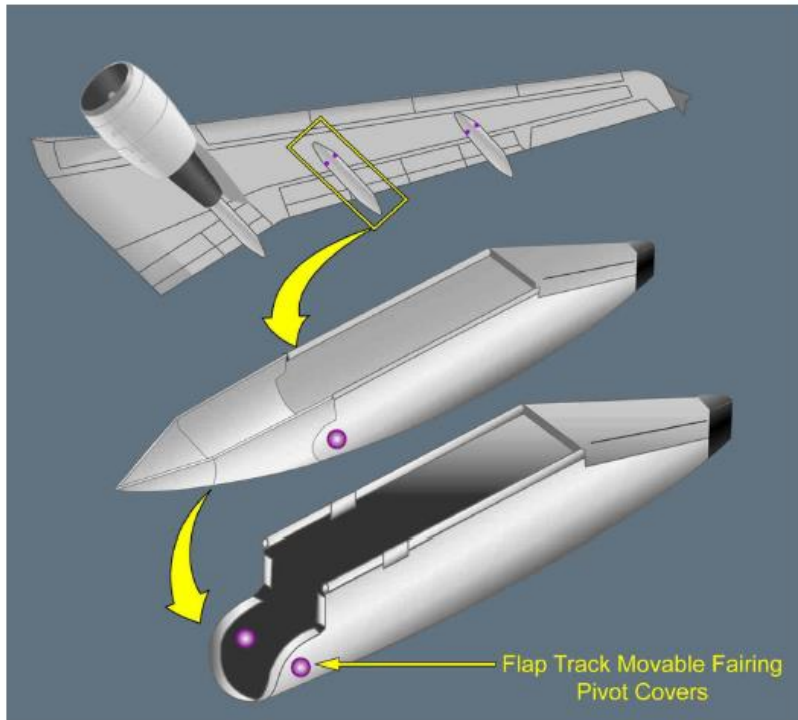

For dispatch conditions: Refer to 27-16 Flap Track Moveable Fairing Pivot Cover

The illustration page shows the picture of the part and the it's location on the airplane.

CDL

 A320-214 CONFIGURATION DEVIATION LIST		COMMUNICATION STATIC DISCHARGER	
23-01		Static Discharger	
Applicable to: ALL			
23-01 STATIC DISCHARGER		Quantity installed -	

20 % of static dischargers may be missing or inoperative on each the following areas:

- RH wing
- LH wing
- Vertical stabilizer (including rudder)
- RH horizontal stabilizer (including elevator)
- LH horizontal stabilizer (including elevator).

Note:

1. If a static discharger is missing or inoperative on a flap track fairing, it is recommended to replace it before flight.
2. When combined with the case of dispatch with a wing tip fence missing, 20 % of the remaining static dischargers of the affected wing are allowed to be inoperative or missing (Refer to 57-01 Wing Tip Fence).

Refer to CDL-23-01 Illustration Static Discharger

- The sign “-” in “Quantity installed” column indicates that the quantity is variable.
- **THE DISPATCH CONDITION OF THE ITEM** specifies the conditions the aircraft can be dispatched .
- Letter (m) associated to an item indicates that some maintenance action is necessary to permit flight with these parts missing.

B787 MEL/CDL

B787 MEL/CDL

The MEL is divided into five sections as follows:


SECTION 0 - GENERAL

SECTION 1 - EICAS MESSAGES

This section provides a cross reference between EICAS messages and MEL items which may provide dispatch relief. The EICAS message list is in alphabetic order and includes all of the current EICAS messages. The EICAS messages applicable to an operator's airplane and the description of the condition or fault indicated by the messages can be found in the operator's Fault Isolation Manual (FIM).

SECTION 2 - MEL

This section contains items from the EASA MMEL. For ease of use, page numbering uses the MEL item number as follows:

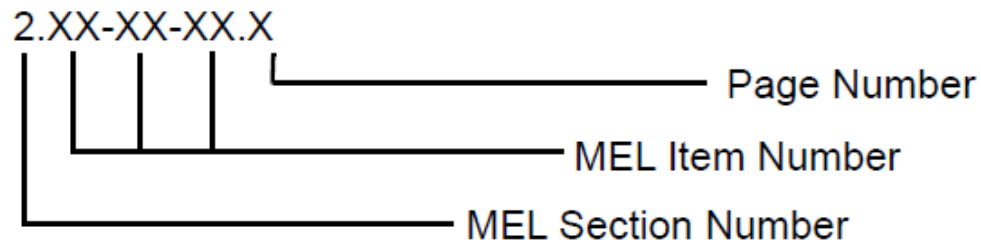

For example, MEL item 21-51-01 would be found on page 2.21-51-01.1 in Section 2.

B787 MEL/CDL

Each MEL item is separated by a double horizontal line, with each applicable sub item separated by a single horizontal line. The EASA MMEL entry is separated from applicable procedures by a dashed horizontal line.

When appropriate, Boeing suggested procedures follow the MMEL item.

MMEL items may not have suggested procedures for the following reasons:


- The procedure is obvious.
- Boeing is not aware of any procedural effects.
- The procedure must be supplied by the airline as it depends on operating requirements or a unique configuration.
- The MMEL does not require that a procedure be established.

The EASA MMEL Definitions and Preamble have been reprinted in this section.

B787 MEL/CDL

SECTION 3 - CDL

This section contains all items from the AFM Appendix CDL. For ease of use, page numbering uses the CDL item number as follows:

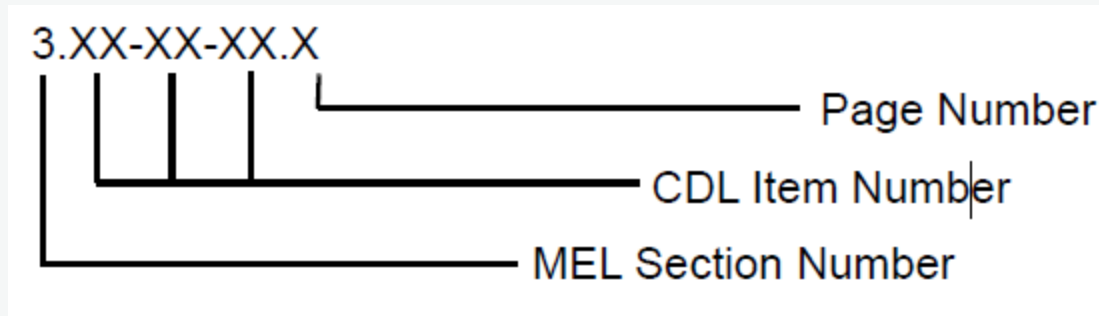


For example, CDL item 52-11-01 would be found on page 3.52-11-01.1 in Section 3. When appropriate, illustrations, system effects and performance adjustments follow the CDL item. The CDL General Limitations information has been printed in this section.

B787 MEL/CDL

SECTION 3 - CDL

This section contains all items from the AFM Appendix CDL. For ease of use, page numbering uses the CDL item number as follows:

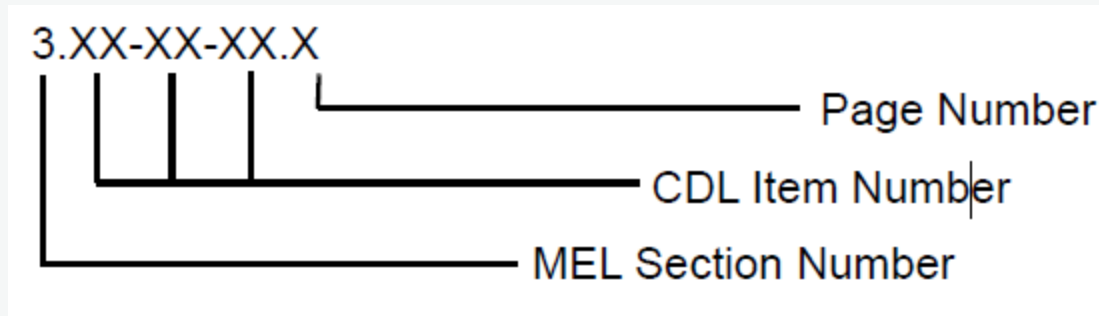

For example, CDL item 52-11-01 would be found on page 3.52-11-01.1 in Section 3. When appropriate, illustrations, system effects and performance adjustments follow the CDL item. The CDL General Limitations information has been printed in this section.

SECTION 4 - MISCELLANEOUS

This section contains information on the use of annotations for airplane model applicability.

Thank you.

