



Session 4: Aircraft Performance

Date: 04 September 2020

Prepared by: wael Mohamed MFD

No. of Slides:

Onboard Performance Tool (OPT)

Boeing B787-9

Aircraft Performance


The Onboard Performance Tool application

is intended to be an easy-to-use interface that produces airplane performance related data for B787-9 flight crew. It is an iPad-based application and makes use of an intuitive user interface.

Aircraft Performance

OPT Takeoff Calculation

This screen may be used to illustrate five different features; the Settings menu, the Action menu, the Tool bar, the Popover buttons, and Tab bar. In the screen, the airport search button, ARPT SEARCH, is an example of a pushbutton.

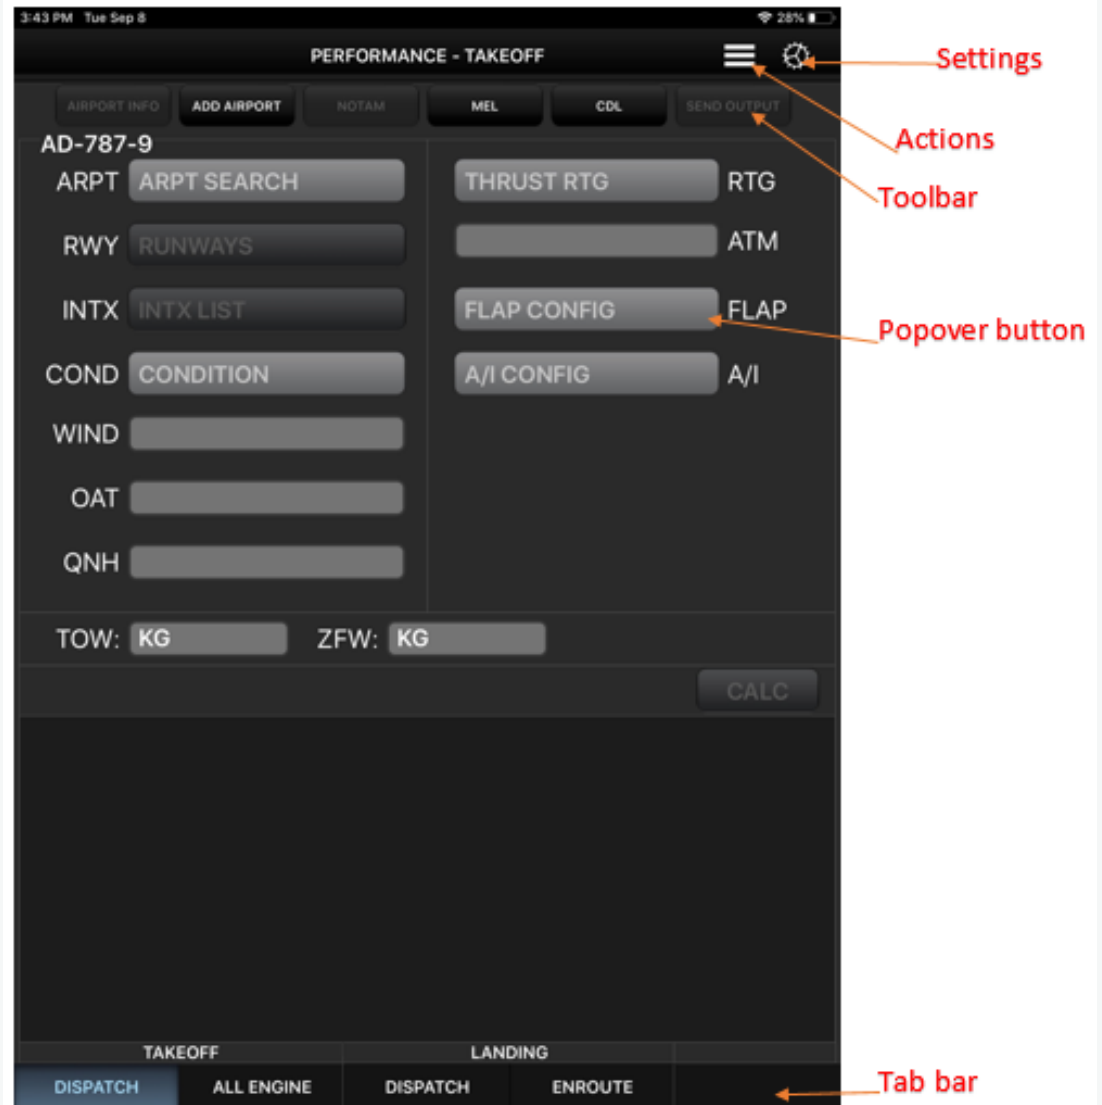

Aircraft Performance


OPT Takeoff Calculation

When the Settings icon is selected, the following menu is displayed:

This menu allows the user to view the current software and database as well as adjust the brightness level using the control at the bottom of the menu.



To the left of the Settings menu is the Action menu. This menu, shown below, allows the user to load updates that have been staged to the cloud by the administrator, reset the inputs for the currently selected tail number.

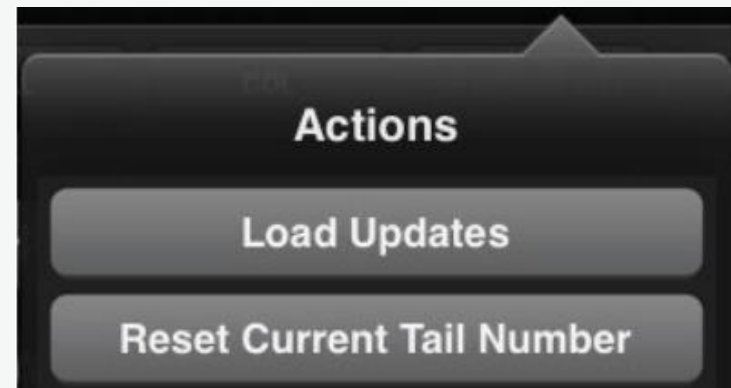

Aircraft Performance

OPT Takeoff Calculation


The Tab Bar at the bottom of the iPad screen is used to switch between the five main OPT functions – Takeoff-Dispatch, Takeoff-All, Landing-Dispatch, Landing-Enroute.

The Tool Bar near the top of the screen is used to display various context sensitive actions that are dependent upon which screen is currently being displayed. Selecting any of the items, when active, will display a new screen to make further selections or input. Items on the tool bar which have a name that has been “grayed-out” are inactive and not available for selection.

Aircraft Performance

OPT Takeoff Calculation

Popovers are denoted by a gray button with rounded corners and a name to describe its function. When selected, the application will display a menu to make a selection from. For instance, the THRUST RTG popover button will display a menu similar to this when selected:

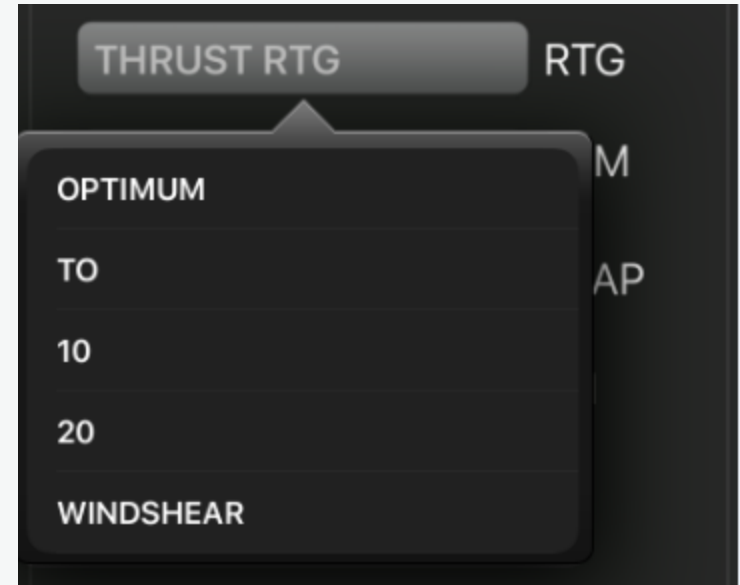

Simply selecting any of the items will enable that menu option, while touching somewhere off the menu will cause the menu to close with no change made to the current selection.

Aircraft Performance

OPT Takeoff Calculation

Runway/Atmospheric Inputs

In this window you load:

1. The airport
2. RWY selected.
3. RWY intersection.
4. the RWY condition:
 - a. DRY/WET/COMPACT SNOW/
 - b. below conditions require to mention the the depth in mm or inches:
STANDING WATER/SLUSH/DRY SNOW/
WET SNOW
5. WIND: Wind could be entered as published in weather report 240/10 or with + headwind or – tailwind 5 HW or -5 TW, Also it will read the crosswind.

WIND 050/04 KT
(3 HW/2 XW) KT

5. Temperature (OAT)
6. QNH reading

The screenshot shows a dark-themed user interface for aircraft performance calculations. At the top, there are three buttons: 'AIRPORT INFO', 'ADD AIRPORT', and 'NOTAM'. Below these, the airport identifier 'AD-787-9' is displayed. The main section contains several input fields, each with a label and a corresponding button or text entry area: 'ARPT' with an 'ARPT SEARCH' button, 'RWY' with a 'RUNWAYS' button, 'INTX' with an 'INTX LIST' button, 'COND' with a 'CONDITION' button, 'WIND' with a text entry field, 'OAT' with a text entry field, and 'QNH' with a text entry field.

Aircraft Performance

OPT Takeoff Calculation

Airplane Configuration Inputs

THRUST RATING (RTG)

There are selectable derates available, TO (TOGA) , 10, 20, Optimum and Windshear selections. OPTIMUM and WINDSHEAR selections will compute the best combination of fixed derate plus assumed temperature for maximum derate or special windshear guidance information respectively.

Other airplane configuration and policy inputs:

- ATM (Assumed Temp)
- Anti-ice
- FLAP

Aircraft Performance

OPT Takeoff Calculation

Takeoff Weight

In Takeoff Weight edit box, the crew should enter the actual, or planned weight for the flight. The weight may be entered in either ones or thousands (102500 or 102.5). After this is done, and the Calculate button becomes active and is selected, OPT will then calculate both max thrust and assumed temperature information based on this weight.

If the weight that is input exceeds the performance limited maximum takeoff weight, OPT will display an error message during the calculation process to alert the user and display the maximum weight.

Aircraft Performance

OPT Takeoff Calculation

Assumed Temp

The **ATM** edit box also becomes active when a value is entered into the Takeoff Weight box.

For this input, any number entered that is less than or equal to zero will be treated as a decrement from the maximum possible assumed temperature that the Onboard Performance Tool calculates.

For a maximum assumed temperature calculation the user may input either a zero or "MAX". Any number greater than zero will be considered to be a user desired assumed temperature. If the user-input temperature is greater than the maximum allowable, an error message will be displayed to alert the user. The user should then either input a new assumed temperature or let the Onboard Performance Tool calculate the maximum assumed temperature as described above.

Aircraft Performance

Calculating Takeoff Performance

Once all of the required inputs are made and the CALC button becomes active (blue), the user may perform a calculation by selecting this button.

If the takeoff weight has not been input, then OPT will calculate the maximum takeoff weight for each of the runways/intersections selected.

In the example shown below, there are 5 sets of results returned. Those are denoted by the 5 small dots below the output which are circled. The user should “swipe” to scroll across and reveal more pages. The current runway/intersection being viewed is displayed on the left side of the output.

PERFORMANCE - TAKEOFF

AIRPORT INFO

ADD AIRPORT

NOTAM

MEL

CDL

SEND OUTPUT

N777A

ARPT

RTG

OPTIMUM

RTG

RWY

ATM

MAX

INTX

FLAP

OPTIMUM

COND

A/C

AUTO

WIND

A/I

OFF

(1 TW/4 XW) KT

OAT

(73 F)

QNH

(29.85 IN HG)

1011.0 HPa

Takeoff Weight:

CG (%)

777-200/GE90-94B

CALC

FLAP

ACCEL HT

V1

20

800 ft AGL

VR

RWY / INTX

V2

16L

TOGW

TO

Vref30

265329 KG

104.0

Engine Failure Procedure: *** NO EMERGENCY TURN *** JUL-SEP 2017

TAKEOFF

LANDING

DISPATCH

ALL ENGINE

DISPATCH

ENROUTE

WEIGHT & BALANCE

Aircraft Performance

Calculating Takeoff Performance

For this example, the results shown are for the full length runway 16L, the optimum flap position (for max weight) is flaps 20, and full rated (TO) thrust was used.

If the planned takeoff weight has been entered in the Takeoff Weight edit box, then OPT will calculate all required parameters for both the maximum takeoff thrust and best assumed temperature cases. The example shown below includes several interesting features.

PERFORMANCE - TAKEOFF

AIRPORT INFO

ADD AIRPORT

NOTAM

MEL

CDL

SEND OUTPUT

N777A

ARPT

HJAA/NRT

OPTIMUM

RTG

RWY

16L

MAX

ATM

INTX

ALL

OPTIMUM

FLAP

COND

DRY

AUTO

A/C

WIND

059/4 KT

OFF

A/I

(1 TW/4 XW) KT

OAT

23 C

(73 F)

QNH

1011.0 HPa

(29.85 IN HG)

Takeoff Weight: KG

CG (%):

777-200/GE90-94B

CALC

FLAP

ACCEL HT

V1

20

800 ft AGL

VR

RWY / INTX

16L

V2

TOGW

TO

Vref30

265329 KG

104.0

• • • • •

Engine Failure Procedure: *** NO EMERGENCY TURN *** JUL-SEP 2017

TAKEOFF

LANDING

DISPATCH

ALL ENGINE

DISPATCH

ENROUTE

WEIGHT & BALANCE

Aircraft Performance

Calculating Takeoff Performance

The first, most noticeable feature, is the “ATM” watermark behind the output. This enables the user to quickly recognize which mode is being viewed.

To switch to the full thrust view, simply tap the FULL/ATM button just above the output section. In this example, a planned takeoff weight of 249600 kg has been entered.

PERFORMANCE - TAKEOFF

AIRPORT INFO

ADD AIRPORT

NOTAM

MEL

CDL

SEND OUTPUT

N777A

ARPT

RJAA / NRT

OPTIMUM

RTG

RWY

16L

MAX

ATM

INTX

ALL

OPTIMUM

FLAP

COND

DRY

AUTO

A/C

WIND

059/4 KT

OFF

A/I

(1 TW/4 XW) KT

OAT

23 C

(73 F)

QNH

1011.0 HPa

(29.85 IN HG)

Takeoff Weight:

249600 KG

CG (%):

16

777-200/GE90-94B

FULL

ATM

CALC

FLAP

20

ACCEL HT

800 ft AGL

V1

139 KT

RWY / INTX

16L

VR

142 KT

TOGW

249600 KG

D-TO

101.3

SEL TEMP

39 C

V2

149 KT

Vref30

151 KT

Engine Failure Procedure: *** NO EMERGENCY TURN *** JUL-SEP 2017

TAKEOFF

DISPATCH

ALL ENGINE

LANDING

DISPATCH

ENROUTE

WEIGHT & BALANCE

Aircraft Performance

Calculating Takeoff Performance

When the results became available after the calculation was done, they showed that an assumed temperature of 39 degrees Celsius was available if using the full length of the runway.

When viewing the results from the different intersections, however, the output shows that a point is reached where this is no more assumed temperature capability to use because the results for that intersection were too close to the performance limit of the airplane. That is shown with the following message:



PERFORMANCE - TAKEOFF

AIRPORT INFO

ADD AIRPORT

NOTAM

MEL

CDL

SEND OUTPUT

N777A

ARPT

RJAA/NRT

OPTIMUM

RTG

RWY

16L

MAX

ATM

INTX

ALL

OPTIMUM

FLAP

COND

DRY

AUTO

A/C

WIND

059/4 KT

OFF

A/I

(1 TW/4 XW) KT

OAT

23 C

(73 F)

QNH

1011.0 HPa

(29.85 IN HG)

Takeoff Weight:

249600 KG

CG (%):

16

777-200/GE90-94B

FULL

ATM

CALC

FLAP

20

ACCEL HT

800 ft AGL

V1

139 KT

RWY / INTX

16L

VR

142 KT

V2

149 KT

TOGW

249600 KG

D-TO

101.3

SEL TEMP

39 C

Vref30

151 KT

Engine Failure Procedure: *** NO EMERGENCY TURN *** JUL-SEP 2017

TAKEOFF

LANDING

DISPATCH

ALL ENGINE

DISPATCH

ENROUTE


WEIGHT & BALANCE

Aircraft Performance

Calculating Takeoff Performance

When results are initially displayed, OPT will display the ATM results for the first runway/intersection listed. In the example above, the ATM results for runway 08R are shown.

By swiping across the output area, one may display the results for the next runway, in either the ATM mode or the full thrust mode, as currently selected. In this example, because there are no valid results in either case, OPT will return the appropriate error message to further describe why there is no ATM available or no takeoff allowed. For instance, if the 16L/B2 output is selected, the following error message is displayed:

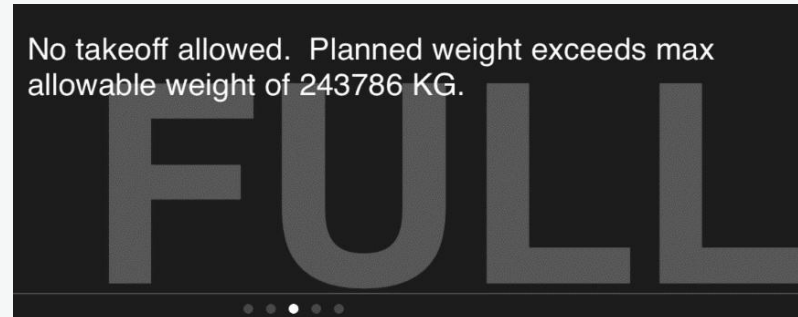


Note that this error message also displays the maximum weight which is allowed to help with a quick assessment of the problem.

Aircraft Performance

Calculating Takeoff Performance

When results are initially displayed, OPT will display the ATM results for the first runway/intersection listed. In the example above, the ATM results for runway 08R are how.

By swiping across the output area, one may display the results for the next runway, in either the ATM mode or the full thrust mode, as currently selected. In this example, because there are no valid results in either case, OPT will return the appropriate error message to further describe why there is no ATM available or no takeoff allowed. For instance, if the 16L/B2 output is selected, the following error message is displayed:

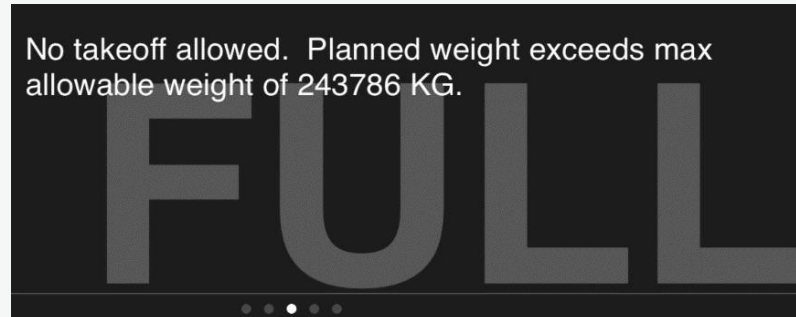

Note that this error message also displays the maximum weight which is allowed to help with a quick assessment of the problem.

Aircraft Performance

Using the Onboard Performance Tool for Takeoff - All Engine Gradient Checks

OPT will display two screens to calculate takeoff performance, Dispatch & All Engine.

It is presented by using the TAKEOFF – ALL ENGINE tab on the tab bar at the bottom. To display the TAKEOFF-ALL ENGINE page, which calculates all-engine climb capability following takeoff that includes distance-to-height or height-at-distance calculations the All Engine tab is selected, and a screen similar to that shown below appears.

PERFORMANCE - TAKEOFF - ALL ENGINE

AIRPORT INFO

ADD AIRPORT

NOTAM

MEL

CDL

SEND OUTPUT

777-300

ARPT

ARPT SEARCH

THRUST RTG

RTG

RWY

RUNWAYS

ATM

INTX

INTX LIST

FLAP CONFIG

FLAP

COND

CONDITION

A/C CONFIG

A/C

WIND

A/I CONFIG

A/I

OAT

SEL TEMP

QNH

Takeoff Weight: KG

CALC

Climbout Gradient Input

Climb to Alt (MSL)

or Distance

Cltbk Ht (AGL) or Flp 1500 FT

Accel Ht (AGL) 3000 FT

Engine Fail Alt (MSL)

or Distance

Results:

All Engine

Engine Out

Min Gradient:

Avg Gradient:

Altitude:

Altitude:

Distance:

Distance is measured from the start of takeoff roll

TAKEOFF

LANDING

DISPATCH

ALL ENGINE

DISPATCH

ENROUTE

WEIGHT & BALANCE

Aircraft Performance

Using the Onboard Performance Tool for Takeoff - All Engine Gradient Checks

The user can select inputs to perform calculations. However, we recommend that the user first performs a TAKEOFF – DISPATCH calculation and then visit the TAKEOFF – ALL ENGINE page, this way all values are automatically transferred from the takeoff calculation and the page might look something like that shown below.

PERFORMANCE - TAKEOFF - ALL ENGINE

AIRPORT INFO

ADD AIRPORT

NOTAM

MEL

CDL

SEND OUTPUT

777-300

ARPT

CYVR / CYR

TO

RTG

RWY

08L

41

ATM

INTX

FULL 08L

FLAPS 20

FLAP

COND

DRY

AUTO

A/C

WIND

0 KT

OFF

A/I

OAT

10 C

41

SEL TEMP

QNH

1013.0 HPa

(29.91 IN HG)

Takeoff Weight:

320000 KG

777-300ER/GE90-115BL

CALC

Climbout Gradient Input

Climb to Alt (MSL)

7500 FT

or Distance

Ctkb Ht (AGL) or Flp

1500 FT

Accel Ht (AGL)

3000 FT

Engine Fail Alt (MSL)

5000 FT

or Distance

Results:

All Engine

Engine Out

Min Gradient: 4.7%(283 ft/nm)

2.9%(175 ft/nm)

Avg Gradient: 9.0%(548 ft/nm)

5.6%(340 ft/nm)

Altitude: 7500 ft (MSL)

7500 ft (MSL)

Altitude: 7481 ft (AGL)

7481 ft (AGL)

Distance: 14.7 nm

22.9 nm

Distance is measured from the start of takeoff roll

TAKEOFF

LANDING

DISPATCH

ALL ENGINE

DISPATCH

ENROUTE

WEIGHT & BALANCE

Aircraft Performance

Using the Onboard Performance Tool for Takeoff - All Engine Gradient Checks

The All Engine gradient calculations also require additional inputs in the lower screen. For Climb to Alt (MSL) / or Distance, the user can only enter one or the other and this specifies the end of the profile. The Ctbk Ht (AGL) or Flap which is the thrust reduction altitude can be pre-populated by your Administrator or left blank for the crew to enter at runtime. The same applies to the Accel Ht (AGL) which is the All-Engine Acceleration Height.

PERFORMANCE - TAKEOFF - ALL ENGINE

AIRPORT INFO

ADD AIRPORT

NOTAM

MEL

CDL

SEND OUTPUT

777-300

ARPT

CYVR / CYR

TO

RTG

RWY

08L

41

ATM

INTX

FULL 08L

FLAPS 20

FLAP

COND

DRY

AUTO

A/C

WIND

0 KT

OFF

A/I

OAT

10 C

41

SEL TEMP

QNH

1013.0 HPa

(29.91 IN HG)

Takeoff Weight:

320000 KG

777-300ER/GE90-115BL

CALC

Climbout Gradient Input

Climb to Alt (MSL)

7500 FT

or Distance

Ctbk Ht (AGL) or Flap

1500 FT

Accel Ht (AGL)

3000 FT

Engine Fail Alt (MSL)

5000 FT

or Distance

Results:

All Engine

Engine Out

Min Gradient: 4.7%(283 ft/nm)

2.9%(175 ft/nm)

Avg Gradient: 9.0%(548 ft/nm)

5.6%(340 ft/nm)

Altitude: 7500 ft (MSL)

7500 ft (MSL)

Altitude: 7481 ft (AGL)

7481 ft (AGL)

Distance: 14.7 nm

22.9 nm

Distance is measured from the start of takeoff roll

TAKEOFF

LANDING

DISPATCH

ALL ENGINE

DISPATCH

ENROUTE

WEIGHT & BALANCE

Aircraft Performance

Using the Onboard Performance Tool for Takeoff - All Engine Gradient Checks

The results show the watermark indicating if the calculation was an assumed temperature calculation (ATM) or a FULL thrust calculation. The Minimum Gradient is the minimum value encountered from the 35 foot point until the end of the profile. The average gradient is the delta height / delta distance from 35 foot point to the end of the profile. The Altitude Mean Sea Level (MSL) and the Altitude (AGL) which is the altitude above the airfield elevation are also reported. Lastly, the distance to the end of the profile in nautical miles is reported which is measured from the start of the takeoff roll.

PERFORMANCE - TAKEOFF - ALL ENGINE

AIRPORT INFO

ADD AIRPORT

NOTAM

MEL

CDL

SEND OUTPUT

777-300

ARPT

CYVR / CYR

TD

RTG

RWY

08L

41

ATM

INTX

FULL 08L

FLAPS 20

FLAP

COND

DRY

AUTO

A/C

WIND

0 KT

OFF

A/I

OAT

10 C

41

SEL TEMP

QNH

1013.0 HPa

(29.91 IN HG)

Takeoff Weight: 320000 KG

777-300ER/GE90-115BL

CALC

Climbout Gradient Input

Climb to Alt (MSL) 7500 FT

or Distance

Ctkb Ht (AGL) or Flp 1500 FT

Accel Ht (AGL) 3000 FT

Engine Fail Alt (MSL) 5000 FT

or Distance

Results:

All Engine

Engine Out

Min Gradient: 4.7%(283 ft/nm)

2.9%(175 ft/nm)

Avg Gradient: 9.0%(548 ft/nm)

5.6% (340 ft/nm)

Altitude: 7500 ft (MSL)

7500 ft (MSL)

Altitude: 7481 ft (AGL)

7481 ft (AGL)

Distance: 14.7 nm

22.9 nm

Distance is measured from the start of takeoff roll

TAKEOFF

LANDING

DISPATCH

ALL ENGINE

DISPATCH

ENROUTE

WEIGHT & BALANCE

Aircraft Performance

Using the Onboard Performance Tool for Takeoff - All Engine Gradient Checks

the profiles created to calculate the minimum and average gradients assume all engines operating, minimum thrust, the first takeoff segment is using an end condition of Gear Up Speed = $V_2 + X$ (i.e. 20) at whatever takeoff rating was selected, the next segment to the cutback altitude or flap is done at the same takeoff rating chosen and the final acceleration segment is always done at maximum climb thrust. The value of X is taken from the default value that was specified in the Boeing Climbout Database (cnf file) which is typically the value specified in the Flight Crew Training Manual.

PERFORMANCE - TAKEOFF - ALL ENGINE

AIRPORT INFO

ADD AIRPORT

NOTAM

MEL

CDL

SEND OUTPUT

777-300

ARPT

CYVR / CYR

TO

RTG

RWY

08L

41

ATM

INTX

FULL 08L

FLAPS 20

FLAP

COND

DRY

AUTO

A/C

WIND

0 KT

OFF

A/I

OAT

10 C

41

SEL TEMP

QNH

1013.0 HPa

(29.91 IN HG)

Takeoff Weight: 320000 KG

777-300ER/GE90-115BL

CALC

Climbout Gradient Input

Climb to Alt (MSL)

7500 FT

or Distance

Ctkb Ht (AGL) or Flp

1500 FT

Accel Ht (AGL)

3000 FT

Engine Fail Alt (MSL)

5000 FT

or Distance

Results:

All Engine

Engine Out

Min Gradient: 4.7%(283 ft/nm)

2.9%(175 ft/nm)

Avg Gradient: 9.0%(548 ft/nm)

5.6% (340 ft/nm)

Altitude: 7500 ft (MSL)

7500 ft (MSL)

Altitude: 7481 ft (AGL)

7481 ft (AGL)

Distance: 14.7 nm

22.9 nm

Distance is measured from the start of takeoff roll

TAKEOFF

LANDING

DISPATCH

ALL ENGINE

DISPATCH

ENROUTE

WEIGHT & BALANCE

Aircraft Performance

Using the Onboard Performance Tool for Landing

OPT will display two screens to calculate landing performance. It is presented for LANDING –DISPATCH and LANDING – ENROUTE. These two very similar pages are displayed by using the LANDING – DISPATCH and LANDING - ENROUTE tabs on the tab bar at the bottom.

To display the LANDING – ENROUTE page, which would typically be used for landing distance assessment at the time of arrival, the LANDING - ENROUTE tab is selected. This will display two additional buttons to select from – the BRAKES and NON-NORM

The screenshot shows the 'PERFORMANCE - LANDING - DISPATCH' screen. At the top, there are tabs for 'AIRPORT INFO', 'ADD AIRPORT', 'NOTAM', 'MEL', 'COL', and 'SEND OUTPUT'. Below these, the 'FLYBOEING' section is active, displaying a grid of buttons for 'ARPT', 'RWY', 'DH', 'COND', 'WIND', 'OAT', and 'QNH'. To the right of these are buttons for 'REV CONFIG', 'FLAP CONFIG', 'A/C CONFIG', and 'A/I CONFIG'. A 'CALC' button is located at the bottom right of the main input area. At the very bottom, a tab bar shows 'TAKEOFF', 'LANDING-DISPATCH' (which is selected), 'LANDING-ENROUTE', and 'WEIGHT & BALANCE'.

Aircraft Performance

Using the Onboard Performance Tool for Landing

The enroute section contains the approach speed, the required landing field length and available landing field length for the input landing weight.

9:38 AM Wed Sep 9

PERFORMANCE - LANDING - DISPATCH

AIRPORT INFO

ADD AIRPORT

NOTAM

MEL

CDL

SEND OUTPUT

AD-787-9

ARPT

ARPT SEARCH

RWY

RUNWAYS

COND

CONDITION

WIND

OAT

QNH

DH

DECISION HT

THRUST RTG

RTG

FLAP CONFIG

FLAP

A/I CONFIG

A/I

REV CONFIG

REV

CAT CONFIG

CAT

CALC

TAKEOFF

LANDING

DISPATCH

ALL ENGINE

DISPATCH

ENROUTE

Gulf Air | Confidential

21 September, 2026

GULF AIR

24

Aircraft Performance

Using the Onboard Performance Tool for Landing

The enroute section contains the approach speed, the required landing field length and available landing field length for the input landing weight.

9:44 AM Wed Sep 9

PERFORMANCE - LANDING - ENROUTE

AIRPORT INFO

ADD AIRPORT

NOTAM

MEL

CDL

SEND OUTPUT

AD-787-9

ARPT

ARPT SEARCH

RWY

RUNWAYS

COND

CONDITION

WIND

OAT

QNH

DH

DECISION HT

THRUST RTG

RTG

FLAP CONFIG

FLAP

BRKS CONFIG

BRKS

A/I CONFIG

A/I

REV CONFIG

REV

CAT CONFIG

CAT

NON-NORM

NNC

LANDING WT:

KG

VREF ADD:

5

CALC

TAKEOFF

LANDING

DISPATCH

ALL ENGINE

DISPATCH

ENROUTE

Aircraft Performance

Other Available Functions

Viewing Airport Information

The AIRPORT INFO tool displays a screen which summarizes the airport data for the selected airport and runway. This tool is only active if both an airport and runway have been selected. A typical airport information screen is shown below.

PERFORMANCE - AIRPORT DATA

AIRPORT DATA Done

F CYVR / YVR (VANCOUVER INTL)
Elevation: 14 ft

Runway 08R

TORA: 11500 ft
TODA: 11504 ft
ASDA: 11500 ft
Slope: -0.04%
LDA: 11000 ft

Obstacles

Height Above Start of Runway (ft)	Distance from Start of Runway (ft)	Lateral Offset (ft)
-4	11505	0
39	14146	0
53	15125	0
61	16145	0
88	16369	0
92	16556	0
274	46592	0
406	53179	0
554	62975	0

This runway last updated on 2011-03-17 11:01:41.893
Runway has 180 degree lineup turn.
Data includes effective NOTAMs.

Engine Failure Procedure: NO ENGINE FAILURE - ATTEMPT TO

TAKEOFF LANDING DISPATCH LANDING ENROUTE WEIGHT & BALANCE


Aircraft Performance

Other Available Functions

Making MEL and CDL Adjustments

OPT has the capability to make nearly all of the performance-related MEL and CDL adjustments. This capability is accessed using the MEL and CDL tools on the tool bar.

The functionality for both of these corrections are the same. The example discussed here will pertain to a sample MEL condition. Selecting the MEL tool will display the screen shown below.

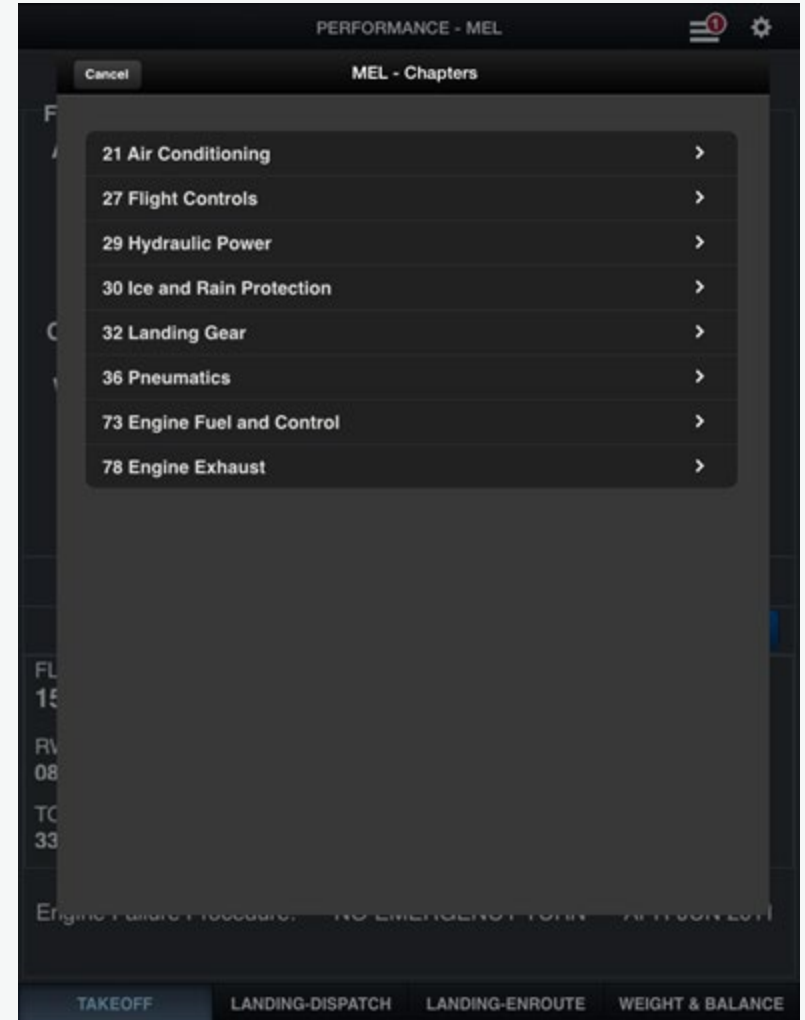


Aircraft Performance

Other Available Functions

Making MEL and CDL Adjustments

When arriving at this page, it displays the chapter list for the MEL. Selecting any of the chapters will then display the list of available MEL items in that chapter, such as shown in this example:

when leaving the MEL screen, there are still active items, there will be an amber bar displayed below the MEL button. This amber bar is displayed any time there are active MEL items. An example is shown below.

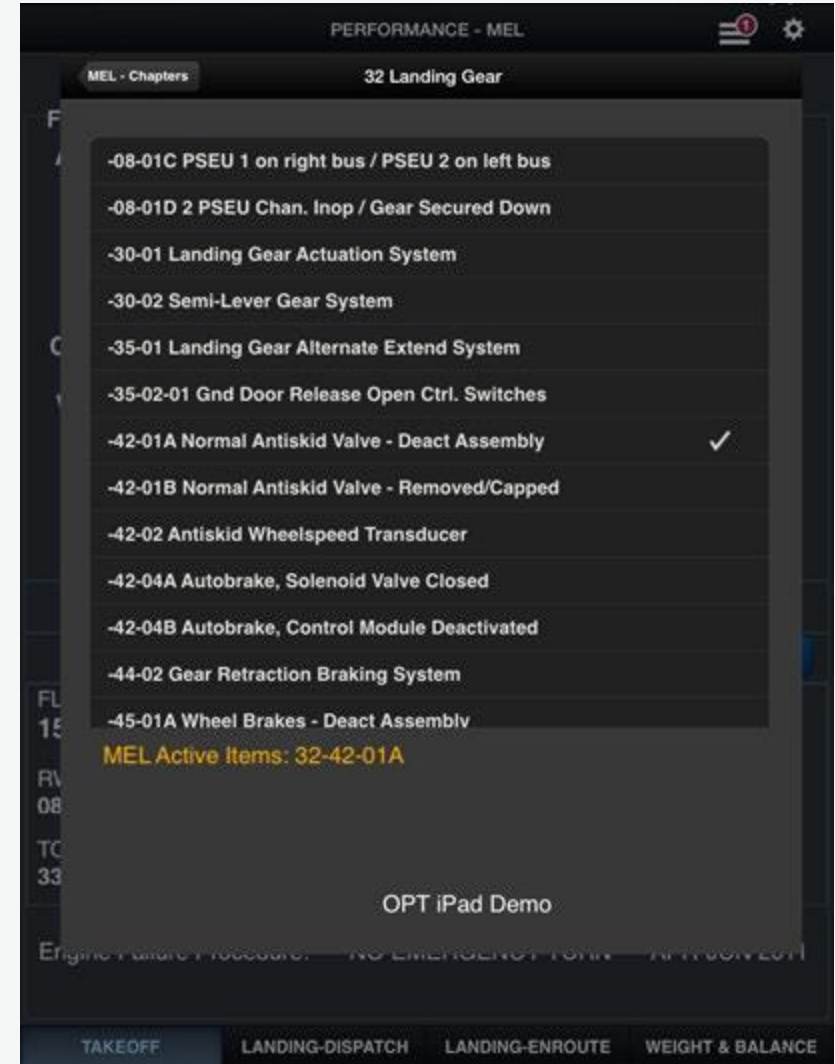

Thank you.

