

Introduction to MEL/CDL manuals

Objectives

- This presentation objectives are:
 1. To get familiar with the new MEL, in terms of operational use
 2. To describe how to consult the different New MEL chapters
 3. To give examples of operational scenarios using the New MEL

“MEL Entries” Chapter Layouts

 A330/A340 MINIMUM EQUIPMENT LIST	MEL ENTRIES 21 - AIR CONDITIONING				
ECAM Alert: AIR HOT AIR SYS 1(2) FAULT					
Applicable to: A9C-KF					
<table border="1" style="width: 100%;"> <thead> <tr> <th style="text-align: center;">AIRCRAFT STATUS</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">NIL</td> </tr> </tbody> </table>	AIRCRAFT STATUS	NIL	<table border="1" style="width: 100%;"> <thead> <tr> <th style="text-align: center;">CONDITION OF DISPATCH</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Refer to Item 21-63-03 Hot Air Valve</td> </tr> </tbody> </table>	CONDITION OF DISPATCH	Refer to Item 21-63-03 Hot Air Valve
AIRCRAFT STATUS					
NIL					
CONDITION OF DISPATCH					
Refer to Item 21-63-03 Hot Air Valve					
ECAM Alert: AIR PACK 1+2 FAULT					
Applicable to: A9C-KF					
<table border="1" style="width: 100%;"> <thead> <tr> <th style="text-align: center;">AIRCRAFT STATUS</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">NIL</td> </tr> </tbody> </table>	AIRCRAFT STATUS	NIL	<table border="1" style="width: 100%;"> <thead> <tr> <th style="text-align: center;">CONDITION OF DISPATCH</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Refer to Item 21-52-01D Air Conditioning Pack</td> </tr> </tbody> </table>	CONDITION OF DISPATCH	Refer to Item 21-52-01D Air Conditioning Pack
AIRCRAFT STATUS					
NIL					
CONDITION OF DISPATCH					
Refer to Item 21-52-01D Air Conditioning Pack					
ECAM Alert: AIR PACK 1(2) OFF					
Applicable to: A9C-KF					
<table border="1" style="width: 100%;"> <thead> <tr> <th style="text-align: center;">AIRCRAFT STATUS</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">NIL</td> </tr> </tbody> </table>	AIRCRAFT STATUS	NIL	<table border="1" style="width: 100%;"> <thead> <tr> <th style="text-align: center;">CONDITION OF DISPATCH</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Refer to Item 21-52-01 Air Conditioning Pack</td> </tr> </tbody> </table>	CONDITION OF DISPATCH	Refer to Item 21-52-01 Air Conditioning Pack
AIRCRAFT STATUS					
NIL					
CONDITION OF DISPATCH					
Refer to Item 21-52-01 Air Conditioning Pack					
ECAM Alert: AIR PACK 1(2) OVHT					
Applicable to: A9C-KF					
<table border="1" style="width: 100%;"> <thead> <tr> <th style="text-align: center;">AIRCRAFT STATUS</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">NIL</td> </tr> </tbody> </table>	AIRCRAFT STATUS	NIL	<table border="1" style="width: 100%;"> <thead> <tr> <th style="text-align: center;">CONDITION OF DISPATCH</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Refer to Item 21-52-01A Air Conditioning Pack or Refer to Item 21-52-01B Air Conditioning Pack</td> </tr> </tbody> </table>	CONDITION OF DISPATCH	Refer to Item 21-52-01A Air Conditioning Pack or Refer to Item 21-52-01B Air Conditioning Pack
AIRCRAFT STATUS					
NIL					
CONDITION OF DISPATCH					
Refer to Item 21-52-01A Air Conditioning Pack or Refer to Item 21-52-01B Air Conditioning Pack					

In this chapter
The specific chapter is
shown at the top of
the page

Use “MEL Entries” Chapter

MEL ENTRIES	
PRELIMINARY PAGES - TABLE OF CONTENTS	
 A330/A340 MINIMUM EQUIPMENT LIST	
ME-PLP PRELIMINARY PAGES	
TABLE OF CONTENTS	
ME-21 Air Conditioning	1/12
AIR HOT AIR SYS 1(2) FAULT	1/15
AIR PACK 1(2) FAULT	1/15
AIR PACK 1(2) CHT	1/15
AIR PACK 1(2) CHT	1/15
AIR PACK 1(2) REGUL FAULT	2/15
AIR PACK VALVE 1(2) FAULT	2/15
CABIN EXCESS CAB ALT	3/15
CABIN FWD(AFT) OVR NOT OPEN	3/15
CABIN LGS ELEV FAULT	3/15
CABIN LG DIFF PR	3/15
CABIN SAFETY VALVE OPEN	3/15
CABIN SYS 1(2)(142) FAULT	4/15
COND BBAND FAN FAULT -R	4/15
COND BBAND VENT FAULT -R	4/15
COND BULK CRG DUCT CHT	4/15
COND BULK CRG HEAT FAULT	5/15
COND BULK CRG ISOL FAULT	5/15
COND BULK CRG VENT FAULT	5/15
COND CAB REST ISOL FAULT -R	5/15
COND DUCT CHT	5/15
COND LAV+GAL VENT FAULT	6/15
COND L(R)(L+R) CAB VENT FAULT	6/15
COND VENT SYS FAULT	6/15
COND ZONE CTRL 1(2) FAULT	6/15
COND ZONE REGUL FAULT	7/15
VENT BLOWING FAULT	7/15
VENT EXTRACT FAULT	7/15
VENT OVRD VALVE FAULT	7/15
VENT PACK BAY VENT FAULT	8/15
GFA A330/A340 FLEET MEL	
ME-PLP-TOCP 1/12 05 JUL 10	

- This “MEL Entries” Chapter contains all the ECAM alerts (Warnings and Cautions).
- The ECAM alerts or MEL entries are classified by ATA chapters

Use “MEL Entries” Chapter

 A330/A340 MINIMUM EQUIPMENT LIST	MEL ENTRIES 21 - AIR CONDITIONING
ECAM Alert: AIR HOT AIR SYS 1(2) FAULT	
Applicable to: A9C-KF	
AIRCRAFT STATUS	CONDITION OF DISPATCH
NIL	Refer to Item 21-63-03 Hot Air Valve

One MEL entry
corresponds to one
ECAM
alert

Each entry is made of
two columns:

Use “MEL Entries” Chapter

- The “Aircraft Status” column may contain:

 A330/A340 MINIMUM EQUIPMENT LIST	MEL ENTRIES 21 - AIR CONDITIONING	
ECAM Alert: AIR HOT AIR SYS 1(2) FAULT		
Applicable to: A9C-KF		
NIL	AIRCRAFT STATUS	CONDITION OF DISPATCH <i>Refer to Item 21-63-03 Hot Air Valve</i>

NIL :

Systematically present when no additional information is needed for dispatch

ECAM Alert: AIR PACK 1(2) REGUL FAULT	
Applicable to: A9C-KF	
AIRCRAFT STATUS	CONDITION OF DISPATCH
If associated with the PACK 1(2) IN BY PASS MODE subtitle If associated with the PACK 1(2) RAM DOOR CLOSED subtitle If there is no subtitle	Refer to Item 21-52-01C Air Conditioning Pack or Refer to Item 21-52-01A Air Conditioning Pack or Refer to Item 21-52-01B Air Conditioning Pack or Refer to Item 21-53-01 Pack Controller Channel or Refer to Item 21-53-03 Pack Temperature Control Valve

One or more **Status :**

Depending on the aircraft status, only one condition of dispatch for a single ECAM alert must be apply

Use “MEL Entries” Chapter

The “Aircraft Status” column may contain:

ECAM Alert: FUEL EXCESS AFT CG	
Applicable to: A9C-KF	
AIRCRAFT STATUS	CONDITION OF DISPATCH
Actual alert	Not applicable
False alert	Refer to Item 28-09-01 FUEL EXCESS AFT CG Alert

Actual / False Caution

“Actual” means that the system is actually failed.

“False” means that only the monitoring function is failed, but the system is operative

Use “MEL Entries” Chapter

- The “Condition of Dispatch” column may contain:

ECAM Alert: FUEL FCMC 1 FAULT	
Applicable to: A9C-KF	
AIRCRAFT STATUS	CONDITION OF DISPATCH
NIL	NO DISPATCH

NO DISPATCH:

The aircraft cannot be dispatched

ECAM Alert: FUEL EXCESS AFT CG	
Applicable to: A9C-KF	
AIRCRAFT STATUS	CONDITION OF DISPATCH
Actual alert False alert	Not applicable Refer to Item 28-09-01 FUEL EXCESS AFT CG Alert

Not Applicable:

The MMEL is not the appropriate document to be consulted

“MEL Items” Chapter Organization

- Within this chapter, the MMEL Items are arranged by ATA system, then by ATA sub-system
- Use “MEL Items” Chapter

MEL Item

 A330/A340 MINIMUM EQUIPMENT LIST	MEL ITEMS PRELIMINARY PAGES - TABLE OF CONTENTS
MEL PRELIMINARY PAGES	
TABLE OF CONTENTS	1/54
MEL-00 Preamble	
MEL-00-01 Approval References	
Approval References	1/2
MEL-21 Air Conditioning	
MEL-21-01 Overhead Panels	
MEL-21-01-01 AIR Overhead Panel	
21-01-01-01 PACK 1/2 power FAULT light	1/2
21-01-01-02 PACK 1/2 power OFF light	1/2
21-01-01-03 HOT AIR 1/2 power FAULT light	1/2
21-01-01-04 HOT AIR 1/2 power OFF light	2/2
MEL-21-01-02 CABIN PRESS Overhead Panel	
21-01-02-01 CABIN PRESS MODE SEL power FAULT light	1/2
MEL-21-01-03 CARGO AIR COND Overhead Panel	
21-01-03-01 BULK ISOL VALVES power FAULT light	1/2
21-01-03-02 BULK ISOL VALVES power OFF light	1/2
MEL-21-01-04 VENTILATION Overhead Panel	
21-01-04-01 CAB FANS power OFF light	1/2
21-01-04-02 EXTRACT power FAULT light	1/2
21-01-04-03 EXTRACT power OFF light	1/2
MEL-21-07 Indications on SD pages	
MEL-21-07-01 Indications on the BLEED SD page	
21-07-01-01 Pack Flow Indication on the BLEED SD page	1/2
21-07-01-02 Pack Temperature Control Valve Position Indication on the BLEED SD page	1/2
21-07-01-03 Emergency Ram Air Inlet Indication on the BLEED SD page	1/2
MEL-21-07-02 Indications on the CAB PRESS SD page	
21-07-02-01 EXTRACT Valve Indication on the CAB PRESS SD page	1/2
21-07-02-02 Pack Flow Indication on the CAB PRESS SD page	1/2
MEL-21-07-03 Indications on the COND SD page	
21-07-03-01 FAN Indication on the COND SD page	1/2
21-07-03-02 Cockpit and Cabin Temperature Control Indications on the COND SD page	1/2
DFA A330/A340 FLEET MEL	MEL-PLP-TOC P 1/54 05 JUL 10

“MEL Items” Chapter Organization

- Numbering Rules for Sub-Chapters and MEL Items

Use “MEL Items” Chapter

- ❑ Each ATA system contains a set of ATA sub-systems.
- ❑ The numbering rules of those “level 2” ATA sub-systems are:
- ❑ **XX-00 : contains the MEL items dealing with maintenance messages on the “STATUS SD page”**
- ❑ **XX-01 : contains the MEL items dealing with Cockpit Overhead Panel**
- ❑ **XX-05 : contains the MEL items dealing with PFD indications**
- ❑ **XX-06 : contains the MEL items dealing with ND indications**
- ❑ **XX-07 : contains the MEL items dealing with SD pages indications**
- ❑ **XX-08 : contains the MEL items dealing with EWD indications**
- ❑ **XX-09 : contains the MEL items dealing with ECAM alert**
- ❑ **XX-10 to 95 : follow the ATA sub-system classification**

“MEL Items” Chapter Organization

- Numbering Rules for Sub-Chapters and MEL Items

ATA System? MI-21

Use “MEL Items” Chapter

Level 1 – ATA subsystem

? MI-21-01

(Overhead Panels)

Level 2 – Sub-Chapter

? MI-21-01-01

MEL Item


MEL ITEMS PRELIMINARY PAGES - TABLE OF CONTENTS	
MI-PLP PRELIMINARY PAGES TABLE OF CONTENTS	
MI-00 Preamble	104
MI-00-01 Approval Reference	102
MI-21 Air Conditioning	
MI-21-01 Overhead Panels	
MI-21-01-01 AIR Overhead Panel	
21-01-01-01 PACK 1/2S power FAULT light	102
21-01-01-02 PACK 1/2S power OFF light	102
21-01-01-03 HOT AIR 1/2S power FAULT light	102
21-01-01-04 HOT AIR 1/2S power OFF light	102
MI-21-01-02 CABIN PRESS Overhead Panel	
21-01-02-01 CABIN PRESS MODE SOL power FAULT light	102
MI-21-01-03 CARGO AIR COND Overhead Panel	
21-01-03-01 BULK SOL VALVES power FAULT light	102
21-01-03-02 BULK SOL VALVES power OFF light	102
MI-21-01-04 VENTILATION Overhead Panel	
21-01-04-01 CAB FANS power OFF light	102
21-01-04-02 EXTRACT power FAULT light	102
21-01-04-03 EXTRACT power OFF light	102
MI-21-07 Indications on SD pages	
MI-21-07-01 Indications on the BLEED SD page	
21-07-01-01 Pack Flow Indication on the BLEED SD page	102
21-07-01-02 Pack Temperature Control Valve Position Indication on the BLEED SD page	102
21-07-01-03 Emergency Ram Air Inlet Indication on the BLEED SD page	102
MI-21-07-02 Indications on the CAB PRESS SD page	
21-07-02-01 EXTRACT Valve Indication on the CAB PRESS SD page	102
21-07-02-02 Pack Flow Indication on the CAB PRESS SD page	102
MI-21-07-03 Indications on the COND SD page	
21-07-03-01 FAN Indication on the COND SD page	102
21-07-03-02 Chilled and Warm Temperature Control Indication on the COND SD page	102
OFA 330/3340 FLEET	
MEL	
MI-PLP-TOC P 1/54	
05 JUL 10	

CDL

- Operation of the aircraft without certain secondary airframe and engine parts is possible if indicated in this MCDL.
- Any part not included in this list must be considered as necessary.
- CDL MANUAL origination and layout follows the same principle as MEL.
- It is important to repair the aircraft at the first airport where repairs or replacements may reasonably be made, since additional malfunctions may require the airplane to be taken out of service.

CDL: ILLUSTRATION PAGE

AIRBUS A320-214 CONFIGURATION DEVIATION LIST	FLIGHT CONTROL FLAP TRACK MOVEABLE FAIRING PIVOT COVER
ILLUSTRATION FLAP TRACK MOVEABLE FAIRING PIVOT COVER	
Applicable to: ALL	

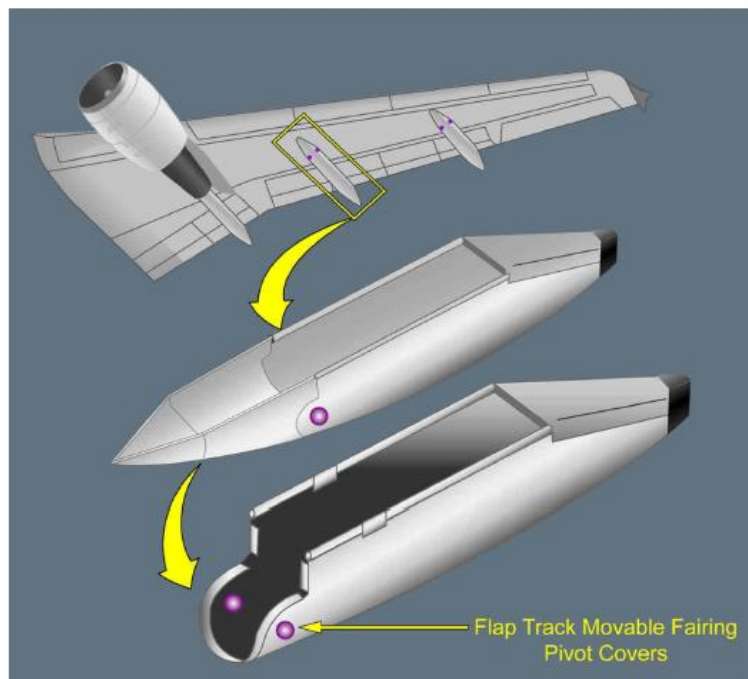

For dispatch conditions: Refer to 27-16 Flap Track Moveable Fairing Pivot Cover

The illustration page shows the picture of the part and the it's location on the airplane.

CDL

 A320-214 CONFIGURATION DEVIATION LIST	COMMUNICATION STATIC DISCHARGER
23-01	Static Discharger

Applicable to: ALL

23-01 STATIC DISCHARGER	Quantity installed -
----------------------------	-------------------------

20 % of static dischargers may be missing or inoperative on each the following areas:

- RH wing
- LH wing
- Vertical stabilizer (including rudder)
- RH horizontal stabilizer (including elevator)
- LH horizontal stabilizer (including elevator).

- Note:
1. If a static discharger is missing or inoperative on a flap track fairing, it is recommended to replace it before flight.
 2. When combined with the case of dispatch with a wing tip fence missing, 20 % of the remaining static dischargers of the affected wing are allowed to be inoperative or missing (Refer to 57-01 Wing Tip Fence).

Refer to CDL-23-01 Illustration Static Discharger

- The sign “-” in “Quantity installed” column indicates that the quantity is variable.

- THE DISPATCH CONDITION OF THE ITEM** specifies the conditions the aircraft can be dispatched .
- Letter (m) associated to an item indicates that some maintenance action is necessary to permit flight with these parts missing.

Thank you...

