AudioCodes MediaPack 11x Analog Media Gateways

Quick Guide

1 Before Installing

Congratulations on purchasing your **AudioCodes MP-11x Analog Media Gateway**! Before you begin using the device, ensure that the following items are included in the shipped box:

- ✓ 4 rubber feet (desktop mounting)
- ✓ AC power cord

You'll also need the following (not supplied):

- ✓ RJ-11 telephone cable
- ✓ RJ-45 Ethernet cables
- ✓ PC running a Web browser

Warning: MP-11x devices are **INDOOR** units and must be installed indoors only. FXS and Ethernet cabling must be routed **only** indoors and must **not** exit the building.

2 MP-11x LEDs

MP-11x provides LEDs on its front panel, as shown below and described in the subsequent table.

LED	Description			
Channel Status	**Green On:** Off-hook	**Slow Flash:** Ringing	**Fast Flash:** Malfunction	**Off:** On-hook
Uplink	**Green On:** Ethernet up		**Off:** No Ethernet Link	
Fail	**Red On:** Failure or initializing		**Off:** Normal	
Ready	**Green On:** Operational		**Off:** Loading software or failure	
Power	**Green On:** Power on		**Off:** No power	

AudioCodes

HD VoIP Sounds Better

3 MP-11x Ports

MP-11x provides ports on its rear-panel, as shown below and described in the subsequent table.

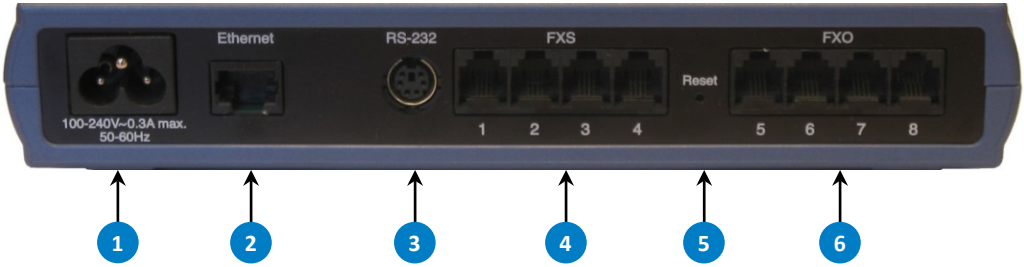

1	AC Power Socket
2	RJ-45 10/100BaseTX Ethernet Port
3	Serial RS-232 6-Pin Mini-DIN Female (PS/2) Port
4	RJ-11 FXS Ports
5	Reset Button
6	RJ-11 FXO Ports

4 Cabling and Installing MP-11x

Warnings:

- Connect FXS ports only to analog telephones/PBX trunk lines, and FXO ports only to Central Office/PBX lines; otherwise, damage to MP-11x can occur.
- Prior to connecting MP-11x to power, refer to the *Compliancy and Regulatory Information* document at www.audiocodes.com/library.
- MP-11x must be connected to an electrical socket outlet providing protective earthing.

☞ **To cable and install MP-11x:**

1. Connect the Ethernet port to your LAN switch, using the RJ-45 Ethernet cable connector.
2. Connect the FXS ports to analog equipment (telephone, fax, and modem), using an RJ-11 cable.
3. Connect the FXO port to a PBX or the PSTN, using an RJ-11 cable.
4. Connect MP-11x to a standard AC wall outlet using the AC power cord. The **Ready** and **Power** LEDs turn on green. The **Fail** LED turns on red and turns off after initialization completes. The **Uplink** LED flashes green indicating an Ethernet link.
5. For desktop mounting, attach the four rubber feet (supplied) to the underside of MP-11x. For wall- and 19-inch rack-mounting, refer to the *Hardware Installation Manual*.

5 Assigning an IP Address

Your MP-11x is shipped with a default IP address:

✓ **IP Address:**

- FXS-only and Combined FXS/FXO Models: 10.1.10.10
- FXO-only Models: 10.1.10.11

✓ **Subnet:** 255.255.0.0

✓ **Default Gateway:** 0.0.0.0

☞ **To change the IP address:**

1. Unplug MP-11x from the network and reconnect the Ethernet port directly to a PC's LAN port, using an Ethernet crossover cable.
2. Change your PC's IP address and subnet mask to correspond with the MP-11x default IP address and subnet mask (see above).
3. In your Web browser, enter the default IP address of MP-11x (e.g., http://10.1.10.10); the MP-11x Web-based management tool opens, requesting your login credentials.
4. Log in using the default (case-sensitive) username ("Admin") and password ("Admin"), and then click **Login**.
5. Access the Interface table (**Configuration** tab > **VoIP** menu > **Network** > **IP Interfaces Table**).
6. Modify the IP address to correspond with your network IP addressing scheme, and then click **Submit**.
7. Save your settings to flash ("burn") in the Maintenance Actions page (**Maintenance** tab > **Maintenance** menu > **Maintenance Actions**); your Web browser disconnects from the MP-11x Web interface.
8. Unplug MP-11x from your PC and reconnect it to the network.
9. Restore your PC's IP address and subnet mask to their original settings, and then restart your PC and re-access the MP-11x Web interface with its newly assigned IP address.

6 Configuring Basic SIP Settings

Configure MP-11x with basic SIP parameters using the Web interface:

☞ **To configure basic SIP parameters:**

1. In the Coders Table page (**Configuration** tab > **VoIP** menu > **Coders and Profiles** > **Coders**), configure coders used by MP-11x that best suit your VoIP network and are supported by your VoIP provider.

Coder Name	Packetization Time	Rate	Payload Type	Silence Suppression
G.711A-law	20	64	8	Disabled

2. In the Proxy & Registration page (**Configuration** tab > **VoIP** menu > **SIP Definitions** > **Proxy & Registration**), set the 'Use Default Proxy' field to **Yes** and the 'Enable Registration' field to **Enable**.

Use Default Proxy	Yes
Proxy Set Table	

3. Click the **Proxy Set Table** button, and then enter the IP address or domain name of the Proxy server provided by your VoIP provider.

	Proxy Address	Transport Type
1	voip_provider.com	UDP

7 Setting up your Voice Ports

The MP-11x ports are enabled by assigning them a phone number.

☞ To set up your MP-11x voice ports:

1. Open the Endpoint Phone Number Table page (**Configuration** tab > **VoIP** menu > **GW and IP to IP** > **Hunt Group** > **Endpoint Phone Number**).
2. In the 'Channel(s)' column, enter the port number (labeled on the rear panel) of the port that you want to enable.
3. In the 'Phone Number' column, enter the port's phone number (e.g., 401). This number is typically provided by your VoIP provider.

	Channel(s)	Phone Number
1	1	4001
2	2	4002

4. Click **Submit**.

Warning: Burn your configuration settings to flash before resetting or powering down the device; otherwise, your settings will not be preserved.

Notice Information

This Quick Guide describes the quick setup for AudioCodes MediaPack MP-11x series Voice-over-IP (VoIP) SIP media gateways.

Information contained in this document is believed to be accurate and reliable at the time of printing. However, due to ongoing product improvements and revisions, AudioCodes cannot guarantee accuracy of printed material after the Date Published nor can it accept responsibility for errors or omissions. Updates to this document and other documents as well as software updates can be viewed by registered customers on AudioCodes' Web site at www.audiocodes.com/downloads.

© Copyright 2014 AudioCodes Ltd. All rights reserved.
This document is subject to change without notice.

Date Published: February-13-2014
Document #: LTRT-52911

AudioCodes

HD VoIP Sounds Better