


25A-LEFS

3D view

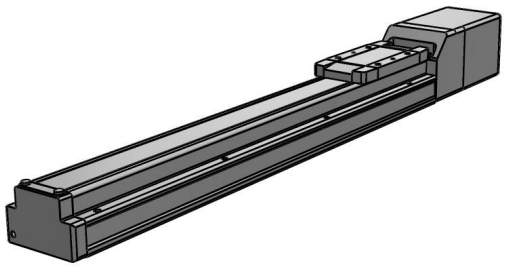

HOW TO ACTIVATE 3D?

To activate the interactive 3D view in Acrobat Reader, you need to select, at the top of the page, **Options** and then **Trust this document**

Zoom

Moves you toward or away from objects in the scene when you drag vertically. You can also zoom with the hand tool by holding down Shift as you drag.

Pan

Moves the model vertically and horizontally only. You can also pan with the hand tool: Ctrl-drag.

Rotate

Turns 3D objects around relative to the screen. How the objects move depends on the starting view, where you start dragging and the direction in which you drag.

Augmented Reality (AR) - Digital meets real


Augmented Reality, often shortened to AR, is a technology that blends digital information into the real world.
For more information, please click here or directly try yourself by scanning the QR code with your phone.

SCAN ME




25A-LEFS

2D derivation

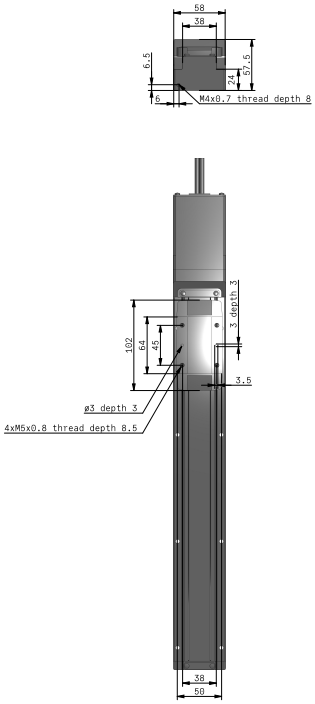



ISO view

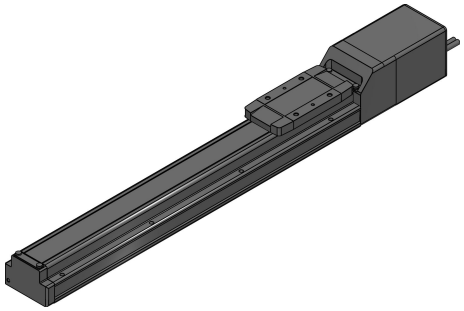

Bill-Of-Materials


N°	Description	Amount
1	25A-LEFSH25AB-300	1



25A-LEFS

Technical drawings

LEFS25

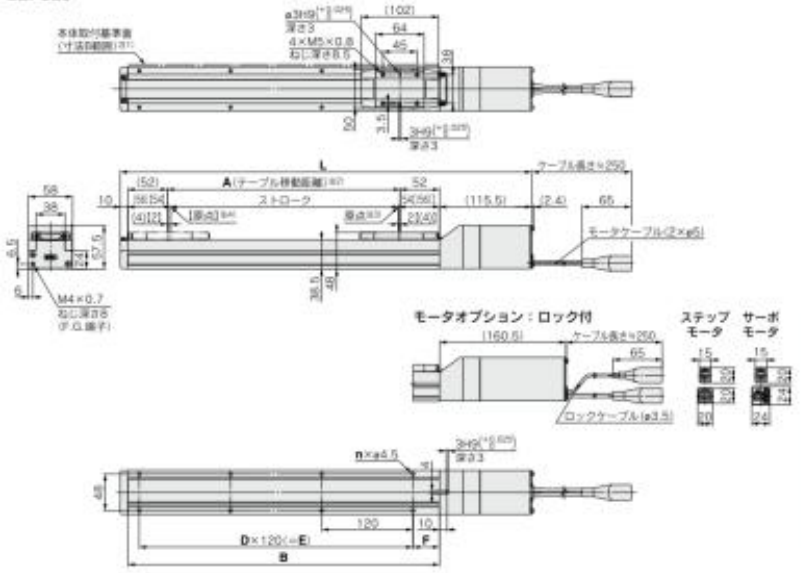


寸法表 [mm]

型式	L ロック無し	L ロック付	A	B	n	D	E	F
LEFS□25□-50□	285.5	330.5	56	160	4	—	—	20
LEFS□25□-100□	335.5	380.5	106	210	4	—	—	
LEFS□25□-150□	385.5	430.5	156	260	4	—	—	
LEFS□25□-200□	435.5	480.5	206	310	6	2	240	
LEFS□25□-250□	485.5	530.5	256	360	6	2	240	
LEFS□25□-300□	535.5	580.5	306	410	8	3	360	
LEFS□25□-350□	585.5	630.5	356	460	8	3	360	
LEFS□25□-400□	635.5	680.5	406	510	8	3	360	
LEFS□25□-450□	685.5	730.5	456	560	10	4	480	35
LEFS□25□-500□	735.5	780.5	506	610	10	4	480	
LEFS□25□-550□	785.5	830.5	556	660	12	5	600	
LEFS□25□-600□	835.5	880.5	606	710	12	5	600	
LEFS□25□-650□	885.5	930.5	656	760	12	5	600	
LEFS□25□-700□	935.5	980.5	706	810	14	6	720	
LEFS□25□-750□	985.5	1030.5	756	860	14	6	720	
LEFS□25□-800□	1035.5	1080.5	806	910	16	7	840	

注1) R面取りがあるため本体取付基準面を使用して設置される場合には、相手面もしくはピン高さを3mm以上にしてください。(推奨高さ5mm)
また、本体取付基準面(寸法B範囲)よりそれ以外の面は出っ張る場合がございます。ワーク・設備等と干渉しないよう1mm以上の逃げを設けてご使用ください。
注2) 原点復帰動作等によりテーブルが可動する距離です。
周辺にあるワーク・設備等と干渉しないようにご注意ください。
注3) 原点復帰後の位置です。
注4) I　Iは原点復帰方向を変更した場合です。

位置決めピン穴注1)(オプション)：ボディ底面




寸法表 [mm]

型式	G	H
LEFS□25□-50□	100	30
LEFS□25□-100□	100	45
LEFS□25□-150□	100	45
LEFS□25□-200□	220	45
LEFS□25□-250□	220	45
LEFS□25□-300□	340	45
LEFS□25□-350□	340	45
LEFS□25□-400□	340	45
LEFS□25□-450□	460	45
LEFS□25□-500□	460	45
LEFS□25□-550□	580	45
LEFS□25□-600□	580	45
LEFS□25□-650□	580	45
LEFS□25□-700□	700	45
LEFS□25□-750□	700	45
LEFS□25□-800□	820	45

注1) ボディ底面位置決めピン穴を使用する場合は、ハウジングB底面のピン穴は使用しないでください。

オートスイッチ付(オプション)



注1) ストローク99mm以下の場合は、オートスイッチ取付金具はモータ側の2個所のみ取付可能となりますのでご注意ください。



25A-LEFS

Technical data


ACCURACY (Accuracy)	(H) High precision type
SIZE (Size / mm)	25
DIRECTION (Motor mounting position)	(-) Straight
MOTOR (Motor type)	(A) Servo motor (24 VDC)
LEAD (Ball screw lead)	(B) 6 mm
STROKE (Stroke / mm)	300
POS (Table position / mm)	0
STOP (Stroke option)	Manufacturable stroke
OPTION (Motor option)	(-) Without lock
HOLE (Positioning pin hole)	(-) Housing B bottom
CABLE (Actuator cable type)	(-) Without cable
LENGTH (Actuator cable length)	(-) Without cable
CONTROLLER (Controller/Driver type)	(-) Without controller/driver
IO (I/O cable length)	N/A
PROTOCOL (Communication protocol)	N/A
AXIS (Axis)	N/A
MOUNT (Controller/Driver mounting)	N/A
CONNECTOR (Communication plug connector, I/O cable)	N/A
THREAD (Thread on/off)	on



25A-LEFS

CAD plugins

With our CAD integrations, you can use 3Dfindit directly in your CAD system and make your work easier with additional comfort functions, such as replacing a part and many more.

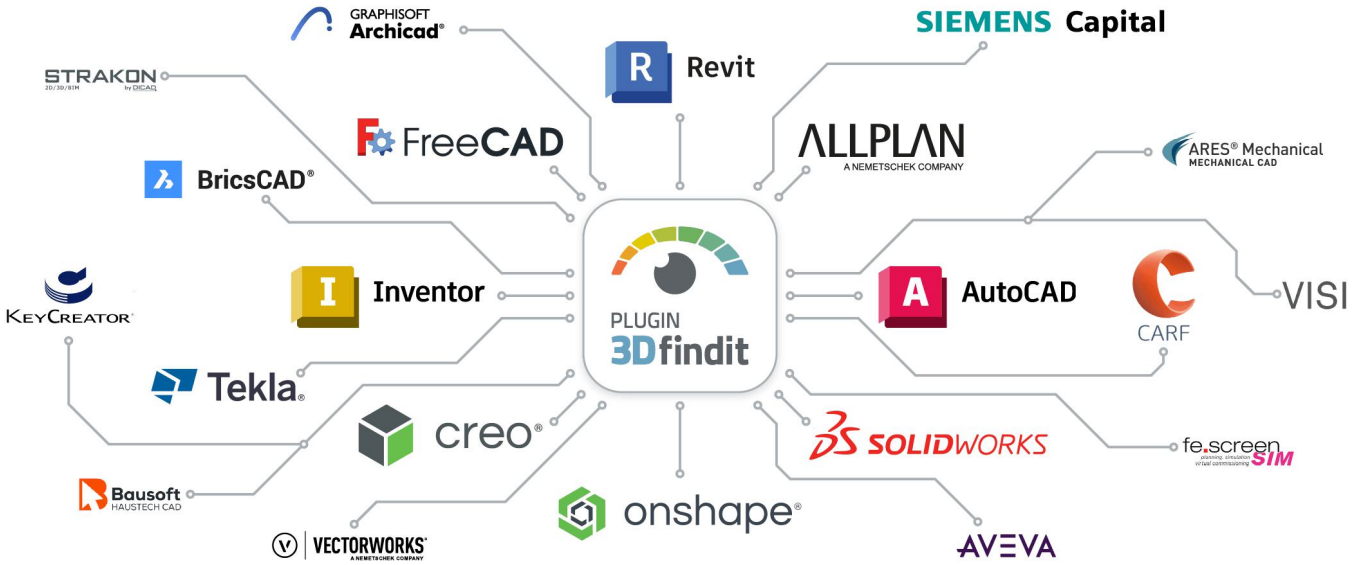

To the plugins