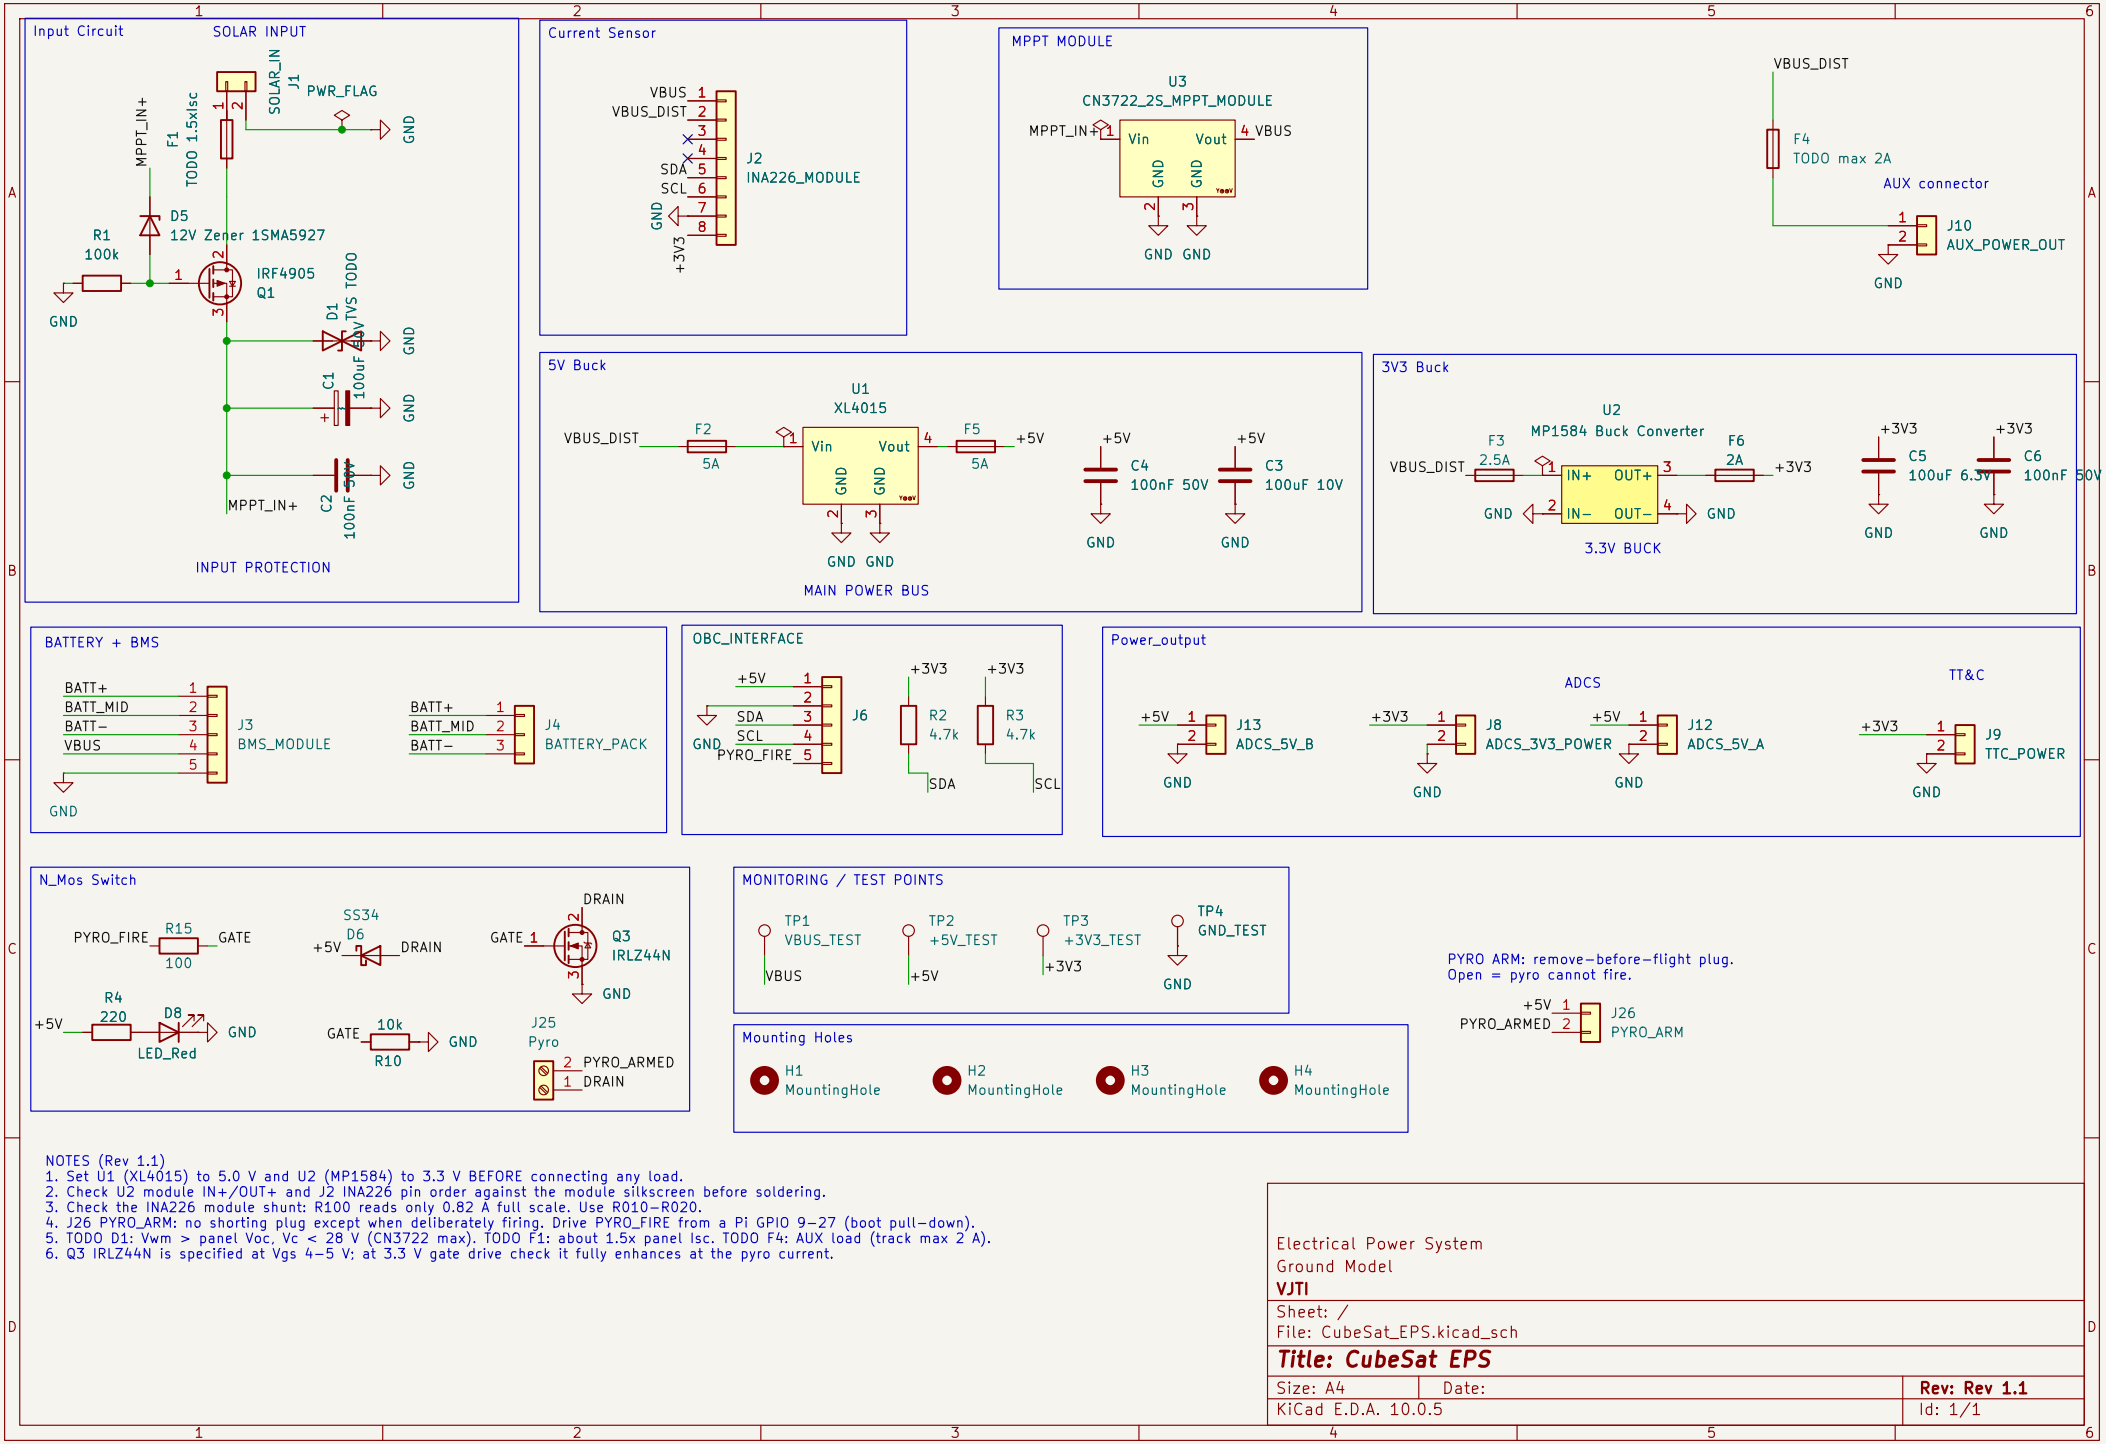


NOTES (Rev 1.1)
1. Set U1 (XL4015) to 5.0 V and U2 (MP1584) to 3.3 V BEFORE connecting any load.
2. Check U2 module IN+/OUT+ and J2 INA226 pin order against the module silkscreen before soldering.
3. Check the INA226 module shunt: R100 reads only 0.82 A full scale. Use R010–R020.
4. J26 PYRO_ARM: no shorting plug except when deliberately firing. Drive PYRO_FIRE from a Pi GPIO 9–27 (boot pull-down).
5. TODO D1: Vwm > panel Voc, Vc < 28 V (CN3722 max). TODO F1: about 1.5x panel Isc. TODO F4: AUX load (track max 2 A).
6. Q3 IRLZ44N is specified at Vgs 4–5 V; at 3.3 V gate drive check it fully enhances at the pyro current.

Electrical Power System
Ground Model
VJTI

Sheet: /
File: CubeSat_EPS.kicad_sch

Title: CubeSat EPS

Size: A4	Date:	**Rev: Rev 1.1**
KiCad E.D.A. 10.0.5		Id: 1/1