



PFS Spray Booth

Service & Maintenance Manual

All Booth Types · All Configurations · Pressurized & Non-Pressurized

*Platinum Finishing Systems, Inc. | 1400 Airport Blvd, Santa Rosa, CA 95403 | (888) 545-7715 |
info@pfsspraybooths.com | www.pfsspraybooths.com*

Read and keep this manual for future reference. All personnel operating this equipment must review and understand all instructions before use.

PFS Spray Booth — Made in the USA

FOR MAINTENANCE PACKAGES SCAN OR CALL US

A black and white advertisement for PFS Filters. It features the PFS logo at the top, followed by the text 'FILTERS', 'ORDER OR REORDER', and 'PAINT BOOTH FILTERS'. Below this is a blue 'SCAN NOW' button. A large QR code is centered in the middle. At the bottom, the website 'www.pfsfilters.com' is listed, along with the tagline 'FAST · SIMPLE · RELIABLE' and the phone number 'OR CALL: 855-496-7969'.

[PFS]
FILTERS
ORDER OR REORDER
PAINT BOOTH FILTERS
SCAN NOW

www.pfsfilters.com
FAST · SIMPLE · RELIABLE
OR CALL: 855-496-7969

A black and white advertisement for PFS Booth Service. It features the PFS logo at the top, followed by the text 'BOOK OR SCHEDULE', 'BOOTH SERVICE', and 'SCAN NOW'. Below this is a blue 'SCAN NOW' button. A large QR code is centered in the middle. At the bottom, the website 'pfsspraybooths.com/service' is listed, along with the tagline 'FAST · CERTIFIED · RELIABLE' and the phone number 'OR CALL: 888-545-7715'.

[PFS]
BOOK OR SCHEDULE
BOOTH SERVICE
SCAN NOW

pfsspraybooths.com/service
FAST · CERTIFIED · RELIABLE
OR CALL: 888-545-7715

Table of Contents

Introduction	3
About Platinum Finishing Systems	3
Contacting Platinum Finishing Systems	3
How to Use This Manual	3
Conventions	4
About Your Booth	4
Your Booth Information	5
General Safety	5
Booth Safety	7
Safety Features	9
Standard on All Booths	9
Booth Components	11
Filters	11
Manometer	12
Exhaust Fan — ACME HQ Inline Belt Drive	13
Lighting — LDPI Industrial Fixtures	15
Standard Fixture — LDPI 400SLB (Class 1, Division 2)	15
Optional LED Fixture — LDPI LE485E (Class 1, Division 2)	17
Optional LED Fixture — LDPI LE484 (Class 1, Division 2)	19
Doors	17
Operator Interface Terminal	17
Filter Program & Extended Warranty Support	18
Filter Replacement Schedule	22
Service and Maintenance	19
Maintenance Schedule	19
Daily Maintenance	21
Inspect and Clean the Manometer	21
Inspect Filters and Replace as Needed	24
Remove Overspray Buildup	25
Check Lights	26
Weekly Maintenance	26
Check Operation of Non-Roll-Up Product Door	26
Monthly Maintenance	27
Clean Booth Components	27
Inspect and Clean the Exhaust Fan	27

Yearly Maintenance	29
Exhaust Fan Motor — Annual Service (Baldor)	29
Baldor Motor — Lubrication Schedule & Procedure	29
General Service Procedures	31
Replace a Defective Bulb	31
Replace the Protective Light Covering	32
Adjust Belt Tension	32
Replace Fan Belts	33
Check V-Belt Drive Alignment	33
Replace Fan Bearings	34
Common Causes of Excessive Vibration	34
Troubleshooting	35
Equipment Anchoring	36
Overview	36
Anchor Specifications	36
Anchor Installation Procedure	36
Spare Parts and Accessories	37
Consumable Parts	37
PFS Accessories	38
Appendix A: Exhaust Fan — ACME Model HQ Service Reference	39
A.1 Maintenance	40
A.2 Set Screw Tightening Schedule & Torque	42
A.3 Variable Frequency Drives (VFD) and Motors	43
A.4 Spare Parts List — Belt Drive Tubeaxial Fan	44

Introduction

About Platinum Finishing Systems

Platinum Finishing Systems (PFS) is a leading manufacturer and distributor of paint booths, spray booths, and finishing systems, headquartered in Santa Rosa, California. Founded by owner Chris Hluz, PFS serves automotive, aerospace, marine, rail, and industrial manufacturing industries — delivering high-performance, energy-efficient, and ecologically responsible finishing environments.

PFS manufactures all products in-house and provides turn-key packages including installation, electrical, mechanical, fire suppression, ductwork, and permit coordination. BBB Accredited, California Contractor License No. 993900.

Contacting Platinum Finishing Systems

Contact	Details
Address	1400 Airport Blvd, Santa Rosa, CA 95403
Phone / Toll Free	(707) 523-3702 (888) 545-7715
Email	info@pfsspraybooths.com
Website	www.pfsspraybooths.com
Hours	Monday – Friday, 8:00 AM – 5:00 PM PST

How to Use This Manual

This manual covers all PFS spray booth types and configurations. Where procedures differ between pressurized and non-pressurized booths, both are addressed. For pressurized booths equipped with an Air Make-Up Unit (AMU), contact PFS at (888) 545-7715 for AMU-specific service documentation.

Conventions

Symbol	Meaning
DANGER	Indicates an imminent hazard that will result in death.
WARNING	Indicates a hazard that can result in serious personal injury or death.
CAUTION	Indicates a hazard that can result in personal injury.
NOTICE	Indicates a situation that can result in equipment or property damage, but poses no risk of personal injury.

Symbol	Meaning
NOTE	Denotes general information that provides additional context or guidance.

About Your Booth

PFS manufactures several booth configurations. All share the same major components — fans, filters, lights, manometer, and controls. The primary differences are airflow direction and filter placement. Use the table below to identify your configuration.

Feature	Downdraft	Semi-Downdraft	Cross Draft	Side Downdraft
Intake location	Ceiling plenum	Ceiling (front half)	Front wall	Ceiling + side wall
Exhaust location	Floor pit	Rear wall, low	Rear wall	Opposite side wall
Airflow direction	Vertical downward	Diagonal down/rear	Horizontal	Diagonal side/down
Floor pit required	Yes	No	No	No

NOTE	<i>All maintenance procedures in this manual apply to all booth types. For pressurized booths with an Air Make-Up Unit (AMU), refer to your AMU manufacturer documentation or contact PFS at (888) 545-7715.</i>
-------------	--

Your Booth Information

Record your booth details below. Keep this information handy when contacting PFS for parts, service, or warranty support.

Field	Your Information
Booth Type / Configuration	
Booth Serial Number	
Date of Installation	
Installing Company / Technician	
Fan Model	
Filter Type / Size	
PFS Service Contact	(888) 545-7715 info@pfsspraybooths.com

General Safety

Follow all safety guidelines when assembling, operating, or servicing this product.

WARNING

There are inherent hazards associated with the operation and service of this equipment. For your personal safety, observe all safety information. Failure to observe these safety practices can result in personal injury or death.

WARNING

Operation and maintenance of this product must be performed by qualified personnel who observe all warnings in all documentation provided with the product.

WARNING

Follow all general standards for installation and safety for work on installations. Follow all good practices for the proper use of lifting tackle and equipment. Protective equipment such as safety goggles and protective footwear must be used.

WARNING

All persons who will operate, service, inspect, or otherwise handle this product must read and understand the safe operating practices, safety precautions, and warning messages in this documentation.

WARNING

The roofs of this equipment are not designed or intended to be walked upon or to support weight of any kind. Roof access must be secured through a properly supported platform satisfying ASCE 7 and ASCE 37 load requirements. Always use appropriate fall safety protocols when using an elevated platform.

WARNING

Comply with OSHA guidelines and with all applicable local electrical, safety, and fire codes and standards.

WARNING

All field wiring must comply with local codes or, in the absence of local codes, the National Electrical Code (NFPA 70). Article 516 covers applicable use of flammable and combustible materials.

WARNING

Electrical installation must be completed by a qualified electrician and must meet all applicable national, state, and local electrical codes.

WARNING

Ensure that all electrical components are grounded to a central ground.

WARNING

Disconnect and lock out the main electrical service before installing, adjusting, or servicing the product.

WARNING

Guards and covers that prevent contact with electrically energized or moving parts must not be removed or left open during operation.

WARNING

Welding, cutting, and other spark-producing operations shall not be permitted in or adjacent to a booth until a written permit authorizing such work has been issued by a person in authority following inspection of the area.

WARNING

Local fire and building codes require fire protection. Check with local inspector authorities for requirements.

CAUTION

Read and save these instructions before attempting to assemble, install, operate, or maintain the product. Failure to comply could result in personal injury and/or property damage.

CAUTION

Only qualified personnel should operate and maintain this equipment. Instruct all personnel in the safe conduct and operation of the system.

CAUTION

Safety signs, panels, and labels affixed to the product must be replaced immediately if illegible or missing.

CAUTION

Where applicable, use earplugs or take other safety measures for hearing protection.

NOTICE

The product must be installed and serviced only by a trained, qualified service technician. Incorrect installation may void the warranty. Contact PFS at (888) 545-7715 with warranty questions.

Booth Safety

DANGER

Ceiling panel load capacity: You must use temporary platforms that span at least two structural frames for maintenance. Do not walk on or apply any pressure to lights or explosion (deflagration) relief panels.

WARNING

All equipment must be operated and maintained in accordance with local, state, and federal (OSHA) requirements governing occupational safety, fire protection, and booth operations. Operators must read and understand all included equipment and component manufacturer's instructions prior to use.

WARNING

Install the booth in compliance with locally enforced codes and standards.

WARNING

A fire suppression system is required by the International Fire Code and NFPA 33. A fire suppression system is not supplied with this booth.

WARNING

Do not allow overspray to accumulate on the inside of the paint booth walls. Remove overspray as soon as possible to prevent fire hazard. Use a non-ferrous, non-sparking scraper.

WARNING

Do not leave piles of paint sweepings in the booth. They create a possible fire hazard.

WARNING

Treat used filters and any other paint-contaminated items as flammable products and dispose of them safely.

WARNING

If coatings containing nitrocellulose are sprayed in the booth, all residue must be removed from exhaust diffuser components and all exhaust filters must be changed at least once a day.

WARNING

Improper disposal of used filters may cause spontaneous combustion. Consult local authorities for storage and disposal requirements. Immediately remove all contaminated filters and place them in a non-combustible container with a tight-fitting lid, or in a water-filled metal container.

WARNING

Duct the exhaust air from the fan to the outdoors. Do not operate the booth unless exhaust has been properly ducted.

WARNING

Isolate the outdoor vent from air-conditioning intakes, windows, and any other equipment that may recirculate the exhaust indoors.

WARNING

Turn on the exhaust fan before using the spray booth. Ensure the exhaust fan is operating correctly before entering the booth.

WARNING

Check local codes to see if a booth interlock is required. A booth interlock prevents spray devices from operating unless the exhaust fan is running.

WARNING

Some spray activities may require the use of respiratory protection. Use an OSHA-approved paint spray respirator when spraying in the booth.

WARNING

Do not operate the booth when the manometer indicates the filters need to be replaced.

WARNING

Do not overfill the manometer. Overfilling allows fluid to collect in the flexible plastic connecting loop, which could cause a serious reading error.

WARNING

This equipment is designed for the removal of particulate matter only. Reduction of VOCs requires either coating reformulation or additional equipment.

WARNING

Fall Hazard (Downdraft booths): Do not walk or drive over the pit without the bar grating in place. Do not remove bar grating unless authorized to do so.

CAUTION

Become familiar with all controls before operating or servicing this booth.

CAUTION

Proper door alignment is critical to the operation of the booth. Ensure that there is equal space around the doors.

NOTICE

Store equipment indoors pending installation. If storing crates outside, protect contents from moisture to prevent equipment damage.

NOTICE

Failure to anchor the booth structure to the floor properly may result in structural damage. See the Equipment Anchoring section.

Safety Features

For operator safety, compressed air may only enter the spray gun when the booth is in Spray mode, the fans are operating, light covers are in place, and all door interlocks are satisfied.

Standard on All Booths

- Fire Suppression Interlock: Type 1 (dry chemical) shuts down the ventilation system in the event of a fire or fault. Type 2 (wet system) locks out the spray permissive signal while keeping ventilation running. Local Codes and AHJ must provide guidance on interlock type.
- Manometer: Provides a visual indication of exhaust airflow through filters and indicates when filters are dirty.
- Lighting (LDPI Class 1 Division 2): All lights are inside-accessible for maintenance.
- Lighting Lens Safety Interlock: A magnetic actuated switch proves the lens cover is properly installed. All lights are interlocked in series — spray activity is not allowed if the circuit is broken. The light fixture remains illuminated in the fault condition.
- Exhaust Air Proving Switch: Monitors differential air pressure of the exhaust fan. Spray permissive is only enabled when the fan is confirmed running at the required minimum differential pressure.
- Air Solenoid Valve (ASV): Located in the compressed air supply line to spray equipment. All safety features must be functioning before the ASV is activated.

NOTICE

For pressurized booths equipped with an Air Make-Up Unit, additional safety interlocks apply including door monitoring, high temperature limit, and cure cycle interlock. Contact PFS at (888) 545-7715 for pressurized booth safety documentation.

Booth Components

Filters

All PFS booths use two types of filters: intake and exhaust. Intake filters prevent dust and particulates from entering the booth. Exhaust filters capture overspray before it exits.

- Intake filters help prevent dust and particulates from entering the booth work area.
- Exhaust filters capture and retain overspray, preventing paint particles from escaping into the environment.


All filters should fit tightly in filter frames. Improperly installed filters allow unfiltered air into the booth's work area, which may deposit visible contamination on the surface being painted. The buildup of paint overspray on exhaust filters must be monitored to ensure they are not becoming overloaded — use the manometer or a documented inspection program.

NOTE

Some weather conditions such as smog, fog, or frost produce atmospheric dust concentrations much higher than normal. In such conditions, intake filters may become saturated sooner than usual.

Manometer

Your booth is equipped with a Dwyer Mark II molded plastic inclined/vertical manometer, providing $\pm 3\%$ accuracy. It is mounted on the outside of the booth and measures the pressure differential between air entering and exiting through the filters. When the fluid gauge passes the red dirty filter arrow (typically 1/2-inch W.C.), the exhaust filters must be replaced.

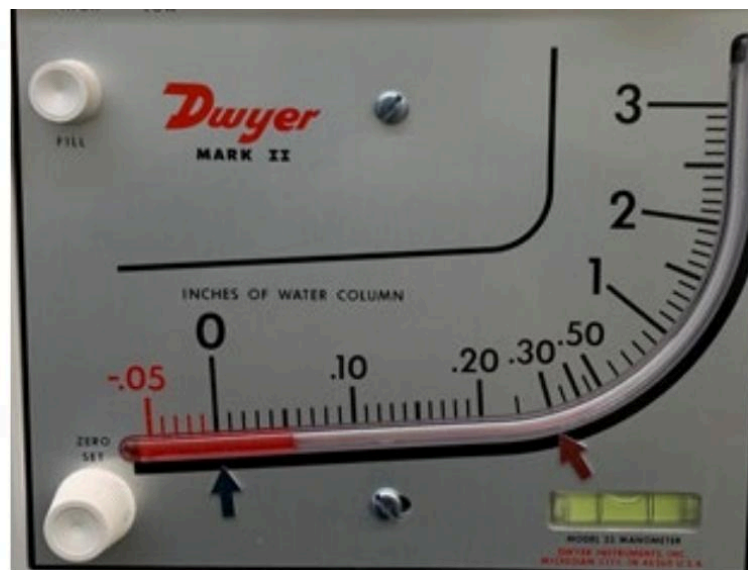

Dwyer Mark II Manometer — monitors pressure differential across exhaust filters. Red arrow indicates the dirty filter threshold. Zero the gauge with the booth off before taking readings.

WARNING

Do not operate the spray booth when the manometer indicates the filters need to be replaced.

WARNING

Do not overfill the manometer. Overfilling allows fluid to collect in the flexible plastic connecting loop, which could cause a serious reading error.



Mark II Molded Plastic Manometers


3% Accuracy For Stationary And Portable Applications



Mark II Model No. 25 inclined-vertical manometer.
(shown with optional A-612 portable stand)

Model	Range	Fluid Used
Mark II 25	0-3 in. w.c.	Red oil, .826 s.g.
Mark II 25*	0-7 in. w.c.	Blue oil, 1.91 s.g.
Mark II 27*	0-700 fpm	Red oil, .826 s.g.
Mark II 28*	0-10,500 fpm	Blue oil, 1.91 s.g.
Mark II MM-80	0-80 mm w.c.	Red oil, .826 s.g.
Mark II MM-180	0-180 mm w.c.	Blue oil, 1.91 s.g.
Mark II M-700PA	0-700 Pa	Red oil, .826 s.g.


*Require Pitot tube at additional cost. See Air Velocity section.

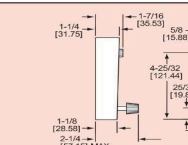

SPECIFICATIONS

Accuracy: $\pm 3\%$ full scale.
Maximum Working Temperature:
Maximum Internal Working Pressure


A-612, Portable Stand



Mark II Model No. 40-1 inclined manometer

Model	Range	Fluid Used
Mark II 40-1	.1-0-1.0 in. w.c.	Red oil, .826 s.g.
Mark II 40-25mm	0-26 mm w.c.	Red oil, .826 s.g.
Mark II 40-250PA	10-0-250 Pa	Red oil, .826 s.g.
Mark II 41-2	2-0-2.4 in. w.c.	Blue oil, 1.91 s.g.
Mark II 41-600mm	0-60 mm w.c.	Blue oil, 1.91 s.g.
Mark II 41-600PA	20-0-600 Pa	Blue oil, 1.91 s.g.
Mark II 40-1-AV*	0-1.1 in. w.c. & 0-4200 fpm	Red oil, .826 s.g.
Mark II 40-250PA-AV*	0-260 Pa & 0-21 mps	Red oil, .826 s.g.
Mark II 41-2-AV*	0-2.5 in. w.c. & 0-6300 fpm	Blue oil, 1.91 s.g.

*Require Pitot tube at additional cost. See Air Velocity section.

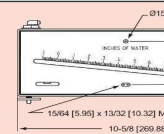

SPECIFICATIONS

Accuracy: $\pm 3\%$ full scale.
Maximum Working Temperature:
Maximum Internal Working Pressure
Scale Length: Approx. 8 1/2" (21.5 cm)

A-606, Air Filter Kit

Dwyer® Mark II series molded manometers are of the inclined and inclined-vertical types. The curved inclined-vertical tube of the Model 25 gauge provides higher ranges with more easily read increments at low readings. The Model 25 is excellent for general purpose work. The Model 40 inclined gauge provides linear calibration and excellent resolution throughout its range. The Model 40 is ideally suited for air velocity and air filter gauge applications. Both gauge types are capable of pressure measurements above and below atmospheric as well as differential pressure measurements.

Construction — Mark II manometers are economically priced, compact and available in both stationary and portable configurations. Portable stand is standard on Model 40, available as optional A-612 stand for Model 25. Construction is simple with virtually indestructible molded white styrene-acrylonitrile housing, indicating tube and fluid wells, molded ABS knobs and zero adjust plunger, shock mounted glass level vial and leak proof "O" ring seals. Moderate overpressures are accommodated by an overflow tank incorporated in the Model 25. Greater protection is provided by float operated overflow traps in the Model 40. Scales are lithograph printed on aluminum and epoxy coated.

Installation — Mark II manometers are mounted to a wall or panel with the two mounting screws provided. Before mounting screws are tight to zero, connect the tubing, and Accessories — Included with each manometer are two 1/8" pipe or sheet metal clamps for attaching to 1/8" pipe or sheet metal duct. Indicating fluid, red and green pour oil, is included with each manometer. The Model 25 also includes 8 : 1 pressure ratio connections to contain pressure. The Model 40 contains two 4-1/2" swing-out stand and leveling screws for convenient rapid shutoff pressure connections.

OEM Specials — All Dwyer® Manometers are available in OEM quantities with your logo.

Exhaust Fan — ACME HQ Inline Belt Drive

Your booth is equipped with an ACME Model HQ inline belt drive, low-sound tubeaxial propeller fan. The HQ fan is a belt-drive tubeaxial exhauster with the motor, drives, and bearings located outside the airstream. Capacities up to 80,000 CFM and up to 2-inch static pressure.



Belt Drive Tubeaxial Fan Models HQ

Lower Sound Patented

Includes the following Model/Options	
HQ	General Ventilation

Model HQ fan is a belt drive, tubeaxial exhauster with the motor, drives and bearings located outside the airstream. The HQ custom designed propeller achieves a high airflow capacity and reduced sound. Capacities up to 40,000 CFM and up to 2 inch static pressure. The HQ is designed to operate in any position and is furnished with mounting flanges on both ends for easy installation.



Construction Features

Housing

- Constructed of heavy gauge rolled steel
- Rolled flange at each end for ease of mounting
- Gasketed access door for servicing on model sizes 42" - 60"
- Streamlined belt and bearing enclosure eliminates turbulence and air drag

Coating

- All steel components shall have ACME-SEAL polyester powder coating

Aluminum Propeller

- Heavy duty, all welded aluminum construction standard on all sizes
- Circular-arc blades for high airflow capacity and lower sound
- Precision balanced for smooth vibration free operation

Bearings

- Permanently lubricated in an Acme D.S. pillow block housing
- Bearings are resiliently mounted in neoprene rings
- Rated at L50 life of 200,000 hours
- **5 year** limited warranty on Acme D.S. pillow block bearings

Drive Assembly

- Cast iron drives sized for 150% of drive horsepower
- Static free, oil and heat resistant belts

Motors

- Continuous duty motors located outside the airstream
- Motors shipped mounted to the fan

Options/Accessories

- Coatings
- Unitary Pillow Block Bearings
- Mounting Base
- Companion Flange
- Weather Cover/Belt Guard
- Inlet Bell
- Inlet/Outlet Guards
- Belt Guard

Standard Construction Features	HQ
Heavy Gauge Rolled Steel	x
Aluminum Low Sound Propeller	x
Integral Inlet and Outlet Flanges	x
Bearings L50 life of 200,000 hours	x
Continuous Duty Motors	x
Breather Tube for Bearings	x
UL705	x

Listed models are available in all sizes and performance ranges.
For submittals, detailed air and sound information, available options and accessories, please go to FANTastic® Commercial www.acmefan.com.




Consult your Acme representative for availability.

ACME Model HQ — Belt Drive Tubeaxial Fan. Lower Sound Patented. Motor, drives, and bearings located outside the airstream. UL 705 Listed.



Belt Drive Tubeaxial Fan Models HQ

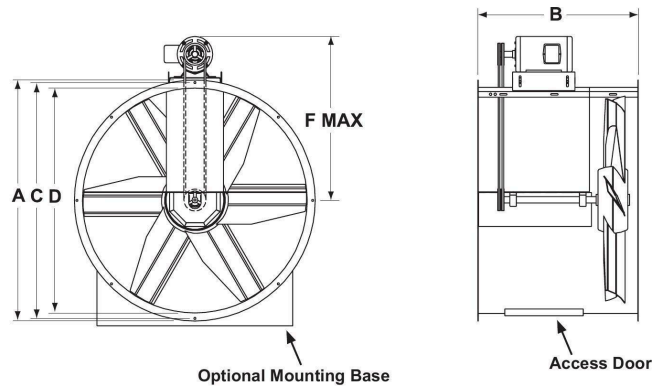

Inline Axial Fans

DIMENSIONS						
Fan Model	A	B	C	D	F Max.	Access Door
HQ12	14.56	12.00	13.44	12.22	17.00	None
HQ16	18.50	16.50	17.38	16.10	19.00	None
HQ18	21.00	16.50	19.75	18.48	20.50	None
HQ21	23.88	18.00	22.50	21.25	22.41	None
HQ24	26.88	18.00	25.75	24.44	24.00	None
HQ30	33.64	24.00	32.12	30.60	29.00	None
HQ36	39.76	29.00	38.26	36.60	32.19	None
HQ42	45.78	32.00	44.28	42.60	37.00	12.00 x 17.00
HQ48	51.78	36.00	50.28	48.60	42.00	12.00 x 17.00
HQ54	57.78	39.00	56.28	54.60	45.00	15.00 x 17.00
HQ60	64.28	43.34	63.03	60.57	49.00	16.00 x 18.00

Dimensions are shown in inches.

ACME Model HQ — Dimensions (inches). Models HQ12 through HQ60. Access door on models HQ42 and larger.

- Statically and dynamically balanced to Balance Quality Grade G6.3.
- Factory run-tested to ANSI/AMCA 204-96 BV-3: Rigidly Mounted 0.15 in/sec, Flexibly Mounted 0.20 in/sec.
- Aluminum propeller blades; heavy-duty all-welded aluminum construction.
- Pillow block bearings rated at L50 life of 200,000 hours. 5-year warranty on Acme D.S. pillow block bearings.

NOTICE

If vibration is excessive, shut down the fan immediately and determine the cause before resuming operation. See Common Causes of Excessive Vibration in the Service Procedures section.

Lighting — LDPI Industrial Fixtures

Your booth is equipped with LDPI industrial lighting. The standard fixture is the 400SLB fluorescent — a Class 1, Division 2 rated inside-mount fixture. LED lighting is available as an optional upgrade in two models: the LE485E and the LE484. LED fixtures are not standard and are specified at time of order.

NOTE

If your booth is equipped with LED lighting, it was specified as an optional upgrade and is not standard. LED fixtures require different lamp replacement procedures — see the Optional LED Lighting section below.

Standard Fixture — LDPI 400SLB (Class 1, Division 2)

The LDPI 400SLB is the standard PFS booth light. It is rated for Class 1, Division 2 hazardous locations and is installed inside the booth. Features a 20-gauge powder-coated shallow steel housing (2" deep), 3/16" clear tempered glass lens, front-access door for convenient relamping, and a magnetic paint spray cutoff switch. Available as a 4 or 6 lamp T8 or T5HO fixture. Lamps sold separately




400SLB

HAZARDOUS - BOOTH

Industrial • Paint and Powder booths • Blast Booths • Prep, Inspection, Sanding Areas

The 400SLB Series Inside Access fixture features a 20 gauge powder coated, shallow steel housing that is 2" deep. This 4 Ft. fixture is available as a 4 or 6 lamp fixture with T8 and T5HO lamping options. This series provides front door fixture access with a completely removable lens assembly and comes with a paint spray cutoff switch. LAMPS SOLD SEPARATELY.



1 SERIES	2 LAMP TYPE	3 LAMP QUANTITY
400SLB	T5HO: 54W T8: 32W	4L: 4 Lamps 6L: 6 Lamps
4 VOLTAGE	5 FINISH	6 REFLECTOR
UNV1: 120-277V 50/60Hz UNV2: 347-480V 50/60Hz (T5HO only)	PC: Powder Coated Steel SS: Stainless Steel Powder Coated White AS: Aluminized Steel	PR: White Powder Coat HB: High Brightness Reflector

LISTINGS

UL 844
CSA 22.2 No. 137.0
Paint Spray Listed
UL 1598 Wet / Damp
CSA 22.2 No. 250.0
Class I D2 Groups A,B,C,D T4 135°C
Class II D2 Groups F,G T4 135°C
40°C ambient rating

FEATURES

20 gauge steel construction with a powder coat finish
Front access housing for convenient relamping and servicing

LENS

3/16" clear tempered glass

ELECTRICAL

Voltages of 120-277, 347-480 (T5HO only)

OPTIONS

3 Ft. 5-wire whip
Stainless steel powder coated white housing
Aluminized steel housing
High brightness reflector

NOTE

Normally open magnetic switches are intended to be used to trigger a relay (furnished by others) which disables the paint system. Because of the small capacity of the switch a solid state relay is recommended. It may be desired by others to utilize a separate power supply to segregate the relay (furnished by others) from the lighting power supply. The magnetic switch IS NOT designed to directly control light operation! The magnetic switch is rated for 10 watts resistive at a maximum of 300 VAC.

CAUTION



Overloading the switch circuits WILL cause failure.
LDPI, Inc. recommends having a certified electrician/engineer review loads to ensure that overloading of switch does not occur.



LDPI 400SLB — Hazardous Booth, Class 1 Division 2 — specifications, listings, lamp types, finish and reflector options

400SLB


HAZARDOUS - BOOTH

Industrial • Paint and Powder booths • Blast Booths • Prep, Inspection, Sanding Areas



DIMENSIONS

Fixture dimensions are nominal. Cut-out dimensions are actual.

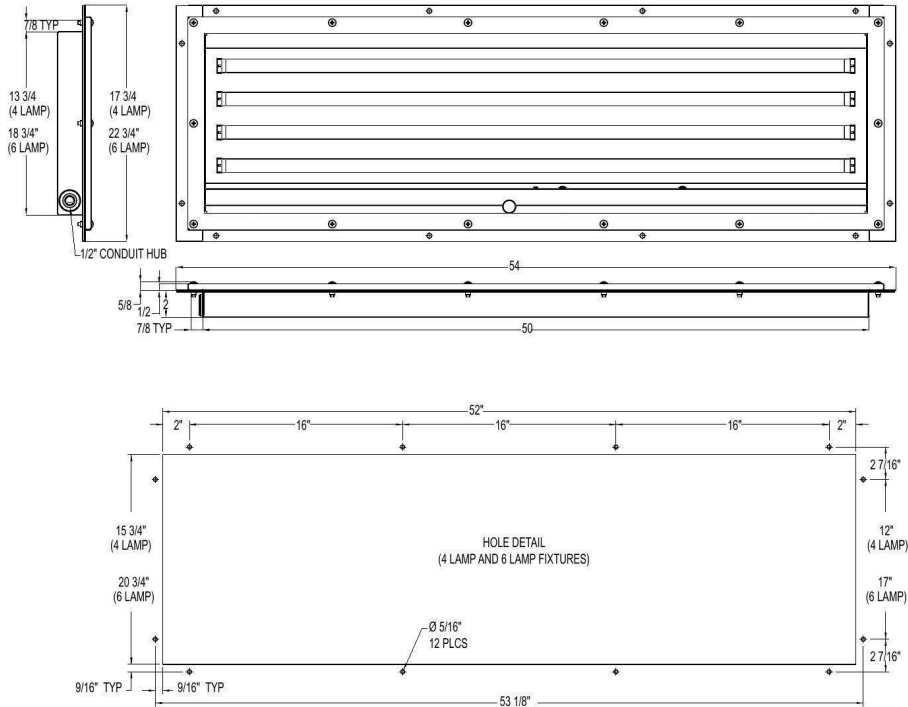

LDPI 400SLB — fixture dimensions and panel cutout dimensions (4-lamp and 6-lamp). Cut-out dimensions are actual.

CAUTION

The 400SLB magnetic switch is rated for 10 watts resistive at 300 VAC maximum. It is NOT designed to directly control light operation — it triggers a relay (furnished by others) to disable the paint system. Overloading the switch circuits WILL cause failure. Have a certified electrician/engineer review loads before connecting.

Optional LED Fixture — LDPI LE485E (Class 1, Division 2)

OPTIONAL — LED

The LE485E is an optional LED upgrade. It is not standard equipment. If your booth has LE485E fixtures, they were specified at time of order. LED fixtures do not use replacement lamps — the LED module is the light source. Contact PFS for LED service support.

The LDPI LE485E is a recessed mount, front-access LED paint booth luminaire for Class 1, Division 2 hazardous locations. Available in 4 Ft. lengths with 1 or 2 rows of LEDs. Designed as a drop-in replacement for the 400SLB — fits the same panel cutout. Features dimming capability (0-10V), withstands 71°C bake cycles, and carries a 5-year warranty. 62W draws 120–277VAC.



LE485E

HAZARDOUS - BOOTH - FRONT ACCESS

Paint and Powder Booths • Blast Booths • Clean Rooms • Prep • Sanding

The LE485E Series is a recessed mount, front access, LED paint booth luminaire. This LED fixture is available in 4 Ft. lengths with 1 or 2 rows of LED's; replacing your standard 4 lamp fluorescent fixture. The LE485E Series fixtures is designed to fit into a double wall booth. This fixture can be used with or without optics, has dimming capabilities, and is available with an EM option. Designed as a cost effective and energy efficient solution to replace or upgrade your booth to LED lighting.



2 Row w/ Diffused Lens



1 SERIES	2 SOURCE	3 CONFIGURATION	4 VOLTAGE	5 OPTIC	6 DIMMING	7 CCT
LE485E	62: 62W	N1: 1 Row-Narrow Housing W1: 1 Row-Wide Housing W2: 2 Row-Wide Housing	V1: 120-277VAC (50/60Hz)	Blank: None A: Diffused Acrylic	Blank: None D1: 0-10V	3: 3,500K 4: 4,000K 5: 5,000K
8 WIRE WHIP*	9 OPTIONS		10 MOUNTING LOCATIONS			
Blank: None WH: Wire Whip (10ft.) *3-wire wire whip standard. Total number of leads dependent on options ordered.	SP: Surge Protector (430 joules) EM: Battery/Driver Backup (90min.)		H: Hinged Lens w/ Interlock Switch* CH: Ceiling/ Hip Mount. (No interlock switch or hinge) ** *H option for use in walls, ceiling, or hips **CH option for use in hip and ceiling only			

CERTIFICATIONS

UL844 / CSA-C22.2 No.137 (Hazardous)
 CI D2, Grps A,B,C,D
 CII D2, Grps F,G
 Paint Spray Listed
 T Code: CI D2, CII D2 = T3C
 UL1598 / CSA-C22.2 No.250 (Wet/Damp)
 Lumen Maintenance (L70) >60,000 hrs. (reported)
 CRI >80
 -25°C to 55°C Ambient (IC / NonIC)

CONSTRUCTION

20 gauge white powder coated steel housing
 Silicone free gaskets
 4 Ft. length (nominal)
 Clear, tempered glass lens access panel
 1/2" NPT Hub(s)
 Weights: Min: 42 lbs. / Max: 68 lbs.

ELECTRICAL

120-277VAC
 6KV Built-in driver surge protection

*These products are Manufactured in the USA with both domestic and imported components; not all fixture configurations are compliant. Contact LDPI Sales with specific part number and requirement - Build America, Buy America, TAA or any other federal procurement act for compliance confirmation. Compliance

FEATURES

Optional Dimming: 0-10V
 Recess mount - Front access
 Withstands up to 71°C bake cycle for 90 minutes with fixture power interlock off
 Emergency/Battery backup option available
 Fits in the same cutout as Slim Light and 400 Series fluorescent fixtures
 5 year warranty




Designed to fit into double wall booths.
 Fixture recess depth 2.13 in.

PERFORMANCE

Source	Voltage (VAC) 50/60Hz	Input Current (A)	Wattage (W)	CCT	Lumen Output* (Lm)			
					No Optic	Diffused Arcylic Optic		
62 (1&2 Row)	120-277	0.53 - 0.23	62	3,500K	7660	6140		
				4,000K	7820	6270		
				5,000K	7900	6330		
Emergency Mode			10.4	3,500K	2,500	2,020		
				4,000K	2,550	2,060		
				5,000K	2,590	2,090		


LDPI LE485E — Hazardous Booth, Front Access LED — specifications, certifications, performance data, and configuration options

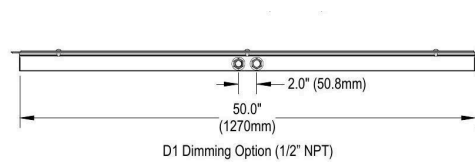

	W1: Wide 1 Row	W2: Wide 2 Row
	14.31" (363mm)	18.06" (459mm)
* Nominal dimensions		

Consult factory for custom hub locations

PANEL CUTOUT DIMENSIONS

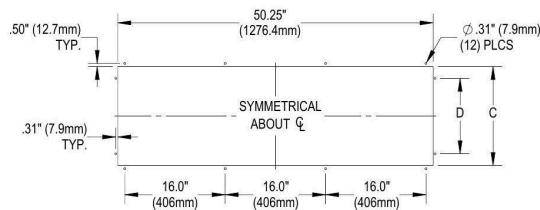

Configuration	Dimensions* (in./mm)	
	C	D
N1: Narrow (1 Row)	10.75" (273.1mm)	7.0" (177.8mm)
W1: Wide (1 Row)	15.75" (400.1mm)	12.0" (304.8mm)
W2: Wide (2 Row)		
* Actual dimensions		



LDPI LE485E — panel cutout dimensions. Wide (W1/W2) configuration: 50.25" × 15.75" cutout. Fits same opening as 400SLB fluorescent fixture.

Optional LED Fixture — LDPI LE484 (Class 1, Division 2)

OPTIONAL — LED

The LE484 is an optional LED upgrade. It is not standard equipment. The LE484 is a square fixture with a different panel cutout than the 400SLB — it is not a drop-in replacement. If your booth has LE484 fixtures, they were specified at time of order.

The LDPI LE484 is a lightweight, recessed mount LED paint booth luminaire for Class 1, Division 2 hazardous locations. Features a copper-free cast aluminum housing, impact-resistant glass, IP67 rating, NEMA 4X, and patented design. 75W, 120–480VAC. Available with diffused (120°) or T.I.R. optic (60° focused beam). CRI >90. 5-year warranty.



LE484


HAZARDOUS LOCATION - BOOTH

Paint Booth • Powder Booth • Blast Booth • Clean Room • Prep Sanding

The LE484 is a new approach to booth lighting. It is a lightweight, recessed mount, LED paint booth luminaire. The LE484 utilizes LED technology and redefines how booth lighting is done. It is made of a cast aluminum housing with diffused or 60° optics with dimming capabilities. Paint Spray listed.



patented design

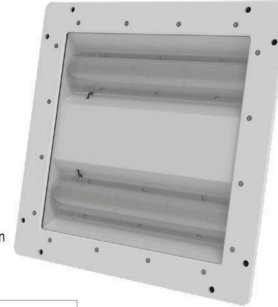

1 SERIES	2 SOURCE	3 VOLTAGE / DIMMING	4 CCT	5 OPTIC / BEAM ANGLE
LE484	L1: 75W	V1: 120-277VAC (50/60Hz) / 0-10V V2: 347-480VAC (50/60Hz) / 0-10V V3: 120-277VAC (50/60Hz) / DALI	5: 5,000K	D: Diffused Optic / 120° T: T.I.R. LED Optic / 60°
Notes: 1. Product comes standard with 8Ft. 3-wire whip installed. 2. (3) 1/2" NPT Hub Locations				

CERTIFICATIONS

UL844 / CSA-C22.2 No.137 (Hazardous)
C1 D2, Grps A,B,C,D
C11 D1, Grps E,F,G
C11 D2, Grps F,G
C11
Paint Spray Listed
T-Code: C1 D2, C11 D1, C11 D2, C11 =T6
UL1598 / CSA-C22.2 No.250 (Wet/Damp)
Lumen Maintenance (L70) >60,000 hrs (reported)
CRI>90 / R9>50
-25°C to 45°C Ambient (IC)
-25°C to 55°C Ambient (Non IC)
NEMA 4X
IP67
FCC

FEATURES

High CRI
Thin, Low profile design
0-10v or DALI dimming
5 Year Warranty

PERFORMANCE

Source	Voltage (VAC) 50/60Hz	Input Current (A)	Wattage (W)	CCT	Lumen Output* (Lm)	
					Diffused Optic	TIR Optic
L1	120-277	.63 - .27	75	5,000K	8270	9070
	347-480	.21 - .15				
* Nominal values						

CONSTRUCTION

Copper-free cast aluminum housing
Silicone-free gaskets
Impact resistant glass
Powder coat white
(3) 1/2" NPT hubs
Weight: 18 lbs.
All exposed fasteners are stainless steel

ELECTRICAL

120-277 / 347-480VAC
Through wiring rated
10Kv Surge protection built in
8Ft. 3-Wire whip standard, factory Installed




DIFFUSED




TIR (60°)

LDPI LE484 — Hazardous Location, LED — specifications, certifications, performance data, and optic options
(Diffused 120° and T.I.R. 60°)



PANEL CUTOUT DIMENSIONS

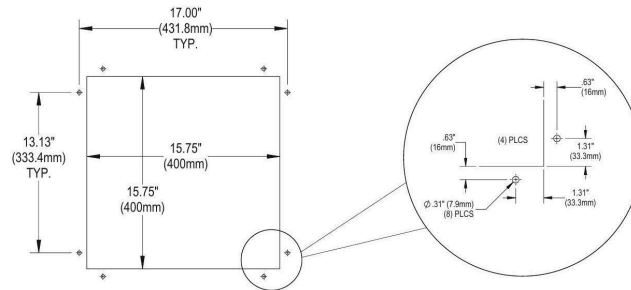

LDPI LE484 — panel cutout dimensions: 17.00" × 13.13" typical. Note: different cutout size than 400SLB — not a direct swap.

Doors

A standard booth includes one personnel door and one swing-type product door. Optional door styles include roll-up or bi-fold. Drive-through configurations include two product doors.

Operator Interface Terminal

The operator interface terminal is the screen or pushbutton control panel used to control the booth — including startup, spray, and shutdown sequences. Refer to the control panel operator manual for your specific booth model for complete operating instructions.

Filter Program & Extended Warranty Support

PFS 1-Year Filter Supply Program

Enrollment in the PFS 1-Year Filter Supply Program helps maintain proper airflow performance and system efficiency through the use of approved intake and exhaust filtration media. Customers who purchase and maintain documented use of PFS-specified filters may qualify for extended warranty support options beyond the standard coverage period.

Consistent use of approved filtration helps preserve designed static pressure, fan performance, and motor loading characteristics. Extended warranty eligibility and program details are available upon request.


Why It Matters

- Using non-approved filters may alter static pressure and overload the fan motor.
- Documented filter use is required for extended warranty eligibility.
- PFS-approved filters are engineered to the specific airflow and efficiency requirements of your booth.

To Enroll or Order Filters

Filter Ordering: www.pfsfilters.com

Or contact PFS directly: (888) 545-7715 | info@pfsspraybooths.com

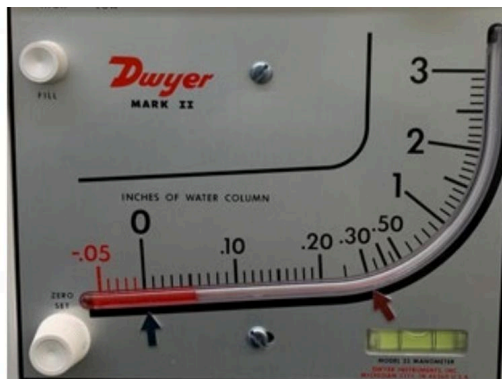

Change filters when manometer fluid reaches the red dirty filter arrow

Scan to reorder PFS-approved filters from the OEM

[PFS]
FILTERS
ORDER OR REORDER
PAINT BOOTH FILTERS
[SCAN NOW](#)



www.pfsfilters.com
FAST · SIMPLE · RELIABLE
OR CALL: 855-496-7969

Filter Replacement Schedule

The following schedule applies when using PFS-approved filters. Adjust frequency based on coating type, hours of operation, and environmental conditions.

Filter Type	Visual Inspection	Pressurized Booth	Non-Pressurized Booth
Intake filters	Daily	Every 4–6 months	Every 2 months
Exhaust filter media	Daily	When manometer indicates	When manometer indicates

NOTE

If coatings containing nitrocellulose are used, change exhaust filters at least daily and remove all residue from exhaust diffuser components. Some weather conditions (smog, fog, frost) may accelerate filter loading.

WARNING

Treat used filters and paint-contaminated items as flammable products. Improper disposal may cause spontaneous combustion. Consult local authorities for proper storage and disposal requirements. Immediately place used filters in a non-combustible container with a tight-fitting lid, or a water-filled metal container.

**MAINTENANCE
RECOMMENDATION**
FILTER CHANGE INTERVALS

MODEL
ORION

EXHAUST FILTERS

USE LEVEL	CHANGE INTERVAL
Light Use	Every 1 Month
Medium Use	Every 2 Weeks
Heavy Use	Every 1 Week

INTAKE FILTERS

USE LEVEL	CHANGE INTERVAL
Light Use	Every 60 Days
Medium Use	Every 30 Days
Heavy Use	Every 2 Weeks

Change filters regularly to maintain optimal booth performance

SCAN TO
ORDER FILTERS

pfsfilters.com/shop

Service and Maintenance

Maintenance Schedule

The frequency of maintenance checks depends upon the material being sprayed and hours of operation.


Items to Be Inspected and/or Cleaned	Daily	Weekly	Monthly	Yearly
Inspect and clean the manometer	X			
Check intake or exhaust filters; replace as needed	X			
Remove overspray buildup from ceiling, walls, floor, and doors	X			
Check lights; replace defective bulbs if needed	X			
Check operation of product doors		X		
Clean intake duct, exhaust duct, plenums, and control panel housing			X	
Inspect and clean the exhaust fan, inlet and intake areas			X	
Inspect and service exhaust fan motor (Baldor) — lubrication per nameplate				X

Daily Maintenance

Inspect and Clean the Manometer

Perform the following steps to inspect and clean the manometer.

Dwyer Mark II Manometer — the red arrow marks the dirty-filter threshold. When the fluid level reaches the arrow,

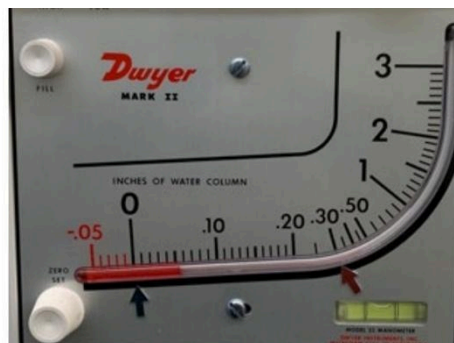

replace filters immediately.

1. With the booth operating, check the manometer to determine if the filters need to be replaced. Filters must be replaced when the fluid gauge passes the red dirty filter arrow (typically 1/2-inch W.C.; follow manufacturer's recommendations for non-standard filter types).

WARNING

Do not operate the spray booth when the manometer indicates the filters need to be replaced.

2. Check the fluid level in the manometer and adjust as needed.

WARNING

Do not overfill the manometer. Overfilling allows fluid to collect in the flexible plastic connecting loop in the back of the manometer, which could cause a serious reading error. If the manometer is subject to overflow, verify that the fluid has not passed into the plastic connecting loop.

3. Make sure the manometer reads zero when the booth is off. If not, zero it with the white adjustment knob. Make sure the tubing is disconnected and the gauge is open to the atmosphere before adjusting zero.
4. Clean the manometer with mild soap and a soft, damp cloth.

Inspect Filters and Replace as Needed

Use PFS-approved replacement filters. See the Filter Program section and visit abcfilters.net to order.

5. Remove and safely dispose of used filter media per the requirements in the Filter Program section.
6. For exhaust filters (downdraft booths): Remove the bar grating from the pit and set aside. Place the new filter roll at one end of the pit with the air-leaving (dense) side facing down. Roll out the filter along the length of the pit. Cut off the excess at the far end. Replace the bar grating (cross rods on top).

WARNING

Do not walk or drive over the pit while the bar grating is removed.

7. For intake filters: Insert the new intake filter into the filter rack so that the tacky side faces the air-leaving side of the booth. Ensure the filter is under the bolt or bolt head.


WARNING

Treat used filters and any other paint-contaminated items as flammable products and dispose of them safely.

2. Insert the new intake filter into the filter rack so that the tacky side of the filter is toward the air-leaving side of the booth.

NOTE

Ensure that the filter is under the bolt or bolt head, as shown in the inset, below.

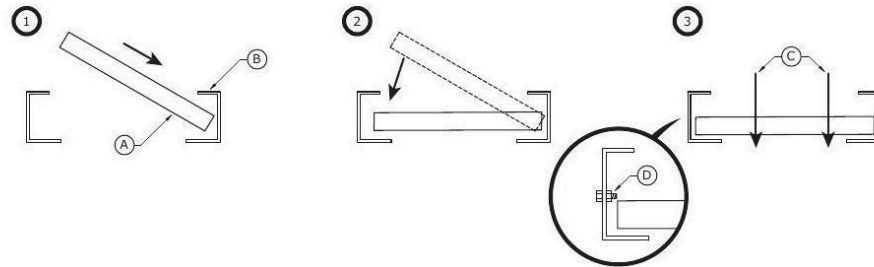

A: Tacky side of intake filter
B: Filter rack
C: Airflow direction
D: Keep the filter under the bolt or bolt head

Filter installation: (A) Tacky side of intake filter (B) Filter rack (C) Airflow direction (D) Keep filter under bolt or bolt head

Remove Overspray Buildup

WARNING

Do not allow overspray to accumulate on booth walls. Remove it as soon as possible to prevent fire hazard. Use a non-ferrous, non-sparking scraper to avoid igniting combustible material.

8. Remove overspray buildup from the ceiling, walls, floor, and doors. Replace booth paper or protective coating when worn or dirty. Check that doors open and latch without difficulty.
9. Visually inspect all other surfaces for accumulated buildup; remove overspray or clean as required.

Check Lights

- If a specific bulb is burned out or noticeably dimmer than others: See the Replace a Defective Bulb section.
- If overall light quality is diminished: See the Replace the Protective Light Covering section.

Weekly Maintenance

Check Operation of Non-Roll-Up Product Door

10. Remove any overspray from the door or clean as required.
11. Check that the door swings freely and the latch holds the door firmly in place.
12. Check that the closed door has a good seal.

Monthly Maintenance

Clean Booth Components

13. Inspect the intake and exhaust ductwork. Scrape off any buildup, then sweep or vacuum it up. Dispose of waste safely.

WARNING

Paint-contaminated items are flammable and may cause spontaneous combustion. Consult local authorities for proper storage and disposal requirements.

14. Inspect intake and exhaust plenums. Scrape off any buildup; sweep or vacuum and dispose of waste safely.
15. Inspect the control panel housing. Clean with a compressed air duster or vacuum as needed.

Inspect and Clean the Exhaust Fan

CAUTION

Use care when touching the exterior of an operating motor or a motor that has just been shut down. Motors usually run hot and may cause injury.

16. Disconnect and lock out the exhaust fan, including the main electrical service.
17. Check that the fan inlet and intake area are clean and free from obstructions.
18. Check bearings for excessive play; replace if necessary.

NOTE

In most cases, motors are permanently lubricated.

19. Clean any accumulated oil and dust from the fan, inlet, wheel, and other moving parts.
20. Check fan belt tension; adjust if necessary. See the Adjust Belt Tension section.
21. Inspect V-belt alignment; adjust if necessary. See the Check V-Belt Drive Alignment section.
22. Verify all fasteners are tight.
23. When the booth is safe to operate, remove lockout/tagout and restore power.

Yearly Maintenance

Exhaust Fan Motor — Annual Service (Baldor)

Your exhaust fan is driven by a Baldor continuous-duty motor. The motor bearings are prelubricated at the factory. Perform the following annual inspection and service.



Belt Drive Tubeaxial Fan Models HQ

Lower Sound Patented

Model HQ fan is a belt drive, tubeaxial exhaustor with the motor, drives and bearings located outside the airstream. The HQ custom designed propeller achieves a high airflow capacity and reduced sound. Capacities up to 40,000 CFM and up to 2 inch static pressure. The HQ is designed to operate in any position and is furnished with mounting flanges on both ends for easy installation.



Standard Construction Features	HQ
Heavy Gauge Rolled Steel	X
Aluminum Low Sound Propeller	X
Integral Inlet and Outlet Flanges	X
Bearings L60 life of 200,000 hours	X
Continuous Duty Motors	X
Breather Tube for Bearings	X
UL795	X

Listed models are available in all sizes and performance ranges. For substitutes, detailed air and sound information, available options and accessories, please go to P40Bases Commercial www.acmetn.com.

Includes the following Model Options

See

Construction Features

Housing

- Constructed of heavy gauge rolled steel
- Roller flange at each end for ease of mounting
- Gasketed access door for servicing on model sizes 42" - 60"
- Streamlined belt and bearing enclosure eliminates turbulence and air drag

Coating

- All steel components shall have ACME-SEAL polyester powder coating

Aluminum Propeller

- Heavy duty, all welded aluminum construction standard on all sizes
- Circular-arc blades for high airflow capacity and lower sound
- Precision balanced for smooth vibration free operation

Bearings

- Permanently lubricated in an Acme D.S. pillow block housing
- Bearings are resiliently mounted in neoprene rings
- Rated at L50 life of 200,000 hours
- 5 year limited warranty on Acme D.S. pillow block bearings

Drive Assembly


- Cast iron drives sized for 150% of drive horsepower
- Static free, oil and heat resistant belts

Motors

- Continuous duty motors located outside the airstream
- Motors shipped mounted to the fan

Options/Accessories

- Coatings
- Unitary Pillow Block Bearings
| Mounting Base | |
| Companion Flange | |
| Weather Cover/Belt Guard | |
| Inlet Bell | |
| Inlet/Outlet Guards | |
| Belt Guard | |



Consult your Acme representative for availability.

BALDOR
A MEMBER OF THE ABB GROUP

9/14

Baldor — A Member of the ABB Group

ACME HQ fan with Baldor motor mounted outside the airstream

DANGER

Disconnect and lock out the main electrical service to the fan before performing any motor service. Do not work on energized equipment.

24. Disconnect and lockout/tagout the main electrical service to the exhaust fan.
25. Inspect motor enclosure for damage, cracks, or blocked ventilation openings. Clean with compressed air or a dry cloth — do not use water or solvents.
26. Check motor mounting bolts for tightness. Mounting bolts must be high tensile steel with a suitable locking device (spring washer or thread lock compound).
27. Inspect all electrical connections for tightness and signs of heat damage or corrosion. Refer to the wiring diagram inside the motor junction box.
28. Check motor shaft for wobble or axial movement that could indicate worn bearings.
29. Lubricate motor bearings if grease fittings are present — see lubrication schedule below. If no fittings are present, the motor uses sealed, factory-lubricated bearings and requires no field lubrication.
30. Replace the motor if it requires replacement — the replacement must match all nameplate data (HP, voltage, phase, RPM, frame size). The service factor may be higher than the original.
31. Remove lockout/tagout and restore power. Verify motor starts smoothly and runs without unusual noise, vibration, or heat.

Baldor Motor — Lubrication Schedule & Procedure

Lubrication

This is a ball bearing motor. The bearings have been lubricated at the factory. Motors that do not have regrease capability are factory lubricated for the normal life of the bearings.

Relubrication Intervals (For motors with regrease capability)

New motors that have been stored for a year or more should be relubricated. Lubrication is also recommended at these intervals:

Relubrication Intervals

NEMA (IEC) Frame Size	Rated Speed (RPM)			
	3600	1800	1200	900
Up to 210 incl. (132)	5500Hrs.	12000Hrs.	18000Hrs.	22000Hrs.
Over 210 to 280 incl. (180)	3600Hrs.	9500Hrs.	15000Hrs.	18000Hrs.
Over 280 to 360 incl. (225)	*2200Hrs.	7400Hrs.	12000Hrs.	15000Hrs.
Over 360 to 5000 incl.(300)	*2200Hrs.	3500Hrs.	7400Hrs.	10500Hrs.

* Lubrication interval for 6313 or 6314 bearings that are used in 360 through 5000 frame, 2 pole motors. If roller bearings are used, bearings must be lubricated more frequently, divide the interval by 2.

Lubricant

Baldor motors are pregreased, normally with Polyrex EM (Exxon Mobil). If other greases are preferred, check with a local Baldor Service Center for recommendations.

Procedure

Clean the grease fitting (or area around grease hole, if equipped with slotted grease screws). If motor has a purge plug, remove it. Motors can be regreased while stopped (at less than 80°C) or running.

Apply grease gun to fitting (or grease hole). Too much grease or injecting grease too quickly can cause premature bearing failure. Slowly apply the recommended amount of grease, taking 1 minute or so to apply. Operate motor for 20 minutes, then reinstall purge plug if previously removed.

Caution: Keep grease clean. Mixing dissimilar grease is not recommended.

Amount of Grease to Add

Frame Size NEMA (IEC)	Weight of grease to add ounce (gram)	Volume of grease to add	
		inches ³	teaspoon
Up to 210 incl. (132)	0.30 (8.4)	0.6	2.0
Over 210 to 280 incl. (180)	0.61 (17.4)	1.2	3.9
Over 280 to 360 incl. (225)	0.81 (23.1)	1.5	5.2
Over 360 to 5000 incl.(300)	2.12(60.0)	4.1	13.4

Maintenance Interval for Motors with Baldor Shaft Grounding Brush

Baldor shaft grounding motors are designed for long life, but do require periodic replacement. Recommended interval for changing the brush assembly on all frame sizes:

Replacement Intervals

Baldor AC Motor Maintenance Instructions — Relubrication Intervals, Lubricant, Procedure, and Grease Amounts (Baldor Form LB5001)

NOTE

Baldor motors are pregreased with Polyrex EM (Exxon Mobil). If other greases are preferred, check with a local Baldor Service Center. Keep grease clean — mixing dissimilar greases is not recommended. Apply grease slowly (1 minute per application). Too much grease or injecting too quickly can cause premature bearing failure. Run motor 20 minutes after greasing, then reinstall purge plug.

CAUTION

Do not exceed the relubrication interval for your frame size and motor speed. For motors with grease fittings: clean fitting before applying grease gun. Remove purge plug. Motors can be regreased while stopped (at less than 80°C) or running.

General Service Procedures

Replace a Defective Bulb

NOTE

Perform this task if a specific light bulb is burned out or noticeably dimmer than others. Standard booths use LDPI 400SLB fluorescent fixtures. If your booth has LED fixtures (LE485E or LE484), there are no replaceable lamps — contact PFS at (888) 545-7715 for LED fixture service.

WARNING

Before servicing, lockout/tagout the main electrical service to the booth.

32. Remove and lockout/tagout power supplied to the booth.
33. Remove any protective covering from the light being replaced.
34. Remove the screws securing the light cover to the panel. Support the light cover when removing the last screws.
35. Pull the light cover away from the panel and place it in a safe location.

NOTE

If no protective covering is used, clean overspray from the light cover and panel before removal.

36. Remove the burned-out light bulb (held by a heavy-duty pressure lock telescopic lamp holder).
37. Replace the bulb by pushing one end of the new tube into one spring-loaded holder, then sliding the other end into the other holder.
38. Replace the light cover and secure with the screws.
39. Once all light covers are installed and the booth is safe to operate, remove lockout/tagout and restore power. Verify all bulbs illuminate.
40. Apply a fresh protective covering over the light if applicable.

Replace the Protective Light Covering

41. Remove the protective covering from all lights (peel off Lens Protector film or score and peel Booth Shield coating).
42. Discard the used covering and apply a fresh layer over all lights.

Adjust Belt Tension

WARNING

Operating drives without guards in place can result in severe injury or death. Replace all guards before removing locks and restoring power.

WARNING

Before servicing, lockout/tagout the main electrical service to the device.

CAUTION

Do not tighten belts by changing the setting of the motor pulley, as this changes fan speed and may damage the motor.

NOTICE

Over-tightening causes excessive belt wear and noise. Under-tightening causes slippage at start-up and uneven wear. Readjust after 8 hours of initial operation, again at 100 hours, and periodically thereafter.


43. Measure the belt span (straight-line distance between the two sheave contact points).

·tightening results in too much tension, causing excessive belt wear and noise. Under-tightening results in too little tension, causing slippage at start-up and uneven wear.

· **service an AMU fan:** Disconnect and lock out the main electrical service to the AMU fan.

· **service an exhaust fan:** Disconnect and lock out the main electrical service to the exhaust fan.

Measure the belt span as illustrated below.

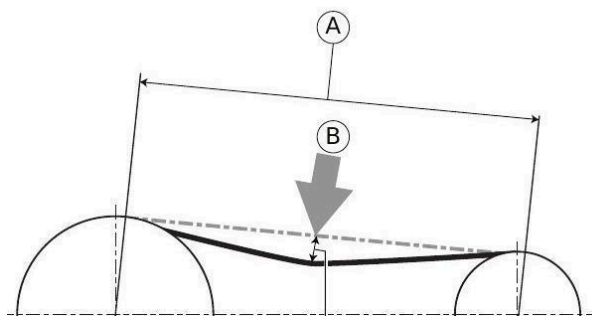

Belt tension measurement: (A) Span length (B) Force (C) Deflection

44. Calculate the required deflection: multiply belt span by 1/64. Example: 32-inch span = 1/2-inch deflection.

45. Apply force evenly across the width of the belt at the center of the span and measure the deflection:

Belt Type	New Belt Force (lbs)	Used Belt Force (lbs)
A	4.2–8.0	2.8–5.4
B	6.7–9.4	4.5–6.3
5VX	18.9–23.4	11.2–15.5

46. Adjust the belt tension if the measured deflection is greater than the calculated deflection.
47. When the booth is safe to operate, remove lockout/tagout and restore power.

Replace Fan Belts

WARNING Before servicing, lockout/tagout the fan, including the main electrical service.

48. Loosen the motor hold-down bolts and move the motor toward the fan. Slip the belt off the motor sheave and remove it from the blade shaft sheave.
49. Match the replacement belt to the same length and section as the removed belt.

		pounds)
A	4.2-8.0	2.8-5.4
B	6.7-9.4	4.5-6.3
5VX	18.9-23.4	11.2-15.5

4. With the force still applied, measure the actual belt deflection. Adjust the belt tension if belt deflection is greater than the calculated deflection.
5. When the booth has been returned to a safe for operation state, remove locks and r

Replace fan belts

WARNING

Before servicing, lockout/tagout the fan, including the main electrical service.

1. Loosen the motor hold-down bolts and move the motor toward the fan. (This is done with a jackscrew which is a part of the motor base on models having larger motors.) The belt is then slipped off the motor sheave and then easily removed from the sheave on the blade shaft.
2. Check the numbers on the belt and make the replacement with a belt having the same length and section.



Fan belt identification — match the replacement belt number to the original


50. Adjust the motor outward to tighten the belt and tighten the hold-down bolts. Ensure the motor sheave end face is parallel to the driven sheave end face.
51. Adjust belt tension per the Adjust Belt Tension section above.
52. Verify all fasteners are tight. When the booth is safe to operate, remove lockout/tagout and restore power.

Check V-Belt Drive Alignment

1. Check that the fan and motor sheaves are in axial alignment; adjust sheaves as required.

NOTE


Shafts are parallel in both the vertical and horizontal planes.

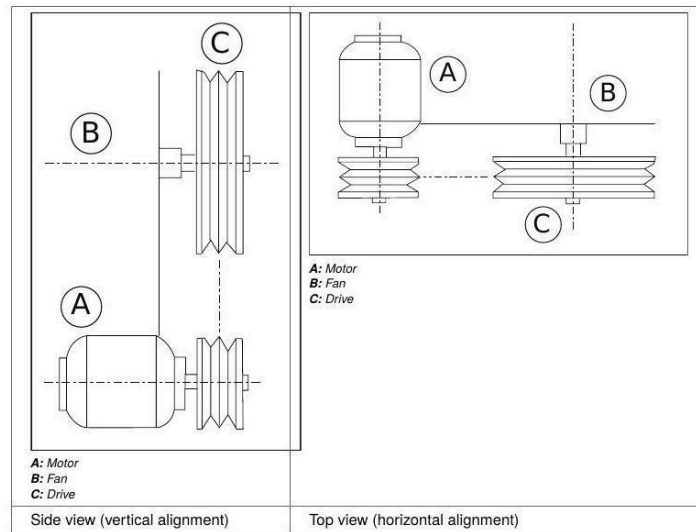

V-belt axial alignment — shafts must be parallel in both vertical (side view) and horizontal (top view) planes

53. Check that fan and motor sheaves are in axial alignment (shafts parallel in both planes); adjust as required.
54. Check radial alignment: align equal-width sheaves with a straight-edge; align center of unequal-width sheaves.

- When sheaves are of equal width, align the sheaves with a straight-edge (inset A).
- When sheaves are of unequal width, align the center of the sheaves (inset B).

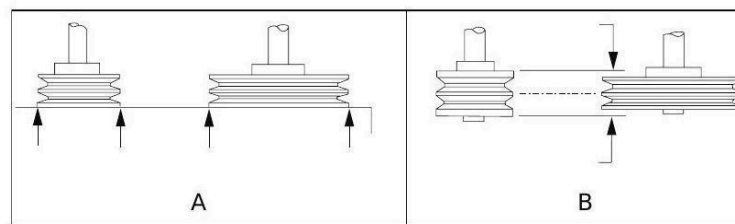

A: Equal-width sheaves: Align to straight-edge touching sheaves at arrows
B: Unequal-width sheaves: Align to center of sheaves

3. Verify that sheaves have no noticeable eccentricity.


V-belt radial alignment: (A) Equal-width sheaves (B) Unequal-width sheaves — align to center

55. Verify that sheaves have no noticeable eccentricity.
56. If adjustments were made, check belts for proper tension.
57. Check the complete assembly for smoothness of operation.

Replace Fan Bearings

NOTE

Locking collars may be located on either end of the bearings for ease of installation. This shows one locking collar on the drive end and one locking collar on the fan end, which is typical for a tubeaxial type fan. A typical SWSI centrifugal fan would have both collars mounted on both ends of the bearings. Drop the mounting bolts in place, snug them, and adjust the position for proper spacing at either end.

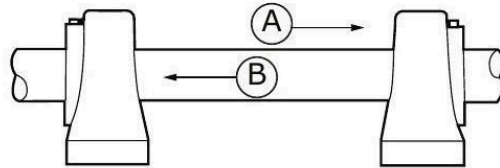

A: Airflow
B: Thrust

2. Using the blade as a guide, center both ends of the shaft in the housing of tubeaxial fan.

NOTE

On centrifugal fans, the shaft is positioned 90° to the scroll side, with the wheel inlet centered in the scroll inlet. Use the clearance in the mounting holes for horizontal adjustment. Use shims for vertical adjustment, if necessary.

3. Confirm that the shaft and bearings are in proper alignment.

Fan bearing installation: (A) Airflow direction (B) Thrust direction

58. Place new bearings loosely on the shaft. Drop mounting bolts in place, snug them, and adjust shaft position with proper spacing at either end.

59. Using the blade as a guide, center both ends of the shaft in the housing.

NOTE

On centrifugal fans, position the shaft 90° to the scroll side, with the wheel inlet centered in the scroll inlet.

60. Confirm shaft and bearings are in proper alignment (shaft should slide freely from end to end).
61. Tighten bearings to the base plate; verify shaft position again.
62. Tighten the eccentric cam locking collar at the blade/wheel end by turning in the direction of shaft rotation to the lock position, then tighten the set screw.
63. Grasp the sheave end of the shaft and pull toward the fan inlet while tapping the locking collar of the sheave end bearing in the opposite direction with a soft mallet.
64. Tighten the sheave end bearing eccentric cam locking collar while maintaining constant pressure on the shaft toward the fan inlet.

Common Causes of Excessive Vibration

- Damage in shipping, handling, or poor installation may upset the unit's balance.
- The support structure is not sufficiently rigid or level. Resonance in ductwork or structure amplifies vibration.
- Belt tension is too tight or too loose.
- The bearing locking collar or mounting bolts are loose.
- The blade set screw is loose.
- Material has accumulated on the blade.

•

Troubleshooting

For technical support contact Platinum Finishing Systems: (888) 545-7715 or info@pfsspraybooths.com.

Symptom	Probable Cause	Remedy
Not enough airflow	Dirty or clogged filter	Replace the filters. Visit abcfilters.net to order PFS-approved replacement filters.
	Obstructed filters	Remove any obstructions.
	Incorrect filter installed	Change the filter to match specifications.
	Fan is not turning	Check control panel power. For pressurized booths, check for alarm faults at the operator interface. Contact PFS tech support if issue persists.
Too much airflow or negative pressure	Exhaust or intake filters not sealed or dirty	Ensure all filters are in place and properly seated. Change filters. Remove obstructions.
Exhaust fan motor overloads	Dirty filter; belt slipping	Replace filters. Check and adjust belt tension.
Manometer not reading correctly	Low fluid level; obstructions in hoses; not zeroed	Check fluid level; add if necessary. Clear obstructions. Re-zero with booth off.
Light not functioning properly	Light cover dirty; tube burned out	Clean overspray from cover. Replace protective coating or film. Replace light tubes.
Spray permission not activating	Door open; light cover not seated; exhaust fan not proving	Close all booth doors. Reseat all light covers. Verify exhaust fan is running at the operator interface.
Excessive fan vibration	Imbalanced blade; loose hardware; belt tension; resonance	Check for material buildup on blade. Tighten all hardware. Adjust belt tension. Check mounting structure rigidity.

Equipment Anchoring

Overview

All PFS booth structures must be properly anchored to a concrete floor before use. Proper anchoring prevents structural movement during operation and is required for code compliance in most jurisdictions. Failure to properly anchor the booth structure may result in structural damage, voided warranty, and code violations.

NOTICE

Anchor installation must be performed by a qualified contractor in accordance with local building codes. All anchoring must conform to the requirements of the anchor manufacturer's specifications and applicable ICC-ES Evaluation Reports.

Anchor Specifications

PFS booths are anchored using concrete wedge anchors installed through the booth base plate into a minimum 2,500 psi concrete floor. Anchor type, quantity, size, and embedment depth are specified in your booth's Design Drawings. The following general specifications apply:

Specification	General Requirement
Anchor type	Wedge-style concrete anchor (e.g. Simpson Strong-Bolt 2 or approved equivalent)
Minimum concrete strength	2,500 psi
Anchor diameter / size	Per Design Drawings — typically 3/8" perimeter anchors
Nominal embedment depth	Per Design Drawings — typically 2-7/8" minimum
Evaluation / compliance	ICC-ES Evaluation Report required for anchor type used
Anchor quantity	Per Design Drawings — varies by booth size and configuration

CAUTION

Do not install anchors in cracked concrete or concrete that does not meet the minimum strength requirement. Contact PFS or a structural engineer if floor conditions are uncertain.

Anchor Installation Procedure

65. Refer to your booth's Design Drawings for the anchor layout plan, anchor count, and specified anchor size.
66. Mark anchor hole locations on the concrete floor. Use the perimeter layout shown in the Design Drawings.

67. Drill holes to the correct diameter and depth for your specified anchor. Clean holes thoroughly with compressed air and a wire brush.
68. Insert the anchor through the booth base plate and into the drilled hole.
69. Tighten the nut to the installation torque specified by the anchor manufacturer for your anchor diameter and concrete strength.
70. Verify the nominal embedment depth has been achieved at each location.
71. Visually inspect all anchors after installation. Contact PFS or a structural engineer if any anchor does not install correctly or if you are uncertain about anchor performance.

NOTICE

For anchor details specific to your booth — including beam mounting anchors for larger span configurations — always refer to the Design Drawings provided with your booth. Site-specific conditions may require engineered anchor solutions.

Spare Parts and Accessories

Consumable Parts

Maintain the following consumable parts on hand at all times to minimize downtime. Contact Platinum Finishing Systems for all replacement filter orders, parts, and accessories.

- One complete change of filters — exhaust filter media and intake filters. Order at abcfilters.net or call (888) 545-7715.
- One box of replacement LDPI T8 light tubes for 400SLB fixtures (T8 32W or T5HO 54W — match what is installed). Note: LED-equipped booths (LE485E or LE484) do not use replacement lamps.
- One roll of door sealing tape.
- Manometer fluid (red) — Dwyer Mark II compatible.
- One set of replacement V-belts for the exhaust fan (have ACME HQ model number ready when ordering).

When ordering replacement parts, have the following information ready:

- Booth serial number and configuration
- Description of the item and quantity
- Purchase order number or credit card number
- Preferred shipping method and complete shipping/billing address

NOTICE

Contact Platinum Finishing Systems at (888) 545-7715 or info@pfsspraybooths.com to order parts, filters, and accessories. Visit www.pfsspraybooths.com for the full product catalog. For filter orders and the PFS Filter Supply Program, visit www.abcfilters.net.

PFS Accessories : WWW.PFSSPRAYBOOTHS.COM

Appendix A: Exhaust Fan — ACME Model HQ Service Reference

The following is a service and parts reference for the Acme Engineering & Manufacturing Corporation Model HQ Belt Drive Tubeaxial Fan installed in your PFS booth. For the complete installation and maintenance manual visit www.acmefan.com or contact PFS at (888) 545-7715.



Belt Drive Tubeaxial Fan Models HQ

Lower Sound Patented

Includes the following Model/Options	
HQ	General Ventilation

Model HQ fan is a belt drive, tubeaxial exhaustor with the motor, drives and bearings located outside the airstream. The HQ custom designed propeller achieves a high airflow capacity and reduced sound. Capacities up to 40,000 CFM and up to 2 inch static pressure. The HQ is designed to operate in any position and is furnished with mounting flanges on both ends for easy installation.



Construction Features

Housing

- Constructed of heavy gauge rolled steel
- Rolled flange at each end for ease of mounting
- Gasketed access door for servicing on model sizes 42" - 60"
- Streamlined belt and bearing enclosure eliminates turbulence and air drag

Coating

- All steel components shall have ACME-SEAL polyester powder coating

Aluminum Propeller

- Heavy duty, all welded aluminum construction standard on all sizes
- Circular-arc blades for high airflow capacity and lower sound
- Precision balanced for smooth vibration free operation

Bearings

- Permanently lubricated in an Acme D.S. pillow block housing
- Bearings are resiliently mounted in neoprene rings
- Rated at L50 life of 200,000 hours
- **5 year** limited warranty on Acme D.S. pillow block bearings

Drive Assembly

- Cast iron drives sized for 150% of drive horsepower
- Static free, oil and heat resistant belts

Motors

- Continuous duty motors located outside the airstream
- Motors shipped mounted to the fan

Options/Accessories

- Coatings
- Unitary Pillow Block Bearings
- Mounting Base
- Companion Flange
- Weather Cover/Belt Guard
- Inlet Bell
- Inlet/Outlet Guards
- Belt Guard

Standard Construction Features	HQ
Heavy Gauge Rolled Steel	x
Aluminum Low Sound Propeller	x
Integral Inlet and Outlet Flanges	x
Bearings L50 life of 200,000 hours	x
Continuous Duty Motors	x
Breather Tube for Bearings	x
UL705	x

Listed models are available in all sizes and performance ranges. For submittals, detailed air and sound information, available options and accessories, please go to FANTastic!® Commercial www.acmefan.com.




U.L. 705 Listed

Consult your Acme representative for availability.


A.1 Maintenance

CAUTION

Before proceeding, make sure electrical service to the fan is locked in the OFF position. Even when the power supply is locked out, the impeller may "windmill" due to a draft in the system. Secure the impeller to physically restrict rotational movement.

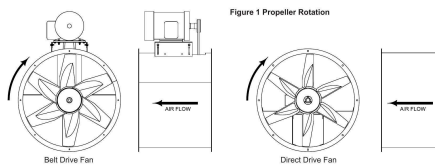

Propeller rotation direction — verify after any belt or bearing service. Belt Drive (left), Direct Drive (right).

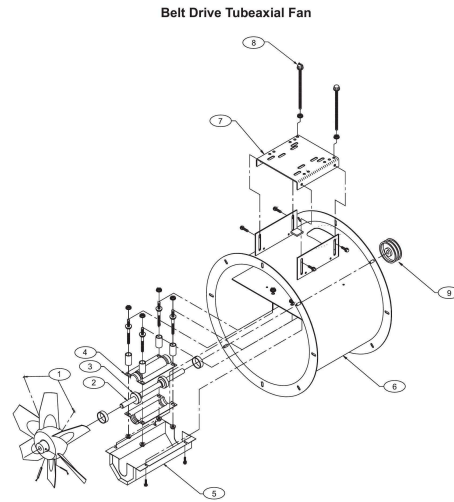

Belt Drive Tubeaxial Fan — component reference (see Parts List, Section A.4)

Periodic Inspection Intervals

Item	Interval	Action
Set screws (propeller and bearings)	See Section A.2	Tighten per torque schedule
Belt well, belts, bearing surfaces, shaft/bearing compartment	Every 3 months	Check for deposits; remove if present
All inner fan surfaces including propeller	Every 3 months	Check for deposits; remove if present
Propeller shaft bearings	Every 3 months	Inspect; replace if noisy, hot, or leaking lubricant
Belt tension (belt drive units)	After first 48 hrs, then annually	Depress belt its width at midpoint between pulleys
Propeller shaft bearings (maximum service life)	Every 5 years	Replace regardless of condition

Bearings

- Propeller shaft bearings are prelubricated and sealed — normally require no service.
- Replace a bearing if it is a source of noise and/or excessive heat, or is losing lubricant.
- Optional pillow block bearings with external lubrication fittings will need no relubrication for 5 years under normal conditions. Use grease conforming to NLGI No. 2.

CAUTION

Do not over-lubricate. Lubricating bearings with a high-pressure gun can blow bearing seals.

Belts

- Check belt tension after first 48 hours of operation, then at least annually.
- When replacing a worn belt, replace the motor pulley if a "shoulder" is worn in the groove.

WARNING

Do not replace the motor pulley with a larger diameter pulley. Do not replace the fan pulley with one smaller in diameter. The pulley ratios are set so the motor will not be overloaded. Do not operate at higher speeds than rated in the catalog.

Motor

- Motor bearings are prelubricated. Consult the information printed on the motor for lubrication instructions.
- If a motor requires replacement, the replacement must match all motor nameplate data from the original motor. The service factor of the replacement motor may be higher than the original.

Propeller Removal

- Sizes 12–18: Loosen set screw above keyway on hub core.
- Sizes 21–48: Remove roll pin on outside of prop hub core by driving out with a drift pin; loosen two set screws on the inside of the prop hub core.

A.2 Set Screw Tightening Schedule & Torque

The set screws holding the propeller and bearings to the shaft must be maintained per this schedule:

- Before initial operation: tighten set screws per the procedure below.
- After 500 operating hours or 3 months (whichever comes first): tighten to full recommended torque.
- At least once per year: tighten to full recommended torque.

Procedure for One Set Screw:

Using a torque wrench, tighten the set screw to the torque in Table 1.

Procedure for Two Set Screws:

72. Tighten one set screw to half the recommended torque in Table 1.
73. Tighten the second set screw to the full recommended torque.
74. Tighten the first set screw to the full recommended torque.

**Table 1. Recommended Tightening
Torque for Set Screws**

Set Screw Diameter	Torque (in-lbs)
#10	35
1/4	80
5/16	126
3/8	240
7/16	384
1/2	744
9/16	1080
5/8	1500
3/4	2580
7/8	3600
1	5400

**VARIABLE FREQUENCY
DRIVES AND MOTORS**

There are occasions when a Variable Frequency Drive (VFD) will cause poor motor performance and possible damage. To avoid these problems, the Company recommends the following:

1. Select compatible motor and VFD inverter; if possible, the motor and the inverter should be from the same manufacturer or at least the inverter selected should be recommended by the motor manufacturer.
2. A motor shaft grounding system should be used to prevent motor bearing damage from eddy currents.

A.3 Variable Frequency Drives (VFD) and Motors

Variable Frequency Drives can cause poor motor performance and possible damage if used incorrectly. Acme recommends the following when using a VFD:

75. Select compatible motor and VFD inverter. When possible, use a motor and inverter from the same manufacturer, or an inverter recommended by the motor manufacturer.
76. Use a motor shaft grounding system to prevent motor bearing damage from eddy currents.

NOTE

Acme Engineering & Manufacturing Corporation will not honor motor warranty claims if these VFD recommendations are not followed.

A.4 Spare Parts List — Belt Drive Tubeaxial Fan

Recommended spare parts are marked with an asterisk (*) below. When ordering replacement parts, list the fan Model, description, and quantity. Contact PFS at (888) 545-7715 to order Acme replacement parts.

PARTS LIST					
Ref. No.	Description	Qty.	Ref No.	Description	Qty.
1	Fan Propeller*	1	6	Fan Tube Assembly	1
2	Shaft*	1	7	Motor Base	1
3	Bearing*	2	8	Motor Base Jack Screw *	2
4	Bearing Cap	2	9	Fan Pulley*	1
5	Bearing Cover	1			

* Recommended spare parts

• Sizes 42 and 48 require 4

WHEN ORDERING REPLACEMENT PARTS, LIST MODEL, DESCRIPTION AND QUANTITY.

Ref.	Description	Qty.	Spare?
1	Fan Propeller	1	✓ Recommended
2	Shaft	1	✓ Recommended
3	Bearing	2	✓ Recommended
4	Bearing Cap	2	
5	Bearing Cover	1	
6	Fan Tube Assembly	1	
7	Motor Base	1	
8	Motor Base Jack Screw	2 (4 on sizes 42 & 48)	
9	Fan Pulley	1	✓ Recommended

Warranty Coverage

- Structural Components: Four (4) years from the original date of shipment or purchase, whichever occurs first, against defects in materials and workmanship resulting from normal use.
- Electrical Components: One (1) year from the original date of shipment or purchase, whichever occurs first, against defects in materials and workmanship. Electrical components manufactured by third parties may also be subject to the original manufacturer's warranty, where applicable.

If PFS determines, after inspection, that a covered defect exists during the applicable warranty period, PFS will, at its sole option, repair or replace the defective component. This repair or replacement shall be the purchaser's sole and exclusive remedy under this Limited Warranty.

Extended Warranty

Extended warranty coverage may be available for qualifying equipment that is continuously maintained using genuine PFS Filters® replacement filters and participates in an approved maintenance program. Eligibility, coverage, and terms are subject to separate written agreement. For additional information, visit www.pfsfilters.com.

Warranty Exclusions

This Limited Warranty does not cover:

- Normal wear and tear.
- Consumable items, including but not limited to filters, belts, seals, gaskets, light bulbs, and similar maintenance items.

- Damage resulting from misuse, abuse, negligence, accident, improper installation, improper operation, unauthorized modifications or repairs, lack of required maintenance, improper storage, corrosion, chemical exposure, acts of God, fire, flood, power surges, or other causes beyond PFS's reasonable control.
- Damage caused by failure to follow PFS installation, operation, maintenance, or safety instructions.
- Labor, travel expenses, freight, shipping, rigging, removal, reinstallation, downtime, loss of production, or other incidental costs unless expressly agreed to in writing by PFS.

Disclaimer of Warranties

EXCEPT AS EXPRESSLY PROVIDED IN THIS LIMITED WARRANTY, PFS DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW.

Limitation of Liability

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, PFS SHALL NOT BE LIABLE FOR ANY INDIRECT, INCIDENTAL, SPECIAL, CONSEQUENTIAL, EXEMPLARY, OR PUNITIVE DAMAGES, INCLUDING BUT NOT LIMITED TO LOST PROFITS, LOST REVENUE, LOSS OF USE, BUSINESS INTERRUPTION, OR LOSS OF PRODUCTION, WHETHER ARISING IN CONTRACT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY, OR OTHERWISE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

IN NO EVENT SHALL PFS'S TOTAL LIABILITY EXCEED THE ORIGINAL PURCHASE PRICE PAID FOR THE SPECIFIC PRODUCT GIVING RISE TO THE CLAIM.

Warranty Claims

To obtain warranty service, the purchaser must promptly notify PFS in writing upon discovery of the alleged defect and provide proof of purchase. Any component requested by PFS for inspection must be returned freight prepaid unless otherwise authorized in writing. Warranty service may be denied if products have been altered, improperly installed, or used outside their intended design parameters.

Governing Law

This Limited Warranty shall be governed by and construed in accordance with the laws of the State of California, without regard to its conflict-of-law principles, and any applicable federal laws governing interstate commerce. Any provision found unenforceable shall not affect the validity or enforceability of the remaining provisions of this Limited Warranty.

Limitations of Liability

Any liability for consequential and incidental damages is expressly disclaimed. PFS's liability in all events is limited to and shall not exceed the replacement price of the part.

Product Suitability & Code Compliance

Paint spray booths and industrial finishing equipment are subject to numerous federal, state, provincial, and local regulations, including building, fire, electrical, environmental, OSHA, and NFPA requirements. Because these requirements vary by jurisdiction and application, the purchaser is responsible for ensuring the selected equipment is appropriate for its intended use and complies with all applicable laws, regulations, and codes.

PFS manufactures equipment based on the specifications and information provided by the purchaser. Unless expressly stated in a written agreement, PFS does not guarantee that a product is suitable for a specific application or that it satisfies every code or permitting requirement at the installation site.

The purchaser is responsible for:

- Confirming the equipment is suitable for its intended application.
- Obtaining all required permits, approvals, and inspections.
- Verifying compliance with all applicable federal, state, provincial, and local regulations.
- Ensuring the equipment is installed, operated, and maintained by qualified personnel in accordance with PFS documentation and all applicable codes.

PFS is not responsible for costs, delays, penalties, modifications, or damages resulting from improper installation, misuse, unauthorized modifications, incorrect application, permitting issues, or failure to comply with applicable laws or regulations.

NOTICE

When ordering replacement parts, provide: Fan Model number, part description, quantity, and your PFS booth serial number. Contact PFS at (888) 545-7715 or info@pfsspraybooths.com

