




# UFACTORY **XARM**

## Quick Start Guide

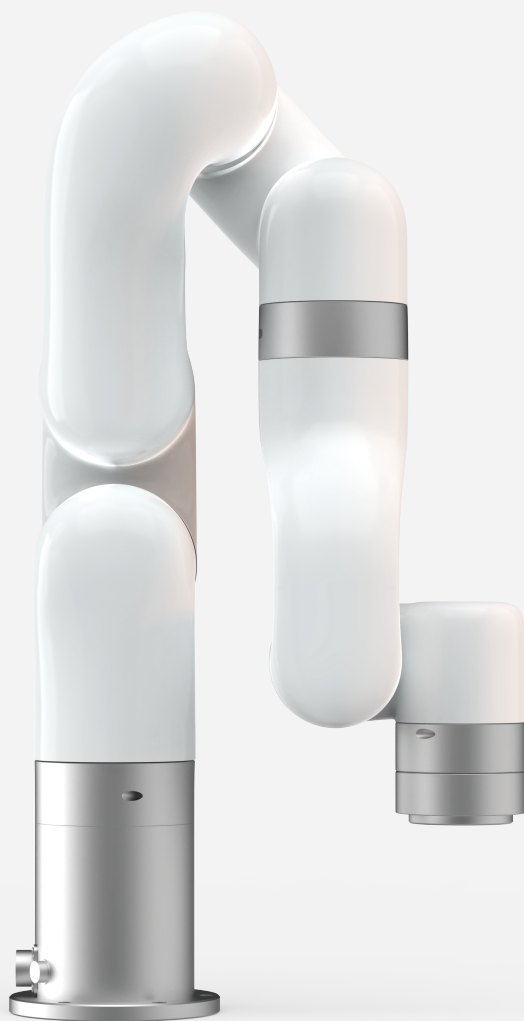

S H E N Z H E N   U F A C T O R Y   C O . ,   L T D .

V   2 . 7 . 0

# UFACTORY xArm Quick Start Guide

## Operational Guidelines for Robotic Arm:

When you have connected all the parts, it should look like Figure 1.

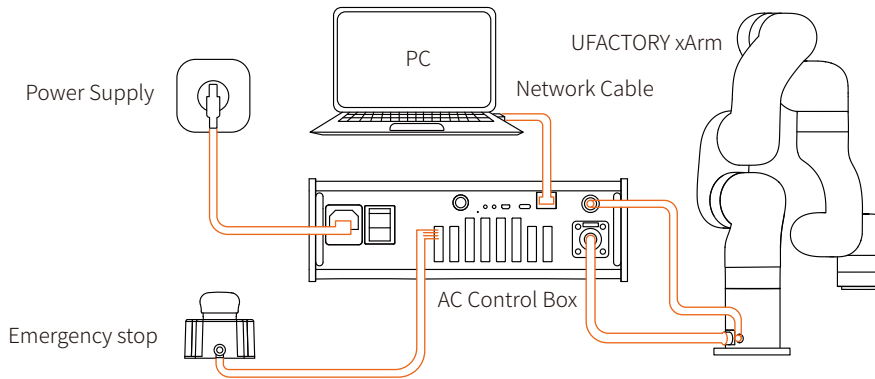


Figure 1

## 1. Robotic Arm Connection

Plug the connector of the Robotic Arm Power Supply Cable and the Robotic Arm Signal Cable into the interface of the Robotic Arm (as shown in Figure 2). The connector is error proof. Please do not unplug and plug it violently;

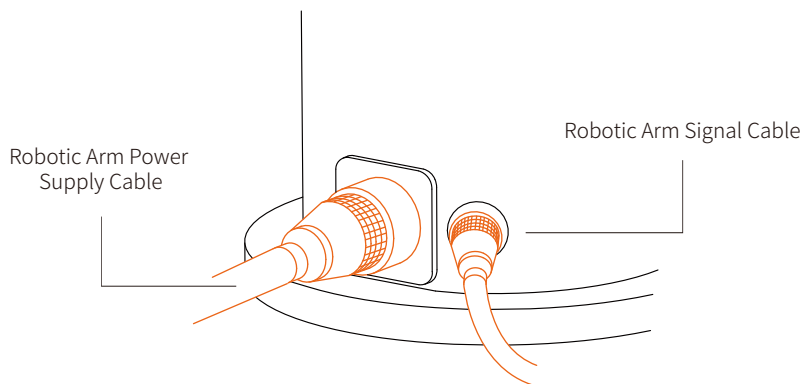


Figure 2

## 2.Control Box Connection

Plug the Robotic Arm Power Supply Cable and the Robotic Arm Signal Cable into the Control Box (as shown in Figure 3);

Plug the Network Cable into the interface marked LAN on the Control Box, and plug the other end of the Network Cable into the PC (as shown in Figure 1);

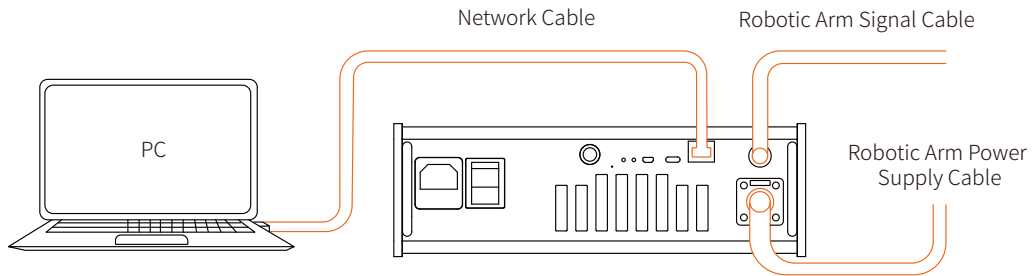


Figure 3

## 3.Powering on Control Box

Plug the Control Box Power Cable into the AC (110V-240V) interface on the Control Box and the other end into the socket (as shown in Figure 4);

Turn on the red power switch (OFF/ON) at the side of the Control Box (as shown in Figure 4);

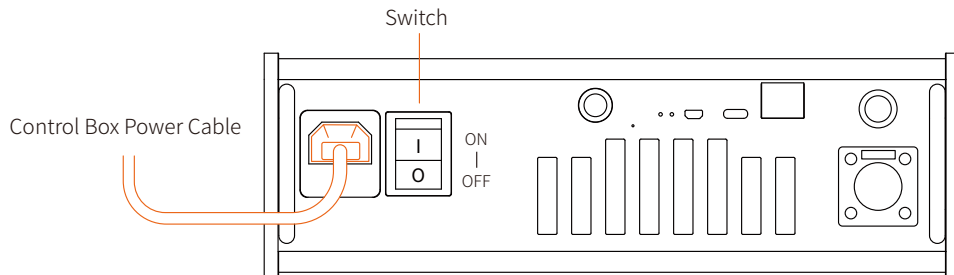


Figure 4

## 4.Powering on UFACTORY 850

Connect the Emergency stop to controller's IO, Turn the emergency stop button clockwise, and the ROBOT PwR indicator will light up, indicating that the Robotic Arm is powered on (as shown in Figure 5);

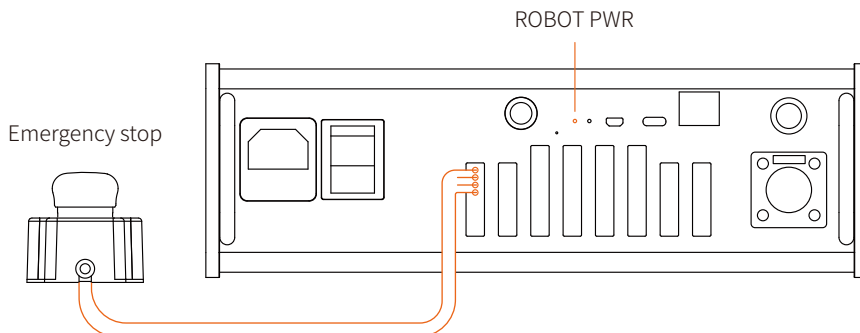


Figure 5

## 5.Connecting and Using UFACTORY Studio

(a) Ensure that all the hardware connection steps have been completed;

(b) Configure the IP address of the PC

(i) Set the IP address of the PC: Make sure the PC and the Control Box are in the same LAN environment.

The network segment of Control Box is 192.168.1.xxx (x is a number between 1 and 255), which means that the IPV4 network segment of the PC must be between 192.168.1.1 and 192.168.1.255 (the end number of IP address shall be different from that of the Control Box);

The factory IP address of the device has been marked on the Control Box; The configuration steps on PC are shown in Figure 6.1-6.5;

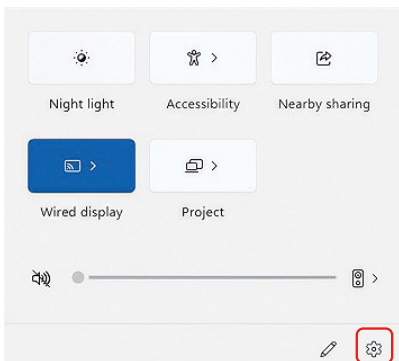


Figure 6.1

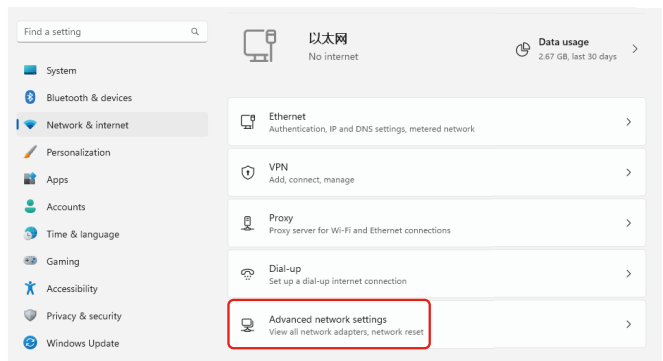


Figure 6.2

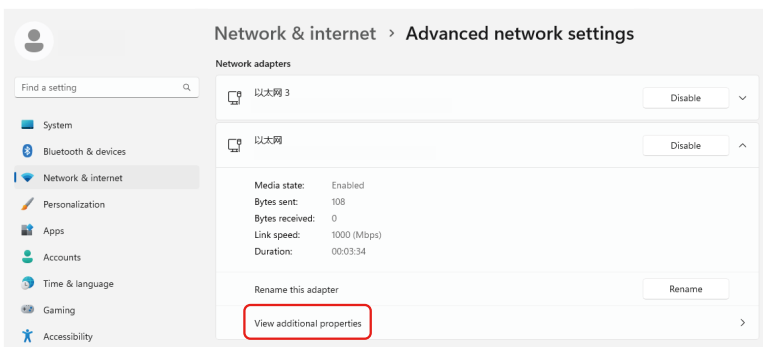


Figure 6.3

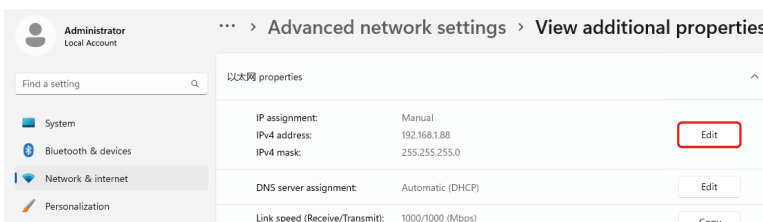


Figure 6.4

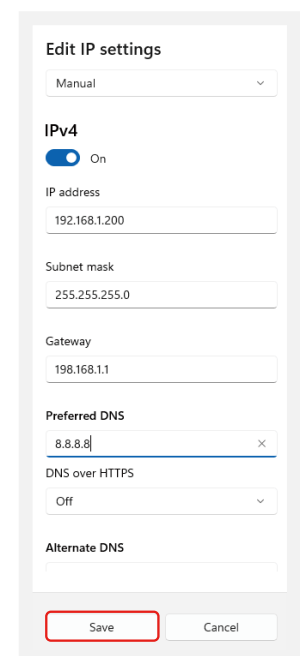


Figure 6.5

- (ii) Verify the IP address of the PC: Enter cmd in the search box (as shown in Figure 7.1), open a command window, directly ping the IP address of the Robotic Arm entering the command line: ping 192.168.1.xxx which can send and receive data packets successfully (as shown in Figure 7.2);

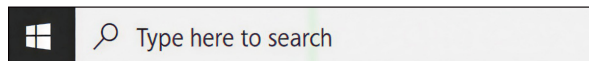


Figure 7.1


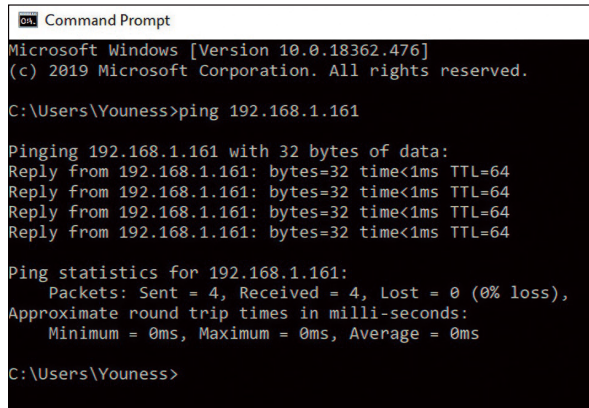


Figure 7.2

- (c) Access UFACTORY Studio software

UFactory Studio is a web based GUI to control the robot, please enter your robot IP+:18333 in the browser to get the robot access. (For example: 192.168.1.65:18333)

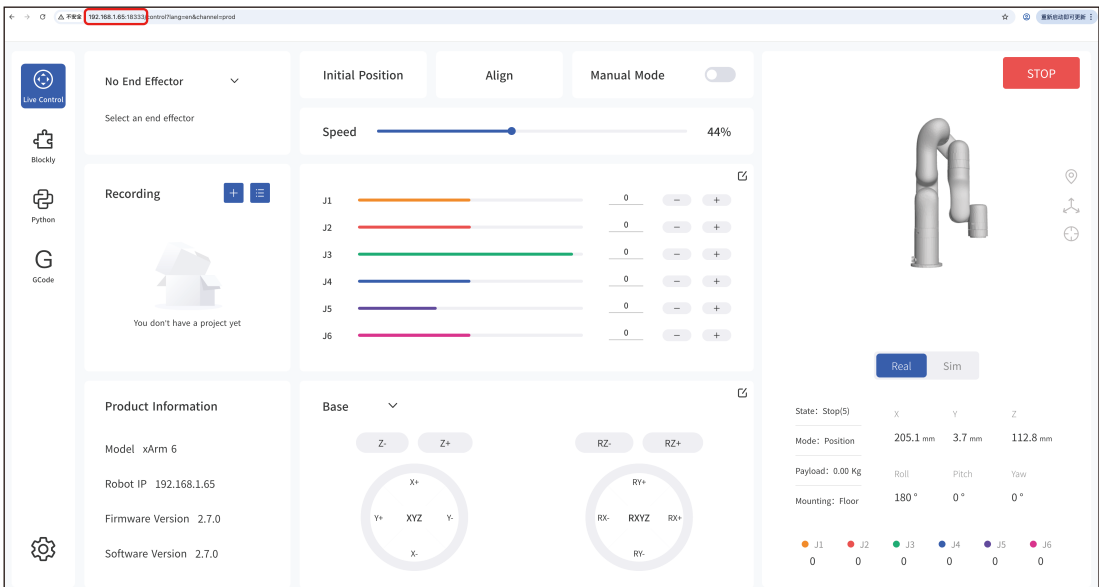

Note: UFactory xArm User Manual, 3D files, Developer Resources are also available for download on this page: <https://www.ufactory.cc/download/>

At this point, all installation steps have been completed. If you need to modify the network segment of the Control Box to adapt to the LAN segment, please see Appendix 1. If you want to download more information, please see Appendix 2.

Appendix 1: Through the following steps, you can modify the network segment of the Control Box to fit the current LAN segment.

Assume that the network segment of the customer LAN is: 192.168.2.xxx

(a) Connect the Control Box to the PC directly with a Network Cable, and then modify the IPV4 address of the PC to be the same as the network segment of the Control Box. The factory IP address of the device has been marked on the side of the Control Box. The IP settings on the PC are shown in Figure 6.1-6.5;

(b) Use UFACTORY Studio to connect to the Control Box, and change the network segment of the Robotic Arm to the LAN segment in the network settings under the setting options of UFACTORY Studio, after clicking save, restart UFACTORY Studio (see Figure 8.1-8.3). Then close UFACTORY Studio and restart it, then remove one end of the Network Cable connected to the PC segment and connect it to the LAN;

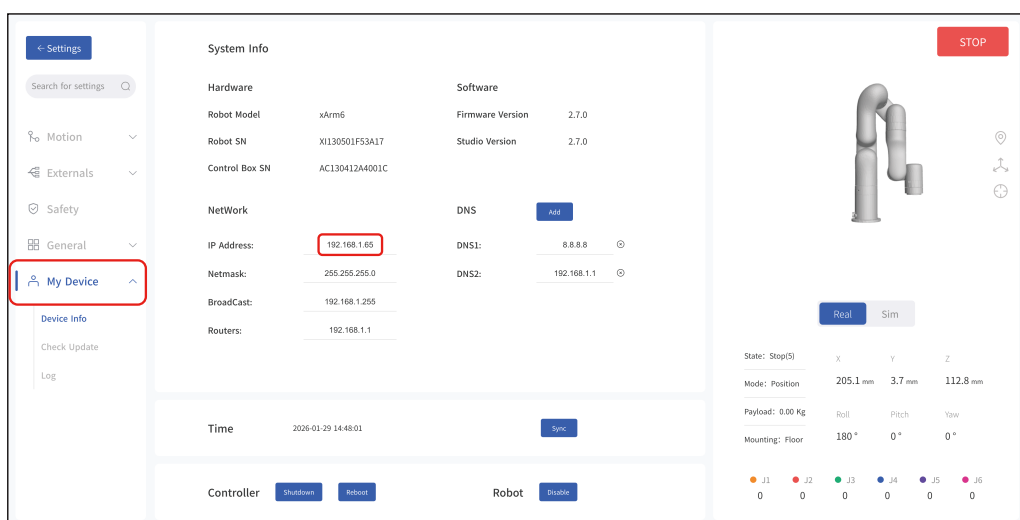


Figure 8.1

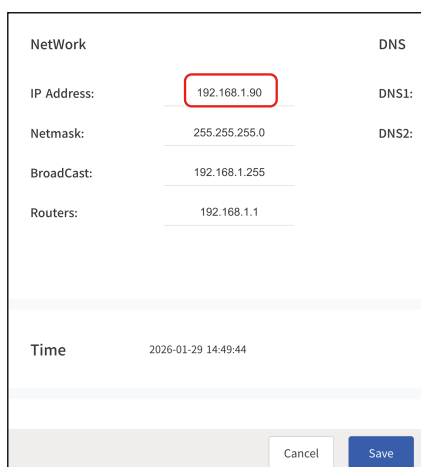


Figure 8.2

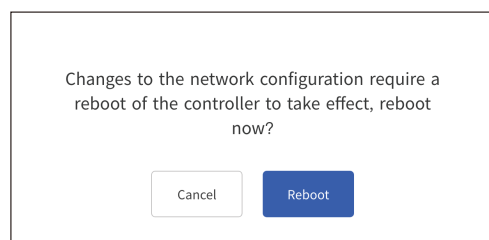


Figure 8.3

## Appendix 2:

- UFACTORY Studio: <https://www.ufactory.cc/download/>
- Github: <https://github.com/xArm-Developer/>
- Further information, please email at: [support@ufactory.cc](mailto:support@ufactory.cc); [sales@ufactory.cc](mailto:sales@ufactory.cc)



Scan QR code for more information  
on the official website