

Toolkit Doc8 Spine April 29, 2010





Raise / Lower Spine


- Raise / Lower Spine
 - 1. Remove Top Rear Body Panel
 - 2. It may be necessary to remove the Head Pan Rear Panel to raise the spine more than 10cm.
 - 3. Assemble tools: 1/4 drive wrench, extension, swivel, and 10mm socket. (Fig 1)



 Insert assembled tool through access hole A and engage the hex sided top of the shaft. (Fig 2,3,4)

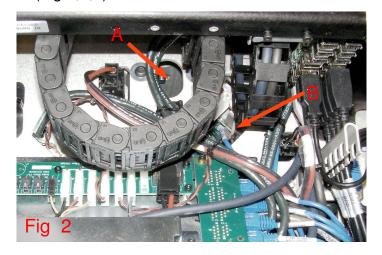

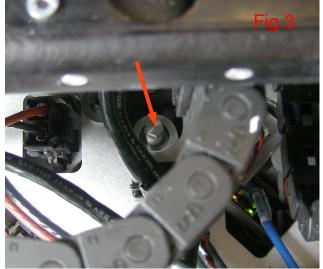

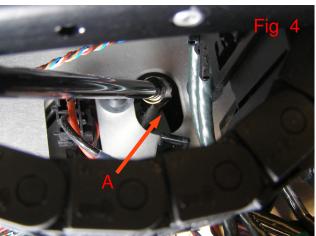

- Rotate the wrench clockwise to raise, counter-clockwise to lower. Through this access hole the spine can be raised
 13cm
- 6. From access hole B the spine can be raised an additional 2.5cm. (Fig 5)

