


Toolkit Doc1 Overview May 19, 2010




Robot Overview Front View

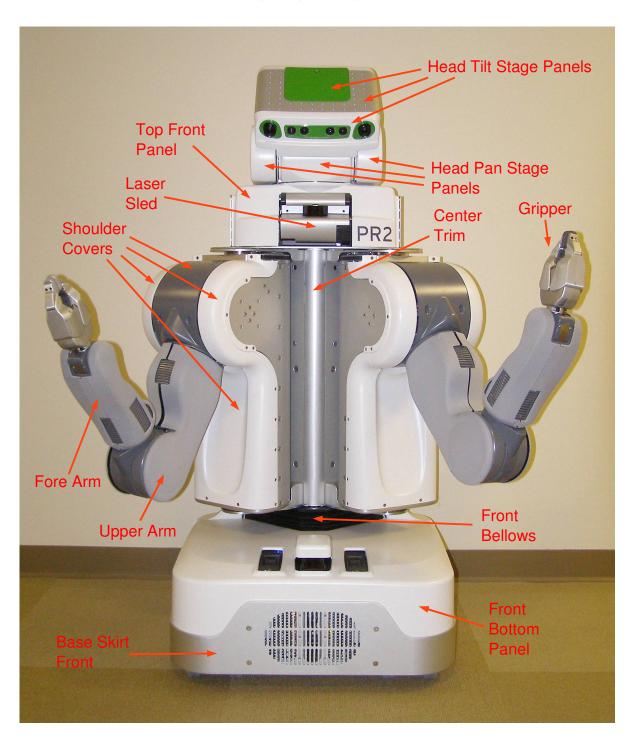




Robot Overview Rear View

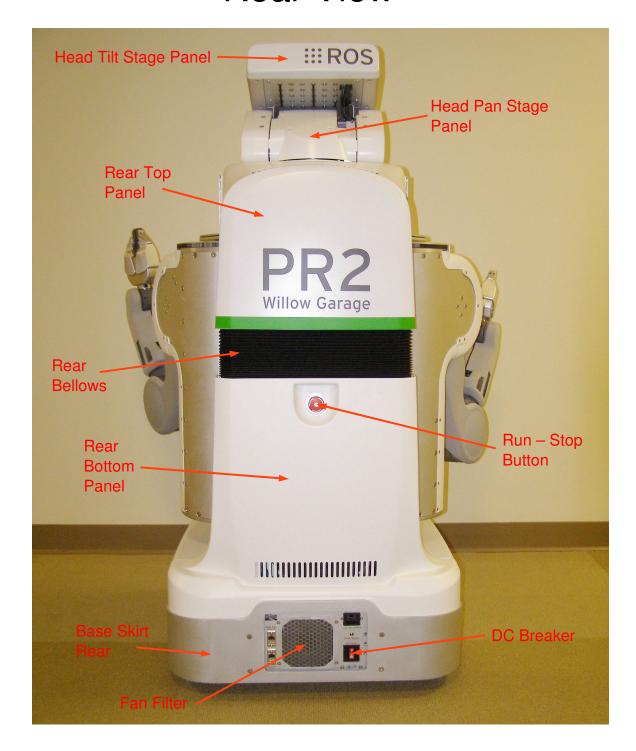



Robot Overview Side View

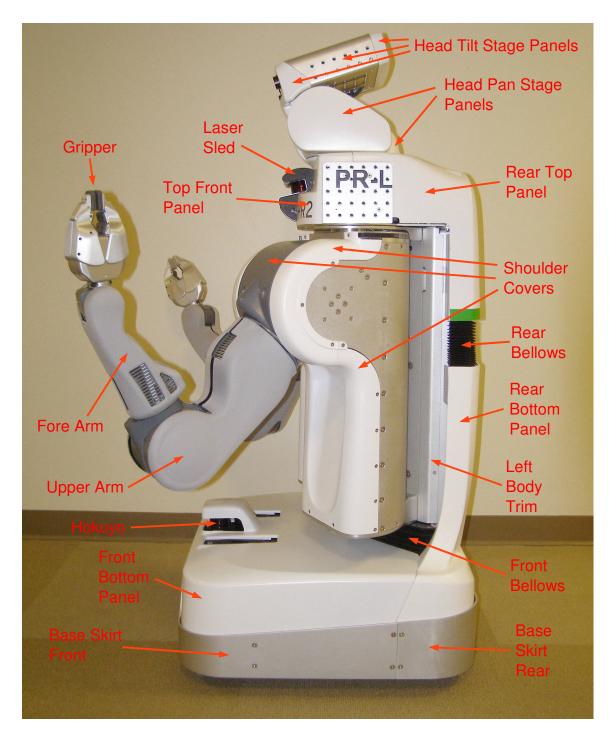



Robot Overview Torque Drivers

Blue Adjustment Nob – Small Torque Driver



Red Adjustment Nob – Large Torque Driver

To unlock Driver and enable torque adjustment

1.36 Nm (1.4)

Rotate to adjust torque

0.68 Nm



1.58 Nm (1.6)



Robot Overview Torque Drivers



2.0 Nm

0.8 Nm



3.17 Nm (3.2)





6.34 Nm (6.3)



Robot Overview Titan Torque Wrench



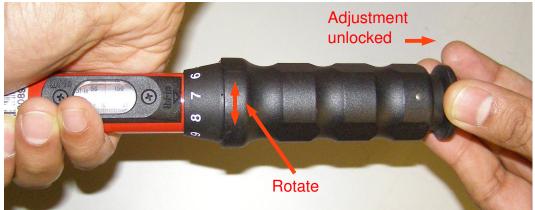

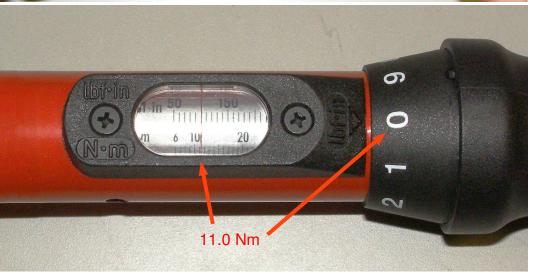



Robot Overview Loctite

