





Quick Start Guide

What's inside the box...

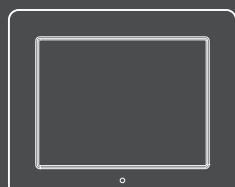


Digital picture frame

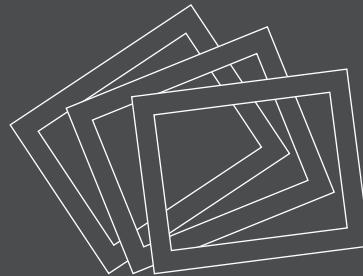

Interchangeable mats



Remote control

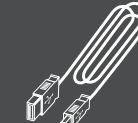

USB cable



DOC letter



Warranty card




Power adapter




User manual


Getting started

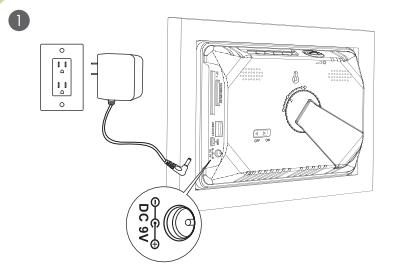


Connect the power adapter

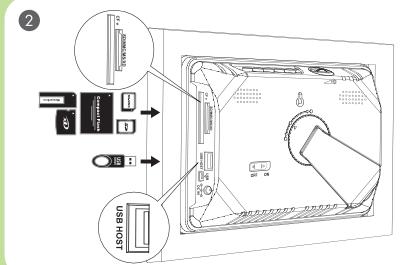

Insert memory card or USB storage device (external)

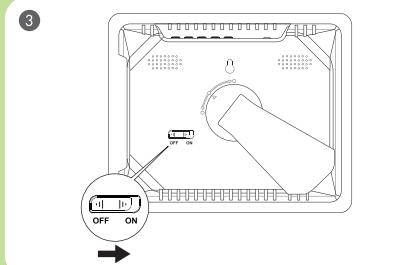


Move the power switch to the ON position

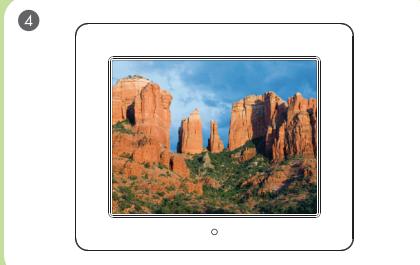


Enjoy! A slideshow of your pictures will begin in a few seconds


How to change the mat

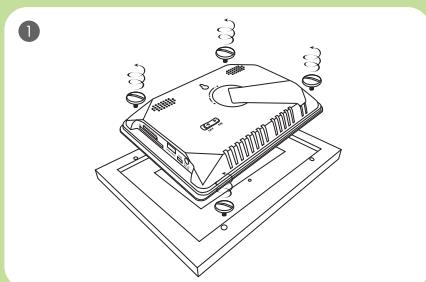


Place frame face down on table.
Remove the four screws and lift up the digital picture frame.

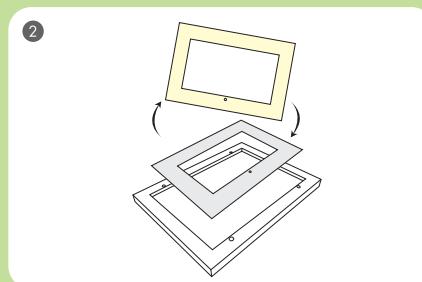

Replace the mat with different color mat to match your décor.

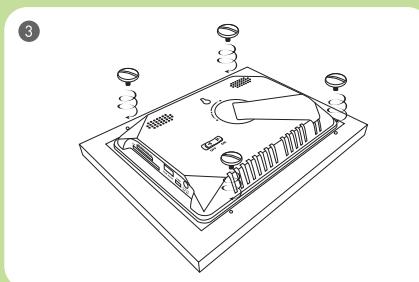

Put all the screws back and make sure the digital picture frame is firmly fastened.

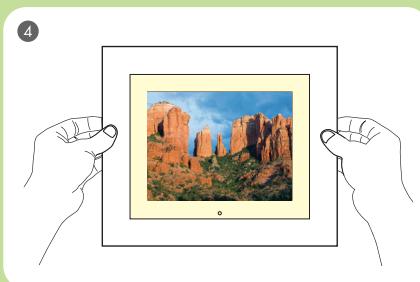

Enjoy the new look.

Note: use caution when handling glass panel to avoid possible breakage.