
TAPE feature reference

SHIFT: hold the CHOMPI key
orange = what you press

01 Transport modes

SHIFT + WHEEL click

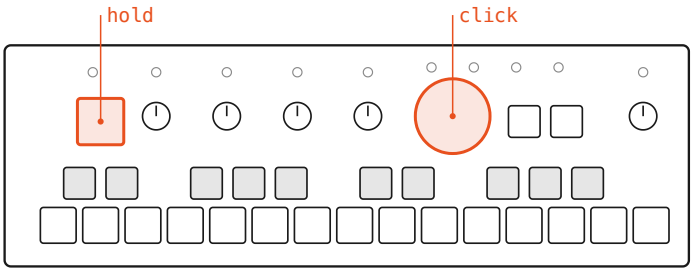


SPEED → LENGTH → STEP

- **Speed**: the wheel sets the playback speed, as usual

02 Length mode

WHEEL turn, click or hold




Wheel LEDs

- Turn right to **double** the loop, left to **halve** it
- Doubling a halved loop brings back what was cut off
- **Click**: back to 1×
- **Hold**: the current loop becomes the new 1×

03 Step mode


WHEEL turn or hold

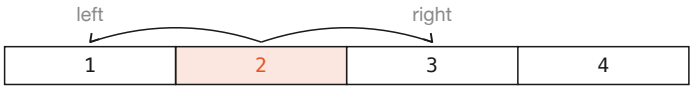

- Turn to jump to the **next or previous section** of a halved loop
- **Hold**: the current section becomes the new 1×

04 Bake FX

SHIFT + LOOP hold

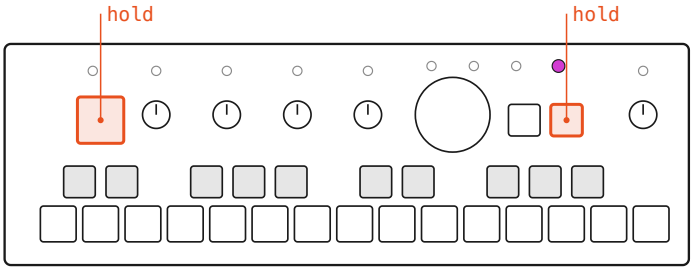


FX ON → BAKING → FX RESET

- Records the FX into the loop and resets the FX knobs
- Loop LED is **magenta** while baking, **flashes red** if it can't bake
- Pausing or changing speed or direction stops it

05 Undo

SHIFT + PLAY hold

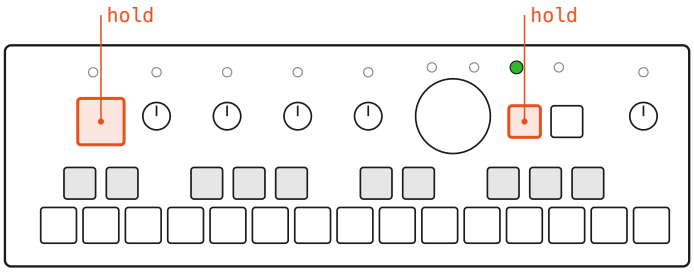


LOOP → + OVERDUB → UNDO

- Undoes the last **overdub** or **bake**
- Hold again to **redo**
- Play LED **flashes red** if there is nothing to undo

06 Line in mono

SHIFT + LINE IN hold

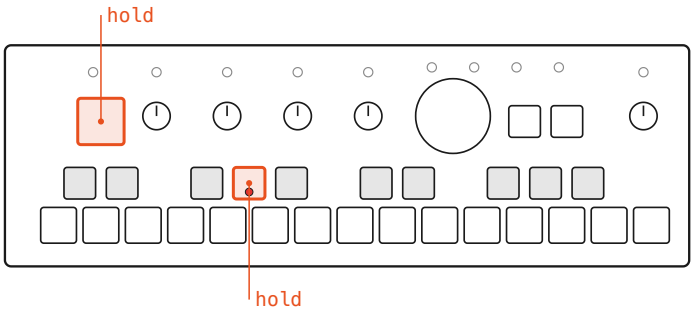


- Stereo
- Mono from left channel
- Mono from right channel

- Mono cables are detected automatically
- Hold the line in key to switch modes

07 Copy onto the loop

COPY → source → LOOP

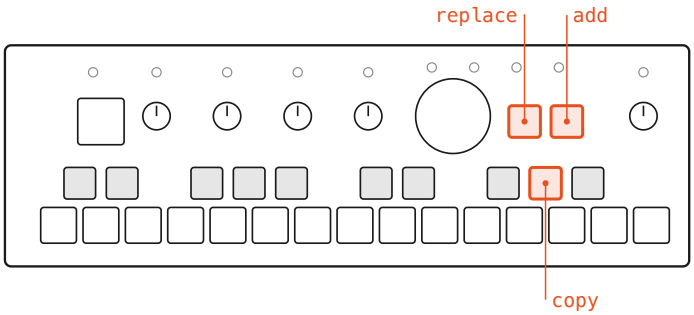

- Pick the looper with the **loop key** to add to the loop, with the **play key** to replace it