

VK8 External Modbus Protocol-V1.0.14s


1. Wiring Connection

Connect the wires to number 5 and 6 on the terminal block at the back of the main screen.



2. Set Modbus Address

Main Screen-----Setting-----RS485-----Modbus

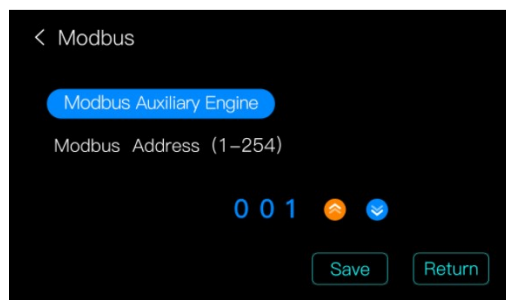

3.Communication Type

RS485,Modbus RTU

4.Serial Settings

8 Data bits, 1 Stop bit, None parity

Baud rate:9600 Baud

5.Support Function Codes:

0X03, 0X06, 0X10

6.DEC Address

DEC	Register type	Description	DEC Data Range
00	Read/Write	Equipment condition	0:OFF, 1:ON
01	Read/Write	Operation mode	0:Auto, 1:Manual,2:Sleep
02	Read/Write	Supply fan speed	Speed match 1-5
03	Read/Write	Extract fan speed	Speed match 1-5
04	Read/Write	Bypass valve mode Indoor Auto / Outdoor Auto	0: Indoor Auto Mode, 1: Outdoor Auto Mode
05	Read/Write	Bypass valve control	0:Manual OFF, 1:Manual ON, 2:Auto Mode
06	Read/Write	External shutter	0:Closed, 1:Open, 2:Auto
07	Read/Write	Postheat	0:OFF, 1:ON
08	Read/Write	Preheat	0: OFF, 1: ON
09	Read/Write	H-Filter usage time	Hour range:0-999, Write:0XAA for reset
10	Read/Write	F-Filter usage time	Hour range:0-999, Write:0XAA for reset
11	Read/Write	G-Filter usage time	Hour range:0-999, Write:0XAA for reset
12	Read/Write	Boost command	0: Stop, 1: Start
13	Read/Write	Fan separation control	0: OFF, 1: ON
14	Read/Write	Free Cooling condition	0: OFF, 1: ON
15	Read	Extract(Indoor) Temp.	Temperature range:-10-50 °C
16	Read	Extract(Indoor) Humidity	Humidity range:0-99 %
17	Read	PM2.5 (On VK8 Panel)	Data range:0-999µg/m3
18	Read	CO2 (OnVK8 Panel)	Data range:400-5000 ppm
19	Read	VOCs (On VK8 Panel)	VOCs level 1~4
20	Read	Defrost Condition	0: OFF, 1: ON
21	Read	Exhaust Temp.	Range:-10-50℃, 0x7FFF Detection error or absence
22	Read	Outdoor Temp	Range:-10-50℃, 0x7FFF Detection error or absence
23	Read	External Temp. (Onsite0)	Range:-10-50℃, 0x7FFF Detection error or absence
24	Read	External Temp. (Onsite1)	Range:-10-50℃, 0x7FFF Detection error or absence
25	Read	External Temp. (Onsite2)	Range:-10-50℃, 0x7FFF Detection error or absence
26	Read	External Temp. (Onsite3)	Range:-10-50℃, 0x7FFF Detection error or absence
27	Read	External Temp. (Onsite4)	Range:-10-50℃, 0x7FFF Detection error or absence
28	Read	External Temp. (Onsite5)	Range:-10-50℃, 0x7FFF Detection error or absence
29	Read	External Temp. (Onsite6)	Range:-10-50℃, 0x7FFF Detection error or absence
30	Read	External Temp. (Onsite7)	Range:-10-50℃, 0x7FFF Detection error or absence
31	Read	External Temp. (Onsite8)	Range:-10-50℃, 0x7FFF Detection error or absence
32	Read	External RH. (Onsite0)	Range:0-100%, 0x00FF Detection error or absence

33	Read	External RH. (Onsite1)	Range:0-100%, 0x00FF Detection error or absence
34	Read	External RH. (Onsite2)	Range:0-100%, 0x00FF Detection error or absence
35	Read	External RH. (Onsite3)	Range:0-100%, 0x00FF Detection error or absence
36	Read	External RH. (Onsite4)	Range:0-100%, 0x00FF Detection error or absence
37	Read	External RH. (Onsite5)	Range:0-100%, 0x00FF Detection error or absence
38	Read	External RH. (Onsite6)	Range:0-100%, 0x00FF Detection error or absence
39	Read	External RH. (Onsite7)	Range:0-100%, 0x00FF Detection error or absence
40	Read	External RH. (Onsite8)	Range:0-100%, 0x00FF Detection error or absence
41	Read	External CO2 (Onsite0)	Range:400-5000ppm, 0xFFFF Detection error or absence
42	Read	External CO2 (Onsite1)	Range:400-5000ppm, 0xFFFF Detection error or absence
43	Read	External CO2 (Onsite2)	Range:400-5000ppm, 0xFFFF Detection error or absence
44	Read	External CO2 (Onsite3)	Range:400-5000ppm, 0xFFFF Detection error or absence
45	Read	External CO2 (Onsite4)	Range:400-5000ppm, 0xFFFF Detection error or absence
46	Read	External CO2 (Onsite5)	Range:400-5000ppm, 0xFFFF Detection error or absence
47	Read	External CO2 (Onsite6)	Range:400-5000ppm, 0xFFFF Detection error or absence
48	Read	External CO2 (Onsite7)	Range:400-5000ppm, 0xFFFF Detection error or absence
49	Read	External CO2 (Onsite8)	Range:400-5000ppm, 0xFFFF Detection error or absence

Note: When executing write commands via external RS485, please ensure that the equipment is in manual mode; otherwise, external control commands may not be executed.