GE83MDT

เตาไมโครเวฟ

คำแนะนำสำหรับผู้ใช้และคู่มือการอบอาหาร

โปรดทราบว่าการรับประกันของ Samsung ไม่ครอบคลุมถึงการโทรรับบริการเพื่ออธิบายถึงการใช้งานผลิตภัณฑ์ แก้ไขการติดตั้งที่ไม่ถูกต้อง หรือการทำความสะอาดหรือบำรุงรักษาตามปกติ

Planet First **100 % Recycled Paper**

คู่มือนี้ใช้กระดาษรีไซเคิล 100 %

imagine the possibilities

ขอขอบคุณที่เลือกซื้อผลิตภัณฑ์ Samsung
ในการรับบริการที่ครบครันยิ่งขึ้น
โปรดลงทะเบียนผลิตภัณฑ์ได้ที่

www.samsung.com/register

SAMSUNG

สารบัญ

คู่มือค้นหาอย่างรวดเร็ว **11**
คุณสมบัติเตาอบ **12**
เตาอบ 12
แผงควบคุม 13
อุปกรณ์เสริม 13
การใช้เตาอบ **14**
เตาไมโครเวฟทำงานอย่างไร 14
การตรวจสอบว่าเตาไมโครเวฟของคุณทำงานอย่างถูกต้อง 14
การตั้งเวลา 15
การอบ/อุ่นอาหาร 15
ระดับพลังงาน 16
การปรับเวลาอบอาหาร 16
การหยุดการอบอาหาร 16
การตั้งค่าโหมดประหยัดพลังงาน 16
การใช้คุณสมบัติ เมนูอาหารไทย อัตโนมัติ 17
การใช้โปรแกรม อาหาร จานด่วน 17
การใช้โปรแกรม ต้ม แกง / ข้าว 18
การใช้โปรแกรม เมนูไทย 19
การใช้โปรแกรม เมนูย่าง 20
การใช้คุณสมบัติละลายน้ำแข็งอัตโนมัติ 22
การใช้โปรแกรมละลายน้ำแข็งอัตโนมัติ 23
การใช้ฟังก์ชั่นอบเกรียมแบบกำหนดเอง 23
การใช้การตั้งค่าการอบเกรียมแบบกำหนดเอง 24
การเลือกอุปกรณ์เสริม 25
การย่าง 25
การใช้ไมโครเวฟผสมการย่าง 26
การอบอาหารแบบหลายขั้นตอน 26
การปิดเสียงเตือน 27
การล็อคเตาไมโครเวฟ 27
คู่มือสำหรับอุปกรณ์การทำอาหาร **28**
คู่มือการอบอาหาร **29**
การแก้ไขปัญหาและรหัสข้อผิดพลาด **37**
การแก้ไขปัญหา 37
รหัสข้อผิดพลาด 37
ข้อมูลจำเพาะด้านเทคนิค **38**

ข้อมูลเกี่ยวกับความปลอดภัย

การใช้คู่มือฉบับนี้

ขอขอบคุณที่เลือกใช้เตาไมโครเวฟ SAMSUNG คำแนะนำสำหรับผู้ใช้นี้ประกอบด้วยข้อมูลที่เป็นประโยชน์มากมายเกี่ยวกับการอบอาหารด้วยเตาไมโครเวฟของคุณ ดังนี้

- ข้อควรระวังเพื่อความปลอดภัย
- อุปกรณ์เสริมและภาชนะที่เหมาะสม
- เคล็ดลับในการอบอาหารที่มีประโยชน์
- เคล็ดลับในการอบอาหาร

คำอธิบายสัญลักษณ์และไอคอน

คำเตือน อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิด **การบาดเจ็บสาหัสหรือเสียชีวิต**

ข้อควรระวัง อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิด **การบาดเจ็บเล็กน้อยหรือทำให้สิ่งของเสียหาย**

- คำเตือน อันตรายจากไฟ
- คำเตือน พื้นผิวร้อน
- คำเตือน ไฟฟ้า
- คำเตือน วัตถุที่ระเบิดได้
- ห้ามทำ
- ห้ามสัมผัส
- ห้ามถอดประกอบ
- ทำตามคำแนะนำอย่างเคร่งครัด
- ถอดปลั๊กไฟจากเต้าเสียบที่ผนัง
- ตรวจสอบว่าเครื่องมีการลงกราวด์เพื่อป้องกันไฟฟ้าดูด
- ติดต่อศูนย์บริการเพื่อขอรับความช่วยเหลือ
- หมายเหตุ
- ข้อมูลสำคัญ

GE83MDT_XST_DE68-04111E_TH.indd 2 2013-09-05 2:45:58

คำแนะนำสำคัญเพื่อความปลอดภัย

โปรดอ่านให้ละเอียด และเก็บไว้เป็นข้อมูลอ้างอิงในอนาคต

โปรดปฏิบัติตามข้อควรระวังเพื่อความปลอดภัยตลอดเวลา

ก่อนที่จะใช้เตาอบ โปรดปฏิบัติตามคำแนะนำต่อไปนี้

⚠ คำเตือน (การทำงานของไมโครเวฟเท่านั้น)

- **คำเตือน:** ห้ามใช้เตาอบหากประตูหรือซีลขอบประตูเสียหาย จนกว่าจะได้รับการซ่อมแซมจากช่างผู้ชำนาญ
- **คำเตือน:** อาจเกิดอันตรายขึ้นได้ หากให้บุคคลที่ไม่ใช่ช่างที่มีความชำนาญเป็นผู้ซ่อมบำรุงซึ่งต้องมีการถอดฝาครอบของเครื่อง ซึ่งเป็นเครื่องป้องกันพลังงานไมโครเวฟ
- **คำเตือน:** โปรดอย่าอุ่นของเหลวและอาหารอื่นในภาชนะที่ปิดสนิท เนื่องจากอาจระเบิดได้
- อุปกรณ์นี้ใช้สำหรับการใช้งานภายในครัวเรือนเท่านั้น
- **คำเตือน:** ไม่ควรให้เด็กใช้เตาอบตามลำพัง ยกเว้นกรณีที่เด็กได้รับคำแนะนำเพียงพอที่จะใช้เตาอบอย่างปลอดภัย และทราบถึงอันตรายจากการใช้ผิดวิธี
- **คำเตือน:** อุปกรณ์นี้สามารถใช้งานโดยเด็กที่มีอายุ 8 ปีขึ้นไป และบุคคลที่มีสมรรถภาพร่างกาย ประสาทสัมผัส หรือสภาพจิตไม่เป็นปกติ หรือขาดประสบการณ์หรือความรู้ ถ้าได้รับการดูแลหรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล ห้ามเด็กเล่นกับอุปกรณ์นี้ ห้ามมิให้เด็กเป็นผู้ทำความสะอาดและบำรุงรักษา ยกเว้นเด็กที่มีอายุ 8 ปีขึ้นไปและมีการดูแลโดยผู้ใหญ่
- โปรดใช้เฉพาะภาชนะที่เหมาะกับเตาไมโครเวฟเท่านั้น
- เมื่ออุ่นอาหารในภาชนะพลาสติก โปรดระวังว่าอาจจะมีการติดไฟขึ้นในเตาอบ
- เตาไมโครเวฟนี้ใช้สำหรับการให้ความร้อนกับอาหารและเครื่องดื่ม การทำให้อาหารหรือผ้าแห้ง และการให้ความร้อนกับแผ่นให้ความร้อน รองเท้าสวมในบ้าน ฟองน้ำ ผ้าหมาด และวัสดุอื่นในลักษณะเดียวกันอาจเกิดความเสี่ยงต่อการบาดเจ็บ ติดไฟ หรือเพลิงไหม้
- ถ้าพบว่ามีควัน ให้ปิดหรือถอดปลั๊กอุปกรณ์ และอย่าเปิดประตูเตาอบ เพื่อมิให้เกิดเปลวไฟ

GE83MDT_XST_DE68-04111E_TH.indd 3 2013-09-05 2:45:58

คำเตือน: ระหว่างการอุ่นร้อนเครื่องดื่มด้วยไมโครเวฟ จะมีการเดือดที่ล่าช้าออกไป ดังนั้น โปรดใช้ความระมัดระวังเมื่อถือภาชนะ

คำเตือน: ควรคนหรือเขย่าสิ่งที่บรรจุอยู่ในขวดนมเด็กและขวดอาหารเด็ก และตรวจสอบอุณหภูมิก่อนที่จะรับประทาน เพื่อลดความเสี่ยงของการลวก

ห้ามอุ่นร้อนหรือให้ความร้อนกับไข่ทั้งเปลือกหรือไข่ต้มในเตาไมโครเวฟ เนื่องจากอาจระเบิดได้ แม้ว่าจะสิ้นสุดการให้ความร้อนของไมโครเวฟแล้วก็ตาม

ทำความสะอาดและขจัดอาหารตกค้างอย่างสม่ำเสมอ

หากไม่รักษาความสะอาดเตาอบอาจทำให้เกิดความเสียหายกับพื้นผิว ซึ่งอาจมีผลเสียต่อเตาอย่างมาก และอาจก่อให้เกิดอันตรายได้

อุปกรณ์นี้ไม่ได้ออกแบบมาสำหรับการติดตั้งในยานพาหนะบนท้องถนน คาราวาน และยานพาหนะในลักษณะเดียวกัน

อุปกรณ์นี้ไม่เหมาะสำหรับบุคคลที่มีสภาพร่างกาย ประสาทสัมผัสหรือจิตที่ไม่ปกติ รวมถึงเด็กหรือบุคคลที่ขาดประสบการณ์ความรู้ ยกเว้นจะได้รับการดูแลหรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล โปรดระวังมิให้เด็กเล่นกับอุปกรณ์นี้

โปรดดูแลมิให้เด็กเล่นกับอุปกรณ์นี้

กรณีที่ปลั๊กไฟของเครื่องใช้ไฟฟ้านี้เกิดเสียหาย ต้องให้ผู้ผลิต ตัวแทนให้บริการ หรือผู้ที่มีความชำนาญเป็นผู้เปลี่ยนสายไฟ เพื่อไม่ให้เกิดอันตราย

คำเตือน: โปรดอย่าอุ่นของเหลวหรืออาหารอื่นในภาชนะที่ปิดสนิท เนื่องจากอาจระเบิดได้

อุปกรณ์นี้ไม่สามารถทำความสะอาดด้วยเครื่องฉีดน้ำ

เตาอบนี้ควรอยู่ในตำแหน่งและความสูงที่เหมาะสม เพื่อให้สามารถเข้าถึงส่วนภายในเตาอบและบริเวณควบคุมได้ง่าย

ก่อนที่จะใช้เตาอบเป็นครั้งแรก ควรใช้งานเตาอบกับน้ำเป็นเวลา 10 นาที จากนั้นจึงค่อยใช้

GE83MDT_XST_DE68-04111E_TH.indd 4 2013-09-05 2:45:58

ถ้าอุปกรณ์มีเสียงผิดปกติ มีควันหรือกลิ่นไหม้ ให้ถอดปลั๊กทันที และติดต่อศูนย์บริการใกล้บ้าน

เตาไมโครเวฟนี้จะต้องอยู่ในตำแหน่งที่คุณสามารถเอื้อมถึงปลั๊กโดยง่าย

เตาไมโครเวฟนี้ออกแบบมาสำหรับใช้งานบนเคาน์เตอร์เท่านั้น ไม่ควรวางเตาไมโครเวฟไว้ในช่องของตู้

⚠ คำเตือน (การทำงานของเตาอบเท่านั้น) - อุปกรณ์เสริม

คำเตือน: เมื่อใช้งานอุปกรณ์นี้ในโหมดผสม ไม่ควรให้เด็กใช้งานอุปกรณ์โดยไม่มีผู้ใหญ่ดูแล เนื่องจากจะมีอุณหภูมิสูง

ระหว่างการใช้งานอุปกรณ์จะมีความร้อนสูง โปรดใช้ความระมัดระวังอย่าสัมผัสขดลวดความร้อนภายในเตาอบ

คำเตือน: ชิ้นส่วนที่เข้าถึงได้อาจร้อนจัดหลังจากการใช้งาน ควรดูแลให้พ้นมือเด็ก

ห้ามใช้เครื่องทำความสะอาดด้วยไอน้ำ

คำเตือน: ตรวจสอบว่าปิดอุปกรณ์แล้ว ก่อนที่จะเปลี่ยนหลอดไฟเพื่อป้องกันไฟฟ้าช็อต

คำเตือน: อุปกรณ์นี้และชิ้นส่วนที่เข้าถึงได้อาจร้อนจัดระหว่างการใช้งาน
โปรดใช้ความระมัดระวังอย่าสัมผัสขดลวดความร้อนภายในเตาอบ
ห้ามเด็กอายุต่ำกว่า 8 ขวบใช้อุปกรณ์ ยกเว้นกรณีที่มีผู้ดูแลใกล้ชิด

อุณหภูมิของพื้นผิวที่สัมผัสได้อาจสูงมากเมื่ออุปกรณ์นี้ทำงาน

ประตูหรือพื้นผิวภายนอกอาจร้อนจัดเมื่ออุปกรณ์ทำงาน

ดูแลให้อุปกรณ์และสายไฟพ้นมือเด็กที่อายุต่ำกว่า 8 ปี

อุปกรณ์นี้สามารถใช้งานโดยเด็กที่มีอายุ 8 ปีขึ้นไปและบุคคลที่มีสมรรถภาพร่างกาย ประสาทสัมผัส หรือสภาพจิตไม่เป็นปกติ หรือขาดประสบการณ์หรือความรู้ ถ้าได้รับการดูแลหรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล ห้ามเด็กเล่นกับอุปกรณ์นี้ ห้ามเด็กทำความสะอาดหรือบำรุงรักษาอุปกรณ์โดยไม่มีการดูแล

GE83MDT_XST_DE68-04111E_TH.indd 5 2013-09-05 2:45:58

ห้ามใช้สารทำความสะอาดที่มีฤทธิ์ขัดถูหรือที่ขัดโลหะเพื่อทำความสะอาดประตูเตาอบ เนื่องจากจะทำให้พื้นผิวเป็นรอยและทำให้แก้วแตกได้

อุปกรณ์นี้ไม่ได้ออกแบบมาเพื่อใช้งานด้วยเครื่องจับเวลาภายนอกหรือระบบรีโมทคอนโทรลแยกต่างหาก

การติดตั้งเตาไมโครเวฟ

วางเตาไว้บนพื้นผิวที่เรียบและได้ระดับ 85 ซม. เหนือพื้น มีความแข็งแรงเพียงพอที่จะรับน้ำหนักของเตาได้อย่างปลอดภัย

1. เมื่อคุณติดตั้งเตาอบ โปรดจัดวางให้มีการระบายอากาศที่เพียงพอ โดยเว้นช่องว่างอย่างน้อย 10 ซม. (4 นิ้ว) ที่ด้านหลังและด้านข้างของเตาอบ และเว้นที่ 20 ซม. (8 นิ้ว) ด้านบนของเตาอบ

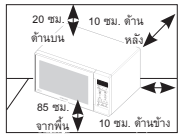

2. นำวัสดุบรรจุภัณฑ์ออกจากภายในเตาอบ
3. ติดตั้งวงแหวนและจานหมุน ทดลองว่าจานสามารถหมุนได้อย่างอิสระ (รุ่นที่มีจานหมุนเท่านั้น)
4. เตาไมโครเวฟนี้จะต้องอยู่ในตำแหน่งที่คุณสามารถเอื้อมถึงปลั๊กโดยง่าย

กรณีที่ปลั๊กไฟของเครื่องใช้ไฟฟ้านี้เกิดเสียหาย ต้องให้ผู้ผลิต ตัวแทนให้บริการ หรือผู้ที่มีความชำนาญเป็นผู้เปลี่ยนสายไฟ เพื่อไม่ให้เกิดอันตราย
เพื่อความปลอดภัยของคุณ โปรดเสียบปลั๊กสายไฟเข้ากับเต้ารับไฟฟ้ากระแสสลับที่มีการลงกราวด์อย่างถูกต้อง

GE83MDT_XST_DE68-04111E_TH.indd 6 2013-09-05 2:45:58

☛ ห้ามติดตั้งเตาไมโครเวฟในบริเวณที่มีความร้อนและความชื้นสูง เช่น ถัดจากเตาอบธรรมดาหรือเครื่องทำความร้อน โปรดปฏิบัติตามข้อกำหนดการจ่ายไฟของเตาอบ และหากจะใช้สายต่อ จะต้องใช้สายที่เป็นมาตรฐานเดียวกับสายไฟของเตาอบ เช็ดด้านในของซีลประตูด้วยผ้าหมาด ก่อนที่จะใช้เตาไมโครเวฟเป็นครั้งแรก

การทำความสะอาดเตาอบไมโครเวฟของคุณ

โปรดทำความสะอาดส่วนต่อไปนี้ในเตาไมโครเวฟเป็นประจำ เพื่อไม่ให้มีไขมันและเศษอาหารเกาะ:

- ผิวหน้าด้านในและด้านนอก
- ประตูและซีลขอบประตู
- จานหมุนและวงแหวน (รุ่นที่มีจานหมุนเท่านั้น)

☛ **ทุกครั้ง**ต้องตรวจสอบว่าซีลประตูสะอาดและประตูสามารถปิดได้อย่างเหมาะสม

☛ การไม่รักษาความสะอาดเตาอบอาจทำให้เกิดความเสียหายกับพื้นผิว ซึ่งอาจมีผลเสียต่อเตาอย่างมาก และอาจก่อให้เกิดอันตรายได้

1. ทำความสะอาดพื้นผิวด้านนอกด้วยผ้านุ่ม ชุบน้ำอุ่นผสมน้ำยาล้างจาน ล้างให้สะอาดและเช็ดให้แห้ง
2. ขจัดคราบอาหารที่กระเด็นบนพื้นผิวด้านในของเตาอบด้วยผ้าชุบน้ำยาล้างจาน ล้างให้สะอาดและเช็ดให้แห้ง
3. เพื่อให้เศษอาหารที่แห้งแข็งหลุดออกง่ายขึ้น และขจัดกลิ่นไม่พึงประสงค์ ให้วางถ้วยน้ำมะนาวผสมน้ำในเตาอบ และให้ความร้อนโดยใช้พลังงานเต็มที่เป็นเวลาสิบนาที
4. ล้างจานที่ใช้เครื่องล้างได้เมื่อใดก็ตามที่ต้องการ

☛ **โปรดอย่า**ทำน้ำหกในช่องระบาย **ห้าม** ใช้ผลิตภัณฑ์ประเภทขัดถูหรือสารละลายทางเคมีเด็ดขาด โปรดใช้ความระมัดระวังเมื่อทำความสะอาดซีลขอบประตู เพื่อไม่ให้มีสิ่งสกปรก:

- สะสม
- ทำให้ประตูปิดไม่สนิท

☛ **ทำความสะอาด**ภายในเตาอบหลังจากใช้งานทันที โดยใช้น้ำยาล้างอ่อนๆ แต่โปรดรอให้เตาไมโครเวฟเย็นลงก่อนที่จะทำความสะอาด เพื่อป้องกันอันตรายที่อาจเกิดขึ้น

GE83MDT_XST_DE68-04111E_TH.indd 7 2013-09-05 2:45:58

เมื่อทำความสะอาดส่วนบนที่อยู่ด้านในช่องเตาอบ ให้หมุนตัวทำความร้อนลง 45 ° แล้วทำความสะอาด (รุ่นที่ขดลวดความร้อนหมุนได้เท่านั้น)



การเก็บรักษาและซ่อมเตาไมโครเวฟ

โปรดทราบข้อควรระวังต่อไปนี้ เมื่อเก็บรักษาหรือนำเตาไมโครเวฟไปซ่อมแซม

ห้ามใช้เตาอบ หากประตูหรือซีลขอบประตูเสียหาย

- บานพับเสียหาย
- ซีลมีความเสียหาย
- โครงภายนอกของเตาอบบิดหรืองอ

โปรดใช้บริการซ่อมบำรุงโดยช่างผู้ชำนาญการซ่อมไมโครเวฟเท่านั้น

ห้ามถอดโครงภายนอกของเตาอบ หากเตาไมโครเวฟทำงานไม่ถูกต้อง หรือต้องมีการบำรุงรักษา หรือหากคุณมีข้อสงสัย

- ถอดสายไฟออกจากปลั๊กที่ผนัง
- ติดต่อศูนย์บริการหลังการขายที่อยู่ใกล้

หากคุณต้องการเก็บเตาอบไว้ชั่วคราว โปรดเก็บไว้ในที่แห้งและไม่มีฝุ่นละออง

สาเหตุ: ฝุ่นละอองและความชื้นอาจมีผลเสียต่อส่วนประกอบของเตาอบ

เตาไมโครเวฟนี้ไม่เหมาะสำหรับใช้งานเพื่อการพาณิชย์

ห้ามเปลี่ยนหลอดไฟด้วยตนเอง เพื่อความปลอดภัย โปรดติดต่อศูนย์บริการลูกค้าที่ได้รับอนุญาตของ Samsung ที่อยู่ใกล้ เพื่อนัดหมายให้ช่างที่มีคุณสมบัติเป็นผู้เปลี่ยนหลอดไฟให้

⚠ คำเตือน				
ควรให้เจ้าหน้าที่ผู้มีความชำนาญเท่านั้นเป็นผู้แก้ไขหรือซ่อมแซมอุปกรณ์	✓	✓	✓	✓
ห้ามให้ความร้อนของเหลวหรืออาหารอื่นในภาชนะที่ปิดผนึกแน่นสำหรับฟังก์ชันไมโครเวฟ	✓	✓	✓	✓
เพื่อความปลอดภัย ห้ามใช้เครื่องทำความสะอาดด้วยแรงดันน้ำหรือเครื่องทำความสะอาดด้วยเครื่องฉีดไอน้ำ	✓	✓	✓	✓
ห้ามติดตั้งอุปกรณ์นี้ใกล้เครื่องทำความร้อน วัตถุไวไฟ ความชื้น ตำแหน่งที่มีน้ำมันหรือฝุ่นละอองมาก ในตำแหน่งที่ได้รับแสงแดดโดยตรงหรือได้รับน้ำ หรือในที่ซึ่งอาจมีก๊าซรั่ว หรือบนพื้นที่ไม่เรียบ	✓	✓	✓	✓
อุปกรณ์นี้ต้องมีการลงกราวด์อย่างเหมาะสมตามข้อกำหนดของท้องถิ่นหรือของประเทศ	✓	✓	✓	✓
นำสิ่งแปลกปลอมทั้งหมด เช่น ฝุ่นละอองหรือน้ำออกจากขั้วของปลั๊กไฟและหน้าสัมผัสเป็นประจำ โดยใช้ผ้าแห้ง	✓	✓	✓	✓

GE83MDT_XST_DE68-04111E_TH.indd 8 2013-09-05 2:46:00

ห้ามดึงหรือบิดงอหรือวางสิ่งของทับสายไฟ	✓	✓	✓	✓
ถ้ามีก๊าซรั่ว (เช่น ก๊าซโพรเพน ก๊าซหุงต้ม ฯลฯ) ให้ระบายอากาศทันที โดยไม่สัมผัสกับปลั๊กไฟ	✓	✓	✓	✓
ห้ามสัมผัสปลั๊กไฟด้วยมือที่เปียก	✓	✓	✓	✓
ห้ามปิดเครื่องด้วยการถอดปลั๊กไฟ ขณะที่เครื่องกำลังทำงานอยู่	✓	✓	✓	✓
ห้ามสอดนิ้วหรือสิ่งแปลกปลอม ถ้ามีสิ่งแปลกปลอมหรือน้ำเข้าเครื่อง ให้ถอดปลั๊กไฟและติดต่อศูนย์บริการที่อยู่ใกล้ที่สุด	✓	✓	✓	✓
ห้ามใช้แรงกดหรือกระแทกอุปกรณ์	✓	✓	✓	✓
อย่าวางอุปกรณ์ไว้บนวัตถุที่เปราะบางเช่นชิงค์หรือกระจก	✓	✓		
ห้ามใช้เบนซิน ทินเนอร์ แอลกอฮอล์ เครื่องทำความสะอาดด้วยไอน้ำหรือเครื่องฉีดน้ำแรงดันสูงเพื่อทำความสะอาดอุปกรณ์	✓	✓	✓	✓
ตรวจสอบว่าแรงดันไฟฟ้า ความถี่ และกระแสไฟฟ้าตรงกับในข้อมูลจำเพาะของผลิตภัณฑ์	✓	✓		✓
ต่อสายไฟเข้ากับเต้ารับไฟฟ้าที่ผนังอย่างแน่นหนา ห้ามใช้ตัวแปลงปลั๊ก สายต่อหรือหม้อแปลงไฟฟ้า	✓	✓	✓	
ห้ามเกี่ยวสายไฟกับวัตถุที่เป็นโลหะ ใส่สายไฟไว้ระหว่างวัตถุหรือหลังเตาอบ	✓	✓	✓	
ห้ามใช้ปลั๊กไฟที่เสียหาย สายไฟ หรือเต้ารับไฟฟ้าที่เสียหาย หลวม เมื่อปลั๊กไฟหรือสายไฟเสียหาย โปรดติดต่อศูนย์บริการใกล้บ้านคุณ	✓	✓	✓	✓
ห้ามฉีดพ่นน้ำบนเตาอบ	✓	✓		

ห้ามวางสิ่งของบนเตาอบ ภายในหรือบนประตูเตาอบ	✓	✓	✓	
ห้ามพ่นสารระเหยเช่นยาฆ่าแมลงบนพื้นผิวผลิตภัณฑ์โดยตรง	✓	✓		
โปรดอย่าเก็บวัสดุที่ติดไฟได้ไว้ในเตาอบ ใช้ความระมัดระวังเมื่อให้ความร้อนอาหารหรือเครื่องดื่มที่มีแอลกอฮอล์ เนื่องจากไอของแอลกอฮอล์อาจสัมผัสกับส่วนที่ร้อนจัดของเตาอบ	✓		✓	✓
ให้เด็กอยู่ห่างจากประตูที่เปิดหรือปิด เนื่องจากอาจชนกับประตูหรือทำให้ประตูหนีบนิ้วได้	✓	✓	✓	✓
คำเตือน: ระหว่างการอุ่นร้อนเครื่องดื่มด้วยไมโครเวฟ จะมีการเดือดที่ล่าช้าออกไป ดังนั้น โปรดใช้ความระมัดระวังเมื่อถือภาชนะ เพื่อป้องกันสถานการณ์นี้ โปรดพักอาหารอย่างน้อย 20 วินาที หลังจากปิดเตาอบ เพื่อให้อุณหภูมิกระจายตัวอย่างสม่ำเสมอทุกครั้ง คนอาหารระหว่างให้ความร้อนถ้าจำเป็น และคนทุกครั้งหลังจากอุ่น ในกรณีที่ของเหลวลวก โปรดปฏิบัติตามคำแนะนำในการปฐมพยาบาล: • แช่บริเวณที่ถูกลวกในน้ำเย็นเป็นเวลาอย่างน้อย 10 นาที • พันด้วยผ้าพันแผลที่แห้งและสะอาด • โปรดอย่าทาครีม น้ำมัน หรือโลชั่น	✓	✓	✓	✓

⚠ ข้อควรระวัง				
โปรดใช้เฉพาะภาชนะที่เหมาะกับเตาไมโครเวฟเท่านั้น ห้ามใช้ภาชนะที่เป็นโลหะ จานที่มีขอบทองหรือเงิน เหล็กเสียบ ส้อม ฯลฯ นำลวดที่ใช้ปิดถุงออกจากถุงกระดาษหรือถุงพลาสติกก่อน สาเหตุ: อาจมีประกายไฟเกิดขึ้น ซึ่งทำให้เตาไมโครเวฟเสียหาย	✓		✓	✓
ห้ามใช้เตาไมโครเวฟเพื่อทำให้หนังสือพิมพ์หรือผ้าแห้ง	✓		✓	✓
ใช้เวลาสั้นลงสำหรับอาหารปริมาณน้อย เพื่อป้องกันอาหารร้อนเกินและไหม้	✓		✓	✓

GE83MDT_XST_DE68-04111E_TH.indd 9 2013-09-05 2:46:02

ห้ามจุ่มสายไฟหรือปลั๊กในน้ำ และระวังอย่าให้สายไฟอยู่ใกล้พื้นผิวที่ร้อน	✓	✓		
ห้ามอุ่นร้อนหรือให้ความร้อนกับไข่ทั้งเปลือกหรือไข่ต้มในเตาไมโครเวฟ เนื่องจากอาจระเบิดได้ แม้ว่าจะสิ้นสุดการให้ความร้อนของไมโครเวฟแล้วก็ตาม นอกจากนี้ อย่าให้ความร้อนขวด เหยือก หรือภาชนะที่ปิดฝาสนิทหรือเป็นสุญญากาศ ถั่วที่มีเปลือก มะเขือเทศ ฯลฯ			✓	✓
ห้ามปิดหรือบังช่องระบายอากาศด้านหลังของเตาด้วยผ้าหรือกระดาษ ผ้าหรือกระดาษอาจติดไฟ ขณะที่มีการระบายอากาศร้อนออกจากเตา เตาอบอาจมีความร้อนสูงเกินไป และตัดการทำงานโดยอัตโนมัติ และจะไม่สามารถใช้งานได้จนกว่าจะเย็นลง	✓		✓	
ทุกครั้ง จะต้องใช้ถุงมือกันความร้อนขณะนำอาหารออกจากเตาเพื่อป้องกันความร้อนลวก			✓	
คนของเหลวเมื่อถึงครึ่งหนึ่งของเวลาอุ่น หรือหลังจากสิ้นสุดการอุ่นร้อน และพักให้ของเหลวเย็นลงอย่างน้อย 20 วินาทีหลังจากให้ความร้อนเพื่อป้องกันการเดือดและกระเด็น			✓	
ยืนห่างจากเตาอบประมาณหนึ่งช่วงแขนเมื่อเปิดประตู เพื่อป้องกันไอน้ำหรืออากาศร้อนลวก			✓	
ห้ามใช้งานไมโครเวฟเมื่อไม่มีอาหารอยู่ภายในเตา เตาไมโครเวฟจะปิดลงโดยอัตโนมัติหลังจากผ่านไป 30 นาทีเพื่อความปลอดภัย ขอแนะนำให้วางแก้วน้ำไว้ภายในเตาอบตลอดเวลา เพื่อดูดซับพลังงานไมโครเวฟในกรณีที่เตาไมโครเวฟทำงานโดยไม่ได้ตั้งใจ	✓			✓
ติดตั้งเตาอบตามระยะห่างที่กำหนดในคู่มือนี้ (ดูที่ การติดตั้งเตาไมโครเวฟ)	✓		✓	
ใช้ความระมัดระวังเมื่อต่ออุปกรณ์ไฟฟ้าเข้ากับเต้าเสียบใกล้เตาอบ	✓	✓	✓	

ข้อควรระวังเพื่อหลีกเลี่ยงการได้รับพลังงานไมโครเวฟมากเกินไป (ฟังก์ชันไมโครเวฟเท่านั้น)

หากไม่ปฏิบัติตามข้อควรระวังเพื่อความปลอดภัยต่อไปนี้อาจทำให้ได้รับพลังงานไมโครเวฟที่เป็นอันตราย

(a) ห้ามใช้เตาอบขณะที่ประตูของเตาเปิดอยู่ หรือดัดแปลงแก้ไขล็อคเพื่อความปลอดภัย (สลักของประตู) หรือสอดวัตถุในช่องล็อคเพื่อความปลอดภัย ไม่ว่าในกรณีใดๆ

(b) ห้ามสอดวัตถุใดๆ ระหว่างประตูของเตาอบกับด้านหน้า หรือปล่อยให้มีอาหารหรือสารทำความสะอาดค้างอยู่ที่ผิวหน้าของซีล ตรวจสอบว่าประตูและซีลขอบประตูสะอาดอยู่เสมอ โดยเช็ดด้วยผ้าหมาดและเช็ดอีกครั้งด้วยผ้านุ่มที่แห้งหลังจากการใช้งาน

(c) ห้ามใช้เตาอบที่มีความเสียหาย จนกว่าจะได้รับการซ่อมแซมโดยช่างผู้ชำนาญการซ่อมบำรุงไมโครเวฟที่ผ่านการฝึกอบรมโดยผู้ผลิต โปรดปิดประตูของเตาอบให้สนิท และตรวจสอบว่าส่วนต่างๆ ต่อไปนี้ไม่ชำรุดเสียหาย:

(1) ประตู (งอ)

(2) บานพับของประตู (หักหรือหลวม)

(3) ซีลประตูและผิวของซีล

(d) ห้ามปรับแต่งหรือซ่อมแซมเตาอบโดยบุคคลอื่นที่ไม่ใช่ผู้ชำนาญการซ่อมบำรุงไมโครเวฟที่ผ่านการฝึกอบรมโดยผู้ผลิต

GE83MDT_XST_DE68-04111E_TH.indd 10 2013-09-05 2:46:02

Samsung จะเรียกเก็บค่าบริการซ่อมแซม สำหรับการเปลี่ยนอุปกรณ์เสริมหรือซ่อมจุดบกพร่องที่ไม่ใช่ส่วนสำคัญ ถ้าความเสียหายของอุปกรณ์ และ/หรือความเสียหายหรือการสูญเสียอุปกรณ์เสริมนั้นเกิดจากการกระทำของผู้ใช้ รายการที่ครอบคลุมได้แก่:

(a) รอยบุบ รอยขีดข่วน ประตู มือจับ แผงด้านนอก หรือแผงควบคุมแตกหัก

(b) ถาดแตกหรือสูญหาย ล้อเลื่อนนำทาง เฟืองวงแหวน หรือตะแกรงลวด

- ใช้อุปกรณ์นี้เพื่อวัตถุประสงค์ที่อธิบายในคู่มือคำแนะนำนี้เท่านั้น คำเตือนและคำแนะนำเพื่อความปลอดภัยในคู่มือนี้ไม่ได้ครอบคลุมถึงสภาวะและสถานการณ์ทั้งหมดที่สามารถเกิดขึ้นได้ คุณมีหน้าที่จะต้องใช้สามัญสำนึก ความระมัดระวัง และใส่ใจกับการติดตั้ง บำรุงรักษา และใช้งานอุปกรณ์
- เนื่องจากคำแนะนำในการใช้งานต่อไปนี้ใช้สำหรับหลายรุ่น ลักษณะของเตาอบของคุณอาจแตกต่างจากที่อธิบายในคู่มือนี้ และสัญญาณคำเตือนบางอาจอาจไม่มีผล ถ้าคุณมีข้อซักถามหรือข้อกังวลใด โปรดติดต่อศูนย์บริการที่ใกล้ที่สุด หรือหาความช่วยเหลือและข้อมูลออนไลน์ได้ที่ www.samsung.com
- เตาไมโครเวฟนี้ใช้สำหรับการให้ความร้อนกับอาหาร ใช้สำหรับการใช้งานภายในครัวเรือนเท่านั้น ห้ามอุ่นผ้าทุกประเภทหรือเบาะที่มีไส้ซึ่งอาจลุกไหม้ได้ ผู้ผลิตไม่มีส่วนรับผิดต่อความเสียหายที่เกิดจากการใช้อุปกรณ์อย่างไม่ถูกต้องหรือไม่เหมาะสม
- การไม่รักษาความสะอาดเตาอบอาจทำให้เกิดความเสียหายกับพื้นผิว ซึ่งอาจมีผลเสียต่อเตาอย่างมาก และอาจก่อให้เกิดอันตรายได้

คู่มือค้นหาอย่างรวดเร็ว

ถ้าคุณต้องการอบอาหาร

1. วางอาหารในเตาอบ
   เลือกระดับพลังงานโดยกดปุ่ม **ไมโครเวฟ** ( ) หนึ่งครั้งหรือตามจำนวนที่เหมาะสม

2. เลือกเวลาในการปรุงอาหารโดยกดปุ่ม **10 นาที**, **1 นาที** หรือ **10 วินาที** ตามต้องการ



3. กดปุ่ม **เริ่มทำงาน** ( )
   ผลลัพธ์ : การปรุงจะเริ่มต้น
   เตาอบจะส่งสัญญาณสี่ครั้งเมื่อปรุงอาหารเสร็จ

หากคุณต้องการละลายน้ำแข็ง

1. วางอาหารแช่แข็งในเตาอบ
   กดปุ่ม **ละลายน้ำแข็ง** ( ) หนึ่งครั้งขึ้นไปตามประเภทอาหารที่จะละลายน้ำแข็ง

2. เลือกน้ำหนักโดยกดปุ่ม **Kg (กก.)** และ **100g (100 กรัม)** ตามต้องการ



3. กดปุ่ม **เริ่มทำงาน** ( )

ถ้าคุณต้องการเพิ่มเวลาทำงาน

ขณะที่อาหารยังอยู่ในเตา
กดปุ่ม **+30 วินาที** หนึ่งครั้งต่อเวลาที่คุณต้องการเพิ่ม 30 วินาที

GE83MDT_XST_DE68-04111E_TH.indd 11 2013-09-05 2:46:04

ถ้าคุณต้องการย่างอาหาร

1. อุ่นตะแกรงย่างให้ได้อุณหภูมิที่ต้องการ โดยกดปุ่ม **ย่าง** (⏦) การตั้งเวลา (**10 นาที**, **1 นาที** และ **10 วินาที**) และปุ่ม **เริ่มทำงาน** (⏀)

2. เมื่ออุ่นเสร็จแล้ว ให้เปิดประตูและวางอาหารบนตะแกรงในเตาอบ กดปุ่ม **ย่าง** (⏦) กำหนดเวลาในการปรุงอาหาร โดยกดปุ่ม **10 นาที**, **1 นาที** และ **10 วินาที** ตามต้องการ



3. กดปุ่ม **เริ่มทำงาน** (⏀)

คุณสมบัติเตาอบ

เตาอบ

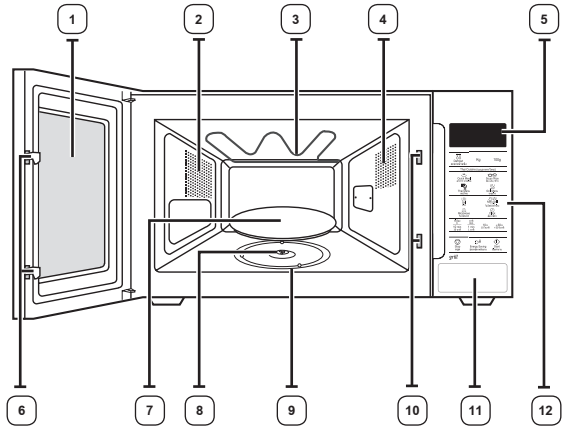

1. ประตู
2. ช่องระบายอากาศ
3. ย่าง
4. ไฟ
5. จอแสดงผล
6. สลักประตู
7. จานหมุน
8. เฟืองของจานหมุน
9. วงแหวน
10. ช่องล็อคเพื่อความปลอดภัย
11. ปุ่มกดเปิดประตู
12. แผงควบคุม

GE83MDT_XST_DE68-04111E_TH.indd 12 2013-09-05 2:46:05

แผงควบคุม

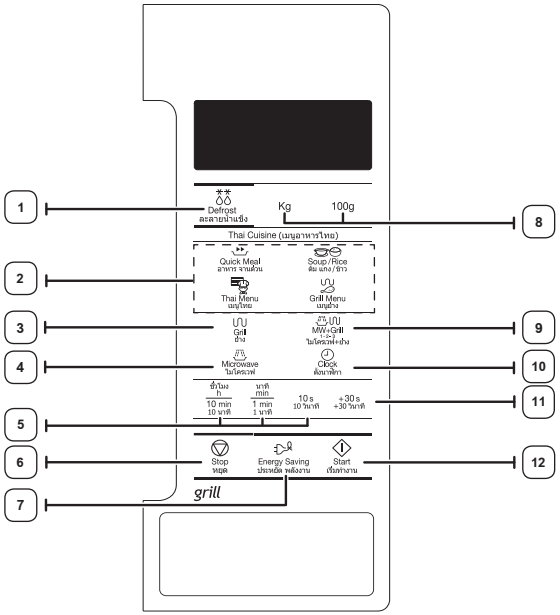

1. การเลือกคุณสมบัติ ละลายน้ำแข็ง อัตโนมัติ
2. การเลือกคุณสมบัติ เมนูอาหารไทย อัตโนมัติ
3. ปุ่มโหมด ย่าง
4. ปุ่มโหมด ไมโครเวฟ
5. ปุ่มตั้งเวลา
6. ปุ่ม หยุด/ยกเลิก
7. ปุ่ม ประหยัดพลังงาน
8. เลือกน้ำหนัก
9. ปุ่มโหมด ไมโครเวฟ + ย่าง
10. ปุ่ม ตั้งนาฬิกา
11. ปุ่ม +30 วินาที
12. ปุ่ม เริ่มทำงาน

อุปกรณ์เสริม

คุณจะได้รับอุปกรณ์เสริมหลายชนิด เพื่อนำมาใช้ร่วมกับเตาอบ โดยขึ้นอยู่กับรุ่นที่คุณซื้อ

1. **วงแหวน** เพื่อวางไว้บริเวณส่วนกลางของเตาอบ

   วัตถุประสงค์ : วงแหวนนี้จะรองรับน้ำหนักของจานหมุน



2. **จานหมุน** วางเหนือวงแหวน โดยให้ส่วนกลางสวมพอดีกับเฟือง

   วัตถุประสงค์ : จานหมุนทำหน้าที่เป็นพื้นที่หลักสำหรับอบอาหาร และสามารถถอดออกทำความสะอาดได้ง่าย



3. **ตะแกรงย่าง** สำหรับวางบนจานหมุน

   วัตถุประสงค์ : ตะแกรงโลหะสามารถใช้ได้ในการย่างและการอบอาหารแบบผสม



4. **จานอบเกรียม** โปรดดูหน้า 23 ถึง 25

   วัตถุประสงค์ : ใช้จานอบเกรียมเมื่อใช้ฟังก์ชั่นการอบเกรียมอัตโนมัติหรือการอบเกรียมแบบกำหนดเอง



ห้าม ใช้เตาไมโครเวฟหากไม่มีวงแหวน หรือจานหมุน

GE83MDT_XST_DE68-04111E_TH.indd 13 2013-09-05 2:46:06

การใช้เตาอบ

เตาไมโครเวฟทำงานอย่างไร

ไมโครเวฟเป็นคลื่นแม่เหล็กไฟฟ้าที่มีความถี่สูง พลังงานที่ปล่อยออกมาทำให้อาหารสุกหรือร้อนขึ้น โดยไม่มีการเปลี่ยนรูปร่างหรือสี

คุณสามารถใช้เตาไมโครเวฟเพื่อ:

- ละลายน้ำแข็ง
- การอุ่น/ปรุงอาหารอัตโนมัติ
- อบอาหาร

หลักการปรุงอาหาร

1. ไมโครเวฟที่เกิดจากแม็กเนตรอนจะกระจายอย่างเป็นระเบียบ ในขณะที่อาหารหมุนอยู่บนจานหมุน ทำให้อาหารสุกทั่วถึงกัน
2. อาหารจะดูดซับไมโครเวฟลึกประมาณ 1 นิ้ว (2.5 ซม.) จากนั้นการอบอาหารจะเกิดขึ้นต่อไป เมื่อมีการถ่ายเทความร้อนภายในอาหาร

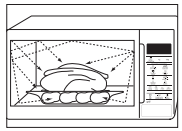

3. เวลาในการอบอาหารจะขึ้นอยู่กับตำรับอาหารและคุณสมบัติของอาหารชนิดนั้น:
   - ปริมาณและความหนาแน่น
   - ปริมาณน้ำภายในอาหาร
   - อุณหภูมิเริ่มต้น (มีการแช่เย็นไว้หรือไม่)

เนื่องจากส่วนกลางของอาหารสุกเนื่องจากการถ่ายเทความร้อน การอบอาหารจึงเกิดขึ้นแม้ว่าคุณจะนำอาหารออกจากเตาแล้วก็ตาม ดังนั้น โปรดปฏิบัติตามเวลาพักที่แนะนำในตำราอาหารและในคู่มือนี้เพื่อให้:

- อาหารสุกทั่วถึงกันจนถึงด้านใน
- อาหารมีอุณหภูมิเท่ากันทั้งหมด

การตรวจสอบว่าเตาไมโครเวฟของคุณทำงานอย่างถูกต้อง

กระบวนการง่ายๆ ต่อไปนี้ช่วยให้คุณสามารถตรวจสอบว่าเตาไมโครเวฟของคุณทำงานถูกต้องอยู่เสมอ เปิดประตูเตาอบ โดยกดปุ่มขนาดใหญ่ที่มุมขวาล่างของแผงควบคุม
วางชามใส่น้ำไว้บนจานหมุน จากนั้น ปิดประตู

1. กดปุ่ม **ไมโครเวฟ** ( ) และกำหนดเวลาเป็น 4-5 นาที โดยกดปุ่ม **1 min (1 นาที)** ตามจำนวนครั้งที่ต้องการ



2. กดปุ่ม **เริ่มทำงาน** ( )

ผลลัพธ์ : เตาจะให้ความร้อนกับน้ำเป็นเวลา 4 ถึง 5 นาที น้ำควรจะเดือด

เตาอบจะต้องต่อเข้ากับปลั๊กไฟที่ผนังอย่างถูกต้อง จานหมุนจะต้องอยู่ในตำแหน่งที่ถูกต้องในเตา ถ้ามีการใช้ระดับพลังงานนอกเหนือจากระดับสูงสุด น้ำจะใช้เวลาเดือดนานขึ้น

GE83MDT_XST_DE68-04111E_TH.indd 14 2013-09-05 2:46:07

การตั้งเวลา

เตาไมโครเวฟของคุณมีนาฬิกาอยู่ภายใน เมื่อมีการจ่ายไฟ ":0", "88:88" หรือ "12:00" จะปรากฏบนหน้าจอแสดงผล โดยอัตโนมัติ
โปรดตั้งเวลาปัจจุบัน ซึ่งสามารถแสดงเวลาในระบบ 24 หรือ 12 ชั่วโมง คุณจะต้องตั้งเวลาของนาฬิกา:

- เมื่อติดตั้งเตาไมโครเวฟเป็นครั้งแรก
- หลังจากไฟฟ้าดับ

ฟังก์ชั่นประหยัดพลังงานอัตโนมัติ
ถ้าคุณไม่เลือกฟังก์ชั่นใดเลยเมื่ออุปกรณ์อยู่ระหว่างการตั้งค่าหรือทำงานโดยมีสถานะหยุดชั่วคราว ฟังก์ชั่นจะถูกยกเลิก และนาฬิกาจะแสดงผลหลังจากผ่านไป 25 นาที
ไฟของเตาอบจะดับลงหลังจากผ่านไป 5 นาทีโดยประตูเปิดอยู่

1. ถ้าต้องการแสดงเวลาในรูปแบบ...
   เวลาแบบ 24 ชั่วโมง
   เวลาแบบ 12 ชั่วโมง
   กดปุ่ม **ตั้งนาฬิกา** (🕒) หนึ่งหรือสองครั้ง

2. ตั้งค่าชั่วโมงด้วยปุ่ม **h (ชั่วโมง)** และนาทีด้วยปุ่ม **min (นาที)**

3. เมื่อนาฬิกาแสดงเวลาถูกต้องแล้ว ให้กดปุ่ม **ตั้งนาฬิกา** (🕒) อีกครั้งเพื่อให้นาฬิกาเริ่มเดิน

ผลลัพธ์ : เวลานี้จะปรากฏเมื่อใดก็ตามที่คุณไม่ได้ใช้เตาไมโครเวฟ

การอบ/อุ่นอาหาร

ขั้นตอนต่อไปนี้กล่าวถึงการอบและการอุ่นอาหาร
โปรดตรวจสอบการตั้งค่าการอบอาหารทุกครั้ง ก่อนที่จะปล่อยให้เตาอบทำงานตามลำพัง
ขั้นแรก วางอาหารที่ส่วนกลางของจานหมุน จากนั้น ปิดประตู

1. กดปุ่ม **ไมโครเวฟ** (🍲)

ผลลัพธ์ : สัญญาณ 800 วัตต์ (ระดับพลังงานการปรุงอาหารสูงสุด) จะปรากฏ:
เลือกระดับพลังงานที่เหมาะสมด้วยการกดปุ่ม **ไมโครเวฟ** (🍲) อีกครั้งจนกระทั่งได้ระดับพลังงานที่ต้องการ โปรดดูตารางระดับพลังงานในหน้าถัดไป

2. กำหนดเวลาในการปรุงอาหาร โดยกดปุ่ม **10 นาที, 1 นาที** และ **10 วินาที** ตามต้องการ



3. กดปุ่ม **เริ่มทำงาน** (⏀)

ผลลัพธ์ : ไฟของเตาอบจะสว่างขึ้น และจานหมุนจะเริ่มหมุน
1) เตาอบจะเริ่มต้นการอบอาหาร เมื่อเสร็จแล้วก็จะส่งสัญญาณเตือนสี่ครั้ง
2) เตาอบจะส่งสัญญาณเตือน 3 ครั้ง (นาทีละครั้ง)
3) เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง

ห้ามเปิดเครื่อง หากเตาไมโครเวฟว่างเปล่า

GE83MDT_XST_DE68-04111E_TH.indd 15 2013-09-05 2:46:07

ระดับพลังงาน

คุณสามารถเลือกระดับพลังงานต่อไปนี้

ระดับพลังงาน	กำลังไฟฟ้า	
	MWO	ย่าง
สูง	800 วัตต์	-
สูงปานกลาง	600 วัตต์	-
ปานกลาง	450 วัตต์	-
ต่ำปานกลาง	300 วัตต์	-
ละลายน้ำแข็ง (❄)	180 วัตต์	-
ต่ำ/รักษาความร้อน	100 วัตต์	-
ย่าง	-	1100 วัตต์
ผสม I (🍲+♨)	600 วัตต์	1100 วัตต์
ผสม II (🍲+♨)	450 วัตต์	1100 วัตต์
ผสม III (🍲+♨)	300 วัตต์	1100 วัตต์

ถ้าคุณเลือกระดับพลังงานสูง จะต้องลดระยะเวลาในการอบอาหาร

ถ้าคุณเลือกระดับพลังงานต่ำ จะต้องใช้ระยะเวลาในการอบอาหารมากขึ้น

การปรับเวลาอบอาหาร

คุณสามารถเพิ่มเวลาในการปรุงอาหาร โดยกดปุ่ม **+30 วินาที** หนึ่งครั้งสำหรับการเพิ่ม 30 วินาที

1. กดปุ่ม **+30 วินาที** หนึ่งครั้งสำหรับการเพิ่มเวลา 30 วินาที

2. กดปุ่ม **เริ่มทำงาน** (⏀)

การหยุดการอบอาหาร

คุณสามารถหยุดอบอาหารเมื่อใดก็ได้ เพื่อตรวจดูอาหาร

1. ในการหยุดชั่วคราว
   ให้เปิดประตู



   ผลลัพธ์ : การอบจะหยุดลง ในการอบอาหารต่อ ให้ปิดประตูและกดปุ่ม **เริ่มทำงาน** (⏀) อีกครั้ง

2. เมื่อต้องการหยุดโดยสมบูรณ์
   กดปุ่ม **หยุด** (▽)

   ผลลัพธ์ : การปรุงอาหารจะหยุดลง
   หากคุณต้องการยกเลิกการตั้งค่าการอบ ให้กดปุ่ม **หยุด** (▽) อีกครั้ง

คุณสามารถยกเลิกการตั้งค่าก่อนที่จะเริ่มต้นการปรุง โดยกดปุ่ม **หยุด** (▽)

การตั้งค่าโหมดประหยัดพลังงาน

เตาอบมีโหมดประหยัดพลังงาน ซึ่งจะช่วยประหยัดพลังงานไฟฟ้าเมื่อไม่ได้ใช้เตาอบ

- กดปุ่ม **ประหยัด พลังงาน** (🍃)

  ผลลัพธ์ : จะแสดงผลดับ

- หากต้องการออกจากโหมดประหยัดพลังงาน ให้เปิดประตูหรือกดปุ่ม **ประหยัด พลังงาน** (🍃) จากนั้นจอแสดงผลจะแสดงเวลาปัจจุบัน ขณะนี้เตาอบพร้อมใช้งานแล้ว

GE83MDT_XST_DE68-04111E_TH.indd 16 2013-09-05 2:46:08

การใช้คุณสมบัติ เมนูอาหารไทย อัตโนมัติ

คุณสมบัติ เมนูอาหารไทย อัตโนมัติ 27 รายการประกอบด้วยเวลาในการปรุงอาหารที่กำหนดไว้แล้ว โดยคุณไม่จำเป็นต้องตั้งเวลาอบหรือระดับพลังงานอีก คุณสามารถปรับประเภทของ เมนูอาหารไทย อัตโนมัติได้ด้วยการกดปุ่ม **เมนูอาหารไทย** อัตโนมัติ (อาหาร จานด่วน, ต้ม แกง / ข้าว, เมนูไทย, เมนูย่าง)
ขั้นแรก ให้วางอาหารไว้กึ่งกลางจานหมุนและปิดประตู

1. กดปุ่ม **เมนูอาหารไทย อัตโนมัติ** (อาหาร จานด่วน, ต้ม แกง / ข้าว, เมนูไทย, เมนูย่าง) ที่คุณต้องการจะอบ



2. เลือกประเภทอาหารที่คุณอบด้วยการกดปุ่ม **เมนูอาหารไทย อัตโนมัติ** โปรดดูตารางในหน้าถัดไป เพื่อดูคำอธิบายการตั้งค่าต่างๆ
   - อาหาร จานด่วน: กดปุ่ม **อาหาร จานด่วน** (🍽) (1~6)
   - ต้ม แกง / ข้าว : กดปุ่ม **ต้ม แกง / ข้าว** (🍲) (1~6)
   - เมนูไทย : กดปุ่ม **เมนูไทย** ( ) (1~7)
   - เมนูย่าง : กดปุ่ม **เมนูย่าง** ( ) (1~8)

3. กดปุ่ม **เริ่มทำงาน** (⏀)

การใช้โปรแกรม อาหาร จานด่วน

ตารางต่อไปนี้จะแสดงโปรแกรม อาหาร จานด่วน ต่างๆ รวมทั้งปริมาณ เวลาพักอาหาร และคำแนะนำที่เหมาะสม

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ	คำแนะนำ
1	บะหมี่กึ่งสำเร็จรูป	1 ที่	บะหมี่สำเร็จรูป- 1 ซอง, ไข่ - 1 ฟอง, ผัก - 100 กรัม, หมูสับ - 100 กรัม, น้ำ - 2 ถ้วย - ผงปรุงรสในซอง	1. ใส่วัตถุดิบทั้งหมดลงในชาม ใช้ ไมโครเวฟ 800 วัตต์เป็นเวลา 7 นาที แล้วรับประทาน
2	ขนมจีบกุ้ง	12 ชิ้น	ขนมจีบกุ้งแช่แข็ง 1 แพ็ค	1. ตัดมุมของบรรจุภัณฑ์ 1 มุม นำซอสและไม้จิ้มออกมา 2. ใส่ในไมโครเวฟ ใช้ ไมโครเวฟ 800 วัตต์เป็นเวลา 3 นาที แล้ว รับประทาน
3	ซาลาเปา	9 ชิ้น	ซาลาเปาไส้หมูแช่แข็ง 1 แพ็ค	1. ตัดมุมของบรรจุภัณฑ์ 1 มุม 2. ใส่ในไมโครเวฟ ใช้ ไมโครเวฟ 800 วัตต์เป็นเวลา 2 นาที แล้ว รับประทาน 3. นำออกจากบรรจุภัณฑ์แล้ว รับประทาน
4	เกี๊ยวกุ้ง	1 ที่	เกี๊ยวกุ้งแช่แข็ง 1 แพ็ค	1.แกะพลาสติกที่ห่อไว้ออก เปิดฝา เติมน้ำตามระดับที่แนะนำ 2. ปิดฝา ใส่ในไมโครเวฟ ใช้ ไมโครเวฟ 800 วัตต์เป็นเวลา 4 นาที 3. นำออกจากไมโครเวฟ แล้ว รับประทาน
5	โจ๊กปลาทะเล	1 ที่	ข้าวต้มปลาเก๋าแช่แข็ง 1 แพ็ค	1. ใช้ส้อมจิ้มฝา 3-4 ครั้ง 2. ใช้ ไมโครเวฟ 800 วัตต์เป็น เวลา 6½ นาที 3. นำออกจากไมโครเวฟ แกะฝา ออก แล้วรับประทาน

GE83MDT_XST_DE68-04111E_TH.indd 17 2013-09-05 2:46:09

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ	คำแนะนำ
6	สปาเกตตี้ซอสไก่	1 ที่	สปาเก็ตตี้ซอสไก่แช่แข็ง 1 แพ็ค	1. ตัดบรรจุภัณฑ์ด้านนอกออก 2. ใช้ส้อมจิ้มฝาของบรรจุภัณฑ์ด้านใน 3-4 ครั้ง 3. ใช้ ไมโครเวฟ 800 วัตต์เป็นเวลา 5 นาที 4. นำออกจากไมโครเวฟ แกะฝาออก แล้วรับประทาน

การใช้โปรแกรม ต้ม แกง / ข้าว

ตารางต่อไปนี้เป็นการตั้งโปรแกรม ต้ม แกง / ข้าว แบบต่างๆ รวมทั้งปริมาณ เวลาพักอาหาร และคำแนะนำต่างๆ

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ	คำแนะนำ
1	ข้าวสวย	2-3 ที่	ข้าว - 1 ถ้วย, น้ำสำหรับหุง - 2 ถ้วย - น้ำสำหรับชาวข้าว	1. ชาวข้าวและนำข้าวที่แช่น้ำใส่ในชามแก้ว แล้วเติมน้ำ 2 ถ้วยลงไป 2. นำใส่ไมโครเวฟ ใช้ระดับพลังงาน 800 วัตต์ เป็นเวลา 10 นาที 3. ปิดฝาเพื่อพักอาหารเป็นเวลา 15-20 นาทีก่อนนำมารับประทาน * เวลาจะขึ้นอยู่กับยี่ห้อของข้าวและวันที่ผลิต
2	ข้าวกล้อง	2-3 ที่	ข้าวกล้อง - 1 ถ้วย, น้ำสำหรับหุง - 2 ถ้วย - น้ำสำหรับชาวข้าว	1. ชาวข้าวและนำข้าวที่แช่น้ำใส่ในชามแก้ว แล้วเติมน้ำ 2 ถ้วยลงไป 2. นำใส่ไมโครเวฟ ใช้ระดับพลังงาน 800 วัตต์ เป็นเวลา 15 นาที 3. ปิดฝาเพื่อพักอาหารเป็นเวลา 15-20 นาทีก่อนนำมารับประทาน * เวลาจะขึ้นอยู่กับยี่ห้อของข้าวและวันที่ผลิต
3	ข้าวเหนียว	2-3 ที่	ข้าวเหนียว - 1 ถ้วย, น้ำสำหรับหุง - 2 ถ้วย - น้ำสำหรับชาวข้าว	1. ใส่ข้าวในชามแก้ว แล้วเติมน้ำ 2 ถ้วยลงไป 2. นำใส่ไมโครเวฟ ใช้ระดับพลังงาน 800 วัตต์ เป็นเวลา 15 นาที 3. ปิดฝาเพื่อพักอาหารเป็นเวลา 15-20 นาทีก่อนนำมารับประทาน * เวลาจะขึ้นอยู่กับยี่ห้อของข้าวและวันที่ผลิต
4	ซุปเต้าหู้สาหร่าย	4 ที่	หมูสับ - 100 กรัม, เต้าหู้หลอด - 2 หลอด, สาหร่ายทะเลแห้ง - ¼ ถ้วย, รากผักชีบุ้น - 2 ราก, น้ำมันหอย - 1 ช้อนโต๊ะ, น้ำปลา - 1 ช้อนโต๊ะ, พริกไทย - ¼ ช้อนชา, ต้นหอม - ¼ ถ้วย, ผักชีสับ - 1 ช้อนโต๊ะ, น้ำ - 500 มล.	1. คลุกเคล้าหมู น้ำมันหอย และพริกไทยให้เข้ากัน แล้วปั้นเป็นก้อนกลม 2. เติมน้ำ หมู และเต้าหู้ลงในชาม ปรุงรสด้วยน้ำปลาแล้วนำใส่ในไมโครเวฟ ใช้ ไมโครเวฟ 800 วัตต์เป็นเวลา 6 นาที 3. นำออกจากเตา แล้วใส่สาหร่าย ต้นหอม และผักชีก่อนรับประทาน

GE83MDT_XST_DE68-04111E_TH.indd 18 2013-09-05 2:46:09

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ	คำแนะนำ
5	ต้มย่ากุ้ง	4 ที่	กุ้ง - 150 กรัม, เห็ด - 1 ถ้วย, ข่าฝานบางๆ - 4 แว่น, ใบมะกรูด - ¼ ถ้วย, ตะไคร้- 2 ต้น, มะเขือเทศ - 4 ลูก, น้ำพริกเผา - 1 ช้อนโต๊ะ, นมข้นจืด - ¼ ถ้วย, น้ำปลา - 3 ช้อนโต๊ะ, น้ำมะนาว - 3 ช้อนโต๊ะ, พริก - 10 เม็ด, น้ำ - 500 มล. ใบผักชีสำหรับตกแต่ง	1. ผสมน้ำ ข่า ตะไคร้ ฉีกใบมะกรูด มะเขือเทศ น้ำพริกเผา เข้าด้วยกัน 2. เติมกุ้ง เห็ด พริก แล้วใส่ในไมโครเวฟ ใช้ ไมโครเวฟ 800 วัตต์เป็นเวลา 6 นาที 3. นำออกจากเตา จากนั้นเติมนมข้นจืด และปรุงรสด้วยน้ำปลา น้ำมะนาว ตกแต่งด้วยใบผักชี ก่อนรับประทาน
6	แกงเขียวหวานไก่	4 ที่	ไก่หั่นเป็นชิ้น - 200 กรัม, น้ำพริกแกงเขียวหวาน - 2 ช้อนโต๊ะ, กะทิ - 500 มล., มะเขือ (หั่นลูกเต๋า) - 1 ถ้วย, น้ำปลา - 1 ช้อนโต๊ะ, น้ำตาลปี๊บ - 1 ช้อนชา, โหระพา - ¼ ถ้วย พริกชี้ฟ้าฝานบางๆ สำหรับตกแต่ง	1. ผสมกะทิและน้ำพริกแกงเขียวหวานให้เข้ากัน เติมไก่ มะเขือ น้ำตาลปี๊บ น้ำปลา จากนั้นคนให้เข้ากัน 2. อบที่ความร้อน 600 วัตต์เป็นเวลา 10 นาที นำออกจากเตา แล้วเติมใบโหระพาและพริกชี้ฟ้า พร้อมรับประทาน

การใช้โปรแกรม เมนูไทย

ตารางต่อไปนี้จะแสดงโปรแกรม เมนูไทย แบบต่างๆ รวมทั้งปริมาณ เวลาพักอาหาร และคำแนะนำที่เหมาะสม

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ	คำแนะนำ
1	โจ๊กหมู/ข้าวต้มข้าวโอ๊ต	1 ที่	ข้าวสวย - 1 ถ้วย, หมูสับ - ½ ถ้วย, น้ำ - 500 มล., น้ำมันหอย - 1 ช้อนโต๊ะ, พริกไทยป่น - ¼ ช้อนชา, ซีอิ๊ว - 1 ช้อนโต๊ะ ผักชีและต้นหอมสับเพื่อตกแต่ง	1. คลุกเคล้าหมู พริกไทย และน้ำมันหอยให้เข้ากัน แล้วปั้นเป็นก้อนกลม 2. เติมน้ำในชาม จากนั้นใส่ข้าว หมู ปรุงรสด้วยซีอิ๊ว 3. นำใส่ไมโครเวฟ ใช้ไมโครเวฟ 800 วัตต์ เป็นเวลา 7 นาที 4. นำออกจากเตา แล้วโรยผักชีและต้นหอม
2	สปาเกตตี้	2 ที่	สปาเก็ตตี้ - 80 กรัม, น้ำ - 500 มล., น้ำมันมะกอก - ½ ช้อนโต๊ะ, เกลือเล็กน้อย	1. ผสมน้ำ เกลือ น้ำมันในชาม แล้วใส่สปาเก็ตตี้ 2. ใช้ ไมโครเวฟ 800 วัตต์เป็นเวลา 12 นาที 3. เมื่อได้เวลาแล้ว ให้นำออกจากเตา นำเส้นมาล้างด้วยน้ำเย็น และเทน้ำออก สปาเก็ตตี้เสร็จพร้อมรับประทาน
3	ไข่ตุ๋น	2 ที่	ไข่สด - 2 ฟอง, น้ำ - ¾ ถ้วย, ซีอิ๊ว - 1 ช้อนโต๊ะ, เกลือ - ⅛ ช้อนชา, นมข้นจืด - 2 ช้อนโต๊ะ, ปูอัด - ¼ ถ้วย, กุ้งต้ม - 4 ตัว	1. ตีไข่ในน้ำและปรุงรสด้วยนม ซีอิ๊ว เกลือในชามเซรามิค 2. นำใส่ไมโครเวฟ ใช้ไมโครเวฟ 450 วัตต์ เป็นเวลา 12 นาที 3. โรยปูอัดและกุ้งก่อนรับประทาน

GE83MDT_XST_DE68-04111E_TH.indd 19 2013-09-05 2:46:09

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ	คำแนะนำ
4	สปาเกตตี้ครีมซอส	1 ที่	สปาเก็ตตี้สุก - 80 กรัม, แป้ง - 1 ช้อนโต๊ะ, น้ำ - ½ ถ้วย, แฮมลวก - ½ ถ้วย, หัวหอมหั่นลูกเต๋า - ¼ ถ้วย, เนยเค็ม - 2 ช้อนโต๊ะ, เบย์ลีฟ - 3 ใบ, วิปครีม - 100 มล., เห็ด - ½ ถ้วย, เกลือ - ¼ ช้อนชา, มอซซาเรลล่าชีส - 2 ช้อนโต๊ะ	1. ผสมแป้งกับน้ำ แล้วเติมเนย วิปครีม เบย์ลีฟ แฮม เห็ด 2. นำใส่ไมโครเวฟ ใช้ไมโครเวฟ 800 วัตต์ เป็นเวลา 5 นาที 3. นำออกจากเตา ปรุงรสด้วย เกลือ พริกไทย 4. เติมชีสและสปาเก็ตตี้ แล้วคนให้เข้ากัน พร้อมรับประทาน
5	ลังขยามะพร้าวอ่อน	2 ที่	ไข่เป็ด - 3 ฟอง, น้ำตาลปี๊บ - ½ ถ้วย, กะทิ - 1 ถ้วย, ใบเตย - 2-3 ใบ, ฟักทองหั่นลูกเต๋าเล็ก - 1 ถ้วย	1. ตีไข่ น้ำตาล และใบเตยจนน้ำตาลละลายหมด เทใส่ตัวกรองเพื่อไม่ให้ไข่มีตะกอน 2. เติมฟักทอง นำใส่ไมโครเวฟใช้ ไมโครเวฟ 300 วัตต์ เป็นเวลา 15 นาที 3. นำออกจากเตา ตั้งพักไว้ให้เย็น แล้วจึงนำมารับประทาน
6	กล้วยบวชชี	1-2 ที่	กล้วยหั่นเป็นแว่น - 100 กรัม, กะทิ - 150 มล., น้ำตาลปี๊บ - 3 ช้อนโต๊ะ, น้ำ - 1 ถ้วย, เกลือ - ¼ ช้อนชา	1. ผสมกะทิ น้ำ น้ำตาลปี๊บ และเกลือ คนให้เข้ากันจนส่วนผสมทั้งหมดละลาย จากนั้นเติมกล้วย 2. นำใส่ไมโครเวฟ ใช้ไมโครเวฟ 600 วัตต์ เป็นเวลา 8 นาที แล้วนำออกจากเตา พร้อมรับประทาน
7	ไข่เจียว	2 ที่	ไข่ - 2 ฟอง, มะเขือเทศหั่นลูกเต๋า - 1 ช้อนโต๊ะ, หัวหอมสับ - 1 ช้อนโต๊ะ, ซีอิ๊ว - ½ ช้อนโต๊ะ, เนย - 1 ช้อนโต๊ะ	1. ตีไข่ เล้วเติมมะเขือเทศ หัวหอม และซีอิ๊ว 2. ทาเนยในชามแล้วเติมส่วนผสมทั้งหมด (1) ลงไป 3. ใช้ ไมโครเวฟ 800 วัตต์เป็นเวลา 2½ นาที แล้วนำมารับประทาน

การใช้โปรแกรม เมนูย่าง

ตารางต่อไปนี้จะแสดงโปรแกรม เมนูย่าง แบบต่างๆ รวมทั้งปริมาณ เวลาพักอาหาร และคำแนะนำที่เหมาะสม

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ	คำแนะนำ
1	ขนมปังกระเทียม	10 ชิ้น	ขนมปังฝรั่งเศส - 10 ชิ้น, เนย - 2 ช้อนโต๊ะ, เกลือ - ½ ช้อนชา, กระเทียม - 1 ช้อนโต๊ะ	1. ผสมเนย เกลือ และกระเทียม เข้าด้วยกัน แล้วทาบนขนมปัง 2. วางบนตะแกรงย่างและย่าง เป็นเวลา 3 นาที แล้วนำมารับประทาน
2	ขนมปังหน้ากุ้ง	2-4 ที่	ขนมปังทำแซนด์วิช 4 แผ่น, กุ้งสับ - ½ ถ้วย, กระเทียมสับ - 1 ช้อนชา, พริกไทยป่น - ¼ ช้อนชา, รากผักชีบด - 1 ช้อนชา, น้ำมันหอย - ½ ช้อนโต๊ะ ผักชีและพริกชี้ฟ้าฝานบางๆ สำหรับตกแต่ง	1. ผสมกุ้ง กระเทียม พริกไทย และน้ำมันหอยเข้าด้วยกัน 2. ตัดขนมปัง 1 แผ่นให้เป็น 4 ชิ้น แล้วทากุ้งลงไป 3. วางบนตะแกรงและใช้โหมด ไมโครเวฟ + ย่าง 600 วัตต์ เป็นเวลา 4 นาที แล้วนำมารับประทาน
3	ปีกไก่นิวออลีนส์	2 ที่	ปีกไก่ - 250 กรัม, น้ำมันหอย - 2 ช้อนโต๊ะ, พริกไทย - ½ ช้อนโต๊ะ, ซอสพริก (ศรีราชา) - 1 ช้อนโต๊ะ, เบย์ลีฟ - 1 ใบ	1. ผสมน้ำมันหอย เบย์ลีฟ พริกไทย ซอสพริกเข้าด้วยกัน จากนั้นหมักกับปีกไก่ แล้วทิ้งไว้ 15 นาที 2. วางบนจานอบเกรียมและใช้โหมด ไมโครเวฟ + ย่าง 600 วัตต์เป็นเวลา 4 นาที 3. กลับด้านล่างขึ้นมา และใช้โหมด ไมโครเวฟ + ย่าง 600 วัตต์เป็นเวลา 4 นาที แล้วนำมารับประทาน

GE83MDT_XST_DE68-04111E_TH.indd 20 2013-09-05 2:46:10

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ	คำแนะนำ
4	ไก่ย่างทั้งตัว	4 ที่	ไก่ทั้งตัว (500 กรัม) - 1 ตัว, น้ำตาล - ½ ช้อนโต๊ะ, น้ำมันหอย - 3 ช้อนโต๊ะ, ซีอิ๊ว - 2 ช้อนโต๊ะ, พริกไทย - ½ ช้อนโต๊ะ, รากผักชี - 2 ราก, กระเทียม - 2 ช้อนโต๊ะ, น้ำมัน - 2 ช้อนโต๊ะ, เหล้าจีน - 1 ช้อนโต๊ะ	1. ใส่รากผักชี กระเทียม และพริกไทยลงไปในครกแล้วตำ จากนั้นให้ผสมน้ำตาล น้ำมันหอย ซีอิ๊ว เหล้าจีน และน้ำมันเข้าด้วยกัน 2. หมักส่วนผสมทั้งหมดกับไก่ประมาณ 20 นาที 3. วางไก่บนจานอบเกรียมและใช้โหมด ไมโครเวฟ + ย่าง 600 วัตต์เป็นเวลา 15 นาที 4. กลับด้านล่างขึ้นมา และใช้โหมด ไมโครเวฟ + ย่าง 600 วัตต์เป็นเวลา 15 นาที แล้วนำมารับประทาน
5	ปลาย่างเกลือ	4 ที่	ปลากะพง - 500 กรัม, เกลือ - 2 ช้อนโต๊ะ, กระเทียม - 2 ช้อนโต๊ะ, พริกไทย - 1 ช้อนชา, รากผักชี - 1 ช้อนโต๊ะ, ตะไคร้ตำ - 2 ต้น	1. ใส่สมุนไพรทั้งหมดในท้องปลา แล้วโรยเกลือบนตัวปลา จากนั้นนำไปวางบนจานอบเกรียม 2. นำใส่ไมโครเวฟ และใช้โหมด ไมโครเวฟ + ย่าง 600 วัตต์เป็นเวลา 20 นาที 3. รับประทานขณะร้อนพร้อมกับน้ำจิ้มซีฟู้ด

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ	คำแนะนำ
6	หมูสะเต๊ะ	20 ชิ้น	**ส่วนผสมหมูสะเต๊ะ** หมูแล่บาง - 250 กรัม, พริกแกง - 1 ช้อนโต๊ะ, ตะไคร้ตำ - 1 ช้อนโต๊ะ, รากผักชี - 1 ช้อนโต๊ะ, นมข้นจืด - 2 ช้อนโต๊ะ, เกลือ - ¼ ช้อนชา, น้ำมันหอย - 1 ช้อนโต๊ะ, น้ำตาล - 2 ช้อนชา **น้ำจิ้มถั่ว** ถั่วบด - ½ ถ้วย, พริกแกง - 3 ช้อนโต๊ะ, กะทิ - 2 ถ้วย, น้ำตาลปี๊บ - 4 ช้อนโต๊ะ, น้ำมะขาม - 3 ช้อนโต๊ะ, เกลือ - 1 ½ ช้อนโต๊ะ **อาจาดแตงกวา** น้ำส้มสายชู - ¼ ถ้วย, เกลือ - ½ ช้อนโต๊ะ, น้ำตาล - 2 ช้อนโต๊ะ, แตงกวาฝานบาง - ¼ ถ้วย, หัวหอมแดงฝานบาง - ¼ ถ้วย, พริกขี้ฟ้าฝานบาง - 2 ช้อนโต๊ะ	**หมูสะเต๊ะ** 1. ผสมพริกแกง ตะไคร้ รากผักชี นม เกลือ น้ำตาล และน้ำมันหอยเข้าด้วยกัน 2. หมักกับหมูเป็นเวลา 15 นาที แล้วนำไปเสียบไม้ 3. วางบนตะแกรงย่างและใช้โหมด ย่าง เป็นเวลา 10 นาที 4. จากนั้นกลับด้านล่างขึ้น และใช้โหมด ย่าง อีกครั้งเป็นเวลา 10 นาที นำมารับประทานพร้อมน้ำจิ้มและอาจาด **น้ำจิ้มถั่ว** 1. ผสมวัตถุดิบทั้งหมดเข้าด้วยกัน ยกเว้นถั่วลิสง ใส่ในไมโครเวฟ ใช้ ไมโครเวฟ 800 วัตต์เป็นเวลา 2½ นาที 2. นำออกมา เติมถั่วบด แล้วนำมารับประทาน **อาจาดแตงกวา** 1. ผสมน้ำส้มสายชู เกลือ น้ำตาล เข้าด้วยกัน ใช้ ไมโครเวฟ 800 วัตต์เป็นเวลา 1½ นาที นำออกมาพร้อมเติมแตงกวา หัวหอม และพริกขี้ฟ้า จากนั้นสามารถรับประทานได้

GE83MDT_XST_DE68-04111E_TH.indd 21 2013-09-05 2:46:10

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ	คำแนะนำ
7	ไก่เทอริยากิ	2-4 ที่	น่องไก่ติดหนัง - 500 กรัม, ซอสเทอริยากิ - 2 ช้อนโต๊ะ, ผัก	1. หมักไก่กับซอสเทอริยากิให้เข้ากัน 2. วางไก่บนจานอบเกรียม ใช้ไมโครเวฟ + ย่าง 600 วัตต์เป็นเวลา 5 นาที แล้วกลับด้านน่องไก่ จากนั้นใช้ ไมโครเวฟ + ย่าง เป็นเวลา 5 นาที แล้วนำมารับประทานขณะร้อนพร้อมผัก
8	ซี่โครงย่าง	2 ที่	ซี่โครงหมู - 350 กรัม, หัวหอมสับ - 2 ช้อนโต๊ะ, ขิงสับ - 1 ช้อนโต๊ะ, มัสตาร์ด - ½ ช้อนโต๊ะ, ซอสมะเขือเทศ - 2 ช้อนโต๊ะ, ซอสพริก - 1 ช้อนโต๊ะ, เบย์ลีฟ - 3 ใบ, ซอสปรุงรส - 1 ช้อนโต๊ะ, น้ำมันหอย - 1 ช้อนโต๊ะ, ปาปริก้า	1. ผสมส่วนผสมทั้งหมดเข้าด้วยกัน แล้วหมักซี่โครงไว้ 20 นาที 2. วางในจานอบเกรียม แล้วใช้โหมด ย่าง เป็นเวลา 15 นาที จากนั้นให้กลับด้านล่างขึ้น และย่างอีก 15 นาทีหรือจนกว่าจะสุก จากนั้นจึงนำมารับประทาน

การใช้คุณสมบัติละลายน้ำแข็งอัตโนมัติ

คุณสมบัติการละลายน้ำแข็งอัตโนมัติช่วยให้คุณละลายเนื้อ ไก่ ปลา ขนมปังและเค้กที่แช่แข็งไว้ได้ เวลาและระดับพลังงานจะถูกกำหนดโดยอัตโนมัติ
คุณเพียงแต่เลือกโปรแกรมและน้ำหนักเท่านั้น

โปรดใช้กับผลิตภัณฑ์ที่ระบุว่าใช้กับไมโครเวฟได้เท่านั้น

ขั้นแรก ให้วางอาหารแช่แข็งไว้กึ่งกลางจานหมุน และปิดประตู

1. เลือกประเภทอาหาร โดยกดปุ่ม **ละลายน้ำแข็ง** (**) ตามจำนวนที่เหมาะสม (โปรดดูตารางในหน้าต่อไปนี้)

2. เลือกน้ำหนักอาหาร โดยกดปุ่ม **Kg (กก.)** และ **100g (100 กรัม)** คุณสามารถกำหนดน้ำหนักอาหารสูงสุด 1500 กรัม



3. กดปุ่ม **เริ่มทำงาน** (⏀)

ผลลัพธ์ :

- การละลายน้ำแข็งจะเริ่มขึ้น
- เมื่อละลายน้ำแข็งเสร็จครึ่งหนึ่ง เตาอบจะส่งเสียงเตือนให้ทราบว่าคุณต้องกลับอาหาร
- กดปุ่ม **เริ่มทำงาน** (⏀) อีกครั้ง เพื่อละลายน้ำแข็งจนเสร็จ

คุณสามารถละลายน้ำแข็งโดยกำหนดค่าเองได้เช่นกัน โดยเลือกการทำงานแบบไมโครเวฟ/อุ่นอาหาร และใช้ระดับพลังงาน 180 วัตต์ โปรดดูรายละเอียดเพิ่มเติมในหัวข้อ "การอบ/อุ่นอาหาร" ในหน้า 15

GE83MDT_XST_DE68-04111E_TH.indd 22 2013-09-05 2:46:10

การใช้โปรแกรมละลายน้ำแข็งอัตโนมัติ

ตารางต่อไปนี้เป็นการตั้งโปรแกรมละลายน้ำแข็งอัตโนมัติต่าง ๆ รวมทั้งปริมาณ เวลาพักอาหาร และคำแนะนำต่าง ๆ โปรดนำอาหารออกจากบรรจุภัณฑ์ก่อนที่จะละลายน้ำแข็ง วางเนื้อ ไก่ ปลา และขนมปัง/เค้กในจานกระเบื้อง

รหัส	อาหาร	สัดส่วน	เวลาพัก	คำแนะนำ
1	**เนื้อ**	200-1500 กรัม	20-60 นาที	หุ้มส่วนขอบด้วยฟอยล์อะลูมิเนียม กลับเนื้อเมื่อได้ยินเสียงจากเตาอบ โปรแกรมนี้เหมาะสำหรับเนื้อ แกะ หมู สเต็ค เนื้อเป็นชิ้นและเนื้อสับ
2	**เป็ด ไก่**	200-1500 กรัม	20-60 นาที	หุ้มขาและปลายปีกด้วยฟอยล์อะลูมิเนียม กลับเมื่อได้ยินเสียงจากเตาอบ โปรแกรมนี้เหมาะกับไก่เป็นตัวและไก่เป็นชิ้น
3	**ปลา**	200-1500 กรัม	20-50 นาที	หุ้มส่วนหางของปลาที่ยังไม่หั่นด้วยฟอยล์อะลูมิเนียม กลับเมื่อได้ยินเสียงจากเตาอบ โปรแกรมนี้เหมาะสำหรับปลาทั้งตัวและชิ้นเนื้อปลา
4	**ขนมปัง/เค้ก**	125-625 กรัม	5-20 นาที	วางขนมปังบนกระดาษสำหรับเตาอบ และพลิกกลับด้านเมื่อได้ยินเสียงสัญญาณจากเตาอบ วางเค้กบนจานกระเบื้อง และพลิกกลับด้านเมื่อได้ยินเสียงสัญญาณจากเตาอบ (เตาอบจะทำงานต่อไป และจะหยุดเมื่อคุณเปิดประตู) โปรแกรมนี้เหมาะสำหรับขนมปังทุกประเภท ไม่ว่าจะเป็นแบบตัดหรือทั้งก้อน เช่นเดียวกับขนมปังก้อนและแท่งแบบฝรั่งเศส วางก้อนขนมปังเป็นวงกลม โปรแกรมนี้เหมาะกับยีสต์เค้ก บิสกิต ชีสเค้ก และพัฟทุกประเภท แต่ไม่เหมาะสำหรับขนมเพสทรีแบบชอตหรือครัสต์ เค้กผลไม้หรือครีม รวมทั้งเค้กราดช็อคโกแล็ต

เลือกฟังก์ชั่นละลายน้ำแข็งแบบกำหนดเอง โดยใช้ระดับพลังงาน 180 วัตต์ หากต้องการละลายน้ำแข็งจากอาหารแบบกำหนดเอง หากต้องการรายละเอียดเพิ่มเติมเกี่ยวกับการละลายน้ำแข็งแบบกำหนดเองและเวลาในการละลายน้ำแข็ง โปรดอ่านจากหน้า 33

การใช้ฟังก์ชั่นอบเกรียมแบบกำหนดเอง

คุณสามารถใช้จานอบเกรียมนี้เพื่อทำให้อาหารเหลืองเกรียม ไม่เพียงเฉพาะด้านบน แต่ยังรวมถึงด้านล่างของอาหารที่กรอบเหลืองด้วยอุณหภูมิของจานอบเกรียม คุณสามารถอบอาหารหลากหลายชนิดด้วยจานอบเกรียมนี้ ดังที่จะแสดงในตาราง (ดูหน้าถัดไป)

จานอบเกรียมนี้ยังใช้ได้กับเบคอน ไข่ ไส้กรอก อีกด้วย

1. วางจานอบเกรียมไว้บนจานหมุน และอุ่นด้วย ไมโครเวฟ + ย่าง ความร้อนสูงสุด [600 วัตต์ + ย่าง ( )] ตามเวลาและคำแนะนำที่แสดงในตาราง



โปรดใช้ถุงมือกันความร้อนเสมอเมื่อจับจานสำหรับอบเกรียม เนื่องจากจานนี้จะร้อนจัด

2. ทาน้ำมันบนจาน ถ้าคุณต้องการทำอาหารเช่นเบคอนและไข่ดาว เพื่อให้อาหารสุกเกรียมน่ารับประทาน

โปรดทราบว่าจานอบเกรียมนี้มีชั้นของเทฟล่อน ซึ่งจะไม่ทนต่อการขูดขีด โปรดอย่าใช้ของมีคมเช่นมีดเพื่อตัดอาหารบนจานอบเกรียม

ใช้อุปกรณ์พลาสติกเพื่อไม่ให้มีรอยขูดบนผิวหน้าของจานอบเกรียม หรือนำอาหารออกจากจานก่อนที่จะตัดหรือหั่น

3. วางอาหารบนจานอบเกรียม



โปรดอย่าวางภาชนะที่ไม่ทนความร้อนบนจานอบเกรียม (เช่น ชามพลาสติก เป็นต้น)

ห้ามวางจานอบเกรียมโดยไม่ใช้จานหมุนเด็ดขาด

4. วางจานอบเกรียมไว้บนตะแกรงโลหะ (หรือจานหมุน) ในไมโครเวฟ



5. เลือกเวลาและระดับพลังงานในการปรุงอาหาร (โปรดดูข้อมูลที่ตารางด้านข้าง)

วิธีทำความสะอาดจานอบเกรียม

ทำความสะอาดจานอบเกรียมด้วยน้ำอุ่นและน้ำยาล้างจาน จากนั้นล้างออกด้วยน้ำสะอาด ห้ามใช้แปรงขัดหรือฟองน้ำที่แข็งหยาบเกินไป เนื่องจากจะทำให้ผิวหน้าของจานเสียหาย

โปรดทราบ

จานอบเกรียมนั้นไม่เหมาะกับเครื่องล้างจานอัตโนมัติ

GE83MDT_XST_DE68-04111E_TH.indd 23 2013-09-05 2:46:10

การใช้การตั้งค่าการอบเกรียมแบบกำหนดเอง

ขอแนะนำให้อุ่นจานอบเกรียมบนจานหมุนโดยตรง
อุ่นจานอบเกรียมด้วยฟังก์ชั่น 600 วัตต์ + ย่าง ( ) เป็นเวลา 3-5 นาที
ใช้เวลาและคำแนะนำที่ปรากฏอยู่ในตาราง

อาหาร	ปริมาณอาหาร	เวลาอุ่น	ระดับพลังงาน	เวลาปรุง (นาที)	คำแนะนำ
เบคอน	4 ชิ้น (80 กรัม)	3 นาที	600 วัตต์ + ย่าง	3½-4	อุ่นจานอบเกรียม วางแผ่นเบคอนเรียงต่อกันบนจานอบเกรียม วางจานอบเกรียมบนตะแกรง
มะเขือเทศย่าง	200 กรัม (2 ชิ้น)	3 นาที	450 วัตต์ + ย่าง	4-5	อุ่นจานอบเกรียม หั่นครึ่งมะเขือเทศ ใส่ซีสที่ด้านบน วางเป็นวงกลมบนจานอบเกรียม วางจานอบเกรียมบนตะแกรง
มันฝรั่งอบ	250 กรัม 500 กรัม	3 นาที	600 วัตต์ + ย่าง	5-6 8-9	อุ่นจานอบเกรียม หั่นครึ่งมันฝรั่ง วางบนจานอบเกรียม โดยให้ด้านที่หั่นอยู่ข้างล่าง วางเรียงเป็นวงกลม วางจานบนตะแกรง
เบอร์เกอร์แช่แข็ง	2 ชิ้น (125 กรัม)	3 นาที	600 วัตต์ + ย่าง	7-7½	อุ่นจานอบเกรียม นำเบอร์เกอร์แช่แข็งวางคู่กันบนจานอบเกรียม วางจานอบเกรียมบนตะแกรง กลับด้านหลังจากผ่านไป 4-5 นาที
บาแกตต์แช่แข็ง	200-250 กรัม (2 ชิ้น)	3 นาที	450 วัตต์ + ย่าง	8-9	อุ่นจานอบเกรียม วางบาแกตต์ที่โรยหน้า (เช่น มะเขือเทศ ชีส แฮม เป็นต้น) เคียงข้างกันบนจาน วางจานอบเกรียมบนตะแกรง
พิซซ่าแช่แข็ง	300-400 กรัม	5 นาที	450 วัตต์ + ย่าง	9-11	อุ่นจานอบเกรียม วางพิซซ่าแช่แข็งบนจานอบเกรียม วางจานอบเกรียมบนตะแกรง
พิซซ่าชิ้นเล็กแช่แข็ง	9 x 30 กรัม (270 กรัม)	3 นาที	300 วัตต์ + ย่าง	9-10	อุ่นจานอบเกรียม วางอาหารให้เสมอกันบนจานอบเกรียม วางจานบนตะแกรง
พิซซ่าแช่เย็น	300-350 กรัม	5 นาที	450 วัตต์ + ย่าง	6½-7½	อุ่นจานอบเกรียม วางพิซซ่าเย็นบนจาน วางจานอบเกรียมบนตะแกรง
ฟิชฟิงเกอร์แช่แข็ง	150 กรัม (5 ชิ้น)	4 นาที	600 วัตต์ + ย่าง	7-8	อุ่นจานอบเกรียม ทาน้ำมัน 1 ช้อนโต๊ะ วางชิ้นเนื้อปลาเป็นวงกลมบนจาน พลิกกลับด้านหลังจาก 4 นาที (5 ชิ้น) หรือ 6 นาที (10 ชิ้น)
	300 กรัม (10 ชิ้น)	4 นาที	600 วัตต์ + ย่าง	9-10	
นักเก็ตไก่แช่แข็ง	125 กรัม 250 กรัม	4 นาที	600 วัตต์ + ย่าง	5-6 7-8	อุ่นจานอบเกรียม ทาจานด้วยน้ำมันหนึ่งช้อนโต๊ะ จากนั้นวางนักเก็ตไก่บนจาน วางจานอบเกรียมบนตะแกรง พลิกกลับด้านหลังจากผ่านไป 3 นาที (125 กรัม) หรือ 5 นาที (250 กรัม)

GE83MDT_XST_DE68-04111E_TH.indd 24 2013-09-05 2:46:10

การเลือกอุปกรณ์เสริม

ใช้ภาชนะที่เหมาะสำหรับไมโครเวฟ อย่าใช้ภาชนะพลาสติก จาน ถ้วยกระดาษ กระดาษเช็ดปาก เป็นต้น



หากคุณต้องการเลือกการอบแบบผสม (ไมโครเวฟและย่าง) โปรดใช้ภาชนะที่เหมาะสำหรับเตาไมโครเวฟและเตาอบเท่านั้น

โปรดดูรายละเอียดเพิ่มเติมเกี่ยวกับภาชนะหรือเครื่องใช้ที่เหมาะสมในคู่มือสำหรับอุปกรณ์การทำอาหารที่หน้า 28

การย่าง

การย่างช่วยให้คุณอุ่นและทำให้อาหารเกรียมได้อย่างรวดเร็ว โดยไม่ต้องใช้ไมโครเวฟ เรามีตะแกรงย่างมาให้พร้อมกับเตาไมโครเวฟเพื่อวัตถุประสงค์นี้

1. อุ่นตะแกรงย่างให้ได้อุณหภูมิที่ต้องการ โดยกดปุ่ม **ย่าง** (⏦) การตั้งเวลา (**10 นาที, 1 นาที** และ **10 วินาที**) และปุ่ม **เริ่มทำงาน** (⏀)

2. เมื่ออุ่นเสร็จแล้ว เปิดประตูเตาอบและวางภาชนะบนตะแกรง



3. กดปุ่ม **ย่าง** (⏦) กำหนดเวลาในการปรุงอาหาร โดยกดปุ่ม **10 นาที, 1 นาที** และ **10 วินาที** ตามต้องการ (เวลาย่างสูงสุดคือ 60 นาที)



4. กดปุ่ม **เริ่มทำงาน** (⏀)

ผลลัพธ์ : ไฟของเตาอบจะสว่างขึ้น และจานหมุนจะเริ่มหมุน

1) เตาอบจะเริ่มต้นการอบอาหาร เมื่อเสร็จแล้วก็จะส่งสัญญาณเตือนสี่ครั้ง
2) เตาอบจะส่งสัญญาณเตือน 3 ครั้ง (นาทีละครั้ง)
3) เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง

โปรดอย่ากังวลถ้าขดลวดความร้อนเปิดและปิดสลับกันระหว่างการย่าง ระบบนี้ได้รับการออกแบบมาเพื่อป้องกันเตาอบร้อนเกินไป

โปรดใช้ถุงมือกันความร้อนทุกครั้งที่สัมผัสภาชนะในเตาอบ เนื่องจากภาชนะเหล่านี้จะร้อนจัด

GE83MDT_XST_DE68-04111E_TH.indd 25 2013-09-05 2:46:11

การใช้ไมโครเวฟผสมการย่าง

คุณสามารถใช้ไมโครเวฟร่วมกับการย่าง เพื่อให้อาหารสุกเร็ว และเหลืองเกรียมในขณะเดียวกัน

โปรดใช้ภาชนะและเครื่องครัวที่ใช้กับไมโครเวฟและเตาอบ จานแก้วหรือกระเบื้องจะเหมาะสมที่สุด เนื่องจากจะช่วยให้ไมโครเวฟเข้าสู่อาหารทั่วถึงกัน

โปรดใช้ถุงมือกันความร้อนทุกครั้งที่สัมผัสภาชนะในเตา เนื่องจากภาชนะเหล่านี้จะร้อนจัด

1. เปิดประตูเตาอบโดยกดปุ่มขนาดใหญ่ที่มุมขวาล่างของแผงควบคุม วางอาหารบนตะแกรง และวางตะแกรงบนจานหมุน ปิดประตู

2. กดปุ่ม **ไมโครเวฟ+ย่าง** ( )

ผลลัพธ์ : หน้าจอจะแสดงผลดังนี้:

(โหมดไมโครเวฟและย่าง)
600 วัตต์ (พลังงาน)

เลือก**ระดับพลังงาน**ที่เหมาะสมโดยกดปุ่ม **ไมโครเวฟ+ย่าง** ( ) อีกครั้งจนกว่าจอจะแสดงกำลังไฟที่ต้องการ

คุณไม่สามารถกำหนดอุณหภูมิสำหรับการย่าง

3. กำหนดเวลาในการปรุงอาหาร โดยกดปุ่ม **10 นาที, 1 นาที** และ **10 วินาที** ตามต้องการ เวลาอบสูงสุดคือ 60 นาที



4. กดปุ่ม **เริ่มทำงาน** ( )

ผลลัพธ์ : การอบแบบผสมจะเริ่มต้น และเมื่อเสร็จแล้ว

1) เตาอบจะส่งเสียงเตือนสี่ครั้ง
2) เตาอบจะส่งสัญญาณเตือน 3 ครั้ง (นาทีละครั้ง)
3) เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง

พลังงานไมโครเวฟสูงสุดสำหรับโหมดผสมไมโครเวฟและย่างคือ 600 วัตต์

การอบอาหารแบบหลายขั้นตอน

คุณสามารถตั้งโปรแกรมการทำงานสำหรับไมโครเวฟเพื่ออบอาหารได้ถึงสามขั้นตอน

ตัวอย่าง: คุณต้องการละลายอาหารแช่แข็ง และอบโดยไม่ต้องตั้งเตาอบใหม่ในแต่ละขั้นตอน คุณจึงสามารถละลายน้ำแข็งและอบปลาขนาด 500 กรัม ในสามขั้นตอน:

- ละลายน้ำแข็ง
- ปรุงอาหาร I
- ปรุงอาหาร II

คุณสามารถตั้งค่าการอบสองและสามขั้นตอนได้ในการอบหลายขั้นตอน ถ้าคุณตั้งค่าสามขั้นตอน ขั้นตอนแรกจะต้องเป็นการละลายน้ำแข็ง ห้ามกดปุ่ม **เริ่มทำงาน** ( ) จนกว่าคุณจะกำหนดขั้นตอนสุดท้าย

1. กดปุ่ม **ละลายน้ำแข็ง** ( ) หนึ่งครั้งหรือหลายครั้ง

2. ตั้งค่าน้ำหนักโดยกดปุ่ม **Kg (กก.)** และ **100g (100 กรัม)** เป็นจำนวนครั้งที่เหมาะสม (500 กรัมสำหรับตัวอย่างนี้)



3. กดปุ่ม **ไมโครเวฟ** ( )
โหมดไมโครเวฟ (I) :

; หากจำเป็น เลือกระดับพลังงาน โดยกดปุ่ม **ไมโครเวฟ** ( ) ซ้ำอย่างน้อยหนึ่งครั้ง (600 วัตต์ในตัวอย่างนี้)

4. กำหนดเวลาปรุงอาหาร โดยกด **10 นาที, 1 นาที** และ **10 วินาที** ตามที่ต้องการ (เช่น 4 นาทีในตัวอย่างนี้)



5. กดปุ่ม **ย่าง** ( )
โหมดย่าง (II):

GE83MDT_XST_DE68-04111E_TH.indd 26 2013-09-05 2:46:12

6. กำหนดเวลาปรุงอาหาร โดยกด **10 นาที, 1 นาที** และ **10 วินาที** ตามที่ต้องการ
(เช่น 5 นาทีในตัวอย่างนี้)
(เวลาสูงสุดในการย่างคือ 60 นาที)



7. กดปุ่ม **เริ่มทำงาน** (◇)

ผลลัพธ์ : ระบบจะทำงานตามโหมดสามขั้นตอน [ละลายน้ำแข็งและปรุงอาหาร (I,II)] สำหรับโหมดละลายน้ำแข็งที่คุณเลือกไว้ เตาไมโครเวฟอาจส่งสัญญาณเตือนเมื่อละลายน้ำแข็งไปได้ครึ่งหนึ่ง เพื่อให้คุณกลับด้านอาหาร เมื่อการปรุงอาหารเสร็จสิ้น เตาอบจะส่งสัญญาณเตือนสี่ครั้ง

- เตาอบจะส่งสัญญาณเตือน 3 ครั้ง (นาทีละครั้ง)
- เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง

การปิดเสียงเตือน

คุณสามารถปิดเสียงเตือนของเตาอบได้ตามต้องการ

1. ให้กดปุ่ม **หยุด** (▽) และ **เริ่มทำงาน** (◇) พร้อมกัน

ผลลัพธ์ : เตาอบจะไม่ส่งเสียงในครั้งถัดไปที่คุณกดปุ่ม

2. ในการเปิดใช้เสียงเตือนตามเดิม ให้กดปุ่ม **หยุด** (▽) และ **เริ่มทำงาน** (◇) พร้อมกันอีกครั้ง

ผลลัพธ์ : เตาอบจะทำงานโดยมีเสียงเตือนอีกครั้ง

การล็อคเตาไมโครเวฟ

เตาไมโครเวฟของคุณมีโปรแกรมป้องกันเพื่อความปลอดภัยของเด็ก ซึ่งจะ "ล็อค" เตาอบไม่ให้เด็กหรือบุคคลที่ไม่คุ้นเคยสามารถใช้เตาอบได้
คุณสามารถล็อคเตาอบเมื่อใดก็ได้ตามต้องการ

1. ให้กดปุ่ม **หยุด** (▽) และ **ตั้งนาฬิกา** (🕒) พร้อมกัน

ผลลัพธ์: เตาอบจะถูกล็อค (ไม่สามารถเลือกฟังก์ชั่นใดได้)



2. ในการปลดล็อคเตาอบ ให้กดปุ่ม **หยุด** (▽) และ **ตั้งนาฬิกา** (🕒) พร้อมกันอีกครั้ง

ผลลัพธ์ : คุณจะสามารถใช้เตาอบได้ตามปกติ

GE83MDT_XST_DE68-04111E_TH.indd 27 2013-09-05 2:46:12

คู่มือสำหรับอุปกรณ์การทำอาหาร

ในการอบอาหารด้วยเตาไมโครเวฟ คลื่นไมโครเวฟจะต้องสามารถแทรกเข้าสู่อาหาร โดยไม่มีการสะท้อนหรือดูดซับโดยภาชนะ
คุณจึงควรเลือกใช้อุปกรณ์อย่างรอบคอบ คุณควรเลือกภาชนะที่มีข้อความหรือเครื่องหมายว่าใช้กับไมโครเวฟได้
ตารางต่อไปนี้แสดงอุปกรณ์การทำอาหารประเภทต่างๆ และระบุว่าจะสามารถใช้กับเตาไมโครเวฟได้หรือไม่ และอย่างไร

อุปกรณ์	ใช้กับไมโครเวฟได้	หมายเหตุ
ฟอยล์อะลูมิเนียม	✓ ✗	สามารถใช้จำนวนเล็กน้อย เพื่อป้องกันส่วนที่ไม่ต้องการให้สุกเกินไป อาจมีประกายไฟ ถ้าฟอยล์อยู่ใกล้กับผนังของเตาอบมากเกินไป หรือใช้ฟอยล์มากเกินไป
จานสำหรับทำเกรียม	✓	ห้ามอุ่นร้อนเกินกว่าแปดนาที
กระเบื้องและดินเผา	✓	กระเบื้องพอร์ซเลน ดินเผา ดินเผาเคลือบ และกระเบื้องเคลือบนั้นมักจะใช้ได้ดี ยกเว้นที่มีขอบโลหะ
จานโฟมหรือกระดาษแบบใช้แล้วทิ้ง	✓	อาหารแช่แข็งบางชนิดจะบรรจุในภาชนะประเภทนี้
บรรจุภัณฑ์ของอาหาร จานด่วน		
• ถ้วยโฟม	✓	สามารถใช้อุ่นอาหาร ความร้อนสูงมากๆ จะทำให้โฟมละลาย
• ถุงกระดาษหรือหนังสือพิมพ์	✗	อาจติดไฟ
• กระดาษรีไซเคิลหรือขอบโลหะ	✗	อาจเกิดประกายไฟ
เครื่องแก้ว		
• ภาชนะสำหรับเตาอบและใส่อาหาร	✓	ใช้ได้ หากไม่ประดับด้วยขอบโลหะ
• เครื่องแก้วบาง	✓	สามารถใช้อุ่นอาหารหรือของเหลว แก้วที่บางมากอาจแตกหรือร้าวหากได้รับความร้อนทันที
• โถแก้ว	✓	ต้องใช้โดยไม่ปิดฝา เหมาะสำหรับการอุ่นอาหารเท่านั้น
โลหะ		
• จาน	✗	อาจเกิดประกายหรือติดไฟ
• ลวดสำหรับมัดปากถุงแช่แข็ง	✗	
กระดาษ		
• จาน ถ้วย กระดาษเช็ดปาก และกระดาษเช็ดมือ	✓	สำหรับการอบเวลาสั้นๆ และการอุ่นอาหาร และใช้ซับของเหลวที่มากเกินไป
• กระดาษรีไซเคิล	✗	อาจเกิดประกายไฟ
พลาสติก		
• ภาชนะ	✓	โดยเฉพาะพลาสติกทนความร้อน พลาสติกชนิดอื่นอาจบิดหรือเปลี่ยนสีเมื่อโดนความร้อนสูง ห้ามใช้พลาสติกแบบเมลามีน
• ฟิล์มสำหรับปิดอาหาร	✓	สามารถใช้เก็บรักษาความชื้น ไม่ควรสัมผัสกับอาหารโดยตรง ใช้ความระมัดระวังขณะนำฟิล์มออก เนื่องจากอาจมีไอร้อนออกมาด้วย
• ถุงแช่แข็ง	✓ ✗	เฉพาะชนิดที่ต้มได้หรือใช้กับเตาอบได้ ไม่ควรเป็นแบบกักอากาศ ซึ่งต้องใช้ส้อมเจาะก่อน ถ้าจำเป็นต้องใช้
กระดาษมันหรือกระดาษไข	✓	สามารถใช้เก็บรักษาความชื้นหรือกันอาหารกระเด็น

✓ : แนะนำ ✓✗ : ใช้อย่างระมัดระวัง ✗ : ไม่ปลอดภัย

GE83MDT_XST_DE68-04111E_TH.indd 28 2013-09-05 2:46:13

คู่มือการอบอาหาร

ไมโครเวฟ

พลังงานไมโครเวฟจะแทรกซึมในอาหาร โดยจะมีการดูดซับโดยน้ำ ไขมัน และน้ำตาลในอาหาร
ไมโครเวฟทำให้โมเลกุลของอาหารเคลื่อนไหวอย่างรวดเร็ว การเคลื่อนไหวอย่างรวดเร็วนี้ทำให้เกิดแรงเสียดทานของโมเลกุล และความร้อนจากแรงเสียดทานนี้ทำให้อาหารสุก

การอบ

ภาชนะสำหรับอบด้วยไมโครเวฟ:
ภาชนะที่ใช้จะต้องยอมให้พลังงานไมโครเวฟผ่าน เพื่อให้การอบมีประสิทธิภาพ คลื่นไมโครเวฟจะสะท้อนกับโลหะ เช่น สเตนเลส อะลูมิเนียม และทองแดง แต่จะสามารถแทรกซึมผ่านดินเผา แก้ว กระเบื้อง และพลาสติก เช่นเดียวกับกระดาษและไม้ ห้ามอบอาหารในภาชนะโลหะเด็ดขาด

อาหารที่เหมาะสำหรับการอบด้วยไมโครเวฟ:
อาหารหลายชนิดเหมาะสำหรับการอบด้วยไมโครเวฟ เช่นผัก ผลไม้ พาสต้า ข้าว ธัญพืช ถั่ว ปลา และเนื้อ ซึ่งแช่แข็งหรือสด ซอส คัสตาร์ด ซุป พุดดิ้งอบ ของแห้งและของหมักดอง โดยทั่วไปแล้ว ไมโครเวฟเหมาะสำหรับการอบอาหารแทบทุกชนิดที่สามารถอบด้วยวิธีนึ่ง ตัวอย่างเช่น การละลายเนยหรือช็อคโกแล็ต (โปรดดูเคล็ดลับ เทคนิค และคำแนะนำประกอบ)

การปิดหรือครอบอาหาร
การปิดหรือครอบอาหารระหว่างการอบเป็นสิ่งที่สำคัญ เนื่องจากน้ำจะกลายเป็นไอและมีผลต่อการอบอาหาร คุณสามารถครอบอาหารได้หลายวิธีดังนี้: เช่น ใช้จานกระเบื้อง ฝาพลาสติก หรือฟิล์มปิดอาหารที่เหมาะกับไมโครเวฟ

เวลาพักอาหาร
เมื่อการอบอาหารเสร็จ เวลาพักอาหารจะช่วยให้อุณหภูมิในอาหารกระจายทั่วถึงกัน

คู่มือการอบอาหารสำหรับผักแช่แข็ง

ใช้อ่างแก้วทนไฟ (ไพเร็กซ์) ที่มีฝาปิด อบโดยปิดฝาและใช้เวลาน้อยที่สุด - โปรดดูในตาราง อบต่อไปเพื่อให้ได้ผลลัพธ์ตามต้องการ
คนอาหารสองครั้งระหว่างอบ และหนึ่งครั้งหลังการอบ เติมเกลือ เครื่องเทศ หรือเนยหลังการอบ ปิดฝาขณะพักอาหาร

อาหาร	สัดส่วน	ระดับพลังงาน	เวลา (นาที)	เวลาพักอาหาร (นาที)	คำแนะนำ
ผักขม	150 กรัม	600 วัตต์	4½-5½	2-3	เติมน้ำเย็น 15 มล. (1 ช้อนโต๊ะ)
บร็อคโคลี่	300 กรัม	600 วัตต์	9-10	2-3	เติมน้ำเย็น 30 มล. (2 ช้อนโต๊ะ)
ถั่ว	300 กรัม	600 วัตต์	7½-8½	2-3	เติมน้ำเย็น 15 มล. (1 ช้อนโต๊ะ)
ถั่วเขียว	300 กรัม	600 วัตต์	8-9	2-3	เติมน้ำเย็น 30 มล. (2 ช้อนโต๊ะ)
ผักรวม (แครอท/ถั่ว/ข้าวโพด)	300 กรัม	600 วัตต์	7½-8½	2-3	เติมน้ำเย็น 15 มล. (1 ช้อนโต๊ะ)
ผักรวม (แบบจีน)	300 กรัม	600 วัตต์	8-9	2-3	เติมน้ำเย็น 15 มล. (1 ช้อนโต๊ะ)

GE83MDT_XST_DE68-04111E_TH.indd 29 2013-09-05 2:46:13

คู่มือการปรุงอาหารสำหรับข้าวและพาสต้า

ข้าว : ใช้ชามแก้วไพเร็กซ์ขนาดใหญ่ที่มีฝาปิด ข้าวจะมีปริมาณเพิ่มเป็นสองเท่าเมื่อหุงสุกแล้ว อบโดยปิดฝา
เมื่อหมดเวลาอบ คนให้ทั่วก่อนพักอาหาร และเติมเกลือหรือเครื่องเทศและเนยตามต้องการ
หมายเหตุ: ข้าวอาจไม่ดูดซับน้ำทั้งหมด หลังจากที่หมดเวลาอบแล้ว

พาสต้า : ใช้ชามแก้วไพเร็กซ์ขนาดใหญ่ เติมน้ำร้อน เกลือเล็กน้อย และคนให้ทั่ว อบโดยปิดฝา
คนเป็นระยะระหว่างและหลังการอบ ปิดฝาขณะพักอาหาร และเทน้ำออกให้หมดหลังจากนั้น

อาหาร	สัดส่วน	ระดับพลังงาน	เวลา (นาที)	เวลาพักอาหาร (นาที)	คำแนะนำ
ข้าวขาว (หุงพอสุก)	250 กรัม	800 วัตต์	16-17	5	เติมน้ำเย็น 500 มล.
ข้าวกล้อง (หุงพอสุก)	250 กรัม	800 วัตต์	21-22	5	เติมน้ำเย็น 500 มล.
ข้าวผสม (ข้าวขาว + ข้าวซ้อมมือ)	250 กรัม	800 วัตต์	17-18	5	เติมน้ำเย็น 500 มล.
ข้าวโพดผสม (ข้าว + ธัญพืช)	250 กรัม	800 วัตต์	18-19	5	เติมน้ำเย็น 400 มล.
พาสต้า	250 กรัม	800 วัตต์	11-12	5	เติมน้ำร้อน 1000 มล.

คู่มือการปรุงอาหารสำหรับผักสด

ใช้อ่างแก้วทนไฟ (ไพเร็กซ์) ที่มีฝาปิด เติมน้ำเย็น 30-45 มล. (2-3 ช้อนโต๊ะ) สำหรับน้ำหนัก 250 กรัม นอกจากมีคำแนะนำเป็นอย่างอื่น - โปรดดูในตาราง อบโดยปิดฝาและใช้เวลาน้อยที่สุด - โปรดดูในตาราง อบต่อไปเพื่อให้ได้ผลลัพธ์ตามต้องการ คนหนึ่งครั้งระหว่างและหลังการอบ เติมเกลือ เครื่องเทศ หรือเนยหลังการอบ ปิดฝาขณะพักอาหารเป็นเวลา 3 นาที

คำแนะนำ: หั่นผักสดออกเป็นชิ้นเท่าๆ กัน ผักชิ้นเล็กจะใช้เวลาอบน้อยกว่า

ผักสดทุกประเภทควรอบโดยใช้พลังงานไมโครเวฟเต็มที่ (800 วัตต์)

อาหาร	สัดส่วน	เวลา (นาที)	เวลาพักอาหาร (นาที)	คำแนะนำ
บร็อคโคลี่	250 กรัม 500 กรัม	4-4½ 7-7½	3	หั่นเป็นช่อขนาดเท่ากัน วางส่วนก้านไว้ตรงกลาง
กะหล่ำบรัสเซล	250 กรัม	5½-6½	3	เติมน้ำ 60-75 มล. (5-6 ช้อนโต๊ะ)
แครอท	250 กรัม	4½-5	3	ฝานแครอทเป็นชิ้นเท่าๆ กัน
ดอกกะหล่ำ	250 กรัม 500 กรัม	5-5½ 8½-9	3	หั่นเป็นช่อขนาดเท่ากัน หั่นแบ่งช่อขนาดใหญ่เป็นครึ่ง วางส่วนก้านไว้ตรงกลาง
ซุกินี	250 กรัม	3½-4	3	ฝานเป็นชิ้นบางๆ เติมน้ำ 30 มล. (2 ช้อนโต๊ะ) หรือเนย อบให้นุ่ม
มะเขือม่วง	250 กรัม	3½-4	3	ฝานมะเขือออกเป็นชิ้นบางๆ และเติมน้ำมะนาวหนึ่งช้อนโต๊ะ
กระเทียมต้น	250 กรัม	4½-5	3	หั่นเป็นชิ้นค่อนข้างหนา
เห็ด	125 กรัม 250 กรัม	1½-2 3-3½	3	เตรียมเห็ดหัวเล็กทั้งหัว หรือหัวใหญ่ฝานเป็นแว่น อย่าเติมน้ำ ให้บีบน้ำมะนาวเล็กน้อย โรยเกลือและพริกไทย เทน้ำออกก่อนรับประทาน
หัวหอม	250 กรัม	5½-6	3	ฝานหัวหอมเป็นแว่น หรือหั่นครึ่ง เติมน้ำ 15 มล. (1 ช้อนโต๊ะ)
พริกหยวก	250 กรัม	4½-5	3	หั่นเป็นชิ้นบางๆ

GE83MDT_XST_DE68-04111E_TH.indd 30 2013-09-05 2:46:13

อาหาร	สัดส่วน	เวลา (นาที)	เวลาพักอาหาร (นาที)	คำแนะนำ
มันฝรั่ง	250 กรัม 500 กรัม	4-5 7½-8½	3	ชั่งน้ำหนักมันฝรั่งที่ปอกแล้ว และหั่นครึ่งหรือสี่ส่วน เป็นชิ้นเท่าๆ กัน
หัวผักกาด	250 กรัม	5-5½	3	หั่นเป็นชิ้นสี่เหลี่ยมลูกเต๋าขนาดเล็ก

การอุ่น

เตาไมโครเวฟของคุณสามารถอุ่นอาหารโดยใช้เวลาเพียงเสี้ยวของการอุ่นด้วยเตาอบแบบเก่าหรือลังถึง
ใช้ระดับพลังงานและเวลาในการอุ่นตามแผนผังต่อไปนี้ เวลาในแผนผังนี้ใช้กับอาหารที่เป็นของเหลว และมีอุณหภูมิปกติ คือประมาณ +18 ถึง +20°C หรืออาหารแช่เย็นที่มีอุณหภูมิ +5 ถึง +7 °C

การจัดวางและการปิดครอบ

ไม่ควรอุ่นอาหารที่มีขนาดใหญ่ เช่น ก้อนเนื้อ เนื่องจากอาหารจะสุกและแห้งจนเกินไปก่อนที่ส่วนกลางจะร้อน การอุ่นอาหารที่เป็นชิ้นเล็กๆ จะได้ผลดีกว่า

ระดับพลังงานและการคน

อาหารบางอย่างสามารถอุ่นได้โดยใช้พลังงาน 800 วัตต์ แต่อาหารบางอย่างควรอุ่นโดยใช้พลังงาน 600 วัตต์, 450 วัตต์ หรือ 300 วัตต์
โปรดดูตารางต่อไปนี้เป็นแนวทาง โดยทั่วไป คุณควรอุ่นอาหารโดยใช้ระดับพลังงานต่ำ หากอาหารนั้นละเอียดอ่อน มีปริมาณมาก หรือถ้าเป็นอาหารชนิดที่ร้อนเร็ว (เช่น พายเนื้อสับ เป็นต้น)
คนให้ทั่ว หรือกลับด้านระหว่างการอุ่นอาหาร เพื่อให้ได้ผลดีที่สุด ถ้าเป็นไปได้ ควรคนอีกครั้งก่อนรับประทาน
ใช้ความระมัดระวังเป็นพิเศษเมื่ออุ่นอาหารเหลวและอาหารสำหรับทารก เพื่อป้องกันการเดือดและกระเด็น ซึ่งอาจทำให้อาหารลวกมือ คุณควรคนอาหารก่อน ระหว่าง และหลังการอุ่น ปล่อยทิ้งไว้ในเตาไมโครเวฟขณะพักอาหาร ขอแนะนำให้คุณใส่ช้อนพลาสติกหรือแท่งแก้วในอาหารที่เป็นของเหลว ระวังอย่าให้อาหารร้อนเกินไป (ซึ่งจะทำให้เสียรสชาติ)
ขอแนะนำให้คุณประมาณเวลาอบให้น้อยลง และเพิ่มเวลาในการอุ่นอาหาร ถ้าจำเป็น

เวลาในการอุ่นและพักอาหาร

เมื่ออุ่นอาหารเป็นครั้งแรก คุณควรบันทึกเวลาที่ใช้ในการอุ่นไว้ เพื่อใช้ประโยชน์ในอนาคต
โปรดอุ่นอาหารให้เดือดทั่วกันทุกครั้ง
พักอาหารไว้ชั่วขณะหลังจากการอุ่น เพื่อให้อุณหภูมิสม่ำเสมอทั่วกัน
เวลาพักอาหารที่เหมาะสมสำหรับการอุ่นก็คือ 2-4 นาที นอกจากที่แนะนำเป็นอย่างอื่นในแผนผัง
ใช้ความระมัดระวังเป็นพิเศษเมื่ออุ่นอาหารเหลวและอาหารสำหรับทารก โปรดอ่านข้อมูลเพิ่มเติมในเรื่องข้อควรระวังเพื่อความปลอดภัย

การอุ่นของเหลว

กำหนดเวลาพักอาหารอย่างน้อย 20 วินาทีหลังจากที่ปิดเตาอบทุกครั้ง เพื่อให้มีการปรับอุณหภูมิ คนอาหารระหว่างให้ความร้อนถ้าจำเป็น และคนทุกครั้งหลังจากอุ่น เพื่อป้องกันการเดือดกระเด็นและอันตรายจากน้ำร้อนลวก โปรดใส่ช้อนหรือแท่งแก้วในเครื่องดื่ม และคนก่อน ระหว่าง และหลังการอุ่น

การอุ่นอาหารสำหรับทารก

อาหารสำหรับทารก: เทใส่จานกระเบื้องกันลึก ครอบด้วยฝาพลาสติก คนให้ทั่วหลังการอุ่น
พักอาหารเป็นเวลา 2-3 นาทีก่อนรับประทาน คนอีกครั้ง และตรวจสอบอุณหภูมิ
แนะนำให้รับประทานที่อุณหภูมิประมาณ: ระหว่าง 30-40 °C
นมสำหรับทารก: เทนมในขวดแก้วที่ทำความสะอาดแล้ว อุ่นโดยไม่ปิดฝา ห้ามอุ่นขวดนมเด็กโดยปิดจุกนมไว้ เนื่องจากขวดอาจระเบิดเมื่อได้รับความร้อนสูง เขย่าก่อนพักอาหาร และเขย่าอีกครั้งก่อนนำไปป้อนทารก ทุกครั้งจะต้องตรวจสอบอุณหภูมิของอาหารหรือนมสำหรับทารกก่อนที่จะนำไปป้อน อุณหภูมิที่แนะนำในการป้อน: ประมาณ 37 °C
หมายเหตุ: โปรดตรวจสอบอุณหภูมิของอาหารสำหรับทารกอย่างละเอียดก่อนที่จะนำไปป้อน เพื่อป้องการอาหารร้อนลวก
ใช้ระดับพลังงานและเวลาในการอุ่นตามแผนผังต่อไปนี้

GE83MDT_XST_DE68-04111E_TH.indd 31 2013-09-05 2:46:13

การอุ่นอาหารและนมสำหรับทารก

ใช้ระดับพลังงานและเวลาในการอุ่นตามแผนผังต่อไปนี้

อาหาร	สัดส่วน	ระดับพลังงาน	เวลา	เวลาพักอาหาร (นาที)	คำแนะนำ
อาหารสำหรับทารก (ผัก + เนื้อสัตว์)	190 กรัม	600 วัตต์	30 วินาที	2-3	เทใส่จานกระเบื้องกันลึก อบโดยปิดฝา คนอาหารหลังการอบ พักอาหารเป็นเวลา 2-3 นาที คนให้ทั่วก่อนนำไปป้อน และตรวจสอบอุณหภูมิอย่างละเอียด
โจ๊กสำหรับทารก (ธัญพืช + นม + ผลไม้)	190 กรัม	600 วัตต์	20 วินาที	2-3	เทใส่จานกระเบื้องกันลึก อบโดยปิดฝา คนอาหารหลังการอบ พักอาหารเป็นเวลา 2-3 นาที คนให้ทั่วก่อนนำไปป้อน และตรวจสอบอุณหภูมิอย่างละเอียด
นมสำหรับทารก	100 มล. 200 มล.	300 วัตต์	30-40 วินาที 50 วินาทีถึง 1 นาที	2-3	เขย่าหรือคนให้ทั่ว และเทลงในขวดแก้วที่ฆ่าเชื้อแล้ว วางตรงกลางของจานหมุน อบโดยไม่ปิดฝา คนให้ทั่วและพักอาหารอย่างน้อย 3 นาที คนให้ทั่วก่อนรับประทาน และตรวจสอบอุณหภูมิอย่างละเอียด

การอุ่นของเหลวและอาหาร

ใช้ระดับพลังงานและเวลาในการอุ่นตามแผนผังต่อไปนี้

อาหาร	สัดส่วน	ระดับพลังงาน	เวลา (นาที)	เวลาพักอาหาร (นาที)	คำแนะนำ
เครื่องดื่ม (กาแฟ ชา และน้ำ)	150 มล. (1 ถ้วย) 250 มล. (1 แก้ว)	800 วัตต์	1-1½ 1½-2	1-2	เทในถ้วยและอุ่นโดยไม่ปิดฝา วางถ้วย 150 มล. หรือแก้ว 250 มล. และวางตรงกึ่งกลางจานหมุน คนอย่างระมัดระวังก่อนและหลังเวลาพักอาหาร
ซุป (เย็น)	250 กรัม	800 วัตต์	3-3½	2-3	เทใส่จานกระเบื้องกันลึก ครอบด้วยฝาพลาสติก คนให้ทั่วหลังการอุ่น คนอีกครั้งก่อนรับประทาน
สตูว์ (เย็น)	350 กรัม	600 วัตต์	5½-6½	2-3	เทสตูว์ในจานกระเบื้องกันลึก ครอบด้วยฝาพลาสติก คนเป็นระยะระหว่างการอุ่น และคนอีกครั้งก่อนพักอาหารและรับประทาน
พาสต้าราดซอส (เย็น)	350 กรัม	600 วัตต์	4½-5½	3	ใส่พาสต้า (เช่น สปาเก็ตตี้หรือบะหมี่ไข่) ในจานกระเบื้องแบน ปิดด้วยฟิล์มสำหรับไมโครเวฟ คนก่อนรับประทาน
พาสต้ามีไส้ราดซอส (เย็น)	350 กรัม	600 วัตต์	5-6	3	วางพาสต้าแบบมีไส้ (เช่น ราวิโอลี ทอร์เทลลินี) ในจานกระเบื้องกันลึก ครอบด้วยฝาพลาสติก คนเป็นระยะระหว่างการอุ่น และคนอีกครั้งก่อนพักอาหารและรับประทาน
อาหารชุด (เย็น)	350 กรัม	600 วัตต์	5½-6½	3	จัดอาหารชุดซึ่งมีส่วนประกอบแช่เย็น 2-3 อย่างในจานกระเบื้อง ปิดด้วยฟิล์มสำหรับไมโครเวฟ

GE83MDT_XST_DE68-04111E_TH.indd 32 2013-09-05 2:46:13

การละลายน้ำแข็งแบบกำหนดเอง

ไมโครเวฟเป็นวิธีการละลายอาหารแช่แข็งที่ดีเยี่ยม เนื่องจากจะค่อยๆ ละลายอาหารแช่แข็งได้ภายในเวลาอันสั้น ซึ่งจะมีประโยชน์เป็นอย่างมาก หากมีแขกมาเยี่ยมเยียนโดยไม่ได้เตรียมตัว

ไก่แช่แข็งจะต้องได้รับการละลายน้ำแข็งทั่วทั้งตัว ก่อนที่จะสามารถนำไปอบอาหาร นำที่รัดซึ่งเป็นโลหะออก และนำอาหารออกจากวัสดุห่อหุ้ม เพื่อให้น้ำซึ่งจะละลายสามารถไหลออกมาจากอาหาร

วางอาหารแช่แข็งในจานโดยไม่มีฝาครอบ กลับด้านหนึ่งครั้ง เทของเหลวออก และนำเครื่องในออกโดยเร็วที่สุด

ตรวจดูอาหารเป็นระยะ เพื่อไม่ให้อุ่นจนเกินไป

หากส่วนที่มีขนาดเล็กหรือบางของอาหารแช่แข็งเริ่มอุ่น คุณสามารถหุ้มส่วนเหล่านั้นด้วยฟอยล์อะลูมิเนียมชิ้นเล็กๆ ระหว่างการละลายน้ำแข็ง

ถ้าเปิดไก่เริ่มอุ่นที่ผิวนอก ให้หยุดละลายน้ำแข็ง เพื่อให้เป็นการพักอาหาร 20 นาที ก่อนที่จะดำเนินการต่อ

พักปลา เนื้อ และไก่ไว้สักครู่ เพื่อให้น้ำแข็งละลายทั่วถึงกัน เวลาพักอาหารเพื่อละลายน้ำแข็งจะขึ้นอยู่กับปริมาณของอาหาร โปรดดูตารางต่อไปนี้

คำแนะนำ: อาหารที่มีลักษณะแบนจะละลายน้ำแข็งได้เร็วกว่า และปริมาณที่ไม่มากจะใช้เวลาน้อยกว่า โปรดนึกถึงคำแนะนำนี้ เมื่อแช่แข็งและละลายอาหาร

สำหรับการละลายอาหารแช่แข็งที่มีอุณหภูมิระหว่าง -18 ถึง -20 °C โปรดใช้ตารางด้านล่างเป็นแนวทาง

อาหารแช่แข็งทุกประเภทควรนำมาละลาย โดยใช้ระดับความร้อนสำหรับการละลายอาหารแช่แข็ง (180 วัตต์, ❄❄)

อาหาร	สัดส่วน	เวลา (นาที)	เวลาพักอาหาร (นาที)	คำแนะนำ
เนื้อ				
เนื้อสับ	250 กรัม 500 กรัม	6½-7½ 10-12	5-25	วางเนื้อบนจานกระเบื้องแบบเรียบ หุ้มส่วนที่บางด้วยฟอยล์อะลูมิเนียม
เนื้อหมูเป็นชิ้น	250 กรัม	7½-8½		กลับด้านเมื่อถึงครึ่งของเวลาละลายน้ำแข็ง

อาหาร	สัดส่วน	เวลา (นาที)	เวลาพักอาหาร (นาที)	คำแนะนำ
เป็ด ไก่				
ไก่เป็นชิ้น	500 กรัม (2 ชิ้น)	14½-15½	15-40	ขั้นแรก ให้วางไก่เป็นชิ้นบนจานกระเบื้องแบบเรียบ โดยให้ด้านที่เป็นหนังอยู่ข้างล่าง ส่วนไก่ทั้งตัวให้เอาด้านหน้าอกลง หุ้มส่วนที่บางและเล็ก เช่น ปีก หรือกันด้วยฟอยล์อะลูมิเนียม กลับด้านเมื่อถึงครึ่งของเวลาละลายน้ำแข็ง
ไก่ทั้งตัว	900 กรัม	28-30		
ปลา				
ชิ้นเนื้อปลา	200 กรัม (2 ชิ้น)	6-7	5-15	วางปลาแช่แข็งกลางจานกระเบื้องแบบเรียบ โดยให้ส่วนที่เล็กอยู่ใต้ส่วนที่หนากว่า หุ้มส่วนที่บางด้วยฟอยล์อะลูมิเนียม กลับด้านเมื่อถึงครึ่งของเวลาละลายน้ำแข็ง
	400 กรัม (4 ชิ้น)	12-13		
ผลไม้				
เบอร์รี่	250 กรัม	6-7	5-10	วางผลไม้ให้กระจายบนจานแก้วกลมแบบเรียบ (และมีเส้นผ่าศูนย์กลางใหญ่)
ขนมปัง				
ขนมปังก้อน (ประมาณก้อนละ 50 กรัม)	2 ชิ้น 4 ชิ้น	½-1 2-2½	5-20	วางก้อนขนมปังเป็นวง หรือวางขนมปังแผ่นเป็นแนวนอนบนกระดาษเช็ดปากไว้กลางจานหมุน
ขนมปังแผ่น/แซนด์วิช	250 กรัม	4½-5		กลับด้านเมื่อถึงครึ่งของเวลาละลายน้ำแข็ง
ขนมปังเยอรมัน (แป้งสาลี+ไรย์)	500 กรัม	8-10		

GE83MDT_XST_DE68-04111E_TH.indd 33 2013-09-05 2:46:13

ย่าง

ขดลวดสำหรับการย่างอยู่บริเวณใต้ผนังด้านบนของเตาอบ และจะทำงานเมื่อปิดประตูและจานหมุนทำงาน การหมุนของจานหมุนจะทำให้อาหารเกรียมทั่วถึงกัน อุ่นเตาเพื่อเตรียมการย่างเป็นเวลา 3-4 นาที เพื่อให้อาหารเกรียมเร็วขึ้น

ภาชนะสำหรับการย่าง:
อุปกรณ์จะต้องไม่ติดไฟและอาจมีส่วนประกอบของโลหะได้ ห้ามใช้อุปกรณ์ที่เป็นพลาสติก เนื่องจากจะละลายได้

อาหารที่เหมาะสำหรับการย่าง:
เนื้อเป็นชิ้น ไส้กรอก สเต็ค แฮมเบอร์เกอร์ เบคอนและขาหมูรมควัน เนื้อปลาที่แล่บางๆ แซนด์วิช และขนมปังปิ้งแบบมีท็อปปิง

หมายเหตุสำคัญ:

เมื่อใดก็ตามที่ใช้การย่าง โปรดตรวจสอบว่าขดลวดความร้อนอยู่ใต้ผนังด้านบนในแนวนอน ไม่ใช่ที่ผนังด้านหลังของเตาอบในแนวตั้ง โปรดทราบว่าอาหารจะต้องอยู่บนตะแกรงสูง นอกจากที่มีคำแนะนำเป็นอย่างอื่น

ไมโครเวฟ + ย่าง

การอบอาหารแบบนี้เป็นการผสมผสานความร้อนจากขดลวดเข้ากับความเร็วของไมโครเวฟ และจะทำงานเมื่อปิดประตูและจานหมุนทำงาน การหมุนของจานหมุนจะทำให้อาหารเหลืองเกรียมได้รวดเร็ว คุณสามารถใช้วิธีอบอาหารร่วมกันได้สามแบบสำหรับรุ่นนี้ 600 วัตต์ + ย่าง, 450 วัตต์ + ย่าง และ 300 วัตต์ + ย่าง

อุปกรณ์สำหรับการอบอาหารด้วยไมโครเวฟ + ย่าง
โปรดใช้อุปกรณ์ที่คลื่นไมโครเวฟสามารถผ่านได้ และจะต้องไม่ติดไฟ โปรดอย่าใช้อุปกรณ์หรือภาชนะที่เป็นโลหะกับการทำงานแบบผสม ห้ามใช้อุปกรณ์ที่เป็นพลาสติก เนื่องจากจะละลายได้

อาหารที่เหมาะสำหรับการอบด้วยไมโครเวฟ + ย่าง:
อาหารที่เหมาะสำหรับการอบแบบผสมนี้ประกอบด้วยอาหารที่สุกแล้วทุกชนิด ซึ่งจะต้องมีการอุ่นและทำให้เหลือง (เช่น พาสต้าอบ) เช่นเดียวกับอาหารที่ต้องใช้เวลาอบไม่นาน เพื่อให้ส่วนบนเหลืองเกรียม นอกจากนี้ การทำงานแบบนี้ยังใช้กับอาหารที่มีลักษณะหนา และควรมีส่วนบนที่เกรียมกรอบ (เช่น ไก่เป็นชิ้น ซึ่งควรกลับด้านเมื่ออบได้ครึ่งของระยะเวลา) โปรดดูรายละเอียดเพิ่มเติมในตารางการย่าง

หมายเหตุสำคัญ:
เมื่อใดก็ตามที่เตาอบทำงานแบบผสม (ไมโครเวฟ + ย่าง) โปรดตรวจสอบว่าขดลวดความร้อนอยู่ใต้ผนังด้านบนในแนวนอน ไม่ใช่ที่ผนังด้านหลังของเตาอบในแนวตั้ง โปรดทราบว่าอาหารจะต้องอยู่บนตะแกรงสูง นอกจากที่มีคำแนะนำเป็นอย่างอื่น มิฉะนั้น ให้วางบนจานหมุนโดยตรง โปรดดูคำแนะนำในแผนผังต่อไปนี้
คุณจะต้องกลับอาหาร หากต้องการให้เหลืองเกรียมทั้งสองด้าน

คู่มือการย่างสำหรับอาหารแช่แข็ง

ใช้ระดับพลังงานและเวลาในการย่างตามแผนผังต่อไปนี้

อาหารสด	สัดส่วน	ระดับพลังงาน	เวลาของด้านที่หนึ่ง (นาที)	เวลาของด้านที่สอง (นาที)	คำแนะนำ
ขนมปังก้อน (ก้อนละประมาณ 50 กรัม)	2 ชิ้น 4 ชิ้น	ไมโครเวฟ + ย่าง	300 วัตต์ + ย่าง 1-1½ 2-2½	ย่างเท่านั้น 1-2 1-2	วางเป็นวงบนตะแกรง ย่างด้านที่สองของก้อนขนมปังให้เหลืองตามต้องการ พักอาหารเป็นเวลา 2-5 นาที
บาแกตต์ + หน้า (มะเขือเทศ, ชีส, แฮม, เห็ด)	250-300 กรัม (2 ชิ้น)	450 วัตต์ + ย่าง	8-9	-	วางบาแกตต์แช่แข็งสองชิ้นคู่กันบนตะแกรง หลังจากย่างแล้วให้พักอาหาร 2-3 นาที
กราแตง (ผัก มันฝรั่ง)	400 กรัม	450 วัตต์ + ย่าง	13-14	-	วางกราแตงแช่แข็งในจานแก้วไพเร็กซ์ขนาดเล็ก วางจานบนตะแกรง พักอาหารเป็นเวลา 2-3 นาที
พาสต้า (คาเนลโลนี มักกะโรนี ลาซาญญ่า)	400 กรัม	ไมโครเวฟ + ย่าง	600 วัตต์ + ย่าง 14-15	ย่างอย่างเดียว 2-3	ใส่พาสต้าแช่แข็งในจานแก้วไพเร็กซ์รูปสี่เหลี่ยม คลุมผ้าแบบเรียบ วางจานบนจานหมุน พักอาหารเป็นเวลา 2-3 นาที

GE83MDT_XST_DE68-04111E_TH.indd 34 2013-09-05 2:46:13

อาหารสด	สัดส่วน	ระดับพลังงาน	เวลาของด้านที่หนึ่ง (นาที)	เวลาของด้านที่สอง (นาที)	คำแนะนำ
นักเก็ตไก่	250 กรัม	450 วัตต์ + ย่าง	5-5½	3-3½	วางนักเก็ตไก่บนตะแกรง
มันฝรั่งทอดสำหรับเตาอบ	250 กรัม	450 วัตต์ + ย่าง	9-11	4-5	วางมันฝรั่งทอดสำหรับเตาอบบนกระดาษสำหรับอบบนตะแกรง

คู่มือการย่างสำหรับอาหารสด

อุ่นเตาอบด้วยการย่างเป็นเวลา 4 นาที

ใช้ระดับพลังงานและเวลาในการย่างตามแผนผังต่อไปนี้

อาหารสด	สัดส่วน	ระดับพลังงาน	เวลาของด้านที่หนึ่ง (นาที)	เวลาของด้านที่สอง (นาที)	คำแนะนำ
ขนมปังแผ่น	4 ชิ้น (ชิ้นละ 25 กรัม)	ย่างเท่านั้น	4-5	4½-5½	วางแผ่นขนมปังคู่กันบนตะแกรง
ขนมปังก้อน (อบแล้ว)	2-4 ชิ้น	ย่างเท่านั้น	2-3	2-3	วางขนมปังก้อนก่อนโดยเอาด้านล่างขึ้นบนเป็นวงกลมบนจานหมุน
มะเขือเทศย่าง	200 กรัม (2 ชิ้น) 400 กรัม (4 ชิ้น)	ไมโครเวฟ + ย่าง	300 วัตต์ + ย่าง 4½-5½ 7-8	ย่างอย่างเดียว 2-3	หั่นครึ่งมะเขือเทศ ใส่ซีสที่ด้านบน วางเป็นรูปวงกลมบนจานแก้วไพเร็กซ์แบบเรียบ วางบนตะแกรง
โทสต์ฮาวาย (สับปะรด แฮม แผ่นชีส)	2 ชิ้น (300 กรัม)	450 วัตต์ + ย่าง	3½-4	-	ปิ้งขนมปังก่อน วางขนมปังปิ้งพร้อมท็อปปิ้งบนตะแกรง วางขนมปัง 2 แผ่นตรงข้ามกันบนตะแกรง พักอาหารเป็นเวลา 2-3 นาที
มันฝรั่งอบ	250 กรัม 500 กรัม	600 วัตต์ + ย่าง	4½-5½ 8-9	-	หั่นแบ่งมันฝรั่งเป็นครึ่งหัว วางเป็นวงบนตะแกรง โดยให้ด้านที่หั่นอยู่ทางที่จะย่าง

GE83MDT_XST_DE68-04111E_TH.indd 35 2013-09-05 2:46:13

อาหารสด	สัดส่วน	ระดับพลังงาน	เวลาของด้านที่หนึ่ง (นาที)	เวลาของด้านที่สอง (นาที)	คำแนะนำ
ไก่เป็นชิ้น	450-500 กรัม (2 ชิ้น)	300 วัตต์ + ย่าง	10-12	12-13	ใช้แปรงทาน้ำมันและเครื่องเทศให้ทั่วชิ้นไก่ วางเป็นวงโดยให้กระดูกอยู่ตรงกลาง วางชิ้นไก่โดยไม่ต้องให้อยู่กึ่งกลางตะแกรง พักอาหารเป็นเวลา 2-3 นาที
แลมบ์ชอป/สเต็คเนื้อ (สุกปานกลาง)	400 กรัม (4 ชิ้น)	ย่างเท่านั้น	12-15	9-12	ใช้แปรงทาน้ำมันและเครื่องเทศบนเนื้อแกะ วางเป็นวงบนตะแกรง หลังจากย่างแล้วให้พักอาหาร 2-3 นาที
เนื้อหมูเป็นชิ้น	250 กรัม (2 ชิ้น)	ไมโครเวฟ + ย่าง	300 วัตต์ + ย่าง 7-8	ย่างเท่านั้น 6-7	ใช้แปรงทาน้ำมันและเครื่องเทศบนสเต็คหมู วางเป็นวงบนตะแกรง หลังจากย่างแล้วให้พักอาหาร 2-3 นาที
แอปเปิ้ลอบ	แอปเปิ้ล 1 ผล (ประมาณ 200 กรัม) แอปเปิ้ล 2 ผล (ประมาณ 400 กรัม)	300 วัตต์ + ย่าง	4-4½ 6-7	-	คว้านไส้แอปเปิ้ลและยัดด้วยลูกเกดและแยม ใส่อัลมอนด์ฝานบางๆ ไว้ด้านบน วางแอปเปิ้ลบนจานแก้วไพเร็กซ์แบบเรียบ วางจานบนจานหมุน

เคล็ดลับพิเศษ

การละลายเนย

ใส่เนย 50 กรัมในจานแก้วกันลึกขนาดเล็ก ครอบด้วยฝาพลาสติก
อุ่นเป็นเวลา 30-40 วินาที โดยใช้กำลังไฟ 800 วัตต์ จนเนยละลาย

การละลายช็อคโกแลต

ใส่ช็อคโกแลต 100 กรัมในจานแก้วกันลึก
ให้ความร้อนเป็นเวลา 3-5 นาที โดยใช้พลังงาน 450 วัตต์ จนช็อคโกแลตละลาย
คนหนึ่งหรือสองครั้งระหว่างการละลาย ใช้ถุงมือกันความร้อนเมื่อนำออกจากเตา

การละลายผลึกน้ำผึ้ง

ใส่เกล็ดน้ำผึ้ง 20 กรัมในจานแก้วกันลึก
ให้ความร้อนเป็นเวลา 20-30 วินาที ใช้พลังงาน 300 วัตต์ จนน้ำผึ้งละลาย

การละลายเจลาติน

วางแผ่นเจลาตินแห้ง (10 กรัม) ไว้ในน้ำเย็นเป็นเวลา 5 นาที
นำน้ำออก และใส่เจลาตินในถ้วยแก้วไพเร็กซ์ขนาดเล็ก
ให้ความร้อน 1 นาทีโดยใช้พลังงาน 300 วัตต์
คนหลังการละลาย

การอบหน้าเค้กไอซ์ซิ่ง (สำหรับเค้กและขนม)

ผสมหน้า (ประมาณ 14 กรัม) กับน้ำตาล 40 กรัมและน้ำเย็น 250 มล.
อบโดยไม่ต้องปิดฝา ในถ้วยแก้วไพเร็กซ์ เป็นเวลา 3½ ถึง 4½ โดยใช้พลังงาน 800 วัตต์ จนกระทั่งหน้าเค้ก/ไอซ์ซิ่งใส
คนสองครั้งระหว่างการอบ

การทำแยม

ใส่ผลไม้ 600 กรัม (เช่น เบอร์รี่ชนิดต่างๆ) ในชามแก้ว ไพเร็กซ์ที่มีขนาดเหมาะสมและมีฝาปิด เติมน้ำตาล 300 กรัม และคนให้ทั่ว
อบโดยปิดฝาเป็นเวลา 10-12 นาที โดยใช้กำลังไฟ 800 วัตต์
คนบ่อยๆ ระหว่างการอบ เทลงในโถแก้วใส่แยม ที่มีฝาปิดเกลียว พักโดยปิดฝาไว้ 5 นาที

การทำพุดดิ้ง

ผสมผงพุดดิ้งกับน้ำตาลและนม (500 มล.) ตามคำแนะนำของผู้ผลิต จากนั้นคนให้เข้ากัน ใช้อ่างแก้วไพเร็กซ์ที่มีฝาปิด
อบโดยปิดฝาเป็นเวลา 6½ ถึง 7½ นาที โดยใช้พลังงาน 800 วัตต์
คนบ่อยๆ ระหว่างการอบ

การอบเมล็ดอัลมอนด์แผ่น

นำเมล็ดอัลมอนด์ฝานเป็นแผ่น 30 กรัมมาใส่ในจานกระเบื้องให้เสมอกัน
คนหลายๆ ครั้งระหว่างที่เริ่มเหลืองเป็นเวลา 3½ ถึง 4½ โดยใช้ความร้อน 600 วัตต์
พักในเตาเป็นเวลาประมาณ 2-3 นาที ใช้ถุงมือกันความร้อนเมื่อนำออกจากเตา

GE83MDT_XST_DE68-04111E_TH.indd 36 2013-09-05 2:46:13

การแก้ไขปัญหาและรหัสข้อผิดพลาด

การแก้ไขปัญหา

ถ้าคุณประสบปัญหาอย่างใดอย่างหนึ่งที่ปรากฏด้านล่าง โปรดลองใช้วิธีแก้ไขปัญหาที่ให้มา

ซึ่งเป็นอาการปกติ

- เกิดไอน้ำเกาะตัวในเตาอบ
- มีอากาศหมุนเวียนใกล้ประตูและด้านนอกของเตาอบ
- มีการสะท้อนแสงรอบๆ ประตูและกรอบด้านนอก
- มีไอน้ำออกมาจากข้างประตูหรือช่องระบายอากาศ

เตาอบไม่เริ่มทำงานเมื่อกดปุ่ม (⏻)

- ประตูปิดเรียบร้อยหรือไม่

อาหารไม่สุกเลย

- คุณกำหนดเวลาถูกต้อง และ/หรือกดปุ่ม (⏻) แล้วหรือไม่
- ประตูปิดเรียบร้อยหรือไม่
- คุณใช้วงจรไฟฟ้าเกินกำลัง และทำให้ฟิวส์ขาดหรือทำให้เบรกเกอร์ตัดไฟหรือไม่

อาหารสุกเกินไปหรือไม่สุกพอ

- คุณใช้ระยะเวลาในการอบอาหารเหมาะสมกับชนิดของอาหารหรือไม่
- ระดับพลังงานที่เลือกถูกต้องหรือไม่

หลอดไฟไม่สว่าง

- ห้ามเปลี่ยนหลอดไฟด้วยตนเอง เพื่อความปลอดภัย โปรดติดต่อศูนย์บริการลูกค้าที่ได้รับอนุญาตของ Samsung ที่อยู่ใกล้ เพื่อนัดหมายให้ช่างที่มีคุณสมบัติเป็นผู้เปลี่ยนหลอดไฟให้

เตาอบทำให้เกิดสัญญาณรบกวนวิทยุหรือโทรทัศน์

- คุณอาจพบสัญญาณรบกวนโทรทัศน์หรือวิทยุบ้างเล็กน้อย เมื่อเตาอบทำงาน ซึ่งเป็นอาการปกติ นี่เป็นอาการปกติในการแก้ไขปัญหานี้ โปรดติดตั้งเตาไมโครเวฟให้ห่างจากเครื่องรับโทรทัศน์ วิทยุ และเสาอากาศ
- ถ้าไมโครโปรเซสเซอร์ของเตาอบพบสัญญาณรบกวน อาจจะมีการรีเซ็ตจอแสดงผล ในการแก้ปัญหานี้ ให้ถอดปลั๊กและต่อใหม่อีกครั้ง ตั้งเวลาใหม่

มีควันและกลิ่นเหม็นเมื่อเริ่มต้นใช้งาน

- เป็นอาการที่เกิดขึ้นชั่วคราวเนื่องจากชิ้นส่วนใหม่ได้รับความร้อน ควันและกลิ่นเหม็นจะหายไปหลังจากใช้งานประมาณ 10 นาที
  ถ้าต้องการให้ควันและกลิ่นหายไปเร็วยิ่งขึ้น โปรดใช้งานเตาไมโครเวฟโดยใส่มะนาวหรือน้ำมะนาวไว้ในเตาอบ

มีประกายไฟหรือเสียงแตกเกิดขึ้นภายในเตาอบ (เกิดประกายไฟ)

- คุณใช้จานที่มีขอบโลหะหรือไม่
- คุณลืมส้อมหรือเครื่องใช้ในครัวที่เป็นโลหะไว้ในเตาอบหรือไม่
- แผ่นฟอยล์อะลูมิเนียมใกล้กับผนังด้านในของเตาอบหรือไม่

ถ้าคำแนะนำข้างต้นไม่สามารถแก้ไขปัญหาได้ โปรดติดต่อศูนย์บริการลูกค้า SAMSUNG ใกล้บ้านคุณ โปรดเตรียมข้อมูลต่อไปนี้ให้พร้อม

- หมายเลขรุ่นและหมายเลขผลิตภัณฑ์ ซึ่งมักจะพิมพ์ไว้ที่ด้านหลังของเตาอบ
- รายละเอียดของการรับประกัน
- คำอธิบายปัญหาอย่างชัดเจน

จากนั้นติดต่อผู้แทนจำหน่าย หรือฝ่ายบริการหลังการขายของ SAMSUNG

รหัสข้อผิดพลาด

ข้อความ “SE” หมายถึง

- ข้อความ “SE” คือให้ทำความสะอาดปุ่มและตรวจสอบว่ามีน้ำอยู่บนพื้นผิวโดยรอบปุ่มหรือไม่ ปิดเตาอบไมโครเวฟและลองตั้งค่าอีกครั้ง ถ้ายังมีข้อความนี้ปรากฏอีก โปรดติดต่อศูนย์บริการลูกค้า SAMSUNG ในพื้นที่

GE83MDT_XST_DE68-04111E_TH.indd 37 2013-09-05 2:46:13

ข้อมูลจำเพาะด้านเทคนิค

SAMSUNG มุ่งมั่นที่จะพัฒนาผลิตภัณฑ์อยู่เสมอ ดังนั้นรายละเอียดของเครื่องและคำแนะนำสำหรับผู้ใช้นี้จึงอาจมีการเปลี่ยนแปลง โดยไม่ได้แจ้งให้ทราบ

รุ่น	GE83MDT
การจ่ายไฟ	220 V ~ 50 Hz
การใช้พลังงาน	
ไมโครเวฟ	1200 วัตต์
ย่าง	1050 วัตต์
โหมดผสม	2250 วัตต์
กำลังไฟฟ้า	100 วัตต์ / 800 วัตต์ (IEC-705)
ความถี่ของคลื่นขณะทำงาน	2450 เมกะเฮิรตซ์
แมกนีตรอน	OM75P(31)
วิธีระบายความร้อน	มอเตอร์พัดลมระบายความร้อน
ขนาด (กว้าง x สูง x ลึก)	
ด้านนอก	489 x 275 x 355 มม.
ช่องของเตาอบ	330 x 211 x 324 มม.
ปริมาตร	23 ลิตร
น้ำหนัก	
สุทธิ	13 กก. โดยประมาณ

บันทึก

GE83MDT_XST_DE68-04111E_TH.indd 38 2013-09-05 2:46:13

บันทึก

ถ้าคุณมีคำถามหรือข้อคิดเห็น

ประเทศ	โทรศัพท์	หรือเยี่ยมชมเว็บไซต์ของเราที่
AUSTRALIA	1300 362 603	www.samsung.com/au
NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz
CHINA	400-810-5858	www.samsung.com
HONG KONG	(852) 3698 4698	www.samsung.com/hk (Chinese) www.samsung.com/hk_en (English)
INDIA	1800 3000 8282 1800 266 8282	www.samsung.com/in
INDONESIA	0800-112-8888 (Toll Free) 021-5699-7777	www.samsung.com/id
JAPAN	0120-327-527	www.samsung.com
MALAYSIA	1800-88-9999	www.samsung.com/my
PHILIPPINES	1-800-10-7267864 [PLDT] 1-800-8-7267864 [Globe landline and Mobile] 02-4222111 [Other landline]	www.samsung.com/ph
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com/sg
THAILAND	0-2689-3232 1800-29-3232	www.samsung.com/th
TAIWAN	0800-329-999	www.samsung.com/tw
VIETNAM	1 800 588 889	www.samsung.com

GE83MDT_XST_DE68-04111E_TH.indd 40 2013-09-05 2:46:14

GE83MDT

Microwave Oven

Owner's Instructions & Cooking Guide

Please be advised that the Samsung warranty does NOT cover service calls to explain product operation, correct improper installation, or perform normal cleaning or maintenance.

Planet First **100 % Recycled Paper**

This manual is made with 100 % recycled paper.

imagine the possibilities

Thank you for purchasing this Samsung product. To receive more complete service, please register your product at

www.samsung.com/register

SAMSUNG

contents

Quick look-up guide **11**
Oven features **12**
Oven 12
Control panel 13
Accessories 13
Oven use **14**
How a microwave oven works 14
Checking that your oven is operating correctly 14
Setting the time 15
Cooking/Reheating 15
Power levels 16
Adjusting the cooking time 16
Stopping the cooking 16
Setting the energy save mode 16
Using the auto thai cuisine features 17
Using the quick meal programmes 17
Using the soup/rice programmes 18
Using the thai menu programmes 19
Using the grill menu programmes 20
Using the auto power defrost features 22
Using the auto power defrost programmes 23
Using the manual crusty cook function 23
Using the manual crusty cook setting 24
Choosing the accessories 25
Grilling 25
Combining microwaves and the grill 26
Multistage cooking 26
Switching the beeper off 27
Safety-locking your microwave oven 27
Cookware guide **28**
Cooking guide **29**
Troubleshooting and error code **37**
Troubleshooting 37
Error code 37
Technical specifications **38**

safety information

USING THIS INSTRUCTION BOOKLET

You have just purchased a SAMSUNG microwave oven. Your Owner's Instructions contain valuable information on cooking with your microwave oven:

- Safety precautions
- Suitable accessories and cookware
- Useful cooking tips
- Cooking tips

LEGEND FOR SYMBOLS AND ICONS

WARNING — Hazards or unsafe practices that may result in **severe personal injury or death**.

CAUTION — Hazards or unsafe practices that may result in **minor personal injury or property damage**.

- Warning; Fire hazard
- Warning; Hot surface
- Warning; Electricity
- Warning; Explosive material
- Do NOT attempt.
- Do NOT touch.
- Do NOT disassemble.
- Follow directions explicitly.
- Unplug the power plug from the wall socket.
- Make sure the machine is grounded to prevent electric shock.
- Call the service center for help.
- Note
- Important

GE83MDT_XST_DE68-04111E_EN.indd 2 2013-09-05 2:36:25

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Make sure that these safety precautions are obeyed at all times.

Before using the oven, confirm that the following instructions are followed.

⚠ WARNING (Microwave function only)

- **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
- **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
- **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.
- This appliance is intended to be used in household only.
- **WARNING:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- **WARNING:** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
- Only use utensils that are suitable for use in microwave ovens.
- When heating food in plasitic or paper containers, keep an eye on the oven due to the possibility of ignitions.

GE83MDT_XST_DE68-04111E_EN.indd 3 2013-09-05 2:36:25

- The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- **WARNING:** Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
- **WARNING:** The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
- The oven should be cleaned regularly and any food deposites removed.
- Failure to maintain the oven in a clean conditioin could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- The appliance is not intended for installing in road vehicles, caravans and similar vehicles etc.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **WARNING:** Liquids or other foods must not be heated in sealed containers since they are liable to explode;

GE83MDT_XST_DE68-04111E_EN.indd 4 2013-09-05 2:36:25

- The appliance should not be cleaned with a water jet.
- This oven should be positioned proper direction and height permitting easy access to cavity and control area.
- Before using the your oven first time, oven should be operated with the water during 10 minute and then used.
- If the oven generates a strange noise, a burning smell, or smoke is emitted, unplug the power plug immediately and contact your nearest service center.
- The microwave oven has to be positioned so that plug is accessible.
- The microwave oven is intended to be used on the counter or counter top use only, the microwave oven shall not be placed in a cabinet.

⚠ WARNING (Oven function only) - Optional

- **WARNING:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.
- During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
- **WARNING:** Accessible parts may become hot during use. Young children should be kept away.
- A steam cleaner is not to be used.
- **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements.
  Children less than 8 years of age shall be kept away unless continuously supervised.
- The temperature of accessible surfaces may be high when the appliance is operating.
- The door or the outer surface may get hot when the appliance is operating.
- Keep the appliance and its cord out of reach of children less than 8 years.

GE83MDT_XST_DE68-04111E_EN.indd 5 2013-09-05 2:36:25

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- Appliances are not intended to be operated by means of an external timer or separate remote-control system.

INSTALLING YOUR MICROWAVE OVEN

Place the oven on a flat level surface 85 cm above the floor. The surface should be strong enough to safety bear the weight of the oven.

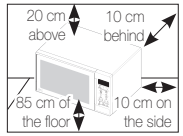

1. When you install your oven, make sure there is adequate ventilation for your oven by leaving at least 10 cm (4 inches) of space behind and, on the sides of the oven and 20 cm (8 inches) of space above.

2. Remove all packing materials inside the oven.

3. Install the roller ring and turntable. Check that the turntable rotates freely. (Turntable type model only)

4. This microwave oven has to be positioned so that plug is accessible.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
  For your personal safety, plug the cable into a proper AC earthed socket.

GE83MDT_XST_DE68-04111E_EN.indd 6 2013-09-05 2:36:25

- Do not install the microwave oven in hot or damp surroundings like next to a traditional oven or radiator. The power supply specifications of the oven must be respected and any extension cable used must be of the same standard as the power cable supplied with the oven. Wipe the interior and the door seal with a damp cloth before using your microwave oven for the first time.

CLEANING YOUR MICROWAVE OVEN

The following parts of your microwave oven should be cleaned regularly to prevent grease and food particles from building up:

- Inside and outside surfaces
- Door and door seals
- Turntable and Roller rings (Turntable type model only)

- **ALWAYS** ensure that the door seals are clean and the door closes properly.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

1. Clean the outside surfaces with a soft cloth and warm, soapy water. Rinse and dry.
2. Remove any splashes or stains on the inside surfaces of oven with a soapy cloth. Rinse and dry.
3. To loosen hardened food particles and remove smells, place a cup of diluted lemon juice in the oven and heat for ten minutes at maximum power.
4. Wash the dishwasher-safe plate whenever necessary.

- **DO NOT** spill water in the vents. **NEVER** use any abrasive products or chemical solvents. Take particular care when cleaning the door seals to ensure that no particles:
  - Accumulate
  - Prevent the door from closing correctly
- **Clean** the microwave oven cavity right after each use with a mild detergent solution, but let the microwave oven cool down before cleaning in order to avoid injury.

GE83MDT_XST_DE68-04111E_EN.indd 7 2013-09-05 2:36:26

When cleaning the upper part inside the cavity, it will be convenient to turn heater downward by 45 ° and clean it. (Swing heater model only)



STORING AND REPAIRING YOUR MICROWAVE OVEN

A few simple precautions should be taken when storing or having your microwave oven serviced.
The oven must not be used if the door or door seals are damaged:

- Broken hinge
- Deteriorated seals
- Distorted or bent oven casing

Only a qualified microwave service technician should perform repair

- **NEVER** remove the outer casing from the oven. If the oven is faulty and needs servicing or you are in doubt about its condition:
  - Unplug it from the wall socket
  - Contact the nearest after-sales service centre

- If you wish to store your oven away temporarily, choose a dry, dustfree place. **Reason :** Dust and damp may adversely affect the working parts in the oven.
- This microwave oven is not intended for commercial use.
- The Light bulb should not be replaced in person for safety reasons.
  Please contact nearest authorised Samsung customer care, to arrange for a qualified engineer to replace the bulb.

⚠ WARNING				
Only qualified staff should be allowed to modify or repair the appliance.	✓	✓	✓	✓
Do not heat liquids and other food in sealed containers for microwave function.	✓	✓	✓	✓
For your safety, do not use high-pressure water cleaners or steam jet cleaners.	✓	✓	✓	✓
Do not install this appliance; near heater, inflammable material; in a humid, oily or dusty location, in a location exposed to direct sunlight and water or where gas may leak; on un level ground.	✓	✓	✓	✓
This appliance must be properly grounded in accordance with local and national codes.	✓	✓	✓	✓
Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.	✓	✓	✓	✓

GE83MDT_XST_DE68-04111E_EN.indd 8 2013-09-05 2:36:27

Do not pull or excessively bend or place heavy objecton the power cord.	✓	✓	✓	✓
In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug.	✓	✓	✓	✓
Do not touch the power plug with wet hands.	✓	✓	✓	✓
Do not turn the appliance off by unplugging the power plug while an operation is in progress.	✓	✓	✓	✓
Do not insert fingers or foreign substances, If any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service centre.	✓	✓	✓	✓
Do not apply excessive pressure or impact to the appliance.	✓	✓	✓	✓
Do not place the oven over a fragile object such as a sink or glass object.	✓	✓		
Do not use benzene, thinner, alcohol, steam cleaner or high pressure cleaner to clean the appliance.	✓	✓	✓	✓
Ensure that the power voltage, frequency and current are the same as those of the product specifications.	✓	✓		✓
Plug the power plug into the wall socket firmly. Do not use a multiple plug adapter, an extension cord or an electric transformer.	✓	✓	✓	
Do not hook the power cord on a metal object, insert the power cord between the objects or behind the oven.	✓	✓	✓	
Do not use a damaged power plug, damaged power cord or loose wall socket. When the power plug or power cord is damaged, contact your nearest service centre.	✓	✓	✓	✓

Do not pour or directly spray water onto the oven.	✓	✓		
Do not place objects on the oven, inside or on the door of the oven.	✓	✓	✓	
Do not spray volatile material such as insecticide onto the surface of the oven.	✓	✓		
Do not store flammable materials in the oven. Take special care when heating dishes or drinks that contain alcohol as alcohol vapours may contact a hot part of the oven.	✓		✓	✓
Keep children away from the door when opening or closing it as they may bump themselves on the door or catch their fingers in the door.	✓	✓	✓	✓
WARNING: Microwave heating of beverages can result in delayed eruptive boiling,therefore care must be taken when handling the container; To prevent this situation ALWAYS allow a standing time of at least 20 seconds after the oven has been switched off so that the temperature can equalize. Stir during heating, if necessary, and ALWAYS stir after heating. In the event of scalding, follow these FIRST AID instructions: • Immerse the scalded area in cold water for at least 10 minutes. • Cover with a clean, dry dressing. • Do not apply any creams, oils or lotions.	✓	✓	✓	✓

GE83MDT_XST_DE68-04111E_EN.indd 9 2013-09-05 2:36:28

⚠ CAUTION				
Only use utensils that are suitable for use in microwave ovens; DO NOT use any metallic containers, Dinnerware with gold or silver trimmings, Skewers, forks, etc. Remove wire twist ties from paper or plastic bags. Reason: Electric arcing or sparking may occur and may damage the oven.	✓		✓	✓
Do not use your microwave oven to dry papers or clothes.	✓		✓	✓
Use shorter times for smaller amounts of food to prevent overheating and burning food.	✓		✓	✓
Do not immerse the power cable or power plug in water and keep the power cable away from heat.	✓	✓		
Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended; Also do not heat airtight or vacuum-sealed bottles, jars, containers, nuts inshells, tomatoes etc.			✓	✓
Do not cover the ventilation slots with cloth or paper. They may catch fire as hot air escapes from the oven. The oven may also overheat and switch itself off automatically, and will remain off until it cools sufficiently.	✓		✓	
Always use oven mitts when removing a dish from the oven to avoid unintentional burns.			✓	
Stir liquids halfway during heating or after heating ends and allow the liquid stand at least 20 seconds after heating to prevent eruptive boiling.			✓	
Stand at arms length from the oven when opening the door to avoid getting scalded by escaping hot air or steam.			✓	
Do not operate the microwave oven when it is empty. The microwave oven will automatically shut down for 30 minutes for safety purposes. We recommend placing a glass of water inside the oven at all times to absorb microwave energy in case the microwave oven is started accidentally.	✓			✓
Install the oven in compliance with the clearances stated in this manual. (See installing your microwave oven.)	✓		✓	
Take care when connecting other electrical appliances to sockets near the oven.	✓	✓	✓	

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY.(MICROWAVE FUNCTION ONLY)

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

(a) Under no circumstances should any attempt be made to operate the oven with the door open or to tamper with the safety interlocks (door latches) or to insert anything into the safety interlock holes.

(b) Do NOT place any object between the oven door and front face or allow food or cleaner residues to accumulate on sealing surfaces. Ensure that the door and door sealing surfaces are kept clean by wiping after use first with a damp cloth and then with a soft dry cloth.

(c) Do NOT operate the oven if it is damaged until it has been repaired by a qualified microwave service technician trained by the manufacturer. It is particularly important that the oven door closes properly and that there is no damage to the:

(1) door (bent)

(2) door hinges (broken or loose)

(3) door seals and sealing surfaces

(d) The oven should not be adjusted or repaired by anyone other than a properly qualified microwave service technician trained by the manufacturer.

GE83MDT_XST_DE68-04111E_EN.indd 10 2013-09-05 2:36:29

Samsung will charge a repair fee for replacing an accessory or repairing a cosmetic defect if the damage to the unit and/or damage to or loss of the accessory was caused by the customer. Items this stipulation covers include:

(a) A Dented, Scratched, or Broken Door, Handle, Out-Panel, or Control Panel.

(b) A Broken or missing Tray, Guide Roller, Coupler, or Wire Rack.

- Use this appliance only for its intended purpose as described in this instruction manual. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your appliance.
- Because these following operating instructions cover various models, the characteristics of your microwave oven may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at www.samsung.com.
- This microwave oven is supposed for heating food. It is intended for domestic home-use only. Do not heat any type of textiles or cushions filled with grains, which could cause burns and fire. The manufacturer cannot be held liable for damage caused by improper or incorrect use of the appliance.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possible result in a hazardous situation.

quick look-up guide

If you want to cook some food.

1. Place the food in the oven.
Select the power level by pressing the **Microwave** ( ) button once or more times.

2. Select the cooking time by pressing the **10 min**, **1 min** or **10 s** button as required.



3. Press the **Start** ( ) button.

Result : Cooking starts.
The oven beeps four times when cooking is over.

If you want to defrost some food.

1. Place the frozen food in the oven.
Press the **Defrost** ( ) button once or more times according to the type of food to be defrosted.

2. Select the weight by pressing the **kg** and **100 g** buttons as required.



3. Press the **Start** ( ) button.

If you want to add an extra minute.

Leave the food in the oven.
Press **+30 s** once or more times for each extra 30 seconds that you wish to add.

GE83MDT_XST_DE68-04111E_EN.indd 11 2013-09-05 2:36:31

If you want to grill some food.

1. Preheat the grill to the required temperature, by pressing the **Grill** (⏦) button, time settng (**10 min**, **1 min** and **10 s**) and **Start** (◇) button.

2. After preheating is finished, Open the door and Place the food on the rack in the oven.
   Press the **Grill** (⏦) button. Select the cooking time by pressing the **10 min**, **1 min** and **10 s** buttons.



3. Press the **Start** (◇) button.

oven features

OVEN

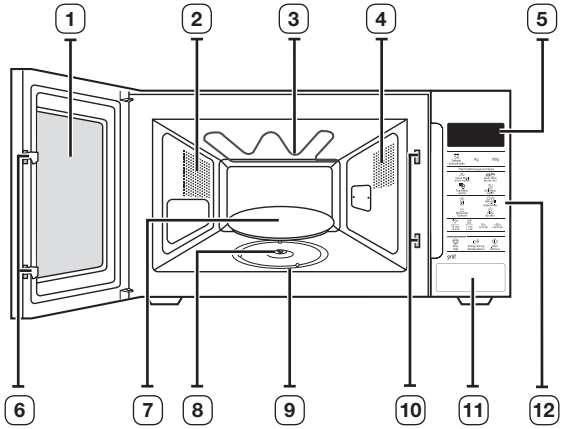

1. DOOR
2. VENTILATION HOLES
3. GRILL
4. LIGHT
5. DISPLAY
6. DOOR LATCHES
7. TURNTABLE
8. COUPLER
9. ROLLER RING
10. SAFETY INTERLOCK HOLES
11. OPEN DOOR PUSH BUTTON
12. CONTROL PANEL

GE83MDT_XST_DE68-04111E_EN.indd 12 2013-09-05 2:36:32

CONTROL PANEL

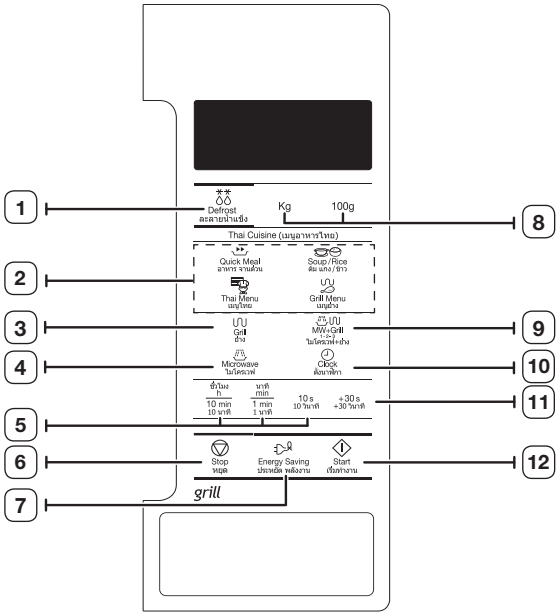

1. AUTO POWER DEFROST FEATURE SELECTION
2. AUTO THAI CUISINE FEATURE SELECTION
3. GRILL MODE BUTTON
4. MICROWAVE MODE BUTTON
5. TIME SETTING BUTTON
6. STOP/CANCEL BUTTON
7. ENERGY SAVING BUTTON
8. WEIGHT SELECTION
9. MICROWAVE+GRILL MODE BUTTON
10. CLOCK SETTING BUTTON
11. +30 s BUTTON
12. START BUTTON

ACCESSORIES

Depending on the model that you have purchased, you are supplied with several accessories that can be used in a variety of ways.

1. **Roller ring**, to be placed in the centre of the oven.

   Purpose : The roller ring supports the turntable.



2. **Turntable**, to be placed on the roller ring with the centre fitting to the coupler.

   Purpose : The turntable serves as the main cooking surface; it can be easily removed for cleaning.



3. **Grill rack,** to be placed on the turntable.

   Purpose : The metal rack can be used in grill and combination cooking.



4. **Crusty plate,** see page 23 to 25.

   Purpose : The crusty plate when using auto crusty cook function or manual crusty cook function.



DO NOT operate the microwave oven without the roller ring and turntable.

GE83MDT_XST_DE68-04111E_EN.indd 13 2013-09-05 2:36:32

HOW A MICROWAVE OVEN WORKS

Microwaves are high-frequency electromagnetic waves; the energy released enables food to be cooked or reheated without changing either the form or the colour.

You can use your microwave oven to:

- Defrost
- Instant Reheat/Cook
- Cook

Cooking Principle.

1. The microwaves generated by the magnetron are distributed uniformly as the food rotates on the turntable. The food is thus cooked evenly.
2. The microwaves are absorbed by the food up to a depth of about 1 inch (2.5 cm). Cooking then continues as the heat is dissipated within the food.
3. Cooking times vary according to the recipient used and the properties of the food:
   - Quantity and density
   - Water content
   - Initial temperature (refrigerated or not)

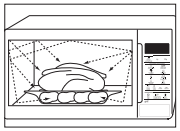

As the centre of the food is cooked by heat dissipation, cooking continues even when you have taken the food out of the oven. Standing times specified in recipes and in this booklet must therefore be respected to ensure:

- Even cooking of the food right to the centre
- The same temperature throughout the food

CHECKING THAT YOUR OVEN IS OPERATING CORRECTLY

The following simple procedure enables you to check that your oven is working correctly at all times. Open the oven door by pushing the large button in the bottom right-hand corner of the control panel.
First, place a bowl of water on the turntable. Then, close the door.

1. Press the **Microwave** ( ) button and set the time to 4-5 minutes by pressing the **1 min** button the appropriate number of times.



2. Press the **Start** ( ) button.

   Result : The oven heats the water for 4 to 5 minutes. The water should then be boiling.

The oven must be plugged into an appropriate wall socket. The turntable must be in position in the oven. If a power level other than the maximum is used, the water takes longer to boil.

GE83MDT_XST_DE68-04111E_EN.indd 14 2013-09-05 2:36:33

SETTING THE TIME

Your microwave oven has an inbuilt clock. When power is supplied, ":0", "88:88" or "12:00" is automatically displayed on the display.
Please set the current time. The time can be displayed in either the 24-hour or 12-hour notation. You must set the clock:

- When you first install your microwave oven
- After a power failure

Auto energy saving function
If you do not select any function when appliance is in the middle of setting or operating with temporary stop condition, function is canceled and clock will be displayed after 25 minutes.
Oven Lamp will be turned off after 5 minutes with door open condition.

1. To display the time in the...
24-hour notation.
12-hour notation.
Press the **Clock** (🕘) button once or twice.

2. Set the hour with the **h** button and the minutes with the **min** button.



3. When the right time is displayed, press the **Clock** (🕘) button again to start the clock.

Result : The time is displayed whenever you are not using the microwave oven.

COOKING/REHEATING

The following procedure explains how to cook or reheat food.
ALWAYS check your cooking settings before leaving the oven unattended.
First, place the food in the centre of the turntable. Then, close the door.

1. Press the **Microwave** (≋) button.

Result : The 800 W (maximum cooking power) indications are displayed:
Select the appropriate power level by pressing the **Microwave** (≋) button again until the corresponding wattage is displayed. Refer to the power level table on the next page.

2. Set the cooking time by pressing the **10 min**, **1 min** and **10 s** button.



3. Press the **Start** (⏀) button.

Result : The oven light comes on and the turntable starts rotating.
1) Cooking starts and when it has finished the oven beeps four times.
2) The end reminder signal will beep 3 times (once every minute).
3) The current time is displayed again.

Never switch the microwave oven on when it is empty.

GE83MDT_XST_DE68-04111E_EN.indd 15 2013-09-05 2:36:33

POWER LEVELS

You can choose among the power levels below.

Power level	Output	
	MWO	GRILL
HIGH	800 W	-
MEDIUM HIGH	600 W	-
MEDIUM	450 W	-
MEDIUM LOW	300 W	-
DEFROST (❄)	180 W	-
LOW/KEEP WARM	100 W	-
GRILL	-	1100 W
COMBI I (🍲 ᔓ)	600 W	1100 W
COMBI II (🍲 ᔓ)	450 W	1100 W
COMBI III (🍲 ᔓ)	300 W	1100 W

If you select higher power level, the cooking time must be decreased.

If you select lower power level, the cooking time must be increased.

ADJUSTING THE COOKING TIME

You can increase the cooking time by pressing the **+30 s** button once for each 30 seconds to be added.

1. Press the **+30 s** button once for each 30 seconds to be added.

2. Press the **Start** (⏀) button.

STOPPING THE COOKING

You can stop cooking at any time to check the food.

1. To stop temporarily;
   Open the door.

   Result : Cooking stops. To resume cooking, close the door and press **Start** (⏀) again.



2. To stop completely;
   Press the **Stop** (▽) button.

   Result : The cooking stops.
   If you wish to cancel the cooking settings, press the **Stop** (▽) button again.

You can cancel any setting before starting cooking by simply pressing **Stop** (▽) button.

SETTING THE ENERGY SAVE MODE

The oven has an Energy save mode. This facility saves electricity when the oven is not in use.

- Press the **Energy Saving** (⏻) button.
  Result : Display off.
- To remove energy save mode, open the door or press the **Energy Saving** (⏻) button and then display shows current time. The oven is ready for use.

GE83MDT_XST_DE68-04111E_EN.indd 16 2013-09-05 2:36:34

USING THE AUTO THAI CUISINE FEATURES

The 27 auto Thai Cuisine features include/provide pre-programmed cooking times. You do not need to set either the cooking times or the power level. You can adjust the auto Thai Cuisine category by press the **Auto Thai Cuisine** (Quick Meal, Soup/Rice, Thai Menu, Grill Menu) button.
First, place the food in the center of the turntable and close the door.

1. Press the **Auto Thai cuisine** (Quick Meal, Soup/Rice, Thai Menu, Grill Menu) button which you want to cook.



2. Select the category of food that you are cooking by pressing the **Auto Thai cuisine** button. Refer to the table on the following page for a description of the various preprogrammed settings.



- Quick Meal : Press **Qucik Meal** (⏩) button (1~6)
- Soup/Rice : Press **Soup/Rice** (🍲) button (1~6)
- Thai Menu : Press **Thai Menu** (🍜) button (1~7)
- Grill Menu : Press **Grill Menu** (🍢) button (1~8)

3. Press the **Start** (◈) button.

USING THE QUICK MEAL PROGRAMMES

The following table presents the various Quick meal Programmes, quantities, standing times and appropriate recommendations.

Code	Food	Serving size	Ingredients	Recommendations
1	**Instant noodle**	1 Serves	1 pack instant noodle, 1 egg, 100 g - favorite vegetable, 100 g - ground pork, 2 cup - water - In pack Seasoning powder	1. Put all ingredients in a bowl use MW 800 watt for 7 minutes. serve.
2	**Frozen shrimp dumpling (Kanom jeeb kung)**	12 pcs	1 pack frozen shrimp dumpling	1. Cut 1 corner of package. Take out sauce and stick. 2. Put in microware MW 800 watt for 3 minutes. serve.
3	**Frozen chinese bun (Salapao sai moo)**	9 pcs	1 pack frozen bun (salapao sai moo)	1. Cut 1 corner of package. 2. Put in microware MW 800 watt for 2 minutes. serve. 3. Take out from package serve.
4	**Frozen wonton shrimp (Keaw kung)**	1 Serve	1 pack frozen wonton shrimp (keaw kung)	1.Take off plastic wrap, open cover, add water to recommend level. 2. Close a cover, put in microware use MW 800 watt for 4 minutes. 3. Bring out. serve.

GE83MDT_XST_DE68-04111E_EN.indd 17 2013-09-05 2:36:35

Code	Food	Serving size	Ingredients	Recommendations
5	**Frozen congee with grouper fish (Kow tom pla kao)**	1 Serve	1 pack frozen congee with grouper (kao tom pla kao)	1. Used folk stab cover for 3-4 times. 2. Used MW 800 watt for 6½ minutes. 3. Bring out take off cover. serve.
6	**Frozen spaghetti with chicken sauce**	1 Serve	1 pack frozen spaghetti with chicken sauce	1. Cut off outside package. 2. Used folk stab inside package cover for 3-4 times. 3. Used MW 800 watt for 5 minutes. 4. Bring out take off cover. serve.

USING THE SOUP/RICE PROGRAMMES

The following table presents the various Soup/Rice Programmes, quantities, standing times and appropriate recommendations.

Code	Food	Serving size	Ingredients	Recommendations
1	**Rice**	2-3 Serves	1 cup - rice, 2 cups - water for cooking - Water for cleaned rice	1. Wash and soaked rice from water, put in a glass-bowl then add the 2 cups water. 2. Put in microwave use the power level 800 watt, 10 minutes. 3. Cover for 15-20 minutes before serve. * Time is depend on rice brand and manufacture date.
2	**Brown rice**	2-3 Serves	1 cup - brown rice, 2 cups - water for cooking - Water for cleaned rice	1. Wash and soaked rice from water, put in a glass-bowl then add the 2 cups water. 2. Put in microwave use the power level 800 watt, 15 minutes. 3. Cover for 15-20 minutes before serve. * Time is depend on rice brand and manufacture date.
3	**Sticky rice**	2-3 Serves	1 cup - sticky rice, 2 cups - water for cooking - Water for cleaned rice	1. Put rice in a glass-bowl then add the 2 cups water. 2. Put in microwave use the power level 800 watt, 15 minutes. 3. Cover for 15-20 minutes before serve. * Time is depend on rice brand and manufacture date.
4	**Clear broth soup with soft tofu and seaweed**	4 Serves	100 g - Chopped ground pork, 2 strips - Soft tofu, ¼ cup - Dried seaweed, 2 roots - blended coriander root, 1 tb - oyster sauce, 1 tb - Fish sauce, ¼ ts - Pepper, ¼ cup - Spring onion, 1 tb - Chopped coriander, 500 ml - Water	1. Mix pork oyster sauce and pepper and mold in to circle. 2. Add water pork and tofu in the bowl. Taste with fish sauce and put in microware use MW power 800 watt for 6 minutes. 3. Take out and put seaweed onion and coriander before serve.

GE83MDT_XST_DE68-04111E_EN.indd 18 2013-09-05 2:36:35

Code	Food	Serving size	Ingredients	Recommendations
5	**Tom yum soup with shrimp**	4 Serves	150 g - shrimp, 1 cup - mushroom, 4 pieces - sliced galangal, ¼ cup - sliced kaffir lime leave, 2 lemongrass, 4 tomatoes,1 tb - chili paste, ¼ cup - Evaporated milk, 3 tbs - fish sauce, 3 tbs - lime juice, 10 chili, 500 ml - water Coriander leave for decorate	1. Mix water with galangal, lemongrass, tear kaffir leave, tomato and chili paste together. 2. Add shrimp mushroom chili put in microwave use MW at 800 watt for 6 minutes. 3. Move out and add the evaporated milk and seasoning with fish sauce, lime juice, decorate coriander before serve.
6	**Green curry chicken soup**	4 Serves	200 g - Chicken cut, 2 tb - Green curry paste, 500 ml - Coconut milk, 1 cup - cut in squared, egg plant, 1 tb - Fish sauce, 1 ts - Palm sugar, ¼ cup - Sweet basil Paprika slide for decorate	1. Mixed Coconut milk and green curry paste together. Add chicken, egg plant, palm sugar, fish sauce mixed well. 2. Heat up at 600 watt for 10 minutes, move out and add sweet basil and paprika, serve.

USING THE THAI MENU PROGRAMMES

The following table presents the various Thai menu Programmes, quantities, standing times and appropriate recommendations.

Code	Food	Serving size	Ingredients	Recommendations
1	**Pork congee/ porridge**	1 Serve	1 cup - cooked Rice, ½ cup - Pork chopped, 500 ml - water, 1 tbs - Oyster sauce, ¼ ts - Pepper ground, 1 tbs - soybean sauce Coriander and spring onion chop to decorate.	1. Mix pork pepper and oyster sauce together, then mold to circle. 2. Add water in a bowl, then add rice pork seasoning with soy sauce. 3. Put in microwave, use MW 800 watt 7 minutes. 4. Bring out spring with coriander and spring onion.
2	**Spaghetti**	2 Serves	80 g - spaghetti, 500 ml - water, ½ tb - olive oil, Pinch of salt	1. Mix water salt oil in bowl, then add spaghetti. 2. Use MW 800 watt 12 minutes. 3. Out of time, bring out wash with cool water and drain water. done.
3	**Steam egg (Egg custard)**	2 Serves	2 Fresh egg, ¾ cup - water, 1 tbs - soy sauce, ⅛ ts - salt, 2 tbs - Evaporated milk, ¼ cup - kani crab, 4 boil shrimps	1. Beat egg with water, seasoning with milk soy sauce salt in ceramic bowl. 2. Bring in to microwave use MW 450 watt 12 minutes. 3. Spring with kani and shrimp before serve.

GE83MDT_XST_DE68-04111E_EN.indd 19 2013-09-05 2:36:35

Code	Food	Serving size	Ingredients	Recommendations
4	**Spaghetti cream sauce**	1 Serve	80 g - cooked spaghetti, 1 tb - Plain four, ½ cup - water, ½ cup - cooked ham, ¼ cup - onion dice, 2 tbs - salt butter, 3 bay leave, 100 ml - wipcream, ½ cup - mushroom, ¼ ts - salt, 2 tbs - mozzarella cheese	1. Mix flour water together, then add butter wipcream bayleaf ham mushroom. 2. Put in microwave use MW 800 watt 5 minutes. 3. Bring out seasoning with salt pepper. 4. Add cheese and spaghetti, mix together. serve.
5	**Coconut custard**	2 Serves	3 duck egg, ½ cup - palm/Coconut sugar, 1 cup - coconut milk, 2-3 leaf pandan, 1 cup - small dice pumpkin	1. Crush egg sugar and pandan until sugar dissolve, pour with sieve for smooth egg. 2. Add a pumpkin, bring to microwave used MW 300 watt 15 minutes. 3. Bring out microwave set aside to cool before serve.
6	**Banana in coconut milk**	1-2 Serves	100 g - sliced banana, 150 ml - coconut milk, 3 tbs - palm sugar, 1 cup - water, ¼ ts - Salt	1. Mix coconut milk, water, palm sugar, and salt stir until dissolved. Then add sliced banana. 2. Put in microwave use MW 600 watt for 8 minutes. take it out, serve.
7	**Omelets**	2 Serves	2 egg, 1 tb - dice tomato, 1 tb - dice onion, ½ tb - soy sauce, 1 tb - butter	1. Beat egg, then add tomato onion soy sauce. 2. Spread butter in bowl add egg with ingredients (1). 3. Use MW 800 watt for 2½ minutes, serve.

USING THE GRILL MENU PROGRAMMES

The following table presents the various Grill menu Programmes, quantities, standing times and appropriate recommendations.

Code	Food	Serving size	Ingredients	Recommendations
1	**Garlic bread**	10 pcs	10 piece French bread, 2 tb - butter, ½ ts - salt, 1 tb - garlic	1. Mixed butter salt and garlic together then spread on the bread. 2. Place on Grill rack and Grill for 3 minutes, serve.
2	**Shrimp chop canape (Kan num ban na krung)**	2-4 Serves	4 Sandwich bread, ½ cup - Shrimp chop, 1 ts - crush garlic, ¼ ts - ground pepper, 1 ts - crush Coriander root, ½ tbs - Oyster sauce Coriander and slice paprika fo decorate	1. Mix shrimp garlic pepper and oyster sauce together. 2. Cut 1 bread in to 4 piece then spread on with shrimp. 3. Put on the rack and use MW+Grill 600 watt for 4 minutes. serve.
3	**New Orleans chicken wings**	2 Serves	250 g - chicken wings, 2 tbs - oyster sauce, ½ tbs - pepper, 1 tbs - chili sauce (Sriracha brand), 1 bay leave	1. Mixed oyster sauce, bay leave, pepper, chili sauce together then marinate with chicken wings leave for 15 minutes. 2. Put it on crusty plate use MW+Grill 600 watt for 4 minutes. 3. Turn the bottom back use MW+Grill 600 watt for 4 minutes. serve.

GE83MDT_XST_DE68-04111E_EN.indd 20 2013-09-05 2:36:35

Code	Food	Serving size	Ingredients	Recommendations
4	**Grilled whole chicken**	4 Serves	1 whole chicken (500 gram.), ½ tbs - sugar, 3 tbs - oyster sauce, 2 tbs - soybean sauce, ½ tbs - pepper, 2 coriander root, 2 tbs - garlic, 2 tbs - oil, 1 tbs - Chinese wine (shao hsing)	1. Used mortar to crush coriander root garlic and pepper together. Then mix with sugar, oyster sauce, soybean sauce, Chinese wine and oil together. 2. Marinate all to chicken about 20 minutes. 3. Put chicken in to crusty plate use MW+Grill 600 watt for 15 minutes. 4. Turn the bottom up and use MW+Grill 600 watt for 15 minutes. serve.
5	**Grilled fish with salt**	4 Serves	500 g - Sea bass, 2 tbs - Salt, 2 tbs - Garlic, 1 ts - Pepper, 1 tb - coriander root, 2 piece crush Lemongrass	1. Put all herb in fish's stomach, and Spring salt on the fish then put on crusty plate. 2. Put into the microwave use MW+Grill 600 watt for 20 minutes. 3. Serve hot with seafood dip.

Code	Food	Serving size	Ingredients	Recommendations
6	**Pork satay**	20 pcs	**Pork satay ingredient** 250 g - slice pork, 1 tbs - Curry powder, 1 tbs - Crush lemongrass, 1 tbs - coriander root, 2 tbs - evaporate milk, ¼ ts - salt, 1 tbs - oyster sauce, 2 ts - sugar **Peanut dip** ½ cup - crush peanut, 3 tbs - chili paste, 2 cup - coconut milk, 4 tbs - palm sugar, 3 tbs - tamarind juice, 1½ salt **Cucumber side dish** ¼ cup - Vinegar, ½ ts - salt, 2 tbs - sugar, ¼ cup - Cucumber slice, ¼ cup - red onion slice, 2 tbs - paprika slice	**Pork satay** 1. Mix curry powder, lemongrass coriander root, milk, salt sugar and oyster sauce. 2. Marinate with pork for 15 minutes and then stab with stick. 3. Put on grill rack use grill for 10 minutes. 4. Then turn bottom up use grill again for 10 minutes, serve with dip and side dish. **Peanut dip** 1. Mix all ingredients except peanut together put in microwave use MW 800 watt for 2½ minutes. 2. Bring out add crush peanut, prepare for serve. **Cucumber side dish** 1. Mix vinegar salt sugar together use MW 800 watt 1½ minutes, bring out add with cucumber, onion and paprika prepare for serve.

GE83MDT_XST_DE68-04111E_EN.indd 21 2013-09-05 2:36:35

Code	Food	Serving size	Ingredients	Recommendations
7	**Chicken teriyaki**	2-4 Serves	500 g - Chicken thigh with skin, 2 tb - Teriyaki sauce, Vegetable	1. Marinate Chicken with teriyaki sauce as well. 2. Put the chicken on crusty plate use MW+Grill 600 watt for 5 minutes then turn up the chicken thigh and use MW+Grill for 5 minutes then serve hot with vegetable.
8	**Grilled spare rib**	2 Serves	350 g - spare rib, 2 tbs - chopped onion, 1 tb - chopped ginger, ½ tb - mustard, 2 tbs - ketchup, 1 tb - chili sauce, 3 bay leave, 1 tb - cooking sauce, 1 tb - oyster sauce, 1 tb - paprika	1. Mixed all ingredients together then marinated rib for 20 minutes. 2. Put in crusty plate then use Grill for 15 minutes then turn up the bottom side and grill for 15 min or until cook then serve.

USING THE AUTO POWER DEFROST FEATURES

The Auto power defrost feature enable you to defrost meat, poultry, fish and bread/cake. The defrost time and power level are set automatically.
You simply select the programme and the weight.

Use only dishes that are microwave-safe.

First, place the frozen food in the centre of the turntable and close the door.

1. Select the type of food that you are cooking by pressing the **Defrost** (**) button one or more times. (Refer to the table on the following page.)

2. Select the food weight by pressing the **kg** and **100 g** button. It is possible to set up to a maximum of 1500 g.



3. Press the **Start** (◇) button.

Result :

- Defrosting begins.
- The oven beeps halfway through defrosting to remind you to turn the food over.
- Press **Start** (◇) button again to finish defrosting.

You can also defrost food manually. To do so, select the microwave cooking/reheating function with a power level of 180 W. Refer to the section entitled “Cooking/Reheating” on page 15 for further details.

GE83MDT_XST_DE68-04111E_EN.indd 22 2013-09-05 2:36:35

USING THE AUTO POWER DEFROST PROGRAMMES

The following table presents the various Auto Power Defrost programmes, quantities, standing times and appropriate recommendations.
Remove all kinds of package material before defrosting. Place meat, poultry, fish and bread/cake on a ceramic plate.

Code	Food	Portion	Standing time	Recommendations
1	**Meat**	200-1500 g	20-60 min.	Shield the edges with aluminium foil. Turn the meat over when the oven beeps. This programme is suitable for beef, lamb, pork, steaks, chops and minced meat.
2	**Poultry**	200-1500 g	20-60 min.	Shield the leg and wing tips with aluminium foil. Turn the poultry over when the oven beeps. This programme is suitable for whole chicken and chicken portions.
3	**Fish**	200-1500 g	20-50 min.	Shield the tail of the whole fish with aluminium foil. Turn the fish over when the oven beeps. This programme is suitable for whole fishes and fish fillets.
4	**Bread/ Cake**	125-625 g	5-20 min.	Put bread on a piece of kitchen paper and turn over, as soon as the oven beeps. Place cake on a ceramic plate and if possible, turn over, as soon as the oven beeps. (Oven keeps operating and is stopped, when you open the door. This programme is suitable for all kinds of bread, sliced or whole, as well as for bread rolls and baguettes. Arrange bread rolls in a circle. This programme is suitable for all kinds of yeast cake, biscuit, cheese cake and puff pastry. It is not, suitable for short/ crust pastry, fruit and cream cakes as well as for cake with chocolate topping.

Select the Manual Defrosting function with a power level of 180 W if you want to defrost food manually. For further details on manual defrosting and defrosting time, refer to the page 33.

USING THE MANUAL CRUSTY COOK FUNCTION

This crusty plate allows you to brown food not only on the top with the grill, but also the bottom of the food turns crispy and brown due to the high temperature of the crusty plate. Several items which you can prepare on the crusty plate can be found in the chart (see next page).
The crusty plate can also be used for bacon, eggs, sausages, etc.

1. Place the crusty plate directly on the turntable and preheat it with highest Microwave-Grill-Combination [600 W + Grill ( )] by following the times and instructions in the chart.



Always use oven gloves to take out the crusty plate, as will become very hot.

2. Brush the plate with oil if you are cooking food, such as bacon and eggs, in order to brown the food nicely.

Please note that the crusty plate has a teflon layer which is not scratch-resistant. Do not use any sharp objects like a knife to cut on the crusty plate.

Use plastic accessories to avoid scratches on the surface of the crusty plate or remove the food from the plate before cutting.

3. Place the food on the crusty plate.



Do not place any objects on the crusty plate that are not heat-resistant; e.g. plastic bowels.

Never place the crusty plate in the oven without turntable.

4. Place the crusty plate on the metal rack (or turntable) in the microwave.



5. Select the appropriate cooking time and power. (Refer to the table on the side)

GE83MDT_XST_DE68-04111E_EN.indd 23 2013-09-05 2:36:36

How to clean the Crusty Plate

Clean the crusty plate with warm water and detergent and rinse off with clean water. Do not use a scrubbing brush or a hard sponge otherwise the top layer will be damaged.

Please Note

The crusty plate is not dishwasher-safe.

USING THE MANUAL CRUSTY COOK SETTING

We recommend to preheat the crusty plate directly on the turntable. Preheat crusty plate with 600 W + Grill ( ) function for 3-5 minutes. Follow the times and instructions in the table.

Food	Serving size	Preheating time	Power	Cooking time (min.)	Re-commendations
Bacon	4 slices (80 g)	3 min.	600 W + Grill	3½-4	Preheat crust plate. Put slices side by side on crust plate. Put crust plate on rack.
Grilled tomatoes	200 g (2 pcs)	3 min.	450 W + Grill	4-5	Preheat crust plate. Cut tomatoes in halves. Put some cheese on top. Arrange in a circle on crust plate. Put crust plate on rack.
Baked potatoes	250 g 500 g	3 min.	600 W + Grill	5-6 8-9	Preheat crust plate. Cut potatoes in halves. Put them on the crust plate with the cut-side to the bottom. Arrange in a circle. Put the plate on the rack.
Frozen burger	2 pieces (125 g)	3 min.	600 W + Grill	7-7½	Preheat crust plate. Put frozen burger side by side on the crust plate. Put crust plate on rack. Turn over after 4-5 min.
Frozen baguettes	200-250 g (2 pcs)	3 min.	450 W + Grill	8-9	Preheat crust plate. Put baguettes with topping (e.g. tomato-cheese) side by side on the plate. Put crust plate on rack.
Frozen pizza	300-400 g	5 min.	450 W + Grill	9-11	Preheat the crust plate. Put the frozen pizza on the crust plate. Put crust plate on rack.
Frozen mini-pizza-snack	9x30 g (270 g)	3 min.	300 W + Grill	9-10	Preheat crust plate. Distribute pizza snacks evenly on crust plate. Put the plate on the rack.
Chilled pizza	300-350 g	5 min.	450 W + Grill	6½-7½	Preheat crust plate. Put the chilled pizza on the plate. Put crust plate on rack.

GE83MDT_XST_DE68-04111E_EN.indd 24 2013-09-05 2:36:36

Food	Serving size	Preheating time	Power	Cooking time (min.)	Re-commendations
Frozen Fish fingers	150 g (5 pcs)	4 min.	600 W + Grill	7-8	Preheat crust plate. Brush plate with 1 tbsp. oil. Put fish fingers in a circle on the plate. Turn over after 4 min (5 pcs) or after 6 min. (10 pcs).
	300 g (10 pcs)	4 min.	600 W + Grill	9-10	
Frozen chicken nuggets	125 g 250 g	4 min.	600 W + Grill	5-6 7-8	Preheat crust plate. Brush plate with 1 tbsp. oil. Put chicken nuggets on the plate. Put crust plate on rack. Turn over after 3 min (125 g) or 5 min. (250 g).

CHOOSING THE ACCESSORIES

Use microwave-safe recipients; do not use plastic containers, dishes, paper cups, towels, etc.

If you wish to select the combined cooking mode (grill and microwave), use only dishes that are microwave-safe and oven-proof.



For further details on suitable cookware and utensils, refer to the Cookware Guide on page 28.

GRILLING

The grill enables you to heat and brown food quickly, without using microwaves. To this aim, a grill rack is supplied with your microwave oven.

1. Preheat the grill to the required temperature, by pressing the **Grill** (⎍) button, time settng (**10 min**, **1 min** and **10 s**) and **Start** (⏀) button.

2. After preheating is finished, Open the door and place the food on the rack.



3. Press the **Grill** (⎍) button. Select the cooking time by pressing the **10 min**, **1 min** and **10 s** buttons. (The maximun grilling time is 60 minute.)



4. Press the **Start** (⏀) button.

Result : The oven light comes on and the turntable starts rotating.

1) Cooking starts and when it has finished the oven beeps four times.
2) The end reminder signal will beep 3 times (once every minute).
3) The current time is displayed again.

Do not worry if the heater turns off and on while grilling. This system is designed to prevent overheating of the oven.

Always use oven gloves when touching the dishes in the oven, as they will be very hot.

GE83MDT_XST_DE68-04111E_EN.indd 25 2013-09-05 2:36:36

COMBINING MICROWAVES AND THE GRILL

You can also combine microwave cooking with the grill, to cook quickly and brown at the same time.

ALWAYS use microwave-safe and oven-proof cookware. Glass or ceramic dishes are ideal as they allow the microwaves to penetrate the food evenly.

ALWAYS use oven gloves when touching the recipients in the oven, as they will be very hot.

1. Open the oven door by pushing the large button in the bottom right-hand corner of the control panel. Place the food on the rack and the rack on the turntable. Close the door.

2. Press the **MW+Grill** ( ) button.

Result : The following indications are displayed:

( ) (microwave and grill mode)
600 W (out power)

Select the appropriate **power level** by pressing the **MW+Grill** ( ) button again until the corresponding power level is displayed.

You cannot set the temperature of the grill.

3. Set the cooking time by pressing the **10 min**, **1 min** and **10 s** buttons. The maximum cooking time is 60 minutes.



4. Press the **Start** ( ) button.

Result : Combination cooking starts. When it has finished.

1) The oven beeps four times.
2) The end reminder signal will beep 3 times (once every minute).
3) The current time is displayed again.

The maximum microwave power for the combined microwave and grill mode is 600 W.

MULTISTAGE COOKING

Your microwave oven can be programmed to cook food up to three stages.

Example: You wish to defrost food and cook it without having to reset the oven after each stage. You can thus defrost and cook a 500 g fish in three stages:

- Defrosting
- Cook I
- Cook II

You can set between two and three stages in multistage cooking.
If you set three stage, the first stage must be defrosting.
Don't press **Start** ( ) button until you've set the final stage.

1. Press the **Defrost** ( ) button once or more times.

2. Set the weight by pressing the **kg** and **100 g** buttons the appropriate number of times (500 g in the example).



3. Press the **Microwave** ( ) button.
The microwave mode (l) :

; if necessary, set the power level by pressing the **Microwave** ( ) button again one or more times. (600 W in the example)

4. Set the cooking time by pressing the **10 min**, **1 min** and **10 s** buttons the appropiate number of times (4 minutes in the example).



GE83MDT_XST_DE68-04111E_EN.indd 26 2013-09-05 2:36:37

5. Press the **Grill** (⋂⋃) button.
The grill mode (II):

6. Set the cooking time by pressing the **10 min**, **1 min** and **10 s** buttons the appropiate number of times (5 minutes in the example).
(The maximun grilling time is 60 minutes.)



7. Press the **Start** (◇) button.

Result : The three modes [defrosting and cooking (I, II)] are selected one after the other. According to the defrosting mode that you have chosen, the oven may beep halfway through defrosting to remind you to turn the food over. When cooking is over, the oven beeps four times.

- The end reminder signal will beep 3 times (once every minute).
- The current time is displayed again.

SWITCHING THE BEEPER OFF

You can switch the beeper off whenever you want.

1. Press the **Stop** (▽) and **Start** (◇) buttons at the same time.

Result : The oven will not beep each time you press any button.

2. To switch the beeper back on, press the **Stop** (▽) and **Start** (◇) buttons again at the same time.

Result : The oven operates with the beeper on again.



SAFETY-LOCKING YOUR MICROWAVE OVEN

Your microwave oven is fitted with a special Child Safety programme, which enables the oven to be “locked” so that children or anyone unfamiliar with it cannot operate it accidentally.
The oven can be locked at any time.

1. Press the **Stop** (▽) and **Clock** (🕘) buttons at the same time.

Result : The oven is locked (no functions can be selected).



2. To unlock the oven, press the **Stop** (▽) and **Clock** (🕘) buttons again at the same time.

Result : The oven can be used normally.

GE83MDT_XST_DE68-04111E_EN.indd 27 2013-09-05 2:36:38

cookware guide

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used. Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry.
The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-safe	Comments
Aluminum foil	✓ ✗	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
Browning plate	✓	Do not preheat for more than eight minutes.
China and earthenware	✓	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
Disposable polyester cardboard dishes	✓	Some frozen foods are packaged in these dishes.
Fast-food packaging		
• Polystyrene cups containers	✓	Can be used to warm food. Overheating may cause the polystyrene to melt.
• Paper bags or newspaper	✗	May catch fire.
• Recycled paper or metal trims	✗	May cause arcing.
Glassware		
• Oven-to-table ware	✓	Can be used, unless decorated with a metal trim.
• Fine glassware	✓	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.
• Glass jars	✓	Must remove the lid. Suitable for warming only.
Metal		
• Dishes	✗	May cause arcing or fire.
• Freezer bag twist ties	✗	
Paper		
• Plates, cups, napkins and Kitchen paper	✓	For short cooking times and warming. Also to absorb excess moisture.
• Recycled paper	✗	May cause arcing.
Plastic		
• Containers	✓	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic.
• Cling film	✓	Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
• Freezer bags	✓ ✗	Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
Wax or grease-proof paper	✓	Can be used to retain moisture and prevent spattering.

✓ **: Recommended** ✓✗ **: Use caution** ✗ **: Unsafe**

GE83MDT_XST_DE68-04111E_EN.indd 28 2013-09-05 2:36:38

cooking guide

MICROWAVES

Microwave energy actually penetrates food, attracted and absorbed by its water, fat and sugar content.
The microwaves cause the molecules in the food to move rapidly. The rapid movement of these molecules creates friction and the resulting heat cooks the food.

COOKING

Cookware for microwave cooking:
Cookware must allow microwave energy to pass through it for maximum efficiency. Microwaves are reflected by metal, such as stainless steel, aluminium and copper, but they can penetrate through ceramic, glass, porcelain and plastic as well as paper and wood. So food must never be cooked in metal containers.

Food suitable for microwave cooking:
Many kinds of food are suitable for microwave cooking, including fresh or frozen vegetables, fruit, pasta, rice, grains, beans, fish, and meat. Sauces, custard, soups, steamed puddings, preserves, and chutneys can also be cooked in a microwave oven. Generally speaking, microwave cooking is ideal for any food that would normally be prepared on a hob. Melting butter or chocolate, for example (see the chapter with tips, techniques and hints).

Covering during cooking
To cover the food during cooking is very important, as the evaporated water rises as steam and contributes to cooking process. Food can be covered in different ways: e.g. with a ceramic plate, plastic cover or microwave suitable cling film.

Standing times
After cooking is over food the standing time is important to allow the temperature to even out within the food.

Cooking guide for frozen vegetables

Use a suitable glass pyrex bowl with lid. Cook covered for the minimum time - see table. Continue cooking to get the result you prefer.
Stir twice during cooking and once after cooking. Add salt, herbs or butter after cooking. Cover during standing time.

Food	Portion	Power	Time (min.)	Standing time (min.)	Instructions
Spinach	150 g	600 W	4½-5½	2-3	Add 15 ml (1 tbsp.) cold water
Broccoli	300 g	600 W	9-10	2-3	Add 30 ml (2 tbsp.) cold water.
Peas	300 g	600 W	7½-8½	2-3	Add 15 ml (1 tbsp.) cold water.
Green beans	300 g	600 W	8-9	2-3	Add 30 ml (2 tbsp.) cold water.
Mixed vegetables (Carrots/ Peas/Corn)	300 g	600 W	7½-8½	2-3	Add 15 ml (1 tbsp.) cold water.
Mixed vegetables (Chinese style)	300 g	600 W	8-9	2-3	Add 15 ml (1 tbsp.) cold water.

GE83MDT_XST_DE68-04111E_EN.indd 29 2013-09-05 2:36:38

Cooking guide for rice and pasta

Rice : Use a large glass pyrex bowl with lid - rice doubles in volume during cooking. Cook covered.
After the cooking time is over, stir before standing time and salt or add herbs and butter.
Remark: the rice may not have absorbed all water after the cooking time is finished.

Pasta : Use a large glass pyrex bowl. Add boiling water, a pinch of salt and stir well. Cook uncovered.
Stir occasionally during and after cooking. Cover during standing time and drain thoroughly afterwards.

Food	Portion	Power	Time (min.)	Standing time (min.)	Instructions
White rice (Parboiled)	250 g	800 W	16-17	5	Add 500 ml cold water.
Brown rice (Parboiled)	250 g	800 W	21-22	5	Add 500 ml cold water.
Mixed rice (Rice + Wild rice)	250 g	800 W	17-18	5	Add 500 ml cold water.
Mixed corn (Rice + Grain)	250 g	800 W	18-19	5	Add 400 ml cold water.
Pasta	250 g	800 W	11-12	5	Add 1000 ml hot water.

Cooking guide for fresh vegetables

Use a suitable glass pyrex bowl with lid. Add 30-45 ml cold water (2-3 tbsp.) for every 250 g unless another water quantity is recommended - see table. Cook covered for the minimum time - see table. Continue cooking to get the result you prefer. Stir once during and once after cooking. Add salt, herbs or butter after cooking. Cover during a standing time of 3 minutes.

Hint : Cut the fresh vegetables into even sized pieces. The smaller they are cut, the quicker they will cook.

All fresh vegetables should be cooked using full microwave power (800 W).

Food	Portion	Time (min.)	Standing time (min.)	Instructions
Broccoli	250 g 500 g	4-4½ 7-7½	3	Prepare even sized florets. Arrange the stems to the centre.
Brussels sprouts	250 g	5½-6½	3	Add 60-75 ml (5-6 tbsp.) water.
Carrots	250 g	4½-5	3	Cut carrots into even sized slices.
Cauliflower	250 g 500 g	5-5½ 8½-9	3	Prepare even sized florets. Cut big florets into halves. Arrange stems to the centre.
Courgettes	250 g	3½-4	3	Cut courgettes into slices. Add 30 ml (2 tbsp.) water or a knob of butter. Cook until just tender.
Egg plants	250 g	3½-4	3	Cut egg plants into small slices and sprinkle with 1 tablespoon lemon juice.
Leeks	250 g	4½-5	3	Cut leeks into thick slices.
Mushrooms	125 g 250 g	1½-2 3-3½	3	Prepare small whole or sliced mushrooms. Do not add any water. Sprinkle with lemon juice. Spice with salt and pepper. Drain before serving.

GE83MDT_XST_DE68-04111E_EN.indd 30 2013-09-05 2:36:38

Food	Portion	Time (min.)	Standing time (min.)	Instructions
Onions	250 g	5½-6	3	Cut onions into slices or halves. Add only 15 ml (1 tbsp.) water.
Pepper	250 g	4½-5	3	Cut pepper into small slices.
Potatoes	250 g 500 g	4-5 7½-8½	3	Weigh the peeled potatoes and cut them into similar sized halves or quarters.
Turnip cabbage	250 g	5-5½	3	Cut turnip cabbage into small cubes.

REHEATING

Your microwave oven will reheat food in a fraction of the time that conventional ovens hobs normally take.
Use the power levels and reheating times in the following chart as a guide. The times in the chart consider liquids with a room temperature of about +18 to +20 °C or a chilled food with a temperature of about +5 to +7 °C.

Arranging and covering
Avoid reheating large items such as joint of meat – they tend to overcook and dry out before the centre is piping hot. Reheating small pieces will be more successful.

Power levels and stirring
Some foods can be reheated using 800 W power while others should be reheated using 600 W, 450 W or even 300 W.
Check the tables for guidance. In general, it is better to reheat food using a lower power level, if the food is delicate, in large quantities, or if it is likely to heat up very quickly (mince pies, for example).
Stir well or turn food over during reheating for best results. When possible, stir again before serving.
Take particular care when heating liquids and baby foods. To prevent eruptive boiling of liquids and possible scalding, stir before, during and after heating. Keep them in the microwave oven during standing time. We recommend putting a plastic spoon or glass stick into the liquids. Avoid overheating (and therefore spoiling) the food.
It is preferable to underestimate cooking time and add extra heating time, if necessary.

Heating and standing times
When reheating food for the first time, it is helpful to make a note of the time taken – for future reference.
Always make sure that the reheated food is piping hot throughout.
Allow food to stand for a short time after reheating - to let the temperature even out.
The recommended standing time after reheating is 2-4 minutes, unless another time is recommended in the chart.
Take particular care when heating liquids and baby food. See also the chapter with the safety precautions.

REHEATING LIQUIDS

Always allow a standing time of at least 20 seconds after the oven has been switched off to allow the temperature to even out. Stir during heating, if necessary, and ALWAYS stir after heating. To prevent eruptive boiling and possible scalding, you should put a spoon or glass stick into the beverages and stir before, during and after heating.

REHEATING BABY FOOD

BABY FOOD: Empty into a deep ceramic plate. Cover with plastic lid. Stir well after reheating!
Let stand for 2-3 minutes before serving. Stir again and check the temperature.
Recommended serving temperature: between 30-40 °C.
BABY MILK: Pour milk into a sterilised glass bottle. Reheat uncovered. Never heat a baby's bottle with teat on, as the bottle may explode if overheated. Shake well before standing time and again before serving!
Always carefully check the temperature of baby milk or food before giving it to the baby. Recommended serving temperature: ca. 37 °C.
REMARK: Baby food particularly needs to be checked carefully before serving to prevent burns.
Use the power levels and times in the next table as a guide lines for reheating.

GE83MDT_XST_DE68-04111E_EN.indd 31 2013-09-05 2:36:38

Reheating baby food and milk

Use the power levels and times in this table as guide lines for reheating.

Food	Portion	Power	Time	Standing time (min.)	Instructions
Baby food (Vegetables + Meat)	190 g	600 W	30 sec.	2-3	Empty into ceramic deep plate. Cook covered. Stir after cooking time. Stand for 2-3 minutes. Before serving, stir well and check the temperature carefully.
Baby porridge (Grain + Milk + Fruit)	190 g	600 W	20 sec.	2-3	Empty into ceramic deep plate. Cook covered. Stir after cooking time. Stand for 2-3 minutes. Before serving, stir well and check the temperature carefully.
Baby milk	100 ml 200 ml	300 W	30-40 sec. 50 sec to 1 min.	2-3	Stir or shake well and pour into a sterilized glass bottle. Place into the centre of turn-table. Cook uncovered. Shake well and stand for at least 3 minutes. Before serving, shake well and check the temperature carefully.

Reheating liquids and food

Use the power levels and times in this table as a guide lines for reheating.

Food	Portion	Power	Time (min.)	Standing time (min.)	Instructions
Drinks (coffee, tea and water)	150 ml (1 cup) 250 ml (1 mug)	800 W	1-1½ 1½-2	1-2	Pour in to a ceramic cup and reheat uncovered. Place cup (150 ml) or mug (250 ml) in the centre of turntable, Stir carefully before and after standing time.
Soup (chilled)	250 g	800 W	3-3½	2-3	Pour into a deep ceramic plate. Cover with plastic lid. Stir well after reheating. Stir again before serving.
Stew (chilled)	350 g	600 W	5½-6½	2-3	Put stew in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving.
Pasta with sauce (chilled)	350 g	600 W	4½-5½	3	Put pasta (e.g. spaghetti or egg noodles) on a flat ceramic plate. Cover with microwave cling film. Stir before serving.
Filled pasta with sauce (chilled)	350 g	600 W	5-6	3	Put filled pasta (e.g. ravioli, tortellini) in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving.
Plated meal (chilled)	350 g	600 W	5½-6½	3	Plate a meal of 2-3 chilled components on a ceramic dish. Cover with microwave cling-film.

GE83MDT_XST_DE68-04111E_EN.indd 32 2013-09-05 2:36:38

MANUAL DEFROSTING

Microwaves are an excellent way of defrosting frozen food. Microwaves gently defrost frozen food in a short period of time. This can be of great advantage, if unexpected guests suddenly show up.

Frozen poultry must be thoroughly thawed before cooking. Remove any metal ties and take it out of any wrapping to allow thawed liquid to drain away.

Put the frozen food on a dish without cover. Turn over half way, drain off any liquid and remove any giblets as soon as possible.

Check the food occasionally to make sure that it does not feel warm.

If smaller and thinner parts of the frozen food start to warm up, they can be shield by wrapping very small strips of aluminium foil around them during defrosting.

Should poultry start to warm up on the outer surface, stop thawing and allow it to stand for 20 minutes before continuing.

Leave the fish, meat and poultry to stand in order to complete defrosting. The standing time for complete defrosting will vary depending on the quantity defrosted. Please refer to the table below.

Hint : Flat food defrosts better than thick and smaller quantities need less time than bigger ones. Remember this hint while freezing and defrosting food.

For defrosting of frozen food with a temperature of about -18 to -20 °C, use the following table as a guide.

All frozen food should be defrosted using defrosting power level (180 W, ❄❄).

Food	Portion	Time (min.)	Standing time (min.)	Instructions
Meat				
Minced beef	250 g 500 g	6½-7½ 10-12	5-25	Place the meat on a flat ceramic plate. Shield thinner edges with aluminium foil. Turn over after half of defrosting time!
Pork steaks	250 g	7½-8½		

Food	Portion	Time (min.)	Standing time (min.)	Instructions
Poultry				
Chicken pieces	500 g (2 pcs)	14½-15½	15-40	First, put chicken pieces first skin-side down, whole chicken first breast-side-down on a flat ceramic plate. Shield the thinner parts like wings and ends with aluminium foil. Turn over after half of defrosting time!
Whole chicken	900 g	28-30		
Fish				
Fish fillets	200 g (2 pcs) 400 g (4 pcs)	6-7 12-13	5-15	Put frozen fish in the middle of a flat ceramic plate. Arrange the thinner parts under the thicker parts. Shield narrow ends with aluminium foil. Turn over after half of defrosting time!
Fruits				
Berries	250 g	6-7	5-10	Distribute fruits on a flat, round glass dish (with a large diameter).
Bread				
Bread rolls (Each about. 50 g)	2 pcs 4 pcs	½-1 2-2½	5-20	Arrange rolls in a circle or bread horizontally on kitchen paper in the middle of turntable. Turn over after half of defrosting time!
Toast/ sandwich	250 g	4½-5		
German bread (Wheat + Rye flour)	500 g	8-10		

GE83MDT_XST_DE68-04111E_EN.indd 33 2013-09-05 2:36:38

GRILL

The grill-heating element is located underneath the ceiling of the cavity. It operates while the door is closed and the turntable is rotating. The turntable's rotation makes the food brown more evenly. Preheating the grill for 3-4 minutes will make the food brown more quickly.

Cookware for grilling:
Should be flameproof and may include metal. Do not use any type of plastic cookware, as it can melt.

Food suitable for grilling:
Chops, sausages, steaks, hamburgers, bacon and gammon rashers, thin fish portions, sandwiches and all kinds of toast with toppings.

Important remark:
Whenever the grill only mode is used, make sure that the grill-heating element is under the ceiling in the horizontal position and not on the back-wall in the vertical position. Please remember that food must be placed on the high rack, unless another instruction is recommended.

MICROWAVE + GRILL

This cooking mode combines the radiant heat that is coming from the grill with the speed of microwave cooking. It operates only while the door is closed and the turntable is rotating. Due to the rotation of the turntable, the food browns evenly. Three combination modes are available with this model: 600 W + Grill, 450 W + Grill and 300 W + Grill.

Cookware for cooking with microwave + grill
Please use cookware that microwaves can pass through. Cookware should be flameproof. Do not use metal cookware with combination mode. Do not use any type of plastic cookware, as it can melt.

Food suitable for microwave + grill cooking:
Food suitable for combination mode cooking include all kinds of cooked food which need reheating and browning (e.g. baked pasta), as well as foods which require a short cooking time to brown the top of the food. Also, this mode can be used for thick food portions that benefit from a browned and crispy top (e.g. chicken pieces, turning them over half way through cooking). Please refer to the grill table for further details.

Important remark:
Whenever the combination mode (microwave + grill) is used, make sure that the grill heating element is under the ceiling in the horizontal position and not on the back-wall in the vertical position. The food should be placed on the high rack, unless another instruction is recommended. Otherwise it has to be placed directly on the turntable. Please refer to the instructions in the following chart.
The food must be turned over, if it is to be browned on both sides.

Grill Guide for frozen food

Use the power levels and times in this table as guide lines for grilling.

Fresh food	Portion	Power	1st side time (min.)	2nd side time (min.)	Instructions
Bread rolls (Each ca. 50G)	2 pcs 4 pcs	MW+Grill	300 W + Grill 1-1½ 2-2½	Grill only 1-2 1-2	Arrange rolls in a circle on rack. Grill the second side of the rolls up to the crisp you prefer. Stand for 2-5 minutes.
Baguettes + Topping (Tomatos, Cheese, Ham, Mushrooms)	250-300 g (2 pcs)	450 W + Grill	8-9	-	Put 2 frozen baguettes side by side on the rack. After grilling stand for 2-3 minutes.
Gratin (Vegetables potatoes)	400 g	450 W + Grill	13-14	-	Put frozen gratin into a small, round glass pyrex dish. Put the dish on the rack. After cooking stand for 2-3 minutes.

GE83MDT_XST_DE68-04111E_EN.indd 34 2013-09-05 2:36:38

Fresh food	Portion	Power	1st side time (min.)	2nd side time (min.)	Instructions
Pasta (Cannelloni, Macaroni, Lasagne)	400 g	MW+Grill	600 W + Grill 14-15	Grill only 2-3	Put frozen pasta into a small flat rectangular glass pyrex dish. Put the dish directly on the turntable. After cooking stand for 2-3 minutes.
Chicken nuggets	250 g	450 W + Grill	5-5½	3-3½	Put chicken nuggets on the rack
Oven chips	250 g	450 W + Grill	9-11	4-5	Put oven chips evenly on baking paper on the rack.

Grill Guide for fresh food

Preheat the grill with the grill-function for 4 minutes.
Use the power levels and times in this table as guide lines for grilling.

Fresh food	Portion	Power	1st side time (min.)	2nd side time (min.)	Instructions
Toast slices	4 pcs (each 25 g)	Grill only	4-5	4½-5½	Put the toast slices side by side on the rack.
Bread rolls (Already baked)	2-4 pieces	Grill only	2-3	2-3	Put bread rolls first with the bottom side up in a circle directly on the turntable.
Grilled tomatoes	200 g (2 pcs) 400 g (4 pcs)	MW+Grill	300 W + Grill 4½-5½ 7-8	Grill only 2-3	Cut tomatoes into halves. Put some cheese on top. Arrange in a circle in a flat glass pyrex dish. Place it on the rack.
Toast hawaii (Pineapple, Ham, Cheese slices)	2 pcs (300 g)	450 W + Grill	3½-4	-	Toast the bread slices first. Put the toast with topping on the rack. Put 2 toasts opposite directly on the rack. Stand for 2-3 minutes.
Baked potatoes	250 g 500 g	600 W + Grill	4½-5½ 8-9	-	Cut potatoes into halves. Put them in a circle on the rack with the cut side to the grill.

GE83MDT_XST_DE68-04111E_EN.indd 35 2013-09-05 2:36:38

Fresh food	Portion	Power	1st side time (min.)	2nd side time (min.)	Instructions
Chicken pieces	450-500 g (2 pcs)	300 W + Grill	10-12	12-13	Prepare chicken pieces with oil and spices. Put them in a circle with the bones to the middle. Put one chicken piece not into the centre of the rack. Stand for 2-3 minutes.
Lamb chops/beef steaks (Medium)	400 g (4 pcs)	Grill only	12-15	9-12	Brush the lamb chops with oil and spices. Lay them in a circle on the rack. After grilling stand for 2-3 minutes.
Pork steaks	250 g (2 pcs)	MW+Grill	300 W + Grill 7-8	Grill only 6-7	Brush the pork steaks with oil and spices. Lay them in a circle on the rack. After grilling stand for 2-3 minutes.
Baked apples	1 apple (ca. 200 g) 2 apples (ca. 400 g)	300 W + Grill	4-4½ 6-7	-	Core the apples and fill them with raisins and jam. Put some almond slices on top. Put apples on a flat glass pyrex dish. Place the dish directly on the turntable.

SPECIAL HINTS

MELTING BUTTER
Put 50 g butter into a small deep glass dish. Cover with plastic lid.
Heat for 30-40 seconds using 800 W, until butter is melted.

MELTING CHOCOLATE
Put 100 g chocolate into a small deep glass dish.
Heat for 3-5 minutes, using 450 W until chocolate is melted.
Stir once or twice during melting. Use oven gloves while taking out!

MELTING CRYSTALLIZED HONEY
Put 20 g crystallized honey into a small deep glass dish.
Heat for 20-30 seconds using 300 W, until honey is melted.

MELTING GELATINE
Lay dry gelatine sheets (10 g) for 5 minutes into cold water.
Put drained gelatine into a small glass pyrex bowl.
Heat for 1 minute using 300 W.
Stir after melting.

COOKING GLAZE/ICING (FOR CAKE AND GATEAUX)
Mix instant glaze (approximately 14 g) with 40 g sugar and 250 ml cold water.
Cook uncovered in a glass pyrex bowl for 3½ to 4½ minutes using 800 W, until glaze/icing is transparent. Stir twice during cooking.

COOKING JAM
Put 600 g fruits (for example mixed berries) in a suitable sized glass pyrex bowl with lid. Add 300 g preserving sugar and stir well.
Cook covered for 10-12 minutes using 800 W.
Stir several times during cooking. Empty directly into small jam glasses with twist-off lids. Stand on lid for 5 minutes.

COOKING PUDDING
Mix pudding powder with sugar and milk (500 ml) by following the manufacturers instructions and stir well. Use a suitable sized glass pyrex bowl with lid. Cook covered for 6½ to 7½ minutes using 800 W.
Stir several times well during cooking.

BROWNING ALMOND SLICES
Spread 30 g sliced almonds evenly on a medium sized ceramic plate.
Stir several times during browning for 3½ to 4½ minutes using 600 W.
Let it stand for 2-3 minutes in the oven. Use oven gloves while taking out!

GE83MDT_XST_DE68-04111E_EN.indd 36 2013-09-05 2:36:38

TROUBLESHOOTING

If you have any of the problems listed below try the solutions given.

This is normal.

- Condensation inside the oven.
- Air flow around the door and outer casing.
- Light reflection around the door and outer casing.
- Steam escaping from around the door or vents.

The oven does not start when you press the (⏻) button.

- Is the door completely closed?

The food is not cooked at all.

- Have you set the timer correctly and/or pressed the (⏻) button?
- Is the door closed?
- Have you overloaded the electric circuit and caused a fuse to blow or a breaker to be triggered?

The food is either overcooked or undercooked.

- Was the appropriate cooking length set for the type of food?
- Was an appropriate power level chosen?

The light bulb is not working.

- The Light bulb should not be replaced in person for safety reasons. Please contact nearest authorised Samsung customer care, to arrange for a qualified engineer to replace the bulb.

The oven causes interference with radios or televisions.

- Slight interference may be observed on televisions or radios when the oven is operating. This is normal. To solve this problem, install the oven away from televisions, radios and aerials.
- If interference is detected by the oven's microprocessor, the display may be reset. To solve this problem, disconnect the power plug and reconnect it. Reset the time.

Smoke and bad smell when initial operating.

- It's a temporary condition by new component heating. Smoke and smell will disappear completely after 10 minutes operation.
  To remove smell more quickly, please operate microwave oven with putting lemon formation or lemon juice in the cabinet.

Sparking and cracking occur inside the oven (arcing).

- Have you used a dish with metal trimmings?
- Have you left a fork or other metal utensil inside the oven?
- Is aluminum foil too close to the inside walls?

If the above guidelines do not enable you to solve the problem, then contact your local SAMSUNG customer service centre.
Please have the following information read;

- The model and serial numbers, normally printed on the rear of the oven
- Your warranty details
- A clear description of the problem

Then contact your local dealer or SAMSUNG aftersales service.

ERROR CODE

"SE" message indicates.

- The "SE" message is Clean the keys and check if there is water on the surface around key. Turn off the microwave oven and try setting again. If it occurs again, call your local SAMSUNG Customer Care Centre.

GE83MDT_XST_DE68-04111E_EN.indd 37 2013-09-05 2:36:38

technical specifications

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

Model	GE83MDT
Power source	220 V ~ 50 Hz
Power consumption Microwave Grill Combined mode	 1200 W 1050 W 2250 W
Output power	100 W / 800 W (IEC-705)
Operating frequency	2450 MHz
Magnetron	OM75P(31)
Cooling method	Cooling fan motor
Dimensions (W x H x D) Outside Oven cavity	 489 x 275 x 355 mm 330 x 211 x 324 mm
Volume	23 liter
Weight Net	 13 kg approx

MEMO

GE83MDT_XST_DE68-04111E_EN.indd 38 2013-09-05 2:36:38

MEMO

MEMO

QUESTIONS OR COMMENTS

COUNTRY	CALL	OR VISIT US ONLINE AT
AUSTRALIA	1300 362 603	www.samsung.com/au
NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz
CHINA	400-810-5858	www.samsung.com
HONG KONG	(852) 3698 4698	www.samsung.com/hk (Chinese) www.samsung.com/hk_en (English)
INDIA	1800 3000 8282 1800 266 8282	www.samsung.com/in
INDONESIA	0800-112-8888 (Toll Free) 021-5699-7777	www.samsung.com/id
JAPAN	0120-327-527	www.samsung.com
MALAYSIA	1800-88-9999	www.samsung.com/my
PHILIPPINES	1-800-10-7267864 [PLDT] 1-800-8-7267864 [Globe landline and Mobile] 02-4222111 [Other landline]	www.samsung.com/ph
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com/sg
THAILAND	0-2689-3232 1800-29-3232	www.samsung.com/th
TAIWAN	0800-329-999	www.samsung.com/tw
VIETNAM	1 800 588 889	www.samsung.com

GE83MDT_XST_DE68-04111E_EN.indd 40 2013-09-05 2:36:39