เตาไมโครเวฟ

คู่มือผู้ใช้

MC32K7055



SAMSUNG

ภาษาไทย

สารบัญ

คำแนะนำเพื่อความปลอดภัย **3**

คำแนะนำสำคัญเพื่อความปลอดภัย 3

การติดตั้ง **8**

อุปกรณ์เสริม 8
สถานที่ติดตั้ง 8
จานหมุน 8

การบำรุงรักษา **9**

การทำความสะอาด 9
การเปลี่ยนชิ้นส่วน (ซ่อมแซม) 9
การดูแลเมื่อไม่ได้ใช้งานเป็นเวลานาน 9

คุณสมบัติเตาอบ **10**

เตาอบ 10
แผงควบคุม 10

การใช้เตาอบ **11**

เตาอบไมโครเวฟทำงานอย่างไร 11
การตรวจสอบว่าเตาไมโครเวฟของคุณทำงานอย่างถูกต้อง 11
การตั้งเวลา 12
การอบ/อุ่นอาหาร 12
ระดับพลังงานและการปรับเวลา 13
การปรับเวลาอบอาหาร 13
การหยุดการอบอาหาร 14
การตั้งค่าโหมดประหยัดพลังงาน 14
การใช้คุณสมบัติ Hot Blast Auto 14
การใช้คุณสมบัติทอดไร้น้ำมัน 21
การใช้คุณสมบัติ เมนูเพื่อสุขภาพ 23
การใช้คุณสมบัติเมนูอาหารไทย 25
การใช้คุณสมบัติ ละลายน้ำแข็ง 31
การใช้คุณสมบัติ แป้งขนมปัง/โยเกิร์ต 32
การใช้จานอบเกรียม 33
Hot Blast 34
การย่าง 34
การเลือกอุปกรณ์เสริม 35
การใช้ไมโครเวฟร่วมกับการย่าง 35
การใช้ไมโครเวฟผสม Hot Blast 36
การใช้คุณสมบัติเปิด/ปิดจานหมุน 38
การใช้ฟังก์ชันล็อคป้องกันเด็ก 38
การปิดเสียงเตือน 38

คู่มือสำหรับอุปกรณ์การทำอาหาร **39**

คู่มือการปรุงอาหาร **40**

การแก้ไขปัญหาและรหัสข้อมูล **51**

การแก้ไขปัญหา 51
รหัสข้อมูล 54

ข้อมูลจำเพาะด้านเทคนิค **55**

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 2 2019-09-11 11:02:08

คำแนะนำเพื่อความปลอดภัย

คำแนะนำสำคัญเพื่อความปลอดภัย

โปรดอ่านให้ละเอียด และเก็บไว้เป็นข้อมูลอ้างอิงในอนาคต

คำเตือน: ห้ามใช้เตาอบหากประตูหรือซีลขอบประตูเสียหาย จนกว่าจะได้รับการซ่อมแซมจากช่างผู้ชำนาญ

คำเตือน: อาจเกิดอันตรายขึ้นได้ หากให้บุคคลที่ไม่ใช่ช่างที่มีความชำนาญเป็นผู้ซ่อมบำรุงซึ่งต้องมีการถอดฝาครอบของเครื่อง ซึ่งเป็นเครื่องป้องกันพลังงานไมโครเวฟ

คำเตือน: โปรดอย่าอุ่นของเหลวและอาหารอื่นในภาชนะที่ปิดสนิท เนื่องจากอาจระเบิดได้

คำเตือน: ไม่ควรให้เด็กใช้เครื่องไมโครเวฟตามลำพัง ยกเว้นกรณีที่เด็กได้รับคำแนะนำเพียงพอที่จะใช้เตาไมโครเวฟอย่างปลอดภัย และทราบถึงอันตรายจากการใช้ผิดวิธี

อุปกรณ์นี้ออกแบบมาสำหรับใช้ภายในครัวเรือนเท่านั้น และไม่ได้ออกแบบมาเพื่อใช้งานเช่น:

- พื้นที่ครัวพนักงานในร้านค้า สำนักงาน และสภาพแวดล้อมการทำงานแบบอื่นๆ
- โรงเรือนเกษตร
- โดยลูกค้าในโรงแรม โมเต็ล และสภาพแวดล้อมที่พักอาศัยอื่นๆ
- สภาพแวดล้อมแบบเบดแอนด์เบรกฟาสต์

โปรดใช้เฉพาะภาชนะที่เหมาะกับเตาไมโครเวฟเท่านั้น

เมื่ออุ่นอาหารในภาชนะพลาสติกหรือภาชนะกระดาษ โปรดระวังว่าอาจจะมีการติดไฟขึ้นในเตาอบ

เตาไมโครเวฟนี้ใช้สำหรับการให้ความร้อนกับอาหารและเครื่องดื่ม การทำให้อาหารหรือผ้าแห้ง และการให้ความร้อนกับแผ่นให้ความร้อน รองเท้าสวมในบ้าน ฟองน้ำ ผ้าหมาด และวัสดุอื่นในลักษณะเดียวกันอาจเกิดความเสี่ยงต่อการบาดเจ็บ ติดไฟ หรือเพลิงไหม้

ถ้าพบว่ามีควัน ให้ปิดหรือถอดปลั๊กอุปกรณ์ และอย่าเปิดประตูเตาอบ เพื่อมิให้เกิดเปลวไฟ

ระหว่างการอุ่นร้อนเครื่องดื่มด้วยไมโครเวฟ จะมีการเดือดที่ล่าช้าออกไป ดังนั้น โปรดใช้ความระมัดระวังเมื่อถือภาชนะ

ควรคนหรือเขย่าสิ่งที่บรรจุอยู่ในขวดนมเด็กและขวดอาหารเด็ก และตรวจสอบอุณหภูมิก่อนที่จะรับประทาน เพื่อลดความเสี่ยงของการลวก

ห้ามอุ่นร้อนหรือให้ความร้อนกับไข่ทั้งเปลือกหรือไข่ต้มในเตาไมโครเวฟ เนื่องจากอาจระเบิดได้ แม้ว่าจะสิ้นสุดการให้ความร้อนของไมโครเวฟแล้วก็ตาม

ทำความสะอาดและขจัดอาหารตกค้างอย่างสม่ำเสมอ

การไม่รักษาความสะอาดเตาอบอาจทำให้เกิดความเสียหายกับพื้นผิว ซึ่งอาจมีผลเสียต่อเตาอย่างมาก และอาจก่อให้เกิดอันตรายได้

เตาไมโครเวฟนี้ออกแบบมาสำหรับใช้งานบนเคาน์เตอร์ (ตั้งอิสระ) เท่านั้น ไม่ควรวางเตาไมโครเวฟไว้ในช่องของตู้

ห้ามใช้ภาชนะที่เป็นโลหะสำหรับอาหารและเครื่องดื่มในระหว่างการปรุงอาหารในไมโครเวฟ

ควรระมัดระวังอย่าทำให้จานหมุนเคลื่อนในขณะที่นำภาชนะออกจากอุปกรณ์

อุปกรณ์นี้ไม่สามารถทำความสะอาดด้วยเครื่องพ่นไอน้ำ

อุปกรณ์นี้ไม่สามารถทำความสะอาดด้วยเครื่องฉีดน้ำ

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 3 2019-09-11 11:02:08

คำแนะนำเพื่อความปลอดภัย

อุปกรณ์นี้ไม่ได้ออกแบบมาสำหรับการติดตั้งในยานพาหนะบนท้องถนน คาราวาน และยานพาหนะในลักษณะเดียวกัน

อุปกรณ์นี้ไม่ได้มีไว้เพื่อใช้งานโดยบุคคล (รวมถึงเด็ก) ที่มีความสามารถของร่างกาย ประสาทสัมผัส หรือจิตใจที่บกพร่อง หรือขาดประสบการณ์และความรู้ ยกเว้นจะได้รับการดูแลหรือคำแนะนำเกี่ยวกับการใช้อุปกรณ์ โดยผู้ที่รับผิดชอบความปลอดภัยของบุคคลเหล่านั้น โปรดดูแลไม่ให้เด็กเล่นกับอุปกรณ์นี้

อุปกรณ์นี้สามารถใช้งานโดยเด็กอายุตั้งแต่ 8 ปีขึ้นไป และบุคคลที่มีความไม่สมบูรณ์ทางกายภาพ ความรู้สึก หรือจิตใจ หรือขาดประสบการณ์หรือความรู้ ถ้ามีการดูแลหรือให้คำแนะนำเกี่ยวกับการใช้อุปกรณ์อย่างปลอดภัย และทำความเข้าใจกับอันตรายที่อาจเกิดขึ้น ห้ามเด็กเล่นกับอุปกรณ์นี้ ห้ามเด็กทำความสะอาดหรือบำรุงรักษาอุปกรณ์โดยไม่มีการดูแล

กรณีที่ปลั๊กไฟของเครื่องใช้ไฟฟ้านี้เกิดเสียหาย ต้องให้ผู้ผลิต ตัวแทนให้บริการ หรือผู้ที่มีความชำนาญเป็นผู้เปลี่ยนสายไฟ เพื่อไม่ให้เกิดอันตราย

เตาอบนี้ควรอยู่ในตำแหน่งและความสูงที่เหมาะสม เพื่อให้สามารถเข้าถึงส่วนภายในเตาอบและบริเวณควบคุมได้ง่าย

ก่อนที่จะใช้เตาอบเป็นครั้งแรก ควรใช้งานเตาอบกับน้ำเป็นเวลา 10 นาที จากนั้นจึงค่อยใช้

ถ้าอุปกรณ์มีเสียงผิดปกติ มีควันหรือกลิ่นไหม้ ให้ถอดปลั๊กทันที และติดต่อศูนย์บริการใกล้บ้าน

เตาไมโครเวฟนี้จะต้องอยู่ในตำแหน่งที่คุณสามารถเอื้อมถึงปลั๊กโดยง่าย

คำเตือน: เมื่อใช้งานอุปกรณ์นี้ในโหมดผสม ไม่ควรให้เด็กใช้งานอุปกรณ์โดยไม่มีผู้ใหญ่ดูแล เนื่องจากจะมีอุณหภูมิสูง

ระหว่างการใช้งานอุปกรณ์จะมีความร้อนสูง โปรดใช้ความระมัดระวังอย่าสัมผัสขดลวดความร้อน

คำเตือน: ชิ้นส่วนที่เข้าถึงได้อาจร้อนจัดหลังจากการใช้งาน ควรดูแลให้พ้นมือเด็ก

ห้ามใช้สารทำความสะอาดที่มีฤทธิ์ขัดถูหรือที่ขัดโลหะเพื่อทำความสะอาดประตูเตาอบ เนื่องจากจะทำให้พื้นผิวเป็นรอยและทำให้แก้วแตกได้

ห้ามใช้เครื่องทำความสะอาดด้วยไอน้ำ

คำเตือน: ตรวจสอบว่าปิดอุปกรณ์แล้ว ก่อนที่จะเปลี่ยนหลอดไฟ เพื่อป้องกันไฟฟ้าช็อต

ห้ามติดตั้งผลิตภัณฑ์นี้โดยมีประตูแบบตกแต่งเพิ่มเติม เพื่อป้องกันความร้อนสูงเกิน

คำเตือน: อุปกรณ์นี้และชิ้นส่วนที่เข้าถึงได้อาจร้อนจัดระหว่างการใช้งาน โปรดใช้ความระมัดระวังอย่าสัมผัสขดลวดความร้อนภายในเตาอบ

ห้ามเด็กอายุต่ำกว่า 8 ขวบใช้อุปกรณ์ ยกเว้นกรณีที่มีผู้ดูแลใกล้ชิด

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 4 2019-09-11 11:02:08

ข้อควรระวัง: ต้องมีผู้ดูแลการทำงานของเครื่องระหว่างกระบวนการปรุงอาหาร ต้องมีผู้ดูแลการทำงานของเครื่องอย่างต่อเนื่องระหว่างกระบวนการปรุงอาหารแบบสั้น

ประตูหรือพื้นผิวภายนอกอาจร้อนจัดเมื่ออุปกรณ์ทำงาน

อุณหภูมิของพื้นผิวที่สัมผัสได้อาจสูงมากเมื่ออุปกรณ์นี้ทำงาน

พื้นผิวอาจมีความร้อนสูงระหว่างการใช้งาน

อุปกรณ์นี้ไม่ได้ออกแบบมาเพื่อใช้งานด้วยเครื่องจับเวลาภายนอกหรือระบบรีโมทคอนโทรลแยกต่างหาก

อุปกรณ์นี้สามารถใช้งานโดยเด็กอายุตั้งแต่ 8 ปีขึ้นไป และบุคคลที่มีความไม่สมบูรณ์ทางกายภาพ ความรู้สึก หรือจิตใจ หรือขาดประสบการณ์หรือความรู้ ถ้ามีการดูแลหรือให้คำแนะนำเกี่ยวกับการใช้อุปกรณ์อย่างปลอดภัย และทำความเข้าใจกับอันตรายที่อาจเกิดขึ้น ห้ามเด็กเล่นกับอุปกรณ์นี้ ห้ามมิให้เด็กเป็นผู้ทำความสะอาดและบำรุงรักษา ยกเว้นเด็กที่มีอายุ 8 ปีขึ้นไปและมีการดูแลโดยผู้ใหญ่

ดูแลให้อุปกรณ์และสายไฟพ้นมือเด็กที่อายุต่ำกว่า 8 ปี

ความปลอดภัยทั่วไป

การแก้ไขหรือซ่อมแซมจะต้องดำเนินการโดยช่างที่มีความชำนาญเท่านั้น

ห้ามให้ความร้อนอาหารหรือของเหลวที่ซีลไว้ในภาชนะสำหรับฟังก์ชันไมโครเวฟ

ห้ามใช้เบนซิน ทินเนอร์ แอลกอฮอล์ หรือเครื่องทำความสะอาดด้วยไอน้ำหรือเครื่องฉีดน้ำแรงดันสูงเพื่อทำความสะอาดเตาอบ

ห้ามติดตั้งเตาอบ: ใกล้กับเครื่องทำความร้อนหรือวัสดุที่ติดไฟง่าย ตำแหน่งที่มีความชื้น น้ำมัน ฝุ่น หรือถูกแสงอาทิตย์หรือน้ำโดยตรง หรือบริเวณที่ก๊าซรั่วไหล หรือพื้นผิวที่ไม่เรียบเสมอกัน

เตาอบนี้ต้องมีการลงกราวด์อย่างเหมาะสมตามข้อกำหนดของท้องถิ่นหรือของประเทศ

โปรดใช้ผ้าแห้งเช็ดสิ่งแปลกปลอมออกจากขั้วหรือผิวสัมผัสของปลั๊กไฟเป็นประจำ

ห้ามดึง บิดงอ หรือวางสิ่งของที่มีน้ำหนักมากทับสายไฟ

ถ้ามีก๊าซรั่วไหล (โพรเพน, LP เป็นต้น) ให้ระบายอากาศทันที อย่าสัมผัสสายไฟ

ห้ามสัมผัสสายไฟด้วยมือที่เปียก

ขณะที่เตาอบกำลังทำงานอยู่ โปรดอย่าปิดเครื่องด้วยการดึงสายไฟออก

ห้ามสอดนิ้วหรือสิ่งแปลกปลอม ถ้ามีสิ่งแปลกปลอมเข้าไปในเตาอบ ให้ดึงสายไฟออก และโปรดติดต่อศูนย์บริการของ Samsung ที่อยู่ใกล้บ้าน

ห้ามใช้แรงกดหรือกระแทกเตาอบ

ห้ามวางเตาอบบนวัตถุที่แตกหักง่าย

โปรดตรวจสอบว่าแรงดันไฟฟ้า ความถี่ และกระแสไฟฟ้าตรงตามข้อมูลจำเพาะของผลิตภัณฑ์

ต่อสายไฟเข้ากับเต้ารับไฟฟ้าที่ผนังอย่างแน่นหนา ห้ามใช้ตัวแปลงปลั๊ก สายต่อ หรือหม้อแปลงไฟฟ้า

ห้ามเกี่ยวสายไฟไว้กับวัตถุที่เป็นโลหะ โปรดตรวจสอบว่าสายไฟอยู่ระหว่างวัตถุหรือด้านหลังเตาอบ

ห้ามใช้ปลั๊กไฟหรือสายไฟที่เสียหาย หรือเต้ารับไฟฟ้าที่หลวม หากปลั๊กไฟหรือสายไฟเสียหาย โปรดติดต่อศูนย์บริการของ Samsung ที่อยู่ใกล้บ้าน

ห้ามฉีดพ่นน้ำบนเตาอบ

ห้ามวางสิ่งของบนเตาอบ ภายใน หรือบนประตูเตาอบ

ห้ามพ่นสารระเหย เช่น ยาฆ่าแมลงลงบนอุปกรณ์

โปรดอย่าเก็บวัสดุที่ติดไฟได้ไว้ในเตาอบ เนื่องจากไอของแอลกอฮอล์อาจสัมผัสส่วนที่ร้อนของเตาอบ โปรดใช้ความระมัดระวังเมื่อให้ความร้อนอาหารหรือเครื่องดื่มที่มีแอลกอฮอล์

เด็กอาจเดินชนหรือถูกประตูหนีบนิ้ว เมื่อเปิด/ปิดประตู โปรดให้เด็กอยู่ห่างๆ

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 5 2019-09-11 11:02:08

คำแนะนำเพื่อความปลอดภัย

คำเตือนเกี่ยวกับไมโครเวฟ

ระหว่างการให้ความร้อนเครื่องดื่มด้วยไมโครเวฟอาจมีการเดือดที่ล่าช้าออกไป โปรดใช้ความระมัดระวังเมื่อถือภาชนะ โปรดตั้งเครื่องดื่มพักไว้อย่างน้อย 20 วินาทีก่อนถือ ถ้าจำเป็น ให้คนในระหว่างให้ความร้อน โปรดคนหลังจากการให้ความร้อนเสมอ

ในกรณีที่ของเหลวลวก โปรดปฏิบัติตามคำแนะนำในการปฐมพยาบาล:

1. แช่บริเวณที่ถูกลวกในน้ำเย็นเป็นเวลาอย่างน้อย 10 นาที
2. พันด้วยผ้าพันแผลที่แห้งและสะอาด
3. โปรดอย่าทาครีม น้ำมัน หรือโลชั่น

เพื่อไม่ให้ถาดหรือชั้นวางเสียหาย โปรดอย่านำถาดหรือชั้นวางไปจุ่มน้ำหลังจากปรุงอาหารเสร็จใหม่นาน

อย่าใช้เตาอบสำหรับการทอดน้ำมัน เนื่องจากจะไม่สามารถควบคุมอุณหภูมิของน้ำมันได้ ซึ่งอาจส่งผลให้น้ำมันที่ร้อนจัดมีความร้อนสูงเกินไป

ข้อควรระวังสำหรับเตาไมโครเวฟ

โปรดใช้ภาชนะสำหรับไมโครเวฟเท่านั้น ห้ามใช้ภาชนะที่เป็นโลหะ ภาชนะที่มีขอบทองหรือเงิน เหล็กเสียบ เป็นต้น

น่าลวดที่ใช้ปิดถุงออก อาจเกิดประกายไฟฟ้า

ห้ามใช้เตาอบเพื่อทำให้หนังสือพิมพ์หรือผ้าแห้ง

ใช้เวลาสั้นลงสำหรับอาหารปริมาณน้อย เพื่อป้องกันความร้อนเกินหรือไหม้

โปรดเก็บสายไฟและปลั๊กไฟให้ห่างจากน้ำและความร้อน

เพื่อไม่ให้เกิดการระเบิด โปรดอย่าให้ความร้อนกับไข่ทั้งเปลือกหรืออุ่นไข่ต้มทั้งเปลือก ห้ามให้ความร้อนกับภาชนะที่ปิดสนิทหรือซีลด้วยสุญญากาศ ถั่ว มะเขือเทศ เป็นต้น

ห้ามปิดหรือบังช่องระบายอากาศด้านหลังของเตาด้วยผ้าหรือกระดาษ อาจทำให้เกิดอันตรายจากไฟไหม้ เตาอบอาจมีความร้อนสูงเกินไป และปิดการทำงานโดยอัตโนมัติ และจะไม่สามารถใช้งานได้จนกว่าจะเย็นลง

โปรดใช้ถุงมือกันความร้อนทุกครั้งเมื่อนำจานออก

คนของเหลวเมื่อถึงครึ่งหนึ่งของเวลาอุ่น หรือหลังจากสิ้นสุดการอุ่นร้อน และพักให้ของเหลวเย็นลงอย่างน้อย 20 วินาทีหลังจากให้ความร้อนเพื่อป้องกันการเดือดและกระเด็น

ยืนห่างจากเตาอบประมาณหนึ่งช่วงแขนเมื่อเปิดประตู เพื่อป้องกันไอน้ำหรืออากาศร้อนลวก

ห้ามใช้งานเตาอบเมื่อไม่มีอาหารอยู่ภายในเตา เตาอบจะปิดลงโดยอัตโนมัติหลังจากผ่านไป 30 นาทีเพื่อความปลอดภัย ขอแนะนำให้วางแก้วน้ำไว้ภายในเตาอบตลอดเวลาเพื่อดูดซับพลังงานไมโครเวฟ ในกรณีที่เตาอบทำงานโดยไม่ได้ตั้งใจ

ติดตั้งเตาอบตามระยะห่างในคู่มือนี้ (ดูที่ การติดตั้งเตาไมโครเวฟ)

โปรดใช้ความระมัดระวังเมื่อต่ออุปกรณ์ไฟฟ้าเข้ากับเต้าเสียบใกล้เตาอบ

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 6 2019-09-11 11:02:08

ข้อควรระวังสำหรับการใช้งานไมโครเวฟ

หากไม่ปฏิบัติตามข้อควรระวังเพื่อความปลอดภัยต่อไปนี้อาจทำให้ได้รับพลังงานไมโครเวฟที่เป็นอันตราย

- ห้ามใช้เตาอบขณะที่ประตูเปิดอยู่ ห้ามดัดแปลงแก้ไขล็อคเพื่อความปลอดภัย (สลักประตู) ห้ามสอดสิ่งแปลกปลอมในช่องของล็อคเพื่อความปลอดภัย
- ห้ามสอดวัตถุใดๆ ระหว่างประตูของเตาอบกับด้านหน้า หรือปล่อยให้มีอาหารหรือสารทำความสะอาดค้างอยู่ที่ผิวหน้าของซีล โปรดดูแลให้พื้นผิวประตูและซีลขอบประตูสะอาดอยู่เสมอ โดยเช็ดด้วยผ้าหมาดและเช็ดอีกครั้งด้วยผ้านุ่มที่แห้งหลังจากการใช้งานทุกครั้ง
- ห้ามใช้เตาอบหากมีความเสียหาย โปรดใช้งานหลังจากได้รับการซ่อมแซมโดยช่างที่มีความชำนาญแล้วเท่านั้น
  สำคัญ: ประตูเตาอบต้องปิดได้อย่างเหมาะสม ประตูเตาอบต้องไม่บิดงอ บานประตูต้องไม่แตกหักหรือหลวม ซีลประตูและพื้นผิวที่ซีลจะต้องไม่เสียหาย
- การปรับเปลี่ยนหรือการซ่อมแซมทั้งหมดต้องดำเนินการโดยช่างที่มีความชำนาญเท่านั้น

การรับประกันอย่างจำกัด

Samsung จะเรียกเก็บค่าบริการซ่อมแซม สำหรับการเปลี่ยนอุปกรณ์เสริมหรือซ่อมจุดบกพร่องที่ไม่ใช่ส่วนสำคัญ ถ้าความเสียหายของอุปกรณ์ และ/หรือความเสียหายหรือการสูญเสียอุปกรณ์เสริมนั้นเกิดจากการกระทำของผู้ใช้ รายการที่ครอบคลุมได้แก่:

- ประตู มือจับ แผงด้านนอก หรือแผงควบคุมที่รอยบุบ รอยขีดข่วน หรือแตกหัก
- ถาดแตกหรือสูญหาย ล้อเลื่อนนำทาง เฟืองวงแหวน หรือตะแกรงลวด

ใช้เตาอบนี้เพื่อวัตถุประสงค์ที่อธิบายในคู่มือคำแนะนำนี้เท่านั้น คำเตือนและคำแนะนำเพื่อความปลอดภัยในคู่มือนี้ไม่ได้ครอบคลุมถึงสภาวะและสถานการณ์ทั้งหมดที่สามารถเกิดขึ้นได้ คุณมีหน้าที่รับผิดชอบที่จะใช้สามัญสำนึก ความระมัดระวังและการใส่ใจเมื่อติดตั้ง บำรุงรักษา และใช้อุปกรณ์ เนื่องจากคำแนะนำในการใช้งานต่อไปนี้ใช้สำหรับหลายรุ่น ลักษณะของเตาอบของคุณอาจแตกต่างจากที่อธิบายในคู่มือนี้ และสัญญาณคำเตือนบางอย่างอาจไม่มีผล ถ้าคุณมีข้อซักถามหรือข้อกังวลใด โปรดติดต่อศูนย์บริการของ Samsung ที่อยู่ใกล้บ้าน หรือหาความช่วยเหลือและข้อมูลออนไลน์ได้ที่ www.samsung.com

โปรดใช้เตาอบนี้เพื่อให้ความร้อนอาหารเท่านั้น ใช้สำหรับการใช้งานภายในครัวเรือนเท่านั้น ห้ามให้ความร้อนกับผ้าทุกประเภทหรือเบาะที่มีไส้ซึ่งาจลุกไหม้ได้ ผู้ผลิตไม่มีส่วนรับผิดต่อความเสียหายที่เกิดจากการใช้เตาอบอย่างไม่ถูกต้องหรือไม่เหมาะสม


เพื่อป้องกันไม่ให้พื้นผิวของเตาอบเกิดความเสียหายและเกิดอันตราย โปรดดูแลรักษาให้เตาอบสะอาดอยู่เสมอ

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 7 2019-09-11 11:02:08

การติดตั้ง


อุปกรณ์เสริม

คุณจะได้รับอุปกรณ์เสริมหลายชนิด เพื่อนำมาใช้ร่วมกับเตาอบ โดยขึ้นอยู่กับรุ่นที่คุณซื้อ




01 **วงแหวน** เพื่อวางไว้บริเวณส่วนกลางของเตาอบ

วัตถุประสงค์: วงแหวนนี้จะรองรับน้ำหนักของจานหมุน




02 **จานหมุน** วางเหนือวงแหวน โดยให้ส่วนกลางสวมพอดีกับเฟือง

วัตถุประสงค์: จานหมุนทำหน้าที่เป็นพื้นที่หลักสำหรับอบอาหาร และสามารถถอดออกทำความสะอาดได้ง่าย

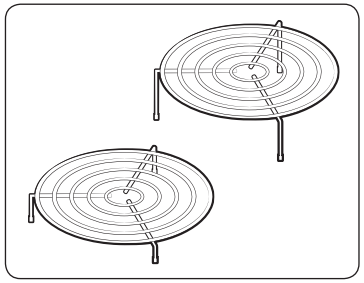

03 **ตะแกรงสูง**, **ตะแกรงต่ำ** เพื่อวางบนจานหมุน

วัตถุประสงค์: คุณสามารถใช้ตะแกรงนี้เพื่ออบอาหารสองจานในเวลาเดียวกัน โดยวางจานเล็กไว้บนจานหมุน และวางจานที่สองบนตะแกรง **คุณสามารถใช้ตะแกรงนี้ในการอบอาหารแบบ ย่าง ใช้ความร้อน และระบบผสม**

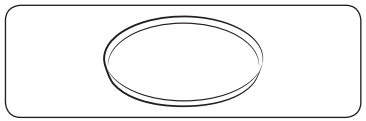


04 **จานอบเกรียม** ดูที่หน้า **33**

วัตถุประสงค์: จานอบเกรียมใช้ในการอบอาหารให้เหลืองเกรียมมากขึ้นในการอบอาหารแบบไมโครเวฟ ย่าง และแบบผสม และทำให้แป้งของอาหารประเภทเพสทรีและพิซซ่ากรอบ

⚠ **ข้อควรระวัง**


ห้ามใช้ไมโครเวฟหากไม่มีวงแหวนและจานหมุน

สถานที่ติดตั้ง

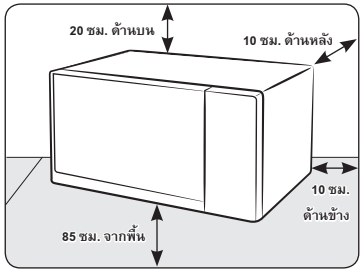

- เลือกพื้นผิวที่เรียบและได้ระดับ อยู่เหนือพื้นประมาณ 85 ซม. พื้นผิวต้องรองรับน้ำหนักของเตาอบได้
- ห้องที่สามารถระบายอากาศได้อย่างปลอดภัย อยู่ห่างจากผนังด้านหลังและผนังด้านข้างอย่างน้อย 10 ซม. และห่างจากผนังด้านบน 20 ซม.
- ห้ามติดตั้งเตาอบในบริเวณที่มีความร้อนและความชื้นสูง เช่น ถัดจากเตาไมโครเวฟหรือเครื่องทำความร้อนอื่นๆ
- โปรดปฏิบัติตามข้อกำหนดของอุปกรณ์จ่ายไฟของเตาอบ ใช้สายสำหรับต่อที่ได้รับการรับรองเท่านั้น ถ้าคุณจำเป็นต้องใช้
- เช็ดด้านในของซีลประตูด้วยผ้าหมาด ก่อนที่จะใช้เตาอบเป็นครั้งแรก

จานหมุน

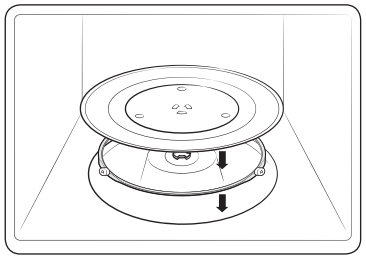

นำวัสดุบรรจุภัณฑ์ออกจากภายในเตาอบ ติดตั้งวงแหวนและจานหมุน ทดลองว่าจานสามารถหมุนได้อย่างอิสระ

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 8 2019-09-11 11:02:09

การบำรุงรักษา


การทำความสะอาด

ทำความสะอาดเตาอบเป็นประจำเพื่อป้องกันสิ่งสกปรกจับตัวที่บนหรือด้านในเตาอบ และโปรดให้การดูแลเป็นพิเศษสำหรับประตู ซีลประตู รวมทั้งจานหมุนและวงแหวน (เฉพาะรุ่นที่มีให้เท่านั้น)
ถ้าไม่สามารถเปิดหรือปิดประตูได้อย่างสะดวก โปรดตรวจสอบว่าซีลประตูมีสิ่งสกปรกจับตัวอยู่หรือไม่ ให้ใช้ผ้านุ่มชุบน้ำยาล้างจานในการทำความสะอาดทั้งด้านในและด้านนอกเตาอบ ล้างให้สะอาดและเช็ดให้แห้ง

วิธีการขจัดสิ่งสกปรกภายในเตาอบที่มีกลิ่นเหม็นและล้างออกยาก

1. ในขณะที่เตาอบว่าง ให้วางถ้วยน้ำมะนาวที่กึ่งกลางจานหมุน
2. อุ่นเตาเป็นเวลา 10 นาที โดยใช้พลังงานสูงสุด
3. เมื่อหมดเวลา ให้รอจนกว่าเตาอบจะเย็นลง จากนั้น ให้เปิดประตูแล้วทำความสะอาดช่องที่ใช้อบอาหาร

วิธีทำความสะอาดรุ่นที่มีขดลวดความร้อนหมุนได้อยู่ภายใน

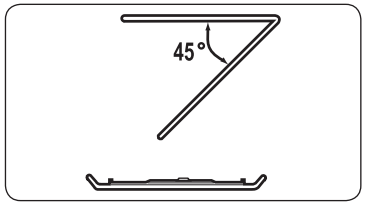

ในการทำความสะอาดส่วนบนของช่องที่ใช้อบอาหาร ให้ดึงขดลวดความร้อนด้านบนลงประมาณ 45° ดังที่ปรากฏในภาพ วิธีนี้จะช่วยให้สามารถทำความสะอาดด้านบนได้ เมื่อทำความสะอาดเสร็จแล้ว ให้ดันขดลวดความร้อนกลับเข้าที่

⚠ ข้อควรระวัง

- ดูแลประตูและซีลประตูให้สะอาดอยู่เสมอ และตรวจสอบว่าประตูสามารถเปิดและปิดได้สะดวก มิฉะนั้น อาจทำให้อายุการใช้งานเตาอบสั้นลง
- โปรดระวังอย่าให้น้ำกระเซ็นลงไปในช่องระบายอากาศของเตาอบ
- ห้ามใช้สารที่มีฤทธิ์ขัดถูหรือสารเคมีในการทำความสะอาด
- หลังจากใช้งานเตาอบทุกครั้ง ให้ใช้น้ำยาล้างอ่อนๆ เพื่อทำความสะอาดช่องภายในเตาอบ หลังจากรอให้เตาอบเย็นลงแล้ว

การเปลี่ยนชิ้นส่วน (ซ่อมแซม)

⚠ คำเตือน

เตาอบนี้ไม่มีชิ้นส่วนใดที่ผู้ใช้สามารถนำออกได้ โปรดอย่าเปลี่ยนชิ้นส่วนหรือซ่อมแซมเตาอบด้วยตนเอง

- ถ้าคุณพบปัญหาที่บริเวณบานพับ ซีล และ/หรือประตู โปรดติดต่อช่างที่มีประสบการณ์หรือศูนย์บริการของ Samsung ที่อยู่ใกล้บ้านเพื่อรับความช่วยเหลือด้านเทคนิค
- ถ้าคุณต้องการเปลี่ยนหลอดไฟ โปรดติดต่อศูนย์บริการของ Samsung ที่อยู่ใกล้บ้าน โปรดอย่าเปลี่ยนชิ้นส่วนด้วยตนเอง
- ถ้าคุณพบปัญหาที่บริเวณตัวเครื่องด้านนอกเตาอบ ให้ถอดสายไฟออกจากแหล่งพลังงาน แล้วติดต่อศูนย์บริการของ Samsung ที่อยู่ใกล้บ้าน


การดูแลเมื่อไม่ได้ใช้งานเป็นเวลานาน

ถ้าคุณไม่ได้ใช้งานเตาอบเป็นระยะเวลานาน ให้ถอดปลั๊กไฟออกและเคลื่อนย้ายเตาอบไปไว้ในที่แห้งและไม่มีฝุ่น ฝุ่นและความชื้นที่ก่อตัวภายในเตาอบอาจมีผลต่อประสิทธิภาพของเตาอบ

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 9 2019-09-11 11:02:09


คุณสมบัติเตาอบ

เตาอบ

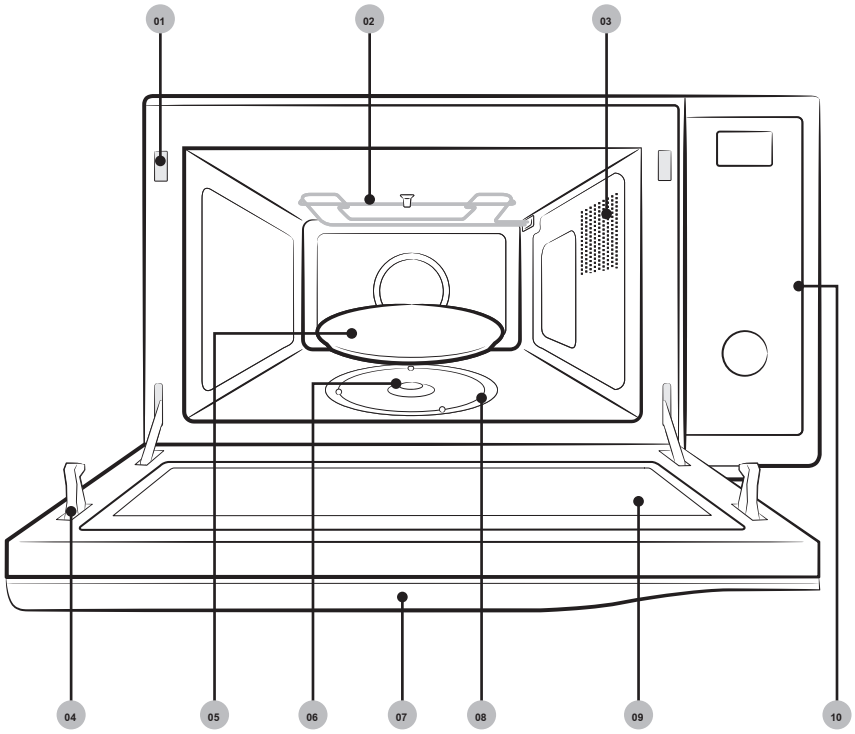

01	ช่องล็อคเพื่อความปลอดภัย	**02**	ขดลวดความร้อน	**03**	ช่องระบายอากาศ
04	สลักประตู	**05**	จานหมุน	**06**	เฟืองหมุน
07	ด้ามจับประตู	**08**	วงแหวน	**09**	ประตู
10	แผงควบคุม				

แผงควบคุม

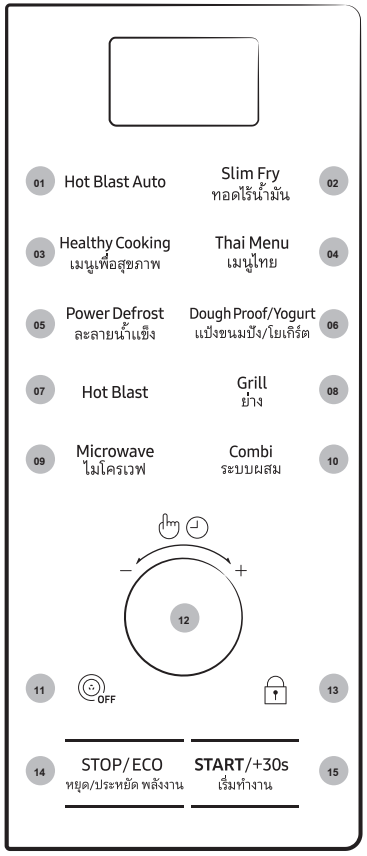

01	ปุ่ม Hot Blast Auto
02	ปุ่ม ทอดไร้น้ำมัน
03	ปุ่ม เมนูเพื่อสุขภาพ
04	ปุ่ม เมนูไทย
05	ปุ่ม ละลายน้ำแข็ง
06	ปุ่ม แป้งขนมปัง/โยเกิร์ต
07	ปุ่ม Hot Blast
08	ปุ่ม ย่าง
09	ปุ่ม ไมโครเวฟ
10	ปุ่ม ระบบผสม
11	ปุ่มเปิด/ปิดจานหมุน
12	ปุ่มเลือกหลายฟังก์ชัน
13	ปุ่มล็อคป้องกันเด็ก
14	ปุ่ม หยุด/ประหยัดพลังงาน
15	ปุ่ม เริ่มทำงาน

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 10 2019-09-11 11:02:09


การใช้เตาอบ

เตาอบไมโครเวฟทำงานอย่างไร

ไมโครเวฟเป็นคลื่นแม่เหล็กไฟฟ้าที่มีความถี่สูง พลังงานที่ปล่อยออกมาทำให้อาหารสุกหรือร้อนขึ้น โดยไม่มีการเปลี่ยนรูปร่างหรือสี คุณสามารถใช้เตาไมโครเวฟเพื่อ:

- ละลายน้ำแข็ง
- อุ่นอาหาร
- อบอาหาร

หลักการอบอาหาร

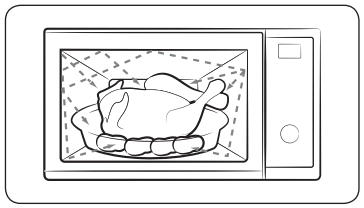

1. ไมโครเวฟที่เกิดจากแม็กเนตรอนจะสะท้อนอยู่ในช่องเตาอบ และกระจายอย่างเป็นระเบียบ ในขณะที่อาหารหมุนอยู่บนจานหมุน ทำให้อาหารสุกทั่วถึงกัน
2. อาหารจะดูดซับไมโครเวฟลึกประมาณ 1 นิ้ว (2.5 ซม.) จากนั้นการอบอาหารจะเกิดขึ้นต่อไป เมื่อมีการถ่ายเทความร้อนภายในอาหาร
3. เวลาในการอบอาหารจะขึ้นอยู่กับภาชนะใส่อาหาร และคุณสมบัติของอาหารนั้นๆ:
   - ปริมาณและความหนาแน่น
   - ปริมาณน้ำภายในอาหาร
   - อุณหภูมิเริ่มต้น (มีการแช่เย็นไว้หรือไม่)

ข้อสำคัญ

เนื่องจากส่วนกลางของอาหารสุกเนื่องจากการถ่ายเทความร้อน การอบอาหารจึงเกิดขึ้นแม้ว่าคุณจะนำอาหารออกจากเตาแล้วก็ตาม ดังนั้น โปรดปฏิบัติตามเวลาพักที่แนะนำในตำราอาหารและในคู่มือนี้เพื่อให้:

- อาหารสุกทั่วถึงกันจนถึงด้านใน
- อาหารมีอุณหภูมิเท่ากันทั้งหมด

การตรวจสอบว่าเตาไมโครเวฟของคุณทำงานอย่างถูกต้อง

กระบวนการง่ายๆ ต่อไปนี้ช่วยให้คุณสามารถตรวจสอบว่าเตาไมโครเวฟของคุณทำงานถูกต้องอยู่เสมอ หากคุณมีข้อสงสัย โปรดอ่านข้อมูลในหัวข้อ "**การแก้ไขปัญหา**" ในหน้า 51 - 54

หมายเหตุ

เตาอบจะต้องต่อเข้ากับปลั๊กไฟที่ผนังอย่างถูกต้อง จานหมุนจะต้องอยู่ในตำแหน่งที่ถูกต้องในเตา ถ้ามีการใช้พลังงานนอกเหนือจากระดับสูงสุด (100 % - 900 วัตต์) น้ำจะใช้เวลาเดือดนานขึ้น

เปิดประตูเตาอบโดยดึงที่จับที่ด้านบนของประตู

วางแก้วใส่น้ำไว้บนจานหมุน ปิดประตู



กดปุ่มโหมดไมโครเวฟ และกำหนดเวลาเป็น 4 หรือ 5 นาที โดยกดปุ่ม **เริ่มทำงาน**

ผลลัพธ์: เตาจะให้ความร้อนกับน้ำเป็นเวลา 4 หรือ 5 นาที น้ำควรจะเดือด

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 11 2019-09-11 11:02:10

การใช้เตาอบ


การตั้งเวลา

เมื่อมีการจ่ายไฟจะมีสัญญาณ “88:88” และจากนั้นเป็น “12:00” ปรากฏบนหน้าจอแสดงผลโดยอัตโนมัติ
โปรดตั้งเวลาปัจจุบัน ซึ่งสามารถแสดงเวลาในระบบ 24 หรือ 12 ชั่วโมง คุณจะต้องตั้งเวลาของนาฬิกา:


- เมื่อติดตั้งเตาไมโครเวฟเป็นครั้งแรก
- หลังจากไฟฟ้าดับ

หมายเหตุ

อย่าลืมปรับเวลา ถ้าคุณต้องสลับระหว่างเวลาของฤดูร้อนและฤดูหนาว

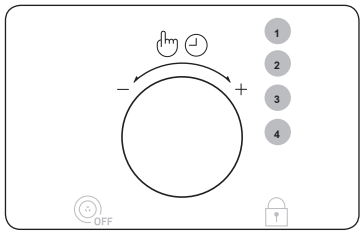

1. กด **ปุ่มเลือกหลายฟังก์ชัน**
2. หมุน**ปุ่มเลือกหลายฟังก์ชัน**เพื่อตั้งค่าประเภทการแสดงเวลา (12H หรือ 24H)
3. กด**ปุ่มเลือกหลายฟังก์ชัน**เพื่อให้การตั้งค่าเสร็จสมบูรณ์
4. หมุน**ปุ่มเลือกหลายฟังก์ชัน**เพื่อตั้งชั่วโมง

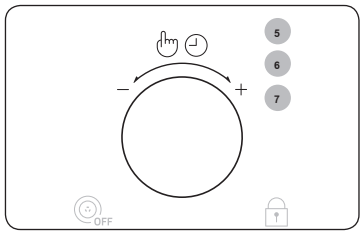

5. กด **ปุ่มเลือกหลายฟังก์ชัน**
6. หมุน**ปุ่มเลือกหลายฟังก์ชัน**เพื่อตั้งนาที
7. เมื่อนาฬิกาแสดงเวลาถูกต้องแล้ว ให้กด**ปุ่มเลือกหลายฟังก์ชัน**เพื่อให้นาฬิกาเริ่มเดิน

   ผลลัพธ์: เวลานี้จะปรากฏเมื่อใดก็ตามที่คุณไม่ได้ใช้เตาไมโครเวฟ

การอบ/อุ่นอาหาร

ขั้นตอนต่อไปนี้กล่าวถึงการอบและการอุ่นอาหาร

ข้อสำคัญ

โปรดตรวจสอบการตั้งค่าการอบอาหารทุกครั้ง ก่อนที่จะปล่อยให้เตาอบทำงานตามลำพัง

เปิดประตู วางอาหารที่ส่วนกลางของจานหมุน ปิดประตู ห้ามเปิดเครื่อง หากเตาอบว่างเปล่า




1. กดปุ่ม **ไมโครเวฟ**

   ผลลัพธ์: หน้าจอจะแสดงผลดังนี้:

   (โหมดไมโครเวฟ)

   900 วัตต์ (กำลังไฟฟ้า)

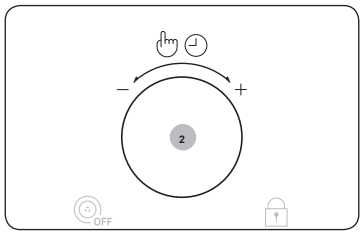

2. หมุน**ปุ่มเลือกหลายฟังก์ชัน**จนกว่าระดับพลังงานที่ต้องการปรากฏขึ้นในขั้นตอนนี้ ให้กด**ปุ่มเลือกหลายฟังก์ชัน**เพื่อตั้งค่าระดับพลังงาน
   - ถ้าไม่ตั้งค่าระดับพลังงานภายใน 5 วินาที เครื่องจะเปลี่ยนเป็นขั้นตอนการตั้งค่าเวลาปรุงอาหารโดยอัตโนมัติ



3. ตั้งค่าเวลาปรุงอาหารโดยหมุน**ปุ่มเลือกหลายฟังก์ชัน**

   ผลลัพธ์: เครื่องจะแสดงเวลาอบอาหารขึ้น

4. กดปุ่ม **เริ่มทำงาน**

   ผลลัพธ์: ไฟของเตาอบจะสว่างขึ้น และจานหมุนจะเริ่มหมุน การอบจะเริ่มต้น และเมื่อเสร็จแล้ว

   1) เตาอบจะส่งเสียงเตือน 4 ครั้ง
   2) สัญญาณเตือนสิ้นสุดการทำงานจะส่งเสียง 3 ครั้ง (นาทีละครั้ง)
   3) เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 12 2019-09-11 11:02:10

ระดับพลังงานและการปรับเวลา

ฟังก์ชันระดับพลังงานช่วยให้คุณสามารถปรับปริมาณพลังงานที่จะใช้ พร้อมทั้งเวลาที่ใช้ในการอบหรืออุ่นอาหาร ตามชนิดและปริมาณของอาหารนั้น

คุณสามารถเลือกระดับพลังงานได้ถึงหกระดับ

ระดับพลังงาน	เปอร์เซ็นต์	กำลังไฟฟ้า
สูง	100 %	900 วัตต์
สูงปานกลาง	67 %	600 วัตต์
ปานกลาง	50 %	450 วัตต์
ต่ำปานกลาง	33 %	300 วัตต์
ละลายน้ำแข็ง	20 %	180 วัตต์
ต่ำ	11 %	100 วัตต์

เวลาอบอาหารที่ระบุในตำราอาหารและในคู่มือนี้จะสอดคล้องกับระดับพลังงานที่ระบุไว้

ถ้าคุณเลือก...	เวลาการอบอาหารจะเป็น...
ระดับพลังงานสูง	ลดลง
ระดับพลังงานต่ำ	เพิ่มขึ้น

การปรับเวลาอบอาหาร

คุณสามารถเพิ่มเวลาในการอบอาหาร โดยกดปุ่ม **เริ่มทำงาน** หนึ่งครั้งสำหรับการเพิ่ม 30 วินาที

- ดูความคืบหน้าของการอบเมื่อใดก็ได้ โดยเปิดประตูของเตาอบ
- เพิ่มเวลาที่เหลือในการปรุงอาหาร



วิธีที่ 1

ในการเพิ่มเวลาปรุงอาหารระหว่างการทำงานของเครื่อง ให้กดปุ่ม **เริ่มทำงาน** เพื่อเพิ่มเวลาครั้งละ 30 วินาที

- ตัวอย่าง: หากต้องการเพิ่มเวลาอบอีกสามนาที ให้กดปุ่ม **เริ่มทำงาน** หกครั้ง

วิธีที่ 2

เพียงหมุน **ปุ่มเลือกหลายฟังก์ชัน** เพื่อปรับเวลาในการปรุงอาหาร

- ในการเพิ่มเวลาปรุงอาหาร ให้หมุนไปทางขวา และเมื่อต้องการลดเวลาปรุงอาหาร ให้หมุนไปทางซ้าย

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 13 2019-09-11 11:02:10

การหยุดการอบอาหาร

คุณสามารถหยุดการอบอาหารได้ตลอดเวลา เพื่อ:

- ตรวจดูอาหาร
- พลิกด้านหรือคนอาหาร
- พักอาหาร

ในการหยุดการอบอาหาร...	จากนั้น...
ชั่วคราว	เปิดประตูหรือกดปุ่ม **หยุด/ประหยัดพลังงาน** หนึ่งครั้ง **ผลลัพธ์:** การอบจะหยุดลง หากต้องการปรุงอาหารต่อ ให้ปิดประตูอีกครั้งและกดปุ่ม **เริ่มทำงาน**
โดยสิ้นเชิง	กดปุ่ม **หยุด/ประหยัดพลังงาน** หนึ่งครั้ง **ผลลัพธ์:** การอบจะหยุดลง หากคุณต้องการยกเลิกการตั้งค่าการอบ ให้กดปุ่ม **หยุด/ประหยัดพลังงาน** อีกครั้ง

การตั้งค่าโหมดประหยัดพลังงาน

เตาอบมีโหมดประหยัดพลังงาน



- กดปุ่ม **หยุด/ประหยัดพลังงาน**
  ผลลัพธ์: จอแสดงผลดับ
- หากต้องการออกจากโหมดประหยัดพลังงาน ให้เปิดประตูหรือกดปุ่ม **หยุด/ประหยัดพลังงาน** จากนั้นจอแสดงผลจะแสดงเวลาปัจจุบัน ขณะนี้เตาอบพร้อมใช้งานแล้ว

หมายเหตุ

ฟังก์ชันประหยัดพลังงานอัตโนมัติ

ถ้าคุณไม่เลือกฟังก์ชันใดเลยเมื่ออุปกรณ์อยู่ระหว่างการตั้งค่าหรือทำงานโดยมีสถานะหยุดชั่วคราว ฟังก์ชันจะถูกยกเลิก และนาฬิกาจะแสดงผลหลังจากผ่านไป 25 นาที

ไฟของเตาอบจะดับลงหลังจากผ่านไป 5 นาที ในสถานะประตูเปิด


การใช้คุณสมบัติ Hot Blast Auto

คุณสมบัติ **Hot Blast Auto** ประกอบด้วยเวลาในการปรุงอาหารที่กำหนดไว้แล้ว 22 แบบ โดยคุณไม่จำเป็นต้องตั้งเวลาอบหรือระดับพลังงานอีก คุณสามารถปรับปริมาณอาหารด้วยการหมุนปุ่ม**ปุ่มเลือกหลายฟังก์ชัน**


ข้อสำคัญ

ใช้กับผลิตภัณฑ์สำหรับไมโครเวฟเท่านั้น

เปิดประตู วางอาหารที่ส่วนกลางของจานหมุน ปิดประตู



1. กดปุ่ม **Hot Blast Auto**

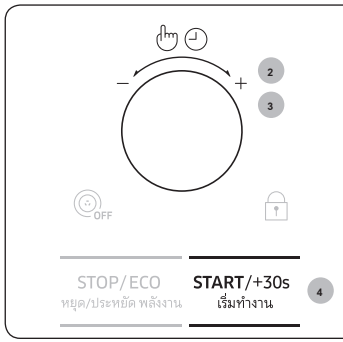

2. เลือกประเภทของอาหารที่ปรุง ด้วยการหมุน**ปุ่มเลือกหลายฟังก์ชัน** โปรดดูตารางในหน้าถัดไป เพื่อดูคำอธิบายการตั้งค่าต่างๆ ในขั้นตอนนี้ ให้กด**ปุ่มเลือกหลายฟังก์ชัน** เพื่อเลือกประเภทอาหาร
3. เลือกปริมาณอาหารด้วยการหมุน**ปุ่มเลือกหลายฟังก์ชัน**
4. กดปุ่ม **เริ่มทำงาน**
   ผลลัพธ์: เตาอบจะอบอาหารตามการตั้งค่าล่วงหน้าที่เลือกไว้ และเมื่อเสร็จแล้ว
   1) เตาอบจะส่งเสียงเตือน 4 ครั้ง
   2) สัญญาณเตือนสิ้นสุดการทำงานจะส่งเสียง 3 ครั้ง (นาทีละครั้ง)
   3) เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 14 2019-09-11 11:02:11

คู่มือ Hot Blast

ตารางต่อไปนี้จะแสดงโปรแกรมของ **Hot Blast Auto** 22 แบบ รวมทั้งปริมาณและคำแนะนำที่เหมาะสม โปรแกรมเหล่านี้จะทำงานโดยการผสมไมโครเวฟ ระบบย่าง และขดลวดไอร้อน

รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
H1 **พิซซ่าแช่แข็ง**	400-450 กรัม	นำบรรจุภัณฑ์ออก และวางพิซซ่าบนตะแกรงต่ำ หลังจากอบเสร็จ พักอาหารเป็นเวลา 2-3 นาที
H2 **โฮมเมดพิซซ่า**	500-550 กรัม	• ส่วนประกอบ แป้งพิซซ่า (200-250 กรัม) แป้งสาลีทำขนมปัง 150 กรัม, ยีสต์แห้ง 3 กรัม, น้ำมันมะกอก 0.5 ช้อนโต๊ะ, น้ำอุ่น 100 มล., น้ำตาลและเกลือ 0.5 ช้อนโต๊ะ ส่วนที่ใช้ราดหน้า ผักหั่นแว่น 100 กรัม, มะเขือเทศบด 100 กรัม, มอสซาเรลลาชีส 80-100 กรัม • วิธีการ ใส่แป้ง ยีสต์ น้ำมัน เกลือ และน้ำอุ่นในถ้วยและผสมให้เป็นแป้งค่อนข้างเปียก นวดในเครื่องตีแป้งหรือใช้มือนวด 5-10 นาที ปิดฝาและทิ้งให้ขึ้นฟูเป็นเวลา 30 นาที คลึงเป็นแผ่นและแผ่บนจานอบเกรียม ทามะเขือเทศบดบนแป้ง และใส่ผัก โรยชีสให้เสมอกันด้านบน วางบนตะแกรงแบบสูง หลังจากอบเสร็จ พักอาหารเป็นเวลา 2-3 นาที

รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
H3 **โฮมเมดลาซานญ่า**	500-600 กรัม 1000-1100 กรัม	• ส่วนผสม **(1000-1100 กรัม)** น้ำมันมะกอก 2 ช้อนโต๊ะ, เนื้อสับ 300 กรัม, ซอสมะเขือเทศ 200 กรัม, น้ำสต็อคเนื้อ 100 มล., แผ่นลาซานญ่าแห้ง 150 กรัม (8 แผ่น), หัวหอมใหญ่ 1 หัว (สับ), พาร์ซลีย์แห้ง ออริกาโน ใบเบซิลอย่างละ 1 ช้อนชา, มอสซาเรลลาชีสขูด 200 กรัม - ในกรณีที่ใช้ 500-650 กรัม โปรดลดส่วนผสมลงครึ่งหนึ่ง • วิธีการ ซอส: อุ่นน้ำมันในกระทะ จากนั้นปรุงเนื้อสับและหัวหอมสับเป็นเวลาประมาณ 10 นาทีจนกระทั่งเหลืองทั่วกัน เทซอสมะเขือเทศและน้ำสต็อคเนื้อ เติมเครื่องเทศแห้ง รอให้เดือด จากนั้นหรี่ไฟอ่อนเป็นเวลา 30 นาที ปรุงแผ่นลาซานญ่าตามคำแนะนำบนบรรจุภัณฑ์ วางแผ่นแป้ง ซอสเนื้อ และชีสซ้อนสลับกันเป็นชั้นๆ จากนั้นโรยมอสซาเรลลาชีสที่เหลือให้ทั่วกันที่ด้านบนของแผ่นแป้ง จากนั้นวางบนตะแกรงแบบต่ำ หลังจากอบเสร็จ พักอาหารเป็นเวลา 2-3 นาที

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 15 2019-09-11 11:02:11

รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
H4 **โฮมเมดกราแตง**	500-600 กรัม 900-1000 กรัม	• ส่วนผสม **(900-1000 กรัม)** มันฝรั่ง 640 กรัม, นมสด 80 มล., ครีม 80 มล., ไข่ไก่ตีให้เข้ากัน 40 กรัม, เกลือ พริกไทย ลูกจันทน์เทศ อย่างละ 1 ช้อนชา, มอสซาเรลลาชีสขูด 120 กรัม, เนย, ไทม์ - ในกรณีที่ใช้ 500-600 กรัม โปรดลดส่วนผสมลงครึ่งหนึ่ง • วิธีการ ปอกเปลือกมันฝรั่งและฝานเป็นแว่นหนา 3 มม. ทาเนยให้ทั่วพื้นผิวของจานกราแตง วางมันฝรั่งหั่นแว่นบนผ้าสะอาด และปิดไว้ด้วยผ้าสะอาดขณะที่เตรียมส่วนผสมที่เหลือ ผสมส่วนผสมที่เหลือยกเว้นชีสขูดในชามขนาดใหญ่ คนให้เข้ากัน วางชิ้นมันฝรั่งเป็นชั้นๆ ให้ซ้อนเหลื่อมกันเล็กน้อย และเทส่วนผสมทับมันฝรั่ง โรยชีสขูดไว้ด้านบนให้เสมอกันและวางบนตะแกรงต่ำ หลังจากปรุงเสร็จ โรยใบไทม์สดเล็กน้อยและเสิร์ฟ หลังจากอบเสร็จ พักอาหารเป็นเวลา 2-3 นาที
H5 **เฟรนช์ฟรายส์แช่แข็ง**	200-250 กรัม 300-350 กรัม	วางมันฝรั่งทอดแช่แข็งสำหรับเตาอบให้เสมอกันบนจานอบเกรียม นำจานไปวางบนตะแกรงแบบสูง หลังจากอบเสร็จ พักอาหารเป็นเวลา 2-3 นาที
H6 **ปีกไก่ทอดรสเผ็ดแช่แข็ง**	400-450 กรัม 500-550 กรัม	วางปีกไก่สำเร็จรูปแช่แข็ง (ปรุงสำเร็จ) บนจานอบเกรียม นำจานไปวางบนตะแกรงแบบสูง หลังจากอบเสร็จ พักอาหารเป็นเวลา 2-3 นาที
H7 **ไก่ชิ้นอบ**	500-600 กรัม 900-1000 กรัม	ชั่งน้ำหนักปีกไก่ แล้วใช้แปรงทาน้ำมันและเครื่องเทศให้ทั่ว วางบนตะแกรงสูงให้เสมอกัน เมื่อได้ยินสัญญาณเตือน ให้พลิกไก่แล้วกดปุ่มเริ่มทำงานเพื่อปรุงต่อ หลังจากอบเสร็จ พักอาหารเป็นเวลา 2-3 นาที

รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
H8 **ไก่อบ**	1100-1200 กรัม 1200-1300 กรัม	ใช้แปรงทาน้ำมันและเครื่องเทศให้ทั่วเนื้อไก่ วางด้านหน้าอกลง ที่กลางตะแกรงต่ำ เมื่อได้ยินสัญญาณเตือน ให้ใช้ปากคีบพลิกไก่แล้วกดปุ่มเริ่มทำงานเพื่อปรุงต่อ หลังจากอบเสร็จ พักอาหารเป็นเวลา 2-3 นาที
H9 **พายเนื้อ**	500-600 กรัม	• ส่วนประกอบ เนื้อวัว 200 กรัม, หัวลูกเต๋า, น้ำมันมะกอก 1 ช้อนโต๊ะ, หัวหอมใหญ่ ½ หัว (ฝานเป็นแว่น), เห็ด 80 กรัม (หั่นแว่น), พาร์ซลีย์และไทม์สับละเอียดอย่างละ 1 ช้อนโต๊ะ, ซอสวูสเตอร์ไชร์ 1 ช้อนโต๊ะ, เกลือและพริกไทย, แป้ง 2 ช้อนโต๊ะ, น้ำสต๊อกเนื้อร้อน 100 มล., แป้งเพสทรีสำเร็จรูป 120 กรัม, ไข่แดงตี 1 ฟอง • วิธีการ โรยแป้ง เกลือและพริกไทยบนเนื้อ ทอดน้ำมันในกระทะ คนบ่อยๆ จนกระทั่งเหลือง ใส่หัวหอม เห็ด พาร์ซลีย์ ไทม์ ซอสวูสเตอร์ไชร์และน้ำสต๊อกเนื้อ เมื่อเดือด หรี่ไฟอ่อนทิ้งไว้ประมาณหนึ่งชั่วโมง เทส่วนผสมของไส้ในจานสำหรับเตาอบ และปิดด้วยแผ่นแป้งพาย และกดขอบเข้าด้วยกันเพื่อซีล ตกแต่งขอบของเพสทรีด้วยมีดและส้อม ตัดเป็นรูปกากบาทที่ด้านบน และทาด้วยไข่แดงที่ตีไว้ วางบนตะแกรงแบบต่ำ หลังจากอบเสร็จ พักอาหารเป็นเวลา 2-3 นาที

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 16 2019-09-11 11:02:11

รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
H10 **โฮมเมดมินิดีช**	400-500 กรัม	• ส่วนประกอบ เพสทรี แป้งอเนกประสงค์ 200 กรัม, เนย 80 กรัม, ไข่ 1 ฟอง, เบคอนหั่นสี่เหลี่ยม 30 กรัม, ครีม 60 กรัม, เครมเฟรช 60 กรัม, ไข่ 2 ฟอง, ชีสขูด 40 กรัม, เกลือและพริกไทย • วิธีการ ในการทำเพสทรี ให้ใส่แป้ง เนย และไข่ในโถ และผสมเป็นแป้งเพสทรีนุ่ม และพักไว้ในตู้เย็นเป็นเวลา 30 นาที คลึงแป้งเพสทรีและวางในพิมพ์โลหะที่ทาเนยไว้ (เช่น พิมพ์มัฟฟินสำหรับมินิดีช 6 ชิ้น) ผสมครีม เบคอนหั่นสี่เหลี่ยม เครมเฟรช ไข่ ชีส เกลือ พริกไทย และเทส่วนผสมในพิมพ์ วางบนตะแกรงแบบต่ำ หลังจากปรุงเสร็จ พักอาหารเป็นเวลา 5 นาที
H11 **กุ้งย่างพริกไทยดำ**	1-2 คน	• ส่วนประกอบ กุ้งลายเสือ 400 กรัม, พริกไทยดำ 1 ช้อนโต๊ะ, พริกหวานสามสีหั่นลูกเต๋าเล็ก ½ ถ้วย, รากผักชี 1-2 ราก, กระเทียมไทย 5 กลีบ, พริกปน 1 ช้อนชา, น้ำตาลทรายแดง ½ ช้อนโต๊ะ, เกลือ ½ ช้อนชา, น้ำมันมะกอก 2 ช้อนโต๊ะ, ไวน์ขาว 2 ช้อนโต๊ะ • วิธีการ ตีรากผักชี กระเทียม พริกไทย หัวหอม ผ่ากุ้งเป็นสองซีก หมักด้วยส่วนผสมทั้งหมดเป็นเวลา 15 นาที วางบนตะแกรงสูงในเตาไมโครเวฟ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือน ให้นำออกมาและผสมซอสหมักและพริกหวาน ใส่ในเตาอบและกดปุ่มเริ่มทำงานอีกครั้ง หลังจากปรุงเสร็จ เสิร์ฟกับกุ้ง

รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
H12 **กุ้งย่างซอสสามรส**	2 คน	• ส่วนประกอบ กุ้งแม่น้ำหรือกุ้งลายเสือ 400 กรัม, พริกปน 2 ช้อนชา, เกลือ ¼ ช้อนชา, พริกไทย ¼ ช้อนชา, น้ำมันมะกอก 1 ช้อนโต๊ะ, น้ำปลา 1 ช้อนโต๊ะ, น้ำตาลปี๊บ 1½ ช้อนโต๊ะ, น้ำมะขาม 3 ช้อนโต๊ะ, หัวหอมใหญ่ ½ ถ้วย, มะเขือเทศหั่น ½ ถ้วย, น้ำมัน 1 ช้อนโต๊ะ, หัวหอมแดงซอยบางๆ ½ ถ้วย • วิธีการ ล้างและผ่ากุ้งเป็นสองซีก หมักด้วยเกลือ พริกไทย พริกปน และน้ำมันมะกอกเป็นเวลา 15 นาที วางบนตะแกรงสูงในเตาไมโครเวฟ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือน ให้นำออก คลุกหัวหอมกับน้ำมัน ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือนครั้งที่ 2 ให้คลุกส่วนผสม แล้วนำเข้าเตาอบ และกดปุ่มเริ่มทำงานอีกครั้ง เมื่อมีเสียงเตือนครั้งที่ 3 นำออกมาและผสมน้ำปลาและน้ำตาลปี๊บเข้าด้วยกัน เติมหัวหอมและมะเขือเทศ วางอาหารในเตาไมโครเวฟ หลังจากปรุงเสร็จ นำออกมาราดน้ำมะขาม เทซอสและหอมเจียวบนกุ้งเผาก่อนรับประทาน

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 17 2019-09-11 11:02:11

การใช้เตาอบ

รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
H13 **แซลมอนย่างซอสมะนาว**	1-2 คน	• ส่วนประกอบ เนื้อปลาแซลมอน 350 กรัม, ตะไคร้ซอยละเอียด 1 ต้น, เกลือ ½ ช้อนชา, พริกป่น ½ ช้อนชา, น้ำมันมะกอก 1 ช้อนโต๊ะ **ซอส** ไข่แดง 2 ฟอง, นมข้นจืด 2 ช้อนโต๊ะ, น้ำมะนาว 2 ช้อนโต๊ะ, เกลือ 1 ช้อนชา, มายองเนส 2 ช้อนโต๊ะ • วิธีการ หมักแซลมอนกับเกลือ พริกไทย น้ำมันมะกอก และตะไคร้เป็นเวลา 10 นาที วางบนตะแกรงสูงและใส่ในเตาไมโครเวฟ เมื่อมีเสียงเตือน ให้พลิกแล้วกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือนครั้งที่ 2 ให้นำออก ผสมซอสโดยคนส่วนผสมทั้งหมดให้เข้ากัน ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน หลังจากปรุงเสร็จแล้ว ให้รับประทานพร้อมกับแซลมอน
H14 **ปลาอินทรีย่างน้ำปลา**	2-4 คน	• ส่วนประกอบ ปลาอินทรีย์สดหั่นชิ้น 400 กรัม, น้ำปลา ½ ถ้วย, น้ำตาล ½ ช้อนโต๊ะ, พริกไทย ½ ช้อนชา, น้ำ ½ ถ้วย, น้ำมัน 1 ช้อนโต๊ะ • วิธีการ ผสมส่วนผสมสำหรับหมักปลาอินทรีย์ไว้ 1 ชั่วโมง และตากแดด 3-4 ชั่วโมง วางบนตะแกรงสูงในเตาไมโครเวฟ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือน ให้พลิกแล้วกดปุ่มเริ่มทำงาน หลังจากปรุงเสร็จ นำไปรับประทาน

รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
H15 **ปลากระพงย่างกะทิ**	2-4 คน	• ส่วนประกอบ ปลากะพง 400 กรัม, กะทิ ½ ถ้วย, กะปิ ½ ช้อนโต๊ะ, หัวหอมแดง 5 หัว, พริกไทยขาว ½ ช้อนโต๊ะ, น้ำตาลปี๊บ 1½ ช้อนโต๊ะ, น้ำมะขาม 2 ช้อนโต๊ะ, พริกทอด ผักชีสำหรับตกแต่ง • วิธีการ ตำหัวหอมแดง, พริกไทย, กะปิเข้าด้วยกัน แล้วเติมกะทิ น้ำมะขาม น้ำตาลปี๊บ ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือน ให้นำออก วางปลา (ให้หนังอยู่ด้านล่าง) บนตะแกรงสูงในเตาไมโครเวฟ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือนครั้งที่ 2 ให้นำออก เทซอส พลิกกลับด้าน นำเข้าเตาอบและกดปุ่มเริ่มทำงานอีกครั้ง หลังจากปรุงเสร็จ ตกแต่งด้วยพริกทอดและผักชี นำมารับประทาน
H16 **หมูแดง**	4 คน	• ส่วนประกอบ เนื้อหมูสันใน 500 กรัม, รากผักชี 5 ราก, กระเทียม 10 กลีบ, พริกไทย ½ ช้อนชา, เต้าหู้ยี้ 1 ช้อนโต๊ะ, น้ำเต้าหู้ยี้ ½ ช้อนโต๊ะ, ซีอิ๊วขาว 1 ช้อนโต๊ะ, น้ำผึ้ง 2 ช้อนโต๊ะ, ผงพะโล้ 2 ช้อนชา • วิธีการ ตำรากผักชี กระเทียม พริกไทยเข้าด้วยกันและคลุกกับหมู และเติมส่วนผสมอื่น คลุกและใช้ส้อมจิ้มเนื้อหมู หมักอย่างน้อย 1 ชั่วโมง วางบนตะแกรงสูงในเตาไมโครเวฟ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือน ให้พลิกแล้วกดปุ่มเริ่มทำงาน หลังจากปรุงเสร็จ รับประทานกับข้าวเหนียว

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 18 2019-09-11 11:02:11

รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
H17 **หมูย่างปลาเค็ม**	2-4 คน	• ส่วนประกอบ ปลาอินทรีย์เค็ม 30-50 กรัม, หมูสับ 200 กรัม, กระเทียมสับ 2 ช้อนโต๊ะ, พริกขี้หนูสับละเอียด 1 ช้อนโต๊ะ, พริกไทย ½ ช้อนชา, ผงปรุงรส 1 ช้อนโต๊ะ, น้ำมันงา 1 ช้อนชา, หัวหอมแดงสับ ¼ ถ้วย, มะนาว 1 ลูก • วิธีการ ผสมและคลุกส่วนผสมเข้าด้วยกัน ยกเว้นหัวหอมซอยและมะนาว คลุกให้เข้ากัน ปั้นให้หนา 1 ซม. วางบนตะแกรงสูงในเตาไมโครเวฟ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือน ให้พลิกแล้วกดปุ่มเริ่มทำงาน หลังจากปรุง เสิร์ฟพร้อมหัวหอมซอยและมะนาว
H18 **ข้าวหน้าหมูย่างซอสงา**	2 คน	• ส่วนประกอบ เนื้อหมูสันนอก 250 กรัม, น้ำตาลทรายแดง 2 ช้อนโต๊ะ, โชยุ 3 ช้อนโต๊ะ, มิริน 1½ ช้อนโต๊ะ, กระเทียมซอย ¼ ถ้วย, ขิงซอย ¼ ถ้วย, งาขาว 2 ช้อนโต๊ะ, ต้นหอมซอย 2 ช้อนโต๊ะ สำหรับโรยหน้า • วิธีการ หั่นหมู เติมส่วนผสมสำหรับหมักเป็นเวลา 15 นาที วางบนตะแกรงสูงในเตาไมโครเวฟ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือน ให้พลิกแล้วกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือนครั้งที่ 2 ให้นำออก ใส่ซอสหมักในเตาไมโครเวฟ และกดปุ่มเริ่มทำงาน หลังจากปรุง นำมารับประทานกับข้าว ราดด้วยน้ำหมักและต้นหอม

รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
H19 **สเต็กเนื้อเนยสมุนไพร**	1 คน	• ส่วนประกอบ เนื้อวัวสันนอก 250-300 กรัม, ไวน์แดง ¼ ถ้วย, พริกไทยอ่อน 1 ช้อนชา, เกลือ ½ ช้อนชา, น้ำมันมะกอก 1 ช้อนโต๊ะ, เห็ดเอริงกิหั่นบางๆ 1 ถ้วย, พริกหวานสามสี 1 ถ้วย, หั่นยาว **เนยสมุนไพร** เนยจืด 3 ช้อนโต๊ะ, โรสแมรี่สด 1 ช้อนโต๊ะ, กระเทียมสับ ½ ช้อนโต๊ะ, เกลือ ¼ ช้อนชา • วิธีการ ทุบเนื้อ หรือใช้ส้อมจิ้มเพื่อให้เนื้อนุ่ม ตำพริกไทยสำหรับหมักเนื้อกับเกลือ พริกไทย ไวน์แดง น้ำมันมะกอก อย่างน้อย 1 ชั่วโมง ผสมน้ำมันมะกอก เกลือ พริกไทยกับผัก วางบนตะแกรงสูงในเตาไมโครเวฟ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือนให้พลิกแล้วกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือนครั้งที่ 2 ให้นำออก วางเนื้อที่หมักไว้บนตะแกรงสูงในเตาไมโครเวฟ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือนครั้งที่ 3 ให้พลิกแล้วกดปุ่มเริ่มทำงาน ระหว่างการอบ ผสมส่วนผสมของเนยสมุนไพรเข้าด้วยกัน และใส่ตู้เย็น หลังจากปรุงเสร็จ วางเนยสมุนไพรบนเนื้อที่ปรุงเสร็จ นำมาใส่ไมโครเวฟเพื่อให้เนยละลาย รับประทานพร้อมกับผักย่าง

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 19 2019-09-11 11:02:11

รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
H20 **ไก่ห่อใบเตยย่าง**	2-4 คน	• ส่วนประกอบ เนื้ออกไก่ลอกหนัง 200 กรัม, ซอสหอยนางรม 1½ ช้อนโต๊ะ, ซีอิ๊วขาว 1½ ช้อนโต๊ะ, น้ำตาล 1½ ช้อนโต๊ะ, พริกไทย 1 ช้อนชา, น้ำมันงา ½ ช้อนโต๊ะ, รากผักชี 1 ช้อนโต๊ะ, กระเทียมสับ 1 ช้อนโต๊ะ, ใบเตย 8-10 ใบ, น้ำมัน 2 ช้อนโต๊ะ • วิธีการ หั่นไก่เป็นชิ้น และหมักด้วยส่วนผสมเป็นเวลา 1 ชั่วโมงและห่อด้วยใบเตย วางบนตะแกรงสูงในเตาไมโครเวฟ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือน ให้พลิกแล้วกดปุ่มเริ่มทำงาน เมื่อปรุงเสร็จ รับประทานกับซอสพริก
H21 **น้ำพริกปลาย่าง**	1-2 คน	• ส่วนประกอบ ปลาแห้ง ½ ถ้วย, พริกขี้หนูแห้ง 15 เม็ด, กระเทียมไทย 15 กลีบ, หอมแดง 8 หัว, เกลือ ¼ ช้อนชา, น้ำตาลปี๊บ 1 ช้อนโต๊ะ, น้ำมะนาว 1 ช้อนโต๊ะ • วิธีการ วางปลาแห้งไว้บนตะแกรงสูงในเตาไมโครเวฟ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือน ให้นำออก ใส่พริกแห้ง กระเทียม หัวหอมบนตะแกรงสูงในเตาไมโครเวฟ และกดปุ่มเริ่มทำงาน หลังจากปรุง นำปลา กระเทียม หัวหอม มาตำด้วยกัน เติมน้ำปลา น้ำตาลปี๊บ น้ำมะนาว รับประทานกับผักสดหรือไข่ต้ม

รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
H22 **ข้าวอบเผือก**	2 คน	• ส่วนประกอบ ข้าวสวยหอมมะลิ 2 ถ้วย, เนื้อหมูสันนอก 1 ถ้วย, กุนเชียง ½ ถ้วย, กระเทียมสับ 1 ช้อนโต๊ะ, เผือกสุกหั่นลูกเต๋า ½ ถ้วย, แครอทหั่นลูกเต๋า 2 ช้อนโต๊ะ, ถั่วฝักยาวสุก 1 ช้อนโต๊ะ, ข้าวโพดสุก 1 ช้อนโต๊ะ, เห็ดหอม 5 ดอก, ซีอิ๊วขาว 2 ช้อนโต๊ะ, น้ำตาล 2 ช้อนชา, ซอสหอยนางรม 1 ช้อนโต๊ะ, พริกไทย 1 ช้อนชา, น้ำมัน 1 ช้อนโต๊ะ • วิธีการ ผสมกระเทียม คอหมู กุนเชียงเข้ากับน้ำมัน ใส่ชามแก้วในเตาไมโครเวฟ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือน ให้คลุกส่วนผสมส่วนที่เหลือ แล้วนำเข้าเตาอบ และกดปุ่มเริ่มทำงาน หลังจากปรุงเสร็จ นำไปรับประทาน

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 20 2019-09-11 11:02:11

การใช้คุณสมบัติทอดไร้น้ำมัน

คุณสมบัติ **ทอดไร้น้ำมัน** 11 แบบ ประกอบด้วยเวลาในการปรุงอาหารที่กำหนดไว้แล้ว โดยคุณไม่จำเป็นต้องตั้งเวลาอบหรือระดับพลังงานอีก คุณสามารถปรับประเภทของการทอดไร้น้ำมันได้ด้วยการหมุน **ปุ่มเลือกหลายฟังก์ชัน**


☛ **ข้อสำคัญ**

ใช้กับผลิตภัณฑ์สำหรับไมโครเวฟเท่านั้น

เปิดประตู วางอาหารที่ส่วนกลางของจานหมุน ปิดประตู



1. กดปุ่ม **ทอดไร้น้ำมัน**

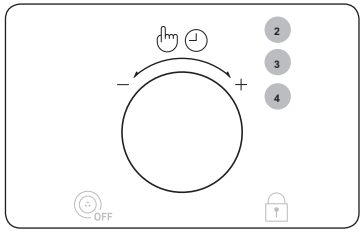

2. หมุน**ปุ่มเลือกหลายฟังก์ชัน**เพื่อเลือกประเภทการปรุงอาหาร ในขั้นตอนนี้ ให้กด **ปุ่มเลือกหลายฟังก์ชัน** เพื่อเลือกประเภทการปรุง
   1. มันฝรั่งและผัก
   2. อาหารทะเล
   3. ไก่
3. เลือกประเภทของอาหารที่ปรุง ด้วยการหมุน **ปุ่มเลือกหลายฟังก์ชัน** โปรดดูตารางในหน้าถัดไป เพื่อดูคำอธิบายการตั้งค่าต่างๆ ในขั้นตอนนี้ ให้กด **ปุ่มเลือกหลายฟังก์ชัน** เพื่อเลือกประเภทอาหาร
4. เลือกปริมาณอาหารด้วยการหมุน**ปุ่มเลือกหลายฟังก์ชัน**



5. กดปุ่ม **เริ่มทำงาน**

   ผลลัพธ์: เตาอบจะอบอาหารตามการตั้งค่าล่วงหน้าที่เลือกไว้ และเมื่อเสร็จแล้ว
   1) เตาอบจะส่งเสียงเตือน 4 ครั้ง
   2) สัญญาณเตือนสิ้นสุดการทำงานจะส่งเสียง 3 ครั้ง (นาทีละครั้ง)
   3) เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง

คำแนะนำในการทอดแบบไม่ใช้น้ำมัน

ตารางต่อไปนี้จะแสดงโปรแกรมอัตโนมัติ 11 โปรแกรมสำหรับการทอดในโหมด **ทอดไร้น้ำมัน** โดยจะแสดงปริมาณและคำแนะนำที่เหมาะสม คุณจะใช้น้ำมันน้อยลงเมื่อเทียบกับการทอดด้วยอุปกรณ์ทอดด้วยน้ำมัน แต่คุณยังได้รับอาหารรสชาติอร่อย โปรแกรมจะทำงานร่วมกันระหว่างการอบ ตัวทำความร้อนด้านบน และพลังงานไมโครเวฟ

1. มันฝรั่งและผัก

รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
1-1 **ครอกเก้มันฝรั่งแช่แข็ง**	200-250 กรัม 300-350 กรัม	วางโครเคทมันฝรั่งแช่แข็งให้เสมอกันบนจานอบเกรียม วางจานบนตะแกรงต่ำ พักอาหารเป็นเวลา 1-2 นาที
1-2 **โฮมเมดเฟรนช์ฟรายส์**	300-350 กรัม 400-450 กรัม	ใช้มันฝรั่งแบบแข็งหรือแข็งปานกลาง แล้วล้างให้สะอาด ปอกเปลือกมันฝรั่งแล้วหั่นเป็นแท่งให้มีความหนา 10 x 10 มม. แช่ไว้ในน้ำเย็น (30 นาที) ใช้กระดาษซับให้แห้ง ชั่งน้ำหนักและทาน้ำมันมะกอก 5 กรัม กระจายเฟรนช์ฟรายโฮมเมดให้ทั่วบนจานอบเกรียม วางจานบนตะแกรงสูง พักอาหารเป็นเวลา 1-2 นาที
1-3 **โปเตโตเวจด์**	200-250 กรัม 300-350 กรัม 400-450 กรัม	ล้างมันฝรั่งขนาดปกติแล้วหั่นเป็นเสี้ยว ใช้แปรงทาน้ำมันมะกอกและเครื่องเทศ วางด้านที่หั่นลงบนจานอบเกรียม วางจานบนตะแกรงสูง พักอาหารเป็นเวลา 1-3 นาที

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 21 2019-09-11 11:02:11

รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
1-4 **หัวหอมทอดแช่แข็ง**	100-150 กรัม 200-250 กรัม	วางหัวหอมหรือปลาหมึกหั่นแว่นที่ชุบขนมปังให้ทั่วทั้งจานอบเกรียม วางจานบนตะแกรงต่ำ พักอาหารเป็นเวลา 1-2 นาที
1-5 **บวบฝานไสลด์**	100-150 กรัม 200-250 กรัม	ล้างซูกินีและหั่นเป็นแว่น ใช้แปรงทาน้ำมันมะกอก 5 กรัมและเติมเครื่องเทศ วางซูกินีหั่นแว่นบนจานอบเกรียมให้เสมอกัน แล้วตั้งบนตะแกรงสูง กลับด้านเมื่อได้ยินสัญญาณเตือน กดปุ่ม start (เริ่มทำงาน) เพื่อดำเนินการต่อ (เตาอบจะยังคงทำงานต่อไปถ้าคุณไม่กลับด้าน) พักอาหารเป็นเวลา 1-2 นาที

2. อาหารทะเล

รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
2-1 **กุ้งแช่แข็ง**	200-250 กรัม 300-350 กรัม	วางกุ้งชุบเกล็ดขนมปังแช่แข็งให้เสมอกันบนจานอบเกรียม วางจานบนตะแกรงต่ำ พักอาหารเป็นเวลา 1-2 นาที
2-2 **เนื้อปลาแช่แข็ง**	200-250 กรัม 300-350 กรัม	วางเนื้อปลาชุดเกล็ดขนมปังแช่แข็งให้กระจายเสมอกันบนจานอบเกรียม วางจานบนตะแกรงต่ำ พักอาหารเป็นเวลา 1-2 นาที
2-3 **ปลาหมึกทอดแช่แข็ง**	100-150 กรัม 200-250 กรัม	วางปลาหมึกหั่นแว่นชุบเกล็ดขนมปังแช่แข็งให้กระจายเสมอกันบนจานอบเกรียม วางจานบนตะแกรงต่ำ พักอาหารเป็นเวลา 1-2 นาที

3. ไก่

รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
3-1 **นักเกตไก่แช่แข็ง**	200-250 กรัม 300-350 กรัม	วางนักเก็ตไก่แช่แข็งให้เสมอกันบนจานอบเกรียม วางจานบนตะแกรงสูง พักอาหารเป็นเวลา 1-2 นาที
3-2 **น่องไก่**	200-250 กรัม 300-350 กรัม 400-450 กรัม	ชั่งน้ำหนักน่องไก่ แล้วใช้แปรงทาน้ำมันและเครื่องเทศให้ทั่ว วางบนตะแกรงสูงให้เสมอกัน กลับด้านเมื่อได้ยินสัญญาณเตือน เตาอบจะหยุดการทำงาน กดปุ่ม start (เริ่มทำงาน) เพื่อดำเนินการต่อ พักอาหารเป็นเวลา 1-3 นาที
3-3 **ปีกไก่**	200-250 กรัม 300-350 กรัม	ชั่งน้ำหนักปีกไก่ แล้วใช้แปรงทาน้ำมันและเครื่องเทศให้ทั่ว วางบนตะแกรงสูงให้เสมอกัน กลับด้านเมื่อได้ยินสัญญาณเตือน เตาอบจะหยุดการทำงาน กดปุ่ม start (เริ่มทำงาน) เพื่อดำเนินการต่อ พักอาหารเป็นเวลา 1-2 นาที

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 22 2019-09-11 11:02:12

การใช้คุณสมบัติ เมนูเพื่อสุขภาพ


คุณสมบัติ **เมนูเพื่อสุขภาพ** 13 แบบ มีเวลาในการปรุงอาหารที่กำหนดไว้แล้ว
โดยคุณไม่จำเป็นต้องตั้งเวลาอบหรือระดับพลังงานอีก
คุณสามารถปรับปริมาณอาหารด้วยการหมุนปุ่ม**ปุ่มเลือกหลายฟังก์ชัน**

☛ **ข้อสำคัญ**

ใช้กับผลิตภัณฑ์สำหรับไมโครเวฟเท่านั้น

เปิดประตู วางอาหารที่ส่วนกลางของจานหมุน ปิดประตู



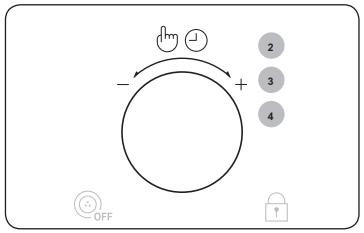



1. กดปุ่ม **เมนูเพื่อสุขภาพ**
2. เลือกประเภทอาหารด้วยการหมุน**ปุ่มเลือกหลายฟังก์ชัน** แล้วกด**ปุ่มเลือกหลายฟังก์ชัน**
   1. ธัญพืช/พาสต้า
   2. ผัก
   3. สัตว์ปีก/ปลา
3. เลือกประเภทของอาหารที่ปรุง ด้วยการหมุน**ปุ่มเลือกหลายฟังก์ชัน**
   โปรดดูตารางในหน้าถัดไป เพื่อดูคำอธิบายการตั้งค่าต่างๆ ในขั้นตอนนี้ ให้กด**ปุ่มเลือกหลายฟังก์ชัน** เพื่อเลือกประเภทอาหาร
4. เลือกปริมาณอาหารด้วยการหมุน**ปุ่มเลือกหลายฟังก์ชัน**

5. กดปุ่ม **เริ่มทำงาน**

   ผลลัพธ์: เตาอบจะอบอาหารตามการตั้งค่าล่วงหน้าที่เลือกไว้ และเมื่อเสร็จแล้ว

   1) เตาอบจะส่งเสียงเตือน 4 ครั้ง
   2) สัญญาณเตือนสิ้นสุดการทำงานจะส่งเสียง 3 ครั้ง (นาทีละครั้ง)
   3) เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง

คำแนะนำสำหรับเมนูเพื่อสุขภาพ

ตารางต่อไปนี้เป็นปริมาณอาหารและคำแนะนำที่เหมาะสมสำหรับโปรแกรม **เมนูเพื่อสุขภาพ** ประมาณ 13 แบบ

1. ธัญพืช/พาสต้า

รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
1-1 **ข้าวกล้อง**	150-200 กรัม 200-250 กรัม	ใช้ชามแก้วขนาดใหญ่ที่ใช้สำหรับเตาอบและมีฝาปิด เติมน้ำเย็นสองเท่าของปริมาณอาหาร อบโดยปิดฝา คนให้ทั่วก่อนพักอาหารไว้ แล้วเติมเกลือและสมุนไพรต่างๆ พักอาหารเป็นเวลา 5-10 นาที
1-2 **เมล็ดควินัว**	150-200 กรัม 200-250 กรัม	ใช้ชามแก้วขนาดใหญ่ที่ใช้สำหรับเตาอบและมีฝาปิด เติมน้ำเย็นสองเท่าของปริมาณอาหาร อบโดยปิดฝา คนให้ทั่วก่อนพักอาหารไว้ แล้วเติมเกลือและสมุนไพรต่างๆ พักอาหารเป็นเวลา 1-3 นาที
1-3 **มักกะโรนี**	100-150 กรัม 200-250 กรัม	ใช้ชามแก้วขนาดใหญ่ที่ใช้สำหรับเตาอบและมีฝาปิด เติมน้ำร้อน 4 เท่า เกลือเล็กน้อย และคนให้ทั่ว อบโดยไม่ปิดฝา คนให้เข้ากันแล้วพักอาหารไว้ จากนั้นเทน้ำออกให้หมด พักอาหารเป็นเวลา 1-3 นาที

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 23 2019-09-11 11:02:12

2. ผัก

รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
2-1 **ถั่วเขียว**	200-250 กรัม 300-350 กรัม	ล้างทำความสะอาดถั่วเขียว ใส่ให้เสมอกันในชามแก้วที่มีฝาปิด เติมน้ำ 30 มล. (2 ช้อนโต๊ะ) ขณะที่ปรุงอาหาร 200-250 กรัม และเติมน้ำ 45 มล. (3 ช้อนโต๊ะ) สำหรับอาหาร 300-450 กรัม วางชามบริเวณกึ่งกลางของจานหมุน อบโดยปิดฝา คนอาหารหลังการอบ พักอาหารเป็นเวลา 1-2 นาที
2-2 **ผักโขม**	100-150 กรัม 200-250 กรัม	ล้างทำความสะอาดผักโขม ใส่ในชามแก้วที่มีฝาปิด อย่าเติมน้ำ วางชามตรงกลางของจานหมุน อบโดยปิดฝา คนอาหารหลังการอบ พักอาหารเป็นเวลา 1-2 นาที
2-3 **มันฝรั่งปอกเปลือก**	300-350 กรัม 400-450 กรัม 500-550 กรัม	ล้างมันฝรั่งและปอกเปลือก หั่นครึ่งและใส่ในชามแก้วมีฝาปิด เติมน้ำ 15-30 มล. (1-2 ช้อนโต๊ะ) คนอาหารหลังการอบ หากอบมากกว่าที่ระบุไว้ ให้คนระหว่างการอบด้วย พักอาหารเป็นเวลา 3-5 นาที
2-4 **มะเขือม่วงย่าง**	100-150 กรัม 200-250 กรัม	ล้างมะเขือและหั่นเป็นแว่น ใช้แปรงทาน้ำมันและเครื่องเทศให้ทั่ว นำไปวางบนตะแกรงแบบสูงให้เสมอกัน กลับด้านเมื่อได้ยินสัญญาณเตือน กดเริ่มเพื่ออบต่อ (เตาอบจะทำงานต่อไปถ้าคุณไม่พลิกกลับด้าน) พักอาหารเป็นเวลา 1-2 นาที
2-5 **มะเขือเทศย่าง**	400-450 กรัม 600-650 กรัม	ล้างทำความสะอาดมะเขือเทศ หั่นครึ่งและใส่ในจานสำหรับเตาอบ ใส่ซีสปน่ที่ด้านบน วางจานบนตะแกรงสูง พักอาหารเป็นเวลา 1-2 นาที

3. สัตว์ปีก/ปลา

รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
3-1 **อกไก่**	300-350 กรัม 400-450 กรัม	ล้างอกไก่และวางบนจานแก้วกันลึกสำหรับเตาอบ ปิดด้วยฟิล์มสำหรับไมโครเวฟและเจาะรูที่ฟิล์ม วางจานบนจานหมุน พักอาหาร 2 นาที
3-2 **อกไก่งวง**	300-350 กรัม 400-450 กรัม	ล้างอกไก่งวงและวางบนจานแก้วกันลึกสำหรับเตาอบ ปิดด้วยฟิล์มสำหรับไมโครเวฟและเจาะรูที่ฟิล์ม วางจานบนจานหมุน พักอาหาร 2 นาที
3-3 **เนื้อปลาย่าง**	200-300 กรัม 400-500 กรัม	วางเนื้อปลาให้เสมอกันบนตะแกรงสูง พลิกกลับด้านเมื่อได้ยินเสียงเตือน พักอาหารเป็นเวลา 1-2 นาที
3-4 **สเต็กปลาแซลมอนย่าง**	200-250 กรัม 300-350 กรัม	วางสเต็กปลาให้เสมอกันบนตะแกรงสูง พลิกกลับด้านเมื่อได้ยินเสียงเตือน พักอาหาร 2 นาที
3-5 **เนื้อปลาอบ**	300-350 กรัม 400-450 กรัม	ทาน้ำมันให้ทั่วตัวปลา (ปลาเทร้าท์หรือปลากะพง) จากนั้นใส่สมุนไพรและเครื่องเทศ วางปลาเคียงข้างกัน โดยสลับหัวและหางไว้บนตะแกรงสูง พลิกกลับด้านเมื่อได้ยินเสียงเตือน พักอาหาร 3 นาที

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 24 2019-09-11 11:02:12

การใช้คุณสมบัติเมนูอาหารไทย

คุณสมบัติ **เมนูไทย** 28 รายการประกอบด้วยเวลาในการปรุงอาหารที่กำหนดไว้แล้ว
โดยคุณไม่จำเป็นต้องตั้งเวลาอบหรือระดับพลังงานอีก คุณสามารถปรับเมนูไทยด้วยการหมุน **ปุ่มเลือกหลายฟังก์ชัน**

☛ **ข้อสำคัญ**

ใช้กับผลิตภัณฑ์สำหรับไมโครเวฟเท่านั้น

เปิดประตู วางอาหารที่ส่วนกลางของจานหมุน ปิดประตู



1. กดปุ่ม **เมนูไทย**



2. เลือกประเภทของอาหารที่ปรุง ด้วยการหมุน**ปุ่มเลือกหลายฟังก์ชัน**
   โปรดดูตารางในหน้าถัดไป เพื่อดูคำอธิบายการตั้งค่าต่างๆ ในขั้นตอนนี้
   ให้กด**ปุ่มเลือกหลายฟังก์ชัน** เพื่อเลือกประเภทอาหาร
3. กดปุ่ม **เริ่มทำงาน**

   ผลลัพธ์: เตาอบจะอบอาหารตามการตั้งค่าล่วงหน้าที่เลือกไว้ และเมื่อเสร็จแล้ว

   1) เตาอบจะส่งเสียงเตือน 4 ครั้ง
   2) สัญญาณเตือนสิ้นสุดการทำงานจะส่งเสียง 3 ครั้ง (นาทีละครั้ง)
   3) เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง

คู่มือเมนูไทย

ตารางต่อไปนี้จะแสดงโปรแกรมอัตโนมัติของ **เมนูไทย** 28 รายการ โดยจะแสดงปริมาณและคำแนะนำที่เหมาะสม

รหัส/อาหาร	ปริมาณอาหาร	ส่วนประกอบ
1 **ข้าวต้มหมูสับ**	1-2 คน	ข้าวสวย 1 ถ้วย, หมูสับ ½ ถ้วย, น้ำ 500 มล., น้ำมันหอย 1 ช้อนโต๊ะ, พริกไทย ¼ ช้อนชา, ซีอิ้วขาว 1 ช้อนโต๊ะ, ต้นหอม, ผักชี, คื่นช่ายสำหรับโรยหน้า
	คำแนะนำ คลุกหมูสับ พริกไทย และน้ำมันหอยเข้าด้วยกัน ปั้นเป็นก้อน ใส่หมูก้อน ข้าว น้ำในชาม ใส่ซีอิ๊ว คนให้เข้ากัน ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน เมื่อปรุงเสร็จ โรยต้นหอม คื่นช่าย และผักชีก่อนรับประทาน	
2 **ซุปเต้าหู้สาหร่าย**	1-2 คน	หมูสับ ½ ถ้วย, เต้าหู้หลอด 2 หลอด, สาหร่ายทะเลแห้ง ¼ ถ้วย, น้ำ 500 มล., น้ำมันหอย 1 ช้อนโต๊ะ, น้ำปลา 1 ช้อนชา, พริกไทย ¼ ช้อนชา, ต้นหอม ¼ ถ้วย, ผักชีหั่น 1 ช้อนโต๊ะสำหรับโรยหน้า
	คำแนะนำ คลุกหมูสับ น้ำมันหอยและพริกไทยเข้าด้วยกัน ปั้นเป็นก้อน ใส่หมู เต้าหู้ น้ำและน้ำปลาในภาชนะ ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน หลังจากปรุงอาหาร โรยต้นหอม สาหร่ายทะเล ผักชี และพริกไทยเล็กน้อย	
3 **ซุปเต้าเจี้ยว**	1-2 คน	มิโสะ 2 ช้อนโต๊ะ, ดาชิ 1 ช้อนโต๊ะ, สาหร่ายวากาเมะแห้ง 2 ช้อนโต๊ะ, น้ำ 500 มล., เต้าหู้อ่อน 100 กรัม หั่นลูกเต๋า, เห็ดเข็มทอง 50 กรัม, ต้นหอมซอย ¼ ถ้วย
	คำแนะนำ ผสมมิโสะกับน้ำให้เข้ากันในชาม แล้วเติมส่วนผสมอื่นๆ ทั้งหมด ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน หลังจากปรุงเสร็จ รับประทานขณะยังร้อน	

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 25 2019-09-11 11:02:12

การใช้เตาอบ

รหัส/อาหาร	ปริมาณอาหาร	ส่วนประกอบ
4 **ต้มยำกุ้ง**	1-2 คน	กุ้ง 150 กรัม, เห็ด 1 ถ้วย, ข่าหั่นแว่น 4 แว่น, ใบมะกรูดฉีก 5 ใบ, ตะไคร้บุบ 2 ต้น, มะเขือเทศสีดา 4 ผล, น้ำ 500 มล., นมข้นจืด ¼ ถ้วย, น้ำปลา 2-3 ช้อนโต๊ะ, น้ำมะนาว 2-3 ช้อนโต๊ะ, น้ำพริกเผา 1 ช้อนโต๊ะ, พริกขี้หนู 10 เม็ด, ผักชีสำหรับโรยหน้า
	คำแนะนำ ใส่ข่า ตะไคร้ ใบมะกรูด มะเขือเทศ น้ำพริกเผาในน้ำเดือดและคนให้เข้ากัน เติมกุ้ง เห็ด พริกขี้หนู ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน หลังจากปรุงเสร็จ เติมนมข้นจืด น้ำปลา น้ำมะนาวและคนให้เข้ากัน รับประทานขณะร้อน	
5 **ต้มข่าไก่**	1-2 คน	อกไก่หั่นชิ้น 250 กรัม, เห็ด 100 กรัม, กะทิ 500 มล., น้ำ 200 มล., ข่าอ่อนหั่นแว่น 1 ถ้วย, ตะไคร้ปั่น 2 ต้น, ใบมะกรูด 3 ใบ, หัวหอมแดง 5 หัว, พริกขี้หนู 5 เม็ด, น้ำปลา 2-3 ช้อนโต๊ะ, น้ำมะนาว 2-3 ช้อนโต๊ะ
	คำแนะนำ ผสมน้ำและกระทิ จากนั้นเติมหัวหอม ตะไคร้ ใบมะกรูด ไก่ และเห็ด ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน หลังจากปรุงเสร็จ นำออกมาปรุงรสด้วยน้ำปลา น้ำมะนาว และพริก จากนั้นรับประทาน	
6 **แกงเขียวหวานไก่**	1-2 คน	อกไก่หั่นชิ้น 200 กรัม, พริกแกงเขียวหวาน 2 ช้อนโต๊ะ, กะทิ 500 มล., มะเขือหั่น 1 ถ้วย, น้ำปลา 1 ช้อนโต๊ะ, น้ำตาลปี๊บ 1 ช้อนชา, ใบโหระพา ¼ ถ้วย, พริกชี้ฟ้าหั่นใช้ตกแต่ง
	คำแนะนำ ผสมกะทิและน้ำพริกแกงเขียวหวานให้เข้ากันในชาม เติมไก่ มะเขือ น้ำตาลปี๊บ และน้ำปลา จากนั้นคนให้เข้ากัน ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน หลังจากปรุง ใส่ใบโหระพาและพริกชี้ฟ้าจากนั้นนำไปรับประทาน	

รหัส/อาหาร	ปริมาณอาหาร	ส่วนประกอบ
7 **ผักนึ่งน้ำแดง**	3-4 คน	ผักกาดขาว 100 กรัม, เห็ดหอม 50 กรัม, คะน้าฮ่องกง 100 กรัม, ข้าวโพดอ่อน 50 กรัม, น้ำ ½ ช้อนโต๊ะ, ซุปไก่ 1 ขวด 70 มล., ซอสหอยนางรม 1 ช้อนโต๊ะ, น้ำตาล ½ ช้อนชา, น้ำมันงา ⅛ ช้อนชา, เหล้าจีน 1 ช้อนชา, แป้งมันฮ่องกง 1 ช้อนโต๊ะ, พริกไทยขาว ½ ช้อนชา
	คำแนะนำ ล้างและหั่นผัก ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน เมื่อได้ยินเสียงเตือน นำออกมาและผสมส่วนผสมที่เหลือเข้าด้วยกัน ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน หลังจากปรุงเสร็จ นำไปรับประทาน	
8 **ไข่ตุ๋นน้ำเต้าหู้**	3-4 คน	ไข่ 4 ฟอง, เม็ดแปะก๊วย ½ ถ้วย, ปูอัด 4 ชิ้น, ผงปรุงรส 1 ช้อนชา, น้ำนมถั่วเหลือง ½ ถ้วย, พริกไทย ¼ ช้อนชา, ซีอิ๊วขาว 1 ช้อนโต๊ะ, ต้นหอมสับ 2 ช้อนโต๊ะ
	คำแนะนำ ตีไข่และนมถั่วเหลืองเข้าด้วยกัน เติมซีอิ๊วขาวและใส่ในถ้วย เติมส่วนผสมและนำมาใส่ถ้วย ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน หลังจากการปรุงอาหาร ตกแต่งด้วยปูอัด แปะก๊วย และต้นหอมสับ นำมารับประทาน	
9 **กุ้งนึ่งนมสด**	2 คน	กุ้ง 200 กรัม, ไข่ 1 ฟอง, นมสด ½ ถ้วย, เกลือ ¼ ช้อนชา, ผงกะหรี่ ½ ช้อนชา, พริกไทย ½ ช้อนชา, เห็ดหอม 50 กรัม, คื่นช่ายหั่น ½ ถ้วย
	คำแนะนำ ล้างกุ้ง ผ่ากุ้งเป็นสองซีก จัดวางกุ้งในภาชนะ ผสมเห็ดหอม คื่นช่าย นมสด ไข่ ผงกะหรี่ เกลือ และพริกไทยเข้าด้วยกัน ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน หลังจากปรุงเสร็จ นำไปรับประทาน	

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 26 2019-09-11 11:02:12

รหัส/อาหาร	ปริมาณอาหาร	ส่วนประกอบ
10 **ปลานึ่งซีอิ้ว**	2-3 คน	ปลากะพง 400 กรัม, เบคอนหั่น ½ ถ้วย, บ๊วยดอง 2 ลูก, น้ำบ๊วยดอง 1 ช้อนโต๊ะ, พริกชี้ฟ้าฝา 1 เม็ด, ขิงสดหั่นฝอย 1 ถ้วย, เห็ดหอม ½ ถ้วย, คื่นช่ายหั่น 2 ต้น, ซีอิ้วขาว 1 ช้อนโต๊ะ, น้ำตาล 1 ช้อนโต๊ะ, น้ำสต๊อก ½ ถ้วย
	คำแนะนำ ล้างและหั่นปลา วางเบคอนและปลาในชามแก้ว ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน เมื่อได้ยินเสียงเตือน คนส่วนผสมที่เหลือเข้าด้วยกันและเทใส่ปลา ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน หลังจากปรุงเสร็จ นำไปรับประทาน	
11 **น้ำพริกซีฟู้ดไข่ต้ม**	2-3 คน	ซีฟู้ดหั่น 1½ ถ้วย, พริกขี้หนูสด 20 เม็ด, กระเทียม 5 กลีบ, หัวหอมแดง ½ ถ้วย, ตะไคร้ซอย ½ ถ้วย, กะปิ 1 ช้อนโต๊ะ, น้ำตาลปี๊บ 2 ช้อนชา, น้ำมะนาว 2 ช้อนโต๊ะ, ไข่ 2 ฟอง
	คำแนะนำ วางกุ้งและหมูสับในชามแก้ว ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน เมื่อเตาอบส่งเสียงเตือน บุบพริกขี้หนู กระเทียมทุบ และใส่กะปิ น้ำตาลปี๊บ น้ำมะนาว ใส่ตะไคร้ซอย หัวหอมแดง และซีฟู้ดที่ต้มเสร็จ ใส่ในถ้วย เติมน้ำและเกลือ ใส่ในเตาไมโครเวฟ และกดปุ่มเริ่มทำงาน หลังจากปรุงเสร็จ นำไปรับประทาน	

รหัส/อาหาร	ปริมาณอาหาร	ส่วนประกอบ
12 **หมูมะนาว**	2-3 คน	เนื้อหมูสันใน 200 กรัม, มะนาวฝาน 5 แว่น, พริกขี้หนูเขียว-แดง 15 เม็ด, กระเทียม 2 ช้อนโต๊ะ, น้ำตาลทราย 1 ช้อนโต๊ะ, น้ำปลา 1 ช้อนโต๊ะ, น้ำมะนาว 3 ช้อนโต๊ะ, กะหล่ำปลีหั่นฝอย 1 ถ้วย
	คำแนะนำ ล้างและแล่หมูเป็นชิ้นบางๆ เติมน้ำ ใส่ในเตาไมโครเวฟ และกดปุ่มเริ่มทำงาน เมื่อได้ยินเสียงเตือน ผสมน้ำตาล น้ำปลา น้ำมะนาว ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน หลังจากปรุง ตีพริกขี้หนูและกระเทียมผสมกัน รับประทานโดยวางกะหล่ำปลีหั่นฝอยในจาน วางหมูและเทน้ำซอสราด ด้านบน	
13 **ยำถั่วพู**	2-3 คน	ถั่วพูหั่น 150 กรัม, กุ้งปอกเหลือก 1 ถ้วย, หมูสับ 100 กรัม, พริกขี้หนูซอย 2 ช้อนโต๊ะ, ซอสพริก 2 ช้อนโต๊ะ, น้ำมะนาว 2 ช้อนโต๊ะ, น้ำปลา 1 ช้อนโต๊ะ, น้ำตาลปี๊บ 1½ ช้อนโต๊ะ, ถั่วลิสงทอด 2 ช้อนโต๊ะ, หัวหอมเจียว ¼ ช้อนโต๊ะ, พริกแห้งทอด 7 เม็ด, หัวกะทิ 2 ช้อนโต๊ะ, ไข่ 2 ฟอง
	คำแนะนำ ใส่กุ้ง หมูสับในเตาไมโครเวฟ และกดปุ่มเริ่มทำงาน เมื่อได้ยินเสียงเตือน นำอาหารออกมาและเติมถั่วพู คนให้เข้ากัน ตีไข่ ใส่เกลือ ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือนครั้งที่ 2 ให้นำออก ใส่พริกขี้หนูแห้งและน้ำมันในเตาอบ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือนครั้งที่ 3 ให้นำออก ใส่หัวหอมพร้อมน้ำมันในเตาอบ และกดปุ่มเริ่มทำงาน หลังจากอบเสร็จแล้ว ผสมน้ำตาลปี๊บ น้ำปลา น้ำมะนาว ซอสพริก และพริกขี้หนูเข้าด้วยกัน ผสมส่วนผสมทั้งหมดเข้าด้วยกัน เทหัวกะทิและรับประทานพร้อมไข่	

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 27 2019-09-11 11:02:12

รหัส/อาหาร	ปริมาณอาหาร	ส่วนประกอบ
14 **สปาเก็ตตี้ขี้เมา**	2-3 คน	สปาเก็ตตี้ 60 กรัม, เนื้อสับ 200 กรัม, กระเทียบสับ ¼ ถ้วย, พริกขี้หนู 15 เม็ด, พริกไทยอ่อน ¼ ถ้วย, กะเพรา 1 ถ้วย, ซอสปรุงรส 1 ช้อนโต๊ะ, น้ำตาล 1 ช้อนชา, ซอสหอยนางรม 1 ช้อนโต๊ะ, น้ำมันมะกอก 1 ช้อนโต๊ะ
	คำแนะนำ ใส่สปาเก็ตตี้และน้ำในเตาไมโครเวฟ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือน ให้นำออก สับพริกและกระเทียมเข้าด้วยกัน และคลุกกับเนื้อสับ น้ำมันมะกอก ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน เมื่อได้ยินเสียงเตือนครั้งที่ 2 เติมน้ำปลา ซอสปรุงรส น้ำตาล ซอสหอยนางรม ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือนครั้งที่ 3 เติมสปาเก็ตตี้และพริกไทยอ่อน กะเพราในเนื้อสับ ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน หลังจากปรุงเสร็จ นำไปรับประทาน	
15 **มักกะโรนีซอสเนื้อ**	2-3 คน	มักกะโรนี 60 กรัม, พริกไทย ½ ช้อนชา, เนื้อสับ 200 กรัม, น้ำมันมะกอก 1 ช้อนโต๊ะ, หอมใหญ่สับ ½ ถ้วย, แครอท ½ ถ้วย, คื่นช่ายหั่น 2 ช้อนโต๊ะ, ใบเบย์ 3 ใบ, มะเขือเทศหั่นลูกเต๋า 1 ถ้วย, เกลือ ½ ช้อนชา, มะเขือเทศบด 2 ช้อนโต๊ะ, น้ำตาล ½ ช้อนโต๊ะ, พาร์สลีย์สับ 1½ ช้อนโต๊ะ
	คำแนะนำ ใส่มักกะโรนีและน้ำในเตาไมโครเวฟ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือน ให้นำออก ผสมเนื้อสับกับน้ำมันเกลือ และพริกไทย ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือนครั้งที่ 2 เติมหัวหอม แครอท คื่นช่าย มะเขือเทศ ใบเบย์ และปรุงรสด้วยน้ำตาล เกลือ มะเขือเทศบด ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน หลังจากปรุงเสร็จ คลุกมักกะโรนีและชีสพาร์เมซาน พาร์สลีย์เข้าด้วยกัน นำมารับประทาน	

รหัส/อาหาร	ปริมาณอาหาร	ส่วนประกอบ
16 **ก๋วยเตี๋ยวหมูสับ**	3-4 คน	เส้นก๋วยเตี๋ยวเส้นใหญ่ 300 กรัม, หมูสับ 200 กรัม, ซอสปรุงรส 1 ½ ช้อนโต๊ะ, พริกไทย ½ ช้อนชา, น้ำมันหอย 1 ช้อนโต๊ะ, หัวหอมหั่นลูกเต๋า ½ ถ้วย, มะเขือเทศหั่นลูกเต๋า 2 ถ้วย, ข้าวโพดอ่อนหั่น ½ ถ้วย, กระเทียมสับ 1 ช้อนโต๊ะ, ซีอิ้วขาว 2 ช้อนโต๊ะ, น้ำตาล 1 ช้อนโต๊ะ, ซอสมะเขือเทศ ½ ถ้วย, พริกไทย 1½ ช้อนชา, น้ำมัน 2 ช้อนโต๊ะ, ซีอิ้วดำ 1 ช้อนโต๊ะ, ผักกาดหอมสำหรับประดับ
	คำแนะนำ คลุกซีอิ้วดำกับก๋วยเตี๋ยวเส้นใหญ่ ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือน ให้นำออก หมักหมูกับซอสปรุงรส พริกไทย ซอสหอยนางรมในถ้วย เติมน้ำมัน กระเทียมสับ หัวหอม มะเขือเทศ พริกไทย และคลุกอีกครั้ง ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือนครั้งที่ 2 เติมซีอิ้วขาว น้ำตาลและซอสมะเขือเทศ ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน หลังจากปรุงเสร็จ เทบนเส้น รับประทานพร้อมผัก	
17 **กุ้งผัดเปรี้ยวหวาน**	2-4 คน	กุ้ง 10 ตัว, พริกหวานสามสีหั่นลูกเต๋า 1 ถ้วย, สับปะรดหั่นลูกเต๋า 1 ถ้วย, หัวหอมใหญ่หั่นลูกเต๋า 1 ถ้วย, แตงกวาหั่นลูกเต๋า 1 ถ้วย, กระเทียมสับ 1 ช้อนโต๊ะ, มะเขือเทศฝาน 1 ถ้วย, น้ำตาล 1 ช้อนโต๊ะ, ซอสพริก ½ ถ้วย, ซอสปรุงรส 1 ช้อนโต๊ะ, น้ำส้มสายชู 1 ช้อนโต๊ะ, น้ำมัน 2 ช้อนโต๊ะ, น้ำ ¼ ถ้วย
	คำแนะนำ ผสมกุ้ง กระเทียม และน้ำมันในถ้วย ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือนครั้งแรก เติมผักและปรุงรส ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือนครั้งที่ 2 ให้นำออก คนให้เข้ากัน ใส่ในเตาไมโครเวฟ และกดปุ่มเริ่มทำงาน หลังจากปรุงเสร็จ นำไปรับประทาน	

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 28 2019-09-11 11:02:13

รหัส/อาหาร	ปริมาณอาหาร	ส่วนประกอบ
18 **หมูผัดขิง**	2-4 คน	หมูสันใน 200 กรัม, ขิงซอยละเอียด 200 กรัม, กระเทียมสับ 1 ช้อนโต๊ะ, เห็ดหูหนู ½ ถ้วย, ต้นหอมสับ ½ ถ้วย, พริกแดงหั่น ¼ ถ้วย, เต้าเจี้ยว 1½ ช้อนโต๊ะ, ซอสปรุงรส 1 ช้อนโต๊ะ, ซอสหอยนางรม 1½ ช้อนโต๊ะ, น้ำตาล 1 ช้อนโต๊ะ, น้ำมัน 2 ช้อนโต๊ะ
	คำแนะนำ ผสมกระเทียม หมูและน้ำมันในถ้วย ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือน ให้เติมขิงและผักที่เหลืออยู่ ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือนครั้งที่ 2 ให้นำออก คนให้เข้ากัน ใส่ในเตาไมโครเวฟ และกดปุ่มเริ่มทำงาน หลังจากปรุงเสร็จ รับประทานกับข้าว	
19 **ไก่ผัดเม็ดมะม่วง**	3-4 คน	เนื้ออกไก่ลอกหนัง 250 กรัม, เม็ดมะม่วงหิมพานต์อบ ½ ถ้วย, ต้นหอม ¼ ถ้วย, พริกชี้ฟ้าแห้ง 5 เม็ด, เห็ดฟาง 1 ถ้วย, หอมใหญ่ ½ ถ้วย, พริกหวานสามสี 1 ถ้วย, ซอสหอยนางรม 2 ช้อนโต๊ะ, ซีอิ๊วขาว 2 ช้อนโต๊ะ, น้ำตาล 1 ช้อนโต๊ะ, น้ำมันงา 1 ช้อนชา, แป้งมันฮ่องกง 1 ช้อนโต๊ะ, เกลือ ½ ช้อนชา, พริกไทย ½ ช้อนชา, น้ำ ¼ ถ้วย
	คำแนะนำ หมักไก่กับเกลือ พริกไทย น้ำมัน ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือน ใส่พริกแห้ง เม็ดมะม่วงหิมพานต์ น้ำมัน ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือนครั้งที่ 2 ผสมซีอิ๊วขาว ซอสหอยนางรม น้ำตาล น้ำมันงา แป้งสาลี และน้ำเข้าด้วยกัน ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน เมื่อเตาอบส่งเสียงเตือนครั้งที่ 3 ให้ผสมและคลุกส่วนผสมทั้งหมดเข้าด้วยกัน ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน หลังจากปรุงเสร็จ นำไปรับประทาน	

รหัส/อาหาร	ปริมาณอาหาร	ส่วนประกอบ
20 **ผัดวุ้นเส้น**	2 คน	วุ้นเส้นแช่น้ำ 150 กรัม, ผักกาดขาวหั่น 1 ถ้วย, แครอทหั่น 1 ถ้วย, เห็ดหอมหั่น 1 ถ้วย, ซอสหอยนางรม 2 ช้อนโต๊ะ, ซีอิ๊วขาวเห็ดหอม 1 ช้อนโต๊ะ, น้ำตาล ½ ช้อนชา, น้ำสต๊อก ¼ ถ้วย, พริกไทย ½ ช้อนชา, น้ำมัน 2 ช้อนโต๊ะ
	คำแนะนำ ใส่ผักทั้งหมดในชามและวางในเตาไมโครเวฟ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือน ผสมซอสหอยนางรม ซีอิ๊วขาว น้ำสต๊อก และน้ำมัน คนเข้ากับวุ้นเส้นและผัก ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือนครั้งที่ 2 นำส่วนผสมทั้งหมดมาคลุกให้เข้ากัน นำเข้าเตาอบ และกดปุ่มเริ่มทำงานอีกครั้ง หลังจากปรุงเสร็จ นำไปรับประทาน	
21 **กุ้งอบวุ้นเส้น**	2 คน	กุ้งลายเสือ 250 กรัม, เบคอน 4 เส้น, วุ้นเส้นแช่น้ำ 200 กรัม, พริกไทยเม็ด 1 ช้อนชา, พริกป่น 1 ช้อนชา, กระเทียมทุบ ¼ ถ้วย, ขิงแก่ฝาน 4 ชิ้น, ซอสหอยนางรม 2 ช้อนโต๊ะ, ซีอิ๊วขาว ½ ช้อนโต๊ะ, น้ำตาล ½ ช้อนโต๊ะ, น้ำมันงา ½ ช้อนชา, คื่นช่ายหั่น ½ ถ้วย
	คำแนะนำ ผสมซอสหอยนางรม ซีอิ๊ว น้ำตาล และน้ำมันงาเข้าด้วยกัน คลุกกุ้งและวุ้นเส้น พริกป่น คื่นช่าย พริกไทยเม็ด และกระเทียมทุบเข้าด้วยกัน วางเบคอนและส่วนผสมอื่นๆ ในถ้วย ใส่ในเตาไมโครเวฟ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือน ให้คลุกส่วนผสมแล้วนำเข้าเตาอบ และกดปุ่มเริ่มทำงาน หลังจากปรุงเสร็จ นำไปรับประทาน	

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 29 2019-09-11 11:02:13

รหัส/อาหาร	ปริมาณอาหาร	ส่วนประกอบ
22 **ลาบหมู**	2-4 คน	หมูสับ 250 กรัม, ตับหมู 100 กรัม, ใบสะระแหน่ ½ ถ้วย, หัวหอมซอย ½ ถ้วย, ต้นหอมซอย 3 ช้อนโต๊ะ, พริกป่น ½-1 ช้อนโต๊ะ, น้ำตาล ½ ช้อนโต๊ะ, น้ำหรือน้ำสต๊อก ½ ถ้วย, น้ำมะนาว 3 ช้อนโต๊ะ, น้ำปลา 1 ช้อนโต๊ะ, ข้าวคั่ว 2 ช้อนโต๊ะ
	คำแนะนำ ใส่หมูสับและตับในถ้วย เติมน้ำ ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน หลังจากอบเสร็จ เติมหัวหอม ต้นหอม และใบสะระแหน่ ปรุงรสด้วยน้ำมะนาว น้ำปลา ข้าวคั่ว พริกป่นและน้ำตาล นำมารับประทาน	
23 **กล้วยบวชชี**	2 คน	กล้วยหั่นปอกเปลือก 250 กรัม, กะทิ 1 ถ้วย, น้ำตาลปี๊บ 100 กรัม, น้ำ 1½ ถ้วย, เกลือ ¼ ช้อนชา
	คำแนะนำ ผสมกะทิ น้ำ น้ำตาลปี๊บ และเกลือ คนให้เข้ากันจนละลาย ใส่กล้วย ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน หลังจากปรุงเสร็จ นำไปรับประทาน	
24 **มันหวานต้มขิง**	2 คน	มันเทศปอกเปลือก 300 กรัม, ขิง 50 กรัม, น้ำตาล 150 กรัม, น้ำ 4 ถ้วย
	คำแนะนำ ปอกมัน ล้างและหั่นเป็นชิ้นขนาด 1"x1" ผสมส่วนผสมทั้งหมดเข้าด้วยกัน ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน หลังจากปรุงเสร็จ นำไปรับประทาน	

รหัส/อาหาร	ปริมาณอาหาร	ส่วนประกอบ
25 **น้ำนมข้าวกล้อง**	2-4 คน	ถั่วเหลืองแช่น้ำ 3 ถ้วย, ข้าวกล้องแช่น้ำ 1 ถ้วย, น้ำตาล ½ ถ้วย, เกลือ ¼ ช้อนชา, น้ำ 5 ถ้วย, ใบเตย 1 ใบ, ถั่วแดงหรือเจลลี่สำหรับรับประทานร่วมกัน
	คำแนะนำ แช่ถั่วเหลืองและข้าวกล้องในน้ำร้อนเป็นเวลา 3-5 ชั่วโมง ผสมน้ำ 5 ถ้วย กรองเอากากออก เทใส่ถ้วย แล้วใส่ใบเตย น้ำตาล เกลือ ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน หลังจากปรุงเสร็จแล้ว ให้ดื่มขณะร้อนพร้อมกับถั่วแดงหรือธัญพืชอื่นๆ	
26 **ช็อกโกแลตร้อน**	4 คน	นม 3 ถ้วย, น้ำตาล ½ ถ้วย, ผงโกโก้ 2–3 ช้อนโต๊ะ, อบเชยป่น ½ ช้อนโต๊ะ
	คำแนะนำ แบ่งนม 1 ถ้วยมาผสมกับส่วนผสมอื่น ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน เมื่อมีเสียงเตือน ให้เทนมที่เหลืออยู่ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน หลังจากปรุงเสร็จ รับประทานขณะยังร้อน	
27 **น้ำพันช์ตะไคร้**	3-4 คน	ตะไคร้ 10 ต้น, น้ำสับปะรด ⅔ ถ้วย, ขิงฝานแว่น 4 แว่น, น้ำผึ้ง ¼ ถ้วย, น้ำ 3 ถ้วย
	คำแนะนำ ทุบตะไคร้และใส่ลงในน้ำในถ้วย ใส่ในเตาอบ และกดปุ่มเริ่มทำงาน หลังจากปรุงเสร็จ ทิ้งไว้ให้เย็น ผสมกับส่วนผสมอื่นๆ รับประทานกับน้ำแข็ง	
28 **ชาสะระแหน่มะนาว**	3-4 คน	ใบสะระแหน่ 1 ถ้วย, น้ำตาลทรายแดง ½ ถ้วย, น้ำมะนาว 2 ช้อนโต๊ะ และมะนาวเป็นชิ้น, น้ำ 4 ถ้วย
	คำแนะนำ ใส่ใบสะระแหน่และน้ำในเตาไมโครเวฟ และกดปุ่มเริ่มทำงาน หลังจากอบเสร็จแล้ว ให้ผสมกับน้ำตาลทรายแดงและน้ำมะนาว รับประทานขณะร้อน	

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 30 2019-09-11 11:02:13

การใช้คุณสมบัติ ละลายน้ำแข็ง

คุณสมบัติ **ละลายน้ำแข็ง** ช่วยให้คุณละลายเนื้อ ไก่ ปลา ขนมปัง เค้ก หรือผลไม้ที่แช่แข็งไว้ได้ เวลาและระดับพลังงานจะถูกกำหนดโดยอัตโนมัติ คุณเพียงแต่เลือกโปรแกรมและน้ำหนักเท่านั้น


หมายเหตุ

ใช้กับผลิตภัณฑ์สำหรับไมโครเวฟเท่านั้น

เปิดประตู วางอาหารที่ส่วนกลางของจานหมุน ปิดประตู



1. กดปุ่ม **ละลายน้ำแข็ง**

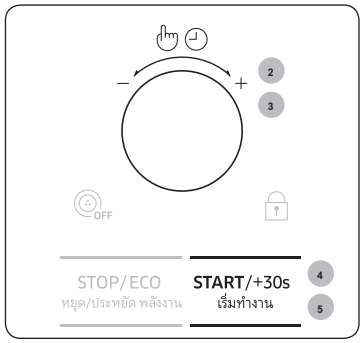

2. เลือกประเภทของอาหารที่ปรุง ด้วยการหมุน**ปุ่มเลือกหลายฟังก์ชัน** โปรดดูตารางในหน้าถัดไป เพื่อดูคำอธิบายการตั้งค่าต่างๆ ในขั้นตอนนี้ ให้กด**ปุ่มเลือกหลายฟังก์ชัน** เพื่อเลือกประเภทอาหาร
3. เลือกปริมาณอาหารด้วยการหมุน**ปุ่มเลือกหลายฟังก์ชัน**
4. กดปุ่ม **เริ่มทำงาน**

   ผลลัพธ์:
   - การละลายน้ำแข็งจะเริ่มขึ้น
   - ในการละลายน้ำแข็ง เตาอบจะส่งเสียงเตือนให้ทราบว่าคุณต้องกลับอาหาร
5. กดปุ่ม **เริ่มทำงาน** อีกครั้ง เพื่อละลายน้ำแข็งจนเสร็จ

   ผลลัพธ์: และเมื่อเสร็จแล้ว

   1) เตาอบจะส่งเสียงเตือน 4 ครั้ง
   2) สัญญาณเตือนสิ้นสุดการทำงานจะส่งเสียง 3 ครั้ง (นาทีละครั้ง)
   3) เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง

คำแนะนำสำหรับการละลายน้ำแข็ง

ตารางต่อไปนี้เป็นการตั้งโปรแกรม **ละลายน้ำแข็ง** ต่างๆ รวมทั้งปริมาณและคำแนะนำที่เหมาะสม โปรดนำบรรจุภัณฑ์ออกจากอาหารก่อนที่จะละลายน้ำแข็ง วางเนื้อ เปิดไก่ และปลาในจานแก้วหรือกระเบื้องกันแบน จัดวางขนมปังและเค้กและผลไม้บนกระดาษซับมัน

รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
1 เนื้อวัว	200-1500 กรัม	หุ้มส่วนขอบด้วยฟอยล์อะลูมิเนียม กลับเนื้อเมื่อได้ยินเสียงจากเตาอบ โปรแกรมนี้เหมาะสำหรับเนื้อ แกะ หมู สเต็ก เนื้อเป็นชิ้น เนื้อสับ พักอาหารเป็นเวลา 20-60 นาที
2 เนื้อไก่	200-1500 กรัม	หุ้มขาและปลายปีกด้วยฟอยล์อะลูมิเนียม กลับอาหารเมื่อได้ยินเสียงจากเตาอบ โปรแกรมนี้เหมาะสำหรับไก่ทั้งตัว หรือไก่ที่หั่นเป็นชิ้น พักอาหารเป็นเวลา 20-60 นาที
3 เนื้อปลา	200-1500 กรัม	หุ้มส่วนหางของปลาที่ยังไม่หั่นด้วยฟอยล์อะลูมิเนียม กลับอาหารเมื่อได้ยินเสียงจากเตาอบ โปรแกรมนี้เหมาะสำหรับปลาทั้งตัว หรือปลาชิ้น พักอาหารเป็นเวลา 20-50 นาที

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 31 2019-09-11 11:02:13

รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
4 **ขนมปัง/ขนมเค้ก**	125-1000 กรัม	วางขนมปังแนวนอนบนกระดาษอเนกประสงค์และกลับด้านเมื่อมีเสียงเตือน วางเค้กบนจานกระเบื้อง และพลิกกลับด้านเมื่อได้ยินเสียงสัญญาณจากเตาอบ (เตาอบจะทำงานต่อไป และจะหยุดเมื่อคุณเปิดประตู) โปรแกรมนี้เหมาะสำหรับขนมปังทุกประเภท ไม่ว่าจะเป็นแบบตัดหรือทั้งก้อน เช่นเดียวกับขนมปังก้อนและแท่งแบบฝรั่งเศส วางก้อนขนมปังเป็นวงกลม โปรแกรมนี้เหมาะกับยีสต์เค้ก บิสกิต ชีสเค้ก และพัฟทุกประเภท แต่ไม่เหมาะสำหรับขนมพาสทรีแบบชอตหรือครัสต์ เค้กผลไม้หรือครีม รวมทั้งเค้กราดช็อกโกแลต พักอาหารเป็นเวลา 10-30 นาที
5 **ผลไม้**	100-600 กรัม	วางผลไม้ให้เสมอกันในจานแก้วกันแบน โปรแกรมนี้เหมาะกับผลไม้ทุกประเภท พักอาหารเป็นเวลา 5-20 นาที

การใช้คุณสมบัติ แป้งขนมปัง/โยเกิร์ต

คุณสมบัติ **แป้งขนมปัง/โยเกิร์ต** 5 แบบ ประกอบด้วยเวลาในการปรุงอาหารที่กำหนดไว้แล้ว โดยคุณไม่จำเป็นต้องตั้งเวลาอบหรือระดับพลังงานอีก

คุณสามารถปรับประเภทแป้งโดว์/โยเกิร์ตได้ด้วยการหมุน**ปุ่มเลือกหลายฟังก์ชัน** หลังจากกดปุ่ม **แป้งขนมปัง/โยเกิร์ต**

ขั้นแรก วางอาหารที่ส่วนกลางของจานหมุน และปิดประตู



1. กดปุ่ม **แป้งขนมปัง/โยเกิร์ต**



2. เลือกแป้งขนมปังหรือโยเกิร์ต แล้วกด**ปุ่มเลือกหลายฟังก์ชัน**
   1. การหมักแป้ง
   2. โยเกิร์ตโฮมเมด
3. เลือกประเภทของอาหารที่ปรุง ด้วยการหมุน**ปุ่มเลือกหลายฟังก์ชัน** โปรดดูตารางในหน้าถัดไป เพื่อดูคำอธิบายการตั้งค่าต่างๆ
4. กดปุ่ม **เริ่มทำงาน**

☛ **ข้อสำคัญ**

จานหมุนจะไม่ทำงานในระหว่างการทำโยเกิร์ต

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 32 2019-09-11 11:02:13

คำแนะนำสำหรับคุณสมบัติแป้งขนมปัง/โยเกิร์ต

ตารางต่อไปนี้จะแสดงวิธีใช้โปรแกรมอัตโนมัติสำหรับการทำแป้งยีสต์ให้ขึ้นหรือการเตรียมโยเกิร์ต

1. การหมักแป้ง


รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
1-1 **แป้งพิซซ่า**	300-500 กรัม	วางแป้งบนชามขนาดพอเหมาะและตั้งบนตะแกรงต่ำ ปิดด้วยฟอยล์อะลูมิเนียม
1-2 **แป้งเค้ก**	500-800 กรัม	วางแป้งบนชามขนาดพอเหมาะและตั้งบนตะแกรงต่ำ ปิดด้วยฟอยล์อะลูมิเนียม
1-3 **แป้งขนมปัง**	600-900 กรัม	วางแป้งบนชามขนาดพอเหมาะและตั้งบนตะแกรงต่ำ ปิดด้วยฟอยล์อะลูมิเนียม

2. โยเกิร์ต


รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
2-1 **ถ้วยเล็ก**	500 กรัม	แบ่งโยเกิร์ตธรรมชาติ 150 กรัมลงในถ้วยเซรามิค 5 ถ้วยหรือโถแก้วขนาดเล็กให้เท่าๆ กัน (30 กรัมต่อถ้วย) เติมนม 100 มล. ในแต่ละถ้วย ใช้นมชนิดสเตอริไลซ์ (อุณหภูมิห้อง; ไขมัน 3,5 %) ปิดถ้วยแต่ละใบด้วยฟิล์มสำหรับไมโครเวฟและตั้งเป็นวงกลมบนจานหมุน หลังจากเสร็จแล้ว ให้เก็บไว้ในตู้เย็นเป็นเวลา 6 ชั่วโมง สำหรับครั้งแรก เราขอแนะนำให้ใช้เชื้อแบคทีเรียโยเกิร์ตแบบแห้ง
2-2 **ถ้วยใหญ่**	500 กรัม	ผสมโยเกิร์ตธรรมชาติ 150 กรัมกับนมชนิดสเตอริไลซ์ 500 มล. (อุณหภูมิห้อง; ไขมัน 3.5 %) เทลงในชามแก้วขนาดใหญ่ให้เสมอกัน ปิดด้วยฟิล์มสำหรับไมโครเวฟและตั้งบนจานหมุน หลังจากเสร็จแล้ว ให้เก็บไว้ในตู้เย็นเป็นเวลา 6 ชั่วโมง สำหรับครั้งแรก เราขอแนะนำให้ใช้เชื้อแบคทีเรียโยเกิร์ตแบบแห้ง

การใช้จานอบเกรียม


คุณสามารถใช้จานอบเกรียมนี้เพื่อทำให้อาหารเหลืองเกรียม ไม่เพียงเฉพาะด้านบน แต่ยังรวมถึงด้านล่างของอาหารที่กรอบเหลืองด้วยอุณหภูมิของจานอบเกรียม คุณสามารถอบอาหารหลากหลายชนิดด้วยจานอบเกรียมนี้ ดังที่จะแสดงในตาราง (ดูหน้าถัดไป) จานอบเกรียมนี้ยังใช้ได้กับเบคอน ไข่ ไส้กรอก อีกด้วย

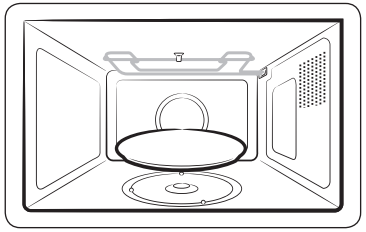

1. วางจานอบเกรียมไว้บนจานหมุน และอุ่นด้วยไมโครเวฟ + ย่าง ความร้อนสูงสุด [600 W + ย่าง] ตามเวลาและคำแนะนำที่แสดงในตาราง
2. ทาน้ำมันบนจาน ถ้าคุณต้องการทำอาหารเช่นเบคอนและไข่ดาว เพื่อให้อาหารสุกเกรียมน่ารับประทาน
3. วางอาหารบนจานอบเกรียม



4. วางจานอบเกรียมไว้บนตะแกรงโลหะ (หรือจานหมุน) ในไมโครเวฟ



5. เลือกเวลาและระดับพลังงานในการปรุงอาหาร (โปรดดูตารางที่ด้านข้าง)

⚠ ข้อควรระวัง

- โปรดใช้ถุงมือกันความร้อนเสมอเมื่อจับจานสำหรับอบเกรียม เนื่องจากจานนี้จะร้อนจัด
- โปรดอย่าวางภาชนะที่ไม่ทนความร้อนบนจานอบเกรียม
- ห้ามวางจานอบเกรียมโดยไม่ใช้จานหมุนเด็ดขาด
- โปรดทราบว่าจานอบเกรียมไม่สามารถใช้ในเครื่องล้างจานได้

หมายเหตุ

- โปรดทราบว่าจานอบเกรียมนี้มีชั้นของเทฟล่อน ซึ่งจะไม่ทนต่อการขูดขีด โปรดอย่าใช้ของมีคมเช่นมีดเพื่อตัดอาหารบนจานอบเกรียม
- ทำความสะอาดจานอบเกรียมด้วยน้ำอุ่นและน้ำยาล้างจาน จากนั้นล้างออกด้วยน้ำสะอาด
- ห้ามใช้แปรงขัดหรือฟองน้ำที่แข็งหยาบเกินไป เนื่องจากจะทำให้ผิวหน้าของจานเสียหาย

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 33 2019-09-11 11:02:14

การใช้เตาอบ

Hot Blast

โหมด Hot Blast นั้นคล้ายกับโหมดอบด้วยความร้อน โดยไม่มีการใช้พลังไมโครเวฟ คุณสามารถกำหนดอุณหภูมิได้ตามต้องการ ตั้งแต่ 40 °C ถึง 200 °C และสามารถตั้งเวลาได้สูงสุด 60 นาที

- โปรดใช้ถุงมือกันความร้อนทุกครั้งที่สัมผัสภาชนะในเตา เนื่องจากภาชนะเหล่านี้จะร้อนจัด
- คุณสามารถใช้ตะแกรงต่ำเพื่อให้อาหารสุกยิ่งขึ้น และเหลืองน่ารับประทาน

เปิดประตูเตาอบและวางภาชนะบนตะแกรงต่ำ และนำไปวางบนจานหมุน



1. กดปุ่ม **Hot Blast**

   ผลลัพธ์: หน้าจอจะแสดงผลดังนี้:

   (โหมด Hot Blast)

   180 °C (อุณหภูมิ)



2. ตั้งอุณหภูมิโดยหมุน**ปุ่มเลือกหลายฟังก์ชัน**

   (อุณหภูมิ : 40-200 °C, ช่วงละ 10 °C)

   - ถ้าไม่ตั้งค่าอุณหภูมิภายใน 5 วินาที เครื่องจะเปลี่ยนเป็นขั้นตอนการตั้งค่าเวลาปรุงอาหารโดยอัตโนมัติ
3. กด **ปุ่มเลือกหลายฟังก์ชัน**
4. ตั้งค่าเวลาปรุงอาหารโดยหมุน**ปุ่มเลือกหลายฟังก์ชัน**

   (ถ้าต้องการอุ่นเตาอบ ให้เลือก " : 0")
5. กดปุ่ม **เริ่มทำงาน**

   ผลลัพธ์: การอบจะเริ่มต้น และเมื่อเสร็จแล้ว

   1) เตาอบจะส่งเสียงเตือน 4 ครั้ง


   2) สัญญาณเตือนสิ้นสุดการทำงานจะส่งเสียง 3 ครั้ง (นาทีละครั้ง)

   3) เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง

การย่าง

การย่างช่วยให้คุณอุ่นและทำให้อาหารเกรียมได้อย่างรวดเร็ว โดยไม่ต้องใช้ไมโครเวฟ

- โปรดใช้ถุงมือกันความร้อนทุกครั้งที่สัมผัสภาชนะในเตา เนื่องจากภาชนะเหล่านี้จะร้อนจัด
- คุณสามารถใช้ตะแกรงสูงเพื่อให้อาหารสุกยิ่งขึ้น และเหลืองน่ารับประทาน

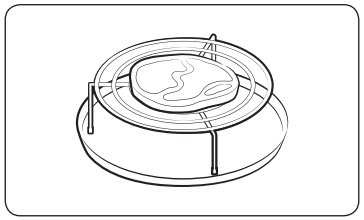

1. เปิดประตูเตาอบและวางภาชนะบนตะแกรง



2. กดปุ่ม **ย่าง**

   ผลลัพธ์: หน้าจอจะแสดงผลดังนี้:

   (โหมดย่าง)

   - คุณไม่สามารถกำหนดอุณหภูมิสำหรับการย่าง



3. ตั้งค่าเวลาย่างโดยหมุน**ปุ่มเลือกหลายฟังก์ชัน**
   - เวลาย่างสูงสุดคือ 60 นาที
4. กดปุ่ม **เริ่มทำงาน**

   ผลลัพธ์: เริ่มต้นการย่าง และเมื่อเสร็จแล้ว


   1) เตาอบจะส่งเสียงเตือน 4 ครั้ง

   2) สัญญาณเตือนสิ้นสุดการทำงานจะส่งเสียง 3 ครั้ง (นาทีละครั้ง)

   3) เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 34 2019-09-11 11:02:14

การเลือกอุปกรณ์เสริม

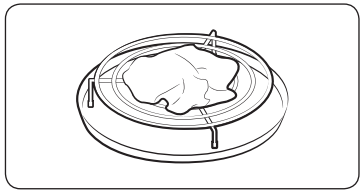

การปรุงอาหารด้วยเตาอบทั่วไปต้องใช้ภาชนะที่เหมาะสม คุณควรใช้เฉพาะภาชนะที่ใช้ในเตาอบธรรมดาเท่านั้น
ภาชนะที่เหมาะสำหรับไมโครเวฟมักจะไม่เหมาะกับการอบด้วยความร้อน
โปรดอย่าใช้ภาชนะหรือจานพลาสติก ถ้วยกระดาษ กระดาษเช็ดปาก เป็นต้น
หากคุณต้องการเลือกการอบแบบผสม (ไมโครเวฟและย่างหรือ Hot Blast) โปรดใช้ภาชนะที่เหมาะสำหรับเตาไมโครเวฟและเตาอบเท่านั้น

ข้อสำคัญ

โปรดดูรายละเอียดเพิ่มเติมเกี่ยวกับภาชนะหรือเครื่องใช้ที่เหมาะสมในคู่มือสำหรับอุปกรณ์การทำอาหารที่หน้า 39

การใช้ไมโครเวฟร่วมกับการย่าง

คุณสามารถใช้ไมโครเวฟร่วมกับการย่าง เพื่อให้อาหารสุกเร็ว และเหลืองเกรียมในขณะเดียวกัน

ข้อสำคัญ

โปรดใช้ภาชนะและเครื่องครัวที่ใช้กับไมโครเวฟและเตาอบ จานแก้วหรือกระเบื้องจะเหมาะสมที่สุด เนื่องจากจะช่วยให้ไมโครเวฟเข้าสู่อาหารทั่วถึงกัน


ข้อสำคัญ

โปรดใช้ถุงมือกันความร้อนทุกครั้งที่สัมผัสภาชนะในเตา เนื่องจากภาชนะเหล่านี้จะร้อนจัด
คุณสามารถใช้ตะแกรงสูงเพื่อให้อาหารสุกยิ่งขึ้น และเหลืองน่ารับประทาน

เปิดประตู วางอาหารบนตะแกรงที่เหมาะกับอาหารที่จะปรุง วางตะแกรงบนจานหมุน ปิดประตู




1. กดปุ่ม **ระบบผสม**
   ผลลัพธ์: หน้าจอจะแสดงผลดังนี้:
   Cb-1 (ไมโครเวฟ + ย่าง)

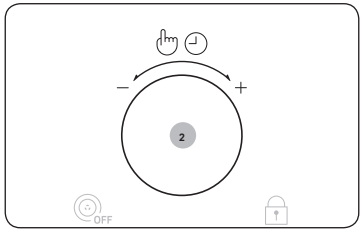

2. ทำให้จอแสดงผลแสดง Cb-1 แล้วกด**ปุ่มเลือกหลายฟังก์ชัน**
   ผลลัพธ์: หน้าจอจะแสดงผลดังนี้:
   (ระบบผสมไมโครเวฟและย่าง)
   600 วัตต์ (กำลังไฟฟ้า)

การใช้งาน

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 35 2019-09-11 11:02:15

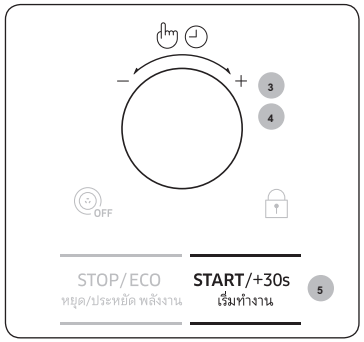

3. เลือกระดับพลังงานที่เหมาะสม โดยหมุน**ปุ่มเลือกหลายฟังก์ชัน**จนกว่าจอจะแสดงกำลังไฟที่ต้องการ (600, 450, 300 วัตต์)
   ในขั้นตอนนี้ ให้กด**ปุ่มเลือกหลายฟังก์ชัน**เพื่อตั้งค่าระดับพลังงาน
   - คุณไม่สามารถกำหนดอุณหภูมิสำหรับการย่าง
   - ถ้าไม่ตั้งค่าอุณหภูมิภายใน 5 วินาที เครื่องจะเปลี่ยนเป็นขั้นตอนการตั้งค่าเวลาปรุงอาหารโดยอัตโนมัติ
4. ตั้งค่าเวลาปรุงอาหารโดยหมุน**ปุ่มเลือกหลายฟังก์ชัน**
   - เวลาอบสูงสุดคือ 60 นาที
5. กดปุ่ม **เริ่มทำงาน**

   ผลลัพธ์: การปรุงแบบผสมจะเริ่มต้น และเมื่อเสร็จแล้ว
   1) เตาอบจะส่งเสียงเตือน 4 ครั้ง
   2) สัญญาณเตือนสิ้นสุดการทำงานจะส่งเสียง 3 ครั้ง (นาทีละครั้ง)
   3) เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง

การใช้ไมโครเวฟผสม Hot Blast

การอบด้วยระบบผสมใช้ทั้งพลังงานไมโครเวฟและพลังงานความร้อน Hot Blast คุณไม่จำเป็นต้องอุ่นเตาอบให้ร้อน เนื่องจากเตาอบสามารถใช้พลังงานไมโครเวฟได้ทันที

คุณสามารถปรุงอาหารหลายประเภทโดยใช้การอบแบบผสม โดยเฉพาะอย่างยิ่ง:

- เนื้อและไก่อบ
- พายและเค้ก
- อาหารไข่และชีส

ข้อสำคัญ

โปรดใช้ภาชนะและเครื่องครัวที่ใช้กับไมโครเวฟและเตาอบ จานแก้วหรือกระเบื้องจะเหมาะสมที่สุด เนื่องจากจะช่วยให้ไมโครเวฟเข้าสู่อาหารทั่วถึงกัน

ข้อสำคัญ

โปรดใช้ถุงมือกันความร้อนทุกครั้งที่สัมผัสภาชนะในเตา เนื่องจากภาชนะเหล่านี้จะร้อนจัด คุณสามารถใช้ตะแกรงต่ำเพื่อให้อาหารสุกยิ่งขึ้น และเหลืองน่ารับประทาน


เปิดประตู วางอาหารบนจานหมุน หรือใช้ตะแกรงแบบต่ำซึ่งต้องนำไปวางบนจานหมุนอีกที ปิดประตู ขดลวดความร้อนจะต้องอยู่ในแนวนอน



1. กดปุ่ม **ระบบผสม**

   ผลลัพธ์: หน้าจอจะแสดงผลดังนี้:

   Cb-1 (ไมโครเวฟ + ย่าง)

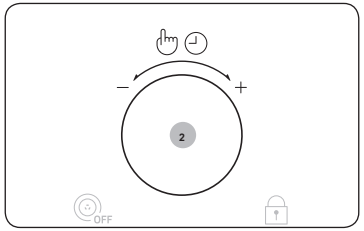


2. ทำให้จอแสดงผลแสดง Cb-2 (ไมโครเวฟ + Hot Blast) ด้วยการหมุน**ปุ่มเลือกหลายฟังก์ชัน** แล้วกดปุ่มเลือกหลายฟังก์ชัน

   ผลลัพธ์: หน้าจอจะแสดงผลดังนี้:

   (ระบบผสมไมโครเวฟและ Hot Blast)

   600 วัตต์ (กำลังไฟฟ้า)

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 36 2019-09-11 11:02:15

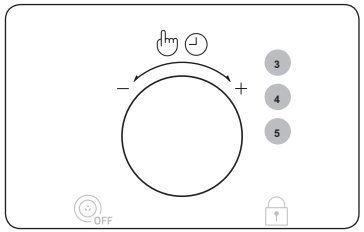

3. เลือกระดับพลังงานที่เหมาะสม โดยหมุน**ปุ่มเลือกหลายฟังก์ชัน**จนกว่าจอจะแสดงกำลังไฟที่ต้องการ (600, 450, 300, 180, 100 วัตต์)
   ในขั้นตอนนี้ ให้กด**ปุ่มเลือกหลายฟังก์ชัน**เพื่อตั้งค่าระดับพลังงาน
   • ถ้าไม่ตั้งค่าระดับพลังงานภายใน 5 วินาที เครื่องจะเปลี่ยนเป็นขั้นตอนการตั้งค่าเวลาปรุงอาหารโดยอัตโนมัติ
   (เริ่มต้น: 600 วัตต์)
   ผลลัพธ์: หน้าจอจะแสดงผลดังนี้:
   (ระบบผสมไมโครเวฟและ Hot Blast)
   180 °C (อุณหภูมิ)
4. เลือกอุณหภูมิที่เหมาะสมโดยหมุน**ปุ่มเลือกหลายฟังก์ชัน**
   (อุณหภูมิ : 200-40 °C)
   ในขั้นตอนนี้ ให้กด**ปุ่มเลือกหลายฟังก์ชัน**เพื่อตั้งค่าระดับพลังงาน
   • ถ้าไม่ตั้งค่าอุณหภูมิภายใน 5 วินาที เครื่องจะเปลี่ยนเป็นขั้นตอนการตั้งค่าเวลาปรุงอาหารโดยอัตโนมัติ
   (เริ่มต้น: 180 °C)
5. ตั้งค่าเวลาปรุงอาหารโดยหมุน**ปุ่มเลือกหลายฟังก์ชัน**
   • เวลาอบสูงสุดคือ 60 นาที



6. กดปุ่ม **เริ่มทำงาน**
   ผลลัพธ์: การปรุงแบบผสมจะเริ่มต้น เตาอบจะเพิ่มความร้อนจนถึงระดับที่ต้องการ และจากนั้นจะอบด้วยไมโครเวฟจนหมดเวลาอบที่ตั้งไว้ และเมื่อเสร็จแล้ว
   1) เตาอบจะส่งเสียงเตือน 4 ครั้ง
   2) สัญญาณเตือนสิ้นสุดการทำงานจะส่งเสียง 3 ครั้ง (นาทีละครั้ง)
   3) เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 37 2019-09-11 11:02:15

การใช้เตาอบ

การใช้คุณสมบัติเปิด/ปิดจานหมุน

ปุ่ม**เปิด/ปิดจานหมุน**ช่วยให้คุณสามารถใช้จานที่มีขนาดใหญ่เต็มเตา โดยหยุดการทำงานของจานหมุน (เฉพาะการปรุงอาหารด้วยตนเองเท่านั้น)


ข้อสำคัญ

ผลการปรุงอาหารในกรณีนี้อาจไม่ดีเท่าที่ควร เนื่องจากทำได้ไม่ทั่วถึงดี ขอแนะนำให้คุณหมุนจานเองขณะที่ปรุงอาหารไปได้ครึ่งหนึ่ง

คำเตือน

ห้ามอบจานหมุนเปล่าๆ โดยที่ไม่มีอาหารในเตา

สาเหตุ: อาจทำให้เกิดไฟไหม้ หรือความเสียหายกับตัวเครื่อง

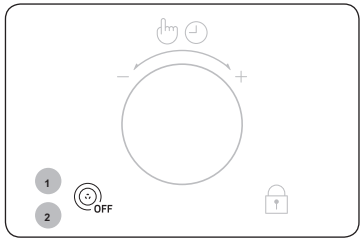

1. กดปุ่ม**เปิด/ปิดจานหมุน**ในระหว่างตั้งค่าฟังก์ชันไมโครเวฟ ย่าง Hot Blast อุ่น และระบบผสม
   - ไม่สามารถใช้ได้กับฟังก์ชันที่ตั้งโปรแกรมไว้ล่วงหน้าหรือก่อนที่จะกดปุ่ม **ไมโครเวฟ**, **ย่าง**, **Hot Blast**, **อุ่นเตา** และ **ระบบผสม**

   ผลลัพธ์: สัญลักษณ์ **เปิด/ปิดจานหมุน** จะปรากฏบนจอแสดงผล จานหมุนจะไม่หมุนในระหว่างการอบ

   OFF (โหมดปิดจานหมุน)
2. ในการใช้งานจานหมุนเช่นเดิม ให้กดปุ่ม**เปิด/ปิดจานหมุน**อีกครั้ง


   ผลลัพธ์: สัญลักษณ์ **เปิด/ปิดจานหมุน** จะหายไปจากจอแสดงผล จานหมุนจะเริ่มหมุน

หมายเหตุ

ปุ่ม**เปิด/ปิดจานหมุน**จะสามารถใช้ได้เฉพาะในระหว่างการอบเท่านั้น

การใช้ฟังก์ชันล็อคป้องกันเด็ก

เตาไมโครเวฟของคุณมีโปรแกรมป้องกันเพื่อความปลอดภัยของเด็ก ซึ่งจะ “ล็อค” เตาอบไม่ให้เด็กหรือบุคคลที่ไม่คุ้นเคยสามารถใช้เตาอบได้

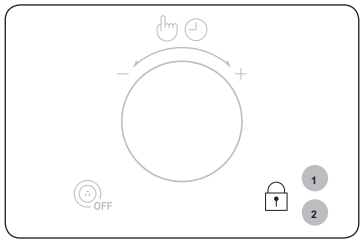

1. กดปุ่ม**ล็อคป้องกันเด็ก**เป็นเวลา 3 วินาที

   ผลลัพธ์:
   - เตาอบจะถูกล็อค (ไม่สามารถเลือกฟังก์ชันใดได้)
   - จอแสดงผลจะแสดงสัญลักษณ์ “L”

   
2. หากต้องการปลดล็อคเตาอบ ให้กดปุ่ม**ล็อคป้องกันเด็ก**เป็นเวลา 3 วินาที

   ผลลัพธ์: คุณจะสามารถใช้เตาอบได้ตามปกติ

การปิดเสียงเตือน

คุณสามารถปิดเสียงเตือนของเตาอบได้ตามต้องการ



1. กดปุ่ม **เริ่มทำงาน** และปุ่ม **หยุด/ประหยัดพลังงาน** พร้อมกัน

   ผลลัพธ์: เตาอบจะไม่ส่งเสียงเตือนเมื่อจบการทำงาน
   - หน้าจอจะแสดงผลดังนี้

   
2. ในการเปิดเสียงเตือนอีกครั้ง ให้กดปุ่ม **เริ่มทำงาน** และปุ่ม **หยุด/ประหยัดพลังงาน** พร้อมกันอีกครั้ง

   ผลลัพธ์: เตาอบจะกลับมาทำงานตามปกติ
   - หน้าจอจะแสดงผลดังนี้

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 38 2019-09-11 11:02:16

คู่มือสำหรับอุปกรณ์การทำอาหาร

ในการอบอาหารด้วยเตาไมโครเวฟ คลื่นไมโครเวฟจะต้องสามารถแทรกเข้าสู่อาหาร โดยไม่มีการสะท้อนหรือดูดซับโดยภาชนะ คุณจึงควรเลือกใช้อุปกรณ์อย่างรอบคอบ คุณควรเลือกภาชนะที่มีข้อความหรือเครื่องหมายว่าใช้กับไมโครเวฟได้ ตารางต่อไปนี้แสดงอุปกรณ์การทำอาหารประเภทต่างๆ และระบุว่าจะสามารถใช้กับเตาไมโครเวฟได้หรือไม่ และอย่างไร

อุปกรณ์	เหมาะสำหรับไมโครเวฟ	ความคิดเห็น
ฟอยล์อะลูมิเนียม	✓✗	สามารถใช้จำนวนเล็กน้อย เพื่อป้องกันส่วนที่ไม่ต้องการให้สุกเกินไป อาจมีประกายไฟ ถ้าฟอยล์อยู่ใกล้กับผนังของเตาอบมากเกินไป หรือใช้ฟอยล์มากเกินไป
จานอบเกรียม	✓	ห้ามอุ่นให้ร้อนเกิน 8 นาที
กระเบื้องและดินเผา	✓	กระเบื้องพอร์ซเลน ดินเผา ดินเผาเคลือบ และกระเบื้องเคลือบนั้นมักจะใช้ได้ดี ยกเว้นที่มีขอบโลหะ
จานโฟมหรือกระดาษแบบใช้แล้วทิ้ง	✓	อาหารแช่แข็งบางชนิดจะบรรจุในภาชนะประเภทนี้
บรรจุภัณฑ์ของอาหารจานด่วน		
• ถ้วยโฟม	✓	สามารถใช้อุ่นอาหาร ความร้อนสูงมากๆ จะทำให้โฟมละลาย
• ถุงกระดาษหรือหนังสือพิมพ์	✗	อาจติดไฟ
• กระดาษรีไซเคิลหรือขอบโลหะ	✗	อาจเกิดประกายไฟ
เครื่องแก้ว		
• ภาชนะที่ใช้ได้ในเตาอบและบนโต๊ะ	✓	ใช้ได้ หากไม่ประดับด้วยขอบโลหะ
• เครื่องแก้วบาง	✓	สามารถใช้อุ่นอาหารหรือของเหลว แก้วที่บางมากอาจแตกหรือร้าวหากได้รับความร้อนทันที
• โถแก้ว	✓	ต้องใช้โดยไม่ปิดฝา เหมาะสำหรับการอุ่นอาหารเท่านั้น

อุปกรณ์	เหมาะสำหรับไมโครเวฟ	ความคิดเห็น
โลหะ		
• จาน	✗	อาจเกิดประกายหรือติดไฟ
• ลวดสำหรับมัดปากถุงแช่แข็ง	✗	
กระดาษ		
• จาน ถ้วย กระดาษเช็ดปาก และกระดาษเช็ดมือ	✓	สำหรับการอบเวลาสั้นๆ และการอุ่นอาหาร และใช้ซับของเหลวที่มากเกินไป
• กระดาษรีไซเคิล	✗	อาจเกิดประกายไฟ
พลาสติก		
• ภาชนะ	✓	โดยเฉพาะพลาสติกทนความร้อน พลาสติกชนิดอื่นอาจบิดหรือเปลี่ยนสีเมื่อโดนความร้อนสูง ห้ามใช้พลาสติกแบบเมลามีน
• ฟิล์มสำหรับปิดอาหาร	✓	สามารถใช้เก็บรักษาความชื้น ไม่ควรสัมผัสกับอาหารโดยตรง ใช้ความระมัดระวังขณะนำฟิล์มออก เนื่องจากอาจมีไอร้อนออกมาด้วย
• ถุงแช่แข็ง	✓✗	เฉพาะชนิดที่ต้มได้หรือใช้กับเตาอบได้ ไม่ควรเป็นแบบกักอากาศ ซึ่งต้องใช้ส้อมเจาะก่อน ถ้าจำเป็นต้องใช้
กระดาษมันหรือกระดาษไข	✓	สามารถใช้เก็บรักษาความชื้นหรือกันอาหารกระเด็น

✓ : แนะนำ ✓✗ : ใช้อย่างระมัดระวัง ✗ : ไม่ปลอดภัย

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 39 2019-09-11 11:02:16

คู่มือการปรุงอาหาร

ไมโครเวฟ

พลังงานไมโครเวฟจะแทรกซึมในอาหาร โดยจะมีการดูดซับโดยน้ำ ไขมัน และน้ำตาลในอาหาร
ไมโครเวฟทำให้โมเลกุลของอาหารเคลื่อนไหวอย่างรวดเร็ว การเคลื่อนไหวอย่างรวดเร็วนี้ทำให้เกิดแรงเสียดทานของโมเลกุล และความร้อนจากแรงเสียดทานนี้ทำให้อาหารสุก

การปรุงอาหาร

ภาชนะสำหรับอบด้วยไมโครเวฟ:

ภาชนะที่ใช้จะต้องยอมให้พลังงานไมโครเวฟผ่าน เพื่อให้การอบมีประสิทธิภาพ คลื่นไมโครเวฟจะสะท้อนกับโลหะ เช่น สเตนเลส อะลูมิเนียม และทองแดง แต่จะสามารถแทรกซึมผ่านดินเผา แก้ว กระเบื้อง และพลาสติก เช่นเดียวกับกระดาษและไม้ ห้ามอบอาหารในภาชนะโลหะเด็ดขาด

อาหารที่เหมาะสำหรับการอบด้วยไมโครเวฟ:

อาหารหลายชนิดเหมาะสำหรับการอบด้วยไมโครเวฟ เช่นผัก ผลไม้ พาสต้า ข้าว ธัญพืช ถั่ว ปลา และเนื้อ ซึ่งแช่แข็งหรือสด ซอส คัสตาร์ด ซุป พุดดิ้งอบ ของแห้งและของหมักดอง โดยทั่วไปแล้ว ไมโครเวฟเหมาะสำหรับการอบอาหารแทบทุกชนิดที่สามารถอบด้วยวิธีนึ่ง ตัวอย่างเช่น การละลายเนยหรือช็อกโกแลต (โปรดดูเคล็ดลับ เทคนิค และคำแนะนำประกอบ)

การปิดหรือครอบอาหาร

การปิดหรือครอบอาหารระหว่างการอบเป็นสิ่งที่สำคัญ เนื่องจากน้ำจะกลายเป็นไอและมีผลต่อการอบอาหาร คุณสามารถปิดอาหารได้หลายวิธี เช่น ใช้จานกระเบื้อง ฝาพลาสติก หรือฟิล์มที่เหมาะกับไมโครเวฟ

เวลาพักอาหาร

เมื่อการอบอาหารเสร็จ เวลาพักอาหารจะช่วยให้อุณหภูมิในอาหารกระจายทั่วถึงกัน

คู่มือการปรุงอาหารสำหรับผักแช่แข็ง

ใช้อ่างแก้วทนไฟ (ไพเร็กซ์) ที่มีฝาปิด อบโดยปิดฝาและใช้เวลาน้อยที่สุด - โปรดดูในตาราง อบต่อไปเพื่อให้ได้ผลลัพธ์ตามต้องการ
คนอาหารสองครั้งระหว่างอบ และหนึ่งครั้งหลังการอบ เติมเกลือ เครื่องเทศ หรือเนยหลังการอบ ปิดฝาขณะพักอาหาร

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา (นาที)
ผักโขม	150 กรัม	600 วัตต์	5-6
	คำแนะนำ เติมน้ำเย็น 15 มล. (1 ช้อนโต๊ะ) รับประทานหลังจากพักไว้ 2-3 นาที		
บร็อคโคลี่	300 กรัม	600 วัตต์	8-9
	คำแนะนำ เติมน้ำเย็น 30 มล. (2 ช้อนโต๊ะ) รับประทานหลังจากพักไว้ 2-3 นาที		
ถั่ว	300 กรัม	600 วัตต์	7-8
	คำแนะนำ เติมน้ำเย็น 15 มล. (1 ช้อนโต๊ะ) รับประทานหลังจากพักไว้ 2-3 นาที		
ถั่วเขียว	300 กรัม	600 วัตต์	7½-8½
	คำแนะนำ เติมน้ำเย็น 30 มล. (2 ช้อนโต๊ะ) รับประทานหลังจากพักไว้ 2-3 นาที		
ผักรวม (แครอท/ถั่วหวาน/ข้าวโพด)	300 กรัม	600 วัตต์	7-8
	คำแนะนำ เติมน้ำเย็น 15 มล. (1 ช้อนโต๊ะ) รับประทานหลังจากพักไว้ 2-3 นาที		
ผักรวม (แบบจีน)	300 กรัม	600 วัตต์	7½-8½
	คำแนะนำ เติมน้ำเย็น 15 มล. (1 ช้อนโต๊ะ) รับประทานหลังจากพักไว้ 2-3 นาที		

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 40 2019-09-11 11:02:16

คู่มือการปรุงอาหารสำหรับผักสด

ใช้อ่างแก้วทนไฟ (ไพเร็กซ์) ที่มีฝาปิด เติมน้ำเย็น 30-45 มล. (2-3 ช้อนโต๊ะ) สำหรับอาหาร 250 กรัม ยกเว้นมีการแนะนำปริมาณน้ำนอกเหนือไปจากนี้ โปรดอ่านตาราง อบโดยปิดฝาและใช้เวลาน้อยที่สุด - โปรดดูในตาราง อบต่อไปเพื่อให้ได้ผลลัพธ์ตามต้องการ คนหนึ่งครั้งระหว่างและหลังการอบ เติมเกลือ เครื่องเทศ หรือเนยหลังการอบ ปิดฝาขณะพักอาหารเป็นเวลา 3 นาที

คำแนะนำ: หั่นผักสดออกเป็นชิ้นเท่าๆ กัน ผักชิ้นเล็กจะใช้เวลาอบน้อยกว่า

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา (นาที)
บร็อคโคลี่	250 กรัม 500 กรัม	900 วัตต์	4-4½ 6-7
	คำแนะนำ หั่นเป็นช่อขนาดเท่ากัน วางส่วนก้านไว้ตรงกลาง รับประทานหลังจากพักไว้ 3 นาที		
กะหล่ำบรัสเซล	250 กรัม	900 วัตต์	5½-6
	คำแนะนำ เติมน้ำ 60-75 มล. (5-6 ช้อนโต๊ะ) รับประทานหลังจากพักไว้ 3 นาที		
แครอท	250 กรัม	900 วัตต์	4-4½
	คำแนะนำ ฝานแครอทเป็นชิ้นเท่าๆ กัน รับประทานหลังจากพักไว้ 3 นาที		
ดอกกะหล่ำ	250 กรัม 500 กรัม	900 วัตต์	4-4½ 6½-7½
	คำแนะนำ หั่นเป็นช่อขนาดเท่ากัน หั่นแบ่งช่อขนาดใหญ่เป็นครึ่ง วางส่วนก้านไว้ตรงกลาง รับประทานหลังจากพักไว้ 3 นาที		

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา (นาที)
ซูกินี	250 กรัม	900 วัตต์	3½-4
	คำแนะนำ ฝานเป็นชิ้นบางๆ เติมน้ำ 30 มล. (2 ช้อนโต๊ะ) หรือเนยหนึ่งก้อน อบให้นุ่ม รับประทานหลังจากพักไว้ 3 นาที		
มะเขือม่วง	250 กรัม	900 วัตต์	3-3½
	คำแนะนำ ฝานมะเขือออกเป็นชิ้นบางๆ และเติมน้ำมะนาว 1 ช้อนโต๊ะ รับประทานหลังจากพักไว้ 3 นาที		
กระเทียมต้น	250 กรัม	900 วัตต์	3½-4
	คำแนะนำ หั่นเป็นชิ้นค่อนข้างหนา รับประทานหลังจากพักไว้ 3 นาที		
เห็ด	125 กรัม 250 กรัม	900 วัตต์	1½-2 2½-3
	คำแนะนำ เตรียมเห็ดหัวเล็กทั้งหัว หรือหัวใหญ่ฝานเป็นแว่น อย่าเติมน้ำ ให้บีบน้ำมะนาวเล็กน้อย โรยเกลือและพริกไทย เทน้ำออกก่อนรับประทาน รับประทานหลังจากพักไว้ 3 นาที		
หัวหอม	250 กรัม	900 วัตต์	4-4½
	คำแนะนำ ฝานหัวหอมเป็นแว่น หรือหั่นครึ่ง เติมน้ำ 15 มล. (1 ช้อนโต๊ะ) รับประทานหลังจากพักไว้ 3 นาที		
พริกหยวก	250 กรัม	900 วัตต์	4½-5
	คำแนะนำ หั่นเป็นชิ้นบางๆ รับประทานหลังจากพักไว้ 3 นาที		

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 41 2019-09-11 11:02:16

คู่มือการปรุงอาหาร

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา (นาที)
มันฝรั่ง	250 กรัม 500 กรัม	900 วัตต์	4-5 7-8
	คำแนะนำ ชั่งน้ำหนักมันฝรั่งที่ปอกแล้ว และหั่นครึ่งหรือสี่ส่วน เป็นชิ้นเท่า ๆ กัน รับประทานหลังจากพักไว้ 3 นาที		
หัวผักกาด	250 กรัม	900 วัตต์	5½-6
	คำแนะนำ หั่นเป็นชิ้นสี่เหลี่ยมลูกเต๋าขนาดเล็ก รับประทานหลังจากพักไว้ 3 นาที		

คู่มือการปรุงอาหารสำหรับข้าวและพาสต้า

ข้าว: ใช้ชามแก้วไพเร็กซ์ขนาดใหญ่ที่มีฝาปิด ข้าวจะมีปริมาณเพิ่มเป็นสองเท่าเมื่อหุงสุกแล้ว อบโดยปิดฝา เมื่อหมดเวลาอบ คนให้ทั่วก่อนพักอาหาร และเติมเกลือหรือเครื่องเทศและเนยตามต้องการ หมายเหตุ: ข้าวอาจไม่ดูดซับน้ำทั้งหมด หลังจากที่หมดเวลาอบแล้ว

พาสต้า: ใช้ชามแก้วไพเร็กซ์ขนาดใหญ่ เติมน้ำร้อน เกลือเล็กน้อย และคนให้ทั่ว อบโดยไม่ปิดฝา คนเป็นระยะระหว่างและหลังการอบ ปิดฝาขณะพักอาหาร และเทน้ำออกให้หมดหลังจากนั้น

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา (นาที)
ข้าวสวย (หุงพอสุก)	250 กรัม 375 กรัม	450 วัตต์	15-16 17½-18½
	คำแนะนำ เติมน้ำเย็นสองเท่าของปริมาณอาหาร รับประทานหลังจากพักไว้ 5 นาที		
ข้าวกล้อง (หุงพอสุก)	250 กรัม 375 กรัม	450 วัตต์	18-19 20-21
	คำแนะนำ เติมน้ำเย็นสองเท่าของปริมาณอาหาร รับประทานหลังจากพักไว้ 5 นาที		

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา (นาที)
ข้าวผสม (ข้าวขาว + ข้าวซ้อมมือ)	250 กรัม	450 วัตต์	18-19
	คำแนะนำ เติมน้ำเย็น 500 มล. รับประทานหลังจากพักไว้ 5 นาที		
ธัญพืชผสม (ข้าว + ธัญพืช)	250 กรัม	450 วัตต์	20-21
	คำแนะนำ เติมน้ำเย็น 400 มล. รับประทานหลังจากพักไว้ 5 นาที		
พาสต้า	250 กรัม	900 วัตต์	9½-11
	คำแนะนำ เติมน้ำร้อน 1000 มล. รับประทานหลังจากพักไว้ 5 นาที		
บะหมี่กึ่งสำเร็จรูป	ซองเล็ก 1 ซอง (80 กรัม) ซองใหญ่ 1 ซอง (120 กรัม)	900 วัตต์	7-7½ 9-9½
	คำแนะนำ ใช้ชามแก้วไพเร็กซ์ ใส่บะหมี่และเติมน้ำอุณหภูมิห้อง 350 มล. ลงในชาม ปรุงอาหารโดยมีที่ปิด แล้วเจาะรู หลังปรุงอาหารเสร็จ ให้เทน้ำออกและผสมผงปรุงรสของบะหมี่กึ่งสำเร็จรูป		

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 42 2019-09-11 11:02:16

การอุ่นอาหาร

เตาไมโครเวฟของคุณสามารถอุ่นอาหารโดยใช้เวลาเพียงเสี้ยวของการอุ่นด้วยเตาอบแบบเก่าหรือลังถึง
ใช้ระดับพลังงานและเวลาในการอุ่นตามแผนผังต่อไปนี้ เวลาในแผนผังนี้ใช้กับอาหารที่เป็นของเหลว และมีอุณหภูมิปกติ คือประมาณ +18 ถึง +20 °C หรืออาหารแช่เย็นที่มีอุณหภูมิ +5 ถึง +7 °C

การจัดวางและการปิดครอบ

ไม่ควรอุ่นอาหารที่มีขนาดใหญ่ เช่น ก้อนเนื้อ เนื่องจากอาหารจะสุกและแห้งจนเกินไปก่อนที่ส่วนกลางจะร้อน การอุ่นอาหารที่เป็นชิ้นเล็กๆ จะได้ผลดีกว่า

ระดับพลังงานและการคน

อาหารบางอย่างสามารถอุ่นได้โดยใช้พลังงาน 900 วัตต์ แต่อาหารบางอย่างควรอุ่นโดยใช้พลังงาน 600 วัตต์, 450 วัตต์ หรือ 300 วัตต์ โปรดดูตารางต่อไปนี้เป็นแนวทาง
โดยทั่วไป คุณควรอุ่นอาหารโดยใช้ระดับพลังงานต่ำ หากอาหารนั้นละเอียดอ่อน มีปริมาณมาก หรือถ้าเป็นอาหารชนิดที่ร้อนเร็ว (เช่น พายเนื้อสับ เป็นต้น)
คนให้ทั่ว หรือกลับด้านระหว่างการอุ่นอาหาร เพื่อให้ได้ผลดีที่สุด ถ้าเป็นไปได้ ควรคนอีกครั้งก่อนรับประทาน
ใช้ความระมัดระวังเป็นพิเศษเมื่ออุ่นอาหารเหลวและอาหารสำหรับทารก เพื่อป้องกันการเดือดและกระเด็น ซึ่งอาจทำให้อาหารลวกมือ คุณควรคนอาหารก่อน ระหว่าง และหลังการอุ่น ปล่อยทิ้งไว้ในเตาไมโครเวฟขณะพักอาหาร ขอแนะนำให้คุณใส่ช้อนพลาสติกหรือแท่งแก้วในอาหารที่เป็นของเหลว ระวังอย่าให้อาหารร้อนเกินไป (ซึ่งจะทำให้เสียรสชาติ) ขอแนะนำให้คุณประมาณเวลาอบให้น้อยลง และเพิ่มเวลาในการอุ่นอาหาร ถ้าจำเป็น

เวลาในการอุ่นและพักอาหาร

เมื่ออุ่นอาหารเป็นครั้งแรก คุณควรบันทึกเวลาที่ใช้ในการอุ่นไว้ เพื่อใช้ประโยชน์ในอนาคต
โปรดอุ่นอาหารให้เดือดทั่วกันทุกครั้ง
พักอาหารไว้ชั่วขณะหลังจากการอุ่น เพื่อให้อุณหภูมิสม่ำเสมอทั่วกัน
เวลาพักอาหารที่เหมาะสมสำหรับการอุ่นก็คือ 2-4 นาที นอกจากที่แนะนำเป็นอย่างอื่นในแผนผัง
ใช้ความระมัดระวังเป็นพิเศษเมื่ออุ่นอาหารเหลวและอาหารสำหรับทารก โปรดอ่านข้อมูลเพิ่มเติมในเรื่องข้อควรระวังเพื่อความปลอดภัย

การอุ่นของเหลว

กำหนดเวลาพักอาหารอย่างน้อย 20 วินาทีหลังจากที่ปิดเตาอบทุกครั้ง เพื่อให้มีการปรับอุณหภูมิ คนอาหารระหว่างอุ่นถ้าจำเป็น และคนทุกครั้งหลังจากอุ่น เพื่อป้องกันการเดือดกระเด็นและอันตรายจากน้ำร้อนลวก โปรดใส่ช้อนหรือแท่งแก้วในเครื่องดื่ม และคนก่อน ระหว่าง และหลังการอุ่น

การอุ่นอาหารสำหรับทารก

อาหารทารก:

เทใส่จานกระเบื้องกันลึก ครอบด้วยฝาพลาสติก คนให้ทั่วหลังการอุ่น พักอาหารเป็นเวลา 2-3 นาทีก่อนรับประทาน คนอีกครั้ง และตรวจสอบอุณหภูมิ อุณหภูมิที่แนะนำสำหรับการรับประทาน: ระหว่าง 30-40 °C

นมสำหรับทารก:

เทนมในขวดแก้วที่ทำความสะอาดแล้ว อุ่นโดยไม่ปิดฝา ห้ามอุ่นขวดนมเด็กโดยปิดจุกนมไว้ เนื่องจากขวดอาจระเบิดเมื่อได้รับความร้อนสูง เขย่าก่อนพักอาหาร และเขย่าอีกครั้งก่อนนำไปป้อน ! ทุกครั้ง จะต้องตรวจสอบอุณหภูมิของอาหารหรือนมสำหรับทารกก่อนที่จะนำไปป้อน อุณหภูมิที่แนะนำสำหรับการรับประทาน: ประมาณ 37 °C

หมายเหตุ:

โปรดตรวจสอบอุณหภูมิของอาหารสำหรับทารกอย่างละเอียดก่อนที่จะนำไปป้อน เพื่อป้องการอาหารร้อนลวก ใช้ระดับพลังงานและเวลาในการอุ่นตามแผนผังต่อไปนี้

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 43 2019-09-11 11:02:16

คู่มือการปรุงอาหาร

การอุ่นของเหลวและอาหาร

ใช้ระดับพลังงานและเวลาในการอุ่นตามแผนผังต่อไปนี้

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา (นาที)
เครื่องดื่ม (กาแฟ ชา และน้ำ)	150 มล. (1 ถ้วย) 300 มล. (2 ถ้วย) 450 มล. (3 ถ้วย) 600 มล. (4 ถ้วย)	900 วัตต์	1-1½ 2-2½ 3-3½ 3½-4
	คำแนะนำ เทในถ้วยและอุ่นโดยไม่ปิดฝา วาง 1 ถ้วยตรงกลาง 2 ถ้วยตรงข้ามกัน และ 3 ถ้วยเป็นวงกลม ทิ้งไว้ในเตาไมโครเวฟระหว่างพักอาหาร และคนให้ทั่ว รับประทานหลังจากพักไว้ 1-2 นาที		
ซุป (แช่เย็น)	250 กรัม 350 กรัม 450 กรัม 550 กรัม	600 วัตต์	4-4½ 5½-6 6½-7 8-8½
	คำแนะนำ เทในจานหรือชามกระเบื้องกันลึก ครอบด้วยฝาพลาสติก คนให้ทั่วหลังการอุ่น คนอีกครั้งก่อนรับประทาน รับประทานหลังจากพักไว้ 2-3 นาที		
สตูว์ (แช่เย็น)	350 กรัม	600 วัตต์	4½-5½
	คำแนะนำ เทสตูว์ในจานกระเบื้องกันลึก ครอบด้วยฝาพลาสติก คนเป็นระยะระหว่างการอุ่น และคนอีกครั้งก่อนพักอาหารและรับประทาน รับประทานหลังจากพักไว้ 2-3 นาที		
พาสต้าราดซอส (แช่เย็น)	350 กรัม	600 วัตต์	3½-4½
	คำแนะนำ ใส่พาสต้า (เช่น สปาเกตตี้หรือบะหมี่ไข่) ในจานกระเบื้องแบน ปิดด้วยฟิล์มสำหรับไมโครเวฟ คนก่อนรับประทาน รับประทานหลังจากพักไว้ 3 นาที		
พาสต้ามีไส้ราดซอส (แช่เย็น)	350 กรัม	600 วัตต์	4-5
	คำแนะนำ วางพาสต้าแบบมีไส้ (เช่น ราวิโอลี ทอร์เทลลินี) ในจานกระเบื้องกันลึก ครอบด้วยฝาพลาสติก คนเป็นระยะระหว่างการอุ่น และคนอีกครั้งก่อนพักอาหารและรับประทาน รับประทานหลังจากพักไว้ 3 นาที		
อาหารสำเร็จ (แช่เย็น)	350 กรัม 450 กรัม 550 กรัม	600 วัตต์	5-6 6-7 7-8
	คำแนะนำ จัดอาหารชุดซึ่งมีส่วนประกอบแช่เย็น 2-3 อย่างในจานกระเบื้อง ปิดด้วยฟิล์มสำหรับไมโครเวฟ รับประทานหลังจากพักไว้ 3 นาที		
ซีสฟองดูสำเร็จรูป (แช่เย็น)	400 กรัม	600 วัตต์	6-7
	คำแนะนำ ใส่ซีสฟองดูที่พร้อมรับประทานในชามแก้วไพเร็กซ์ที่มีฝาปิด คนเป็นระยะระหว่างและหลังการอุ่น คนก่อนรับประทาน รับประทานหลังจากพักไว้ 1-2 นาที		

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 44 2019-09-11 11:02:16

การอุ่นอาหารและนมสำหรับทารก

ใช้ระดับพลังงานและเวลาในการอุ่นตามแผนผังต่อไปนี้

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา
อาหารทารก (ผัก + เนื้อสัตว์)	190 กรัม	600 วัตต์	30 วินาที
	คำแนะนำ เทใส่จานกระเบื้องกันลึก อบโดยปิดฝา คนอาหารหลังการอบ คนให้ทั่วก่อนนำไปป้อน และตรวจสอบอุณหภูมิอย่างละเอียด รับประทานหลังจากพักไว้ 2-3 นาที		
ข้าวต้มเด็ก (ธัญพืช + นม + ผลไม้)	190 กรัม	600 วัตต์	20 วินาที
	คำแนะนำ เทใส่จานกระเบื้องกันลึก อบโดยปิดฝา คนอาหารหลังการอบ คนให้ทั่วก่อนนำไปป้อน และตรวจสอบอุณหภูมิอย่างละเอียด รับประทานหลังจากพักไว้ 2-3 นาที		
นมสำหรับทารก	100 มล. 200 มล.	300 วัตต์	30-40 วินาที 1 นาที ถึง 1 นาที 10 วินาที
	คำแนะนำ เขย่าหรือคนให้ทั่ว และเทลงในขวดแก้วที่ฆ่าเชื้อแล้ว วางตรงกลางของจานหมุน อบโดยไม่ปิดฝา คนให้ทั่วก่อนรับประทาน และตรวจสอบอุณหภูมิอย่างละเอียด รับประทานหลังจากพักไว้ 2-3 นาที		

ละลายน้ำแข็ง

ไมโครเวฟเป็นวิธีการละลายอาหารแช่แข็งที่ดีเยี่ยม เนื่องจากจะค่อยๆ ละลายอาหารแช่แข็งได้ภายในเวลาอันสั้น ซึ่งจะมีประโยชน์เป็นอย่างมาก หากมีแขกมาเยี่ยมเยียนโดยไม่ได้เตรียมตัว

ไก่แช่แข็งจะต้องได้รับการละลายน้ำแข็งทั่วทั้งตัว ก่อนที่จะสามารถนำไปอบอาหาร นำที่รัดซึ่งเป็นโลหะออก และนำอาหารออกจากวัสดุห่อหุ้ม เพื่อให้น้ำซึ่งจะละลายสามารถไหลออกมาจากอาหาร

วางอาหารแช่แข็งในจานโดยไม่มีฝาครอบ กลับด้านหนึ่งครั้ง เทของเหลวออก และนำเครื่องในออกโดยเร็วที่สุด ตรวจดูอาหารเป็นระยะ เพื่อไม่ให้อุ่นจนเกินไป

หากส่วนที่มีขนาดเล็กหรือบางของอาหารแช่แข็งเริ่มอุ่น คุณสามารถหุ้มส่วนเหล่านั้นด้วยฟอยล์อะลูมิเนียมชิ้นเล็กๆ ระหว่างการละลายน้ำแข็ง

ถ้าเปิดไก่เริ่มอุ่นที่ผิวนอก ให้หยุดละลายน้ำแข็ง เพื่อให้เป็นการพักอาหาร 20 นาที ก่อนที่จะดำเนินการต่อ

พักปลา เนื้อ และไก่ไว้สักครู่ เพื่อให้น้ำแข็งละลายทั่วถึงกัน เวลาพักอาหารเพื่อละลายน้ำแข็งจะขึ้นอยู่กับปริมาณของอาหาร โปรดดูตารางต่อไปนี้

คำแนะนำ: อาหารที่มีลักษณะแบนจะละลายน้ำแข็งได้เร็วกว่า และปริมาณที่ไม่มากจะใช้เวลาน้อยกว่า โปรดนึกถึงคำแนะนำนี้ เมื่อแช่แข็งและละลายอาหาร

สำหรับการละลายอาหารแช่แข็งที่มีอุณหภูมิระหว่าง -18 ถึง -20 °C โปรดใช้ตารางด้านล่างเป็นแนวทาง

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา (นาที)
เนื้อวัว			
เนื้อสับ	250 กรัม 500 กรัม	180 วัตต์	6-7 8-13
สเต็กหมู	250 กรัม	180 วัตต์	7-8
	คำแนะนำ วางเนื้อบนจานหมุน หุ้มส่วนที่บางด้วยฟอยล์อะลูมิเนียม กลับด้านเมื่อถึงครึ่งของเวลาละลายน้ำแข็ง รับประทานหลังจากพักไว้ 15-30 นาที		

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 45 2019-09-11 11:02:17

คู่มือการปรุงอาหาร

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา (นาที)
เป็ดไก่			
ไก่ชิ้น	500 กรัม (2 ชิ้น)	180 วัตต์	14-15
ไก่ทั้งตัว	1200 กรัม	180 วัตต์	32-34
	คำแนะนำ ขั้นแรก ให้วางไก่เป็นชิ้นบนจานกระเบื้องแบบเรียบ โดยให้ด้านที่เป็นหนังอยู่ข้างล่าง ส่วนไก่ทั้งตัวให้เอาด้านหน้าอกลง หุ้มส่วนที่บางและเล็ก เช่น ปีก หรือกันด้วยฟอยล์อะลูมิเนียม กลับด้านเมื่อถึงครึ่งของเวลาละลายน้ำแข็ง รับประทานหลังจากพักไว้ 15-60 นาที		
เนื้อปลา			
เนื้อปลา (ฟิเลต์)	200 กรัม	180 วัตต์	6-7
ปลาทั้งตัว	400 กรัม	180 วัตต์	11-13
	คำแนะนำ วางปลาแช่แข็งกลางจานกระเบื้องแบบเรียบ โดยให้ส่วนที่เล็กอยู่ใต้ส่วนที่หนากว่า หุ้มส่วนที่บางและหางปลาด้วยฟอยล์อะลูมิเนียม กลับด้านเมื่อถึงครึ่งของเวลาละลายน้ำแข็ง รับประทานหลังจากพักไว้ 10-25 นาที		
ผลไม้			
เบอร์รี่	300 กรัม	180 วัตต์	6-7
	คำแนะนำ วางผลไม้ให้กระจายบนจานแก้วกลมแบบเรียบ (และมีเส้นผ่าศูนย์กลางใหญ่) รับประทานหลังจากพักไว้ 5-10 นาที		

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา (นาที)
ขนมปัง			
ขนมปังก้อน	2 ชิ้น	180 วัตต์	1-1½
(ก้อนละประมาณ 50 กรัม)	4 ชิ้น		2½-3
ขนมปังแผ่น / แซนด์วิช	250 กรัม	180 วัตต์	4-4½
ขนมปังเยอรมัน	500 กรัม	180 วัตต์	7-9
(แป้งสาลี+ไรย์)	**คำแนะนำ** วางก้อนขนมปังเป็นวง หรือวางขนมปังแผ่นเป็นแนวนอนบนกระดาษเช็ดปากไว้กลางจานหมุน กลับด้านเมื่อถึงครึ่งของเวลาละลายน้ำแข็ง รับประทานหลังจากพักไว้ 5-20 นาที		

ย่าง

ขดลวดสำหรับการย่างอยู่บริเวณใต้ผนังด้านบนของเตาอบ และจะทำงานเมื่อปิดประตูและจานหมุนทำงาน การหมุนของจานหมุนจะทำให้อาหารเกรียมทั่วถึงกัน อุ่นเตาเพื่อเตรียมการย่างเป็นเวลา 3-5 นาที เพื่อให้อาหารเกรียมเร็วขึ้น

ภาชนะสำหรับการย่าง:

อุปกรณ์จะต้องไม่ติดไฟและอาจมีส่วนประกอบของโลหะได้ ห้ามใช้อุปกรณ์ที่เป็นพลาสติก เนื่องจากจะละลายได้

อาหารที่เหมาะสำหรับการย่าง:

เนื้อเป็นชิ้น ไส้กรอก สเต็ก แฮมเบอร์เกอร์ เบคอนและขาหมูรมควัน เนื้อปลาที่แล่บางๆ แซนด์วิช และขนมปังปิ้งแบบมีท็อปปิง

หมายเหตุสำคัญ:

เมื่อใดก็ตามที่ใช้เฉพาะโหมดย่าง โปรดทราบว่าอาหารจะต้องอยู่บนตะแกรงสูง นอกจากที่มีคำแนะนำเป็นอย่างอื่น

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 46 2019-09-11 11:02:17

ไมโครเวฟ + ย่าง

การอบอาหารแบบนี้เป็นการผสมผสานความร้อนจากขดลวดเข้ากับความเร็วของไมโครเวฟ และจะทำงานเมื่อปิดประตูและจานหมุนทำงาน การหมุนของจานหมุนจะทำให้อาหารเหลืองเกรียมได้รวดเร็ว

คุณสามารถใช้วิธีอบอาหารร่วมกันได้สามแบบสำหรับรุ่นนี้ 600 วัตต์ + ย่าง, 450 วัตต์ + ย่าง และ 300 วัตต์ + ย่าง

อุปกรณ์สำหรับการอบอาหารด้วยไมโครเวฟ + ย่าง

โปรดใช้อุปกรณ์ที่คลื่นไมโครเวฟสามารถผ่านได้ และจะต้องไม่ติดไฟ โปรดอย่าใช้อุปกรณ์หรือภาชนะที่เป็นโลหะกับการทำงานแบบผสม ห้ามใช้อุปกรณ์ที่เป็นพลาสติก เนื่องจากจะละลายได้

อาหารที่เหมาะสำหรับการอบด้วยไมโครเวฟ + ย่าง:

อาหารที่เหมาะสำหรับการอบแบบผสมนี้ประกอบด้วยอาหารที่สุกแล้วทุกชนิด ซึ่งจะต้องมีการอุ่นและทำให้เหลือง (เช่น พาสต้าอบ) เช่นเดียวกับอาหารที่ต้องใช้เวลาอบไม่นาน เพื่อให้ส่วนบนเหลืองเกรียม นอกจากนี้ การทำงานแบบนี้ยังใช้กับอาหารที่มีลักษณะหนา และควรมีส่วนบนที่เกรียมกรอบ (เช่น ไก่เป็นชิ้น ซึ่งควรกลับด้านเมื่ออบได้ครึ่งของระยะเวลา) โปรดดูรายละเอียดเพิ่มเติมในตารางการย่าง

หมายเหตุสำคัญ:

เมื่อใดก็ตามที่ใช้โหมดผสม (ไมโครเวฟ + ย่าง) โปรดทราบว่าอาหารจะต้องอยู่บนตะแกรงสูง นอกจากที่มีคำแนะนำเป็นอย่างอื่น โปรดดูคำแนะนำในแผนผังต่อไปนี้

คุณจะต้องกลับอาหาร หากต้องการให้เหลืองเกรียมทั้งสองด้าน

คู่มือการย่างสำหรับอาหารสด

อุ่นเตาอบด้วยการย่างเป็นเวลา 2-3 นาที

ใช้ระดับพลังงานและเวลาในการย่างตามแผนผังต่อไปนี้

ใช้ถุงมือกันความร้อนเมื่อนำออกจากเตา

อาหารสด	ปริมาณอาหาร	ระดับพลังงาน	1 ชั้น (นาที)	2 ชั้น (นาที)
ขนมปังแผ่น	4 ชิ้น (ชิ้นละ 25 กรัม)	ย่างเท่านั้น	3½-4	3-4
	คำแนะนำ วางแผ่นขนมปังคู่กันบนตะแกรง			
มะเขือเทศย่าง	400 กรัม (2 ชิ้น)	450 วัตต์ + ย่าง	4-6	-
	คำแนะนำ หั่นครึ่งมะเขือเทศ ใส่ชีสที่ด้านบน วางเป็นรูปวงกลมบนจานแก้วไพเร็กซ์แบบเรียบ วางบนตะแกรงสูง พักอาหารเป็นเวลา 2-3 นาที			
มะเขือเทศ + ชีสโทสต์	4 ชิ้น (300 กรัม)	300 วัตต์ + ย่าง	5-7	-
	คำแนะนำ ปิ้งขนมปังก่อน วางขนมปังปิ้งพร้อมท็อปปิงบนตะแกรงสูง พักอาหารเป็นเวลา 2-3 นาที			
โทสต์ฮาวาย (แฮม สับปะรด แผ่นชีส)	4 ชิ้น (500 กรัม)	300 วัตต์ + ย่าง	5-7	-
	คำแนะนำ ปิ้งขนมปังก่อน วางขนมปังปิ้งพร้อมท็อปปิงบนตะแกรงสูง พักอาหารเป็นเวลา 2-3 นาที			
มันฝรั่งอบ	500 กรัม	600 วัตต์ + ย่าง	11-13	-
	คำแนะนำ หั่นแบ่งมันฝรั่งเป็นครึ่งหัว วางบนตะแกรงเป็นวงกลม โดยให้ด้านที่หั่นอยู่ข้างล่าง			
กราแตงมันฝรั่ง/ผัก (แช่เย็น)	450 กรัม	450 วัตต์ + ย่าง	11-13	-
	คำแนะนำ วางกราแตงสดในจานแก้วไพเร็กซ์ขนาดเล็ก วางจานบนตะแกรงสูง พักอาหารเป็นเวลา 2-3 นาที			

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 47 2019-09-11 11:02:17

คู่มือการปรุงอาหาร

อาหารสด	ปริมาณอาหาร	ระดับพลังงาน	1 ขั้น (นาที)	2 ขั้น (นาที)
แอปเปิ้ลอบ	แอปเปิ้ล 2 ผล (ประมาณ 400 กรัม)	300 วัตต์ + ย่าง	7-8	-
	คำแนะนำ ควักไส้แอปเปิ้ลและยัดด้วยลูกเกดและแยม ใส่อัลมอนด์ฝานบางๆ ไว้ด้านบน วางแอปเปิ้ลบนจานแก้วไพเร็กซ์แบบเรียบ วางจานบนตะแกรงต่ำ			
ไก่ชิ้น	500 กรัม (2 ชิ้น)	300 วัตต์ + ย่าง	10-12	7-9
	คำแนะนำ ใช้แปรงทาน้ำมันและเครื่องเทศให้ทั่วชิ้นไก่ วางเป็นวงบนตะแกรงสูง หลังจากย่างแล้วให้พักอาหาร 2-3 นาที			
ไก่อบ	1200 กรัม	ครั้งที่ 1 : 450 วัตต์ + Hot Blast 200 °C ครั้งที่ 2 : 450 วัตต์ + ย่าง	20-22	20-22
	คำแนะนำ ใช้แปรงทาน้ำมันและเครื่องเทศให้ทั่วเนื้อไก่ วางไก่บนตะแกรงต่ำ พักอาหารเป็นเวลา 5 นาทีหลังการย่าง			
ปลาย่าง	400-500 กรัม	300 วัตต์ + ย่าง	6-8	6-7
	คำแนะนำ ทาน้ำมันให้ทั่วตัวปลา จากนั้นใส่สมุนไพรและเครื่องเทศ วางปลาสองตัวคู่กัน (สลับด้านหัวและหาง) บนตะแกรงสูง หลังจากย่างแล้วให้พักอาหาร 2-3 นาที			
ผักย่าง	300 กรัม	ย่าง	9-11	-
	ล้างและเตรียมผักเป็นแว่นๆ (เช่น ซูกินี มะเขือ พริกหวาน ฟักทอง) ใช้แปรงทาน้ำมันมะกอกและเติมเครื่องเทศ วางจานอบเกรียมบนตะแกรงสูง			

อาหารสด	ปริมาณอาหาร	ระดับพลังงาน	1 ขั้น (นาที)	2 ขั้น (นาที)
กล้วยกล้าย	1 ลูก (200 กรัม)	1 ขั้น: 450 วัตต์ + ย่าง 2 ขั้น: ย่าง	6-7	4-5
	คำแนะนำ ปอกเปลือกและฝานกล้วยให้หนาประมาณ 1 ซม. และวางบนจานอบเกรียมพร้อมกับตะแกรงย่าง ทาน้ำมันทั้งสองด้าน ถ้ากล้วยนิ่ม ให้ลดเวลา 1-2 นาที พักอาหารเป็นเวลา 1-2 นาที			
มันเทศ	200 กรัม	450 วัตต์ + ย่าง	10-11	-
	คำแนะนำ ปอกเผือกและหั่นเป็นแท่งหนา 10 x 30 มม. ยาวประมาณ 10 ซม. วางบนจานอบเกรียมและทาน้ำมันให้ทั่วทุกด้าน วางบนตะแกรงสูงและปรุง พักอาหารเป็นเวลา 1-2 นาที			

Hot Blast

การปรุงอาหารด้วย Hot Blast เป็นการใช้ขดลวดความร้อนสำหรับย่างภายในกับวงแหวนความร้อนแบบไอพร้อมพัดลม ไอร้อนจะเป่าจากด้านบนของเตาอบผ่านช่องเข้าสู่ตัวเตาอบ ขดลวดความร้อนที่ด้านบนและด้านหลัง และพัดลมที่ผนังด้านหลังจะทำให้ไอร้อนหมุนเวียนอย่างสม่ำเสมอ

ภาชนะสำหรับการปรุงอาหารด้วย Hot Blast

ใช้อุปกรณ์สำหรับเตาอบแบบธรรมดา ถาดสำหรับเตาอบ และภาชนะชนิดอื่นๆ ที่ใช้ได้ในเตาอบธรรมดา

อาหารที่เหมาะสำหรับการปรุงด้วย Hot Blast

ใช้โหมดนี้เพื่อทำบิสกิต สโคน ขนมปังก้อน และเค้ก รวมทั้งฟรุตเค้ก ชูเพสตรี และซูเฟล

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 48 2019-09-11 11:02:17

ไมโครเวฟ + Hot blast

การทำงานแบบนี้จะผสมผสานพลังงานไมโครเวฟเข้ากับไอร้อน ซึ่งจะช่วยลดเวลาในการอบโดยที่อาหารยังคงเหลืองเกรียมและกรอบ การอบด้วยความร้อนเป็นวิธีปรุงอาหารแบบดั้งเดิมที่แพร่หลาย ด้วยการอบไอร้อนซึ่งกระจายหมุนเวียนด้วยพัดลมที่ผนังด้านหลัง

อุปกรณ์สำหรับการปรุงอาหารด้วยไมโครเวฟ + Hot Blast

ควรยอมให้ไมโครเวฟผ่านได้ ใช้กับเตาอบได้ (เช่น แก้ว ดินเผา หรือกระเบื้องเคลือบที่ไม่มีขอบโลหะ) เช่นเดียวกับอุปกรณ์สำหรับการอบด้วยไมโครเวฟ+การย่าง

อาหารที่เหมาะสำหรับการปรุงด้วยไมโครเวฟ + Hot Blast:

เนื้อและไก่ทุกชนิด และอาหารอบหม้อดิน กราแตง สปันจ์เค้ก และฟรุตเค้กแบบเนื้อเบา พายและครัมเบิล ผักอบ ขนมปังกรอบและขนมปัง

<u>คู่มือการอบด้วย Hot Blast สำหรับอาหารสดและอาหารแช่แข็ง</u>

ใช้ฟังก์ชัน Hot Blast เพื่ออุ่นเตาอบให้ได้อุณหภูมิตามต้องการ ใช้ระดับพลังงานและเวลาในการปรุงอาหารด้วย Hot Blast ตามแผนผังต่อไปนี้ ใช้ถุงมือกันความร้อนเมื่อนำออกจากเตา

อาหาร	ปริมาณอาหาร (กรัม)	โหมด (°C)	เวลาปรุง (นาที)
มินิทาร์ต/พิซซ่าชิ้นเล็กแช่แข็ง	250	200	9-11
	วางพิซซ่าชิ้นเล็กบนจานอบเกรียม วางจานบนตะแกรงต่ำ		
ชิปแช่แข็งสำหรับเตาอบ	300	200	22-25
	วางชิปแช่แข็งให้เสมอกันบนจานอบเกรียม นำจานไปวางบนตะแกรงแบบสูง		
เนื้อไก่แช่แข็ง	300	200	8-11
	วางนักเก็ตแช่แข็งบนจานอบเกรียม นำจานไปวางบนตะแกรงแบบสูง		
พิซซ่าแช่แข็ง	300-400	200	11-14
	วางพิซซ่าแช่แข็งบนตะแกรงต่ำ		

อาหาร	ปริมาณอาหาร (กรัม)	โหมด (°C)	เวลาปรุง (นาที)
ลาซานญ่า/พาสต้ากราแต็งแบบโฮมเมด	500	170	15-20
	ใส่พาสต้าในจานสำหรับเตาอบ วางจานบนตะแกรงต่ำ		
ลาซานญ่าแช่แข็ง	400	450 วัตต์ + 180 °C	16-18
	วางในจานแก้วไพเร็กซ์ที่มีขนาดเหมาะสม หรือใส่ในบรรจุภัณฑ์เดิม (ถ้าสามารถใช้กับไมโครเวฟและเตาอบได้) วางลาซาญญ่าแช่แข็งบนตะแกรงแบบต่ำ พักอาหารเป็นเวลา 2-3 นาที		
โรสต์บีฟ/แกะ (สุกปานกลาง)	1000-1200	450 วัตต์ + 160 °C	20-22 (ด้านแรก) 14-16 (ด้านที่สอง)
	ใช้แปรงทาน้ำมันให้ทั่วชิ้นเนื้อ และปรุงรสด้วยพริกไทย เกลือ และพริกป่น วางบนตะแกรงแบบต่ำ โดยเริ่มจากด้านมันอยู่ข้างล่าง หลังการปรุง ห่อด้วยฟอยล์อะลูมิเนียมเพื่อพักอาหารเป็นเวลา 10-15 นาที		
ขนมปังแช่แข็ง	350 (6 ชิ้น)	180 วัตต์ + 160 °C	7-9
	วางขนมปังบนจานอบเกรียม วางจานบนตะแกรงแบบต่ำ พักอาหารเป็นเวลา 2-3 นาที		
มาร์เบิลเค้ก	700	160	50-55
	ใส่แป้งเค้กในพิมพ์โลหะสี่เหลี่ยมผืนผ้าขนาดเล็กสีดำ (ความยาว 25 ซม.) วางจานบนตะแกรงแบบต่ำ พักอาหารเป็นเวลา 5-10 นาทีหลังการอบ		
เค้กขนาดเล็ก	ชิ้นละ 30	160	30-35
	วางเค้กชิ้นเล็ก/มัฟฟินได้ถึง 12 ชิ้นในถ้วยกระดาษบนจานอบเกรียม วางจานบนตะแกรงต่ำ พักอาหารเป็นเวลา 5 นาทีหลังการอบ		
ครัวซองค์/ขนมปังก้อน (แป้งสด)	200-250	200	13-18
	วางครัวซองต์หรือขนมปังแช่เย็นบนกระดาษสำหรับอบ ใช้ตะแกรงแบบต่ำ		

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 49 2019-09-11 11:02:17

คู่มือการปรุงอาหาร

อาหาร	ปริมาณอาหาร (กรัม)	โหมด (°C)	เวลาปรุง (นาที)
เค้กแช่แข็ง	1000	180 วัตต์ + 160 °C	16-18
	วางเค้กแช่แข็งบนตะแกรงแบบต่ำโดยตรง หลังจากละลายและอุ่นแล้ว ให้พักอาหารเป็นเวลา 15-20 นาที		
กราแตงมันฝรั่งแบบโฮมเมด	500	450 วัตต์ + 180 °C	18-22
	ใส่กราแตงในจานสำหรับเตาอบ วางบนตะแกรงแบบต่ำ		
โฮมเมดคีช (ขนาดกลาง)	500-600	160	45-50
	เตรียมคีชโดยใช้กระทะโลหะขนาดกลางและวางบนตะแกรงแบบต่ำ โปรดดูตำรับอาหารในคู่มือการเพิ่มพลังความร้อนอัตโนมัติ		

เคล็ดลับ

การละลายเนย

ใส่เนย 50 กรัมในจานแก้วกันลึกขนาดเล็ก ครอบด้วยฝาพลาสติก
ให้ความร้อนเป็นเวลา 30-40 วินาที โดยใช้กำลังไฟ 900 วัตต์ จนเนยละลาย

การละลายช็อกโกแลต

ใส่ช็อกโกแลต 100 กรัมในจานแก้วกันลึก
ให้ความร้อนเป็นเวลา 3-5 นาที โดยใช้พลังงาน 450 วัตต์ จนช็อกโกแลตละลาย
คนหนึ่งหรือสองครั้งระหว่างการละลาย ใช้ถุงมือกันความร้อนเมื่อนำออกจากเตา

การละลายผลึกน้ำผึ้ง

ใส่เกล็ดน้ำผึ้ง 20 กรัมในจานแก้วกันลึก
ให้ความร้อนเป็นเวลา 20-30 วินาที ใช้พลังงาน 300 วัตต์ จนน้ำผึ้งละลาย

การละลายเจลาติน

วางแผ่นเจลาตินแห้ง (10 กรัม) ไว้ในน้ำเย็นเป็นเวลา 5 นาที
นำน้ำออก และใส่เจลาตินในถ้วยแก้วไพเร็กซ์ขนาดเล็ก
ให้ความร้อน 1 นาที ใช้พลังงาน 300 วัตต์ และคนหลังจากที่ละลาย

การอบหน้าเค้ก/ไอซ์ซิ่ง (สำหรับเค้กและขนม)

ผสมหน้า (ประมาณ 14 กรัม) กับน้ำตาล 40 กรัมและน้ำเย็น 250 มล. อบโดยไม่ต้องปิดฝา ในถ้วยแก้วไพเร็กซ์ เป็นเวลา 3½ ถึง 4½ โดยใช้พลังงาน 900 วัตต์ จนกระทั่งหน้าเค้ก/ไอซ์ซิ่งใส คนสองครั้งระหว่างการอบ

การปรุงแยม

ใส่ผลไม้ 600 กรัม (เช่น เบอร์รี่ชนิดต่างๆ) ในชามแก้ว ไพเร็กซ์ที่มีขนาดเหมาะสมและมีฝาปิด เติมน้ำตาล 300 กรัมและคนให้ทั่ว
อบโดยปิดฝาเป็นเวลา 10-12 นาที โดยใช้กำลังไฟ 900 วัตต์
คนบ่อยๆ ระหว่างการอบ เทลงในโถแก้วใส่แยม ที่มีฝาปิดเกลียว พักโดยปิดฝาไว้ 5 นาที

การปรุงพุดดิ้ง

ผสมผงพุดดิ้งกับน้ำตาลและนม (500 มล.) ตามคำแนะนำของผู้ผลิต จากนั้นคนให้เข้ากัน ใช้อ่างแก้วไพเร็กซ์ที่มีฝาปิด อบโดยปิดฝาเป็นเวลา 6½ ถึง 7½ นาที โดยใช้พลังงาน 900 วัตต์
คนบ่อยๆ ระหว่างการอบ

การอบเมล็ดอัลมอนด์แผ่น

นำเมล็ดอัลมอนด์ฝานเป็นแผ่น 30 กรัมมาใส่ในจานกระเบื้องให้เสมอกัน
คนหลายๆ ครั้งระหว่างที่เริ่มเหลืองเป็นเวลา 3½ ถึง 4½ โดยใช้ความร้อน 600 วัตต์
พักในเตาเป็นเวลาประมาณ 2-3 นาที ใช้ถุงมือกันความร้อนเมื่อนำออกจากเตา

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 50 2019-09-11 11:02:17

การแก้ไขปัญหาและรหัสข้อมูล

การแก้ไขปัญหา

ถ้าคุณประสบปัญหาอย่างใดอย่างหนึ่งที่ปรากฏด้านล่าง โปรดลองใช้วิธีแก้ไขปัญหาที่ให้มา

ปัญหา	สาเหตุ	การดำเนินการ
ทั่วไป		
กดปุ่มไม่ลง	อาจมีสิ่งแปลกปลอมติดอยู่ระหว่างปุ่ม	ให้นำสิ่งแปลกปลอมออกแล้วลองอีกครั้ง
	สำหรับรุ่นหน้าจอสัมผัส: มีน้ำอยู่บนพื้นผิวด้านนอก	ให้เช็ดน้ำออกจากพื้นผิวด้านนอก
	มีการเปิดใช้งานล็อคป้องกันเด็ก	ปิดใช้งานล็อคป้องกันเด็ก
เวลาไม่ปรากฏบนจอแสดงผล	ตั้งค่าฟังก์ชัน Eco (ประหยัดพลังงาน) เอาไว้	ปิดฟังก์ชัน Eco (ประหยัดพลังงาน)
เตาอบไม่ทำงาน	ไม่มีการจ่ายไฟ	ตรวจสอบว่ามีการจ่ายไฟแล้วหรือไม่
	ประตูเปิด	ปิดประตูและลองอีกครั้ง
	มีสิ่งแปลกปลอมติดอยู่ที่กลไกการเปิดประตูเพื่อความปลอดภัย	ให้นำสิ่งแปลกปลอมออกแล้วลองอีกครั้ง
เตาอบหยุดทำงานในขณะปรุงอาหาร	ผู้ใช้เปิดประตูเพื่อกลับด้านอาหาร	หลังจากกลับด้านอาหารแล้ว ให้กดปุ่ม **Start (เริ่มทำงาน)** อีกครั้งเพื่อเริ่มการทำงาน
ไฟดับในระหว่างการปรุงอาหาร	ใช้เตาอบต่อเนื่องเป็นเวลานาน	หลังจากใช้งานเป็นเวลานาน ให้ทิ้งเตาอบไว้สักครู่เพื่อให้เย็นตัว
	พัดลมระบายความร้อนไม่ทำงาน	ฟังเสียงของพัดลมระบายความร้อน
	พยายามใช้งานเตาอบในขณะที่ไม่มีอาหารอยู่ด้านใน	วางอาหารในเตาอบ
	มีพื้นที่ระบายอากาศไม่เพียงพอสำหรับเตาอบ	มีช่องอากาศเข้า/ออกที่ด้านหน้าและด้านหลังของเตาอบเพื่อการระบายอากาศ เว้นพื้นที่ว่างตามที่ระบุไว้ในคู่มือการติดตั้งผลิตภัณฑ์
	มีการใช้ปลั๊กไฟจำนวนมากในเต้ารับเดียวกัน	โปรดใช้เต้ารับเฉพาะสำหรับเตาอบเท่านั้น
มีเสียงแตกในระหว่างการทำงาน และเตาอบไม่ทำงาน	การปรุงอาหารที่อยู่ในซีลหรือใช้ภาชนะที่มีฝาปิดอาจทำให้เกิดเสียงแตก	ห้ามใช้ภาชนะที่มีซีลเนื่องจากอาจไหมในระหว่างการปรุงอาหารเนื่องจากอาหารเกิดการขยายตัว
พื้นผิวภายนอกเตาอบร้อนเกินไปในระหว่างการใช้งาน	มีพื้นที่ระบายอากาศไม่เพียงพอสำหรับเตาอบ	มีช่องอากาศเข้า/ออกที่ด้านหน้าและด้านหลังของเตาอบเพื่อการระบายอากาศ เว้นพื้นที่ว่างตามที่ระบุไว้ในคู่มือการติดตั้งผลิตภัณฑ์
	มีวัตถุวางอยู่ด้านบนเตาอบ	นำวัตถุทั้งหมดที่วางอยู่บนเตาอบออกไป

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 51 2019-09-11 11:02:17

การแก้ไขปัญหาและรหัสข้อมูล

ปัญหา	สาเหตุ	การดำเนินการ
เปิดประตูไม่สะดวก	มีอาหารตกค้างอยู่ระหว่างประตูและภายในเตาอบ	ทำความสะอาดเตาอบ แล้วเปิดประตู
การให้ความร้อน รวมถึงฟังก์ชันการอุ่นทำงานไม่ถูกต้อง	เตาอบอาจไม่ทำงาน ปรุงอาหารมากเกินไป หรือใช้ภาชนะที่ไม่เหมาะสม	วางน้ำหนึ่งแก้วในภาชนะที่สามารถใช้กับไมโครเวฟได้ แล้วใช้ฟังก์ชันไมโครเวฟเป็นเวลา 1-2 นาทีเพื่อตรวจสอบว่าน้ำร้อนหรือไม่ ลดปริมาณอาหารและเริ่มใช้งานอีกครั้ง ใช้ภาชนะในการปรุงอาหารที่มีก้นแบน
ฟังก์ชันละลายไม่ทำงาน	ปรุงอาหารมากเกินไป	ลดปริมาณอาหารและเริ่มใช้งานอีกครั้ง
ไฟด้านในมีแสงน้อยหรือไม่ติดเลย	เปิดประตูทิ้งไว้เป็นเวลานาน	ไฟด้านในอาจปิดโดยอัตโนมัติเมื่อใช้ฟังก์ชัน Eco (ประหยัดพลังงาน) ปิดประตูแล้วเปิดอีกครั้ง หรือกดปุ่ม **Cancle (ยกเลิก)**
	มีสิ่งแปลกปลอมเกาะตัวอยู่ที่ไฟด้านใน	ทำความสะอาดด้านในเตาอบแล้วตรวจสอบอีกครั้ง
มีเสียงบี๊บในระหว่างการปรุงอาหาร	ถ้าใช้ฟังก์ชันปรุงอาหารอัตโนมัติ เสียงสัญญาณจะเตือนว่าได้เวลากลับด้านอาหารในระหว่างการทำละลาย	หลังจากกลับด้านอาหารแล้ว ให้กดปุ่ม **Start (เริ่มทำงาน)** อีกครั้งเพื่อเริ่มการทำงาน

ปัญหา	สาเหตุ	การดำเนินการ
เตาอบเอียง	ติดตั้งเตาอบในผิวพื้นที่ไม่เรียบเสมอกัน	โปรดติดตั้งเตาอบบนพื้นผิวที่ราบเรียบและมั่นคง
เกิดประกายไฟในระหว่างการปรุงอาหาร	มีการใช้ภาชนะที่เป็นโลหะในระหว่างการใช้เตาอบ/ทำละลาย	โปรดอย่าใช้พลาสติกที่เป็นโลหะ
เมื่อเสียบปลั๊กไฟ เตาอบเริ่มต้นทำงานทันที	ประตูปิดไม่สนิท	ปิดประตูและตรวจสอบอีกครั้ง
มีกระแสไฟออกมาจากเตาอบ	ไฟฟ้าหรือเต้ารับไฟฟ้าไม่มีการลงกราวด์อย่างถูกต้อง	โปรดตรวจสอบว่ามีการลงกราวด์ไฟฟ้าหรือเต้ารับไฟฟ้าอย่างถูกต้องแล้วหรือไม่
1. น้ำหยด 2. มีไอน้ำออกมาจากรอยแยกของประตู 3. มีน้ำในเตาอบ	อาจมีน้ำหรือไอน้ำบ้างในบางกรณี ทั้งนี้จะขึ้นอยู่กับอาหาร กรณีนี้ไม่ใช่การทำงานผิดปกติของเตาอบ	ทิ้งเตาอบไว้เพื่อให้เย็นลง แล้วเช็ดด้วยผ้าแห้ง
ความสว่างภายในเตาอบมีการเปลี่ยนแปลง	ความสว่างจะเปลี่ยนไปโดยขึ้นอยู่การเปลี่ยนกำลังไฟฟ้าตามฟังก์ชัน	การเปลี่ยนกำลังไฟฟ้าในระหว่างการปรุงอาหารไม่ใช่การทำงานผิดปกติ กรณีนี้ไม่ใช่การทำงานผิดปกติของเตาอบ
ปรุงอาหารเสร็จแล้ว แต่พัดลมระบายอาหารยังทำงานอยู่	ในการระบายอาหารให้กับเตาอบ พัดลมระบายอากาศจะยังคงทำงานต่อเนื่องอีกประมาณ 3 นาทีหลังจากปรุงอาหารเสร็จ	กรณีนี้ไม่ใช่การทำงานผิดปกติของเตาอบ

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 52 2019-09-11 11:02:17

ปัญหา	สาเหตุ	การดำเนินการ
จานหมุน		
ในขณะหมุน จานหมุนออกมานอกที่ติดตั้งหรือหยุดหมุน	ไม่มีวงแหวนหรือวงแหวนติดตั้งไม่ถูกต้อง	ติดตั้งวงแหวนแล้วลองอีกครั้ง
จานหมุนทำงานช้าในระหว่างการหมุน	ติดตั้งวงแวนไม่ถูกต้อง มีอาหารมากเกินไปหรือภาชนะใหญ่เกินไปและสัมผัสที่ด้านในของไมโครเวฟ	ปรับปริมาณอาหารและอย่าใช้ภาชนะที่ใหญ่เกินไป
จานหมุนส่งเสียงดังในขณะหมุน	มีอาหารตกค้างอยู่ด้านล่างเตาอบ	นำอาหารที่ตกค้างอยู่ด้านล่างเตาอบออก
ย่าง		
มีควันออกมาในระหว่างการใช้งาน	ในการใช้งานครั้งแรก ควันอาจออกมาจากขดลวดความร้อนเมื่อคุณใช้งานเตาอบครั้งแรก	กรณีนี้ไม่ใช่การทำงานที่ผิดปกติ และถ้าคุณใช้งานเตาอบ 2-3 ครั้ง อาการนี้ควรหายไป
	มีอาหารอยู่ที่ขดลวดความร้อน	ปล่อยให้เตาอบเย็นลง แล้วนำอาหารออกจากขดลวดความร้อน
	อาหารอยู่ใกล้กับที่ย่างเกินไป	วางอาหารให้มีระยะห่างที่เหมาะสมในระหว่างการปรุงอาหาร
	จัดเตรียมและ/หรือจัดวางอาหารไม่เหมาะสม	โปรดจัดเตรียมและจัดวางอาหารอย่างเหมาะสม

ปัญหา	สาเหตุ	การดำเนินการ
เตาอบ		
เตาอบไม่ร้อน	ประตูเปิด	ปิดประตูและลองอีกครั้ง
มีควันออกมาในระหว่างอุ่น	ในการใช้งานครั้งแรก ควันอาจออกมาจากขดลวดความร้อนเมื่อคุณใช้งานเตาอบครั้งแรก	กรณีนี้ไม่ใช่การทำงานที่ผิดปกติ และถ้าคุณใช้งานเตาอบ 2-3 ครั้ง อาการนี้ควรหายไป
	มีอาหารอยู่ที่ขดลวดความร้อน	ปล่อยให้เตาอบเย็นลง แล้วนำอาหารออกจากขดลวดความร้อน
มีกลิ่นไหม้หรือกลิ่นพลาสติกเมื่อใช้เตาอบ	มีการใช้ภาพชนะที่เป็นพลาสติกหรือไม่คงทนต่อความร้อน	โปรดใช้ภาชนะที่เป็นแก้วที่เหมาะสำหรับอุณหภูมิสูง
มีกลิ่นเหม็นออกมาจากภายในเตาอบ	เศษอาหารหรือพลาสติกละลายและติดค้างอยู่ในเตาอบ	ใช้ฟังก์ชันไอน้ำ แล้วเช็ดด้วยผ้าแห้ง คุณสามารถวางมะนาวฝานไว้ภายใน และให้เตาอบทำงานเพื่อช่วยขจัดกลิ่นให้เร็วขึ้น

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 53 2019-09-11 11:02:17

การแก้ไขปัญหาและรหัสข้อมูล

ปัญหา	สาเหตุ	การดำเนินการ
เตาอบปรุงอาหารได้ไม่ถูกต้อง	มีการเปิดประตูเตาอบบ่อยครั้งในระหว่างปรุงอาหาร	ถ้าคุณเปิดเตาอบบ่อยครั้ง อุณหภูมิภายในจะลดลง และอาจส่งผลต่อการปรุงอาหารของคุณ
	มีการตั้งค่าการควบคุมเตาอบไว้ไม่ถูกต้อง	โปรดตั้งค่าการควบคุมเตาอบอย่างถูกต้องแล้วลองอีกครั้ง
	วางอุปกรณ์เสริมสำหรับการย่างหรืออุปกรณ์อื่นๆ ไว้ไม่ถูกต้อง	โปรดใส่อุปกรณ์เสริมอย่างถูกต้อง
	มีการใช้ภาชนะที่ผิดประเภทหรือขนาดผิดปกติ	ใช้ภาชนะที่เหมาะสมซึ่งมีกันแบน

หมายเหตุ

ถ้าคำแนะนำข้างต้นไม่สามารถแก้ไขปัญหาได้ โปรดติดต่อศูนย์บริการลูกค้า SAMSUNG ใกล้บ้านคุณ

โปรดเตรียมข้อมูลต่อไปนี้

- หมายเลขรุ่นและหมายเลขผลิตภัณฑ์ ซึ่งมักจะพิมพ์ไว้ที่ด้านหลังของเตาอบ
- รายละเอียดของการรับประกัน
- คำอธิบายปัญหาอย่างชัดเจน

จากนั้นติดต่อผู้แทนจำหน่าย หรือฝ่ายบริการหลังการขายของ SAMSUNG

รหัสข้อมูล

รหัส	คำอธิบาย	การดำเนินการ
C-20	ต้องตรวจสอบระบบเซ็นเซอร์ของอุณหภูมิ	กดปุ่ม **Stop/Cancel** (หยุด/ยกเลิก) และใช้งานอีกครั้ง ถ้ายังมีข้อความนี้ปรากฏอีกครั้ง ให้ปิดเตาอบไมโครเวฟนานกว่า 30 วินาที แล้วลองตั้งค่าอีกครั้ง ถ้ายังมีข้อความนี้ปรากฏอีก โปรดติดต่อศูนย์บริการลูกค้า SAMSUNG ที่อยู่ใกล้บ้าน
C-21	เซ็นเซอร์อุณหภูมิตรวจจับอุณหภูมิที่สูงกว่าที่ตั้งค่าไว้	ปิดเตาอบไมโครเวฟเพื่อให้เตาเย็นลง แล้วลองตั้งค่าอีกครั้ง ถ้ายังมีข้อความนี้ปรากฏอีก โปรดติดต่อศูนย์บริการลูกค้า SAMSUNG ที่อยู่ใกล้บ้าน
C-d0	มีการกดปุ่มควบคุมนานกว่า 10 วินาที	ทำความสะอาดปุ่มและตรวจสอบว่ามีน้ำที่พื้นผิวรอบๆ ปุ่มหรือไม่ ถ้ายังมีข้อความนี้ปรากฏอีกครั้ง ให้ปิดเตาอบไมโครเวฟนานกว่า 30 วินาที แล้วลองตั้งค่าอีกครั้ง ถ้ายังมีข้อความนี้ปรากฏอีก โปรดติดต่อศูนย์บริการลูกค้า SAMSUNG ที่อยู่ใกล้บ้าน

หมายเหตุ

สำหรับรหัสที่ไม่ปรากฏข้างต้น หรือถ้าคำแนะนำใช้ไม่ได้ผล โปรดติดต่อศูนย์บริการลูกค้า SAMSUNG ที่อยู่ใกล้บ้าน

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 54 2019-09-11 11:02:17

ข้อมูลจำเพาะด้านเทคนิค

SAMSUNG มุ่งมั่นที่จะพัฒนาผลิตภัณฑ์อยู่เสมอ ดังนั้นรายละเอียดของเครื่องและคำแนะนำสำหรับผู้ใช้นี้จึงอาจมีการเปลี่ยนแปลง โดยไม่ได้แจ้งให้ทราบ

รุ่น	MC32K7055**
การจ่ายไฟ	220 V ~ 50 Hz AC
การใช้พลังงาน	
พลังงานสูงสุด	2750 วัตต์
ไมโครเวฟ	1400 วัตต์
ระบบย่าง (ขดลวดความร้อน)	1350 วัตต์
Hot blast (ขดลวดความร้อน)	สูงสุด 1900 วัตต์
กำลังไฟฟ้า	100 วัตต์ / 900 วัตต์ - 6 ระดับ (IEC-705)
ความถี่ของคลื่นขณะทำงาน	2450 MHz
ขนาด (กว้าง x สูง x ลึก)	
ภายนอก (รวมมือจับ)	523 x 309 x 486 มม.
ช่องของเตาอบ	373 x 233 x 363 มม.
ปริมาตร	32 ลิตร
น้ำหนัก	
สุทธิ	20.0 กก. โดยประมาณ

บันทึก

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 55 2019-09-11 11:02:17

SAMSUNG

โปรดทราบว่าการรับประกันของ Samsung ไม่ครอบคลุมถึงการโทรรับบริการเพื่ออธิบายถึงการใช้งานผลิตภัณฑ์ แก้ไขการติดตั้งที่ไม่ถูกต้อง หรือการทำความสะอาดหรือบำรุงรักษาตามปกติ

ถ้าคุณมีคำถามหรือข้อคิดเห็น

ประเทศ/ที่ตั้ง	โทรศัพท์	หรือเยี่ยมชมเว็บไซต์ของเราที่
AUSTRALIA	1300 362 603	www.samsung.com/au/support
NEW ZEALAND	0800 726 786	www.samsung.com/nz/support
CHINA	400-810-5858	www.samsung.com/cn/support
HONG KONG	3698 4698	www.samsung.com/hk/support (Chinese) www.samsung.com/hk_en/support (English)
INDIA	1800 40 SAMSUNG (1800 40 7267864) (Toll-Free) 1800 5 SAMSUNG (1800 5 7267864) (Toll-Free)	www.samsung.com/in/support
BANGLADESH	09612300300 08000300300 (Toll free)	www.samsung.com/support
INDONESIA	021-5699-7777 0800-112-8888 (All Product, Toll Free)	www.samsung.com/id/support
JAPAN	0120-363-905	www.galaxymobile.jp/jp/support
MALAYSIA	1800-88-9999 +603-7713 7420 (Overseas contact)	www.samsung.com/my/support
PHILIPPINES	1-800-10-726-7864 [PLDT Toll Free] 1-800-8-726-7864 [Globe Landline and Mobile] 02-422-2111 [Standard Landline]	www.samsung.com/ph/support

ประเทศ/ที่ตั้ง	โทรศัพท์	หรือเยี่ยมชมเว็บไซต์ของเราที่
SINGAPORE	1800 7267864 | 1800-SAMSUNG	www.samsung.com/sg/support
THAILAND	0-2689-3232 1800-29-3232 (Toll free)	www.samsung.com/th/support
TAIWAN	0800-32-9999	www.samsung.com/tw/support
VIETNAM	1800 588 889	www.samsung.com/vn/support
MYANMAR	+95-1-2399-888	www.samsung.com/mm/support
MACAU	0800 333	www.samsung.com/hk/support (Chinese) www.samsung.com/hk_en/support (English)
SRI LANKA	011 SAMSUNG (011 7267864)	www.samsung.com/support
CAMBODIA	+855-23-993232 1800-20-3232 (Toll free)	www.samsung.com/th/support
LAOS	+856-214-17333	www.samsung.com/th/support
NEPAL	16600172667 (Toll Free for NTC Only) 9801572667 (Toll Free for Ncell users)	www.samsung.com/support

DE68-04387M-03

Microwave Oven

User manual

MC32K7055**



SAMSUNG

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 1 2019-09-11 11:02:19

Contents

Safety instructions 3

Important safety instructions 3

Installation 8

Accessories 8
Installation site 8
Turntable 8

Maintenance 9

Cleaning 9
Replacement (repair) 9
Care against an extended period of disuse 9

Oven features 10

Oven 10
Control panel 10

Oven use 11

How a microwave oven works 11
Checking that your oven is operating correctly 11
Setting the time 12
Cooking/Reheating 12
Power levels and time variations 13
Adjusting the cooking time 13
Stopping the cooking 14
Setting the energy save mode 14
Using the hot blast auto features 14
Using the slim fry features 21
Using the healthy cooking features 23
Using the thai menu features 25
Using the power defrost features 31
Using the dough proof/yogurt features 32
Using the crusty plate 33
Hot Blast 34
Grilling 34
Choosing the accessories 35
Combining microwaves and grill 35
Combining microwaves and hot blast 36
Using the turntable on/off features 38
Using the child lock features 38
Switching the beeper off 38

Cookware guide 39

Cooking guide 40

Troubleshooting and information code 51

Troubleshooting 51
Information codes 54

Technical specifications 55

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 2 2019-09-11 11:02:19

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode.

WARNING: Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

This appliance is intended to be used in household only and it is not intended to be used such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential environments;
- bed and breakfast type environments.

Only use utensils that are suitable for use in microwave ovens.

When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.

The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

If smoke is observed (emitted), switch off or unplug the appliance and keep the door closed in order to stifle any flames.

Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.

The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.

The oven should be cleaned regularly and any food deposits removed.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 3 2019-09-11 11:02:20

Safety instructions

Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

The microwave oven is intended to be used on the counter top (freestanding) use only, the microwave oven shall not be placed in a cabinet.

Metallic containers for food and beverages are not allowed during microwave cooking.

The care should be taken not to displace the turntable when removing containers from the appliance.

The appliance shall not be cleaned with a steam cleaner.

The appliance should not be cleaned with a water jet.

The appliance is not intended for installing in road vehicles, caravans and similar vehicles etc.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This oven should be positioned proper direction and height permitting easy access to cavity and control area.

Before using the your oven first time, oven should be operated with the water during 10 minute and then used.

If the oven generates a strange noise, a burning smell, or smoke is emitted, unplug the power plug immediately and contact your nearest service center.

The microwave oven has to be positioned so that plug is accessible.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 4 2019-09-11 11:02:20

WARNING: When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.

WARNING: Accessible parts may become hot during use. Young children should be kept away.

Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

A steam cleaner is not to be used.

WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

The appliance must not be installed behind a decorative door in order to avoid overheating.

WARNING: The appliance and its accessible parts become hot during use.

Care should be taken to avoid touching heating elements.

Children less than 8 years of age shall be kept away unless continuously supervised.

CAUTION: The cooking process has to be supervised. A short term cooking process has to be supervised continuously.

The door or the outer surface may get hot when the appliance is operating.

The temperature of accessible surfaces may be high when the appliance is operating.

The surfaces are liable to get hot during use.

The appliances are not intended to be operated by means of an external timer or separate remote-control system.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

Keep the appliance and its cord out of reach of children less than 8 years.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 5 2019-09-11 11:02:20

Safety instructions

General safety

Any modifications or repairs must be performed by qualified personnel only.
Do not heat food or liquids sealed in containers for the microwave function.
Do not use benzene, thinner, alcohol, or steam or high-pressure cleaners to clean the oven.
Do not install the oven: near a heater or flammable material; locations that are humid, oily, dusty or exposed to direct sunlight or water; or where gas may leak; or an uneven surface.
This oven must be properly grounded in accordance with local and national codes.
Regularly use a dry cloth to remove foreign substances from the power plug terminals and contacts.
Do not pull, excessively bend, or place heavy objects on the power cord.
If there is a gas leak (propane, LP, etc) ventilate immediately. Do not touch the power cord.
Do not touch the power cord with wet hands.
While the oven is operating, do not turn it off by unplugging the power cord.
Do not insert fingers or foreign substances. If foreign substances enter the oven, unplug the power cord and contact a local Samsung service centre.
Do not apply excessive pressure or impact to the oven.
Do not place the oven over fragile objects.
Ensure the power voltage, frequency, and current matches the product specifications.
Firmly plug the power plug into the wall socket. Do not use multiple plug adapters, extension cords, or electric transformers.
Do not hook the power cord on metal objects. Make sure the cord is between objects or behind the oven.
Do not use a damaged power plug, power cord, or loose wall socket. For damaged power plugs or cords, contact a local Samsung service centre.
Do not pour or directly spray water onto the oven.
Do not place objects on the oven, inside, or on the oven door.
Do not spray volatile materials such as insecticide on the oven.
Do not store flammable materials in the oven. Because alcohol vapours can contact hot parts of the oven, use caution when heating food or drinks containing alcohol.
Children may bump themselves or catch their fingers on the door. When opening/closing the door, keep children away.

Microwave warning

Microwave heating of beverages may result in delayed eruptive boiling; always use caution when handling the container. Always allow beverages to stand at least 20 seconds before handling. If necessary, stir during heating. Always stir after heating.
In the event of scalding, follow these First Aid instructions:
1. Immerse the scalded area in cold water for at least 10 minutes.
2. Cover with a clean, dry dressing.
3. Do not apply any creams, oils, or lotions.
To avoid damaging the tray or rack, do not put the tray or rack in water shortly after cooking.
Do not use the oven for deep fat frying because the oil temperature cannot be controlled. This could result in a sudden boil over of hot oils.

Microwave oven precautions

Only use microwave-safe utensils. Do not use metallic containers, gold or silver trimmed dinnerware, skewers, etc.
Remove wire twist ties. Electric arcing may occur.
Do not use the oven to dry papers or clothes.
Use shorter times for small amounts of food to prevent overheating or burning.
Keep the power cord and power plug away from water and heat sources.
To avoid the risk of explosion, do not heat eggs with shells or hard-boiled eggs. Do not heat airtight or vacuum-sealed containers, nuts, tomatoes, etc.
Do not cover the ventilation slots with cloth or paper. This is a fire hazard. The oven may overheat and turn off automatically and will remain off until it cools sufficiently.
Always use oven mitts when removing a dish.
Stir liquids halfway during heating or after heating ends and allow the liquid stand at least 20 seconds after heating to prevent eruptive boiling.
Stand at arms length from the oven when opening the door to avoid getting scalded by escaping hot air or steam.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 6 2019-09-11 11:02:20

Do not operate the oven when it is empty. The oven will automatically shut down for 30 minutes for safety purposes. We recommend placing a glass of water inside the oven at all times to absorb microwave energy in case the oven is started accidentally.
Install the oven in compliance with the clearances in this manual. (See Installing your microwave oven.)
Use caution when connecting other electrical appliances to sockets near the oven.

Microwave operation precautions

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

- Do not operate the oven with the door open. Do not tamper with the safety interlocks (door latches). Do not insert anything into the safety interlock holes.
- Do not place any object between the oven door and front face or allow food or cleaner residue to accumulate on sealing surfaces. Keep the door and door sealing surfaces clean by wiping with a damp cloth and then with a soft, dry cloth after each use.
- Do not operate the oven if it is damaged. Only operate after it has been repaired by a qualified technician.
  Important: the oven door must close properly. The door must not be bent; the door hinges must not be broken or loose; the door seals and sealing surfaces must not be damaged.
- All adjustments or repairs must be done by a qualified technician.

Limited warranty

Samsung will charge a repair fee for replacing an accessory or repairing a cosmetic defect if the damage to the unit or accessory was caused by the customer. Items this stipulation covers include:

- Door, handles, out-panel, or control panel that are dented, scratched, or broken.
- A broken or missing tray, guide roller, coupler, or wire rack.


Use this oven only for its intended purpose as described in this instruction manual. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your oven.
Because these following operating instructions cover various models, the characteristics of your microwave oven may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact a local Samsung service centre or find help and information online at www.samsung.com.
Use this oven for heating food only. It is intended for domestic use only. Do not heat any type of textiles or cushions filled with grains. The manufacturer cannot be held liable for damage caused by improper or incorrect use of the oven.
To avoid deterioration of the oven surface and hazardous situations, always keep the oven clean and well maintained.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 7 2019-09-11 11:02:20

Installation


Accessories

Depending on the model that you have purchased, you are supplied with several accessories that can be used in a variety of ways.




01 Roller ring, to be placed in the centre of the oven.

Purpose: The roller ring supports the turntable.




02 Turntable, to be placed on the roller ring with the centre fitting on to the coupler.

Purpose: The turntable serves as the main cooking surface; it can be easily removed for cleaning.

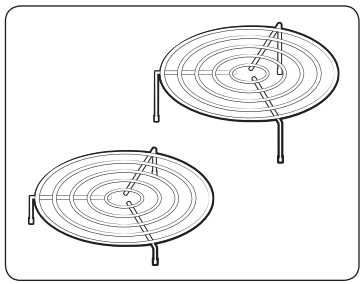

03 High rack, **Low rack**, to be placed on the turntable.

Purpose: The metal racks can be used to cook two dishes at the same time. A small dish may be placed on the turntable and a second dish on the rack. The metal racks can be used in grill, hot blast and combination cooking.

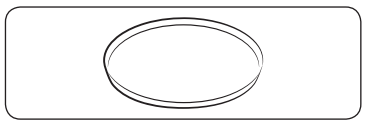


04 Crusty plate, see page 33.

Purpose: The crusty plate is used to brown food better in the microwave or grill combination cooking modes. It helps keep pastry and pizza dough crisp.

⚠ **CAUTION**


DO NOT operate the microwave oven without the roller ring and turntable.

Installation site

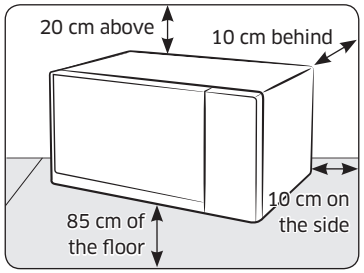

- Select a flat, level surface approx. 85 cm above the floor. The surface must support the weight of the oven.
- Secure room for ventilation, at least 10 cm from the rear wall and both sides, and 20 cm from above.
- Do not install the oven in hot or damp surroundings, such as next to other microwave ovens or radiators.
- Conform to the power supply specifications of this oven. Use only approved extension cables if you need to use.
- Wipe the interior and the door seal with a damp cloth before using your oven for the first time.

Turntable

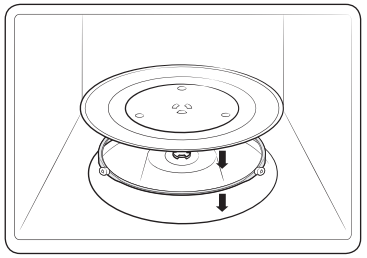

Remove all packing materials inside the oven. Install the roller ring and turntable. Check that the turntable rotates freely.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 8 2019-09-11 11:02:20

Maintenance


Cleaning

Clean the oven regularly to prevent impurities from building up on or inside the oven. Also pay special attention to the door, door sealing, and turntable and roller ring (applicable models only).
If the door won't open or close smoothly, first check if the door seals have built up impurities. Use a soft cloth in soapy water to clean both the inner and outer sides of the oven. Rinse and dry well.

To remove stubborn impurities with bad smells from inside the oven

1. With an empty oven, put a cup of diluted lemon juice on the centre of the turntable.
2. Heat the oven for 10 minutes at max power.
3. When the cycle is complete, wait until the oven cools down. Then, open the door and clean the cooking chamber.

To clean inside swing-heater models

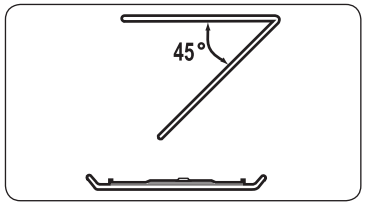

To clean the upper area of the cooking chamber, lower the top heating element by 45° as shown. This will help clean the upper area. When done, reposition the top heating element.

⚠ CAUTION

- Keep the door and door sealing clean and ensure the door opens and closes smoothly. Otherwise, the oven's lifecycle may be shortened.
- Take caution not to spill water into the oven vents.
- Do not use any abrasive or chemical substances for cleaning.
- After each use of the oven, use a mild detergent to clean the cooking chamber after waiting for the oven to cool down.

Replacement (repair)

⚠ WARNING

This oven has no user-removable parts inside. Do not try to replace or repair the oven yourself.

- If you encounter a problem with hinges, sealing, and/or the door, contact a qualified technician or a local Samsung service centre for technical assistance.
- If you want to replace the light bulb, contact a local Samsung service centre. Do not replace it yourself.
- If you encounter a problem with the outer housing of the oven, first unplug the power cord from the power source, and then contact a local Samsung service centre.


Care against an extended period of disuse

If you don't use the oven for an extended period of time, unplug the power cord and move the oven to a dry, dust-free location. Dust and moisture that builds up inside the oven may affect the performance of the oven.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 9 2019-09-11 11:02:21


Oven features

Oven

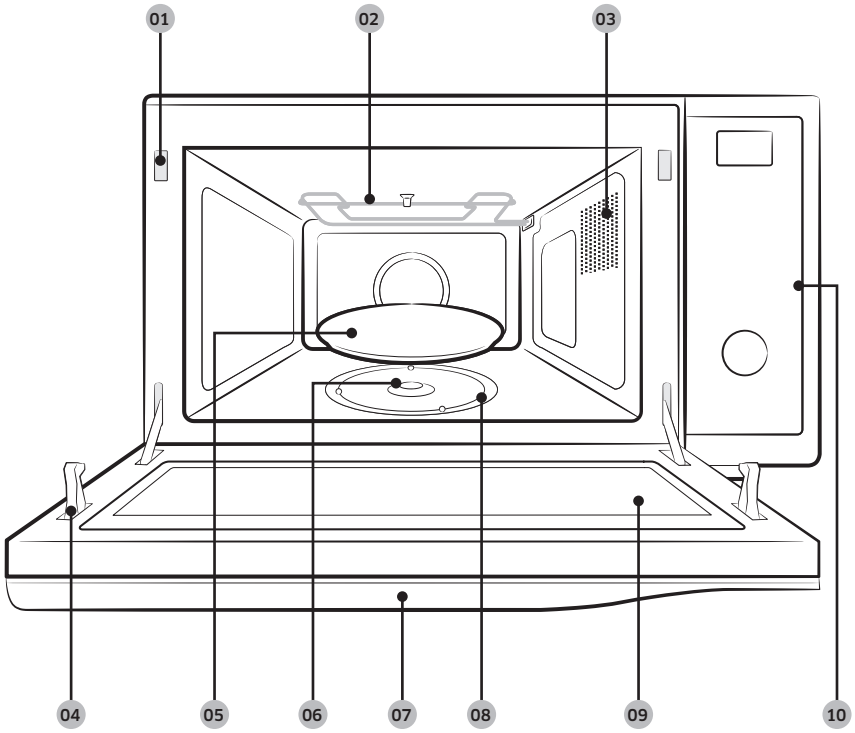

01 Safety interlock holes
02 Heating element
03 Ventilation holes
04 Door latches
05 Turntable
06 Coupler
07 Door handle
08 Roller ring
09 Door
10 Control panel

Control panel

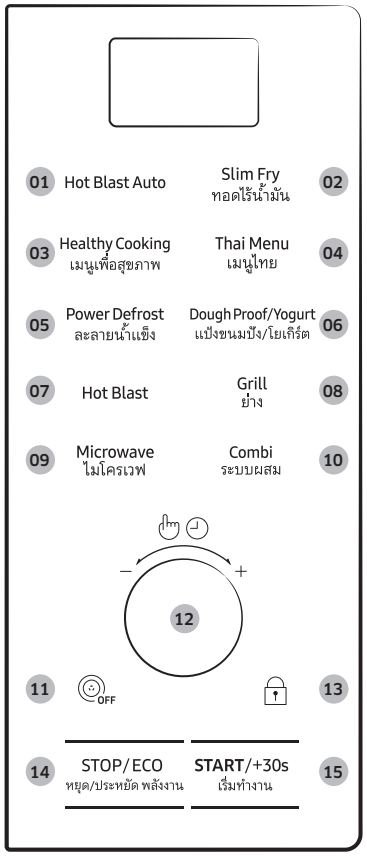

01 Hot Blast Auto Button
02 Slim Fry Button
03 Healthy Cooking Button
04 Thai Menu Button
05 Power Defrost Button
06 Dough Proof/Yogurt Button
07 Hot Blast Button
08 Grill Button
09 Microwave Button
10 Combi Button
11 Turntable On/Off Button
12 Multi Function Selector Dial
13 Child Lock Button
14 Stop/Eco Button
15 Start/+30s Button


MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 10 2019-09-11 11:02:21

Oven use

How a microwave oven works

Microwaves are high-frequency electromagnetic waves; the energy released enables food to be cooked or reheated without changing either the form or the colour.
You can use your microwave oven to:
- Defrost
- Reheat
- Cook

Cooking principle.

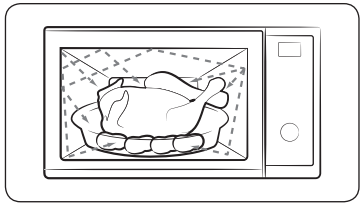

1. The microwaves generated by the magnetron reflected at cavity and are distributed uniformly as the food rotates on the turntable. The food is thus cooked evenly.
2. The microwaves are absorbed by the food up to a depth of about 1 inch (2.5 cm). Cooking then continues as the heat is dissipated within the food.
3. Cooking times vary according to the container used and the properties of the food:
   - Quantity and density
   - Water content
   - Initial temperature (refrigerated or not)

☛ IMPORTANT

As the centre of the food is cooked by heat dissipation, cooking continues even when you have taken the food out of the oven. Standing times specified in recipes and in this booklet must therefore be respected to ensure:
- Even cooking of the food right to the centre.
- The same temperature throughout the food.

Checking that your oven is operating correctly

The following simple procedure enables you to check that your oven is working correctly at all times. If you are in doubt, refer to the section entitled "**Troubleshooting**" on the page 51-54.

NOTE

The oven must be plugged into an appropriate wall socket. The turntable must be in position in the oven. If a power level other than the maximum (100 % - 900 W) is used, the water takes longer to boil.

Open the oven door by pulling the handle on the upper side of the door.
Place a glass of water on the turntable. Close the door.



Press the Microwave mode and set the time to 4 or 5 minutes by pressing the **START/+30s** button.

Result: The oven heats the water for 4 or 5 minutes. The water should then be boiling.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 11 2019-09-11 11:02:21

Oven use


Setting the time

When power is supplied, “88:88” and then “12:00” is automatically displayed on the display.
Please set the current time. The time can be displayed in either the 24-hour or 12-hour notation. You must set the clock:


- When you first install your microwave oven
- After a power failure

NOTE

Do not forget to reset the clock when you switch to and from summer and winter time.

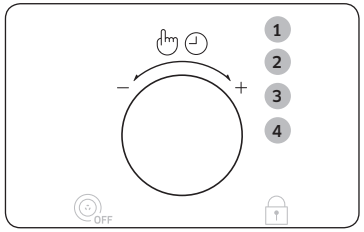

1. Press the **Multi Function Selector Dial**.
2. Turn the **Multi Function Selector Dial** to set time display type. (12H or 24H)
3. Press the **Multi Function Selector Dial** to complete the setup.
4. Turn the **Multi Function Selector Dial** to set the hour.

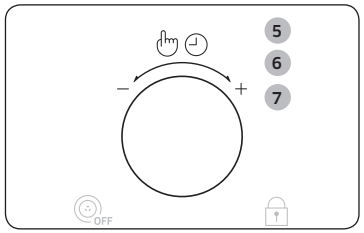

5. Press the **Multi Function Selector Dial**.
6. Turn the **Multi Function Selector Dial** to set the minute.
7. When the right time is displayed, press the **Multi Function Selector Dial** to start the clock.

   Result: The time is displayed whenever you are not using the microwave oven.

Cooking/Reheating

The following procedure explains how to cook or reheat food.

IMPORTANT

ALWAYS check your cooking settings before leaving the oven unattended.

Open the door. Place the food in the centre of the turntable. Close the door. Never switch the microwave oven on when it is empty.




1. Press the **Microwave** button.

   Result: The following indications are displayed:

   (Microwave mode)

   900 W (Output power)

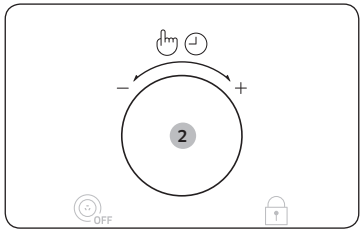

2. Turn the **Multi Function Selector Dial** until the appropriate power level is displayed. At that time, press the **Multi Function Selector Dial** to set the power level.
   - If don’t set the power level within 5 seconds, Automatically changes to the cooking time setting stage.



3. Set the cooking time by turning the **Multi Function Selector Dial**.

   Result: The cooking time is displayed.
4. Press the **START/+30s** button.

   Result: The oven light comes on and the turntable starts rotating. Cooking starts. When it has finished.

   1) The oven beeps 4 times.
   2) The end reminder signal will beep 3 times (once every minute).
   3) The current time is displayed again.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 12 2019-09-11 11:02:22

Power levels and time variations

The power level function enables you to adapt the amount of energy dissipated and thus the time required to cook or reheat your food, according to its type and quantity.
You can choose between six power levels.


Power level	Percentage	Output
HIGH	100 %	900 W
MEDIUM HIGH	67 %	600 W
MEDIUM	50 %	450 W
MEDIUM LOW	33 %	300 W
DEFROST	20 %	180 W
LOW	11 %	100 W

The cooking times given in recipes and in this booklet correspond to the specific power level indicated.

If you select a...	Then the cooking time must be...
Higher power level	Decreased
Lower power level	Increased

Adjusting the cooking time

You can increase the cooking time by pressing the **START/+30s** button once for each 30 seconds to be added.
- Check how cooking is progressing at any time simply by opening the door
- Increase the remaining cooking time

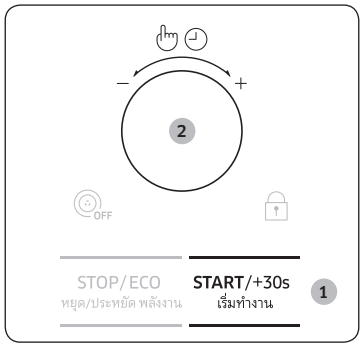

Method 1
To increase the cooking time of your food during cooking, press the **START/+30s** button once for each 30 seconds that you wish to add.
- Example: To add three minutes, press the **START/+30s** button six times.

Method 2
Just turning **Multi Function Selector Dial** to adjust cooking time.
- To increase cooking time, turn to right and to decrease cooking time, turn to left.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 13 2019-09-11 11:02:22

Oven use

Stopping the cooking

You can stop cooking at any time so that you can:
- Check the food
- Turn the food over or stir it
- Leave it to stand

To stop the cooking...	Then...
Temporarily	Open the door or press the **STOP/ECO** button once. **Result:** Cooking stops. To resume cooking, close the door again and press the **START/+30s** button.
Completely	Press the **STOP/ECO** button once. **Result:** Cooking stops. If you wish to cancel the cooking settings, press the **STOP/ECO** button again.

Setting the energy save mode

The oven has an energy save mode.



- Press the **STOP/ECO** button.
  Result: Display off.
- To remove energy save mode, open the door or press the **STOP/ECO** button and then display shows current time. The oven is ready for use.

NOTE

Auto energy saving function

If you do not select any function when appliance is in the middle of setting or operating with temporary stop condition, function is canceled and clock will be displayed after 25 minutes.
Oven Lamp will be turned off after 5 minutes with door open condition.


Using the hot blast auto features


The 22 **Hot Blast Auto** features include/provide pre-programmed cooking times. You do not need to set either the cooking times or the power level. You can adjust the size of the serving by turning the **Multi Function Selector Dial**.

IMPORTANT

Use only recipients that are microwave-safe.

Open the door. Place the food in the centre of the turntable. Close the door.



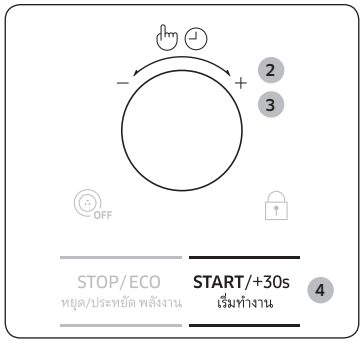

1. Press the **Hot Blast Auto** button.
2. Select the type of food that you are cooking by turning the **Multi Function Selector Dial**.
   Refer to the table on the following page for a description of the various pre-programmed settings. At that time, press the **Multi Function Selector Dial** to select the type of food.
3. Select the size of the serving by turning the **Multi Function Selector Dial**.
4. Press the **START/+30s** button.
   Result: The food is cooked according to the pre-programmed setting selected. When it has finished.
   1) The oven beeps 4 times.
   2) The end reminder signal will beep 3 times (once every minute).
   3) The current time is displayed again.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 14 2019-09-11 11:02:22

Hot Blast guide

The following table presents 22 **Hot Blast auto** programmes, quantities and appropriate instructions. Those programmes are running with a combination of microwaves, grill and convection heater.

Code/Food	Serving size	Instructions
H1 Frozen Pan Pizza	400-450 g	Remove a package and place the Pizza on a Low rack. After cooking, stand for 2-3 minutes.
H2 Homemade Pizza	500-550 g	• Ingredients Pizza dough(200-250 g) 150 g strong white bread flour, 3 g dried yeast, 0.5 tbsp olive oil, 100 ml warm water, 0.5 tbsp sugar and salt Topping 100 g Sliced Vegetables, 100 g Tomato puree, 80-100 g grated Mozzarella cheese • Method Put the flour, yeast, oil, salt and warm water in a bowl and mix to a wettish dough. Knead in a mixer or by hand about 5-10 mins. Cover with lid and prove for 30 min. Roll out into Crusty plate. Spread the tomato puree on the dough and add vegetables. Sprinkle cheese evenly on top. Put them on the high rack. After cooking, stand for 2-3 minutes.
H3 Homemade Lasagne	500-600 g 1000-1100 g	• Ingredients **(1000-1100 g)** 2 tbsp olive oil, 300 g minced beef, 200 g tomato sauce, 100 ml beef stock, 150 g dried lasagne sheets (8 sheets), 1 onion(chopped), 1 tsp each of dried parsley flakes, oregano, basil, 200g grated mozzarella cheese - In case of 500-600 g, use half quantity. • Method Sauce: Heat the oil in a frying pan, then cook the minced beef and chopped onion for about 10 min until browned all over. Pour over the tomato sauce and beef stock, add the dried herbs. Bring up to the boil, then simmer for 30 min. Cook lasagna noodles according to package directions. Layer noodle, meat sauce, and cheese then repeat. Then sprinkle evenly with remaining mozzarella cheese on the top of noodles and put them in the low rack. After cooking, stand for 2-3 minutes.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 15 2019-09-11 11:02:23

Oven use

Code/Food	Serving size	Instructions
H4 Homemade Gratin	500-600 g 900-1000 g	• Ingredients **(900-1000 g)** 640 g potatoes, 80 ml milk, 80 ml cream, 40 g beaten whole egg, 1 tsp each of salt, pepper, nutmeg, 120 g grated mozzarella cheese, butter, thyme - In case of 500-600 g, Use half quantity. • Method Peel potatoes and slice them to 3 mm thickness. Rub the butter all over the surface of a gratin dish. Spread the slices on a clean towel and keep them covered with the towel while you prepare the rest of the ingredients. Mix the rest of the ingredients except for grated cheese into a large bowl and stir well. Layer the potato slices in the dish slightly overlapping and pour the mixture over the potatoes. Spread the grated cheese over the top and put them in the low rack. After cooking, serve sprinkled with a few fresh thyme leaves. After cooking, stand for 2-3 minutes.
H5 Frozen French Fries	200-250 g 300-350 g	Distribute frozen oven chips evenly on the crusty plate. Set plate on the high rack. After cooking, stand for 2-3 minutes.
H6 Frozen Buffalo Wings	400-450 g 500-550 g	Put the Frozen Buffalo wings (pre-cooked and spiced) on a side of the crusty plate. Set plate on the high rack. After cooking, stand for 2-3 minutes.
H7 Roast Chicken Pieces	500-600 g 900-1000 g	Weigh chicken pieces and brush with oil and spices. Place them evenly on high rack. When the beep sounds, turn the chicken over and press start to continue. After cooking, stand for 2-3 minutes.
H8 Roast Chicken	1100-1200 g 1200-1300 g	Brush the chicken oil and spices fully. Put Breast side down first, in the middle of low rack. When the beep sounds, turn the chicken over by using tongs and press the start to continue. After cooking, stand for 2-3 minutes.
H9 Beef Steak Pie	500-600 g	• Ingredients 200 g beef, cubed,1 tbsp olive oil, ½ onion(sliced), 80 g mushroom(sliced), 1 tbsp each of parsley and thyme, chopped, 1 tbsp Worcestershire sauce, salt and pepper 2 tbsp flour,100 ml hot beef stock,120 g ready-made pastry dough, 1 egg yolk, beaten • Method Sprinkle the beef with four, salt and pepper. Fry them in a frying pan with oil, stirring frequently until browned. Add onion, mushroom, parsley, thyme, Worcestershire sauce and beef stock and broil. After broiling, reduce to simmer for an hour. Pour the filling mixture to an oven dish and cover with the pie pastry sheet and press the edge together to seal. Decorate with pastry trimming with knife and pork. Cut cross the top and brush with beaten egg yolk. Put them on the low rack. After cooking, stand for 2-3 minutes.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 16 2019-09-11 11:02:23

Code/Food	Serving size	Instructions
H10 Homemade Mini Quiche	400-500 g	• Ingredients Pastry 200 g plain flour, 80 g butter, 1 egg, 30 g bacon, cubed, 60 g Cream, 60 g Cream fraiche, 2 egg, 40 g grated cheese, salt and pepper • Method To make the pastry, put the flour, butter and eggs in a bowl and mix to a soften pastry and then rest it in the efrigerator for 30 mins. Roll out the pastry and place in buttered metal tins (like muffin mould for 6 mini quiches). Mix the cream, cubed bacon, cream fraiche, egg, cheese, salt, pepper and pour the mixture into the moulds. Put them on the low rack. After cooking, stand for 5 minutes.
H11 Grilled Shrimp with Black Pepper	1-2 person	• Ingredients 400 g Tiger shrimp, 1 Tbsp. Black pepper, ½ cup Diced small bell peppers three colors, 1-2 root Coriander root, 5 pieces Thai garlics, 1 Ts. Cayenne, ½ Tbsp. Red sugar, ½ Ts. Salt, 2 Tbsp. Olive oil, 2 Tbsp. White wine • Method Crush coriander root, garlic, pepper, pepper onion. Cut in both shell shrimp, marinate with all ingredients for 15 minutes. Put them on high rack in microwave oven and press start button. When the beep, bring out them and Mix marinate sauce and bell pepper. Put a sauce in oven and press start button again. After cooking, serve with grilled shrimp.

Code/Food	Serving size	Instructions
H12 Grilled Shrimp with Three Flavor Sauce	2 person	• Ingredients 400 g River or tiger prawn, 2 Ts. Cayenne, ¼ Ts. Salt, ¼ Ts. Pepper, 1 Tbsp. Olive oil, 1 Tbsp. Fish sauce, 1 ½ Tbsp. Palm sugar, 3 Tbsp. Tamarind juice, ½ cup Onion, ½ cup Chopped tomato, 1 Tbsp. Oil, ½ cup Finely slice Shallot • Method Wash and cut in both shell shrimp, marinate with salt, pepper, cayenne, and olive oil for 15 minutes. Put them on high rack in microwave oven and press start button. When the beep, bring out them. Mix shallot and oil. Put them in microwave oven and press start button. When the 2nd beep, bring out mash together and put them in microwave oven and press start button. When the 3rd beep, bring out them and mix fish sauce and palm sugar together, add onion and tomato. Put them in microwave oven. After cooking, bring out and pour tamarind juice together. Pour sauce and fried shallot over grilled shrimp before serve.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 17 2019-09-11 11:02:23

Oven use

Code/Food	Serving size	Instructions
H13 Grilled Salmon with Lemon Sauce	1-2 person	• Ingredients 350 g Salmon fillet, 1 finely shreded lemongrass, ½ Ts. Salt, ½ Ts. Pepper, 1 Tbsp. Olive oil Sauce 2 Egg Yolk, 2 Tbsp. Condence milk, 2 Tbsp. Lime juice, 1 Ts. Salt, 2 Tbsp. Mayonnaise • Method Marinate salmon salt, pepper olive oil and lemongrass for 10 minutes. Put them on high rack in microwave oven. When the beep, turn over and press start button. When the 2nd beep, bring out them. Making sauce by mix all ingredient together. Put them in microwave oven and press start button. After cooking, serve with salmon grill.
H14 Grilled King Mackerel with Fish Sauce	2-4 person	• Ingredients 400 g pieces. Fresh king mackerel, ½ cup Fish sauce, ½ Tbsp. Sugar, ½ Ts. Pepper, ½ cup Water, 1 Tbsp. Oil • Method Mix ingredients for marinate king mackerel in 1 hour and sunned 3-4 hour. Put them on high rack in microwave oven and press button. When the beep, Turn over and press start button. After cooking, serve.
H15 Grilled Snapper with Coconut Milk	2-4 person	• Ingredients 400 g Snapper, ½ cup Coconut milk, ½ Tbsp. Shrimp paste, 5 Shallots, ½ Tbsp. White pepper, 1 ½ Tbsp. Palm sugar, 2 Tbsp. Tamarind juice, Fried chili and coriander for decoration. • Method Crush shallots, pepper, Shrimp paste together, add coconut milk, tamarind juice, and palm sugar. Put them in microwave oven and press start button. When the beep, bring out them. Put fish(skin first) on high rack in microwave oven and press start button. When the 2nd beep, bring out them, pour sauce and turn over and press start button. After cooking, decorate with fried chili and coriander. Serve.
H16 Roasted Pork	4 person	• Ingredients 500 g Pork tenderloin, 5 root Coriander root, 10 piece Garlics, ½ Ts. White pepper, 1 Tbsp. Pickled bean curd, ½ Tbsp. Pickled bean curd water, 1 Tbsp. Soy sauce, 2 Tbsp. Honey, 2 Ts. Pork stewed in gravy power • Method Crush coriander root, garlic, pepper together and mix with pork, add another ingredients. Mash and use folk stab on pork, marinate at least 1 hour. Put them on high rack in microwave oven and press start button. When the beep, turn over and press start button. After cooking, slice, serve with sticky rice.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 18 2019-09-11 11:02:23

Code/Food	Serving size	Instructions
H17 Roasted Pork with Salted Fish	2-4 person	• Ingredients 30-50 g King makerel salted, 200 g Minced pork, 2 Tbsp. Shredded garlic, 1 Tbsp. Shredded thin bird chili, ½ Ts. Pepper, 1 Tbsp. Seasoning powder, 1 Ts. Sesame oil, ¼ cup Shredded shallots, 1 Lime • Method Mix ingredients and mash together, except shredded shallots and lime. Mash together. Form clots 1 cm, put them on high rack in microwave oven and press start button. When the beep, turn over and press start button. After cooking, serve for sliced shallots and lemon.
H18 Rice with Roasted Pork with Sesame Sauce	2 person	• Ingredients 250 g Pork sirloin, 2 Tbsp. Red sugar, 3 Tbsp. Shoyu, 1 ½ Tbsp. Mirin, ¼ cup Sliced garlic, ¼ cup Shredded ginger, 2 Tbsp. white sesame, 2 Tbsp. Shredded spring onion for sprinkle on top • Method Sliced pork, add ingredients for marinate 15 minutes. Put them on high rack in microwave oven and press start button. When the beep, turn over and press start button. When the 2nd beep, bring out them. Put marinate sauce in microwave oven and press start oven. After cooking, serve with rice sprinkled with marinate sauce and spring onion.

Code/Food	Serving size	Instructions
H19 Beef Steak with Herb Butter	1 person	• Ingredients 250-300 g Beef sirloin, ¼ cup Red wine, 1 Ts. Pepper corn, ½ Ts. Salt, 1 Tbsp. Olive oil, 1 cup Sliced Eringii Mushroom, 1 cup 3 color Bell peppers, Cut long lines Herb Butter 3 Tbsp. Unsalted butter, 1 Tbsp. Fresh rosemary, ½ Tbsp. Chopped garlic, ¼ Ts. Salt • Method Pound beef or dipping with fork for soften. Crush pepper corn for marinate beef with salt, pepper, red wine, olive oil at least 1 hour. Mix olive oil salt and pepper with vegetables. Put them on high rack in microwave oven and press start button. When the beep, turn over and press start button. When the 2nd beep, bring out them. Put marinated beef on high rack in microwave oven and press start button. When the 3rd beep, turn over and press start button. During cooking, mix Herb butter ingredients together, take in the fridge. After cooking, put herb butter on cooked meat, take to microwave for melted butter. Serve with roasted vegetables.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 19 2019-09-11 11:02:23

Oven use

Code/Food	Serving size	Instructions
H20 Pandan Baked Chicken	2-4 person	• Ingredients 200 g Chicken breast without skin, 1 ½ Tbsp. Oyster sauce, 1 ½ Tbsp. Soy sauce, 1 ½ Tbsp. Sugar, 1 Ts. Pepper, ½ Tbsp. Sesame oil, 1 Tbsp. Coriander root, 1 Tbsp. Chopped garlic, 8-10 leaves Pandan leaf, 2 Tbsp. Oil • Method Slice chicken to pieces and marinate with ingredients for 1 hour and warp with pandan. Put them on high rack in microwave oven and press start button. When the beep, turn over and press start button. After cooking, serve with chili sauce.
H21 Grilled Fish Chilli Paste	1-2 person	• Ingredients ½ cup Dried fish, 15 Dried small chilies, 15 pieces Small garlic, 8 Shallots, ¼ Ts. Salt, 1 Tbsp. Palm sugar, 1 Tbsp. Lime juice • Method Put dried fish on high rack in microwave oven and press start button. When the beep, bring out them. Put dried chilies, garlic, shallots on high rack in microwave oven and press start button. After cooking, pared fish, garlic, shallots, and crush together. Add fish sauce, palm sugar, lime juice. Serve with vegetables or boiled egg.

Code/Food	Serving size	Instructions
H22 Baked Rice with Taro	2 person	• Ingredients 2 cup Cooked Jasmine rice, 1 cup Pork sirloin, ½ cup Chinese sausage, 1 Tbsp. Chopped garlic, ½ cup Cooked diced taro, 2 Tbsp. Cooked diced carrot, 1 Tbsp. Cooked string bean, 1 Tbsp. Cooked corn, 5 Shiitake mushroom, 2 Tbsp. Soy sauce, 2 Ts. Sugar, 1 Tbsp. Oyster sauce, 1 Ts. Pepper, 1 Tbsp. Oil • Method Mash garlic, pork shoulder, Chinese sausage with oil. Put them in glass bowl in microwave oven and press start button. When the beep, remaining ingredients, mash and put them all in microwave oven and press start button. After cooking, serve.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 20 2019-09-11 11:02:23

Using the slim fry features

The 11 **Slim Fry** features include/provide pre-programmed cooking times. You do not need to set either the cooking times or the power level. You can adjust the Slim Fry category by turning the **Multi Function Selector Dial**.


☛ **IMPORTANT**

Use only recipients that are microwave-safe.

Open the door. Place the food in the centre of the turntable. Close the door.



1. Press the **Slim Fry** button.

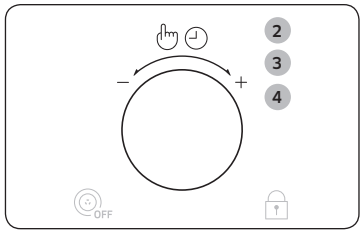

2. Turn the **Multi Function Selector Dia**l to select Cook category. At that time, press the **Multi Function Selector Dial** to select the cook category.
   1. Potatoes/Vegetables
   2. Seafood
   3. Chicken

3. Select the type of food that you are cooking by turning the **Multi Fuction Selector Dial**. Refer to the table on the following page for a description of the various pre-programmed settings. At that time, press the **Multi Fuction Selector Dial** to select the type of food.

4. Select the size of the serving by turning the **Multi Function Selector Dial**.



5. Press the **START/+30s** button.

Result: The food is cooked according to the pre-programmed setting selected. When it has finished.

1) The oven beeps 4 times.
2) The end reminder signal will beep 3 times (once every minute).
3) The current time is displayed again.

Slim fry guide

The following table presents the 11 **Slim Fry** auto programmes for frying. It contains its quantities and appropriate instructions. You will use less oil compared to frying with oil fryer, while you will get tasty results. Programmes are running with a combination of convection, top heater and microwave energy.

1. Potatoes/Vegetables

Code/Food	Serving size	Instructions
1-1 Frozen Potato Croquettes	200-250 g 300-350 g	Distribute frozen potato croquettes evenly on the crusty plate. Set plate on low rack. Stand for 1-2 minutes.
1-2 Homemade French Fries	300-350 g 400-450 g	Use hard to medium type of potatoes and wash them. Peel potatoes and cut into sticks with a thickness of 10 x 10 mm. Soak in cold water (for 30 min.). Dry them with a towel, weigh them and brush with 5 g olive oil. Distribute homemade fries evenly on the crusty plate. Set plate on high rack. Stand for 1-2 minutes.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 21 2019-09-11 11:02:23

Oven use

Code/Food	Serving size	Instructions
1-3 Potato Wedges	200-250 g 300-350 g 400-450 g	Wash normal sized potatoes and cut them into wedges. Brush with olive oil and spices. Put them with the cut side on the crusty plate. Set plate on high rack. Stand for 1-3 minutes.
1-4 Frozen Onion Ring	100-150 g 200-250 g	Put frozen breaded onion rings or frozen breaded squid rings evenly on the crusty plate. Set plate on low rack. Stand for 1-2 minutes.
1-5 Sliced Courgettes	100-150 g 200-250 g	Rinse and slice courgettes. Brush with 5 g olive oil and add spices. Put slices evenly on the crusty plate and set plate on high rack. Turnover after beep sounds. Press start to continue. (The oven keeps operating if you do not turn over). Stand for 1-2 minutes.

2. Seafood

Code/Food	Serving size	Instructions
2-1 Frozen Prawns	200-250 g 300-350 g	Distribute frozen breaded prawns evenly on the crusty plate. Set plate on low rack. Stand for 1-2 minutes.
2-2 Frozen Fish Cutlets	200-250 g 300-350 g	Distribute frozen breaded fish cutlets evenly on the crusty plate. Set plate on low rack. Stand for 1-2 minutes.
2-3 Frozen Fried Squid	100-150 g 200-250 g	Distribute frozen breaded squid rings evenly on the crusty plate. Set plate on low rack. Stand for 1-2 minutes.

3. Chicken

Code/Food	Serving size	Instructions
3-1 Frozen Chicken Nuggets	200-250 g 300-350 g	Distribute frozen chicken nuggets evenly on the crusty plate. Set plate on high rack. Stand for 1-2 minutes.
3-2 Chicken Drumsticks	200-250 g 300-350 g 400-450 g	Weigh drumsticks and brush with oil and spices. Place them evenly on high rack. Turnover after beep sounds, oven will stop process. Press start to continue. Stand for 1-3 minutes.
3-3 Chicken Wings	200-250 g 300-350 g	Weigh chicken wings and brush with oil and spices. Place them evenly on high rack. Turnover after beep sounds, oven will stop process. Press start to continue. Stand for 1-2 minutes.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 22 2019-09-11 11:02:23

Using the healthy cooking features


The 13 **Healthy Cooking** features provide pre-programmed cooking times.
You do not need to set either the cooking times or the power level.
You can adjust the size of the serving by turning the **Multi Function Selector Dial**.

☛ **IMPORTANT**

Use only recipients that are microwave-safe.

Open the door. Place the food in the centre of the turntable. Close the door.



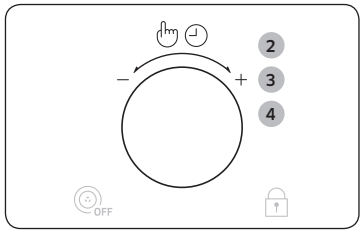



1. Press the **Healthy Cooking** button.
2. Select the category of food by turning the **Multi Function Selector Dial** and press the **Multi Function Selector Dial**.
   1. Grain/Pasta
   2. Vegetables
   3. Poultry/Fish
3. Select the type of food that you are cooking by turning the **Multi Function Selector Dial**. Refer to the table on the following page for a description of the various pre-programmed settings. At that time, press the **Multi Function Selector Dial** to select the type of food.
4. Select the size of the serving by turning the **Multi Function Selector Dial**.
5. Press the **START/+30s** button.
   Result: The food is cooked according to the pre-programmed setting selected. When it has finished.
   1) The oven beeps 4 times.
   2) The end reminder signal will beep 3 times (once every minute).
   3) The current time is displayed again.

Healthy cooking guide

The following table presents quantities and appropriate instructions about 13 **Healthy Cooking** programmes.

1. Grain/Pasta

Code/Food	Serving size	Instructions
1-1 Brown Rice	150-200 g 200-250 g	Use a large glass ovenware dish with lid. Add cold water of double quantity. Cook covered. Stir before standing time and add salt and herbs. Stand for 5-10 minutes.
1-2 Quinoa	150-200 g 200-250 g	Use a large glass ovenware dish with lid. Add cold water of double quantity. Cook covered. Stir before standing time and add salt and herbs. Stand for 1-3 minutes.
1-3 Macaroni	100-150 g 200-250 g	Use a large glass ovenware dish with lid. Add hot boiling water of 4 times, a pinch of salt and stir well. Cook uncovered. Stir before standing time and drain thoroughly afterwards. Stand for 1-3 minutes.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 23 2019-09-11 11:02:24

Oven use

2. Vegetables

Code/Food	Serving size	Instructions
2-1 Green Beans	200-250 g 300-350 g	Rinse and clean green beans. Put them evenly into a glass bowl with lid. Add 30 ml (2 tbsp) water when cooking for 200-250 g and add 45ml (3 tbsp) for 300-450 g. Put bowl in the center of turntable. Cook covered. Stir after cooking. Stand for 1-2 minutes.
2-2 Spinach	100-150 g 200-250 g	Rinse and clean spinach. Put into a glass bowl with lid. Do not add water. Put bowl in the center of turntable. Cook covered. Stir after cooking. Stand for 1-2 minutes.
2-3 Peeled Potatoes	300-350 g 400-450 g 500-550 g	Wash and peel potatoes, cut into halves and put into a glass bowl with lid. Add 15-30 ml of water (1-2 tbsp). Stir after cooking. When cooking higher quantities stir once during cooking. Stand for 3-5 minutes.
2-4 Grilled Eggplants	100-150 g 200-250 g	Rinse and slice eggplants. Brush with oil and spices. Put slices evenly on the high rack. Turnover after beep sounds. Press start to continue (The oven keeps operating if you do not turnover). Stand for 1-2 minutes.
2-5 Grilled Tomatoes	400-450 g 600-650 g	Rinse and clean tomatoes. Cut them into halves and put in an ovenware dish. Add grated cheese on top. Put dish on the high rack. Stand for 1-2 minutes.

3. Poultry/Fish

Code/Food	Serving size	Instructions
3-1 Chicken Breasts	300-350 g 400-450 g	Rinse chicken breast and put on deep glass ovenware dish. Cover with microwave cling film and pierce film. Put dish on the turntable. Stand for 2 minutes.
3-2 Turkey Breasts	300-350 g 400-450 g	Rinse turkey breast and put on deep glass ovenware dish. Cover with microwave cling film and pierce film. Put dish on the turntable. Stand for 2 minutes.
3-3 Grilled Fish Fillets	200-300 g 400-500 g	Put fish fillets evenly on the high rack. Turnover as soon as the beep sounds. Stand for 1-2 minutes.
3-4 Grilled Salmon Steaks	200-250 g 300-350 g	Put fish steaks evenly on the high rack. Turnover as soon as the beep sounds. Stand for 2 minutes.
3-5 Roast Fish	300-350 g 400-450 g	Brush skin of whole fish (trout or gilthead) with oil and add herbs and spices. Put fish side by side, head to tail on the high rack. Turnover as soon as the beep sounds. Stand for 3 minutes.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 24 2019-09-11 11:02:24

Using the thai menu features

The 28 **Thai Menu** features include/provide pre-programmed cooking times. You do not need to set either the cooking times or the power level. You can adjust the menu by turning the **Multi Function Selector Dial**.

☛ **IMPORTANT**

Use only recipients that are microwave-safe.

Open the door. Place the food in the centre of the turntable. Close the door.



1. Press the **Thai Menu** button.



2. Select the type of food that you are cooking by turning the **Multi Function Selector Dial**. Refer to the table on the following page for a description of the various pre-programmed settings. At that time, press the **Multi Function Selector Dial** to select the type of food.

3. Press the **START/+30s** button.

Result: The food is cooked according to the pre-programmed setting selected. When it has finished.

1) The oven beeps 4 times.
2) The end reminder signal will beep 3 times (once every minute).
3) The current time is displayed again.

Thai menu guide

The following table presents the 28 **Thai Menu** auto programmes. It contains its quantities and appropriate Instructions.

Code/Food	Serving size	Ingredients
1 Rice Porridge with Pork	1-2 person	1 cup Cooked rice, ½ cup Mince pork, 500 ml Water, 1 Tbsp. Oyster sauce, ¼ Ts. Pepper, 1 Tbsp. Soy sauce, spring onions, coriander, celery for sprinkle on top
	Instructions Mix minced pork, pepper, and oyster sauce together, mold into a ball. Put rolled pork, rice, water in a bowl. Add soy sauce, stir well. Put them in microwave oven and press start button. After cooking, sprinkle spring onions, celery, and coriander on top before serve.	
2 Seaweed Tofu Soup	1-2 person	½ cup Minced pork, 2 pack Packaged tofu, ¼ cup Dried seaweed, 500 ml Water, 1 Tbsp. Oyster sauce, 1 Ts. Fish sauce, ¼ Ts. Pepper, ¼ cup Spring onions, 1 Tbsp. Chopped coriander, For sprinkle on top
	Instructions Mix minced pork, oyster sauce and pepper, Roll into a ball. Add rolled pork, tofu, water and fish sauce in a ware. Put them in microwave oven and press start button. After cooking, sprinkle spring onions, dried seaweed coriander and a little pepper on top.	
3 Miso Soup	1-2 person	2 Tbsp. Miso, 1 Tbsp. Dashi, 2 Tbsp. Dried wagame, 500 ml Water, 100 g Soft Tofu, cube, 50 g Enoki Mushroom, ¼ cup Slice spring onion
	Instructions Mix miso and water well then add all ingredient. Put them in microwave oven and press start button. After cooking, serve hot.	

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 25 2019-09-11 11:02:24

Oven use

Code/Food	Serving size	Ingredients
4 Tom Yam Kung	1-2 person	150 g Prawn, 1 cup Mushrooms, 4 pieces Sliced galangals, 5 leaf Shred kaffir lime, 2 trunk Shred lemongrass, 4 yield Sida tomato, 500 ml Water, ¼ cup Unsweetened condensed milk, 2-3 Tbsp. Fish sauce, 2-3 Tbsp. Lime juice, 1 Tbsp. Chili sauce, 10 pieces Pound bird Chili, Coriander for sprinkle on top
	Instructions Add galangals, lemongrass, kaffir lime, Sida tomato, chili sauce in boiled water and stir well. Add prawn, mushroom, bird chili. Put them in microwave oven and start button. After cooking, add unsweetened condensed milk, fish sauce, lime juice, stir well. Serve hot.	
5 Tom Kha with Chicken	1-2 person	250 g Slice chicken breast, 100 g Mushroom, 500 ml Coconut milk, 200 ml water, 1 cup Sliced young galangal, 2 Sliced lemongrass, 3 Leaves kaffir leave, 5 Shallots, 5 Bird chili, 2-3 Tbsp. Fish sauce, 2-3 Tbsp. Lime juice
	Instructions Mixed water and coconut milk and add shallots, lemongrass, kaffie leave, chicken and mushroom. Put them in microwave oven and press start button. After cooking, seasoning with fish sauce , lime juice,and chili then serve.	
6 Chicken with Green Curry	1-2 person	200 g Slice chicken breast, 2 Tbsp. Green curry paste, 500 ml Coconut milk, 1 cup Cut in egg plant, 1 Tbsp. Fish sauce, 1 Ts. Palm sugar, ¼ cup Sweet basil, Paprika slide for decorate
	Instructions Mixed coconut milk and green curry paste together. Add chicken , egg plant, palm sugar, fish sauce mixed well. Put them in microwave oven and press start button. After cooking, add sweet basil and paprika then serve.	

Code/Food	Serving size	Ingredients
7 Steamed Vegetables with Red Sauce	3-4 person	100 g Lettuce, 50 g Shiitake Mushroom, 100 g Kailan, 50 g Baby corn, ½ Tbsp. Water, 1 bottle Essence of Chicken 70 ml, 1 Tbsp. Oyster sauce, ½ Ts. Sugar, 1/8 Ts. Sesame oil, 1 Ts. Chinese liquor, 1 Tbsp. Hong Kong tapioca flour, ½ Ts. White pepper
	Instructions Wash and chop vegetables. put them in microwave oven and press start button. When the beep, bring out them and mix remaining ingredients together. Put them in microwave oven and press start button. After cooking, serve.	
8 Poached Eggs with Soybean Milk	3-4 person	4 egg, ½ cup Ginkgo, 4 pieces kani, 1 Ts. Seasoning powder, ½ cup Soybean milk, ¼ Ts. Pepper, 1 Tbsp. Soy sauce, 2 Tbps. Chopped spring onion
	Instructions Mix egg and soybean milk together soy sauce and put in bowl. Add ingredients and take to a bowl. Put them in microwave oven and press start button. After cooking, decorate by kani, ginkgo and chopped spring onion. Serve.	
9 Steamed Shrimp with Fresh Milk	2 person	200 g Shrimps, 1 Egg, ½ cup Fresh milk, ¼ Ts. Salt, ½ Ts. Curry powder, ½ Ts. Pepper, 50 g Shiitake Mushroom, ½ cup Chopped celery
	Instructions Wash shrimp, cut both shell of shrimp from head to tail. Sorted shrimp into a container. Mix shiitake mushroom, celery, fresh milk, egg, curry power, Salt, and pepper together. Put them in microwave oven and press start button. After cooking, serve.	

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 26 2019-09-11 11:02:24

Code/Food	Serving size	Ingredients
10 Steamed Fish with Soy Sauce	2-3 person	400 g Snapper, ½ cup cut bacon, 2 Pickled plum, 1 Tbsp. picked plum juice, 1 Sliced chili spur pepper, 1 cup Sliced fresh ginger, ½ cup shiitake mushrooms, 2 Chopped celery, 1 Tbsp. Soy sauce, 1 Tbsp. Sugar, ½ cup Soup stock
	Instructions Wash and cut snapper. Add bacon piece and snapper in glass bowl. Put them in microwave oven and press start button. When the beep, mix remaining ingredients together , pour sauce on snapper. Put them in microwave oven and press start button. After cooking, serve.	
11 Seafood Chili Paste with Boiled Egg	2-3 person	1 ½ cup Chopped seafood, 20 Fresh bird chili, 5 pieces Garlic, ½ cup Shallot, ½ cup Shredded lemongrass, 1 Tbsp. Shrimp paste, 2 Ts. Palm sugar, 2 Tbsp. Lime, 2 Egg
	Instructions Put shrimps and squids in glass bowl. Put them in microwave oven and press start button. When the beep, crush fresh bird chili, garlic for crushingly and add shrimp paste, palm sugar, lime juice to admix shredded lemongrass, shallots and boiled seafood. Put them in bowl and add water and salt. Put them microwave oven and press start button. After cooking, serve.	

Code/Food	Serving size	Ingredients
12 Boiled Pork with Lime, Chili Sauce	2-3 person	200 g Pork sirloin, 5 pieces Sliced lime, 15 Green-red bird chili, 2 Tbsp. Garlic, 1 Tbsp. Sugar, 1 Tbsp. Fish sauce, 3 Tbsp. Lime juice, 1 cup Shredded Cabbage
	Instructions Wash and slice pork. Add water. put them in microwave oven and press start button. When the beep, mix sugar, fish sauce, lime juice. Put them in microwave oven and press start button. After cooking, crush bird chili and garlic together. Serve by put shredded cabbage in dish, then pork and pour spicy sauce. On top.	
13 Winged Bean Salad	2-3 person	150 g Shredded winged Bean, 1 cup Peeled shrimp, 100 g Minced pork, 2 Tbsp. Shredded bird chili, 2 Tbsp. Chili sauce, 2 Tbsp. Lime, 1 Tbsp. Fish sauce, 1 ½ Tbsp. Palm sugar, 2 Tbsp. Fried peanut, ¼ Tbsp. Fried shallots, 7 Fried dried chili, 2 Tbsp. thick coconut milk, 2 Egg
	Instructions Put shrimp, minced pork in microwave oven and press start button. When the beep, bring out and add winged bean mix together. Beat egg with salt and put them in microwave oven and press start button. When the 2nd beep, bring out them. Put fry dried bird chili with oil in microwave oven and press start button. When the 3rd beep, bring out them. Put fry shallot with oil in microwave oven and press start button. After cooking, mix palm sugar, Fish sauce, lime juice, chili sauce, and bird chili together. Mix all ingredients together. Pour with coconut milk and serve with egg.	

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 27 2019-09-11 11:02:24

Oven use

Code/Food	Serving size	Ingredients
14 Spicy Spaghetti	2-3 person	60 g Spaghetti, 200 g Minced beef, ¼ cup Crush garlic, 15 Bird chili, ¼ cup Green pepper, 1 cup Holy basil, 1 Tbsp. Seasoning sauce, 1 Ts. Sugar, 1 Tbsp. Oyster sauce, 1 Tbsp. Olive oil
	Instructions Put spaghetti with water in microwave oven and press start button. When the beep, bring out them. Chopped chili and garlic together, mash with minced beef, olive oil. Put them in microwave oven and press start button. When the 2nd beep, add fish sauce, seasoning sauce, sugar, oyster sauce. Put them in microwave oven and press start button. When the 3rd beep, add spaghetti and green pepper, holy basil to mash. Put them in microwave oven and press start button. After cooking, serve.	
15 Macaroni with Meat Sauce	2-3 person	60 g Macaroni, ½ Ts. Pepper, 200 g Minced beef, 1 Tbsp. Olive oil, ½ cup Dice onion, ½ cup Dice carrot, 2 Tbsp. Dice celery, 3 Bay leaf, 1 cup Diced tomato, ½ Ts. Salt, 2 Tbsp. Tomato paste, ½ Tbsp. Sugar, 1 ½ Tbsp. Chopped parsley
	Instructions Put macaroni with water in microwave oven and press start button. When the beep, bring out them. Mix minced beef and oil salt, pepper together. Put them in microwave oven and press start button. When the 2nd beep, add onion, carrot, celery, tomato, bay leaf and seasoning with sugar, salt, tomato paste. Put them in microwave oven and press start button. After cooking, mash macaroni and parmesan cheese, chopped parsley together. Serve.	

Code/Food	Serving size	Ingredients
16 Minced Pork Noodles	3-4 person	300 g Wide rice noodles, 200 g Minced pork, 1 ½ Tbsp. Seasoning sauce, ½ Ts. pepper, 1 Tbsp. Oyster sauce, ½ cup Diced onion, 2 cup Diced tomato, ½ cup Chopped baby corn, 1 Tbsp. Chopped garlic, 2 Tbsp. Soy sauce, 1 Tbsp. Sugar, ½ cup Tomato sauce, 1 ½ Ts. Pepper, 2 Tbsp. Oil, 1 Tbsp. Black soy sauce, Lettuce for decoration
	Instructions Mash wide rice noodles and black soy sauce together. Put them in microwave oven and press start button. When the beep, bring out them. Marinate pork with seasoning sauce, pepper, oyster sauce in a bowl. Add oil, chopped garlic, onion, tomato, pepper and mash again. Put them in microwave oven and press start button. When the 2nd beep, add Soy sauce, sugar, and tomato sauce. Put them in microwave oven and press start button. After cooking, pour on noodles, serve with lettuce.	
17 Fried Sweet and Sour Shrimp	2-4 person	10 shrimp, 1 cup Diced bell peppers three colors, 1 cup Diced pineapple, 1 cup Diced onion, 1 cup Dice cucumber, 1 Tbsp. Chopped garlic, 1 cup Dice tomato, 1 Tbsp. Sugar, ½ cup Chili sauce, 1 Tbsp. Seasoning sauce, 1 Tbsp. Vinegar, 2 Tbsp. Oil, ¼ cup Water
	Instructions Mix shrimp, garlic, and oil in a blow. Put them in microwave oven and press start button. When the beep, add vegetable, seasoning together. Put them in microwave oven and press start button. When the 2nd beep, bring out them. Mash and put them in microwave oven and press start button. After cooking, serve.	

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 28 2019-09-11 11:02:24

Code/Food	Serving size	Ingredients
18 Pork Fried with Ginger	2-4 person	200 g Pork tenderloin, 200 g Finely shredded ginger, 1 Tbsp. Chopped garlic, ½ cup Ear mushroom, ½ cup Cut spring onion, ¼ cup Shredded red chilies, 1 ½ Tbsp. Bean paste, 1 Tbsp. Seasoning sauce, 1 ½ Tbsp. Oyster sauce, 1 Tbsp. Sugar, 2 Tbsp. Oil
	Instructions Mix garlic, pork and oil in a blow. Put them in microwave oven and press start button. When the beep, add ginger and remaining vegetable. Put them in microwave oven and press start button. When the 2nd beep, bring out them. Mash and put them in microwave oven and press start button. After cooking, serve with rice.	
19 Chicken Fried with Cashews	3-4 person	250 g Chicken breast without skin, ½ cup Roasted Cashew, ¼ cup Spring onion, 5 Dried big chili, 1 cup Straw mushrooms, ½ cup Onion, 1 cup Three color bell peppers, 2 Tbsp. Oyster sauce, 2 Tbsp. Soy sauce, 1 Tbsp. Sugar, 1 Ts. Sesame oil, 1 Tbsp. Hong Kong tapioca flour, ½ Ts. salt, ½ Ts. Pepper, ¼ cup Water
	Instructions Cut chicken for marinate with salt, pepper, oil. Put them in microwave oven and press start button. When the beep, add dried chili, roasted cashew, oil. Put them in microwave oven and press start button. When the 2nd beep, mix Soy sauce, oyster sauce, sugar, sesame oil, wheat flour and water together. Put them in microwave oven and press start button. When the 3rd beep, mix and mash all ingredients together. Put them in microwave oven and press start button. After cooking, serve.	

Code/Food	Serving size	Ingredients
20 Fried Vegan Vermicelli	2 person	150 g Vermicelli Soaked, 1 cup Chopped cabbage, 1 cup Chopped carrot, 1 cup Shredded shiitake Mushroom, 2 Tbsp. Oyster sauce, 1 Tbsp. Mushroom soy sauce, ½ Ts. Sugar, ¼ cup Soup stock, ½ Ts. Pepper, 2 Tbsp. Oil
	Instructions Put all vegetable in a bowl and place them in microwave oven and press start button. When the beep, mix oyster oil, Soy sauce, soup stock, oil together. Mash to vermicelli and vegetable. Put them in microwave oven and press start button. When the 2nd beep, bring out mix other ingredients and put them in microwave oven and press start button. After cooking, serve.	
21 Shrimp Potted with Vermicelli	2 person	250 g Tiger prawn, 4 Strip Bacon, 200 g Vermicelli soaked, 1 Ts. Pepper seed, 1 Ts. Sichuan pepper, ¼ cup Crushed garlic, 4 pieces Sliced old ginger, 2 Tbsp. Oyster sauce, ½ Tbsp. Soy sauce, ½ Tbsp. Sugar, ½ Ts. Sesame oil, ½ cup Chopped celery
	Instructions Mix Oyster oil, Soy sauce, sugar and sesame oil together. Mash to shrimp and vermicelli, sichuan pepper, celery, pepper seed, ginger and crushed garlic. Put them with bacon in bowl. Place them in microwave oven and press start button. When the beep, mash and put them in microwave oven and press start button. After cooking, serve.	

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 29 2019-09-11 11:02:24

Oven use

Code/Food	Serving size	Ingredients
22 Spicy Minced Pork Salad	2-4 person	250 g Minced pork, 100 g Pork liver, ½ cup Mint leaves, ½ cup Chopped shallots, 3 Tbsp. Shredded spring onion, ½-1 Tbsp. Cayenne, ½ Tbsp. Sugar, ½ cup Water or Soup stock, 3 Tbsp. Lime juice, 1 Tbsp. Fish sauce, 2 Tbsp. Roasted rice
	Instructions Put minced pork and liver pork in a bowl, add water. Put them in microwave oven and press start button. After cooking, add shallot, spring onion, and mint leaves. Flavored with lime juice, fish sauce, roasted rice, cayenne and sugar together. Serve.	
23 Banana in Coconut Milk	2 person	250 g Peeled sliced banana, 1 cup Coconut milk, 100 g Palm sugar, 1 ½ cup Water, ¼ Ts. Salt
	Instructions Mix coconut milk, water, palm sugar and salt stir until dissolved. Add the banana. Put them in microwave oven and press start button. After cooking, serve.	
24 Sweet Potato in Ginger Syrup	2 person	300 g Peeled sweet potato, 50 g Ginger, 150 g Sugar, 4 cup Water
	Instructions Peel potato, wash and cut for 1”x1” pieces. Put all ingredient together. Put them in microwave oven and press start button. After cooking, serve.	

Code/Food	Serving size	Ingredients
25 Brown Rice & Soybean Milk	2-4 person	3 cup Soybean soaked, 1 cup Brown rice soaked, ½ cup Sugar, ¼ Tsp. Salt, 5 cup Water, 1 Pandan leaf, Red-bean or jelly for serve with
	Instructions Soak soybean, brown rice in hot water for 3-5 hours. Blend with 5 cup of water. Filter grounds, pour in bowl with pandan leaf, sugar salt. Put them in microwave oven and press start button. After cooking, serve hot with red-bean or other grain.	
26 Spicy Hot Choco	4 person	3 cup Milk, ½ cup Sugar, 2-3 Tbsp. Coco powder, ½ Tbsp. Ground cinnamon
	Instructions Split 1 cup milk mix with other ingredient. Put them in microwave oven and press start button. When the beep, pour remain milk. Put them in microwave oven and press start button. After cooking, serve hot.	
27 Lemon Grass Punch	3-4 person	10 Lemongrass, ⅔ cup Pineapple juice, 4 slice Ginger, ¼ cup Honey, 3 cup Water
	Instructions Crunch lemongrass with water. Put them in microwave oven and press start button. After cooking, let it cool. Mix with other ingredient. Serve with ice.	
28 Mint Tea with Lemon	3-4 person	1 cup Mint leaf, ⅓ cup Brown sugar, 2 Tbsp. Lemon juice with lemon pieces, 4 cup Water
	Instructions Put Mint leaf with water in microwave oven and press start button. After cooking, mix with brown sugar and lemon juice. Serve hot.	

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 30 2019-09-11 11:02:24

Using the power defrost features

The **Power Defrost** features enable you to defrost meat, poultry, fish, bread, cake and fruit. The defrost time and power level are set automatically. You simply select the programme and the weight.


NOTE

Use only recipients that are microwave-safe.

Open the door. Place the food in the centre of the turntable. Close the door.



1. Press the **Power Defrost** button.

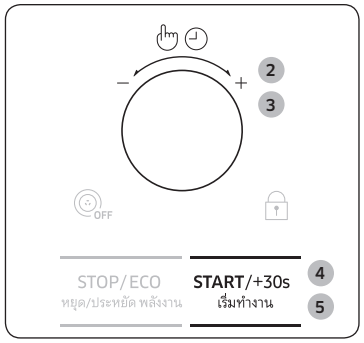

2. Select the type of food that you are cooking by turning the **Multi Function Selector Dial**. Refer to the table on the following page for a description of the various pre-programmed settings. At that time, press the **Multi Function Selector Dial** to select the type of food.
3. Select the size of the serving by turning the **Multi Function Selector Dial**.
4. Press the **START/+30s** button.
   Result:
   - Defrosting begins.
   - The oven beeps through defrosting to remind you to turn the food over.
5. Press the **START/+30s** button again to finish defrosting.
   Result: When it has finished.
   1) The oven beeps 4 times.
   2) The end reminder signal will beep 3 times (once every minute).
   3) The current time is displayed again.

Power defrost guide

The following table presents the various **Power Defrost** programmes, quantities and appropriate instructions. Remove all kind of package material before defrosting. Place meat, poultry and fish on a flat glass plate or on a ceramic plate, arrange bread, cake and fruit on kitchen paper.

Code/Food	Serving size	Instructions
1 Meat	200-1500 g	Shield the edges with aluminium foil. Turn the meat over, when the oven beeps. This programme is suitable for beef, lamb, pork, steaks, chops, minced meat. Stand for 20-60 minutes.
2 Poultry	200-1500 g	Shield the leg and wing tips with aluminium foil. Turn the poultry over, when the oven beeps. This programme is suitable for whole chicken as well as for chicken portions. Stand for 20-60 minutes.
3 Fish	200-1500 g	Shield the tail of a whole fish with aluminium foil. Turn the fish over, when the oven beeps. This programme is suitable for whole fishes as well as for fish fillets. Stand for 20-50 minutes.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 31 2019-09-11 11:02:25

Oven use

Code/Food	Serving size	Instructions
4 Bread/Cake	125-1000 g	Put bread horizontally on a piece of kitchen paper and turn over, as soon as the oven beeps. Place cake on a ceramic plate and if possible, turn over, as soon as the oven beeps. (Oven keeps operating and is stopped, when you open the door.) This programme is suitable for all kinds of bread, sliced or whole, as well as for bread rolls and baguettes. Arrange bread rolls in a circle. This programme is suitable for all kinds of yeast cake, biscuit, cheese cake and puff pastry. It is not suitable for short/crust pastry, fruit and cream cakes as well as for cake with chocolate topping. Stand for 10-30 minutes.
5 Fruit	100-600 g	Spread fruits evenly into a flat glass dish. This programme is suitable for all kind of fruits. Stand for 5-20 minutes.


Using the dough proof/yogurt features

The 5 **Dough Proof/Yogurt** features include/provide pre-programmed cooking times. You do not need to set either the cooking times or the power level. You can adjust the dough proof/yogurt category by turning the **Multi Function Selector Dial** after press the **Dough Proof/Yogurt** button.

First, place the food in the centre of the turntable and close the door.



1. Press the **Dough Proof/Yogurt** button.

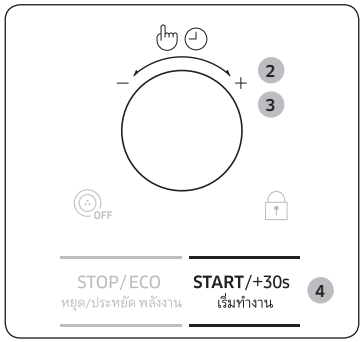

2. Select the Dough Proof or Homemade Yogurt and press the **Multi Function Selector Dial**.
   1. Dough Proof
   2. Homemade Yogurt

3. Select the type of food that you are cooking by turning the **Multi Function Selector Dial**. Refer to the table on the following page for a description of the various pre-programmed settings.

4. Press the **START/+30s** button.

☛ **IMPORTANT**

Turntable is not operating during yogurt cooking.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 32 2019-09-11 11:02:25

Dough proof/yogurt guide

The following table presents how to use the auto programmes for rising yeast dough or yogurt.

1. Dough Proof


Code/Food	Serving size	Instructions
1-1 Pizza Dough	300-500 g	Put dough in suitable sized bowl and set on the low rack. Cover with aluminium foil.
1-2 Cake Dough	500-800 g	Put dough in suitable sized bowl and set on the low rack. Cover with aluminium foil.
1-3 Bread Dough	600-900 g	Put dough in suitable sized bowl and set on the low rack. Cover with aluminium foil.


2. Yogurt


Code/Food	Serving size	Instructions
2-1 Small Cups	500 g	Distribute 150 g natural yogurt into 5 ceramic cups or small glass jars evenly (30 g each). Add 100 ml milk into each cup. Use long-life milk (room-temperature; 3.5 % fat). Cover each with cling film and set in a circle on turntable. After finish, keep 6 hours in a refrigerator. For the first time we recommend to use dried yoghurt bacteria ferment.
2-2 Large Bowl	500 g	Mix 150 g natural yogurt with 500 ml long-life milk (room-temperature; 3.5 % fat). Pour evenly into large glass bowl. Cover with cling film and set on turntable. After finish, keep 6 hours in a refrigerator. For the first time we recommend to use dried yoghurt bacteria ferment.

Using the crusty plate

This crusty plate allows you to brown food not only on the top with the grill, but also the bottom of the food turns crispy and brown due to the high temperature of the crusty plate. Several items which you can prepare on the crusty plate can be found in the chart (see next page). The crusty plate can also be used for bacon, eggs, sausages, etc.

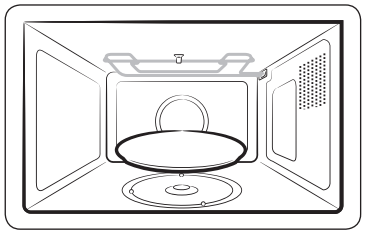





1. Place the crusty plate directly on the turntable and preheat it with highest Microwave-Grill-Combination [600 W + Grill] by following the times and instructions in the chart.
2. Brush the plate with oil if you are cooking food, such as bacon and eggs, in order to brown the food nicely.
3. Place the food on the crusty plate.
4. Place the crusty plate on the metal rack (or turntable) in the microwave.
5. Select the appropriate cooking time and power.
   (Refer to the table on the side)

⚠ CAUTION

- Always use oven gloves to take out the crusty plate, as will become very hot.
- Do not place any objects on the crusty plate that are not heat-resistant.
- Never place the crusty plate in the oven without turntable.
- Please note that the crust plate is not dish washer-safe.

NOTE

- Please note that the crusty plate has a teflon layer which is not scratch-resistant. Do not use any sharp objects like a knife to cut on the crusty plate.
- Clean the crusty plate with warm water and detergent and rinse off with clean water.
- Do not use a scrubbing brush or a hard sponge otherwise the top layer will be damaged.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 33 2019-09-11 11:02:25

Oven use

Hot Blast

Hot Blast mode is sililar to traditional oven. The microwave mode is not used. You can set the temperature, as required, in a range varying from 40 °C to 200 °C. The maximum cooking time is 60 minutes.

- Always use oven gloves when touching the recipients in the oven, as they will be very hot.
- You can get better cooking and browning, if you use the low rack.

Open the door and place the recipient on the low rack and set on turntable.



1. Press the **Hot Blast** button.
Result: The following indications are displayed:
(Hot blast mode)
180 °C (Temperature)




2. Set the temperature by turning the **Multi Function Selector Dial**.
(Temperature : 40-200 °C, 10 °C interval)
- If don't set the temperature within 5 seconds, Automatically changes to the cooking time setting stage.

3. Press the **Multi Function Selector Dial**.
4. Set the cooking time by turning the **Multi Function Selector Dial**.
(If you want to preheat the oven, select " : 0")
5. Press the **START/+30s** button.
Result: Cooking starts. When it has finished.
1) The oven beeps 4 times.
2) The end reminder signal will beep 3 times (once every minute).
3) The current time is displayed again.

Grilling

The grill enables you to heat and brown food quickly, without using microwaves.


- Always use oven gloves when touching the recipients in the oven, as they will be very hot.
- You can get better cooking and grilling results, if you use the high rack.

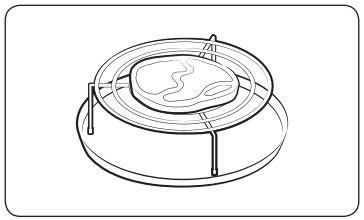

1. Open the door and place the food on the rack.



2. Press the **Grill** button.
Result: The following indications are displayed:
(Grill mode)
- You cannot set the temperature of the grill.

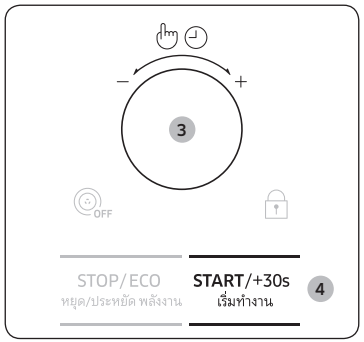


3. Set the grilling time by turning the **Multi Function Selector Dial**.
- The maximum grilling time is 60 minutes.

4. Press the **START/+30s** button.
Result: Grilling starts. When it has finished.
1) The oven beeps 4 times.
2) The end reminder signal will beep 3 times (once every minute).
3) The current time is displayed again.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 34 2019-09-11 11:02:26

Choosing the accessories

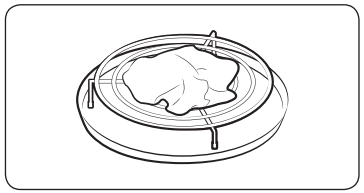

Traditional oven cooking does require cookware. You should, however, use only cookware that you would use in your normal oven.
Microwave-safe containers are not usually suitable for convection cooking; don't use plastic containers, dishes, paper cups, towels, etc.
If you wish to select a combined cooking mode (microwave and grill or hot blast), use only recipients that are microwave-safe and oven-proof.

☛ **IMPORTANT**

For further details on suitable cookware and utensils, refer to the Cookware guide on page 39.

Combining microwaves and grill

You can also combine microwave cooking with the grill, to cook quickly and brown at the same time.

☛ **IMPORTANT**

ALWAYS use microwave-safe and oven-proof cookware. Glass or ceramic dishes are ideal as they allow the microwaves to penetrate the food evenly.


☛ **IMPORTANT**

ALWAYS use oven gloves when touching the recipients in the oven, as they will be very hot.
You can improve cooking and grilling, if you use the high rack.

Open the door. Place the food on the rack best suited to the type of food to be cooked. Place the rack on the turntable. Close the door.




1. Press the **Combi** button.
Result: The following indications are displayed:
Cb-1 (Microwave + Grill)

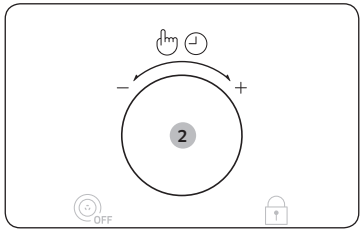

2. Make the display indicating Cb-1, and then press the **Multi Function Selector Dial**.
Result: The following indications are displayed:
(Microwave & Grill combi mode)
600 W (Output power)

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 35 2019-09-11 11:02:26

Oven use

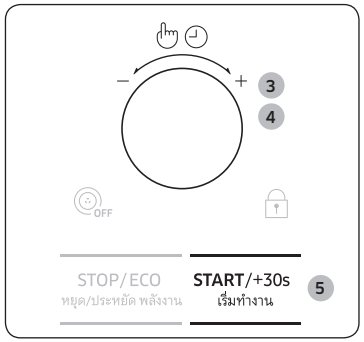

3. Select the appropriate power level by turning the **Multi Function Selector Dial** until the corresponding output power is displayed (600, 450, 300 W).
At that time, press the **Multi Function Selector Dial** to set the power level.
- You cannot set the temperature of the grill.
- If don't set the temperature within 5 seconds, Automatically changes to the cooking time setting stage.

4. Set the cooking time by turning the **Multi Function Selector Dial**.
- The maximum cooking time is 60 minutes.

5. Press the **START/+30s** button.
Result: Combination cooking starts. When it has finished.
1) The oven beeps 4 times.
2) The end reminder signal will beep 3 times (once every minute).
3) The current time is displayed again.

Combining microwaves and hot blast

Combination cooking uses both microwave energy and hot blast heating. No preheating is required as the microwave energy is immediately available.
Many foods can be cooked in combination mode, particularly:
- Roast meats and poultry
- Pies and cakes
- Egg and cheese dishes

☛ **IMPORTANT**

ALWAYS use microwave-safe and oven-proof cookware. Glass or ceramic dishes are ideal as they allow the microwaves to penetrate the food evenly.


☛ **IMPORTANT**

ALWAYS use oven gloves when touching the recipients in the oven, as they will be very hot. You can get better cooking and browning, if you use the low rack.

Open the door. Place the food on the turntable or on the low rack which should then be placed on the turntable. Close the door. The heating element must be in the horizontal position.




1. Press the **Combi** button.
Result: The following indications are displayed:
Cb-1 (Microwave + Grill)

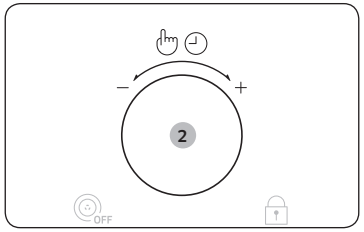

2. Make the display indicating Cb-2 (Microwave + Hot blast) by turning the **Multi Function Selector Dial**, and then press the Multi Function Selector Dial.
Result: The following indications are displayed:
(Microwave & Hot blast combi mode)
600 W (Output power)

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 36 2019-09-11 11:02:27

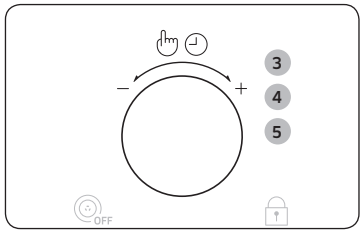

3. Select the appropriate power level by turning the **Multi Function Selector Dial** until the corresponding output power is displayed (600, 450, 300, 180, 100 W). At that time, press the **Multi Function Selector Dial** to set the power level.
- If don't set the power level within 5 seconds, Automatically changes to the cooking time setting stage. (Default : 600 W)

Result: The following indications are displayed:
- (Microwave & Hot blast combi mode)
- 180 ˚C (Temperature)

4. Select the appropriate temperature by turning the **Multi Function Selector Dial** (Temperature : 200-40 ˚C). At that time, press the **Multi Function Selector Dial** to set the power level.
- If don't set the temperature within 5 seconds, Automatically changes to the cooking time setting stage. (Default : 180 ˚C)

5. Set the cooking time by turning the **Multi Function Selector Dial**.
- The maximum cooking time is 60 minutes.



6. Press the **START/+30s** button.

Result: Combination cooking starts. The oven is heated to the required temperature and then microwave cooking continues until the cooking time is over. When it has finished.
1) The oven beeps 4 times.
2) The end reminder signal will beep 3 times (once every minute).
3) The current time is displayed again.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 37 2019-09-11 11:02:27

Oven use

Using the turntable on/off features


The **Turntable On/Off** button enables you to use large dishes which fill the whole oven by stopping the turntable from rotating (only manual cooking mode).

☛ IMPORTANT

The results will be less satisfactory in this case as the cooking is less even. We recommend that you turn the dish by hand halfway through the cooking process.

⚠ WARNING

Never operate the turntable without food in the oven.
Reason: This may cause fire or damage to the unit.

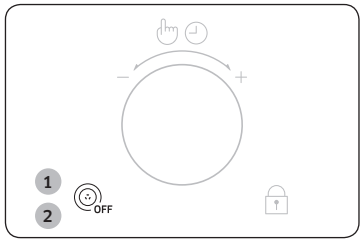


1. Press the **Turntable On/Off** button during setting Microwave, Grill, Hot Blast, Preheat and Combi function.
   • It is not available with pre-programmed function or before press the **Microwave**, **Grill**, **Hot Blast**, **Preheat** and **Combi** button.
   Result: **Turntable On/Off** symbol appears on the display, the turntable will not rotate during the cooking.
   OFF (Turntable off mode)
2. To switch the turntable rotating back on, press the **Turntable On/Off** button again.
   Result: **Turntable On/Off** symbol disappears on the display, the turntable will rotate.

NOTE

This **Turntable On/Off** button is available only during cooking.

Using the child lock features

Your microwave oven is fitted with a special child lock programme, which enables the oven to be “locked” so that children or anyone unfamiliar with it cannot operate it accidentally.

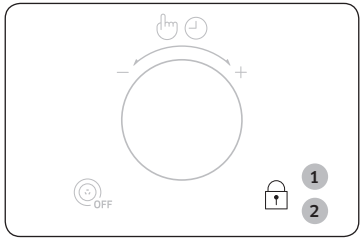

1. Press the **Child Lock** button for 3 second.
   Result:
   • The oven is locked (no functions can be selected).
   • The display shows “L”.



2. To unlock the oven, press the **Child Lock** button for 3 second.
   Result: The oven can be used normally.

Switching the beeper off

You can switch the beeper off whenever you want.



1. Press the **START/+30s** and **STOP/ECO** button at the same time.
   Result: The oven does not beep to indicate the end of a function.
   • The following indications are displayed.



2. To switch the beeper back on, press the **START/+30s** and **STOP/ECO** button again at the same time.
   Result: The oven operates normally.
   • The following indications are displayed.



MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 38 2019-09-11 11:02:27

Cookware guide

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used.
Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry.
The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-safe	Comments
Aluminum foil	✓✗	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
Crust plate	✓	Do not preheat for more than 8 minutes.
China and earthenware	✓	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
Disposable polyester cardboard dishes	✓	Some frozen foods are packaged in these dishes.
Fast-food packaging		
• Polystyrene cups containers	✓	Can be used to warm food. Overheating may cause the polystyrene to melt.
• Paper bags or newspaper	✗	May catch fire.
• Recycled paper or metal trims	✗	May cause arcing.
Glassware		
• Oven-to-tableware	✓	Can be used, unless decorated with a metal trim.
• Fine glassware	✓	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.
• Glass jars	✓	Must remove the lid. Suitable for warming only.
Metal		
• Dishes	✗	May cause arcing or fire.
• Freezer bag twist ties	✗	
Paper		
• Plates, cups, napkins and kitchen paper	✓	For short cooking times and warming. Also to absorb excess moisture.
• Recycled paper	✗	May cause arcing.
Plastic		
• Containers	✓	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic.
• Cling film	✓	Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
• Freezer bags	✓✗	Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
Wax or grease-proof paper	✓	Can be used to retain moisture and prevent spattering.

✓ : Recommended ✓✗ : Use caution ✗ : Unsafe

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 39 2019-09-11 11:02:28

Cooking guide

Microwaves

Microwave energy actually penetrates food, attracted and absorbed by its water, fat and sugar content.
The microwaves cause the molecules in the food to move rapidly. The rapid movement of these molecules creates friction and the resulting heat cooks the food.

Cooking

Cookware for microwave cooking:

Cookware must allow microwave energy to pass through it for maximum efficiency. Microwaves are reflected by metal, such as stainless steel, aluminium and copper, but they can penetrate through ceramic, glass, porcelain and plastic as well as paper and wood. So food must never be cooked in metal containers.

Food suitable for microwave cooking:

Many kinds of food are suitable for microwave cooking, including fresh or frozen vegetables, fruit, pasta, rice, grains, beans, fish, and meat. Sauces, custard, soups, steamed puddings, preserves, and chutneys can also be cooked in a microwave oven. Generally speaking, microwave cooking is ideal for any food that would normally be prepared on a hob. Melting butter or chocolate, for example (see the chapter with tips, techniques and hints).

Covering during cooking

To cover the food during cooking is very important, as the evaporated water rises as steam and contributes to cooking process. Food can be covered in different ways: e.g. with a ceramic plate, plastic cover or microwave suitable cling film.

Standing times

After cooking is over food the standing time is important to allow the temperature to even out within the food.

Cooking Guide for frozen vegetables

Use a suitable glass pyrex bowl with lid. Cook covered for the minimum time – see table. Continue cooking to get the result you prefer.
Stir twice during cooking and once after cooking. Add salt, herbs or butter after cooking. Cover during standing time.

Food	Serving size	Power	Time (min.)
Spinach	150 g	600 W	5-6
	Instructions Add 15 ml (1 tbsp) cold water. Serve after 2-3 minutes standing.		
Broccoli	300 g	600 W	8-9
	Instructions Add 30 ml (2 tbsp) cold water. Serve after 2-3 minutes standing.		
Peas	300 g	600 W	7-8
	Instructions Add 15 ml (1 tbsp) cold water. Serve after 2-3 minutes standing.		
Green Beans	300 g	600 W	7½-8½
	Instructions Add 30 ml (2 tbsp) cold water. Serve after 2-3 minutes standing.		
Mixed Vegetables (Carrots/Peas/ Corn)	300 g	600 W	7-8
	Instructions Add 15 ml (1 tbsp) cold water. Serve after 2-3 minutes standing.		
Mixed Vegetables (Chinese Style)	300 g	600 W	7½-8½
	Instructions Add 15 ml (1 tbsp) cold water. Serve after 2-3 minutes standing.		

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 40 2019-09-11 11:02:28

Cooking guide for fresh vegetables

Use a suitable glass pyrex bowl with lid. Add 30-45 ml cold water (2-3 tbsp) for every 250 g unless another water quantity is recommended – see table. Cook covered for the minimum time – see table. Continue cooking to get the result you prefer. Stir once during and once after cooking. Add salt, herbs or butter after cooking. Cover during a standing time of 3 minutes.

Hint: Cut the fresh vegetables into even sized pieces. The smaller they are cut, the quicker they will cook.

Food	Serving size	Power	Time (min.)
Broccoli	250 g 500 g	900 W	4-4½ 6-7
	Instructions Prepare even sized florets. Arrange the stems to the centre. Serve after 3 minutes standing.		
Brussels Sprouts	250 g	900 W	5½-6
	Instructions Add 60-75 ml (5-6 tbsp) water. Serve after 3 minutes standing.		
Carrots	250 g	900 W	4-4½
	Instructions Cut carrots into even sized slices. Serve after 3 minutes standing.		
Cauliflower	250 g 500 g	900 W	4-4½ 6½-7½
	Instructions Prepare even sized florets. Cut big florets into halves. Arrange stems to the centre. Serve after 3 minutes standing.		
Courgettes	250 g	900 W	3½-4
	Instructions Cut courgettes into slices. Add 30 ml (2 tbsp) water or a knob of butter. Cook until just tender. Serve after 3 minutes standing.		
Egg Plants	250 g	900 W	3-3½
	Instructions Cut egg plants into small slices and sprinkle with 1 tbsp lemon juice. Serve after 3 minutes standing.		
Leeks	250 g	900 W	3½-4
	Instructions Cut leeks into thick slices. Serve after 3 minutes standing.		
Mushrooms	125 g 250 g	900 W	1½-2 2½-3
	Instructions Prepare small whole or sliced mushrooms. Do not add any water. Sprinkle with lemon juice. Spice with salt and pepper. Drain before serving. Serve after 3 minutes standing.		
Onions	250 g	900 W	4-4½
	Instructions Cut onions into slices or halves. Add only 15 ml (1 tbsp) water. Serve after 3 minutes standing.		
Pepper	250 g	900 W	4½-5
	Instructions Cut pepper into small slices. Serve after 3 minutes standing.		

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 41 2019-09-11 11:02:28

Cooking guide

Food	Serving size	Power	Time (min.)
Potatoes	250 g 500 g	900 W	4-5 7-8
	Instructions Weigh the peeled potatoes and cut them into similar sized halves or quarters. Serve after 3 minutes standing.		
Turnip Cabbage	250 g	900 W	5½-6
	Instructions Cut turnip cabbage into small cubes. Serve after 3 minutes standing.		

Cooking guide for rice and pasta

Rice: Use a large glass pyrex bowl with lid - rice doubles in volume during cooking. Cook covered. After the cooking time is over, stir before standing time and salt or add herbs and butter. Remark: the rice may not have absorbed all water after the cooking time is finished.

Pasta: Use a large glass pyrex bowl. Add boiling water, a pinch of salt and stir well. Cook uncovered. Stir occasionally during and after cooking. Cover during standing time and drain thoroughly afterwards.

Food	Serving size	Power	Time (min.)
White Rice (Parboiled)	250 g 375 g	450 W	15-16 17½-18½
	Instructions Add cold water of double quantity. Serve after 5 minutes standing.		
Brown Rice (Parboiled)	250 g 375 g	450 W	18-19 20-21
	Instructions Add cold water of double quantity. Serve after 5 minutes standing.		

Food	Serving size	Power	Time (min.)
Mixed Rice (Rice + Wild Rice)	250 g	450 W	18-19
	Instructions Add 500 ml cold water. Serve after 5 minutes standing.		
Mixed Corn (Rice + Grain)	250 g	450 W	20-21
	Instructions Add 400 ml cold water. Serve after 5 minutes standing.		
Pasta	250 g	900 W	9½-11
	Instructions Add 1000 ml hot water. Serve after 5 minutes standing.		
Instant Noodle	1 Small pack (80 g) 1 Big pack (120 g)	900 W	7-7½ 9-9½
	Instructions Use a glass pyrex bowl. Put the noodle and add room temperature 350 ml water in bowl. Cook covered with wrap and pierce at several times. After cooking, drain water and mix instant noodle spices.		

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 42 2019-09-11 11:02:28

Reheating

Your microwave oven will reheat food in a fraction of the time that conventional ovens hobs normally take.
Use the power levels and reheating times in the following chart as a guide. The times in the chart consider liquids with a room temperature of about +18 to +20 °C or a chilled food with a temperature of about +5 to +7 °C.

Arranging and covering

Avoid reheating large items such as joint of meat - they tend to overcook and dry out before the centre is piping hot. Reheating small pieces will be more successful.

Power levels and stirring

Some foods can be reheated using 900 W power while others should be reheated using 600 W, 450 W or even 300 W.
Check the tables for guidance.
In general, it is better to reheat food using a lower power level, if the food is delicate, in large quantities, or if it is likely to heat up very quickly (mince pies, for example).
Stir well or turn food over during reheating for best results. When possible, stir again before serving.
Take particular care when heating liquids and baby foods. To prevent eruptive boiling of liquids and possible scalding, stir before, during and after heating. Keep them in the microwave oven during standing time. We recommend putting a plastic spoon or glass stick into the liquids. Avoid overheating (and therefore spoiling) the food. It is preferable to underestimate cooking time and add extra heating time, if necessary.

Heating and standing times

When reheating food for the first time, it is helpful to make a note of the time taken - for future reference.
Always make sure that the reheated food is piping hot throughout.
Allow food to stand for a short time after reheating - to let the temperature even out. The recommended standing time after reheating is 2-4 minutes, unless another time is recommended in the chart.
Take particular care when heating liquids and baby food. See also the chapter with the safety precautions.

Reheating liquids

Always allow a standing time of at least 20 seconds after the oven has been switched off to allow the temperature to even out. Stir during heating, if necessary, and ALWAYS stir after heating. To prevent eruptive boiling and possible scalding, you should put a spoon or glass stick into the beverages and stir before, during and after heating.

Reheating baby food

Baby food:

Empty into a deep ceramic plate. Cover with plastic lid. Stir well after reheating! Let stand for 2-3 minutes before serving. Stir again and check the temperature. Recommended serving temperature: between 30-40 °C.

Baby milk:

Pour milk into a sterilised glass bottle. Reheat uncovered. Never heat a baby's bottle with teat on, as the bottle may explode if overheated. Shake well before standing time and again before serving ! Always carefully check the temperature of baby milk or food before giving it to the baby. Recommended serving temperature: ca. 37 °C.

Remark:

Baby food particularly needs to be checked carefully before serving to prevent burns. Use the power levels and times in the next table as a guide lines for reheating.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 43 2019-09-11 11:02:28

Cooking guide

Reheating liquids and food

Use the power levels and times in this table as a guide lines for reheating.

Food	Serving size	Power	Time (min.)
Drinks (Coffee, Tea and Water)	150 ml (1 cup) 300 ml (2 cups) 450 ml (3 cups) 600 ml (4 cups)	900 W	1-1½ 2-2½ 3-3½ 3½-4
	Instructions Pour into cups and reheat uncovered: 1 cup in the centre, 2 cups opposite of each other, 3 cups in a circle. Keep in microwave oven during standing time and stir well. Serve after 1-2 minutes standing.		
Soup (Chilled)	250 g 350 g 450 g 550 g	600 W	4-4½ 5½-6 6½-7 8-8½
	Instructions Pour into a deep ceramic plate or deep ceramic bowl. Cover with plastic lid. Stir well after reheating. Stir again before serving. Serve after 2-3 minutes standing.		
Stew (Chilled)	350 g	600 W	4½-5½
	Instructions Put stew in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving. Serve after 2-3 minutes standing.		
Pasta with Sauce (Chilled)	350 g	600 W	3½-4½
	Instructions Put pasta (e.g. spaghetti or egg noodles) on a flat ceramic plate. Cover with microwave cling film. Stir before serving. Serve after 3 minutes standing.		
Filled Pasta with Sauce (Chilled)	350 g	600 W	4-5
	Instructions Put filled pasta (e.g. ravioli, tortellini) in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving. Serve after 3 minutes standing.		
Plated Meal (Chilled)	350 g 450 g 550 g	600 W	5-6 6-7 7-8
	Instructions Plate a meal of 2-3 chilled components on a ceramic dish. Cover with microwave cling-film. Serve after 3 minutes standing.		
Cheese Fondue Ready-to-Serve (Chilled)	400 g	600 W	6-7
	Instructions Put the ready-to-serve cheese fondue in a suitable sized glass pyrex bowl with lid. Stir occasionally during and after reheating. Stir well before serving. Serve after 1-2 minutes standing.		

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 44 2019-09-11 11:02:28

Reheating baby food and milk

Use the power levels and times in this table as guide lines for reheating.

Food	Serving size	Power	Time
Baby Food (Vegetables + Meat)	190 g	600 W	30 sec.
	Instructions Empty into ceramic deep plate. Cook covered. Stir after cooking time. Before serving, stir well and check the temperature carefully. Serve after 2-3 minutes standing.		
Baby Porridge (Grain + Milk + Fruit)	190 g	600 W	20 sec.
	Instructions Empty into ceramic deep plate. Cook covered. Stir after cooking time. Before serving, stir well and check the temperature carefully. Serve after 2-3 minutes standing.		
Baby Milk	100 ml 200 ml	300 W	30-40 sec. 1 min. to 1 min. 10 sec.
	Instructions Stir or shake well and pour into a sterilized glass bottle. Place into the centre of turntable. Cook uncovered. Before serving, shake well and check the temperature carefully. Serve after 2-3 minutes standing.		

Defrosting

Microwaves are an excellent way of defrosting frozen food. Microwaves gently defrost frozen food in a short period of time. This can be of great advantage, if unexpected guests suddenly show up.
Frozen poultry must be thoroughly thawed before cooking. Remove any metal ties and take it out of any wrapping to allow thawed liquid to drain away.
Put the frozen food on a dish without cover. Turn over half way, drain off any liquid and remove any giblets as soon as possible. Check the food occasionally to make sure that it does not feel warm.
If smaller and thinner parts of the frozen food start to warm up, they can be shield by wrapping very small strips of aluminium foil around them during defrosting.
Should poultry start to warm up on the outer surface, stop thawing and allow it to stand for 20 minutes before continuing.
Leave the fish, meat and poultry to stand in order to complete defrosting. The standing time for complete defrosting will vary depending on the quantity defrosted. Please refer to the table below.

Hint: Flat food defrosts better than thick and smaller quantities need less time than bigger ones. Remember this hint while freezing and defrosting food.

For defrosting of frozen food with a temperature of about -18 to -20 °C, use the following table as a guide.

Food	Serving size	Power	Time (min.)
Meat			
Minced Meat	250 g 500 g	180 W	6-7 8-13
Pork Steaks	250 g	180 W	7-8
	Instructions Place the meat on turntable. Shield thinner edges with aluminium foil. Turn over after half of defrosting time! Serve after 15-30 minutes standing.		

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 45 2019-09-11 11:02:28

Cooking guide

Food	Serving size	Power	Time (min.)
Poultry			
Chicken Pieces	500 g (2 pcs)	180 W	14-15
Whole Chicken	1200 g	180 W	32-34
	Instructions First, put chicken pieces first skin-side down, whole chicken first breast-side-down on a flat ceramic plate. Shield the thinner parts like wings and ends with aluminium foil. Turn over after half of defrosting time! Serve after 15-60 minutes standing.		
Fish			
Fish Fillets	200 g	180 W	6-7
Whole Fish	400 g	180 W	11-13
	Instructions Put frozen fish in the middle of a flat ceramic plate. Arrange the thinner parts under the thicker parts. Shield narrow ends of fillets and tail of whole fish with aluminium foil. Turn over after half of defrosting time! Serve after 10-25 minutes standing.		
Fruits			
Berries	300 g	180 W	6-7
	Instructions Spread fruit on a flat, round glass dish (with a large diameter). Serve after 5-10 minutes standing.		

Food	Serving size	Power	Time (min.)
Bread			
Bread Rolls (each ca. 50 g)	2 pcs 4 pcs	180 W	1-1½ 2½-3
Toast/Sandwich	250 g	180 W	4-4½
German bread (Wheat + Rye Flour)	500 g	180 W	7-9
	Instructions Arrange rolls in a circle or bread horizontally on kitchen paper in the middle of turntable. Turn over after half of defrosting time! Serve after 5-20 minutes standing.		

Grill

The grill-heating element is located underneath the ceiling of the cavity. It operates while the door is closed and the turntable is rotating. The turntable's rotation makes the food brown more evenly. Preheating the grill for 3-5 minutes will make the food brown more quickly.

Cookware for grilling:

Should be flameproof and may include metal. Do not use any type of plastic cookware, as it can melt.

Food suitable for grilling:

Chops, sausages, steaks, hamburgers, bacon and gammon rashers, thin fish portions, sandwiches and all kinds of toast with toppings.

Important remark:

Whenever the grill only mode is used, please remember that food must be placed on the high rack, unless another instruction is recommended.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 46 2019-09-11 11:02:28

Microwave + Grill

This cooking mode combines the radiant heat that is coming from the grill with the speed of microwave cooking. It operates only while the door is closed and the turntable is rotating. Due to the rotation of the turntable, the food browns evenly. Three combination modes are available with this model: 600 W + Grill, 450 W + Grill and 300 W + Grill.

Cookware for cooking with microwave + grill

Please use cookware that microwaves can pass through. Cookware should be flameproof. Do not use metal cookware with combination mode. Do not use any type of plastic cookware, as it can melt.

Food suitable for microwave + grill cooking:

Food suitable for combination mode cooking include all kinds of cooked food which need reheating and browning (e.g. baked pasta), as well as foods which require a short cooking time to brown the top of the food. Also, this mode can be used for thick food portions that benefit from a browned and crispy top (e.g. chicken pieces, turning them over half way through cooking). Please refer to the grill table for further details.

Important remark:

Whenever the combination mode (microwave + grill) is used, the food should be placed on the high rack, unless another instruction is recommended. Please refer to the instructions in the following chart.
The food must be turned over, if it is to be browned on both sides.

Grill guide for fresh food

Preheat the grill with the grill-function for 2-3 minutes.
Use the power levels and times in this table as guide lines for grilling.
Use oven gloves when taking out.

Fresh food	Serving size	Power	1 step (min.)	2 step (min.)
Toast Slices	4 pcs (each 25 g)	Grill only	3½-4	3-4
	Instructions Put toast slices side by side on the high rack.			
Grilled Tomatoes	400 g (2 pcs)	450 W + Grill	4-6	-
	Instructions Cut tomatoes into halves. Put some cheese on top. Arrange in a circle in a flat glass pyrex dish. Place it on the high rack. Stand for 2-3 minutes.			
Tomato-Cheese Toast	4 pcs (300 g)	300 W + Grill	5-7	-
	Instructions Toast the bread slices first. Put the toast with topping on the high rack. Stand for 2-3 minutes.			
Toast Hawaii (Ham, Pineapple, Cheese slices)	4 pcs (500 g)	300 W + Grill	5-7	-
	Instructions Toast the bread slices first. Put the toast with topping on the high rack. Stand for 2-3 minutes.			
Baked Potatoes	500 g	600 W + Grill	11-13	-
	Instructions Cut potatoes into halves. Put them in a circle on the high rack with the cut side to the grill.			
Gratin Potatoes/ Vegetables (Chilled)	450 g	450 W + Grill	11-13	-
	Instructions Put the fresh gratin into a small glass pyrex dish. Put the dish on the high rack. After cooking stand for 2-3 minutes.			

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 47 2019-09-11 11:02:28

Cooking guide

Fresh food	Serving size	Power	1 step (min.)	2 step (min.)
Baked Apples	2 apples (ca. 400 g)	300 W + Grill	7-8	-
	Instructions Core the apples and fill them with raisins and jam. Put some almond slices on top. Put apples on a flat glass pyrex dish. Place the dish directly on the low rack.			
Chicken Pieces	500 g (2 pcs)	300 W + Grill	10-12	7-9
	Instructions Brush chicken pieces with oil and spices. Put them in a circle on the high rack. After grilling stand for 2-3 minutes.			
Roast Chicken	1200 g	1st 450W + Hotblast 200°C 2nd 450W + Grill	20-22	20-22
	Instructions Brush the chicken oil and spices. Put the chicken on the low rack. After grilling stand for 5 minutes.			
Roast Fish	400-500 g	300 W + Grill	6-8	6-7
	Instructions Brush skin of whole fish with oil and add herbs and spices. Put two fishes side by side (head to tail) on the high rack. After grilling stand for 2-3 minutes.			
Roast Vegetables	300 g	Grill	9-11	-
	Rinse and prepare vegetables in slices (e.g. courgette, egg plants, pepper, pumpkin). Brush with olive oil and add spices. Put on crusty plate on high rack			

Fresh food	Serving size	Power	1 step (min.)	2 step (min.)
Plantain	1 ea (200 g)	1 step 450 W + Grill 2 step Grill	6-7	4-5
	Instructions peel and slice plantain 1 cm thick and put on the crusty plate with grill rack. Brush all sides with oil. If plantain becomes soft, reduce time 1-2 minute soft type. Stand for 1-2 minutes.			
Yam	200 g	450 W + Grill	10-11	-
	Instructions Peel yam and cut into sticks with a thickness of 10 x 30 mm. Length is about 10 cm. Put on the crusty plate and brush all sides with oil. Put on the high rack and cook. Stand for 1-2 minutes.			

Hot blast

Cooking with Hot blast is powerful combination of the grill heater and the convection heater with fan. The hot air blows from the top of the cavity through holes into the oven. The heating element at top and back side and the fan at the back side-wall, keeps the hot air circulating evenly.

Cookware for Hot blast cooking

All conventional ovenproof cookware, baking tins and sheets - anything you would normally use in a traditional convection oven - can be used.

Food suitable for Hot blast cooking

Use this mode for biscuits, individual scones, rolls, and cakes as well as fruits cakes, choux, and souffles.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 48 2019-09-11 11:02:28

Microwave + Hot blast

This mode combines the microwave energy with the hot air and is therefore reducing the cooking time while giving the food a brown and crispy surface. Cooking with convection is the traditional and well known method of cooking food in an oven with hot air circulated by a fan on the back-wall.

Cookware for cooking with microwaves + Hot blast

Should be able to let the microwaves pass through. Should be ovenproof (like glass, pottery or china without metal trims); similar to the cookware described under Microwave + Grill.

Food suitable for microwave + Hot blast cooking:

All kinds of meats and poultry as well as casseroles and gratin dishes, sponge cakes and light fruit cakes, pies and crumbles, roast vegetables, scones and breads.

Hot blast guide for fresh and frozen food

Preheat the Hot blast with the Hot blast function to the desired temperature. Use the power levels and times in this table as guide lines for Hot blast cooking. Use oven gloves when taking out.

Food	Serving size (g)	Mode (°C)	Cooking Time (min.)
Frozen Mini Tartes/Pizza Snacks	250	200	9-11
	Put pizza snacks on the crusty plate. Put plate on low rack.		
Frozen Oven Chips	300	200	22-25
	Distribute frozen oven chips on crusty plate. Put plate on high rack.		
Frozen Chicken Nuggets	300	200	8-11
	Put frozen nuggets on crusty plate. Put plate on the high rack.		
Frozen Pizza	300-400	200	11-14
	Put frozen Pizza on the low rack.		
Homemade Lasagna/Pasta Gratin	500	170	15-20
	Put pasta in ovenproof dish. Put dish on low rack.		
Frozen Lasagne	400	450 W + 180 °C	16-18
	Put into a suitable sized glass pyrex dish or leave in the original packaging (take care that this is suitable for microwaves and oven heat). Put frozen lasagne on the low rack. After cooking stand for 2-3 minutes.		
Roast beef/Lamb (Medium)	1000-1200	450 W + 160 °C	20-22 (first side) 14-16 (second side)
	Brush beef/ lamb with oil and spice it with pepper, salt and paprika. Put it on the low rack, first with the fat side down. After cooking wrap in aluminium foil and stand for 10-15 minutes.		
Frozen Bread Rolls	350 (6 pcs)	180 W + 160 °C	7-9
	Put bread rolls on crusty plate. Put plate on the low rack. Stand 2-3 minutes.		
Marble Cake	700	160	50-55
	Put the fresh dough in a small rectangular black metal baking dish (length 25 cm). Put the dish on the low rack. After baking stand for 5-10 minutes.		
Small Cakes	each 30	160	30-35
	Put up to 12 small cakes / muffins in paper cups on crusty plate. Put plate on low rack. After baking stand for 5 minutes.		
Croissants/Bread Rolls (Fresh Dough)	200-250	200	13-18
	Put the chilled croissants or bread rolls on baking paper on the low rack.		

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 49 2019-09-11 11:02:29

Cooking guide

Food	Serving size (g)	Mode (°C)	Cooking Time (min.)
Frozen Cake	1000	180 W + 160 °C	16-18
	Put the frozen cake directly on the low rack. After defrost and warming keep standing for 15-20 minutes.		
Homemade Potato Gratin	500	450 W + 180 °C	18-22
	Put Gratin in ovenproof dish. Set on low rack.		
Homemade Quiche (Medium Size)	500-600	160	45-50
	Prepare quiche using metal medium size pan and put on low rack. Refer a recipe in Hot Blast auto cook guide.		

Tips and tricks

Melting butter

Put 50 g butter into a small deep glass dish. Cover with plastic lid.
Heat for 30-40 seconds using 900 W, until butter is melted.

Melting chocolate

Put 100 g chocolate into a small deep glass dish.
Heat for 3-5 minutes, using 450 W until chocolate is melted.
Stir once or twice during melting. Use oven gloves while taking out!

Melting crystallized honey

Put 20 g crystallized honey into a small deep glass dish.
Heat for 20-30 seconds using 300 W, until honey is melted.

Melting gelatine

Lay dry gelatine sheets (10 g) for 5 minutes into cold water.
Put drained gelatine into a small glass pyrex bowl.
Heat for 1 minute using 300 W. Stir after melting.

Cooking glaze/icing (for cake and gateaux)

Mix instant glaze (approximately 14 g) with 40 g sugar and 250 ml cold water.
Cook uncovered in a glass pyrex bowl for 3½ to 4½ minutes using 900 W, until glaze/icing is transparent. Stir twice during cooking.

Cooking jam

Put 600 g fruits (for example mixed berries) in a suitable sized glass pyrex bowl with lid. Add 300 g preserving sugar and stir well.
Cook covered for 10-12 minutes using 900 W.
Stir several times during cooking. Empty directly into small jam glasses with twist-off lids. Stand on lid for 5 minutes.

Cooking pudding

Mix pudding powder with sugar and milk (500 ml) by following the manufacturers instructions and stir well. Use a suitable sized glass pyrex bowl with lid. Cook covered for 6½ to 7½ minutes using 900 W.
Stir several times well during cooking.

Browning almond slices

Spread 30 g sliced almonds evenly on a medium sized ceramic plate.
Stir several times during browning for 3½ to 4½ minutes using 600 W.
Let it stand for 2-3 minutes in the oven. Use oven gloves while taking out!

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 50 2019-09-11 11:02:29

Troubleshooting and information code

Troubleshooting

If you have any of the problems listed below try the solutions given.

Problem	Cause	Action
General		
The buttons cannot be pressed properly.	Foreign matter may be caught between the buttons.	Remove the foreign matter and try again.
	For touch models: Moisture is on the exterior.	Wipe the moisture from the exterior.
	Child lock is activated.	Deactivate Child lock.
The time is not displayed.	The Eco (power-saving) function is set.	Turn off the Eco function.
The oven does not work.	Power is not supplied.	Make sure power is supplied.
	The door is open.	Close the door and try again.
	The door open safety mechanisms are covered in foreign matter.	Remove the foreign matter and try again.
The oven stops while in operation.	The user has opened the door to turn food over.	After turning over the food, press the **Start** button again to start operation.
The power turns off during operation.	The oven has been cooking for an extended period of time.	After cooking for an extended period of time, let the oven cool.
	The cooling fan is not working.	Listen for the sound of the cooling fan.
	Trying to operate the oven without food inside.	Put food in the oven.
	There is not sufficient ventilation space for the oven.	There are intake/exhaust outlets on the front and rear of the oven for ventilation. Keep the gaps specified in the product installation guide.
	Several power plugs are being used in the same socket.	Designate only one socket to be used for the oven.
There is a popping sound during operation, and the oven doesn't work.	Cooking sealed food or using a container with a lid may causes popping sounds.	Do not use sealed containers as they may burst during cooking due to expansion of the contents.
The oven exterior is too hot during operation.	There is not sufficient ventilation space for the oven.	There are intake/exhaust outlets on the front and rear of the oven for ventilation. Keep the gaps specified in the product installation guide.
	Objects are on top of the oven.	Remove all objects on the top of the oven.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 51 2019-09-11 11:02:29

Troubleshooting and information code

Problem	Cause	Action
The door cannot be opened properly.	Food residue is stuck between the door and oven interior.	Clean the oven and then open the door.
Heating including the Warm function does not work properly.	The oven may not work, too much food is being cooked, or improper cookware is being used.	Put one cup of water in a microwave-safe container and run the microwave for 1-2 minutes to check whether the water is heated. Reduce the amount of food and start the function again. Use a cooking container with a flat bottom.
The thaw function does not work.	Too much food is being cooked.	Reduce the amount of food and start the function again.
The interior light is dim or does not turn on.	The door has been left open for a long time.	The interior light may automatically turn off when the Eco function operates. Close and reopen the door or press the **Cancel** button.
	The interior light is covered by foreign matter.	Clean the inside of the oven and check again.
A beeping sound occurs during cooking.	If the Auto Cook function is being used, this beeping sound means it's time to turn over the food during thawing.	After turning over the food, press the **Start** button again to restart operation.

Problem	Cause	Action
The oven is not level.	The oven is installed on an uneven surface.	Make sure the oven is installed on flat, stable surface.
There are sparks during cooking.	Metal containers are used during the oven/thawing functions.	Do not use metal containers.
When power is connected, the oven immediately starts to work.	The door is not properly closed.	Close the door and check again.
There is electricity coming from the oven.	The power or power socket is not properly grounded.	Make sure the power and power socket are properly grounded.
1. Water drips. **2.** Steam emits through a door crack. **3.** Water remains in the oven.	There may be water or steam in some cases depending on the food. This is not an oven malfunction.	Let the oven cool and then wipe with a dry dish towel.
The brightness inside the oven varies.	Brightness changes depending on power output changes according to function.	Power output changes during cooking are not malfunctions. This is not an oven malfunction.
Cooking is finished, but the cooling fan is still running.	To ventilate the oven, the cooling fan continues to run for about 3 minutes after cooking is complete.	This is not an oven malfunction.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 52 2019-09-11 11:02:29

Problem	Cause	Action
Turntable		
While turning, the turntable comes out of place or stops turning.	There is no roller ring, or the roller ring is not properly in place.	Install the roller ring and then try again.
The turn table drags while turning.	The roller ring is not properly in place, there is too much food, or the container is too large and touches the inside of the microwave.	Adjust the amount of food and do not use containers that are too large.
The turn table rattles while turning and is noisy.	Food residue is stuck to the bottom of the oven.	Remove any food residue stuck to the bottom of the oven.
Grill		
Smoke comes out during operation.	During initial operation, smoke may come from the heating elements when you first use the oven.	This is not a malfunction, and if you run the oven 2-3 times, it should stop.
	Food is on the heating elements.	Let the oven cool and then remove the food from the heating elements.
	Food is too close to the grill.	Put the food a suitable distance away while cooking.
	Food is not properly prepared and/or arranged.	Make sure food is properly prepared and arranged.

Problem	Cause	Action
Oven		
The oven does not heat.	The door is open.	Close the door and try again.
Smoke comes out during preheating.	During initial operation, smoke may come from the heating elements when you first use the oven.	This is not a malfunction, and if you run the oven 2-3 times, it should stop.
	Food is on the heating elements.	Let the oven cool and then remove the food from the heating elements.
There is a burning or plastic smell when using the oven.	Plastic or non heat-resistant cookware is used.	Use glass cookware suitable for high temperatures.
There is a bad smell coming from inside the oven.	Food residue or plastic has melted and stuck to the interior.	Use the steam function and then wipe with a dry cloth. You can put a lemon slice inside and run the oven to remove the odour more quickly.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 53 2019-09-11 11:02:29

Troubleshooting and information code

Problem	Cause	Action
The oven does not cook properly.	The oven door is frequently opened during cooking.	If you open the door often, the interior temperature will be lowered and this may affect the results of your cooking.
	The oven controls are not correctly set.	Correctly set the oven controls and try again.
	The grill or other accessories are not correctly inserted.	Correctly insert the accessories.
	The wrong type or size of cookware is used.	Use suitable cookware with flat bottoms.

NOTE

If the above guidelines do not enable you to solve the problem, then contact your local SAMSUNG customer service centre.
Please have the following information read;
- The model and serial numbers, normally printed on the rear of the oven
- Your warranty details
- A clear description of the problem

Then contact your local dealer or SAMSUNG aftersales service.

Information codes

Code	Description	Action
C-20	Temperature sensor is needed to check.	Press the **Stop/Cancle** button and operate again. If it occurs again, turn off the microwave oven over 30 seconds and try setting again. If it appears again, call your local SAMSUNG Customer Care Centre.
C-21	Temperature sensor detect higher temperature than setting temperature.	Turn off the microwave oven for cooling the product and then try setting again. If it appears again, call your local SAMSUNG Customer Care Centre.
C-d0	Control buttons are pressed over 10 seconds.	Clean the keys and check if there is water on the surface around key. If it occurs again, turn off the microwave oven over 30 seconds and try setting again. If it appears again, call your local SAMSUNG Customer Care Centre.

NOTE

For any codes not listed above, or if the suggested solution does not solve the problem, contact your local SAMSUNG Customer Care Centre.

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 54 2019-09-11 11:02:29

Technical specifications

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

Model	MC32K7055**
Power source	220 V ~ 50 Hz AC
Power consumption Maximum power Microwave Grill (heating element) Hot blast (heating element)	 2750 W 1400 W 1350 W Max. 1900 W
Output power	100 W / 900 W - 6 levels (IEC-705)
Operating frequency	2450 MHz
Dimensions (W x H x D) Outside (Include Handle) Oven cavity	 523 x 309 x 486 mm 373 x 233 x 363 mm
Volume	32 liter
Weight Net	 20.0 kg approx.

Memo

MC32K7055CT_ST_DE68-04387M-03_TH+EN.indb 55 2019-09-11 11:02:29

SAMSUNG

Please be advised that the Samsung warranty does NOT cover service calls to explain product operation, correct improper installation, or perform normal cleaning or maintenance.

QUESTIONS OR COMMENTS?

COUNTRY / LOCATION	CALL	OR VISIT US ONLINE AT
AUSTRALIA	1300 362 603	www.samsung.com/au/support
NEW ZEALAND	0800 726 786	www.samsung.com/nz/support
CHINA	400-810-5858	www.samsung.com/cn/support
HONG KONG	3698 4698	www.samsung.com/hk/support (Chinese) www.samsung.com/hk_en/support (English)
INDIA	1800 40 SAMSUNG (1800 40 7267864) (Toll-Free) 1800 5 SAMSUNG (1800 5 7267864) (Toll-Free)	www.samsung.com/in/support
BANGLADESH	09612300300 08000300300 (Toll free)	www.samsung.com/support
INDONESIA	021-5699-7777 0800-112-8888 (All Product, Toll Free)	www.samsung.com/id/support
JAPAN	0120-363-905	www.galaxymobile.jp/jp/support
MALAYSIA	1800-88-9999 +603-7713 7420 (Overseas contact)	www.samsung.com/my/support
PHILIPPINES	1-800-10-726-7864 [PLDT Toll Free] 1-800-8-726-7864 [Globe Landline and Mobile] 02-422-2111 [Standard Landline]	www.samsung.com/ph/support

COUNTRY / LOCATION	CALL	OR VISIT US ONLINE AT
SINGAPORE	1800 7267864 | 1800-SAMSUNG	www.samsung.com/sg/support
THAILAND	0-2689-3232 1800-29-3232 (Toll free)	www.samsung.com/th/support
TAIWAN	0800-32-9999	www.samsung.com/tw/support
VIETNAM	1800 588 889	www.samsung.com/vn/support
MYANMAR	+95-1-2399-888	www.samsung.com/mm/support
MACAU	0800 333	www.samsung.com/hk/support (Chinese) www.samsung.com/hk_en/support (English)
SRI LANKA	011 SAMSUNG (011 7267864)	www.samsung.com/support
CAMBODIA	+855-23-993232 1800-20-3232 (Toll free)	www.samsung.com/th/support
LAOS	+856-214-17333	www.samsung.com/th/support
NEPAL	16600172667 (Toll Free for NTC Only) 9801572667 (Toll Free for Ncell users)	www.samsung.com/support

DE68-04387M-03