เตาไมโครเวฟ

คู่มือผู้ใช้

MG23T5018C*



MG23T5018CC_ST_DE68-04594R-00_TH.indd 1 18/6/2021 8:01:21 AM

สารบัญ

การใช้คู่มือนี้ 3

คำแนะนำเพื่อความปลอดภัย 3

คำแนะนำสำคัญเพื่อความปลอดภัย 3
ความปลอดภัยทั่วไป 6
ข้อควรระวังสำหรับการใช้งานไมโครเวฟ 8
การรับประกันอย่างจำกัด 8

การติดตั้ง 9

อุปกรณ์เสริม 9
สถานที่ติดตั้ง 9
จานหมุน 9

การบำรุงรักษา 10

การทำความสะอาด 10
การเปลี่ยนชิ้นส่วน (ซ่อมแซม) 10
การดูแลเมื่อไม่ได้ใช้งานเป็นเวลานาน 10

คุณสมบัติของเตาไมโครเวฟ 11

เตาไมโครเวฟ 11
แผงควบคุม 11

การใช้งานเตาไมโครเวฟ 12

เตาไมโครเวฟทำงานอย่างไร 12
การตรวจสอบว่าเตาไมโครเวฟของคุณทำงานอย่างถูกต้อง 12
การอบ/อุ่นอาหาร 13
การตั้งเวลา 14
ระดับพลังงานและการปรับเวลา 14
การปรับเวลาอบอาหาร 15
การหยุดการอบอาหาร 15
การตั้งค่าโหมดประหยัดพลังงาน 15
การใช้การละลายน้ำแข็ง 15
การใช้งานย่างทอด 17
การใช้เมนูอัตโนมัติ 20
ย่าง 26
การผสมไมโครเวฟและการย่าง 26
การใช้จานอบเกรียม 27
การใช้ล็อคป้องกันเด็ก 29
การปิดเสียงเตือน 29

คู่มือสำหรับอุปกรณ์การทำอาหาร 29

คู่มือการปรุงอาหาร 30

การแก้ไขปัญหาและรหัสข้อมูล 39

การแก้ไขปัญหา 39
รหัสข้อมูล 42

ข้อมูลจำเพาะด้านเทคนิค 43

MG23T5018CC_ST_DE68-04594R-00_TH.indd 2 18/6/2021 8:01:21 AM

การใช้คู่มือนี้

ขอขอบคุณที่เลือกใช้เตาไมโครเวฟ SAMSUNG คำแนะนำสำหรับผู้ใช้นี้ประกอบด้วยข้อมูลที่เป็นประโยชน์มากมายเกี่ยวกับการอบอาหารด้วยเตาไมโครเวฟของคุณดังนี้:

- ข้อควรระวังเพื่อความปลอดภัย
- อุปกรณ์เสริมและภาชนะที่เหมาะสม
- เคล็ดลับในการอบอาหารที่มีประโยชน์
- เคล็ดลับในการอบอาหาร

คู่มือนี้จะใช้สัญลักษณ์ต่อไปนี้:

คำเตือน

อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิดการบาดเจ็บส่วนบุคคลขั้นร้ายแรง**หรือเสียชีวิต**

ข้อควรระวัง

อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิดการ**บาดเจ็บส่วนบุคคลเพียงเล็กน้อยหรือทรัพย์สินเสียหาย**

หมายเหตุ

เคล็ดลับ คำแนะนำ หรือข้อมูลที่ช่วยให้ผู้ใช้สามารถใช้ผลิตภัณฑ์ได้ดีขึ้น

คำแนะนำเพื่อความปลอดภัย

คำแนะนำสำคัญเพื่อความปลอดภัย

โปรดอ่านให้ละเอียดและเก็บไว้เป็นข้อมูลอ้างอิงในอนาคต

คำเตือน: ห้ามใช้เตาอบหากประตูหรือซีลขอบประตูเสียหายจนกว่าจะได้รับการซ่อมแซมจากช่างผู้ชำนาญ

คำเตือน: อาจเกิดอันตรายขึ้นได้ หากให้บุคคลที่ไม่ใช่ช่างที่มีความชำนาญเป็นผู้ซ่อมบำรุง เนื่องจากต้องมีการถอดฝาครอบของเครื่องซึ่งเป็นเครื่องป้องกันพลังงานไมโครเวฟ

คำเตือน: โปรดอย่าอุ่นของเหลวและอาหารอื่นในภาชนะที่ปิดสนิท เนื่องจากอาจระเบิดได้

คำเตือน: ไม่ควรให้เด็กใช้เตาอบตามลำพัง ยกเว้นกรณีที่เด็กได้รับคำแนะนำอย่างเพียงพอเพื่อให้สามารถใช้เตาอบได้โดยปลอดภัย และทราบถึงอันตรายจากการใช้ผิดวิธี

อุปกรณ์นี้ออกแบบมาสำหรับใช้ภายในครัวเรือนเท่านั้น และไม่ได้ออกแบบมาเพื่อใช้งาน เช่น:

- พื้นที่ครัวพนักงานในร้านค้า สำนักงาน และสภาพแวดล้อมการทำงานแบบอื่นๆ
- โรงเรือนเกษตร
- ลูกค้าในโรงแรม โมเต็ล และสภาพแวดล้อมที่พักอาศัยอื่นๆ

MG23T5018CC_ST_DE68-04594R-00_TH.indd 3 18/6/2021 8:01:21 AM

คำแนะนำเพื่อความปลอดภัย

• สภาพแวดล้อมแบบเบดแอนด์เบรกฟาสต์

โปรดใช้เฉพาะภาชนะที่เหมาะกับเตาไมโครเวฟเท่านั้น

เมื่ออุ่นอาหารในภาชนะพลาสติกหรือกระดาษ โปรดระวังเนื่องจากอาจเกิดการติดไฟขึ้นในเตาอบ

เตาไมโครเวฟนี้ใช้สำหรับการให้ความร้อนกับอาหารและเครื่องดื่ม การทำให้อาหารหรือผ้าแห้ง และการให้ความร้อนกับแผ่นให้ความร้อน รองเท้าสวมในบ้าน ฟองน้ำ ผ้าหมาด และวัสดุอื่นในลักษณะเดียวกัน อาจเกิดความเสี่ยงต่อการบาดเจ็บ ติดไฟ หรือเพลิงไหม้

ถ้าพบว่ามีควัน ให้ปิดหรือถอดปลั๊กอุปกรณ์และอย่าเปิดประตูเตาอบ เพื่อมิให้เกิดเปลวไฟ

ระหว่างการอุ่นร้อนเครื่องดื่มด้วยไมโครเวฟ จะมีการเดือดที่ล่าช้าออกไป ดังนั้น โปรดใช้ความระมัดระวังเมื่อถือภาชนะ

ควรคนหรือเขย่าสิ่งที่บรรจุอยู่ในขวดนมเด็กและขวดอาหารเด็ก และตรวจสอบอุณหภูมิก่อนที่จะรับประทาน เพื่อลดความเสี่ยงของการลวก

ห้ามอุ่นร้อนหรือให้ความร้อนกับไข่ทั้งเปลือกหรือไข่ต้มในเตาไมโครเวฟ เนื่องจากอาจระเบิดได้ แม้ว่าจะสิ้นสุดการให้ความร้อนของไมโครเวฟแล้วก็ตาม

ทำความสะอาดเตาอบและขจัดอาหารตกค้างอย่างสม่ำเสมอ

การไม่รักษาความสะอาดเตาอบ อาจทำให้เกิดความเสียหายกับพื้นผิว ซึ่งอาจมีผลเสียต่อเตาอย่างมากและอาจก่อให้เกิดอันตรายได้

เตาไมโครเวฟนี้ออกแบบมาสำหรับใช้งานบนเคาน์เตอร์ (ตั้งอิสระ) เท่านั้น ไม่ควรวางเตาไมโครเวฟไว้ในช่องของตู้

ห้ามใช้ภาชนะที่เป็นโลหะสำหรับอาหารและเครื่องดื่มในระหว่างการปรุงอาหารในไมโครเวฟ

ควรระมัดระวังอย่าทำให้จานหมุนเคลื่อนในขณะที่นำภาชนะออกจากอุปกรณ์

อุปกรณ์นี้ไม่สามารถทำความสะอาดด้วยเครื่องพ่นไอน้ำ

อุปกรณ์นี้ไม่สามารถทำความสะอาดด้วยเครื่องฉีดน้ำ

อุปกรณ์นี้ไม่ได้ออกแบบมาสำหรับการติดตั้งในยานพาหนะบนท้องถนน คาราวาน และยานพาหนะในลักษณะเดียวกัน

อุปกรณ์นี้ไม่เหมาะสำหรับบุคคลที่มีสภาพร่างกาย ประสาทสัมผัสหรือจิตที่ไม่ปกติ (รวมถึงเด็ก) หรือบุคคลที่ขาดประสบการณ์ ความรู้ ยกเว้นจะได้รับการดูแลหรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล

โปรดระวังมิให้เด็กเล่นกับอุปกรณ์นี้

MG23T5018CC_ST_DE68-04594R-00_TH.indd 4 18/6/2021 8:01:21 AM

อุปกรณ์นี้สามารถใช้งานโดยเด็กที่มีอายุ 8 ปีขึ้นไปและบุคคลที่มีสมรรถภาพร่างกาย ประสาทสัมผัส หรือสภาพจิตไม่เป็นปกติ หรือขาดประสบการณ์หรือความรู้ ถ้าได้รับการดูแลหรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล ห้ามเด็กเล่นกับอุปกรณ์นี้ ห้ามเด็กทำความสะอาดหรือบำรุงรักษาอุปกรณ์โดยไม่มีการดูแล

กรณีที่ปลั๊กไฟของเครื่องใช้ไฟฟ้านี้เกิดเสียหาย ต้องให้ผู้ผลิต ตัวแทนให้บริการหรือผู้ที่มีความชำนาญเป็นผู้เปลี่ยนสายไฟเพื่อไม่ให้เกิดอันตราย

เตาอบนี้ควรอยู่ในตำแหน่งและความสูงที่เหมาะสม เพื่อให้สามารถเข้าถึงช่องใส่อาหารและบริเวณควบคุมได้ง่าย

ก่อนที่จะใช้เตาอบเป็นครั้งแรก ควรใช้งานเตาอบกับน้ำเป็นเวลา 10 นาที จากนั้นจึงค่อยใช้

ถ้าเตาอบมีเสียงผิดปกติ มีควันหรือกลิ่นไหม้ ให้ถอดปลั๊กทันที และติดต่อศูนย์บริการใกล้บ้าน

เตาไมโครเวฟนี้จะต้องอยู่ในตำแหน่งที่คุณสามารถเอื้อมถึงปลั๊กโดยง่าย

คำเตือน: เมื่อใช้งานอุปกรณ์นี้ในโหมดผสม ไม่ควรให้เด็กใช้งานเตาอบโดยไม่มีผู้ใหญ่ดูแล เนื่องจากจะมีอุณหภูมิสูง

ระหว่างการใช้งานอุปกรณ์จะมีความร้อนสูง โปรดใช้ความระมัดระวังอย่าสัมผัสขดลวดความร้อนภายในเตาอบ

คำเตือน: ชิ้นส่วนที่เข้าถึงได้อาจร้อนจัดหลังจากการใช้งาน ควรดูแลให้พ้นมือเด็ก

ห้ามใช้สารทำความสะอาดที่มีฤทธิ์กัดกร่อนรุนแรงหรือเหล็กขูดแหลมคมเพื่อทำความสะอาดประตูเตาอบ เนื่องจากอาจทำให้พื้นผิวเป็นรอยและทำให้แก้วแตกได้

ห้ามใช้เครื่องทำความสะอาดด้วยไอน้ำ

คำเตือน: ตรวจสอบว่าปิดอุปกรณ์แล้ว ก่อนที่จะเปลี่ยนหลอดไฟ เพื่อป้องกันไฟฟ้าช็อต

ห้ามติดตั้งผลิตภัณฑ์นี้โดยมีประตูแบบตกแต่งเพิ่มเติม เพื่อป้องกันความร้อนสูงเกิน

คำเตือน: อุปกรณ์นี้และชิ้นส่วนที่เข้าถึงได้อาจร้อนจัดระหว่างการใช้งาน

โปรดใช้ความระมัดระวังอย่าสัมผัสขดลวดความร้อน

ห้ามเด็กอายุต่ำกว่า 8 ขวบใช้อุปกรณ์ ยกเว้นกรณีที่มีผู้ดูแลใกล้ชิด

ข้อควรระวัง: ต้องมีผู้ดูแลการทำงานของเครื่องระหว่างกระบวนการปรุงอาหาร ต้องมีผู้ดูแลการทำงานของเครื่องอย่างต่อเนื่องระหว่างกระบวนการปรุงอาหารแบบสั้น

MG23T5018CC_ST_DE68-04594R-00_TH.indd 5 18/6/2021 8:01:21 AM

คำแนะนำเพื่อความปลอดภัย

ประตูหรือพื้นผิวภายนอกอาจร้อนจัดเมื่ออุปกรณ์ทำงาน
อุณหภูมิของพื้นผิวที่สัมผัสได้อาจสูงมากเมื่ออุปกรณ์นี้ทำงาน
พื้นผิวอาจมีความร้อนสูงระหว่างการใช้งาน
อุปกรณ์นี้ไม่ได้ออกแบบมาเพื่อใช้งานด้วยเครื่องจับเวลาภายนอกหรือระบบรีโมทคอนโทรลแยกต่างหาก
อุปกรณ์นี้สามารถใช้งานโดยเด็กที่มีอายุ 8 ปีขึ้นไปและบุคคลที่มีสมรรถภาพร่างกาย ประสาทสัมผัส หรือสภาพจิตไม่เป็นปกติ หรือขาดประสบการณ์หรือความรู้ ถ้าได้รับการดูแลหรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล ห้ามเด็กเล่นกับอุปกรณ์นี้ ห้ามมิให้เด็กเป็นผู้ทำความสะอาดและบำรุงรักษา ยกเว้นเด็กที่มีอายุ 8 ปีขึ้นไปและมีการดูแลโดยผู้ใหญ่
ดูแลให้อุปกรณ์และสายไฟพ้นมือเด็กที่อายุต่ำกว่า 8 ปี

ความปลอดภัยทั่วไป

การแก้ไขหรือซ่อมแซมจะต้องดำเนินการโดยช่างที่มีความชำนาญเท่านั้น
ห้ามให้ความร้อนอาหารหรือของเหลวที่ซีลไว้ในภาชนะสำหรับฟังก์ชันไมโครเวฟ
ห้ามใช้เบนซิน ทินเนอร์ แอลกอฮอล์ หรือเครื่องทำความสะอาดด้วยไอน้ำหรือเครื่องฉีดน้ำแรงดันสูงเพื่อทำความสะอาดเตาอบ
ห้ามติดตั้งเตาอบ: ใกล้กับเครื่องทำความร้อนหรือวัสดุที่ติดไฟง่าย ตำแหน่งที่มีความชื้น น้ำมัน ฝุ่น หรือถูกแสงอาทิตย์หรือน้ำโดยตรง หรือบริเวณที่ก๊าซรั่วไหล หรือพื้นผิวที่ไม่เรียบเสมอกัน
เตาอบนี้ต้องต่อสายกราวด์อย่างเหมาะสมตามข้อกำหนดของท้องถิ่นหรือของประเทศ
โปรดใช้ผ้าแห้งเช็ดสิ่งแปลกปลอมออกจากขั้วหรือผิวสัมผัสของปลั๊กไฟเป็นประจำ
ห้ามดึง บิดงอ หรือวางสิ่งของที่มีน้ำหนักมากทับสายไฟ
ถ้ามีก๊าซรั่วไหล (โพรเพน, LP เป็นต้น) ให้ระบายอากาศทันที อย่าสัมผัสสายไฟ
ห้ามสัมผัสสายไฟด้วยมือที่เปียก
ขณะที่เตาอบกำลังทำงานอยู่ โปรดอย่าปิดเครื่องด้วยการดึงสายไฟออก
ห้ามสอดนิ้วหรือสิ่งแปลกปลอม ถ้ามีสิ่งแปลกปลอมเข้าไปในเตาอบ ให้ดึงสายไฟออก และติดต่อศูนย์บริการของ Samsung ที่อยู่ใกล้บ้าน
ห้ามใช้แรงกดหรือกระแทกเตาอบมากเกินไป
ห้ามวางเตาอบบนวัตถุที่แตกหักง่าย
โปรดตรวจสอบว่าแรงดันไฟฟ้า ความถี่ และกระแสไฟฟ้าตรงตามข้อมูลจำเพาะของผลิตภัณฑ์
ต่อสายไฟเข้ากับเต้ารับไฟฟ้าที่ผนังอย่างแน่นหนา ห้ามใช้ตัวแปลงปลั๊ก สายต่อ หรือหม้อแปลงไฟฟ้า
ห้ามเกี่ยวสายไฟไว้กับวัตถุที่เป็นโลหะ โปรดตรวจสอบว่าสายไฟอยู่ระหว่างวัตถุหรืออยู่ด้านหลังเตาอบ
ห้ามใช้ปลั๊กไฟหรือสายไฟที่เสียหาย หรือเต้ารับไฟฟ้าที่หลวม หากปลั๊กไฟหรือสายไฟเสียหาย โปรดติดต่อศูนย์บริการของ Samsung ที่อยู่ใกล้บ้าน
ห้ามเทหรือฉีดพ่นน้ำบนเตาอบโดยตรง
ห้ามวางสิ่งของบนเตาอบ ด้านใน หรือบนประตูเตาอบ
ห้ามพ่นสารระเหย เช่น ยาฆ่าแมลงลงบนเตาอบ
โปรดอย่าเก็บวัสดุที่ติดไฟได้ไว้ในเตาอบ เนื่องจากไอของแอลกอฮอล์อาจสัมผัสส่วนที่ร้อนของเตาอบ โปรดใช้ความระมัดระวังเมื่อให้ความร้อนอาหารหรือเครื่องดื่มที่มีแอลกอฮอล์
เด็กอาจเดินชนหรือถูกประตูหนีบนิ้ว เมื่อเปิด/ปิดประตู โปรดให้เด็กอยู่ห่างๆ

MG23T5018CC_ST_DE68-04594R-00_TH.indd 6 18/6/2021 8:01:21 AM

คำเตือนเกี่ยวกับไมโครเวฟ

ระหว่างการให้ความร้อนเครื่องดื่มด้วยไมโครเวฟอาจมีการเดือดที่ล่าช้าออกไป โปรดใช้ความระมัดระวังเมื่อถือภาชนะ โปรดตั้งเครื่องดื่มพักไว้อย่างน้อย 20 วินาทีก่อนถือ ถ้าจำเป็น ให้คนในระหว่างให้ความร้อน โปรดคนหลังจากการให้ความร้อนเสมอ

ในกรณีที่ของเหลวลวก โปรดปฏิบัติตามคำแนะนำในการปฐมพยาบาล:

1. แช่บริเวณที่ถูกลวกในน้ำเย็นเป็นเวลาอย่างน้อย 10 นาที
2. พันด้วยผ้าพันแผลที่แห้งและสะอาด
3. โปรดอย่าทาครีม น้ำมัน หรือโลชั่น

เพื่อไม่ให้ถาดหรือชั้นวางเสียหาย โปรดอย่านำถาดหรือชั้นวางไปจุ่มน้ำหลังจากปรุงอาหารเสร็จใหม่นาน

อย่าใช้เตาอบสำหรับการทอดแบบน้ำมันท่วม เนื่องจากจะไม่สามารถควบคุมอุณหภูมิของน้ำมันได้ ซึ่งอาจส่งผลให้น้ำมันที่ร้อนจัดมีความร้อนสูงเกินไป

ข้อควรระวังสำหรับเตาไมโครเวฟ

โปรดใช้ภาชนะสำหรับไมโครเวฟเท่านั้น ห้ามใช้ภาชนะที่เป็นโลหะ ภาชนะที่มีขอบทองหรือเงิน เหล็กเสียบ เป็นต้น

นำลวดที่ใช้ปิดถุงออก อาจเกิดประกายไฟฟ้า

ห้ามใช้เตาอบเพื่อทำให้กระดาษหรือผ้าแห้ง

ใช้เวลาสั้นลงสำหรับอาหารปริมาณน้อย เพื่อป้องกันความร้อนเกินหรือไหม้

โปรดเก็บสายไฟและปลั๊กไฟให้ห่างจากน้ำและความร้อน

เพื่อไม่ให้เกิดการระเบิด โปรดอย่าให้ความร้อนกับไข่ทั้งเปลือกหรืออุ่นไข่ต้มทั้งเปลือก ห้ามให้ความร้อนกับภาชนะที่ปิดสนิทหรือซีลด้วยสุญญากาศ ถั่ว มะเขือเทศ เป็นต้น

ห้ามปิดหรือบังช่องระบายอากาศด้านหลังของเตาด้วยผ้าหรือกระดาษ อาจทำให้เกิดอันตรายจากไฟไหม้ เตาอบอาจมีความร้อนสูงเกินไปและเครื่องจะหยุดทำงานโดยอัตโนมัติ และจะไม่สามารถใช้งานได้จนกว่าจะเย็นลง

โปรดใช้ถุงมือกันความร้อนทุกครั้งเมื่อนำจานออก

คนของเหลวเมื่อถึงครึ่งหนึ่งของเวลาอุ่น หรือหลังจากสิ้นสุดการอุ่นร้อน และพักให้ของเหลวเย็นลงอย่างน้อย 20 วินาทีหลังจากให้ความร้อนเพื่อป้องกันการเดือดและกระเด็น

ยืนห่างจากเตาอบประมาณหนึ่งช่วงแขนเมื่อเปิดประตู เพื่อป้องกันไอน้ำหรืออากาศร้อนลวก

MG23T5018CC_ST_DE68-04594R-00_TH.indd 7 18/6/2021 8:01:21 AM

คำแนะนำเพื่อความปลอดภัย

ห้ามใช้งานเตาอบเมื่อไม่มีอาหารอยู่ภายในเตา เตาอบจะปิดลงโดยอัตโนมัติหลังจากผ่านไป 30 นาทีเพื่อความปลอดภัย ขอแนะนำให้วางแก้วน้ำไว้ภายในเตาอบตลอดเวลาเพื่อดูดซับพลังงานไมโครเวฟ ในกรณีที่เตาอบทำงานโดยไม่ได้ตั้งใจ

ติดตั้งเตาอบตามระยะห่างในคู่มือนี้ (ดูที่การติดตั้งเตาไมโครเวฟ)

โปรดใช้ความระมัดระวังเมื่อต่ออุปกรณ์ไฟฟ้าเข้ากับเต้าเสียบใกล้เตาอบ

ข้อควรระวังสำหรับการใช้งานไมโครเวฟ

หากไม่ปฏิบัติตามข้อควรระวังเพื่อความปลอดภัยต่อไปนี้อาจทำให้ได้รับพลังงานไมโครเวฟที่เป็นอันตราย

- ห้ามใช้เตาอบขณะที่ประตูเปิดอยู่ ห้ามดัดแปลงแก้ไขล็อคเพื่อความปลอดภัย (สลักประตู) ห้ามสอดสิ่งแปลกปลอมในช่องของล็อคเพื่อความปลอดภัย
- ห้ามสอดวัตถุใด ๆ ระหว่างประตูเตาอบกับด้านหน้า หรือปล่อยให้มีอาหารหรือสารทำความสะอาดค้างอยู่ที่ผิวหน้าของซีล โปรดดูแลให้พื้นผิวประตูและซีลขอบประตูสะอาดอยู่เสมอ โดยเช็ดด้วยผ้าหมาดและเช็ดอีกครั้งด้วยผ้านุ่มที่แห้งหลังจากการใช้งานทุกครั้ง
- ห้ามใช้เตาอบหากมีความเสียหายเกิดขึ้น โปรดใช้งานหลังจากได้รับการซ่อมแซมโดยช่างที่มีความชำนาญแล้วเท่านั้น
  สำคัญ: ประตูเตาอบต้องปิดได้อย่างเหมาะสม ประตูเตาอบต้องไม่บิดงอ บานประตูต้องไม่แตกหักหรือหลวม ซีลประตูและพื้นผิวที่ซีลจะต้องไม่เสียหาย
- การปรับเปลี่ยนหรือการซ่อมแซมทั้งหมดต้องดำเนินการโดยช่างที่มีความชำนาญเท่านั้น

การรับประกันอย่างจำกัด

Samsung จะเรียกเก็บค่าบริการซ่อมแซม สำหรับการเปลี่ยนอุปกรณ์เสริมหรือซ่อมจุดบกพร่องที่ไม่ใช่ส่วนสำคัญ ถ้าความเสียหายของอุปกรณ์และ/หรือความเสียหายหรือการสูญเสียอุปกรณ์เสริมนั้นเกิดจากการกระทำของผู้ใช้ รายการที่ครอบคลุมได้แก่:

- ประตู มือจับ แผงด้านนอกหรือแผงควบคุมที่มีรอยบุบ รอยขีดข่วน หรือแตกหัก
- ถาด ล้อเลื่อนนำทาง เฟืองวงแหวนหรือตะแกรงลวดแตกหรือสูญหาย

ใช้เตาอบนี้เพื่อวัตถุประสงค์ที่อธิบายในคู่มือคำแนะนำนี้เท่านั้น คำเตือนและคำแนะนำเพื่อความปลอดภัยในคู่มือนี้ไม่ได้ครอบคลุมถึงสภาวะและสถานการณ์ทั้งหมดที่สามารถเกิดขึ้นได้ คุณมีหน้าที่รับผิดชอบที่จะใช้สามัญสำนึก ความระมัดระวัง และการใส่ใจ เมื่อติดตั้ง บำรุงรักษา และใช้เตาอบ

เนื่องจากคำแนะนำในการใช้งานต่อไปนี้ใช้สำหรับหลายรุ่น ลักษณะของเตาไมโครเวฟของคุณอาจแตกต่างจากที่อธิบายในคู่มือนี้ และสัญญาณคำเตือนบางอย่างอาจไม่มีผล ถ้าคุณมีข้อซักถามหรือข้อกังวลใด โปรดติดต่อศูนย์บริการของ Samsung ที่อยู่ใกล้บ้าน หรือหาความช่วยเหลือและข้อมูลออนไลน์ได้ที่ www.samsung.com

โปรดใช้เตาอบนี้เพื่อให้ความร้อนอาหารเท่านั้น ใช้สำหรับการใช้งานภายในครัวเรือนเท่านั้น ห้ามให้ความร้อนกับผ้าทุกประเภทหรือเบาะที่มีไส้ซึ่งอาจลุกไหม้ได้ ผู้ผลิตไม่มีส่วนรับผิดต่อความเสียหายที่เกิดจากการใช้เตาอบอย่างไม่ถูกต้องหรือไม่เหมาะสม


เพื่อป้องกันไม่ให้พื้นผิวของเตาอบเกิดความเสียหายและเกิดอันตราย โปรดดูแลรักษาให้เตาอบสะอาดอยู่เสมอ

MG23T5018CC_ST_DE68-04594R-00_TH.indd 8 18/6/2021 8:01:21 AM


การติดตั้ง

อุปกรณ์เสริม


คุณจะได้รับอุปกรณ์เสริมหลายชนิด เพื่อนำมาใช้ร่วมกับเตาอบ โดยขึ้นอยู่กับรุ่นที่คุณซื้อ

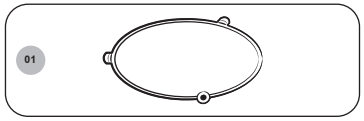


01 **วงแหวน** สำหรับวางไว้บริเวณส่วนกลางของเตาอบ
วงแหวนนี้จะรองรับน้ำหนักของจานหมุน

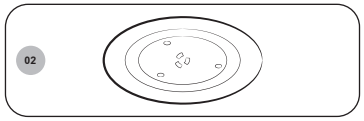

02 **จานหมุน** สำหรับวางเหนือวงแหวน โดยให้ส่วนกลางสวมพอดีกับเฟือง
จานหมุนทำหน้าที่เป็นพื้นที่หลักสำหรับอบอาหาร และสามารถถอดออกทำความสะอาดได้ง่าย

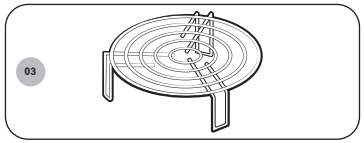

03 **ตะแกรงย่าง** สำหรับวางเหนือจานหมุน
ใช้ตะแกรงโลหะในการย่างและการทำอาหารแบบผสมผสานได้

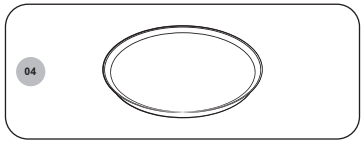


04 **จานอบเกรียม** ดูที่หน้า **27** ถึง
จานอบเกรียมใช้สำหรับอบอาหารให้เกรียมได้ดีขึ้นในโหมดการทำอาหารผสมแบบไมโครเวฟหรือย่าง เพื่อช่วยให้ขนมอบและแป้งพิซซ่ายังคงความกรุบกรอบ

⚠ ข้อควรระวัง

ห้ามใช้ไมโครเวฟหากไม่มีวงแหวนและจานหมุน


สถานที่ติดตั้ง

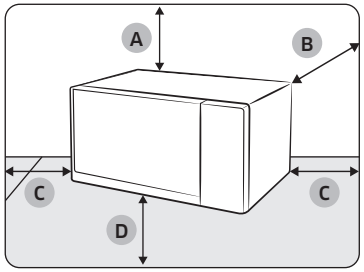

A. 20 ซม. ด้านบน
B. 10 ซม. ด้านหลัง
C. 10 ซม. ด้านข้าง
D. 85 ซม. จากพื้น

- เลือกพื้นผิวที่เรียบและได้ระดับอยู่เหนือพื้นประมาณ 85 ซม. พื้นผิวต้องรองรับน้ำหนักของเตาไมโครเวฟได้
- เพื่อให้ระบายอากาศได้ดี โปรดเว้นช่องว่างเหนือเตาไมโครเวฟ 20 ซม. และ 10 ซม. สำหรับด้านซ้าย/ด้านขวา/ด้านหลัง
- ห้ามติดตั้งเตาไมโครเวฟในบริเวณที่มีความร้อนและความชื้นสูง เช่น ถัดจากเตาไมโครเวฟหรือเครื่องทำความร้อนอื่น ๆ
- โปรดปฏิบัติตามข้อกำหนดของอุปกรณ์จ่ายไฟของเตาไมโครเวฟ ใช้สายสำหรับต่อที่ได้รับการรับรองเท่านั้น
- เช็ดพื้นที่ภายในและซีลประตูด้วยผ้าหมาด ก่อนที่จะใช้เตาไมโครเวฟเป็นครั้งแรก

จานหมุน

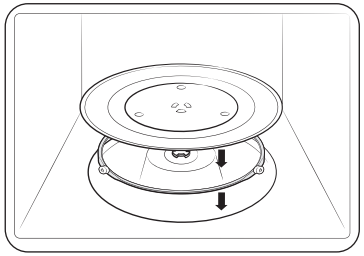

นำวัสดุบรรจุภัณฑ์ทั้งหมดออกจากภายในเตาไมโครเวฟ ติดตั้งวงแหวนและจานหมุน ทดลองว่าจานสามารถหมุนได้อย่างอิสระ

MG23T5018CC_ST_DE68-04594R-00_TH.indd 9 18/6/2021 8:01:22 AM

การบำรุงรักษา

การทำความสะอาด

ทำความสะอาดเตาไมโครเวฟเป็นประจำเพื่อป้องกันสิ่งสกปรกจับตัวที่บนหรือด้านในเตาไมโครเวฟ และโปรดให้การดูแลเป็นพิเศษสำหรับประตู ซีลประตู รวมทั้งจานหมุนและวงแหวน (เฉพาะรุ่นที่มีให้เท่านั้น)
ถ้าไม่สามารถเปิดหรือปิดประตูได้อย่างสะดวก โปรดตรวจสอบว่าซีลประตูมีสิ่งสกปรกจับตัวอยู่หรือไม่ ให้ใช้ผ้านุ่มชุบน้ำยาล้างจานในการทำความสะอาดทั้งด้านในและด้านนอกเตาไมโครเวฟ ล้างให้สะอาดและเช็ดให้แห้ง

วิธีการขจัดสิ่งสกปรกภายในเตาไมโครเวฟที่มีกลิ่นเหม็นและล้างออกยาก

1. ในขณะที่เตาไมโครเวฟว่าง ให้วางถ้วยน้ำมะนาวเจือจางที่กึ่งกลางจานหมุน
2. อบเตาไมโครเวฟเป็นเวลา 10 นาที โดยใช้พลังงานสูงสุด
3. เมื่อหมดเวลา ให้รอจนกว่าเตาไมโครเวฟจะเย็นลง จากนั้นให้เปิดประตูแล้วทำความสะอาดช่องที่ใช้บ่อยอาหาร

⚠ ข้อควรระวัง

- ดูแลประตูและซีลประตูให้สะอาดอยู่เสมอ และตรวจสอบว่าประตูสามารถเปิดและปิดได้สะดวก มิฉะนั้นอาจทำให้อายุการใช้งานเตาไมโครเวฟสั้นลง
- โปรดระวังอย่าให้น้ำกระเซ็นลงไปในช่องระบายอากาศของเตาไมโครเวฟ
- ห้ามใช้สารที่มีฤทธิ์ขัดถูหรือสารเคมีในการทำความสะอาด
- หลังจากใช้งานเตาไมโครเวฟทุกครั้ง ให้ใช้น้ำยาล้างอ่อน ๆ เพื่อทำความสะอาดช่องภายใน หลังจากรอให้เตาไมโครเวฟเย็นลงแล้ว

การเปลี่ยนชิ้นส่วน (ซ่อมแซม)

⚠ คำเตือน

เตาไมโครเวฟนี้ไม่มีชิ้นส่วนใดที่ผู้ใช้สามารถนำออกได้ โปรดอย่าเปลี่ยนชิ้นส่วนหรือซ่อมแซมเตาไมโครเวฟด้วยตนเอง

- ถ้าคุณพบปัญหาที่บริเวณบานพับ ซีลและ/หรือประตู โปรดติดต่อช่างที่มีประสบการณ์หรือศูนย์บริการของ Samsung ที่อยู่ใกล้บ้านเพื่อรับความช่วยเหลือด้านเทคนิค
- ถ้าคุณต้องการเปลี่ยนหลอดไฟ โปรดติดต่อศูนย์บริการของ Samsung ที่อยู่ใกล้บ้าน โปรดอย่าเปลี่ยนชิ้นส่วนด้วยตนเอง
- ถ้าคุณพบปัญหาที่บริเวณตัวเครื่องด้านนอกเตาไมโครเวฟ ให้ถอดสายไฟออกจากแหล่งพลังงาน แล้วติดต่อศูนย์บริการของ Samsung ที่อยู่ใกล้บ้าน


การดูแลเมื่อไม่ได้ใช้งานเป็นเวลานาน

ถ้าคุณไม่ได้ใช้งานเตาไมโครเวฟเป็นระยะเวลานาน ให้ถอดปลั๊กไฟออกและเคลื่อนย้ายเตาไมโครเวฟไปไว้ในที่แห้งและไม่มีฝุ่น ฝุ่นและความชื้นที่ก่อตัวภายในเตาไมโครเวฟอาจมีผลต่อประสิทธิภาพของเตาไมโครเวฟ

MG23T5018CC_ST_DE68-04594R-00_TH.indd 10 18/6/2021 8:01:22 AM


คุณสมบัติของเตาไมโครเวฟ

เตาไมโครเวฟ

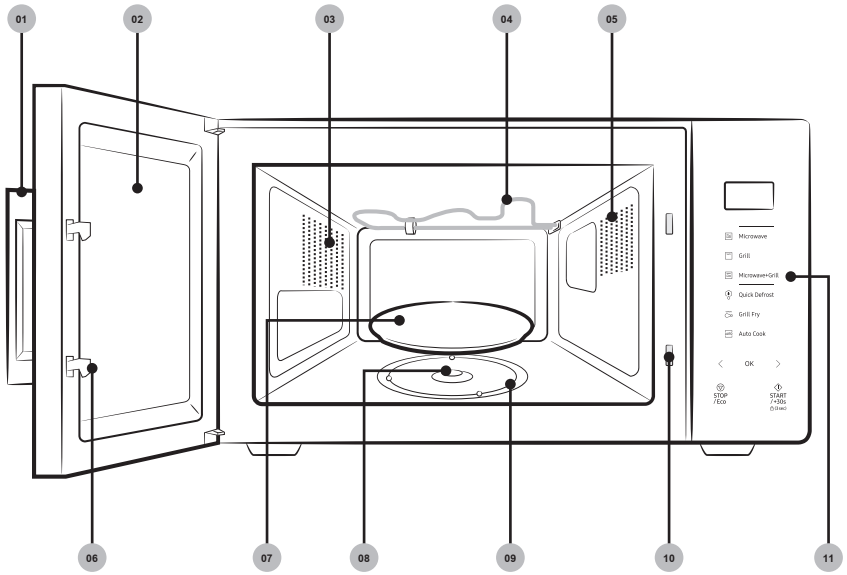

01 ด้ามจับประตู
02 ประตู
03 ช่องระบายอากาศ
04 ขดลวดความร้อน
05 ไฟ
06 สลักประตู
07 จานหมุน
08 เฟืองหมุน
09 วงแหวน
10 ช่องล็อคเพื่อความปลอดภัย
11 แผงควบคุม

แผงควบคุม

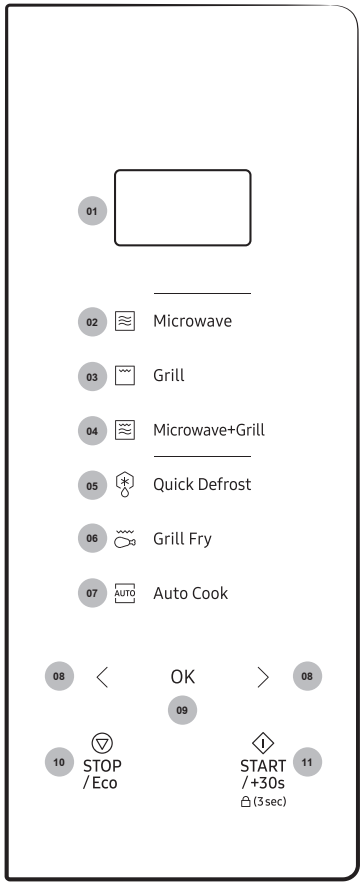

01 หน้าจอ
02 ไมโครเวฟ
03 ย่าง
04 ไมโครเวฟ+ย่าง
05 ละลายน้ำแข็ง
06 ย่างทอด
07 เมนูอัตโนมัติ
08 ลด/เพิ่ม (น้ำหนัก/หน่วยบริโภค/เวลา)
09 ตกลง (นาฬิกา)
10 หยุด/ประหยัดพลังงาน
11 เริ่ม/+30 วิ (ล็อคป้องกันเด็ก)

MG23T5018CC_ST_DE68-04594R-00_TH.indd 11 18/6/2021 8:01:22 AM


การใช้งานเตาไมโครเวฟ

เตาไมโครเวฟทำงานอย่างไร

ไมโครเวฟเป็นคลื่นแม่เหล็กไฟฟ้าที่มีความถี่สูง พลังงานที่ปล่อยออกมาทำให้อาหารสุกหรือร้อนขึ้น โดยไม่มีการเปลี่ยนรูปร่างหรือสี
คุณสามารถใช้เตาไมโครเวฟเพื่อ:

- ละลายน้ำแข็ง
- อุ่นอาหาร
- อบอาหาร

หลักการอบอาหาร

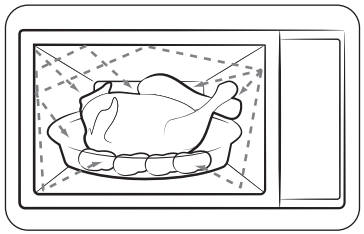

1. ไมโครเวฟที่เกิดจากแม็กเนตรอนจะสะท้อนอยู่ในช่องเตาอบ และกระจายอย่างเป็นระเบียบ ในขณะที่อาหารหมุนอยู่บนจานหมุน ทำให้อาหารสุกทั่วถึงกัน
2. อาหารจะดูดซับไมโครเวฟลึกประมาณ 1 นิ้ว (2.5 ซม.) จากนั้นการอบอาหารจะเกิดขึ้นต่อไป เมื่อมีการถ่ายเทความร้อนภายในอาหาร
3. เวลาในการอบอาหารจะขึ้นอยู่กับภาชนะใส่อาหาร และคุณสมบัติของอาหารนั้นๆ:
   - ปริมาณและความหนาแน่น
   - ปริมาณน้ำภายในอาหาร
   - อุณหภูมิเริ่มต้น (มีการแช่เย็นไว้หรือไม่)

หมายเหตุ

เนื่องจากส่วนกลางของอาหารสุกจากการถ่ายเทความร้อน การอบอาหารจึงเกิดขึ้นแม้ว่าคุณจะนำอาหารออกจากเตาไมโครเวฟแล้วก็ตาม
ดังนั้น โปรดปฏิบัติตามเวลาพักที่แนะนำในตำราอาหารและในคู่มือนี้เพื่อให้:

- อาหารสุกทั่วถึงกันจนถึงด้านใน
- อาหารมีอุณหภูมิเท่ากันทั้งหมด

การตรวจสอบว่าเตาไมโครเวฟของคุณทำงานอย่างถูกต้อง

กระบวนการง่าย ๆ ต่อไปนี้ช่วยให้คุณสามารถตรวจสอบว่าเตาไมโครเวฟของคุณทำงานถูกต้องอยู่เสมอ
หากพบปัญหา โปรดดูที่หัวข้อ "**การแก้ไขปัญหา**" ในหน้า **39** ถึง

หมายเหตุ

เตาไมโครเวฟจะต้องต่อเข้ากับปลั๊กไฟที่ผนังอย่างถูกต้อง ต้องวางจานหมุนในเตาไมโครเวฟ ถ้ามีการใช้ระดับพลังงานที่ไม่ใช่ระดับสูงสุด (100 % - 800 วัตต์) น้ำจะใช้เวลาเดือดนานขึ้น



1. ดึงด้ามจับเพื่อเปิดประตูเตาไมโครเวฟ
2. วางแก้วเติมน้ำไว้บนจานหมุน แล้วปิดประตู
3. กด**ไมโครเวฟ**



4. กด**เริ่ม/+30 วิ** ซ้ำ ๆ เพื่อตั้งเวลาเป็น 4 หรือ 5 นาที
5. เตาไมโครเวฟจะอุ่นน้ำตามเวลาที่กำหนด ตรวจสอบให้แน่ใจว่าน้ำเดือด


MG23T5018CC_ST_DE68-04594R-00_TH.indd 12 18/6/2021 8:01:23 AM

การอบ/อุ่นอาหาร

ขั้นตอนต่อไปนี้กล่าวถึงการอบและการอุ่นอาหาร

⚠ ข้อควรระวัง

โปรดตรวจสอบการตั้งค่าการอบอาหารทุกครั้ง ก่อนที่จะปล่อยให้เตาไมโครเวฟทำงานตามลำพัง

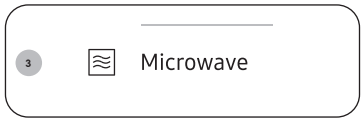

1. ดึงด้ามจับเพื่อเปิดประตูเตาไมโครเวฟ
2. วางอาหารที่ส่วนกลางของจานหมุนและปิดประตู


⚠ ข้อควรระวัง

ห้ามใช้งานเตาไมโครเวฟเมื่อไม่มีอาหารอยู่ภายในเตา

3. กด**ไมโครเวฟ**
   - หน้าจอแผงควบคุมแสดงไอคอนที่เกี่ยวข้อง (≋) และระดับพลังงานสูงสุด (800 วัตต์)



4. กด **<** หรือ **>** (**ลด/เพิ่ม**) เพื่อเลือกระดับพลังงานที่ต้องการ จากนั้นกด **ตกลง**
   - โปรดดูระดับพลังงานที่เหมาะสมได้ที่หัวข้อ "**ระดับพลังงานและการปรับเวลา**" ในหน้า **14**

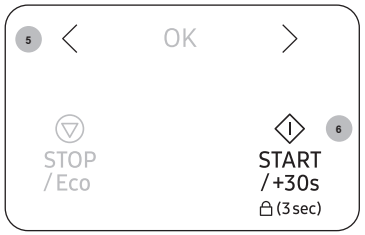

5. กด **<** หรือ **>** (**ลด/เพิ่ม**) เพื่อตั้งเวลาอบอาหารตามที่ต้องการ
   - หน้าจอแผงควบคุมแสดงเวลาอบอาหาร
6. กด**เริ่ม/+30 วิ** เพื่อเริ่มอบอาหาร
   - ไฟจะสว่างขึ้นและจานหมุนจะเริ่มหมุน
   - เมื่ออบอาหารเรียบร้อยแล้ว เตาไมโครเวฟจะมีเสียงบี๊บดังขึ้น 4 ครั้ง จากนั้นหน้าจอแผงควบคุมจะแสดงเวลาในปัจจุบัน จากนั้นสัญญาณเตือนการอบอาหารสิ้นสุดจะเตือนด้วยเสียงบี๊บหนึ่งครั้งทุกนาทีเป็นจำนวน 3 ครั้ง

MG23T5018CC_ST_DE68-04594R-00_TH.indd 13 18/6/2021 8:01:23 AM

การใช้งานเตาไมโครเวฟ

การตั้งเวลา

เมื่อมีการจ่ายไฟจะมีสัญญาณ "88:88" และจากนั้นเป็น "12:00" ปรากฏบนหน้าจอแสดงผลโดยอัตโนมัติ โปรดตั้งเวลาปัจจุบัน ซึ่งสามารถแสดงเวลาในระบบ 24 หรือ 12 ชั่วโมง คุณจะต้องตั้งเวลาของนาฬิกา:

- เมื่อติดตั้งเตาไมโครเวฟเป็นครั้งแรก
- หลังจากไฟฟ้าดับ

หมายเหตุ

หากต้องการปรับใช้เวลาออมแสง คุณต้องเปลี่ยนเวลาด้วยตนเอง



1. กด**ตกลง**



2. กด **<** หรือ **>** (**ลด/เพิ่ม**) เพื่อเลือกเวลาในระบบ 24 หรือ 12 ชั่วโมง จากนั้นกด**ตกลง**
3. กด **<** หรือ **>** (**ลด/เพิ่ม**) เพื่อตั้งชั่วโมง จากนั้นกด**ตกลง**
4. กด **<** หรือ **>** (**ลด/เพิ่ม**) เพื่อตั้งนาที จากนั้นกด**ตกลง**

หมายเหตุ

หน้าจอแผงควบคุมจะแสดงเวลาในระหว่างที่ไม่มีการใช้งานไมโครเวฟ

ระดับพลังงานและการปรับเวลา

ฟังก์ชั่นระดับพลังงานช่วยให้คุณสามารถปรับปริมาณพลังงานที่จะใช้ พร้อมทั้งเวลาที่ใช้ในการอบหรืออุ่นอาหาร ตามชนิดและปริมาณของอาหารนั้น คุณสามารถเลือกระดับพลังงานได้ถึงหกระดับ

ระดับพลังงาน	เปอร์เซ็นต์	กำลังไฟฟ้า
สูง	100 %	800 วัตต์
สูงปานกลาง	75 %	600 วัตต์
ปานกลาง	56 %	450 วัตต์
ต่ำปานกลาง	38 %	300 วัตต์
ละลายน้ำแข็ง	23 %	180 วัตต์
ต่ำ	13 %	100 วัตต์

เวลาอบอาหารที่ระบุในตำราอาหารและในคู่มือนี้จะสอดคล้องกับระดับพลังงานที่ระบุไว้

- เวลาอบอาหารจะลดลง หากคุณเลือกระดับพลังงานที่สูงขึ้น
- เวลาอบอาหารจะเพิ่มขึ้น หากคุณเลือกระดับพลังงานที่ต่ำลง

MG23T5018CC_ST_DE68-04594R-00_TH.indd 14 18/6/2021 8:01:23 AM

การปรับเวลาอบอาหาร

คุณสามารถเพิ่มหรือลดเวลาอบอาหารได้ในระหว่างที่เตาไมโครเวฟกำลังอบอาหาร

- ดูความคืบหน้าของการอบเมื่อใดก็ได้ โดยเปิดประตูเตาอบ แล้วเพิ่มหรือลดเวลาอบอาหารหากจำเป็น




วิธีที่ 1

กด**เริ่ม/+30 วิ** เพื่อเพิ่มเวลาอบอาหารทีละ 30 วินาที

- ตัวอย่าง: หากต้องการเพิ่มเวลาอบอีกสามนาที ให้กด**เริ่ม/+30 วิ** หกครั้ง

หมายเหตุ

คุณสามารถเพิ่มเวลาอบอาหารได้เท่านั้น

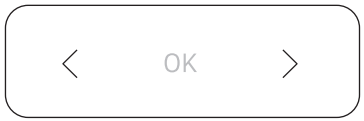

วิธีที่ 2

กด **<** หรือ **>** **(ลด/เพิ่ม)** เพื่อปรับเวลาอบอาหาร

การหยุดการอบอาหาร

คุณสามารถหยุดการอบอาหารได้ตลอดเวลาเพื่อ:

- ตรวจดูอาหาร
- พลิกด้านหรือคนอาหาร
- พักอาหาร

ในการหยุดการอบอาหารชั่วคราว

1. เปิดประตูหรือกด**หยุด/ประหยัดพลังงาน**หนึ่งครั้ง
   - การอบจะหยุดลงชั่วคราว
2. หากต้องการอบอาหารต่อ ให้ปิดประตูเตาอบ แล้วกด**เริ่ม/+30 วิ**

ในการหยุดการอบอาหารโดยสมบูรณ์

1. เปิดประตูหรือกด**หยุด/ประหยัดพลังงาน**หนึ่งครั้ง
   - การอบจะหยุดลงชั่วคราว
2. กด**หยุด/ประหยัดพลังงาน**หนึ่งครั้ง

การตั้งค่าโหมดประหยัดพลังงาน

เตาไมโครเวฟมีโหมดประหยัดพลังงาน



- กด**หยุด/ประหยัดพลังงาน** ระบบจะปิดหน้าจอแผงควบคุม
- หากต้องการยกเลิกโหมดประหยัดพลังงาน ให้เปิดประตูเตาอบหรือกด **หยุด/ประหยัดพลังงาน** หน้าจอแผงควบคุมแสดงเวลาปัจจุบัน

หมายเหตุ

ฟังก์ชั่นประหยัดพลังงานอัตโนมัติ

เตาไมโครเวฟจะเปลี่ยนกลับไปอยู่ในสถานะสแตนด์บาย หากไม่มีการป้อนข้อมูลนาน 25 นาทีในระหว่างการตั้งค่า หรือในระหว่างที่หยุดการทำงานไว้ชั่วคราว นอกจากนี้ หากคุณเปิดประตูเตาไมโครเวฟทิ้งไว้ ไฟภายในจะปิดโดยอัตโนมัติหลังจากนั้น 5 นาที

การใช้การละลายน้ำแข็ง

คุณสมบัติละลายน้ำแข็งช่วยให้คุณละลายเนื้อ ไก่ ปลา ขนมปัง เค้ก หรือผลไม้ที่แช่แข็งไว้ได้ เวลาและระดับพลังงานจะถูกกำหนดโดยอัตโนมัติ คุณเพียงแต่เลือกโปรแกรมและน้ำหนักเท่านั้น

หมายเหตุ

โปรดใช้ภาชนะที่ระบุว่าใช้กับไมโครเวฟได้เท่านั้น

เปิดประตู วางอาหารแช่แข็งบนภาชนะเซรามิกไว้บนส่วนกลางของจานหมุน
ปิดประตู



1. ดึงด้ามจับเพื่อเปิดประตูเตาไมโครเวฟ
2. วางอาหารที่ส่วนกลางของจานหมุนและปิดประตู
3. กด**ละลายน้ำแข็ง**

MG23T5018CC_ST_DE68-04594R-00_TH.indd 15 18/6/2021 8:01:24 AM

การใช้งานเตาไมโครเวฟ





4. กด **<** หรือ **>** **(ลด/เพิ่ม)** เพื่อเลือกประเภทอาหาร จากนั้นกด**ตกลง**
   - ดูข้อมูลเพิ่มเติมได้ที่หัวข้อ "**คำอธิบายโปรแกรมละลายน้ำแข็ง**" ในหน้า **16**
5. กด **<** หรือ **>** **(ลด/เพิ่ม)** เพื่อตั้งหน่วยบริโภค จากนั้นกด**ตกลง**
6. กด**เริ่ม/+30 วิ** เพื่อเริ่มละลายน้ำแข็ง
   - เมื่อได้ยินเสียงบี๊บจากเตาไมโครเวฟ ให้เปิดประตูเตาแล้วพลิกอาหาร
7. ปิดประตูเตา แล้วกด**เริ่ม/+30 วิ** เพื่อละลายน้ำแข็งต่อ
   - เมื่อละลายน้ำแข็งเรียบร้อยแล้ว เตาไมโครเวฟจะมีเสียงบี๊บดังขึ้น 4 ครั้ง จากนั้นหน้าจอแผงควบคุมจะแสดงเวลาในปัจจุบัน จากนั้นสัญญาณเตือนการอบอาหารสิ้นสุดจะเตือนด้วยเสียงบี๊บหนึ่งครั้งทุกนาทีเป็นจำนวน 3 ครั้ง

คำอธิบายโปรแกรมละลายน้ำแข็ง

ตารางต่อไปนี้แสดงโปรแกรมละลายน้ำแข็งแบบต่างๆ รวมทั้งปริมาณเวลาพักอาหารและคำแนะนำที่เหมาะสม โปรดนำบรรจุภัณฑ์ออกจากอาหารก่อนที่จะละลายน้ำแข็ง วางเนื้อ เนื้อไก่ ปลา และขนมปัง/เค้กในจานแก้วกันแบนหรือจานกระเบื้อง

รหัส	อาหาร	ปริมาณอาหาร	คำแนะนำ
1	เนื้อวัว	200-1500 กรัม	หุ้มส่วนขอบด้วยฟอยล์อะลูมิเนียม กลับเนื้อเมื่อได้ยินเสียงจากเตาอบ โปรแกรมนี้เหมาะสำหรับเนื้อ เนื้อแกะ หมูสเต็ก เนื้อเป็นชิ้น เนื้อสับ พักอาหารเป็นเวลา 20-60 นาที
2	เนื้อไก่	200-1500 กรัม	หุ้มขาและปลายปีกด้วยฟอยล์อะลูมิเนียม กลับชิ้นไก่เมื่อได้ยินเสียงจากเตาอบ โปรแกรมนี้เหมาะสำหรับไก่ทั้งตัวหรือไก่ที่หั่นเป็นชิ้น พักอาหารเป็นเวลา 20-60 นาที
3	เนื้อปลา	200-1500 กรัม	หุ้มส่วนหางของปลาที่ยังไม่หั่นด้วยฟอยล์อะลูมิเนียม กลับชิ้นปลาเมื่อได้ยินเสียงจากเตาอบ โปรแกรมนี้เหมาะสำหรับปลาทั้งตัวหรือปลาชิ้น พักอาหารเป็นเวลา 20-60 นาที
4	ผักแช่แข็ง	200-1500 กรัม	วางผักแช่แข็งให้เสมอกันในจานแก้วกันแบน กลับหรือคนผักแช่แข็งเมื่อได้ยินเสียงจากเตาอบ โปรแกรมนี้เหมาะกับผักแช่แข็งทุกประเภท พักอาหารเป็นเวลา 5-20 นาที

MG23T5018CC_ST_DE68-04594R-00_TH.indd 16 18/6/2021 8:01:24 AM

รหัส	อาหาร	ปริมาณอาหาร	คำแนะนำ
5	ขนมปัง	200-1500 กรัม	วางขนมปังแนวนอนบนกระดาษอเนกประสงค์และกลับด้านเมื่อมีเสียงเตือน วางเค้กบนจานกระเบื้อง และพลิกกลับด้านเมื่อได้ยินเสียงสัญญาณจากเตาอบ โปรแกรมนี้เหมาะสำหรับขนมปังทุกประเภท ไม่ว่าจะเป็นแบบตัดหรือทั้งก้อน เช่นเดียวกับขนมปังก้อนและแท่งแบบฝรั่งเศส วางก้อนขนมปังเป็นวงกลม โปรแกรมนี้เหมาะกับยีสต์ เค้ก บิสกิต ชีสเค้ก และพัฟทุกประเภท แต่ไม่เหมาะสำหรับขนมพาสทรีแบบชอตหรือครัสต์ เค้กผลไม้หรือครีม รวมทั้งเค้กราดช็อกโกแลต พักอาหารเป็นเวลา 10-30 นาที

การใช้งานย่างทอด

การย่างทอดมีการตั้งค่าการปรุงอาหารที่กำหนดไว้แล้ว 15 รายการ โดยคุณไม่จำเป็นต้องตั้งเวลาอบหรือระดับพลังงานอีก

⚠ ข้อควรระวัง

โปรดใช้ภาชนะที่ระบุว่าใช้กับไมโครเวฟได้เท่านั้น



1. ดึงด้ามจับเพื่อเปิดประตูเตาไมโครเวฟ
2. วางอาหารที่ส่วนกลางของจานหมุนและปิดประตู
3. กด**ย่างทอด**



4. กด **<** หรือ **>** (**ลด/เพิ่ม**) เพื่อเลือกประเภทอาหาร จากนั้นกด**ตกลง**
   - ดูข้อมูลเพิ่มเติมได้ที่หัวข้อ "**คำอธิบายโปรแกรมย่างทอด**" ในหน้า **18** ถึง **19**



5. กด**เริ่ม/+30 วิ** เพื่อเริ่มย่างทอด
   - เตาไมโครเวฟจะอบอาหารตามที่คุณเลือกในการตั้งค่าโปรแกรมที่กำหนดไว้แล้ว
   - เมื่ออบอาหารเรียบร้อยแล้ว เตาไมโครเวฟจะมีเสียงบี๊บดังขึ้น 4 ครั้ง จากนั้นหน้าจอแผงควบคุมจะแสดงเวลาในปัจจุบัน จากนั้นสัญญาณเตือนการอบอาหารสิ้นสุดจะเตือนด้วยเสียงบี๊บหนึ่งครั้งทุกนาทีเป็นจำนวน 3 ครั้ง

MG23T5018CC_ST_DE68-04594R-00_TH.indd 17 18/6/2021 8:01:24 AM

การใช้งานเตาไมโครเวฟ

คำอธิบายโปรแกรมย่างทอด

รหัส	อาหาร	ปริมาณอาหาร	คำแนะนำ
1	เฟรนช์ฟรายแช่แข็ง	400 กรัม	วางเฟรนช์ฟรายแช่แข็งบนจานอบเกรียมพร้อมตะแกรง วางไว้ในเตาไมโครเวฟ เลือกโปรแกรมย่างทอด [1] แล้วกดปุ่ม**เริ่ม/+30 วิ** หลังจากปรุงเสร็จ พักอาหารเป็นเวลา 2-3 นาที
2	หมูทอดแช่แข็ง	500 กรัม	วางหมูทอดแช่แข็งบนจานอบเกรียมพร้อมตะแกรง วางไว้ในเตาไมโครเวฟ เลือกโปรแกรมย่างทอด [2] แล้วกดปุ่ม**เริ่ม/+30 วิ** เมื่อได้ยินเสียงบิ๊บ ให้พลิกอาหารแล้วกด**เริ่ม/+30 วิ** เพื่ออบต่อ หลังจากปรุงเสร็จ พักอาหารเป็นเวลา 2-3 นาที
3	นักเก็ตไก่แช่แข็ง	350 กรัม	วางนักเก็ตไก่แช่แข็งบนจานอบเกรียมพร้อมตะแกรง วางไว้ในเตาไมโครเวฟ เลือกโปรแกรมย่างทอด [3] แล้วกดปุ่ม**เริ่ม/+30 วิ** หลังจากปรุงเสร็จ พักอาหารเป็นเวลา 2-3 นาที
4	ครอกเก้มันฝรั่งแช่แข็ง	350 กรัม	วางครอกเก้มันฝรั่งแช่แข็งบนจานอบเกรียมพร้อมตะแกรง วางไว้ในเตาไมโครเวฟ เลือกโปรแกรมย่างทอด [4] แล้วกดปุ่ม**เริ่ม/+30 วิ** หลังจากปรุงเสร็จ พักอาหารเป็นเวลา 2-3 นาที
5	คอร์นด็อกแช่แข็ง	450-500 กรัม	วางคอร์นด็อกแช่แข็งบนจานอบเกรียมพร้อมตะแกรง วางไว้ในเตาไมโครเวฟ เลือกโปรแกรมย่างทอด [5] แล้วกดปุ่ม**เริ่ม/+30 วิ** หลังจากปรุงเสร็จ พักอาหารเป็นเวลา 2-3 นาที
6	ปลาทอดแช่แข็ง	300 กรัม	วางปลาทอดแช่แข็งบนจานอบเกรียมพร้อมตะแกรง วางไว้ในเตาไมโครเวฟ เลือกโปรแกรมย่างทอด [6] แล้วกดปุ่ม**เริ่ม/+30 วิ** หลังจากปรุงเสร็จ พักอาหารเป็นเวลา 2-3 นาที
7	ปีกไก่บัฟฟาโลแช่แข็ง	500 กรัม	วางปีกไก่บัฟฟาโลแช่แข็งบนจานอบเกรียมพร้อมตะแกรง วางไว้ในเตาไมโครเวฟ เลือกโปรแกรมย่างทอด [7] แล้วกดปุ่ม**เริ่ม/+30 วิ** หลังจากปรุงเสร็จ พักอาหารเป็นเวลา 2-3 นาที
8	ชีสทอดแช่แข็ง	400 กรัม	วางชีสทอดแช่แข็งบนจานอบเกรียมพร้อมตะแกรง วางไว้ในเตาไมโครเวฟ เลือกโปรแกรมย่างทอด [8] แล้วกดปุ่ม**เริ่ม/+30 วิ** หลังจากปรุงเสร็จ พักอาหารเป็นเวลา 2-3 นาที
9	ชีสสติ๊กแช่แข็ง	300 กรัม	วางชีสสติ๊กแช่แข็งบนจานอบเกรียมพร้อมตะแกรง วางไว้ในเตาไมโครเวฟ เลือกโปรแกรมย่างทอด [9] แล้วกดปุ่ม**เริ่ม/+30 วิ** หลังจากปรุงเสร็จ พักอาหารเป็นเวลา 2-3 นาที

MG23T5018CC_ST_DE68-04594R-00_TH.indd 18 18/6/2021 8:01:24 AM

รหัส	อาหาร	ปริมาณอาหาร	คำแนะนำ
10	ปอเปี๊ยะแช่แข็ง	300 กรัม	ทาน้ำมันเล็กน้อยบนผิวปอเปี๊ยะแช่แข็ง วางปอเปี๊ยะแช่แข็งบนจานอบเกรียมพร้อมตะแกรง วางไว้ในเตาไมโครเวฟ เลือกโปรแกรมย่างทอด [10] แล้วกดปุ่ม**เริ่ม/+30 วิ** เมื่อได้ยินเสียงบี๊บ ให้พลิกอาหารแล้วกด **เริ่ม/+30 วิ** เพื่ออบต่อ หลังจากปรุงเสร็จ พักอาหารเป็นเวลา 2-3 นาที
11	กุ้งชุบเกล็ดขนมปังแช่แข็ง	300 กรัม	ทาน้ำมันเล็กน้อยบนผิวกุ้งชุบเกล็ดขนมปังแช่แข็ง วางกุ้งชุบเกล็ดขนมปังแช่แข็งบนจานอบเกรียมพร้อมตะแกรง วางไว้ในเตาไมโครเวฟ เลือกโปรแกรมย่างทอด [11] แล้วกดปุ่ม**เริ่ม/+30 วิ** เมื่อได้ยินเสียงบี๊บ ให้พลิกอาหารแล้วกด**เริ่ม/+30 วิ** เพื่ออบต่อ หลังจากปรุงเสร็จ พักอาหารเป็นเวลา 2-3 นาที
12	หัวหอมแช่แข็ง	300 กรัม	วางหัวหอมแช่แข็งบนจานอบเกรียมพร้อมตะแกรง วางไว้ในเตาไมโครเวฟ เลือกโปรแกรมย่างทอด [12] แล้วกดปุ่ม**เริ่ม/+30 วิ** หลังจากปรุงเสร็จ พักอาหารเป็นเวลา 2-3 นาที
13	มันฝรั่งแช่แข็ง	350 กรัม	วางมันฝรั่งแช่แข็งบนจานอบเกรียมพร้อมตะแกรง วางไว้ในเตาไมโครเวฟ เลือกโปรแกรมย่างทอด [13] แล้วกดปุ่ม**เริ่ม/+30 วิ** หลังจากปรุงเสร็จ พักอาหารเป็นเวลา 2-3 นาที

รหัส	อาหาร	ปริมาณอาหาร	คำแนะนำ
14	น่องไก่	500 กรัม	ทาน้ำมันเล็กน้อยบนผิวน่องไก่ ใส่เครื่องปรุงรสตามความชอบ วางน่องไก่บนจานอบเกรียมพร้อมตะแกรง วางไว้ในเตาไมโครเวฟ เลือกโปรแกรมย่างทอด [14] แล้วกดปุ่ม**เริ่ม/+30 วิ** หลังจากปรุงเสร็จ พักอาหารเป็นเวลา 2-3 นาที
15	ปีกไก่	500 กรัม	ทาน้ำมันเล็กน้อยบนผิวปีกไก่ ใส่เครื่องปรุงรสตามความชอบ วางปีกไก่บนจานอบเกรียมพร้อมตะแกรง วางไว้ในเตาไมโครเวฟ เลือกโปรแกรมย่างทอด [15] แล้วกดปุ่ม**เริ่ม/+30 วิ** หลังจากปรุงเสร็จ พักอาหารเป็นเวลา 2-3 นาที

MG23T5018CC_ST_DE68-04594R-00_TH.indd 19 18/6/2021 8:01:24 AM

การใช้งานเตาไมโครเวฟ

การใช้เมนูอัตโนมัติ

เมนูอัตโนมัติมีการตั้งค่าการปรุงอาหารที่กำหนดไว้แล้ว 33 รายการ โดยคุณไม่จำเป็นต้องตั้งเวลาอบหรือระดับพลังงานอีก

⚠ ข้อควรระวัง

โปรดใช้ภาชนะที่ระบุว่าใช้กับไมโครเวฟได้เท่านั้น



1. ดึงด้ามจับเพื่อเปิดประตูเตาไมโครเวฟ
2. วางอาหารที่ส่วนกลางของจานหมุนและปิดประตู
3. กด**เมนูอัตโนมัติ**



4. กด **<** หรือ **>** (**ลด/เพิ่ม**) เพื่อเลือกหมวดหมู่ที่ต้องการ จากนั้นกด**ตกลง**
   - 1. เมนูเพื่อสุขภาพ
   - 2. ของหวานโฮมเมด
   - 3. ละลายขนมปังแช่แข็ง
5. กด **<** หรือ **>** (**ลด/เพิ่ม**) เพื่อเลือกประเภทอาหาร จากนั้นกด**ตกลง**
   - ดูข้อมูลเพิ่มเติมได้ที่หัวข้อ "**คำอธิบายโปรแกรมเมนูอัตโนมัติ**" ในหน้า **21** ถึง **25**





6. กด **<** หรือ **>** (**ลด/เพิ่ม**) เพื่อเลือกน้ำหนักอาหาร จากนั้นกด**ตกลง**
   - ดูข้อมูลเพิ่มเติมได้ที่หัวข้อ "**คำอธิบายโปรแกรมเมนูอัตโนมัติ**" ในหน้า **21** ถึง **25**
   - คุณอาจมีตัวเลือกน้ำหนักให้เลือกเพียงรายการเดียว ทั้งนี้จะขึ้นอยู่กับเมนูที่เลือก
   - คุณไม่ต้องเลือกน้ำหนักสำหรับของหวานโฮมเมด
7. กด**เริ่ม/+30 วิ** เพื่อเริ่มเมนูอัตโนมัติ
   - เตาไมโครเวฟจะอบอาหารตามที่คุณเลือกในการตั้งค่าโปรแกรมที่กำหนดไว้แล้ว
   - เมื่ออบอาหารเรียบร้อยแล้ว เตาไมโครเวฟจะมีเสียงบี๊บดังขึ้น 4 ครั้ง จากนั้นหน้าจอแผงควบคุมจะแสดงเวลาในปัจจุบัน จากนั้นสัญญาณเตือนการอบอาหารสิ้นสุดจะเตือนด้วยเสียงบี๊บหนึ่งครั้งทุกนาทีเป็นจำนวน 3 ครั้ง

MG23T5018CC_ST_DE68-04594R-00_TH.indd 20 18/6/2021 8:01:24 AM

ตารางต่อไปนี้เป็นปริมาณอาหารและคำแนะนำที่เหมาะสมสำหรับตัวเลือกการปรุงที่ตั้งโปรแกรมไว้แล้วประมาณ 33 แบบ โปรแกรมที่ตั้งไว้แล้วจะแบ่งออกเป็นเมนูเพื่อสุขภาพและของหวานโฮมเมด

⚠ ข้อควรระวัง

ใช้ถุงมือกันความร้อนเมื่อนำออกจากเตา

คำอธิบายโปรแกรมเมนูอัตโนมัติ

1. เมนูเพื่อสุขภาพ

รหัส	อาหาร	ปริมาณอาหาร	คำแนะนำ
1-1	อาหารพร้อมทาน (แช่แข็ง)	350 กรัม 450 กรัม	วางอาหารในจานกระเบื้อง และปิดด้วยฟิล์มสำหรับไมโครเวฟ โปรแกรมนี้เหมาะกับอาหารชุดที่มีส่วนประกอบสามอย่าง (เช่น เนื้อราดซอส ผัก และเครื่องเคียงเป็นมันฝรั่ง ข้าว หรือพาสต้า) พักอาหารเป็นเวลา 2-3 นาที
1-2	อาหารเจพร้อมทาน (แช่แข็ง)	350 กรัม 450 กรัม	วางอาหารในจานกระเบื้อง และปิดด้วยฟิล์มสำหรับไมโครเวฟ โปรแกรมนี้เหมาะกับอาหารที่มีส่วนประกอบ 2 อย่าง (เช่น สปาเก็ตตี้พร้อมซอสหรือข้าวกับผัก) พักอาหารเป็นเวลา 2-3 นาที
1-3	บร็อคโคลี่	250 กรัม	ล้างทำความสะอาดบร็อคโคลี่ ใส่ให้เสมอกันในชามแก้วที่มีฝาปิด เติมน้ำ 30-45 มล. (2-3 ช้อนโต๊ะ) วางชามตรงกลางของจานหมุน อบโดยปิดฝา คนอาหารหลังการอบ โปรแกรมนี้เหมาะสำหรับบร็อคโคลี่ รวมถึงคอร์เกตต์หั่น มะเขือม่วง ฟักทอง หรือพริกไทย พักอาหารเป็นเวลา 1-2 นาที
1-4	แครอทสไลด์	250 กรัม	ล้างทำความสะอาดแครอท แล้วหั่นเป็นวงเท่า ๆ กัน ใส่ในชามแก้วที่มีฝาปิด เติมน้ำ 30-45 มล. (2-3 ช้อนโต๊ะ) วางชามตรงกลางของจานหมุน อบโดยปิดฝา คนอาหารหลังการอบ โปรแกรมนี้เหมาะสำหรับแครอทสไลด์ รวมถึงดอกกะหล่ำหรือกะหล่ำปมเขียว พักอาหารเป็นเวลา 1-2 นาที
1-5	ถั่วเขียว	250 กรัม	ล้างทำความสะอาดถั่วเขียว ใส่ให้เสมอกันในชามแก้วที่มีฝาปิด เติมน้ำ 30 มล. (1 ช้อนโต๊ะ) ขณะที่ปรุงอาหาร 250 กรัม วางชามตรงกลางของจานหมุน อบโดยปิดฝา คนอาหารหลังการอบ พักอาหารเป็นเวลา 1-2 นาที
1-6	ผักโขม	150 กรัม	ล้างทำความสะอาดผักโขม ใส่ในชามแก้วที่มีฝาปิด อย่าเติมน้ำ วางชามตรงกลางของจานหมุน อบโดยปิดฝา คนอาหารหลังการอบ พักอาหารเป็นเวลา 1-2 นาที
1-7	ข้าวโพดฝัก	250 กรัม	ล้างและทำความสะอาดฝักข้าวโพด แล้ววางในจานแก้วทรงรี ปิดด้วยฟิล์มสำหรับไมโครเวฟและเจาะรูที่ฟิล์ม พักอาหารเป็นเวลา 1-2 นาที

MG23T5018CC_ST_DE68-04594R-00_TH.indd 21 18/6/2021 8:01:24 AM

การใช้งานเตาไมโครเวฟ

รหัส	อาหาร	ปริมาณอาหาร	คำแนะนำ
1-8	มันฝรั่งปอกเปลือก	250 กรัม	ล้างและปอกเปลือกมันฝรั่งและหั่นเป็นชิ้นเท่าๆ กัน ใส่ในชามแก้วที่มีฝาปิด เติมน้ำ 45-60 มล. (3-4 ช้อนโต๊ะ) วางชามตรงกลางของจานหมุน อบโดยปิดฝา พักอาหารเป็นเวลา 2-3 นาที
1-9	ข้าวกล้อง (ข้าวนึ่ง)	125 กรัม	ใช้ชามแก้วขนาดใหญ่ที่ใช้สำหรับเตาอบและมีฝาปิด เติมน้ำเย็นสองเท่าของปริมาณอาหาร (500 มล.) อบโดยปิดฝา คนให้ทั่วก่อนพักอาหารไว้ แล้วเติมเกลือและสมุนไพรต่างๆ พักอาหารเป็นเวลา 5-10 นาที
1-10	มักกะโรนี	125 กรัม	ใช้ชามแก้วขนาดใหญ่ที่ใช้สำหรับเตาอบและมีฝาปิด เติมน้ำร้อน 1 ล. เกลือเล็กน้อย และคนให้ทั่ว อบโดยไม่ปิดฝา คนให้เข้ากัน แล้วพักอาหารไว้ จากนั้นเทน้ำออกให้หมด พักอาหาร 1 นาที
1-11	เมล็ดควินัว	125 กรัม	ใช้ชามแก้วขนาดใหญ่ที่ใช้สำหรับเตาอบและมีฝาปิด เติมน้ำเย็นสองเท่าของปริมาณอาหาร (500 มล.) อบโดยปิดฝา คนให้ทั่วก่อนพักอาหารไว้ แล้วเติมเกลือและสมุนไพรต่างๆ พักอาหารเป็นเวลา 1-3 นาที
1-12	ข้าวสาลีบดบัลเกอร์	125 กรัม	ใช้ชามแก้วขนาดใหญ่ที่ใช้สำหรับเตาอบและมีฝาปิด เติมน้ำเย็นสองเท่าของปริมาณอาหาร (500 มล.) อบโดยปิดฝา คนให้ทั่วก่อนพักอาหารไว้ แล้วเติมเกลือและสมุนไพรต่างๆ พักอาหารเป็นเวลา 2-5 นาที

รหัส	อาหาร	ปริมาณอาหาร	คำแนะนำ
1-13	กราแตงผัก	500 กรัม	วางผัก เช่น มันฝรั่งสไลด์ คอร์เกตต์สไลด์ มะเขือเทศสไลด์ และซอส ลงในจานแก้วไพเร็กซ์ที่มีขนาดเหมาะสม โรยชีสขูดด้านบน วางจานบนตะแกรงย่าง พักอาหารเป็นเวลา 2-3 นาที
1-14	มะเขือเทศย่าง	400 กรัม	ล้างทำความสะอาดมะเขือเทศ หั่นครึ่งและวางบนจานที่ใช้สำหรับเตาอบ โรยชีสขูดด้านบน วางจานบนตะแกรงย่าง พักอาหารเป็นเวลา 1-2 นาที
1-15	อกไก่	300 กรัม (2 ชิ้น)	ล้างชิ้นไก่และวางในจานเซรามิค ปิดด้วยฟิล์มสำหรับไมโครเวฟ เจาะฟิล์ม วางจานบนจานหมุน พักอาหาร 2 นาที
1-16	อกไก่งวง	300 กรัม (2 ชิ้น)	ล้างชิ้นไก่และวางในจานเซรามิค ปิดด้วยฟิล์มสำหรับไมโครเวฟ เจาะฟิล์ม วางจานบนจานหมุน พักอาหาร 2 นาที
1-17	เนื้อปลาสด	300 กรัม (2 ชิ้น)	ล้างปลาและวางในจานเซรามิค เติมน้ำมะนาว 1 ช้อนโต๊ะ ปิดด้วยฟิล์มสำหรับไมโครเวฟ เจาะฟิล์ม วางจานบนจานหมุน พักอาหารเป็นเวลา 1-2 นาที
1-18	เนื้อปลาแซลมอนสด	300 กรัม (2 ชิ้น)	ล้างปลาและวางในจานเซรามิค เติมน้ำมะนาว 1 ช้อนโต๊ะ ปิดด้วยฟิล์มสำหรับไมโครเวฟ เจาะฟิล์ม วางจานบนจานหมุน พักอาหารเป็นเวลา 1-2 นาที

MG23T5018CC_ST_DE68-04594R-00_TH.indd 22 18/6/2021 8:01:24 AM

รหัส	อาหาร	ปริมาณอาหาร	คำแนะนำ
1-19	เนื้อกุ้งสด	250 กรัม	ล้างกุ้งและวางในจานเซรามิค เติมน้ำมะนาว 1 ช้อนโต๊ะ ปิดด้วยฟิล์มสำหรับไมโครเวฟ เจาะฟิล์ม วางจานบนจานหมุน พักอาหารเป็นเวลา 1-2 นาที
1-20	เนื้อปลาเทราท์สด	200 กรัม	วางปลาสด 1-2 ตัวลงบนจานที่ใช้สำหรับเตาไมโครเวฟ เติมเกลือเล็กน้อย น้ำมะนาว 1 ช้อนโต๊ะ และสมุนไพรต่าง ๆ ปิดด้วยฟิล์มสำหรับไมโครเวฟ เจาะฟิล์ม วางจานบนจานหมุน พักอาหาร 2 นาที
1-21	ปลาย่าง	300 กรัม	ใช้แปรงทาน้ำมันบนผิวของปลาทั้งตัว (ปลาเทราต์หรือปลากิลท์เฮด) แล้วใส่สมุนไพรและเครื่องเทศ วางปลาเรียงกัน ในทิศทางเดียวกันบนตะแกรงย่าง พลิกทันทีเมื่อมีเสียงบี๊บดังขึ้น พักอาหาร 3 นาที
1-22	สเต็กปลาแซลมอนย่าง	400 กรัม (สเต็ก 2 ชิ้น)	วางสเต็กปลาให้ทั่วตะแกรงย่าง พลิกทันทีเมื่อมีเสียงบี๊บดังขึ้น พักอาหาร 2 นาที

2. ของหวานโฮมเมด

รหัส	อาหาร	ปริมาณอาหาร	คำแนะนำ
2-1	เค้กวอลนัตปอนด์	สำหรับ 1 หน่วยบริโภค	**ส่วนประกอบ** แป้ง 120 กรัม เนย 150 กรัม น้ำตาลทรายดำ 100 กรัม ไข่ 2 ฟอง วอลนัต (หั่น) 50 กรัม ผงฟู 4 กรัม
	1. ผสมเนยและน้ำตาลทรายดำในชาม **2.** ใส่ไข่แล้วผสมจนเข้ากันดี **3.** ใส่แป้ง ผงฟู และคนต่อไป **4.** ใส่วอลนัตแล้วผสมจนเข้ากันดี **5.** เทส่วนผสมลงในชามแก้วหรือชามพลาสติกทาน้ำมัน **6.** วางชามในเตาไมโครเวฟแล้วเลือกเมนูอัตโนมัติ [2-1] **7.** หลังจากปรุงเสร็จ พักอาหารเป็นเวลา 2-3 นาที		
2-2	ขนมปังกล้วยหอม	สำหรับ 1 หน่วยบริโภค (6 ชิ้น)	**ส่วนประกอบ** กล้วย 3 ลูก แป้งทำแพนเค้ก 120 กรัม นมสด 120 กรัม ไข่ 1 ฟอง มอลต์ไซรัป 2 ช้อนโต๊ะ
	1. หั่นกล้วย **2.** ผสมแป้งทำแพนเค้ก นมสด ไข่ มอลต์ไซรัปในชาม **3.** ใส่กล้วยแล้วผสมจนเข้ากันดี **4.** เทส่วนผสมลงในถ้วยกระดาษ 6 ถ้วย **5.** วางถ้วยกระดาษในเตาไมโครเวฟแล้วเลือกเมนูอัตโนมัติ [2-2] **6.** หลังจากปรุงเสร็จ พักอาหารเป็นเวลา 2-3 นาที		

MG23T5018CC_ST_DE68-04594R-00_TH.indd 23 18/6/2021 8:01:24 AM

การใช้งานเตาไมโครเวฟ

รหัส	อาหาร	ปริมาณอาหาร	คำแนะนำ
2-3	เค้กสปันจ์	สำหรับ 1 หน่วยบริโภค	**ส่วนประกอบ** แป้ง 170 กรัม เนย 50 กรัม น้ำตาล 150 กรัม ไข่ 3 ฟอง ผงฟู 10 กรัม
		1. ผสมเนยและน้ำตาลในชาม 2. ใส่ไข่แล้วผสมจนเข้ากันดี 3. ใส่แป้ง ผงฟู และคนต่อไป 4. เทส่วนผสมลงในชามแก้วหรือชามพลาสติกทาน้ำมัน 5. วางชามในเตาไมโครเวฟแล้วเลือกเมนูอัตโนมัติ [2-3] 6. หลังจากปรุงเสร็จ พักอาหารเป็นเวลา 2-3 นาที	
2-4	บราวนี่	สำหรับ 1 หน่วยบริโภค	**ส่วนประกอบ** แป้ง 90 กรัม เนย (ละลาย) ½ ถ้วย น้ำตาล 230 กรัม ไข่ 2 ฟอง โกโก้ผง 40 กรัม
		1. ผสมเนย ไข่ที่ตีมาแล้ว และน้ำตาลในชาม 2. ใส่แป้ง โกโก้ผง และคนต่อไป 3. เทส่วนผสมลงในชามแก้วหรือชามพลาสติกทาน้ำมัน 4. วางชามในเตาไมโครเวฟแล้วเลือกเมนูอัตโนมัติ [2-4] 5. หลังจากปรุงเสร็จ พักอาหารเป็นเวลา 20-30 นาที	

รหัส	อาหาร	ปริมาณอาหาร	คำแนะนำ
2-5	พุดดิ้งไข่	สำหรับ 1 หน่วยบริโภค (3 ชิ้น)	**ส่วนประกอบ** นมสด 250 กรัม น้ำตาล 40 กรัม ไข่ 2 ฟอง
		1. ตีไข่สองฟองลงในชาม เคล้าเบา ๆ ด้วยตะกร้อมือ โดยให้ปลายตะกร้อสัมผัสกับก้นชามตลอดเวลา เพื่อไม่ให้เกิดฟองมากเกินไป 2. ผสมนมสด น้ำตาลในอีกชาม 3. ขณะที่ใช้ตะกร้อตีส่วนผสม ให้ใส่นมสดลงในไข่ที่ตีจนเข้ากันแล้ว 4. กรองส่วนผสมไข่ด้วยกระชอนละเอียด ใช้ไม้พายขูดก้นตะแกรงออก ใช้ช้อนตักฟองบนผิวออก 5. เทส่วนผสมลงในถ้วยคัสตาร์ด 6. วางถ้วยในเตาไมโครเวฟแล้วเลือกเมนูอัตโนมัติ [2-5] 7. หลังจากปรุงอาหารเสร็จแล้ว ให้นำเข้าตู้เย็น แล้วจึงรับประทาน	
2-6	เค้กช็อกโกแลตถ้วยกาแฟ	สำหรับ 1 หน่วยบริโภค	**ส่วนประกอบ** เนย 30 กรัม น้ำตาล 60 กรัม ไข่ 1 ฟอง เฮฟวี่ครีม 40 กรัม แป้ง 25 กรัม โกโก้ผง 15 กรัม วนิลา 1.5 กรัม เซมิสวีท ช็อกโกแลตชิพส์ 50 กรัม
		1. ผสมเนย ไข่และครีมให้เข้ากันในแก้วมัคจนเข้ากันดี 2. ใส่แป้ง น้ำตาล และคนต่อไป 3. ใส่โกโก้ วานิลา แล้วคนให้เข้ากัน 4. คนในช็อกโกแล็ตชิพส์ 5. วางแก้วมัคในเตาไมโครเวฟแล้วเลือกเมนูอัตโนมัติ [2-6] 6. หลังจากปรุงเสร็จ พักอาหารเป็นเวลา 2-3 นาที	

MG23T5018CC_ST_DE68-04594R-00_TH.indd 24 18/6/2021 8:01:24 AM

รหัส	อาหาร	ปริมาณอาหาร	คำแนะนำ
2-7	เค้กถ้วยกาแฟ	สำหรับ 1 หน่วยบริโภค	**ส่วนประกอบ** เนย 30 กรัม น้ำตาล 60 กรัม ไข่ 1 ฟอง แป้ง 50 กรัม นมสด 30 กรัม วานิลลา 6 กรัม แป้งอัลมอนด์ 3 กรัม ผงฟู 1.5 กรัม
			1. ผสมเนย ไข่ ให้เข้ากันในแก้วมัคจนเข้ากันดี 2. ใส่แป้ง น้ำตาล ผงฟู และคนต่อไป 3. ใส่แป้งอัลมอนด์ วานิลา แล้วคนให้เข้ากัน 4. วางแก้วมัคในเตาไมโครเวฟแล้วเลือกเมนูอัตโนมัติ [2-7] 5. หลังจากปรุงเสร็จ พักอาหารเป็นเวลา 2-3 นาที
2-8	กาแฟลาเต้	สำหรับ 1 หน่วยบริโภค	**ส่วนประกอบ** กาแฟผงสำเร็จรูป 2 กรัม น้ำ 50 กรัม นมสด 125 กรัม
			1. ผสมกาแฟผงและน้ำในแก้วมัค 2. เทนมสดลงในแก้วมัคอีกใบ 3. วางส่วนผสมกาแฟในเตาไมโครเวฟแล้วเลือกเมนูอัตโนมัติ [2-8] 4. นำแก้วมัคออกมา เมื่อมีเสียงบี๊บดังขึ้น 5. วางนมสดในเตาไมโครเวฟ แล้วกดปุ่ม**เริ่ม/+30 วิ** 6. หลังจากปรุงเสร็จ ผสมให้เข้ากันดีแล้วจึงรับประทาน
2-9	ชาเขียวลาเต้	สำหรับ 1 หน่วยบริโภค	**ส่วนประกอบ** กาแฟผงสำเร็จรูป 6 กรัม น้ำตาล 15 กรัม นมสด 250 กรัม
			1. ผสมส่วนผสมทั้งหมดเข้าด้วยกันในแก้วมัค 2. วางแก้วมัคในเตาไมโครเวฟแล้วเลือกเมนูอัตโนมัติ [2-9] 3. หลังจากปรุงเสร็จ ผสมให้เข้ากันดีแล้วจึงรับประทาน

รหัส	อาหาร	ปริมาณอาหาร	คำแนะนำ
2-10	ชานม	สำหรับ 1 หน่วยบริโภค	**ส่วนประกอบ** ถุงชาดำ 2 ถุง น้ำ 60 กรัม นมสด 125 กรัม
			1. ผสมถุงชาดำและน้ำในแก้วมัค 2. เทนมสดลงในแก้วมัคอีกใบ 3. วางส่วนผสมชาในเตาไมโครเวฟแล้วเลือกเมนูอัตโนมัติ [2-10] 4. นำแก้วมัคออกมา เมื่อมีเสียงบี๊บดังขึ้น 5. วางนมสดในเตาไมโครเวฟ แล้วกดปุ่ม**เริ่ม/+30 วิ** 6. หลังจากปรุงเสร็จ ผสมให้เข้ากันดีแล้วจึงรับประทาน

3. ละลายขนมปังแช่แข็ง

ฟังก์ชั่นนี้ทำหน้าที่ละลายน้ำแข็งและอุ่นขนมปังแช่แข็ง ทำให้ขนมปังแช่แข็งมีความกรอบนอกคล้ายกับขนมปังที่สดใหม่ โปรแกรมนี้เหมาะสำหรับ บาแก็ต ครัวซองต์ เบเกิล และอื่น ๆ

⚠ **ข้อควรระวัง**

- โปรแกรมนี้เหมาะสำหรับขนมปังแช่แข็งที่อบมาแล้ว ไม่ได้เหมาะสำหรับแป้งโดว์เท่านั้น
- ต้องอุ่นจานอบเกรียมให้ร้อนก่อน โปรดทำตามคำแนะนำ

รหัส	อาหาร	ปริมาณอาหาร	คำแนะนำ
3	ละลายขนมปังแช่แข็ง	100-600 กรัม	วางจานอบเกรียมบนจานหมุน เลือกโปรแกรมเมนูอัตโนมัติ แล้วกดปุ่ม**เริ่ม/+30 วิ** หน้าจอจะแสดงคำว่า "**อุ่น**" สำหรับการอุ่นจานอบเกรียม เมื่อมีเสียงบี๊บดังขึ้นแสดงว่าการอุ่นเสร็จสิ้นแล้ว วางขนมปังแช่แข็งบนจานอบเกรียม แล้วนำไปวางไว้ในเตาไมโครเวฟ กดปุ่ม**เริ่ม/+30 วิ**อีกครั้ง หลังจากปรุงเสร็จ พักอาหารเป็นเวลา 2-3 นาที


MG23T5018CC_ST_DE68-04594R-00_TH.indd 25 18/6/2021 8:01:25 AM

การใช้งานเตาไมโครเวฟ

ย่าง

การย่างจะช่วยให้คุณสามารถอุ่นอาหารและทำให้อาหารเกรียมได้อย่างรวดเร็ว โดยไม่ต้องใช้ไมโครเวฟ

- โปรดใช้ถุงมือกันความร้อนเสมอเมื่อต้องสัมผัสกับอุปกรณ์ในเตาไมโครเวฟ เนื่องจากอุปกรณ์จะมีความร้อนสูง
- การใช้ตะแกรงย่างจะทำให้คุณอบและย่างอาหารได้ดีขึ้น

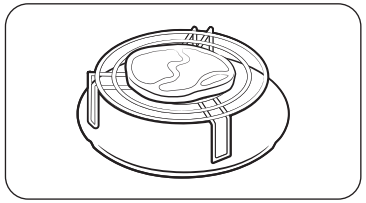

1. ดึงด้ามจับเพื่อเปิดประตูเตาไมโครเวฟ
2. วางอาหารบนตะแกรงย่างและปิดประตูเตา



3. กด**ย่าง**
   - หน้าจอแผงควบคุมแสดงไอคอนที่เกี่ยวข้อง ( )
   - คุณไม่สามารถตั้งอุณหภูมิการย่างได้



4. กด **<** หรือ **>** (**ลด/เพิ่ม**) เพื่อตั้งเวลาย่างตามที่ต้องการ
   - เวลาในการย่างสูงสุดคือ 60 นาที
5. กด**เริ่ม/+30 วิ** เพื่อเริ่มย่างอาหาร
   - เมื่อย่างอาหารเรียบร้อยแล้ว เตาไมโครเวฟจะมีเสียงบี๊บดังขึ้น 4 ครั้ง จากนั้นหน้าจอแผงควบคุมจะแสดงเวลาในปัจจุบัน จากนั้นสัญญาณเตือนการอบอาหารสิ้นสุดจะเตือนด้วยเสียงบี๊บหนึ่งครั้งทุกนาทีเป็นจำนวน 3 ครั้ง

การผสมไมโครเวฟและการย่าง


คุณสามารถผสมการอุ่นอาหารในไมโครเวฟด้วยการย่างได้เช่นกัน เพื่อให้อุ่นอาหารได้อย่างรวดเร็วและเกรียมได้ในเวลาเดียวกัน

⚠ ข้อควรระวัง

- ใช้อุปกรณ์ที่เหมาะสำหรับไมโครเวฟและเตาอบเสมอ แก้วหรือจานกระเบื้องเหมาะสำหรับการใช้งาน เนื่องจากช่วยให้ไมโครเวฟสามารถซึมผ่านอาหารได้อย่างทั่วถึง
- โปรดใช้ถุงมือกันความร้อนเสมอเมื่อต้องสัมผัสกับอุปกรณ์ในเตาไมโครเวฟ เนื่องจากอุปกรณ์จะมีความร้อนสูง
- การใช้ตะแกรงย่างจะทำให้คุณปรับปรุงการอบและย่างอาหารให้ดีขึ้นได้




1. ดึงด้ามจับเพื่อเปิดประตูเตาไมโครเวฟ
2. วางอาหารบนตะแกรงย่างและปิดประตูเตา
3. กด**ไมโครเวฟ+ย่าง**
   - หน้าจอแผงควบคุมแสดงระดับพลังงานเริ่มต้น (600 วัตต์)
   - หน้าจอแผงควบคุมแสดงไอคอนที่เกี่ยวข้อง ( )

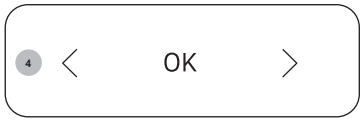

4. กด **<** หรือ **>** (**ลด/เพิ่ม**) เพื่อเลือกระดับพลังงานที่ต้องการ จากนั้นกด**ตกลง**
   - ระดับพลังงานที่คุณเลือกได้คือ 600 วัตต์ 450 วัตต์ หรือ 300 วัตต์
   - คุณไม่สามารถตั้งอุณหภูมิการย่างได้


MG23T5018CC_ST_DE68-04594R-00_TH.indd 26 18/6/2021 8:01:25 AM

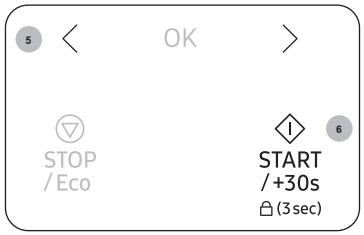


5. กด **<** หรือ **>** (**ลด/เพิ่ม**) เพื่อตั้งเวลาอบอาหารตามที่ต้องการ
   - เวลาในการอบอาหารสูงสุดคือ 60 นาที
6. กด**เริ่ม/+30 วิ** เพื่อเริ่มอบอาหาร
   - เมื่ออบอาหารเรียบร้อยแล้ว เตาไมโครเวฟจะมีเสียงบี๊บดังขึ้น 4 ครั้ง จากนั้นหน้าจอแผงควบคุมจะแสดงเวลาในปัจจุบัน จากนั้นสัญญาณเตือนการอบอาหารสิ้นสุดจะเตือนด้วยเสียงบี๊บหนึ่งครั้งทุกนาทีเป็นจำนวน 3 ครั้ง

การใช้จานอบเกรียม


จานอบเกรียมนี้ไม่เพียงจะช่วยให้คุณทำให้ด้านบนของอาหารเกรียมได้เท่านั้น แต่ยังทำให้ด้านล่างของอาหารมีความกรุบกรอบและเกรียมด้วยเช่นกัน เนื่องจากจานอบเกรียมจะมีอุณหภูมิสูง มีหลายเมนูในแผนภูมิที่คุณใช้จานอบเกรียมในการปรุงอาหารได้ (ดูหน้าถัดไป) นอกจากนี้จานอบเกรียมยังใช้กับเบคอน ไข่ ไส้กรอก และอื่น ๆ ได้ด้วย

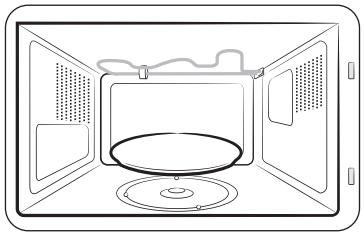

1. วางจานอบเกรียมลงบนจานหมุนโดยตรง แล้วอุ่นด้วยฟังก์ชั่นผสมไมโครเวฟ-ย่างที่ระดับสูงสุด [600 วัตต์ + ย่าง] โดยการตั้งเวลาและทำตามคำแนะนำในแผนภูมิ
2. ใช้แปรงทาน้ำมันที่จานหากคุณจะอบอาหารอย่างเช่น เบคอนและไข่ เพื่อทำให้อาหารเกรียมได้อย่างพอดี ๆ

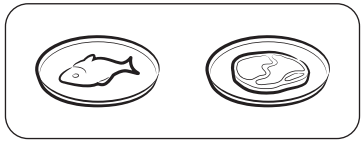

3. วางอาหารบนจานอบเกรียม

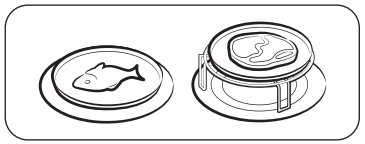

4. วางจานอบเกรียมบนตะแกรงโลหะ (หรือจานหมุน) ในไมโครเวฟ



5. เลือกเวลาอบอาหารและระดับพลังงานที่เหมาะสม (โปรดดูตารางด้านข้าง)

ข้อควรระวัง

- โปรดใช้ถุงมือกันความร้อนเสมอเพื่อนำจานอบเกรียมออก เนื่องจากจานอบเกรียมจะร้อนมาก
- อย่าวางวัตถุใด ๆ ที่ไม่ทนความร้อนบนจานอบเกรียม
- อย่าวางจานอบเกรียมในเตาอบโดยไม่มีจานหมุน
- โปรดทราบว่าจานอบเกรียมไม่เหมาะสำหรับเครื่องล้างจาน

หมายเหตุ

- โปรดทราบว่าจานอบเกรียมมีชั้นเทฟลอนที่ไม่ทนทานต่อการขีดข่วน อย่าใช้วัตถุมีคมใด ๆ เช่น มีด ตัดบนจานอบเกรียม
- ทำความสะอาดจานอบเกรียมด้วยน้ำอุ่นและน้ำยาทำความสะอาด แล้วล้างออกด้วยน้ำสะอาด
- อย่าใช้แปรงขัดหรือฟองน้ำหยาบ เพราะจะทำให้ผิวด้านบนเสียหายได้

MG23T5018CC_ST_DE68-04594R-00_TH.indd 27 18/6/2021 8:01:25 AM

การใช้งานเตาไมโครเวฟ

เราขอแนะนำให้อุ่นจานอบเกรียมโดยตรงบนจานหมุน
อุ่นจานอบเกรียมด้วยฟังก์ชั่น 600 วัตต์ + ย่าง 3-4 นาที
ตั้งเวลาและทำตามคำแนะนำในตาราง

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลาอบอาหาร (ต่ำสุด)
เบคอน	4 ชิ้น (80 กรัม)	600 วัตต์ + ย่าง	3-3½
	คำแนะนำ อุ่นจานอบเกรียม 3 นาที วางชิ้นอาหารเรียงกันบนจานอบเกรียม วางจานอบเกรียมบนตะแกรง พักอาหาร 3 นาที		
มะเขือเทศย่าง	200 กรัม (2 ชิ้น)	450 วัตต์ + ย่าง	2½-3
	คำแนะนำ อุ่นจานอบเกรียม 3 นาที หั่นครึ่งมะเขือเทศ โรยชีสด้านบน เรียงเป็นวงกลมบนจานอบเกรียม วางจานอบเกรียมบนตะแกรง พักอาหาร 3 นาที		
เบอร์เกอร์ (แช่แข็ง)	2 ชิ้น (125 กรัม)	600 วัตต์ + ย่าง	6-6½
	คำแนะนำ อุ่นจานอบเกรียม 3 นาที วางเบอร์เกอร์แช่แข็งบนจานอบเกรียม วางจานอบเกรียมบนตะแกรง พลิกหลังจากผ่านไปแล้ว 3-4 นาที พักอาหาร 3 นาที		
บาแก็ต (แช่แข็ง)	200-250 กรัม (2 ชิ้น)	450 วัตต์ + ย่าง	6-7
	คำแนะนำ อุ่นจานอบเกรียม 3 นาที วางบาแก็ตที่โรยท็อปปิ้งแล้ว (เช่น มะเขือเทศชีส) เรียงกันบนจาน วางจานอบเกรียมบนตะแกรง พักอาหาร 3 นาที		
พิซซ่า (แช่แข็ง)	300-350 กรัม	450 วัตต์ + ย่าง	11-12
	คำแนะนำ อุ่นจานอบเกรียม 3 นาที วางพิซซ่าแช่แข็งบนจานอบเกรียม วางจานอบเกรียมบนจานหมุน พักอาหารเป็นเวลา 1-2 นาที		
มินิพิซซ่า (แช่แข็ง)	9 x 30 กรัม (270 กรัม)	300 วัตต์ + ย่าง	9-10
	คำแนะนำ อุ่นจานอบเกรียม 3 นาที วางมินิพิซซ่าให้ทั่วทั้งจานอบ วางจานบนจานหมุน พักอาหาร 3 นาที		
พิซซ่า (แช่เย็น)	300-350 กรัม	450 วัตต์ + ย่าง	5½-6½
	คำแนะนำ อุ่นจานอบเกรียม 5 นาที วางพิซซ่าแช่เย็นบนจานอบเกรียม วางจานอบเกรียมบนจานหมุน พักอาหาร 3 นาที		
ฟิชฟิงเกอร์ (แช่แข็ง)	150 กรัม (5 ชิ้น) 300 กรัม (10 ชิ้น)	600 วัตต์ + ย่าง	6-7 8-9
	คำแนะนำ อุ่นจานอบเกรียม 4 นาที ใช้แปรงจุ่มน้ำมัน 1 ช้อนโต๊ะทาจาน วางฟิชฟิงเกอร์เป็นวงกลมบนจาน พลิกหลังจากผ่านไปแล้ว 3 นาที (5 ชิ้น) หรือ 5 นาที (10 ชิ้น) พักอาหาร 3 นาที		
นักเก็ตไก่ (แช่แข็ง)	125 กรัม 250 กรัม	600 วัตต์ + ย่าง	4-5 6-7
	คำแนะนำ อุ่นจานอบเกรียม 4 นาที ใช้แปรงจุ่มน้ำมัน 1 ช้อนโต๊ะทาจาน วางนักเก็ตไก่บนจาน วางจานอบเกรียมบนตะแกรง พลิกหลังจากผ่านไปแล้ว 2 นาที (125 กรัม) หรือ 4 นาที (250 กรัม) พักอาหาร 3 นาที		

MG23T5018CC_ST_DE68-04594R-00_TH.indd 28 18/6/2021 8:01:25 AM

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลาอบอาหาร (ต่ำสุด)
มันฝรั่งอบ	250 กรัม 500 กรัม	600 วัตต์ + ย่าง	4-5 7-8
	คำแนะนำ อุ่นจานอบเกรียม 3 นาที หั่นครึ่งมันฝรั่ง วางบนจานอบเกรียมโดยให้ด้านที่หั่นอยู่ด้านล่าง จัดเป็นวงกลม วางจานบนตะแกรง พักอาหาร 3 นาที		

การใช้ล็อคป้องกันเด็ก

เตาไมโครเวฟของคุณมีโปรแกรมป้องกันเพื่อความปลอดภัยของเด็ก ซึ่งจะ “ล็อก” เตาไมโครเวฟไม่ให้เด็กหรือบุคคลที่ไม่คุ้นเคยสามารถใช้เตาอบได้




- หากต้องการเปิดใช้งานล็อคป้องกันเด็ก ให้กด**เริ่ม/+30 วิ** ค้างไว้ 3 วินาที
  - ระบบจะล็อคแผงควบคุม และหน้าจอของแผงควบคุมจะแสดงคำว่า “**L**”



- หากต้องการปิดใช้งานล็อคป้องกันเด็ก ให้กด**เริ่ม/+30 วิ** ค้างไว้อีกครั้ง 3 วินาที

การปิดเสียงเตือน

คุณสามารถปิดเสียงเตือนของเตาอบได้ตามต้องการ

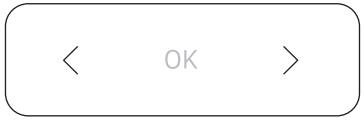

- หากต้องการปิดเสียงบี๊บ ให้กด **<** และ **>** **(ลด/เพิ่ม)** พร้อมกัน
- หากต้องการเปิดเสียงบี๊บ ให้กด **<** และ **>** **(ลด/เพิ่ม)** พร้อมกันอีกครั้ง

คู่มือสำหรับอุปกรณ์การทำอาหาร

ในการอบอาหารด้วยเตาไมโครเวฟ คลื่นไมโครเวฟจะต้องสามารถแทรกเข้าสู่อาหาร โดยไม่มีการสะท้อนหรือดูดซับโดยภาชนะ คุณจึงควรเลือกใช้อุปกรณ์อย่างรอบคอบ คุณควรเลือกอุปกรณ์ที่มีข้อความหรือเครื่องหมายว่าใช้กับไมโครเวฟได้ ตารางต่อไปนี้แสดงอุปกรณ์การทำอาหารประเภทต่างๆ และระบุว่าจะสามารถใช้กับเตาไมโครเวฟได้หรือไม่ และอย่างไร

อุปกรณ์	เหมาะสำหรับไมโครเวฟ	ความคิดเห็น
ฟอยล์อะลูมิเนียม	✓✗	สามารถใช้จำนวนเล็กน้อยเพื่อป้องกันส่วนที่ไม่ต้องการให้สุกเกินไป อาจมีประกายไฟ ถ้าฟอยล์อยู่ใกล้กับผนังของเตาไมโครเวฟมากเกินไปหรือใช้ฟอยล์มากเกินไป
จานอบเกรียม	✓	ห้ามอุ่นให้ร้อนเกิน 8 นาที
กระเบื้องและดินเผา	✓	กระเบื้องพอร์ซเลน ดินเผา ดินเผาเคลือบ และกระเบื้องเคลือบนั้นมักจะใช้ได้ดี ยกเว้นที่มีขอบโลหะ
จานโฟมหรือกระดาษแบบใช้แล้วทิ้ง	✓	อาหารแช่แข็งบางชนิดจะบรรจุในภาชนะประเภทนี้
บรรจุภัณฑ์ของอาหารจานด่วน		
• ถ้วยโฟม	✓	สามารถใช้อุ่นอาหาร ความร้อนสูงมากๆ จะทำให้โฟมละลาย
• ถุงกระดาษหรือหนังสือพิมพ์	✗	อาจติดไฟ
• กระดาษรีไซเคิลหรือขอบโลหะ	✗	อาจเกิดประกายไฟ
เครื่องแก้ว		
• ภาชนะที่ใช้ได้ในเตาอบและบนโต๊ะ	✓	ใช้ได้ หากไม่ประดับด้วยขอบโลหะ
• เครื่องแก้วบาง	✓	สามารถใช้อุ่นอาหารหรือของเหลว แก้วที่บางมากอาจแตกหรือร้าวหากได้รับความร้อนทันที

MG23T5018CC_ST_DE68-04594R-00_TH.indd 29 18/6/2021 8:01:25 AM

คู่มือสำหรับอุปกรณ์การทำอาหาร

อุปกรณ์	เหมาะสำหรับไมโครเวฟ	ความคิดเห็น
• โถแก้ว	✓	ต้องใช้โดยไม่ปิดฝา เหมาะสำหรับการอุ่นอาหารเท่านั้น
โลหะ		
• จาน	✗	อาจเกิดประกายหรือติดไฟ
• ลวดสำหรับมัดปากถุงแช่แข็ง	✗	
กระดาษ		
• จาน ถ้วย กระดาษเช็ดปาก และกระดาษเช็ดมือ	✓	สำหรับการอบเวลาสั้นๆ และการอุ่นอาหาร และใช้ซับของเหลวที่มากเกินไป
• กระดาษรีไซเคิล	✗	อาจเกิดประกายไฟ
พลาสติก		
• ภาชนะ	✓	โดยเฉพาะพลาสติกทนความร้อน พลาสติกชนิดอื่นอาจบิดหรือเปลี่ยนสีเมื่อโดนความร้อนสูง ห้ามใช้พลาสติกแบบเมลามีน
• ฟิล์มสำหรับปิดอาหาร	✓	สามารถใช้เก็บรักษาความชื้น ไม่ควรสัมผัสกับอาหารโดยตรง ใช้ความระมัดระวังขณะนำฟิล์มออก เนื่องจากอาจมีไอร้อนออกมาด้วย
• ถุงแช่แข็ง	✓✗	เฉพาะชนิดที่ต้มได้หรือใช้กับเตาอบได้ ไม่ควรเป็นแบบกักอากาศ ซึ่งต้องใช้ส้อมเจาะก่อน ถ้าจำเป็นต้องใช้
กระดาษมันหรือกระดาษไข	✓	สามารถใช้เก็บรักษาความชื้นหรือกันอาหารกระเด็น

✓ : แนะนำ ✓✗ : ใช้อย่างระมัดระวัง ✗ : ไม่ปลอดภัย

คู่มือการปรุงอาหาร

ไมโครเวฟ

พลังงานไมโครเวฟจะแทรกซึมในอาหาร โดยจะมีการดูดซับโดยน้ำ ไขมัน และน้ำตาลในอาหาร
ไมโครเวฟทำให้โมเลกุลของอาหารเคลื่อนไหวอย่างรวดเร็ว การเคลื่อนไหวอย่างรวดเร็วนี้ทำให้เกิดแรงเสียดทานของโมเลกุล และความร้อนจากแรงเสียดทานนี้ทำให้อาหารสุก

การปรุงอาหาร

ภาชนะสำหรับอบด้วยไมโครเวฟ:

ภาชนะที่ใช้จะต้องยอมให้พลังงานไมโครเวฟผ่าน เพื่อให้การอบมีประสิทธิภาพ คลื่นไมโครเวฟจะสะท้อนกับโลหะ เช่น สเตนเลส อะลูมิเนียม และทองแดง แต่จะสามารถแทรกซึมผ่านดินเผา แก้วกระเบื้อง และพลาสติก เช่นเดียวกับกระดาษและไม้ ห้ามอบอาหารในภาชนะโลหะเด็ดขาด

อาหารที่เหมาะสำหรับการอบด้วยไมโครเวฟ:

อาหารหลายชนิดเหมาะสำหรับการอบด้วยไมโครเวฟ เช่น ผัก ผลไม้ พาสต้า ข้าว ธัญพืช ถั่ว ปลา และเนื้อซึ่งแช่แข็งหรือสด นอกจากนี้ยังสามารถนำซอส คัสตาร์ด ซุป พุดดิ้งอบ ของแห้ง และของหมักดองไปอบในเตาไมโครเวฟได้ด้วย โดยทั่วไปแล้วไมโครเวฟเหมาะสำหรับการอบอาหารแทบทุกชนิดที่สามารถอบด้วยวิธีนึ่ง ตัวอย่างเช่น การละลายเนยหรือช็อกโกแลต (โปรดดูเคล็ดลับ เทคนิค และคำแนะนำประกอบ)

การปิดหรือครอบอาหาร

การปิดหรือครอบอาหารระหว่างการอบเป็นสิ่งที่สำคัญ เนื่องจากน้ำจะกลายเป็นไอและมีผลต่อการอบอาหาร คุณสามารถปิดอาหารได้หลายวิธี เช่น ใช้จานกระเบื้อง ฝาพลาสติกหรือฟิล์มที่เหมาะกับไมโครเวฟ

เวลาพักอาหาร

เมื่อการอบอาหารเสร็จ เวลาพักอาหารจะช่วยให้อุณหภูมิในอาหารกระจายทั่วถึงกัน

MG23T5018CC_ST_DE68-04594R-00_TH.indd 30 18/6/2021 8:01:26 AM

คู่มือการปรุงอาหารสำหรับผักแช่แข็ง

ใช้อ่างแก้วไพเร็กซ์ที่เหมาะสมและมีฝาปิด อบโดยปิดฝานานตามเวลาขั้นต่ำ โปรดดูในตาราง อบอาหารต่อไปจนกว่าจะได้ผลลัพธ์ที่คุณต้องการ คนสองครั้งในระหว่างการอบและคนอีกครั้งหลังจากที่อบเสร็จ ใส่เกลือ สมุนไพรหรือเนย หลังจากที่อบเสร็จ ในช่วงพักอาหาร ให้ปิดฝาไว้

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา (นาที)
ผักโขม	150 กรัม	600 วัตต์	4½-5½
	คำแนะนำ เติมน้ำเย็น 15 มล. (1 ช้อนโต๊ะ) พักอาหารเป็นเวลา 2-3 นาที		
บร็อคโคลี่	300 กรัม	600 วัตต์	9-10
	คำแนะนำ เติมน้ำเย็น 30 มล. (2 ช้อนโต๊ะ) พักอาหารเป็นเวลา 2-3 นาที		
ถั่วลันเตา	300 กรัม	600 วัตต์	7½-8½
	คำแนะนำ เติมน้ำเย็น 15 มล. (1 ช้อนโต๊ะ) พักอาหารเป็นเวลา 2-3 นาที		
ถั่วเขียว	300 กรัม	600 วัตต์	8-9
	คำแนะนำ เติมน้ำเย็น 30 มล. (2 ช้อนโต๊ะ) พักอาหารเป็นเวลา 2-3 นาที		
ผักรวม (แครอท/ถั่วลันเตา/ข้าวโพด)	300 กรัม	600 วัตต์	7½-8½
	คำแนะนำ เติมน้ำเย็น 15 มล. (1 ช้อนโต๊ะ) พักอาหารเป็นเวลา 2-3 นาที		
ผักรวม (แบบจีน)	300 กรัม	600 วัตต์	8-9
	คำแนะนำ เติมน้ำเย็น 15 มล. (1 ช้อนโต๊ะ) พักอาหารเป็นเวลา 2-3 นาที		

คู่มือการปรุงอาหารสำหรับผักสด

ใช้อ่างแก้วไพเร็กซ์ที่เหมาะสมและมีฝาปิด เติมน้ำเย็น 30-45 มล. (2-3 ช้อนโต๊ะ) สำหรับน้ำหนักผักทุก ๆ 250 กรัม ยกเว้นกรณีที่มีปริมาณน้ำที่แนะนำ โปรดดูตาราง อบโดยปิดฝานานตามเวลาขั้นต่ำ โปรดดูในตาราง อบอาหารต่อไปจนกว่าจะได้ผลลัพธ์ที่คุณต้องการ คนหนึ่งครั้งในระหว่างการอบและคนอีกครั้งหลังจากที่อบเสร็จ ใส่เกลือ สมุนไพรหรือเนย หลังจากที่อบเสร็จ ในช่วงพักอาหาร 3 นาที ให้ปิดฝาไว้

เคล็ดลับ: หั่นครึ่งผักสดให้มีขนาดชิ้นเท่า ๆ กัน ยิ่งหั่นให้มีขนาดเล็กลง ก็จะยิ่งอุ่นได้เร็วขึ้น

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา (นาที)
บร็อคโคลี่	250 กรัม 500 กรัม	800 วัตต์	4-4½ 7-7½
	คำแนะนำ เตรียมดอกย่อยให้มีขนาดเท่า ๆ กัน จัดให้ก้านอยู่ตรงกลาง พักอาหาร 3 นาที		
กะหล่ำดาว	250 กรัม	800 วัตต์	5½-6½
	คำแนะนำ เติมน้ำ 60-75 มล. (4-5 ช้อนโต๊ะ) พักอาหาร 3 นาที		
แครอท	250 กรัม	800 วัตต์	4½-5
	คำแนะนำ หั่นแครอทเป็นชิ้นขนาดเท่า ๆ กัน พักอาหาร 3 นาที		
ดอกกะหล่ำ	250 กรัม 500 กรัม	800 วัตต์	5-5½ 8½-9
	คำแนะนำ เตรียมดอกย่อยให้มีขนาดเท่า ๆ กัน หั่นครึ่งดอกใหญ่ จัดให้ก้านอยู่ตรงกลาง พักอาหาร 3 นาที		
คอร์เกตต์	250 กรัม	800 วัตต์	3½-4
	คำแนะนำ หั่นคอร์เกตต์เป็นชิ้น ๆ เติมน้ำ 30 มล. (2 ช้อนโต๊ะ) หรือเนยหนึ่งก้อน อุ่นจนนิ่ม พักอาหาร 3 นาที		

MG23T5018CC_ST_DE68-04594R-00_TH.indd 31 18/6/2021 8:01:26 AM

คู่มือการปรุงอาหาร

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา (นาที)
มะเขือม่วง	250 กรัม	800 วัตต์	3½-4
	คำแนะนำ หั่นมะเขือม่วงเป็นชิ้นเล็ก ๆ และโรยด้วยน้ำมะนาว 1 ช้อนโต๊ะ พักอาหาร 3 นาที		
กระเทียมต้น	250 กรัม	800 วัตต์	4½-5
	คำแนะนำ หั่นกระเทียมต้นเป็นชิ้นหนา ๆ พักอาหาร 3 นาที		
เห็ด	125 กรัม 250 กรัม	800 วัตต์	1½-2 3-3½
	คำแนะนำ เตรียมเห็ดตันเล็ก ๆ หรือเห็ดหั่น อย่าเติมน้ำ โรยด้วยน้ำมะนาว ปรุงด้วยเกลือและพริกไทย เทน้ำออกก่อนรับประทาน พักอาหาร 3 นาที		
หัวหอม	250 กรัม	800 วัตต์	5½-6
	คำแนะนำ หั่นหัวหอมเป็นชิ้น ๆ หรือหั่นครึ่ง เติมน้ำ 15 มล. (1 ช้อนโต๊ะ) เท่านั้น พักอาหาร 3 นาที		
ช้อนชา	250 กรัม	800 วัตต์	4½-5
	คำแนะนำ หั่นพริกไทยเป็นชิ้นเล็ก ๆ พักอาหาร 3 นาที		
มันฝรั่ง	250 กรัม 500 กรัม	800 วัตต์	4-5 7½-8½
	คำแนะนำ ชั่งน้ำหนักมันฝรั่งปอกเปลือก แล้วหั่นครึ่งหรือหั่นแบ่งสี่ชิ้นให้มีขนาดเท่า ๆ กัน พักอาหาร 3 นาที		
กะหล่ำปมเขียว	250 กรัม	800 วัตต์	5-5½
	คำแนะนำ หั่นกะหล่ำปมเขียวเป็นลูกบาศก์ชิ้นเล็ก ๆ พักอาหาร 3 นาที		

คู่มือการปรุงอาหารสำหรับข้าวและพาสต้า

ข้าว: ใช้อ่างแก้วไพเร็กซ์ขนาดใหญ่มีฝาปิด ข้าวจะมีปริมาณเพิ่มขึ้นเป็นสองเท่าในระหว่างการอบ อบโดยปิดฝา หลังจากหมดเวลาอบแล้ว ให้คนก่อนพักอาหาร แล้วใส่เกลือหรือสมุนไพรและเนย
หมายเหตุ: ข้าวอาจไม่ได้ดูดซับน้ำทั้งหมดหลังจากที่หมดเวลาอบแล้ว

พาสต้า: ใช้อ่างแก้วไพเร็กซ์ขนาดใหญ่ เติมน้ำร้อน เกลือเล็กน้อย และคนให้ทั่ว อบโดยไม่ปิดฝา คนเป็นครั้งคราวในระหว่างการอบและหลังจากที่อบเสร็จ ปิดฝาไว้ในช่วงพักอาหาร จากนั้นเทน้ำออกให้หมด

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา (นาที)
ข้าวขาว (ข้าวนึ่ง)	250 กรัม	800 วัตต์	16-17
	คำแนะนำ เติมน้ำเย็น 500 มล. พักอาหาร 5 นาที		
ข้าวกล้อง (ข้าวนึ่ง)	250 กรัม	800 วัตต์	21-22
	คำแนะนำ เติมน้ำเย็น 500 มล. พักอาหาร 5 นาที		
ข้าวผสม (ข้าว + ข้าวป่ายักษ์)	250 กรัม	800 วัตต์	17-18
	คำแนะนำ เติมน้ำเย็น 500 มล. พักอาหาร 5 นาที		
ข้าวโพดผสม (ข้าว + ธัญพืช)	250 กรัม	800 วัตต์	18-19
	คำแนะนำ เติมน้ำเย็น 400 มล. พักอาหาร 5 นาที		
พาสต้า	250 กรัม	800 วัตต์	11-12
	คำแนะนำ เติมน้ำร้อน 1000 มล. พักอาหาร 5 นาที		

MG23T5018CC_ST_DE68-04594R-00_TH.indd 32 18/6/2021 8:01:26 AM

การอุ่นอาหาร

เตาไมโครเวฟจะอุ่นอาหารเสร็จเร็วกว่าเตาอบแบบดั้งเดิมโดยทั่วไปมาก
ใช้แผนภูมิต่อไปนี้เป็นแนวทางในการตั้งระดับพลังงานและเวลาในการอุ่นอาหาร เวลาที่แสดงในแผนภูมิจะพิจารณาจากของเหลวที่อุณหภูมิห้องประมาณ +18 ถึง +20 °C หรืออาหารแช่เย็นที่มีอุณหภูมิประมาณ +5 ถึง +7 °C

การจัดวางและการปิดฝา

หลีกเลี่ยงการอุ่นอาหารชิ้นใหญ่ เช่น ข้อต่อของเนื้อสัตว์ เพราะมักจะสุกเกินไปและแห้งก่อนที่ด้านในจะสุก การอุ่นอาหารชิ้นเล็กจะได้ผลดีกว่า

ระดับพลังงานและการคน

อาหารบางชนิดอาจอุ่นได้ด้วยพลังงาน 800 วัตต์ ในขณะที่อาหารชนิดอื่น ๆ อาจต้องอุ่นด้วยพลังงาน 600 วัตต์ 450 วัตต์ หรือแม้แต่ 300 วัตต์ โปรดดูคำแนะนำในตาราง โดยทั่วไปแล้ว การอุ่นอาหารโดยใช้ระดับพลังงานต่ำจะได้ผลดีกว่า หากเป็นอาหารที่เสียง่าย มีปริมาณมาก หรือมักจะร้อนได้ไวมาก (เช่น มินซ์พาย เป็นต้น)
คนให้ทั่วหรือพลิกอาหารในระหว่างการอุ่นเพื่อให้ได้ผลลัพธ์ที่ดีที่สุด หากเป็นไปได้ ให้คนอีกครั้งก่อนรับประทาน
โปรดให้ความใส่ใจเป็นพิเศษเมื่อต้องอุ่นของเหลวหรืออาหารเด็กทารก เพื่อป้องกันการเดือดและกระเด็นของของเหลวและการลวกที่อาจเกิดขึ้น ให้คนก่อน ระหว่าง และหลังการอุ่นอาหาร ในช่วงพักอาหาร ให้เก็บไว้ในเตาไมโครเวฟ เราขอแนะนำให้วางช้อนพลาสติกหรือแท่งแก้วไว้ในของเหลว
หลีกเลี่ยงการให้ความร้อนอาหารจนมากเกินไป (ซึ่งจะทำให้อาหารเสีย)
ควรประเมินเวลาอุ่นอาหารให้ต่ำกว่าที่คาดไว้ แล้วค่อยเพิ่มเวลาในการอุ่นอาหาร หากจำเป็น

การให้ความร้อนและเวลาพักอาหาร

การจดบันทึกเวลาที่ใช้ในการอุ่นอาหารเป็นครั้งแรก จะเป็นข้อมูลที่มีประโยชน์สำหรับการใช้งานในอนาคต
ตรวจสอบทุกครั้งว่าอาหารที่อุ่นแล้วได้รับความร้อนอย่างทั่วถึงหรือไม่
พักอาหารสักครู่หลังจากการอุ่น เพื่อให้อุณหภูมิลดลงก่อน
เวลาพักอาหารที่แนะนำหลังจากการอุ่นคือ 2-4 นาที ยกเว้นในกรณีที่แผนภูมิแนะนำเป็นอย่างอื่น

โปรดให้ความใส่ใจเป็นพิเศษเมื่อต้องอุ่นของเหลวหรืออาหารเด็กทารก โปรดดูบทที่เกี่ยวกับข้อควรระวังเพื่อความปลอดภัยด้วย

การอุ่นของเหลว

พักอาหารอย่างน้อย 20 วินาทีหลังจากปิดเตาเสมอ เพื่อให้อุณหภูมิลดลงก่อน คนในระหว่างการอุ่น หากจำเป็น และต้องคนหลังจากการอุ่นเสมอ เพื่อป้องกันการเดือดและกระเด็นของของเหลวและการลวกที่อาจเกิดขึ้น คุณควรวางช้อนหรือแท่งแก้วลงในเครื่องดื่ม และคนก่อน ระหว่าง และหลังการอุ่น

การอุ่นอาหารเด็กทารก

อาหารเด็กทารก:

เทใส่จานกระเบื้องกันลึก ครอบด้วยฝาพลาสติก คนให้ทั่วหลังการอุ่น!
พักอาหาร 2-3 นาที ก่อนรับประทาน คนอีกครั้งแล้วตรวจสอบอุณหภูมิ
อุณหภูมิที่แนะนำสำหรับการรับประทาน: 30-40 °C

นมสำหรับเด็กทารก:

เทนมลงในขวดแก้วที่ฆ่าเชื้อแล้ว อุ่นโดยไม่ต้องปิดฝา ห้ามอุ่นขวดนมที่มีจุกนมอยู่ เพราะขวดอาจระเบิดได้เมื่อได้รับความร้อนมากเกินไป เขย่าให้เข้ากันก่อนพักไว้ และเขย่าอีกครั้งก่อนรับประทาน! ต้องตรวจสอบอุณหภูมิของนมหรืออาหารเด็กทารกโดยละเอียดก่อนให้เด็กรับประทานเสมอ
อุณหภูมิที่แนะนำสำหรับการรับประทาน: ประมาณ 37 °C

หมายเหตุ:

อาหารเด็กทารกต้องได้รับการตรวจสอบเป็นพิเศษก่อนให้เด็กรับประทานเพื่อป้องกันการลวก ใช้ตารางถัดไปเป็นแนวทางในการตั้งระดับพลังงานและเวลาในการอุ่นอาหาร

MG23T5018CC_ST_DE68-04594R-00_TH.indd 33 18/6/2021 8:01:26 AM

คู่มือการปรุงอาหาร

การอุ่นของเหลวและอาหาร

ใช้ระดับพลังงานและเวลาในการอุ่นตามแผนผังต่อไปนี้

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา (นาที)
เครื่องดื่ม (กาแฟ ชา และน้ำ)	150 มล. (1 ถ้วย) 250 มล. (1 แก้ว)	800 วัตต์	1-1½ 1½-2
	คำแนะนำ เทในถ้วยและอุ่นโดยไม่ปิดฝา วางถ้วย / แก้วมัคตรงกลางของจานหมุน ทิ้งไว้ในเตาไมโครเวฟระหว่างพักอาหาร และคนให้ทั่ว พักอาหารเป็นเวลา 1-2 นาที		
ซุป (เย็น)	250 กรัม	800 วัตต์	3-3½
	คำแนะนำ เทใส่จานกระเบื้องกันลึก ครอบด้วยฝาพลาสติก คนให้ทั่วหลังการอุ่น คนอีกครั้งก่อนรับประทาน พักอาหารเป็นเวลา 2-3 นาที		
สตูว์ (เย็น)	350 กรัม	600 วัตต์	5½-6½
	คำแนะนำ เทสตูว์ในจานกระเบื้องกันลึก ครอบด้วยฝาพลาสติก คนเป็นระยะระหว่างการอุ่น และคนอีกครั้งก่อนพักอาหารและรับประทาน พักอาหารเป็นเวลา 2-3 นาที		
พาสต้าราดซอส (เย็น)	350 กรัม	600 วัตต์	4½-5½
	คำแนะนำ ใส่พาสต้า (เช่น สปาเกตตี้หรือบะหมี่ไข่) ในจานกระเบื้องแบน ปิดด้วยฟิล์มสำหรับไมโครเวฟ คนก่อนรับประทาน พักอาหาร 3 นาที		
พาสต้ามีไส้ราดซอส (เย็น)	350 กรัม	600 วัตต์	5-6
	คำแนะนำ วางพาสต้าแบบมีไส้ (เช่น ราวิโอลี ทอร์เทลลินี) ในจานกระเบื้องกันลึก ครอบด้วยฝาพลาสติก คนเป็นระยะระหว่างการอุ่น และคนอีกครั้งก่อนพักอาหารและรับประทาน พักอาหาร 3 นาที		
อาหารชุด (เย็น)	350 กรัม	600 วัตต์	5½-6½
	คำแนะนำ จัดอาหารชุดซึ่งมีส่วนประกอบแช่เย็น 2-3 อย่างในจานกระเบื้อง ปิดด้วยฟิล์มสำหรับไมโครเวฟ พักอาหาร 3 นาที		

การอุ่นอาหารและนมสำหรับเด็กทารก

ใช้ตารางนี้เป็นแนวทางในการตั้งระดับพลังงานและเวลาในการอุ่นอาหาร

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา
อาหารเด็กทารก (ผัก + เนื้อ)	190 กรัม	600 วัตต์	30 วิ
	คำแนะนำ เทใส่จานกระเบื้องกันลึก อบโดยปิดฝา คนอาหารเมื่ออุ่นเสร็จแล้ว คนให้ทั่วก่อนรับประทาน และตรวจสอบอุณหภูมิโดยละเอียด พักอาหารเป็นเวลา 2-3 นาที		
โจ๊กสำหรับเด็กทารก (ธัญพืช + นมสด + ผลไม้)	190 กรัม	600 วัตต์	20 วิ
	คำแนะนำ เทใส่จานกระเบื้องกันลึก อบโดยปิดฝา คนอาหารเมื่ออุ่นเสร็จแล้ว คนให้ทั่วก่อนรับประทาน และตรวจสอบอุณหภูมิโดยละเอียด พักอาหารเป็นเวลา 2-3 นาที		
นมสำหรับเด็กทารก	100 มล. 200 มล.	300 วัตต์	30-40 วิ 50 วิ - 1 นาที
	คำแนะนำ คนหรือเขย่าให้เข้ากันดี แล้วเทลงในขวดแก้วที่ฆ่าเชื้อแล้ว วางบนตรงกลางของจานหมุน อบโดยไม่ปิดฝา เขย่าให้เข้ากันดีแล้วพักไว้อย่างน้อย 3 นาที เขย่าให้เข้ากันดีก่อนรับประทาน และตรวจสอบอุณหภูมิโดยละเอียด พักอาหารเป็นเวลา 2-3 นาที		

MG23T5018CC_ST_DE68-04594R-00_TH.indd 34 18/6/2021 8:01:26 AM

การละลายน้ำแข็งด้วยตนเอง

ไมโครเวฟเป็นวิธีที่เหมาะมากในการละลายอาหารแช่แข็ง ไมโครเวฟจะค่อย ๆ ละลายอาหารแช่แข็งในช่วงเวลาสั้น ๆ ซึ่งจะเป็นประโยชน์มาก ในกรณีที่มีแขกมาหาโดยที่คุณไม่ได้เตรียมตัว

ต้องละลายสัตว์ปีกแช่แข็งให้ทั่วถึงก่อนนำไปปรุงอาหาร นำลวดโลหะออกทั้งหมด แล้วนำออกจากสิ่งที่ห่อหุ้มอยู่ เพื่อให้น้ำที่ละลายออกมาไหลออกมาได้

วางอาหารแช่แข็งบนจานโดยไม่ต้องปิดฝา พลิกด้านเมื่อละลายไปแล้วครึ่งทาง เพื่อให้ของเหลวไหลออกมา และนำเครื่องในออกให้เร็วที่สุด ตรวจสอบอาหารเป็นครั้งคราวเพื่อให้แน่ใจว่าอาหารยังไม่อุ่น

หากมีส่วนใดของอาหารแช่แข็งเริ่มอุ่นขึ้น ให้ใช้ฟอยล์อะลูมิเนียมเส้นเล็ก ๆ ปิดหุ้มส่วนนั้นไว้ในระหว่างการละลายน้ำแข็ง

หากบริเวณผิวของเนื้อสัตว์ปีกเริ่มอุ่นขึ้น ให้หยุดการละลายน้ำแข็ง แล้วพักไว้ 20 นาทีก่อนที่จะนำไปทำอาหารต่อ

พักเนื้อปลา เนื้อสัตว์ และเนื้อสัตว์ปีกไว้ เพื่อให้การละลายน้ำแข็งเสร็จสมบูรณ์ เวลาพักสำหรับการละลายน้ำแข็งให้เสร็จสมบูรณ์นั้น จะแตกต่างกันไปตามปริมาณที่ต้องการละลายน้ำแข็ง โปรดดูที่ตารางด้านล่างนี้

เคล็ดลับ: อาหารที่เป็นแผ่นจะละลายน้ำแข็งได้ง่ายกว่าอาหารที่มีความหนา และอาหารที่มีขนาดเล็กกว่าก็จะใช้เวลาน้อยกว่าด้วย เมื่อจะนำอาหารเข้าแช่แข็งและละลายน้ำแข็ง โปรดอย่าลืมนึกถึงเคล็ดลับนี้

ในการละลายน้ำแข็งสำหรับอาหารแช่แข็งที่มีอุณหภูมิ -18 ถึง -20 °C ให้ใช้ตารางต่อไปนี้เป็นแนวทาง

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา (นาที)
เนื้อวัว			
เนื้อสับ	250 กรัม	180 วัตต์	6½-7½
	500 กรัม		10-12
สเต็กหมู	250 กรัม	180 วัตต์	7½-8½
	คำแนะนำ วางเนื้อบนจานกระเบื้องกันแบน หุ้มส่วนขอบที่บางกว่าด้วยฟอยล์อะลูมิเนียม พลิกเมื่อละลายน้ำแข็งไปได้ครึ่งทางของเวลาละลายน้ำแข็ง! พักอาหารเป็นเวลา 5-25 นาที		

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา (นาที)
เนื้อไก่			
เนื้อไก่ชิ้น	500 กรัม (2 ชิ้น)	180 วัตต์	14½-15½
เนื้อไก่ทั้งตัว	900 กรัม	180 วัตต์	28-30
	คำแนะนำ อันดับแรก วางเนื้อไก่บนจานกระเบื้องกันแบน สำหรับเนื้อไก่ชิ้น ให้วางด้านที่มีหนังไว้ด้านล่าง ส่วนเนื้อไก่ทั้งตัว ให้วางด้านอกไว้ด้านล่าง หุ้มฟอยล์อะลูมิเนียมตรงบริเวณที่บางกว่าส่วนอื่น ๆ ไว้ เช่น ปีก และส่วนปลาย พลิกเมื่อละลายน้ำแข็งไปได้ครึ่งทางของเวลาละลายน้ำแข็ง! พักอาหารเป็นเวลา 15-40 นาที		
เนื้อปลา			
เนื้อปลา	250 กรัม (2 ชิ้น)	180 วัตต์	6-7
	400 กรัม (4 ชิ้น)		12-13
	คำแนะนำ วางปลาแช่แข็งตรงกลางจานกระเบื้องกันแบน จัดวางให้ส่วนที่บางกว่าบริเวณอื่น ๆ อยู่ใต้ส่วนที่หนากว่า หุ้มส่วนปลายด้วยฟอยล์อะลูมิเนียม พลิกเมื่อละลายน้ำแข็งไปได้ครึ่งทางของเวลาละลายน้ำแข็ง! พักอาหารเป็นเวลา 5-15 นาที		
ผลไม้			
เบอร์รี่	250 กรัม	180 วัตต์	6-7
	คำแนะนำ วางผลไม้บนจานแก้วกันแบนทรงกลมให้ทั่วจาน (จานที่มีเส้นผ่าศูนย์กลางขนาดใหญ่) พักอาหารเป็นเวลา 5-10 นาที		
ขนมปัง			
ขนมปังโรล (แต่ละชิ้นหนักประมาณ 50 กรัม)	2 ชิ้น	180 วัตต์	½-1
	4 ชิ้น		2-2½
ขนมปังปิ้ง/แซนด์วิช	250 กรัม	180 วัตต์	4½-5
ขนมปังเยอรมัน (ข้าวสาลี + แป้งสาลี)	500 กรัม	180 วัตต์	8-10
	คำแนะนำ วางโรลเป็นวงกลมหรือวางขนมปังในแนวนอนบนกระดาษซับน้ำมันที่อยู่ตรงกลางของจานหมุน พลิกเมื่อละลายน้ำแข็งไปได้ครึ่งทางของเวลาละลายน้ำแข็ง! พักอาหารเป็นเวลา 5-20 นาที		

MG23T5018CC_ST_DE68-04594R-00_TH.indd 35 18/6/2021 8:01:26 AM

คู่มือการปรุงอาหาร

ย่าง

ขดลวดความร้อนสำหรับการย่างจะอยู่ใต้เพดานของช่องใส่อาหาร ขดลวดจะทำงานเมื่อปิดประตูเตาและมีการหมุนของจานหมุน การหมุนของจานหมุนจะทำให้อาหารเกรียมทั่วถึงมากขึ้น การอุ่นเตาก่อนย่างสัก 3-5 นาทีจะช่วยให้อาหารเกรียมเร็วขึ้น

อุปกรณ์สำหรับการย่าง:

ควรทนไฟและอาจรวมถึงโลหะด้วย อย่าใช้อุปกรณ์พลาสติกทุกประเภท เพราะอาจละลายได้

อาหารที่เหมาะสำหรับการย่าง:

เนื้อติดกระดูก ไส้กรอก สเต็ก แฮมเบอร์เกอร์ เบคอน และแฮมชิ้นบาง ๆ เนื้อปลาชิ้นบาง แซนด์วิช และขนมปังปิ้งทุกประเภทที่มีท็อปปิ้ง

หมายเหตุสำคัญ:

ทุกครั้งที่ใช้โหมดย่างเท่านั้น โปรดอย่าลืมว่าต้องวางอาหารไว้บนตะแกรงสูง ยกเว้นกรณีที่มีคำแนะนำเป็นอย่างอื่น

ไมโครเวฟ+ย่าง

โหมดอุ่นอาหารนี้เป็นการผสมผสานการให้ความร้อนแบบแผ่รังสีที่มาจากการย่างด้วยความเร็วของการอุ่นอาหารโดยใช้ไมโครเวฟ ขดลวดจะทำงานเมื่อปิดประตูเตาและมีการหมุนของจานหมุนเท่านั้น ด้วยการหมุนของจานหมุน อาหารจึงเกรียมได้อย่างทั่วถึง โหมดผสมสามแบบมีให้ใช้งานในโมเดลนี้:

600 วัตต์ + ย่าง, 450 วัตต์ + ย่าง และ 300 วัตต์ + ย่าง

อุปกรณ์สำหรับการอุ่นอาหารด้วยไมโครเวฟ + ย่าง

โปรดใช้อุปกรณ์ที่ไมโครเวฟสามารถซึมผ่านได้ อุปกรณ์ต้องทนไฟ อย่าใช้อุปกรณ์โลหะในโหมดผสม อย่าใช้อุปกรณ์พลาสติกทุกประเภท เพราะอาจละลายได้

อาหารที่เหมาะสำหรับการอบด้วยไมโครเวฟ + ย่าง:

อาหารที่เหมาะสำหรับการอุ่นด้วยโหมดผสม ได้แก่ อาหารที่ปรุงสุกแล้วทุกประเภทที่ต้องการการอุ่นและทำให้เกรียม (เช่น พาสต้าอบ) รวมถึงอาหารที่ต้องการใช้เวลาสั้น ๆ ในการทำให้ด้านบนของอาหารเกรียม นอกจากนี้ โหมดนี้ยังใช้กับอาหารที่มีความหนาและต้องการให้มีความเกรียมและความกรุบกรอบที่ด้านบนได้ด้วย (เช่น เนื้อไก่ชิ้น ซึ่งต้องพลิกเมื่ออบไปได้ครึ่งทาง) โปรดดูรายละเอียดเพิ่มเติมได้ในตารางการย่าง

หมายเหตุสำคัญ:

ทุกครั้งที่ใช้โหมดผสม (ไมโครเวฟ + ย่าง) ควรวางอาหารไว้บนตะแกรงสูง ยกเว้นกรณีที่มีคำแนะนำเป็นอย่างอื่น โปรดดูคำแนะนำในแผนภูมิต่อไปนี้

ต้องพลิกอาหาร หากต้องการให้เกรียมทั้งสองด้าน

MG23T5018CC_ST_DE68-04594R-00_TH.indd 36 18/6/2021 8:01:26 AM

คู่มือการย่างสำหรับอาหารแช่แข็ง

ใช้ตารางนี้เป็นแนวทางในการตั้งระดับพลังงานและเวลาในการย่างอาหาร

อาหารแช่แข็ง	ปริมาณอาหาร	ระดับพลังงาน	1 ขั้นตอน (นาที)	2 ขั้นตอน (นาที)
ขนมปังโรล (แต่ละชิ้นหนักประมาณ 50 กรัม)	2 ชิ้น 4 ชิ้น	ไมโครเวฟ + ย่าง	300 วัตต์ + ย่าง 1-1½ 2-2½	ย่างเท่านั้น 1-2 1-2
	คำแนะนำ จัดวางโรลเป็นวงกลมบนตะแกรง ย่างด้านที่สองของโรลให้มีความกรุบกรอบตามต้องการ พักอาหารเป็นเวลา 2-5 นาที			
บาแก็ต + ท็อปปิ้ง (มะเขือเทศ ชีส แฮม เห็ด)	250-300 กรัม (2 ชิ้น)	450 วัตต์ + ย่าง	8-9	-
	คำแนะนำ วางบาแก็ตแช่แข็ง 2 อันเรียงกันบนตะแกรง หลังจากการย่าง พักอาหารเป็นเวลา 2-3 นาที			
กราแตง (ผักหรือมันฝรั่ง)	400 กรัม	450 วัตต์ + ย่าง	13-14	-
	คำแนะนำ ใส่กราแตงแช่แข็งในจานแก้วไพเร็กซ์ทรงกลมขนาดเล็ก วางจานบนตะแกรง หลังจากการย่าง พักอาหารเป็นเวลา 2-3 นาที			
พาสต้า (คาเนลโลนี มักกะโรนี ลาซานญ่า)	400 กรัม	ไมโครเวฟ + ย่าง	300 วัตต์ + ย่าง 18-19	ย่างเท่านั้น 1-2
	คำแนะนำ ใส่พาสต้าแช่แข็งในจานแก้วไพเร็กซ์รูปสี่เหลี่ยมผืนผ้าแบบเรียบ วางจานบนจานหมุน หลังจากการย่าง พักอาหารเป็นเวลา 2-3 นาที			
นักเก็ตไก่	250 กรัม	450 วัตต์ + ย่าง	5-5½	3-3½
	คำแนะนำ วางนักเก็ตไก่บนตะแกรง พลิกหลังจากอบย่างครั้งแรก			
ซิปอบ	250 กรัม	450 วัตต์ + ย่าง	9-11	4-5
	คำแนะนำ วางซิปอบให้ทั่วถึงบนกระดาษอบที่อยู่บนตะแกรง			

คู่มือการย่างสำหรับอาหารสด

อุ่นเตาก่อนย่างด้วยฟังก์ชั่นย่าง 3-4 นาที

ใช้ตารางนี้เป็นแนวทางในการตั้งระดับพลังงานและเวลาในการย่างอาหาร

อาหารสด	ปริมาณอาหาร	ระดับพลังงาน	1 ขั้นตอน (นาที)	2 ขั้นตอน (นาที)
ขนมปังปิ้งแบบแผ่น	4 ชิ้น (แต่ละชิ้นหนัก 25 กรัม)	ย่างเท่านั้น	6-8	4-5½
	คำแนะนำ วางขนมปังปิ้งแบบแผ่นเรียงกันบนตะแกรง			
ขนมปังโรลล์ (อบแล้ว)	2-4 ชิ้น	ย่างเท่านั้น	2-3	2-3
	คำแนะนำ วางขนมปังโรลล์โดยให้ด้านล่างของขนมปังหงายขึ้น และเรียงเป็นวงกลมบนจานหมุน			
มะเขือเทศย่าง	200 กรัม (2 ชิ้น) 400 กรัม (4 ชิ้น)	ไมโครเวฟ + ย่าง	300 วัตต์ + ย่าง 4½-5½ 7-8	ย่างเท่านั้น 2-3
	คำแนะนำ หั่นครึ่งมะเขือเทศ โรยชีสด้านบน จัดเรียงเป็นวงกลมบนจานแก้วไพเร็กซ์แบบเรียบ วางบนตะแกรง			
ขนมปังฮาวาย (แฮม สับปะรด ชีสแผ่นบาง)	2 ชิ้น (300 กรัม)	450 วัตต์ + ย่าง	3½-4	-
	คำแนะนำ ปิ้งขนมปังแผ่นก่อน วางขนมปังปิ้งพร้อมท็อปปิ้งบนตะแกรง วางขนมปังปิ้ง 2 ชิ้นไว้บนตะแกรง โดยวางให้อยู่คนละฝั่งแต่ตำแหน่งตรงกัน พักอาหารเป็นเวลา 2-3 นาที			
มันฝรั่งอบ	250 กรัม 500 กรัม	600 วัตต์ + ย่าง	4½-5½ 8-9	-
	คำแนะนำ หั่นครึ่งมันฝรั่ง วางเป็นวงกลมบนตะแกรงโดยให้ด้านที่หั่นเป็นด้านที่จะได้รับการย่าง			

MG23T5018CC_ST_DE68-04594R-00_TH.indd 37 18/6/2021 8:01:26 AM

คู่มือการปรุงอาหาร

อาหารสด	ปริมาณอาหาร	ระดับพลังงาน	1 ขั้นตอน (นาที)	2 ขั้นตอน (นาที)
เนื้อไก่ชิ้น	450-500 กรัม (2 ชิ้น)	300 วัตต์ + ย่าง	10-12	12-13
	คำแนะนำ จัดเตรียมเนื้อไก่ชิ้นพร้อมน้ำมันและเครื่องเทศ วางเป็นวงกลมโดยให้ด้านที่มีกระดูกอยู่ตรงกลาง วางเนื้อไก่ 1 ชิ้น แต่อย่าวางไว้ตรงกลางของตะแกรง พักอาหารเป็นเวลา 2-3 นาที			
เนื้อไก่ติดกระดูก/สเต็กเนื้อ (สุกปานกลาง)	400 กรัม (4 ชิ้น)	ย่างเท่านั้น	12-15	9-12
	คำแนะนำ ใช้แปรงทาน้ำมันและเครื่องเทศบนเนื้อแกะติดกระดูก จัดวางเป็นวงกลมบนตะแกรง หลังจากการย่าง พักอาหารเป็นเวลา 2-3 นาที			
สเต็กหมู	250 กรัม (2 ชิ้น)	ไมโครเวฟ + ย่าง	300 วัตต์ + ย่าง 7-8	ย่างเท่านั้น 6-7
	คำแนะนำ ใช้แปรงทาน้ำมันและเครื่องเทศบนสเต็กหมู จัดวางเป็นวงกลมบนตะแกรง หลังจากการย่าง พักอาหารเป็นเวลา 2-3 นาที			
แอปเปิ้ลอบ	แอปเปิ้ล 1 ชิ้น (หนักประมาณ 200 กรัม) แอปเปิ้ล 2 ชิ้น (หนักประมาณ 400 กรัม)	300 วัตต์ + ย่าง	4-4½ 6-7	-
	คำแนะนำ เอาแกนของแอปเปิ้ลออกแล้วใส่ลูกเกดและแยมลงไป โรยอัลมอนด์สไลด์ด้านบน วางแอปเปิ้ลบนจานแก้วไพเร็กซ์แบบเรียบ วางจานบนจานหมุน			
ไก่ย่าง	1200 กรัม	ไมโครเวฟ + ย่าง	450 วัตต์ + ย่าง 22-24	300 วัตต์ + ย่าง 23-25
	คำแนะนำ ใช้แปรงทาน้ำมันและเครื่องเทศบนเนื้อไก่ชิ้น วางเนื้อไก่บนจานไพเร็กซ์ โดยวางชิ้นแรกให้ด้านนอกอยู่ด้านล่าง วางชิ้นที่สองโดยให้เนื้อออกอยู่ด้านบน หลังจากการย่าง ให้พักอาหาร 5 นาที			

กลเม็ดเคล็ดลับ

การละลายผลึกน้ำผึ้ง

ใส่ผลึกน้ำผึ้ง 20 กรัมลงในจานแก้วเล็กแบบกันลึก
อุ่น 20-30 วินาทีโดยใช้พลังงาน 300 วัตต์ จนกว่าน้ำผึ้งจะละลาย

การละลายเจลาติน

วางแผ่นเจลาตินแห้ง (10 กรัม) ลงในน้ำเย็น 5 นาที
วางเจลาตินที่สะเด็ดน้ำแล้วลงในชามแก้วไพเร็กซ์ขนาดเล็ก
อุ่น 1 นาทีโดยใช้ 300 วัตต์
คนหลังจากที่ละลายแล้ว

น้ำตาลเคลือบ/น้ำตาลไอซ์ซิง (สำหรับเค้กและขนม)

ผสมน้ำตาลเคลือบสำเร็จรูป (ประมาณ 14 กรัม) เข้ากับน้ำตาล 40 กรัม และน้ำเย็น 250 มล.
อบโดยไม่ปิดฝาในชามแก้วไพเร็กซ์ 3½ ถึง 4½ นาทีโดยใช้พลังงาน 800 วัตต์ จนกว่าน้ำตาลเคลือบ/ไอซ์ซิงจะใส คนสองครั้งขณะอบ

แยมทำอาหาร

ใส่ผลไม้ 600 กรัม (เช่น เบอร์รี่รวม) ในชามแก้วไพเร็กซ์ขนาดที่เหมาะสมและมีฝาปิด ใส่น้ำตาลสำหรับถนอมอาหาร 300 กรัม แล้วคนให้ทั่ว อบโดยปิดฝา 10-12 นาทีโดยใช้พลังงาน 800 วัตต์
คนหลาย ๆ ครั้งในระหว่างการอบ เทใส่แก้วแยมขนาดเล็กที่มีฝากดหมุน พักอาหารบนฝา 5 นาที

พุดดิ้ง/มัสตาร์ด

ผสมผงพุดดิ้งกับน้ำตาลและนมสด (500 มล.) โดยทำตามคำแนะนำจากผู้ผลิต แล้วคนให้ทั่ว ใช้ชามแก้วไพเร็กซ์ที่มีขนาดเหมาะสมและมีฝาปิด อบโดยปิดฝา 6½ ถึง 7½ นาทีโดยใช้พลังงาน 800 วัตต์
คนให้ทั่วหลาย ๆ ครั้งในระหว่างการอบ

อัลมอนด์สไลด์คั่ว

โรยอัลมอนด์สไลด์ 30 กรัมให้ทั่วจานกระเบื้องขนาดกลาง
คนหลาย ๆ ครั้งระหว่างการคั่ว 3½ ถึง 4½ นาทีโดยใช้พลังงาน 600 วัตต์
พักไว้ในเตาอบ 2-3 นาที ใช้ถุงมือกันความร้อนเมื่อนำออกจากเตา!

MG23T5018CC_ST_DE68-04594R-00_TH.indd 38 18/6/2021 8:01:26 AM

การแก้ไขปัญหาและรหัสข้อมูล

การแก้ไขปัญหา

ถ้าคุณประสบปัญหาอย่างใดอย่างหนึ่งที่ปรากฏด้านล่าง โปรดลองใช้วิธีแก้ไขปัญหาที่ให้มา

ปัญหา	สาเหตุ	การดำเนินการ
ทั่วไป		
กดปุ่มไม่ลง	อาจมีสิ่งแปลกปลอมติดอยู่ระหว่างปุ่ม	ให้นำสิ่งแปลกปลอมออกแล้วลองอีกครั้ง
	สำหรับรุ่นหน้าจอสัมผัส: มีน้ำอยู่บนพื้นผิวด้านนอก	ให้เช็ดน้ำออกจากพื้นผิวด้านนอก
	มีการเปิดใช้งานล็อคป้องกันเด็ก	ปิดใช้งานล็อคป้องกันเด็ก
เวลาไม่ปรากฏบนจอแสดงผล	ตั้งค่าฟังก์ชั่น Eco (ประหยัดพลังงาน) เอาไว้	ปิดฟังก์ชั่น Eco (ประหยัดพลังงาน)
เตาไมโครเวฟไม่ทำงาน	ไม่มีการจ่ายไฟ	ตรวจสอบว่ามีการจ่ายไฟแล้วหรือไม่
	ประตูเปิด	ปิดประตูและลองอีกครั้ง
	มีสิ่งแปลกปลอมติดอยู่ที่กลไกการเปิดประตูเพื่อความปลอดภัย	ให้นำสิ่งแปลกปลอมออกแล้วลองอีกครั้ง
เตาไมโครเวฟหยุดทำงานในขณะอบอาหาร	ผู้ใช้เปิดประตูเพื่อกลับด้านอาหาร	หลังจากกลับด้านอาหารแล้ว ให้กดปุ่ม**เริ่ม/+30 วิ** อีกครั้งเพื่อเริ่มการทำงาน
ไฟดับในระหว่างการปรุงอาหาร	ใช้เตาไมโครเวฟต่อเนื่องเป็นเวลานาน	หลังจากใช้งานเป็นเวลานาน ให้ทิ้งเตาไมโครเวฟไว้สักครู่เพื่อให้เย็นตัว
	พัดลมระบายความร้อนไม่ทำงาน	ฟังเสียงของพัดลมระบายความร้อน
	พยายามใช้งานเตาไมโครเวฟในขณะที่ไม่มีอาหารอยู่ด้านใน	วางอาหารไว้ในเตาไมโครเวฟ
	มีพื้นที่ระบายอากาศไม่เพียงพอสำหรับเตาไมโครเวฟ	มีช่องอากาศเข้า/ออกที่ด้านหน้าและด้านหลังของเตาไมโครเวฟสำหรับระบายอากาศ เว้นพื้นที่ว่างตามที่ระบุไว้ในคู่มือการติดตั้งผลิตภัณฑ์
	มีการใช้ปลั๊กไฟจำนวนมากในเต้ารับเดียวกัน	โปรดสงวนหนึ่งเต้ารับไว้สำหรับเตาไมโครเวฟเท่านั้น
มีเสียงแตกในระหว่างการทำงานและเตาไมโครเวฟไม่ทำงาน	การปรุงอาหารที่อยู่ในซีลหรือใช้ภาชนะที่มีฝาปิดอาจทำให้เกิดเสียงแตก	ห้ามใช้ภาชนะที่มีซีลเนื่องจากอาจไหม้ในระหว่างการปรุงอาหารเนื่องจากอาหารเกิดการขยายตัว

MG23T5018CC_ST_DE68-04594R-00_TH.indd 39 18/6/2021 8:01:26 AM

การแก้ไขปัญหาและรหัสข้อมูล

ปัญหา	สาเหตุ	การดำเนินการ
พื้นผิวภายนอกเตาไมโครเวฟร้อนเกินไปในระหว่างการใช้งาน	มีพื้นที่ระบายอากาศไม่เพียงพอสำหรับเตาไมโครเวฟ	มีช่องอากาศเข้า/ออกที่ด้านหน้าและด้านหลังของเตาไมโครเวฟสำหรับระบายอากาศ เว้นพื้นที่ว่างตามที่ระบุไว้ในคู่มือการติดตั้งผลิตภัณฑ์
	มีวัตถุวางอยู่ด้านบนเตาไมโครเวฟ	นำวัตถุทั้งหมดที่วางอยู่บนเตาไมโครเวฟออกไป
เปิดประตูไม่สะดวก	มีอาหารตกค้างอยู่ระหว่างประตูและภายในเตาไมโครเวฟ	ทำความสะอาดเตาไมโครเวฟ แล้วเปิดประตูเตา
การให้ความร้อน รวมถึงฟังก์ชันการอุ่น ทำงานไม่ถูกต้อง	เตาไมโครเวฟอาจไม่ทำงาน มีการอบอาหารปริมาณมากเกินไป หรือใช้อุปกรณ์ที่ไม่เหมาะสม	วางน้ำหนึ่งแก้วในภาชนะที่สามารถใช้กับไมโครเวฟได้ แล้วใช้ฟังก์ชั่นไมโครเวฟเป็นเวลา 1-2 นาที เพื่อตรวจสอบว่าน้ำร้อนหรือไม่ ลดปริมาณอาหารและเริ่มใช้งานอีกครั้ง ใช้ภาชนะในการปรุงอาหารที่มีก้นแบน
ฟังก์ชันละลายไม่ทำงาน	ปรุงอาหารมากเกินไป	ลดปริมาณอาหารและเริ่มใช้งานอีกครั้ง
ไฟด้านในมีแสงน้อยหรือไม่ติดเลย	เปิดประตูทิ้งไว้เป็นเวลานาน	ไฟด้านในอาจปิดโดยอัตโนมัติเมื่อใช้ฟังก์ชันประหยัดพลังงาน ปิดประตูเตาแล้วเปิดอีกครั้งหรือกดปุ่ม**หยุด/ประหยัดพลังงาน**
	มีสิ่งแปลกปลอมเกาะตัวอยู่ที่ไฟด้านใน	ทำความสะอาดด้านในเตาไมโครเวฟแล้วตรวจสอบอีกครั้ง

ปัญหา	สาเหตุ	การดำเนินการ
มีเสียงบี๊บในระหว่างการปรุงอาหาร	ถ้าใช้ฟังก์ชั่นปรุงอาหารอัตโนมัติ เสียงสัญญาณจะเตือนว่าได้เวลากลับด้านอาหารในระหว่างการทำละลาย	หลังจากกลับด้านอาหารแล้ว ให้กดปุ่ม**เริ่ม/+30 วิ**อีกครั้งเพื่อเริ่มการทำงาน
เตาไมโครเวฟเอียง	ติดตั้งเตาไมโครเวฟบนผิวพื้นที่ไม่เรียบเสมอกัน	โปรดติดตั้งเตาไมโครเวฟบนพื้นผิวที่ราบเรียบและมั่นคง
เกิดประกายไฟในระหว่างการปรุงอาหาร	มีการใช้ภาชนะที่เป็นโลหะในระหว่างการใช้เตาไมโครเวฟ/การละลาย	โปรดอย่าใช้พลาสติกที่เป็นโลหะ
เมื่อเสียบปลั๊กไฟ เตาไมโครเวฟจะเริ่มทำงานทันที	ประตูปิดไม่สนิท	ปิดประตูและตรวจสอบอีกครั้ง
มีกระแสไฟออกมาจากเตาไมโครเวฟ	ไฟฟ้าหรือเต้ารับไฟฟ้าไม่มีการลงกราวด์อย่างถูกต้อง	โปรดตรวจสอบว่ามีการลงกราวด์ไฟฟ้าหรือเต้ารับไฟฟ้าอย่างถูกต้องแล้วหรือไม่
1. น้ำหยด 2. มีไอน้ำออกมาจากรอยแยกของประตู 3. มีน้ำตกค้างอยู่ในเตาไมโครเวฟ	อาจมีน้ำหรือไอน้ำบ้างในบางกรณี ทั้งนี้จะขึ้นอยู่กับอาหาร กรณีนี้ไม่ใช่การทำงานผิดปกติของเตาไมโครเวฟ	ทิ้งเตาไมโครเวฟไว้เพื่อให้เย็นลง แล้วเช็ดด้วยผ้าแห้ง

MG23T5018CC_ST_DE68-04594R-00_TH.indd 40 18/6/2021 8:01:26 AM

ปัญหา	สาเหตุ	การดำเนินการ
ความสว่างภายในเตาไมโครเวฟมีการเปลี่ยนแปลง	ความสว่างจะเปลี่ยนไปโดยขึ้นอยู่การเปลี่ยนกำลังไฟฟ้าตามฟังก์ชัน	การเปลี่ยนกำลังไฟฟ้าในระหว่างการปรุงอาหารไม่ใช่การทำงานผิดปกติ กรณีนี้ไม่ใช่การทำงานผิดปกติของเตาไมโครเวฟ
ปรุงอาหารเสร็จแล้ว แต่พัดลมระบายอาหารยังทำงานอยู่	ในการระบายอาหารให้กับเตาไมโครเวฟ พัดลมระบายอากาศจะยังคงทำงานต่อเนื่องอีกประมาณ 3 นาทีหลังจากปรุงอาหารเสร็จ	กรณีนี้ไม่ใช่การทำงานผิดปกติของเตาไมโครเวฟ
จานหมุน		
ในขณะหมุน จานหมุนออกมานอกที่ติดตั้งหรือหยุดหมุน	ไม่มีวงแหวนหรือวงแหวนติดตั้งไม่ถูกต้อง	ติดตั้งวงแหวนแล้วลองอีกครั้ง
จานหมุนลากในขณะที่กำลังหมุน	ติดตั้งวงแหวนไม่ถูกต้อง มีอาหารมากเกินไป หรือภาชนะใหญ่เกินไปและสัมผัสที่ด้านในของไมโครเวฟ	ปรับปริมาณอาหารและอย่าใช้ภาชนะที่ใหญ่เกินไป
จานหมุนส่งเสียงดังสร้างความรำคาญในขณะที่หมุน	มีเศษอาหารอยู่ด้านล่างของเตาไมโครเวฟ	นำเศษอาหารที่ตกค้างอยู่ด้านล่างเตาไมโครเวฟออกให้หมด

ปัญหา	สาเหตุ	การดำเนินการ
ย่าง		
มีควันออกมาจากเครื่องขณะทำงาน	ในระหว่างที่เครื่องทำงานเป็นครั้งแรก อาจมีควันออกมาจากขดลวดความร้อนขณะที่คุณใช้เตาไมโครเวฟเป็นครั้งแรก	ซึ่งกรณีนี้ไม่ใช่เครื่องเสีย และหากคุณใช้เตาไมโครเวฟ 2-3 ครั้ง ควันก็ควรจะหายไป
	มีอาหารอยู่บนขดลวดความร้อน	ปล่อยให้เตาไมโครเวฟเย็นตัวลง จากนั้นนำอาหารออกจากขดลวดความร้อน
	อาหารอยู่ใกล้ที่ย่างเกินไป	วางอาหารให้มีระยะห่างที่เหมาะสมขณะอบ
	ยังไม่ได้จัดเตรียมและ/หรือจัดวางอาหารให้พร้อม	ตรวจสอบว่าได้จัดเตรียมและจัดวางอาหารพร้อมแล้ว
เตาไมโครเวฟ		
เตาไมโครเวฟไม่ทำความร้อน	ประตูเปิด	ปิดประตูและลองอีกครั้ง
มีควันออกมาจากเครื่องขณะอุ่นเตา	ในระหว่างที่เครื่องทำงานเป็นครั้งแรก อาจมีควันออกมาจากขดลวดความร้อนขณะที่คุณใช้เตาไมโครเวฟเป็นครั้งแรก	ซึ่งกรณีนี้ไม่ใช่เครื่องเสีย และหากคุณใช้เตาไมโครเวฟ 2-3 ครั้ง ควันก็ควรจะหายไป
	มีอาหารอยู่บนขดลวดความร้อน	ปล่อยให้เตาไมโครเวฟเย็นตัวลง จากนั้นนำอาหารออกจากขดลวดความร้อน
มีกลิ่นไหม้หรือกลิ่นพลาสติกขณะใช้เตาไมโครเวฟ	ใช้อุปกรณ์ที่เป็นพลาสติกหรือไม่ทนความร้อน	ใช้เครื่องแก้วที่เหมาะสำหรับอุณหภูมิสูง

MG23T5018CC_ST_DE68-04594R-00_TH.indd 41 18/6/2021 8:01:26 AM

การแก้ไขปัญหาและรหัสข้อมูล

ปัญหา	สาเหตุ	การดำเนินการ
มีกลิ่นเหม็นออกมาจากด้านในของเตาไมโครเวฟ	เศษอาหารหรือพลาสติกละลายและติดอยู่ภายใน	ใช้พั้งก์ชันอบไอน้ำแล้วเช็ดด้วยผ้าแห้ง คุณสามารถวางมะนาวสไลด์ไว้ด้านใน แล้วเปิดเครื่องเตาไมโครเวฟ เพื่อให้ขจัดกลิ่นได้เร็วขึ้น
เตาไมโครเวฟอบอาหารได้ไม่เหมาะสม	เปิดประตูเตาไมโครเวฟบ่อย ๆ ในระหว่างการอบ	หากคุณเปิดประตูเตาบ่อย ๆ อุณหภูมิภายในจะลดต่ำลงและอาจส่งผลต่อการอบอาหาร
	ยังไม่มีการตั้งค่าการควบคุมเตาไมโครเวฟอย่างถูกต้อง	ตั้งค่าการควบคุมเตาไมโครเวฟ ให้ถูกต้อง แล้วลองอีกครั้ง
	ยังไม่ได้ใส่ที่ย่างหรืออุปกรณ์เสริมอื่น ๆ ให้ถูกต้อง	ใส่อุปกรณ์เสริมให้ถูกต้อง
	ใช้อุปกรณ์ผิดประเภทหรือผิดขนาด	ใช้อุปกรณ์กันแบนที่เหมาะสม

รหัสข้อมูล

รหัสข้อมูล	สาเหตุ	การดำเนินการ
C-d0	กดปุ่มควบคุมให้นานกว่า 10 วินาที	ทำความสะอาดปุ่มและตรวจสอบว่ามีน้ำที่พื้นผิวรอบๆ ปุ่มหรือไม่ ถ้ายังมีข้อความนี้ปรากฏอีกครั้ง ให้ปิดเตาอบไมโครเวฟนานกว่า 30 วินาที แล้วลองตั้งค่าอีกครั้ง ถ้ายังมีข้อความนี้ปรากฏอีก โปรดติดต่อศูนย์บริการลูกค้า SAMSUNG ที่อยู่ใกล้บ้าน

หมายเหตุ

ถ้าคำแนะนำใช้ไม่ได้ผล โปรดติดต่อศูนย์บริการลูกค้า SAMSUNG ที่อยู่ใกล้บ้านคุณ

MG23T5018CC_ST_DE68-04594R-00_TH.indd 42 18/6/2021 8:01:26 AM

ข้อมูลจำเพาะด้านเทคนิค

SAMSUNG มุ่งมั่นที่จะพัฒนาผลิตภัณฑ์อยู่เสมอ ดังนั้นรายละเอียดของเครื่องและคำแนะนำสำหรับผู้ใช้นี้จึงอาจมีการเปลี่ยนแปลงโดยไม่ได้แจ้งให้ทราบ

รุ่น	MG23T5018C*
การจ่ายไฟ	220 V ~ 50 Hz AC
การใช้พลังงาน พลังงานสูงสุด ไมโครเวฟ ย่าง (ขดลวดความร้อน)	 2250 วัตต์ 1250 วัตต์ 1050 วัตต์
กำลังไฟฟ้า	100 วัตต์ / 800 วัตต์ - 6 ระดับ (IEC-705)
ความถี่ของคลื่นขณะทำงาน	2450 MHz
ขนาด (กว้าง x สูง x ลึก) ภายนอก (รวมมือจับ) ช่องของเตาอบ	 489 x 275 x 381 มม. 330 x 211 x 324 มม.
ปริมาตร	23 ลิตร
น้ำหนัก สุทธิ	 12.7 กก. โดยประมาณ

บันทึก

MG23T5018CC_ST_DE68-04594R-00_TH.indd 43 18/6/2021 8:01:26 AM

SAMSUNG

โปรดทราบว่าการรับประกันของ Samsung ไม่ครอบคลุมถึงการโทรรับบริการเพื่ออธิบายถึงการใช้งานผลิตภัณฑ์ แก้ไขการติดตั้งที่ไม่ถูกต้อง หรือการทำความสะอาดหรือบำรุงรักษาตามปกติ

ถ้าคุณมีคำถามหรือข้อคิดเห็น

ประเทศ / สถานที่	โทรศัพท์	หรือเยี่ยมชมเว็บไซต์ของเราที่
AUSTRALIA	1300 362 603	www.samsung.com/au/support
NEW ZEALAND	0800 726 786	www.samsung.com/nz/support
CHINA	400-810-5858	www.samsung.com/cn/support
HONG KONG	3698 4698	www.samsung.com/hk/support (Chinese) www.samsung.com/hk_en/support (English)
INDIA	1800 40 SAMSUNG (1800 40 7267864) (Toll-Free) 1800 5 SAMSUNG (1800 5 7267864) (Toll-Free)	www.samsung.com/in/support
BANGLADESH	08000-300-300 (Toll free) 09612-300-300	www.samsung.com/in/support
INDONESIA	021-5699-7777 0800-112-8888 (All Product, Toll Free)	www.samsung.com/id/support
JAPAN	0120-363-905	www.galaxymobile.jp/jp/support
MALAYSIA	1800-88-9999 +603-7713 7420 (Overseas contact)	www.samsung.com/my/support
PHILIPPINES	1-800-10-726-7864 [PLDT Toll Free] 1-800-8-726-7864 [Globe Landline and Mobile] 02-8-422-2111 [Standard Landline]	www.samsung.com/ph/support

ประเทศ / สถานที่	โทรศัพท์	หรือเยี่ยมชมเว็บไซต์ของเราที่
SINGAPORE	1800 7267864 | 1800-SAMSUNG	www.samsung.com/sg/support
THAILAND	Hotline no : 1282 1800-29-3232 (Toll free for all product))	www.samsung.com/th/support
TAIWAN	0800-32-9999	www.samsung.com/tw/support
VIETNAM	1800 588 889	www.samsung.com/vn/support
MYANMAR	+95-1-2399-888	www.samsung.com/mm/support
MACAU	0800 333	www.samsung.com/hk/support (Chinese) www.samsung.com/hk_en/support (English)
SRI LANKA	011 SAMSUNG (011 7267864)	www.samsung.com/in/support
CAMBODIA	+855-23-993232 1800-20-3232 (Toll free)	www.samsung.com/th/support
LAOS	+856-214-17333	www.samsung.com/th/support
NEPAL	16600172667 (Toll Free for NTC Only) 9801572667 (Toll Free for Ncell users)	www.samsung.com/in/support

DE68-04594R-00

Microwave Oven

User manual

MG23T5018C*



Contents

Using this user manual 3

Safety instructions 3

Important safety instructions 3
General safety 6
Microwave operation precautions 8
Limited warranty 8

Installation 9

Accessories 9
Installation site 9
Turntable 9

Maintenance 10

Cleaning 10
Replacement (repair) 10
Care against an extended period of disuse 10

Microwave oven features 11

Microwave oven 11
Control panel 11

Microwave oven use 12

How a microwave oven works 12
Checking that your microwave oven is operating correctly 12
Cooking/Reheating 13
Setting the time 14
Power levels and time variations 14
Adjusting the cooking time 15
Stopping the cooking 15
Setting the energy save mode 15
Using the Quick Defrost 15
Using Grill Fry 17
Using Auto Cook 20
Grilling 26
Combining microwaves and grill 26
Using the crusty plate 27
Using Child Lock 29
Switching the beeper off 29

Cookware guide 29

Cooking guide 30

Troubleshooting and information code 39

Troubleshooting 39
Information code 42

Technical specifications 43

MG23T5018CC_ST_DE68-04594R-00_EN.indd 2 24/6/2021 8:47:40 AM

Using this user manual

You have just purchased a SAMSUNG microwave oven. Your Owner's Instructions contains valuable information on cooking with your microwave oven:

- Safety precautions
- Suitable accessories and cookware
- Useful cooking tips
- Cooking tips

The following symbols are used in this User Manual:

⚠ WARNING

Hazards or unsafe practices that may result in **severe personal injury or death**.

⚠ CAUTION

Hazards or unsafe practices that may result in **minor personal injury or property damage**.

NOTE

Useful tips, recommendations, or information that helps users manipulate the product.

Safety instructions

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode.

WARNING: Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

This appliance is intended to be used in household only and it is not intended to be used such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential environments;

MG23T5018CC_ST_DE68-04594R-00_EN.indd 3 24/6/2021 8:47:40 AM

Safety instructions

- bed and breakfast type environments.

Only use utensils that are suitable for use in microwave ovens.

When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.

The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

If smoke is observed (emitted), switch off or unplug the appliance and keep the door closed in order to stifle any flames.

Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.

The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.

The oven should be cleaned regularly and any food deposits removed.

Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

The microwave oven is intended to be used on the counter top (freestanding) use only, the microwave oven shall not be placed in a cabinet.

Metallic containers for food and beverages are not allowed during microwave cooking.

The care should be taken not to displace the turntable when removing containers from the appliance.

The appliance shall not be cleaned with a steam cleaner.

The appliance should not be cleaned with a water jet.

The appliance is not intended for installing in road vehicles, caravans and similar vehicles etc.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 4 24/6/2021 8:47:40 AM

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This oven should be positioned proper direction and height permitting easy access to cavity and control area.

Before using the oven first time, oven should be operated with the water during 10 minute and then used.

If the oven generates a strange noise, a burning smell, or smoke is emitted, unplug the power plug immediately and contact your nearest service center.

The microwave oven has to be positioned so that plug is accessible.

WARNING: When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.

WARNING: Accessible parts may become hot during use. Young children should be kept away.

Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

A steam cleaner is not to be used.

WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

The appliance must not be installed behind a decorative door in order to avoid overheating.

WARNING: The appliance and its accessible parts become hot during use.

Care should be taken to avoid touching heating elements.

Children less than 8 years of age shall be kept away unless continuously supervised.

CAUTION: The cooking process has to be supervised. A short term cooking process has to be supervised continuously.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 5 24/6/2021 8:47:40 AM

Safety instructions

The door or the outer surface may get hot when the appliance is operating.

The temperature of accessible surfaces may be high when the appliance is operating.

The surfaces are liable to get hot during use.

The appliances are not intended to be operated by means of an external timer or separate remote-control system.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

Keep the appliance and its cord out of reach of children less than 8 years.

General safety

Any modifications or repairs must be performed by qualified personnel only.
Do not heat food or liquids sealed in containers for the microwave function.
Do not use benzene, thinner, alcohol, or steam or high-pressure cleaners to clean the oven.
Do not install the oven: near a heater or flammable material; locations that are humid, oily, dusty or exposed to direct sunlight or water; or where gas may leak; or an uneven surface.
This oven must be properly grounded in accordance with local and national codes.
Regularly use a dry cloth to remove foreign substances from the power plug terminals and contacts.
Do not pull, excessively bend, or place heavy objects on the power cord.
If there is a gas leak (propane, LP, etc) ventilate immediately. Do not touch the power cord.
Do not touch the power cord with wet hands.
While the oven is operating, do not turn it off by unplugging the power cord.
Do not insert fingers or foreign substances. If foreign substances enter the oven, unplug the power cord and contact a local Samsung service centre.
Do not apply excessive pressure or impact to the oven.
Do not place the oven over fragile objects.
Ensure the power voltage, frequency, and current matches the product specifications.
Firmly plug the power plug into the wall socket. Do not use multiple plug adapters, extension cords, or electric transformers.
Do not hook the power cord on metal objects. Make sure the cord is between objects or behind the oven.
Do not use a damaged power plug, power cord, or loose wall socket. For damaged power plugs or cords, contact a local Samsung service centre.
Do not pour or directly spray water onto the oven.
Do not place objects on the oven, inside, or on the oven door.
Do not spray volatile materials such as insecticide on the oven.
Do not store flammable materials in the oven. Because alcohol vapours can contact hot parts of the oven, use caution when heating food or drinks containing alcohol.
Children may bump themselves or catch their fingers on the door. When opening/closing the door, keep children away.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 6 24/6/2021 8:47:40 AM

Microwave warning

Microwave heating of beverages may result in delayed eruptive boiling; always use caution when handling the container. Always allow beverages to stand at least 20 seconds before handling. If necessary, stir during heating. Always stir after heating.

In the event of scalding, follow these First Aid instructions:

1. Immerse the scalded area in cold water for at least 10 minutes.
2. Cover with a clean, dry dressing.
3. Do not apply any creams, oils, or lotions.

To avoid damaging the tray or rack, do not put the tray or rack in water shortly after cooking.

Do not use the oven for deep fat frying because the oil temperature cannot be controlled. This could result in a sudden boil over of hot oils.

Microwave oven precautions

Only use microwave-safe utensils. Do not use metallic containers, gold or silver trimmed dinnerware, skewers, etc.

Remove wire twist ties. Electric arcing may occur.

Do not use the oven to dry papers or clothes.

Use shorter times for small amounts of food to prevent overheating or burning.

Keep the power cord and power plug away from water and heat sources.

To avoid the risk of explosion, do not heat eggs with shells or hard-boiled eggs. Do not heat airtight or vacuum-sealed containers, nuts, tomatoes, etc.

Do not cover the ventilation slots with cloth or paper. This is a fire hazard. The oven may overheat and turn off automatically and will remain off until it cools sufficiently.

Always use oven mitts when removing a dish.

Stir liquids halfway during heating or after heating ends and allow the liquid stand at least 20 seconds after heating to prevent eruptive boiling.

Stand at arms length from the oven when opening the door to avoid getting scalded by escaping hot air or steam.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 7 24/6/2021 8:47:40 AM

Safety instructions

Do not operate the oven when it is empty. The oven will automatically shut down for 30 minutes for safety purposes. We recommend placing a glass of water inside the oven at all times to absorb microwave energy in case the oven is started accidentally.
Install the oven in compliance with the clearances in this manual. (See Installing your microwave oven.)
Use caution when connecting other electrical appliances to sockets near the oven.

Microwave operation precautions

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

- Do not operate the oven with the door open. Do not tamper with the safety interlocks (door latches). Do not insert anything into the safety interlock holes.
- Do not place any object between the oven door and front face or allow food or cleaner residue to accumulate on sealing surfaces. Keep the door and door sealing surfaces clean by wiping with a damp cloth and then with a soft, dry cloth after each use.
- Do not operate the oven if it is damaged. Only operate after it has been repaired by a qualified technician.
  Important: the oven door must close properly. The door must not be bent; the door hinges must not be broken or loose; the door seals and sealing surfaces must not be damaged.
- All adjustments or repairs must be done by a qualified technician.

Limited warranty

Samsung will charge a repair fee for replacing an accessory or repairing a cosmetic defect if the damage to the unit or accessory was caused by the customer. Items this stipulation covers include:

- Door, handles, out-panel, or control panel that are dented, scratched, or broken.
- A broken or missing tray, guide roller, coupler, or wire rack.


Use this oven only for its intended purpose as described in this instruction manual. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your oven.
Because these following operating instructions cover various models, the characteristics of your microwave oven may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact a local Samsung service centre or find help and information online at www.samsung.com.
Use this oven for heating food only. It is intended for domestic use only. Do not heat any type of textiles or cushions filled with grains. The manufacturer cannot be held liable for damage caused by improper or incorrect use of the oven.
To avoid deterioration of the oven surface and hazardous situations, always keep the oven clean and well maintained.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 8 24/6/2021 8:47:40 AM


Installation

Accessories


Depending on the model that you have purchased, you are supplied with several accessories that can be used in a variety of ways.

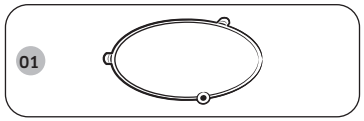


01 **Roller ring**, to be placed in the centre of the microwave oven.
The roller ring supports the turntable.

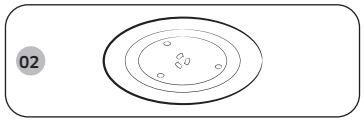

02 **Turntable**, to be placed on the roller ring with the centre fitting to the coupler.
The turntable serves as the main cooking surface; it can be easily removed for cleaning.

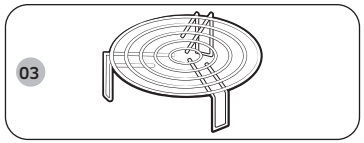

03 **Grill rack**, to be placed on the turntable.
The metal rack can be used in grill and combination cooking.

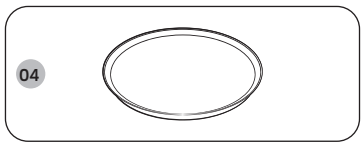


04 **Crusty plate**, see pages 27 to 29.
The crusty plate is used to brown food better in the microwave or grill combination cooking modes. It helps keep pastry and pizza dough crisp.

⚠ CAUTION

Do not operate the microwave oven without the roller ring and turntable.


Installation site

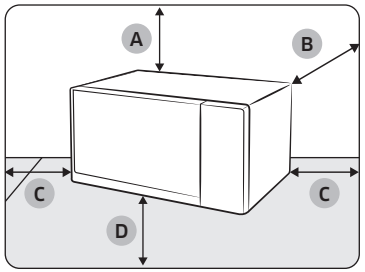

A. 20 cm above
B. 10 cm behind
C. 10 cm on the side
D. 85 cm above the floor

- Select a flat, level surface approximately 85 cm above the floor. The surface must support the weight of the microwave oven.
- For ventilation, secure 20 cm above and 10 cm at the left/right/rear side of the microwave oven.
- Do not install the microwave oven in hot or damp surroundings, such as next to other microwave ovens or radiators.
- Conform to the power supply specifications of this microwave oven. Use only approved extension cables if you need to use.
- Wipe the interior and the door seal with a damp cloth before using your microwave oven for the first time.

Turntable

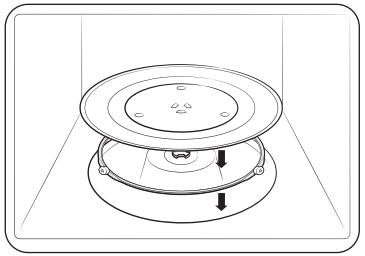

Remove all packing materials inside the microwave oven. Install the roller ring and turntable. Check that the turntable rotates freely.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 9 24/6/2021 8:47:41 AM

Maintenance

Cleaning

Clean the microwave oven regularly to prevent impurities from building up on or inside the microwave oven. Also pay special attention to the door, door sealing, and turntable and roller ring (applicable models only).
If the door won't open or close smoothly, first check if the door seals have built up impurities. Use a soft cloth in soapy water to clean both the inner and outer sides of the microwave oven. Rinse and dry well.

To remove stubborn impurities with bad smells from inside the microwave oven

1. With an empty microwave oven, put a cup of diluted lemon juice on the centre of the turntable.
2. Heat the microwave oven for 10 minutes at max power.
3. When the cycle is complete, wait until the microwave oven cools down. Then, open the door and clean the cooking chamber.

⚠ CAUTION

- Keep the door and door sealing clean and ensure the door opens and closes smoothly. Otherwise, the microwave oven's lifecycle may be shortened.
- Take caution not to spill water into the microwave oven vents.
- Do not use any abrasive or chemical substances for cleaning.
- After each use of the microwave oven, use a mild detergent to clean the cooking chamber after waiting for the microwave oven to cool down.

Replacement (repair)

⚠ WARNING

This microwave oven has no user-removable parts inside. Do not try to replace or repair the microwave oven yourself.

- If you encounter a problem with hinges, sealing, and/or the door, contact a qualified technician or a local Samsung service centre for technical assistance.
- If you want to replace the light bulb, contact a local Samsung service centre. Do not replace it yourself.
- If you encounter a problem with the outer housing of the microwave oven, first unplug the power cord from the power source, and then contact a local Samsung service centre.


Care against an extended period of disuse

If you don't use the microwave oven for an extended period of time, unplug the power cord and move the microwave oven to a dry, dust-free location. Dust and moisture that builds up inside the microwave oven may affect the performance of the microwave oven.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 10 24/6/2021 8:47:41 AM


Microwave oven features

Microwave oven

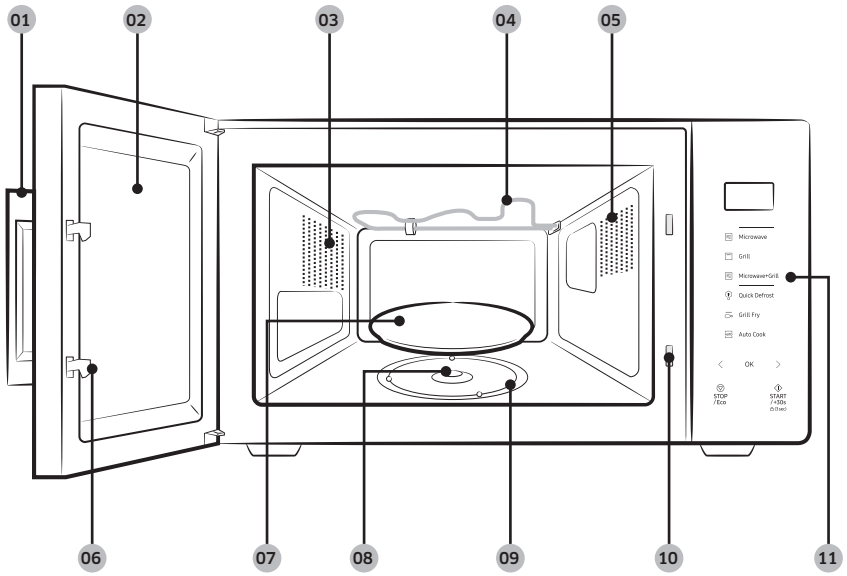

01 Door handle
02 Door
03 Ventilation holes
04 Heating element
05 Light
06 Door latches
07 Turntable
08 Coupler
09 Roller ring
10 Safety interlock holes
11 Control panel

Control panel

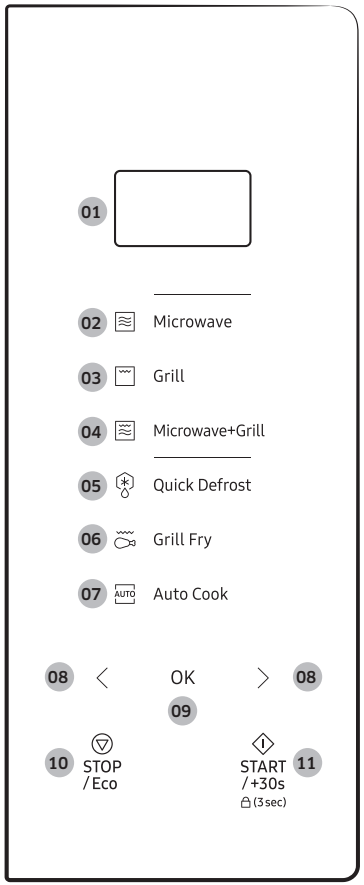

01 Display
02 Microwave
03 Grill
04 Microwave+Grill
05 Quick Defrost
06 Grill Fry
07 Auto Cook
08 Decrease/Increase (Weight/Serving/Time)
09 OK (Clock)
10 STOP/Eco
11 START/+30s (Child Lock)

MG23T5018CC_ST_DE68-04594R-00_EN.indd 11 24/6/2021 8:47:41 AM


Microwave oven use

How a microwave oven works

Microwaves are high-frequency electromagnetic waves; the energy released enables food to be cooked or reheated without changing either the form or the colour.
You can use your microwave oven to:

- Defrost
- Reheat
- Cook

Cooking principle

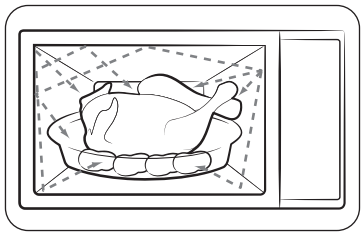

1. The microwaves generated by the magnetron reflected at cavity and are distributed uniformly as the food rotates on the turntable. The food is thus cooked evenly.
2. The microwaves are absorbed by the food up to a depth of about 1 inch (2.5 cm). Cooking then continues as the heat is dissipated within the food.
3. Cooking times vary according to the container used and the properties of the food:
   - Quantity and density
   - Water content
   - Initial temperature (refrigerated or not)

NOTE

As the centre of the food is cooked by heat dissipation, cooking continues even when you have taken the food out of the microwave oven. Standing times specified in recipes and in this booklet must therefore be respected to ensure:


- Even cooking of the food right to the centre.
- The same temperature throughout the food.

Checking that your microwave oven is operating correctly

The following simple procedure enables you to check that your microwave oven is working correctly at all times.
If you have any problems, see the "**Troubleshooting**" section on pages **39** to **42**.

NOTE

The microwave oven must be plugged into an appropriate wall socket. The turntable must be placed in the microwave oven. If a power level other than the maximum (100 % - 800 W) is used, the water takes longer to boil.

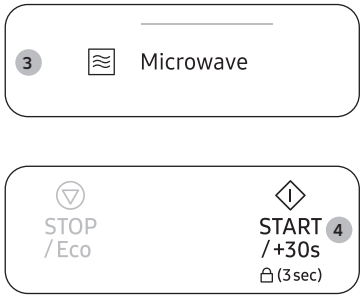

1. Pull the handle to open the microwave oven door.
2. Place a glass of water on the turntable, and then close the door.
3. Press **Microwave**.
4. Press **START/+30s** repeatedly to set the time to 4 or 5 minutes.
5. The microwave oven heats the water for the set time. Check and make sure the water is boiling.


MG23T5018CC_ST_DE68-04594R-00_EN.indd 12 24/6/2021 8:47:42 AM

Cooking/Reheating

The following procedure explains how to cook or reheat food.

⚠ CAUTION

Always check your cooking settings before leaving the microwave oven unattended.

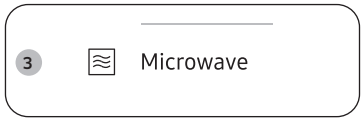


1. Pull the handle to open the microwave oven door.
2. Place the food on the centre of the turntable, and then close the door.


⚠ CAUTION

Do not operate the microwave oven when it is empty.

3. Press **Microwave**.
   - The control panel display shows the corresponding icon (≋) and the maximum power level (800 W).

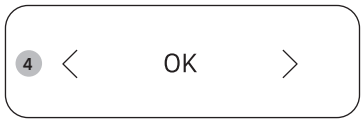

4. Press **<** or **>** (**Decrease/Increase**) to select the desired power level, and then press **OK**.
   - Refer to the "**Power levels and time variations**" section on page **14** for the appropriate power level.

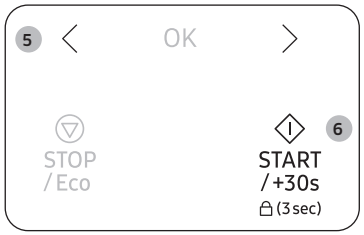

5. Press **<** or **>** (**Decrease/Increase**) to set the desired cooking time.
   - The control panel display shows the cooking time.
6. Press **START/+30s** to start cooking.
   - The light turns on and the turntable starts to rotate.
   - When the cooking is complete, the microwave oven beeps 4 times and the control panel display shows the current time. Then, the end reminder signal beeps once every minute for 3 times.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 13 24/6/2021 8:47:42 AM

Microwave oven use

Setting the time

When power is supplied, “88:88” and then “12:00” is automatically displayed on the display. Please set the current time. The time can be displayed in either the 24-hour or 12-hour clock. You must set the clock:

- When you first install your microwave oven
- After a power failure

NOTE

You must manually change the time to apply daylight saving time.



1. Press **OK**.



2. Press **<** or **>** (**Decrease/Increase**) to select 24-hour or 12-hour clock, and then press **OK**.
3. Press **<** or **>** (**Decrease/Increase**) to set the hour, and then press **OK**.
4. Press **<** or **>** (**Decrease/Increase**) to set the minute, and then press **OK**.

NOTE

The control panel display shows the time when the microwave is not in use.

Power levels and time variations

The power level function enables you to adapt the amount of energy dissipated and thus the time required to cook or reheat your food, according to its type and quantity. You can choose between six power levels.

Power level	Percentage	Output
HIGH	100 %	800 W
MEDIUM HIGH	75 %	600 W
MEDIUM	56 %	450 W
MEDIUM LOW	38 %	300 W
DEFROST	23 %	180 W
LOW	13 %	100 W

The cooking times given in recipes and in this booklet correspond to the specific power level indicated.

- The cooking time decreases If you select a higher power level.
- The cooking time increases If you select a lower power level.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 14 24/6/2021 8:47:42 AM

Adjusting the cooking time

You can increase or decrease the cooking time while the microwave oven is cooking.

- Check how cooking is progressing at any time simply by opening the door, and then increase or decrease the cooking time if necessary.




Method 1

Press **START/+30s** to increase the cooking time by 30 seconds.

- Example: To add three minutes, press **START/+30s** six times.

NOTE

You can only increase the cooking time.

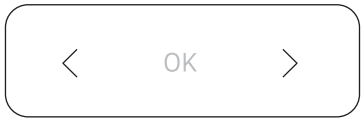

Method 2

Press **<** or **>** (**Decrease/Increase**) to adjust the cooking time.

Stopping the cooking

You can stop cooking at any time so that you can:

- Check the food
- Turn the food over or stir it
- Leave it to stand

To stop the cooking temporarily


1. Open the door or press **STOP/Eco** once.
   - Cooking stops temporarily.
2. To resume cooking, close the door and press **START/+30s**.

To stop the cooking completely

1. Open the door or press **STOP/Eco** once.
   - Cooking stops temporarily.
2. Press **STOP/Eco** button again.

Setting the energy save mode

The microwave oven has an energy save mode.

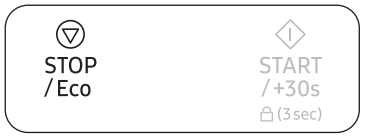

- Press **STOP/Eco**. The control panel display turns off.
- To cancel the energy save mode, open the door or press **STOP/Eco**. The control panel display shows the current time.

NOTE

Auto energy saving function

The product returns to standby status if there is no input for 25 minutes in the middle of setting or while the operation has been paused. Also, if you leave the door open, the interior lamp automatically turns off after 5 minutes.

Using the Quick Defrost

The Quick Defrost features enable you to defrost meat, poultry, fish, frozen vegetable and frozen bread. The defrost time and power level are set automatically. You simply select the programme and the weight.

NOTE

Use only containers that are microwave-safe.

Open the door. Place the frozen food on a ceramic in the centre of the turntable. Close the door.



1. Pull the handle to open the microwave oven door.
2. Place the food on the centre of the turntable, and then close the door.
3. Press **Quick Defrost**.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 15 24/6/2021 8:47:42 AM

Microwave oven use



4. Press **<** or **>** (**Decrease/Increase**) to select the type of food, and then press **OK**.
   - For more information, see the "**Quick Defrost programme description**" section on page **16**.
5. Press **<** or **>** (**Decrease/Increase**) to set the serving size, and then press **OK**.



6. Press **START/+30s** to start defrosting.
   - When the microwave oven beeps, open the door and turn the food over.
7. Close the door, and then press **START/+30s** to resume defrosting.
   - When the defrosting is complete, the microwave oven beeps 4 times and the control panel display shows the current time. Then, the end reminder signal beeps once every minute for 3 times.

Quick Defrost programme description

The following table presents the various Quick Defrost programmes, serving size, standing times and appropriate instructions. Remove all kind of package material before defrosting. Place meat, poultry, fish, vegetable and bread on a flat glass dish or ceramic plate.

Code	Food	Serving Size	Instructions
1	Meat	200-1500 g	Shield the edges with aluminium foil. Turn the meat over, when the oven beeps. This programme is suitable for beef, lamb, pork, steaks, chops, minced meat. Stand for 20-60 minutes.
2	Poultry	200-1500 g	Shield the leg and wing tips with aluminium foil. Turn the poultry over, when the oven beeps. This programme is suitable for whole chicken as well as for chicken portions. Stand for 20-60 minutes.
3	Fish	200-1500 g	Shield the tail of a whole fish with aluminium foil. Turn the fish over, when the oven beeps. This programme is suitable for whole fishes as well as for fish fillets. Stand for 20-60 minutes.
4	Frozen Vegetable	200-1500 g	Spread frozen vegetable evenly into a flat glass dish. Turn over or stir the frozen vegetable, when the oven beeps. This programme is suitable for all kind of frozen vegetable. Stand for 5-20 minutes.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 16 24/6/2021 8:47:42 AM

Code	Food	Serving Size	Instructions
5	Bread	200-1500 g	Put bread horizontally on a piece of kitchen paper and turn over, as soon as the oven beeps. Place cake on a ceramic plate and if possible, turn over, as soon as the oven beeps. This programme is suitable for all kinds of bread, sliced or whole, as well as for bread rolls and baguettes. Arrange bread rolls in a circle. This programme is suitable for all kinds of yeast cake, biscuit, cheese cake and puff pastry. It is not suitable for short/ crust pastry, fruit and cream cakes as well as for cake with chocolate topping. Stand for 10-30 minutes.

Using Grill Fry

Grill Fry has 15 pre-programmed cook settings. You do not need to set either the cooking times or the power level.

⚠ CAUTION

Use only containers that are microwave-safe.



1. Pull the handle to open the microwave oven door.
2. Place the food on the centre of the turntable, and then close the door.
3. Press **Grill Fry**.
4. Press **<** or **>** (**Decrease/Increase**) to select the type of food, and then press **OK**.
   - For more information, see the "**Grill Fry programme description**" section on pages **18** to **19**.
5. Press **START/+30s** to start Grill Fry.
   - The microwave oven cooks the food according to the selected pre-programmed setting.
   - When the cooking is complete, the microwave oven beeps 4 times and the control panel display shows the current time. Then, the end reminder signal beeps once every minute for 3 times.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 17 24/6/2021 8:47:43 AM

Microwave oven use

Grill Fry programme description

Code	Food	Serving Size	Instructions
1	Frozen French Fries	400 g	Place frozen French fries on the crusty plate with the rack. Put them in the microwave oven. Select the Grill Fry program [1] and press **START/+30s** button. After cooking, stand for 2-3 minutes.
2	Frozen Pork Cutlet	500 g	Place frozen pork cutlet on the crusty plate with the rack. Put them in the microwave oven. Select the Grill Fry program [2] and press **START/+30s** button. When the beeps, turn the food and then press the **START/+30s** to continue. After cooking, stand for 2-3 minutes.
3	Frozen Chicken Nuggets	350 g	Place frozen chicken nuggets on the crusty plate with the rack. Put them in the microwave oven. Select the Grill Fry program [3] and press **START/+30s** button. After cooking, stand for 2-3 minutes.
4	Frozen Potato Croquettes	350 g	Place frozen potato croquettes on the crusty plate with the rack. Put them in the microwave oven. Select the Grill Fry program [4] and press **START/+30s** button. After cooking, stand for 2-3 minutes.
5	Frozen Corn Dogs	450-500 g	Place frozen corn dogs on the crusty plate with the rack. Put them in the microwave oven. Select the Grill Fry program [5] and press **START/+30s** button. After cooking, stand for 2-3 minutes.
6	Frozen Fish Cutlets	300 g	Place frozen fish cutlets on the crusty plate with the rack. Put them in the microwave oven. Select the Grill Fry program [6] and press **START/+30s** button. After cooking, stand for 2-3 minutes.
7	Frozen Buffalo Wings	500 g	Place frozen buffalo wings on the crusty plate with the rack. Put them in the microwave oven. Select the Grill Fry program [7] and press **START/+30s** button. After cooking, stand for 2-3 minutes.
8	Frozen Cheese Cutlets	400 g	Place frozen cheese cutlets on the crusty plate with the rack. Put them in the microwave oven. Select the Grill Fry program [8] and press **START/+30s** button. After cooking, stand for 2-3 minutes.
9	Frozen Cheese Sticks	300 g	Place frozen cheese sticks on the crusty plate with the rack. Put them in the microwave oven. Select the Grill Fry program [9] and press **START/+30s** button. After cooking, stand for 2-3 minutes.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 18 24/6/2021 8:47:43 AM

Code	Food	Serving Size	Instructions
10	Frozen Spring Rolls	300 g	Slightly oil the frozen spring rolls on the surface. Place frozen spring rolls on the crusty plate with the rack. Put them in the microwave oven. Select the Grill Fry program [10] and press **START/+30s** button. When the beeps, turn the food and then press the **START/+30s** to continue. After cooking, stand for 2-3 minutes.
11	Frozen Breaded Shrimps	300 g	Slightly oil the frozen breaded shrimps on the surface. Place frozen breaded shrimps on the crusty plate with the rack. Put them in the microwave oven. Select the Grill Fry program [11] and press **START/+30s** button. When the beeps, turn the food and then press the **START/+30s** to continue. After cooking, stand for 2-3 minutes.
12	Frozen Onion Rings	300 g	Place frozen onion rings on the crusty plate with the rack. Put them in the microwave oven. Select the Grill Fry program [12] and press **START/+30s** button. After cooking, stand for 2-3 minutes.
13	Frozen Wedge Potatoes	350 g	Place frozen wedge potatoes on the crusty plate with the rack. Put them in the microwave oven. Select the Grill Fry program [13] and press **START/+30s** button. After cooking, stand for 2-3 minutes.
14	Chicken Drum Sticks	500 g	Slightly oil the chicken drums sticks on the surface. Add seasoning them according to your preference. Place chicken drums sticks on the crusty plate with the rack. Put them in the microwave oven. Select the Grill Fry program [14] and press **START/+30s** button. After cooking, stand for 2-3 minutes.
15	Chicken Wings	500 g	Slightly oil the chicken wings on the surface. Add seasoning them according to your preference. Place chicken wings on the crusty plate with the rack. Put them in the microwave oven. Select the Grill Fry program [15] and press **START/+30s** button. After cooking, stand for 2-3 minutes.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 19 24/6/2021 8:47:43 AM

Microwave oven use

Using Auto Cook

Auto Cook has 33 pre-programmed cook settings. You do not need to set either the cooking times or the power level.

⚠ CAUTION

Use only containers that are microwave-safe.



1. Pull the handle to open the microwave oven door.
2. Place the food on the centre of the turntable, and then close the door.
3. Press **Auto Cook**.



4. Press **<** or **>** (**Decrease/Increase**) to select the desired category, and then press **OK**.
   - 1. Healthy Cooking
   - 2. Home Dessert
   - 3. Bread Defrost
5. Press **<** or **>** (**Decrease/Increase**) to select the type of food, and then press **OK**.
   - For more information, see the "**Auto Cook programme description**" section on pages **21** to **25**.



6. Press **<** or **>** (**Decrease/Increase**) to select the weight of food, and then press **OK**.
   - For more information, see the "**Auto Cook programme description**" section on pages **21** to **25**.
   - Depending on the selected menu, you may have only one weight option available to select.
   - You do not have to select a weight for Home Dessert.



7. Press **START/+30s** to start Auto Cook.
   - The microwave oven cooks the food according to the selected pre-programmed setting.
   - When the cooking is complete, the microwave oven beeps 4 times and the control panel display shows the current time. Then, the end reminder signal beeps once every minute for 3 times.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 20 24/6/2021 8:47:43 AM

The following table presents quantities and appropriate instructions about 33 pre-programmed cooking options. The pre-programmes are categorized into Healthy Cooking and Home Dessert.

⚠ CAUTION

Use oven gloves when taking out food.

Auto Cook programme description

1. Healthy Cooking

Code	Food	Serving Size	Instructions
1-1	Ready Meal (chilled)	350 g 450 g	Put meal on a ceramic plate and cover with microwave cling film. This programme is suitable for meals consisting of 3 components (e.g. meat with sauce, vegetables and a side dish like potatoes, rice or pasta). Stand for 2-3 minutes.
1-2	Vegetarian Meal (chilled)	350 g 450 g	Put meal on a ceramic plate and cover with microwave cling film. This programme is suitable for meals consisting of 2 components (e.g. spaghetti with sauce or rice with vegetables). Stand for 2-3 minutes.
1-3	Broccoli Florets	250 g	Rinse and clean broccoli florets. Put them evenly into a glass bowl with lid. Add 30-45 ml water. (2-3 tbsp.) Put bowl in the centre of turntable. Cook covered. Stir after cooking. This programme is suitable for broccoli as well as sliced courgette, egg plant, pumpkin or pepper. Stand for 1-2 minutes.
1-4	Sliced Carrots	250 g	Rinse and clean carrots cut into round slices evenly. Put them into a glass bowl with lid. Add 30-45 ml water. (2-3 tbsp.) Put bowl in the centre of turntable. Cook covered. Stir after cooking. This programme is suitable for sliced carrots as well as cauliflower florets or turnip cabbage. Stand for 1-2 minutes.
1-5	Green Beans	250 g	Rinse and clean green beans. Put them evenly into a glass bowl with lid. Add 30 ml (1 tbsp.) water when cooking 250 g. Put bowl in the centre of turntable. Cook covered. Stir after cooking. Stand for 1-2 minutes.
1-6	Spinach	150 g	Rinse and clean spinach. Put into a glass bowl with lid. Do not add water. Put bowl in the centre of turntable. Cook covered. Stir after cooking. Stand for 1-2 minutes.
1-7	Corn on the Cob	250 g	Rinse and clean corn on the cobs and put into an oval glass dish. Cover with microwave cling film and pierce film. Stand for 1-2 minutes.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 21 24/6/2021 8:47:43 AM

Microwave oven use

Code	Food	Serving Size	Instructions
1-8	Peeled Potatoes	250 g	Wash and peel the potatoes and cut into a similar size. Put them into a glass bowl with lid. Add 45-60 ml (3-4 tbsp.) water. Put bowl in the centre of turntable. Cook covered. Stand for 2-3 minutes.
1-9	Brown Rice (parboiled)	125 g	Use a large glass ovenware dish with lid. Add double quantity of cold water (500 ml). Cook covered. Stir before standing time and add salt and herbs. Stand for 5-10 minutes.
1-10	Wholemeal Macaroni	125 g	Use a large glass ovenware dish with lid. Add 1 L hot boiling water, a pinch of salt and stir well. Cook uncovered. Stir before standing time and drain thoroughly afterwards. Stand for 1 minutes.
1-11	Quinoa	125 g	Use a large glass ovenware dish with lid. Add double quantity of cold water (500 ml). Cook covered. Stir before standing time and add salt and herbs. Stand for 1-3 minutes.
1-12	Bulgur	125 g	Use a large glass ovenware dish with lid. Add double quantity of cold water (500 ml). Cook covered. Stir before standing time and add salt and herbs. Stand for 2-5 minutes.
1-13	Vegetable Gratin	500 g	Put the vegetables, such as precooked potato slices, courgette slices and tomatoes and sauce into a suitable sized glass pyrex dish. Add grated cheese on top. Put dish on the grill rack. Stand for 2-3 minutes.
1-14	Grilled Tomatoes	400 g	Rinse and clean tomatoes, cut them into halves and put in an ovenware dish. Add grated cheese on top. Put dish on grill rack. Stand for 1-2 minutes.
1-15	Chicken Breasts	300 g (2 pcs.)	Rinse pieces and put on a ceramic plate. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 2 minutes.
1-16	Turkey Breasts	300 g (2 pcs.)	Rinse pieces and put on a ceramic plate. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 2 minutes.
1-17	Fresh Fish Filets	300 g (2 pcs.)	Rinse fish and put on a ceramic plate, add 1 tbsp. lemon juice. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 1-2 minutes.
1-18	Fresh Salmon Filets	300 g (2 pcs.)	Rinse fish and put on a ceramic plate, add 1 tbsp. lemon juice. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 1-2 minutes.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 22 24/6/2021 8:47:43 AM

Code	Food	Serving Size	Instructions
1-19	Fresh Prawns	250 g	Rinse prawns on a ceramic plate, add 1 tbsp. lemon juice. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 1-2 minutes.
1-20	Fresh Trout	200 g	Put 1-2 fresh whole fish into an microwave oven proof dish. Add a pinch salt, 1 tbsp. lemon juice and herbs. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 2 minutes.
1-21	Grilled Fish	300 g	Brush skin of whole fish (trout or gilthead) with oil and add herbs and spices. Put fish side by side, head to tail on the grill rack. Turnover, as soon as the beep sounds. Stand for 3 minutes.
1-22	Grilled Salmon Steaks	400 g (2 steaks)	Put fish steaks evenly on the grill rack. Turnover, as soon as the beep sounds. Stand for 2 minutes.

2. Home Dessert

Code	Food	Serving Size	Instructions
2-1	Walnut Pound Cake	1 serving	Ingredients Flour 120 g, Butter 150 g, Black sugar 100 g, Egg 2 pcs., Walnut (Chopped) 50 g, Baking powder 4 g
			1. Combine a butter and black sugar in bowl. **2.** Add egg and mix well. **3.** Add a flour, baking powder and keep stirring. **4.** Add a walnut and mix well. **5.** Pour a mixture in greased glass or plastic bowl. **6.** Put the bowl in the microwave oven and select the Auto Cook [2-1]. **7.** After cooking, stand for 2-3 minutes.
2-2	Banana Bread	1 serving (6 pcs.)	Ingredients Banana 3 pcs., Pancake mix 120 g, Milk 120 g, Egg 1 pc., Malt syrup 2 tbsp.
			1. Chop the banana. **2.** Combine a pancake mix, milk, egg, malt syrup in bowl. **3.** Add banana and mix well. **4.** Pour a mixture in 6 paper cups. **5.** Put paper cups in the microwave oven and select the Auto Cook [2-2]. **6.** After cooking, stand for 2-3 minutes.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 23 24/6/2021 8:47:43 AM

Microwave oven use

Code	Food	Serving Size	Instructions
2-3	Sponge Cake	1 serving	Ingredients Flour 170 g, Butter 50 g, Sugar 150 g, Egg 3 pcs., Baking powder 10 g
			1. Combine a butter and sugar in bowl. **2.** Add egg and mix well. **3.** Add a flour, baking powder and keep stirring. **4.** Pour a mixture in greased glass or plastic bowl. **5.** Put the bowl in the microwave oven and select the Auto Cook [2-3]. **6.** After cooking, stand for 2-3 minutes.
2-4	Brownie	1 serving	Ingredients Flour 90 g, Butter(Melted) ½ cup, Sugar 230 g, Egg 2 pcs., Cocoa power 40 g
			1. Combine a butter, beaten eggs, sugar in bowl. **2.** Add a flour, cocoa powder and keep stirring. **3.** Pour a mixture in greased glass or plastic bowl. **4.** Put the bowl in the microwave oven and select the Auto Cook [2-4]. **5.** After cooking, stand for 20-30 minutes.

Code	Food	Serving Size	Instructions
2-5	Egg Pudding	1 serving (3 pcs.)	Ingredients Milk 250 g, Sugar 40 g, Egg 2 pcs.
			1. Crack the two eggs into a bowl. Lightly beat the egg with a balloon whisk. Don't let the tip of the whisk leave the bottom of the bowl to avoid creating too much foam. **2.** Combine milk, sugar in other bowl. **3.** Add the milk to the beaten egg while whisking the mixture. **4.** Sieve the egg mixture with a fine mesh strainer. Scrape off the bottom of the strainer with a spatula. Remove any foam on the surface with a spoon. **5.** Pour the mixture into custard cups. **6.** Put the cups in the microwave oven and select the Auto Cook [2-5]. **7.** After cooking, refrigerate and serve.
2-6	Chocolate Mug Cake	1 serving	Ingredients Butter 30 g, Sugar 60 g, Egg 1 pc., Heavy cream 40 g, Flour 25 g, Cocoa powder 15 g, Vanilla 1.5 g, Semi-sweet chocolate chips 50 g
			1. Combine the butter, egg and cream together in a mug until well combined. **2.** Add the flour, sugar and keep stirring. **3.** Add the cocoa, vanilla and stir until just combined. **4.** Stir in the chocolate chips. **5.** Put the mug in the microwave oven and select the Auto Cook [2-6]. **6.** After cooking, stand for 2-3 minutes.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 24 24/6/2021 8:47:43 AM

Code	Food	Serving Size	Instructions
2-7	Mug Cake	1 serving	Ingredients Butter 30 g, Sugar 60 g, Egg 1 pc., Flour 50 g, Milk 30 g, Vanilla 6 g, Almond powder 3 g, Baking powder 1.5 g
			1. Combine the butter, egg together in a mug until well combined. **2.** Add the flour, sugar, baking powder and keep stirring. **3.** Add the almond powder, vanilla and stir until just combined. **4.** Put the mug in the microwave oven and select the Auto Cook [2-7]. **5.** After cooking, stand for 2-3 minutes.
2-8	Café Latte	1 serving	Ingredients Instant coffee powder 2 g, Water 50 g, Milk 125 g
			1. Mix the coffee powder and water in mug. **2.** Pour milk in other mug. **3.** Put the coffee mixture in the microwave oven and select the Auto Cook [2-8]. **4.** When the beeps, take mug out. **5.** Put the milk in the microwave oven and press the **START/+30s** button. **6.** After cooking, mix all well and serve.
2-9	Green Tea Latte	1 serving	Ingredients Green tea powder 6 g, Sugar 15 g, Milk 250 g
			1. Mix all ingredients in mug. **2.** Put the mug in the microwave oven and select the Auto Cook [2-9]. **3.** After cooking, mix well and serve.
2-10	Milk Tea	1 serving	Ingredients Black tea bag 2 pcs., Water 60 g, Milk 125 g
			1. Mix the black tea bag and water in mug. **2.** Pour milk in other mug. **3.** Put the tea mixture in the microwave oven and select the Auto Cook [2-10]. **4.** When the beeps, take mug out. **5.** Put the milk in the microwave oven and press the **START/+30s** button. **6.** After cooking, mix all well and serve.

3. Bread Defrost

This function is defrosting and reheating for frozen bread. Frozen bread will have crisp outside like fresh bread. This program is suitable for baguettes, croissants, bagels and so on.

⚠ **CAUTION**

- This program is suitable for frozen bread which is baked. It is Not suitable for frozen dough.
- Crusty plate Must be preheated. Please follow the instructions.

Code	Food	Serving Size	Instructions
3	Bread Defrost	100-600 g	Put the crusty plate on the turntable. Select auto cook program and press the **START/+30s** button. Display will show "HEAt" for preheating the crusty plate. When the beep, preheating is done. Place frozen bread on the crusty plate and put them in the microwave oven. Press the **START/+30s** button again. After cooking, stand for 2-3 minutes.


MG23T5018CC_ST_DE68-04594R-00_EN.indd 25 24/6/2021 8:47:43 AM

Microwave oven use

Grilling

The grill enables you to heat and brown food quickly, without using microwaves.

- Always use oven gloves when touching the cookware in the microwave oven, as they will be very hot.
- You can get better cooking and grilling results, if you use the grill rack.

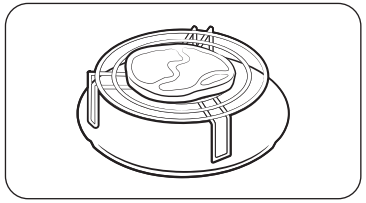

1. Pull the handle to open the microwave oven door.
2. Place the food on the grill rack, and then close the door.



3. Press **Grill**.
   - The control panel display shows the corresponding icon ( ).
   - You cannot set the temperature of the grill.



4. Press **<** or **>** (**Decrease/Increase**) to set the desired grilling time.
   - The maximum grilling time is 60 minutes.
5. Press **START/+30s** to start grilling.
   - When the grilling is complete, the microwave oven beeps 4 times and the control panel display shows the current time. Then, the end reminder signal beeps once every minute for 3 times.

Combining microwaves and grill

You can also combine microwave cooking with the grill, to cook quickly and brown at the same time.

⚠ CAUTION

- Always use microwave-safe and oven-proof cookware. Glass or ceramic dishes are ideal as they allow the microwaves to penetrate the food evenly.
- Always use oven gloves when touching the cookware in the microwave oven, as they will be very hot.
- You can improve cooking and grilling, if you use the grill rack.




1. Pull the handle to open the microwave oven door.
2. Place the food on the grill rack, and then close the door.
3. Press **Microwave+Grill**.
   - The control panel display shows the default power level (600 W).
   - The control panel display shows the corresponding icon (,).



4. Press **<** or **>** (**Decrease/Increase**) to select the desired power level, and then press **OK**.
   - You can select the power level from 600 W, 450 W, or 300 W.
   - You cannot set the temperature of the grill.


MG23T5018CC_ST_DE68-04594R-00_EN.indd 26 24/6/2021 8:47:44 AM

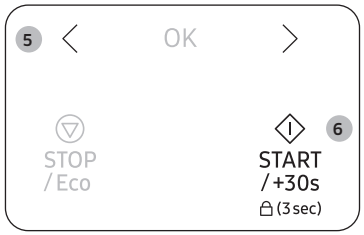


5. Press **<** or **>** (**Decrease/Increase**) to set the desired cooking time.
   - The maximum cooking time is 60 minutes.
6. Press **START/+30s** to start cooking.
   - When the cooking is complete, the microwave oven beeps 4 times and the control panel display shows the current time. Then, the end reminder signal beeps once every minute for 3 times.


Using the crusty plate

This crusty plate allows you to brown food not only on the top with the grill, but also the bottom of the food turns crispy and brown due to the high temperature of the crusty plate. Several items which you can prepare on the crusty plate can be found in the chart (see next page). The crusty plate can also be used for bacon, eggs, sausages, etc.

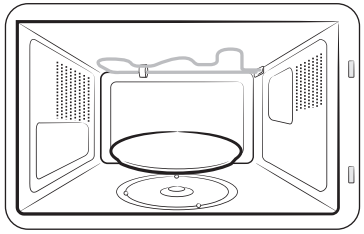

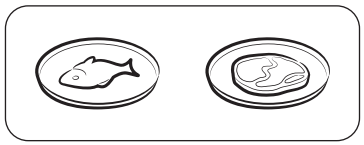

1. Place the crusty plate directly on the turntable and preheat it with highest Microwave-Grill-Combination [600 W + Grill] by following the times and instructions in the chart.
2. Brush the plate with oil if you are cooking food, such as bacon and eggs, in order to brown the food nicely.
3. Place the food on the crusty plate.

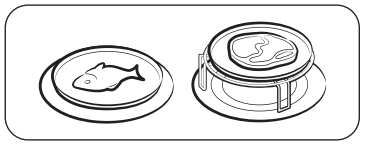

4. Place the crusty plate on the metal rack (or turntable) in the microwave.



5. Select the appropriate cooking time and power.
   (Refer to the table on the side)

⚠ CAUTION

- Always use oven gloves to take out the crusty plate, as will become very hot.
- Do not place any objects on the crusty plate that are not heat-resistant.
- Never place the crusty plate in the oven without turntable.
- Please note that the crust plate is not dish washer-safe.

NOTE

- Please note that the crusty plate has a teflon layer which is not scratch-resistant. Do not use any sharp objects like a knife to cut on the crusty plate.
- Clean the crusty plate with warm water and detergent and rinse off with clean water.
- Do not use a scrubbing brush or a hard sponge otherwise the top layer will be damaged.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 27 24/6/2021 8:47:44 AM

Microwave oven use

We recommend to preheat the crusty plate directly on the turntable.
Preheat crusty plate with 600 W + Grill function for 3-4 minutes.
Follow the times and instructions in the table.

Food	Serving Size	Power	Cooking time (min.)
Bacon	4 slices (80 g)	600 W + Grill	3-3½
	Instructions Preheat crust plate for 3 minutes. Put slices side by side on crust plate. Put crust plate on rack. Stand for 3 minutes.		
Grilled Tomatoes	200 g (2 pcs.)	450 W + Grill	2½-3
	Instructions Preheat crust plate for 3 minutes. Cut tomatoes in halves. Put some cheese on top. Arrange in a circle on crust plate. Put crust plate on rack. Stand for 3 minutes.		
Burger (Frozen)	2 pieces (125 g)	600 W + Grill	6-6½
	Instructions Preheat crust plate for 3 minutes. Put frozen burger on the crust plate. Put crust plate on rack. Turn over after 3-4 min. Stand for 3 minutes.		
Baguettes (Frozen)	200-250 g (2 pcs.)	450 W + Grill	6-7
	Instructions Preheat crust plate for 3 minutes. Put baguettes with topping (e.g. tomato-cheese) side by side on the plate. Put crust plate on rack. Stand for 3 minutes.		
Pizza (Frozen)	300-350 g	450 W+Grill	11-12
	Instructions Preheat the crust plate for 3 minutes. Put the frozen pizza on the crust plate. Put crust plate on the turntable. Stand for 1-2 minutes.		
Mini Pizza-Snack (Frozen)	9 X 30 g (270 g)	300 W + Grill	9-10
	Instructions Preheat crust plate for 3 minutes. Distribute pizza snacks evenly on crust plate. Put the plate on the Turntable. Stand for 3 minutes.		
Pizza (Chilled)	300-350 g	450 W + Grill	5½-6½
	Instructions Preheat crust plate for 5 minutes. Put the chilled pizza on the plate. Put crust plate on the Turntable. Stand for 3 minutes.		
Fish Fingers (Frozen)	150 g (5 pcs.) 300 g (10 pcs.)	600 W + Grill	6-7 8-9
	Instructions Preheat crust plate for 4 minutes. Brush plate with 1 tbsp. oil. Put fish fingers in a circle on the plate. Turn over after 3 min (5 pcs.) or after 5 min. (10 pcs.). Stand for 3 minutes.		
Chicken Nuggets (Frozen)	125 g 250 g	600 W + Grill	4-5 6-7
	Instructions Preheat crust plate for 4 minutes. Brush plate with 1 tbsp. oil. Put chicken nuggets on the plate. Put crust plate on rack. Turn over after 2 min (125 g) or 4 min. (250 g). Stand for 3 minutes.		

MG23T5018CC_ST_DE68-04594R-00_EN.indd 28 24/6/2021 8:47:44 AM

Food	Serving Size	Power	Cooking time (min.)
Baked Potatoes	250 g 500 g	600 W + Grill	4-5 7-8
	Instructions Preheat crust plate for 3 minutes. Cut potatoes in halves. Put them on the crust plate with the cut-side to the bottom. Arrange in a circle. Put the plate on the rack. Stand for 3 minutes.		

Using Child Lock

Your microwave oven is fitted with a special child lock programme, which enables the microwave oven to be “locked” so that children or anyone unfamiliar with it cannot operate it accidentally.




- To activate Child Lock, press and hold **START/+30s** for 3 seconds.
  - The control panel is locked, and the control panel display shows “L”.



- To deactivate Child Lock, press and hold **START/+30s** again for 3 seconds.

Switching the beeper off

You can switch the beeper off whenever you want.

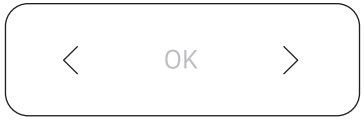

- To turn the beeping sound off, press **<** and **>** (**Decrease/Increase**) at the same time.
- To turn the beeping sound back on, press **<** and **>** (**Decrease/Increase**) at the same time again.

Cookware guide

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used.
Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry.
The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-safe	Comments
Alunimium foil	✓✗	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the microwave oven wall or if too much foil is used.
Crust plate	✓	Do not preheat for more than 8 minutes.
China and earthenware	✓	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
Disposable polyester cardboard dishes	✓	Some frozen foods are packaged in these dishes.
Fast-food packaging		
• Polystyrene cups containers	✓	Can be used to warm food. Overheating may cause the polystyrene to melt.
• Paper bags or newspaper	✗	May catch fire.
• Recycled paper or metal trims	✗	May cause arcing.
Glassware		
• Oven-to-tableware	✓	Can be used, unless decorated with a metal trim.
• Fine glassware	✓	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 29 24/6/2021 8:47:44 AM

Cookware guide

Cookware	Microwave-safe	Comments
• Glass jars	✓	Must remove the lid. Suitable for warming only.
Metal		
• Dishes	✗	May cause arcing or fire.
• Freezer bag twist ties	✗	
Paper		
• Plates, cups, napkins and kitchen paper	✓	For short cooking times and warming. Also to absorb excess moisture.
• Recycled paper	✗	May cause arcing.
Plastic		
• Containers	✓	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic.
• Cling film	✓	Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
• Freezer bags	✓✗	Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
Wax or grease-proof paper	✓	Can be used to retain moisture and prevent spattering.

✓ : Recommended ✓✗ : Use caution ✗ : Unsafe

Cooking guide

Microwaves

Microwave energy actually penetrates food, attracted and absorbed by its water, fat and sugar content.
The microwaves cause the molecules in the food to move rapidly. The rapid movement of these molecules creates friction and the resulting heat cooks the food.

Cooking

Cookware for microwave cooking:

Cookware must allow microwave energy to pass through it for maximum efficiency. Microwaves are reflected by metal, such as stainless steel, aluminium and copper, but they can penetrate through ceramic, glass, porcelain and plastic as well as paper and wood. So food must never be cooked in metal containers.

Food suitable for microwave cooking:

Many kinds of food are suitable for microwave cooking, including fresh or frozen vegetables, fruit, pasta, rice, grains, beans, fish, and meat. Sauces, custard, soups, steamed puddings, preserves, and chutneys can also be cooked in a microwave oven. Generally speaking, microwave cooking is ideal for any food that would normally be prepared on a hob. Melting butter or chocolate, for example (see the chapter with tips, techniques and hints).

Covering during cooking

To cover the food during cooking is very important, as the evaporated water rises as steam and contributes to cooking process. Food can be covered in different ways: e.g. with a ceramic plate, plastic cover or microwave suitable cling film.

Standing times

After cooking is over food the standing time is important to allow the temperature to even out within the food.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 30 24/6/2021 8:47:44 AM

Cooking Guide for frozen vegetables

Use a suitable glass pyrex bowl with lid. Cook covered for the minimum time - see table. Continue cooking to get the result you prefer.
Stir twice during cooking and once after cooking. Add salt, herbs or butter after cooking. Cover during standing time.

Food	Serving Size	Power	Time (min.)
Spinach	150 g	600 W	4½-5½
	Instructions Add 15 ml (1 tbsp.) cold water. Stand for 2-3 minutes.		
Broccoli	300 g	600 W	9-10
	Instructions Add 30 ml (2 tbsp.) cold water. Stand for 2-3 minutes.		
Peas	300 g	600 W	7½-8½
	Instructions Add 15 ml (1 tbsp.) cold water. Stand for 2-3 minutes.		
Green Beans	300 g	600 W	8-9
	Instructions Add 30 ml (2 tbsp.) cold water. Stand for 2-3 minutes.		
Mixed Vegetables (Carrots/Peas/Corn)	300 g	600 W	7½-8½
	Instructions Add 15 ml (1 tbsp.) cold water. Stand for 2-3 minutes.		
Mixed Vegetables (Chinese Style)	300 g	600 W	8-9
	Instructions Add 15 ml (1 tbsp.) cold water. Stand for 2-3 minutes.		

Cooking Guide for fresh vegetables

Use a suitable glass pyrex bowl with lid. Add 30-45 ml cold water (2-3 tbsp.) for every 250 g unless another water quantity is recommended – see table. Cook covered for the minimum time – see table. Continue cooking to get the result you prefer. Stir once during and once after cooking. Add salt, herbs or butter after cooking. Cover during a standing time of 3 minutes.

Hint: Cut the fresh vegetables into even sized pieces. The smaller they are cut, the quicker they will cook.

Food	Serving Size	Power	Time (min.)
Broccoli	250 g 500 g	800 W	4-4½ 7-7½
	Instructions Prepare even sized florets. Arrange the stems to the centre. Stand for 3 minutes.		
Brussels Sprouts	250 g	800 W	5½-6½
	Instructions Add 60-75 ml (4-5 tbsp.) water. Stand for 3 minutes.		
Carrots	250 g	800 W	4½-5
	Instructions Cut carrots into even sized slices. Stand for 3 minutes.		
Cauliflower	250 g 500 g	800 W	5-5½ 8½-9
	Instructions Prepare even sized florets. Cut big florets into halves. Arrange stems to the centre. Stand for 3 minutes.		
Courgettes	250 g	800 W	3½-4
	Instructions Cut courgettes into slices. Add 30 ml (2 tbsp.) water or a knob of butter. Cook until just tender. Stand for 3 minutes.		

MG23T5018CC_ST_DE68-04594R-00_EN.indd 31 24/6/2021 8:47:44 AM

Cooking guide

Food	Serving Size	Power	Time (min.)
Egg Plants	250 g	800 W	3½-4
	Instructions Cut egg plants into small slices and sprinkle with 1 tbsp. lemon juice. Stand for 3 minutes.		
Leeks	250 g	800 W	4½-5
	Instructions Cut leeks into thick slices. Stand for 3 minutes.		
Mushrooms	125 g 250 g	800 W	1½-2 3-3½
	Instructions Prepare small whole or sliced mushrooms. Do not add any water. Sprinkle with lemon juice. Spice with salt and pepper. Drain before serving. Stand for 3 minutes.		
Onions	250 g	800 W	5½-6
	Instructions Cut onions into slices or halves. Add only 15 ml (1 tbsp.) water. Stand for 3 minutes.		
Pepper	250 g	800 W	4½-5
	Instructions Cut pepper into small slices. Stand for 3 minutes.		
Potatoes	250 g 500 g	800 W	4-5 7½-8½
	Instructions Weigh the peeled potatoes and cut them into similar sized halves or quarters. Stand for 3 minutes.		
Turnip Cabbage	250 g	800 W	5-5½
	Instructions Cut turnip cabbage into small cubes. Stand for 3 minutes.		

Cooking Guide for rice and pasta

Rice: Use a large glass pyrex bowl with lid - rice doubles in volume during cooking. Cook covered.
After the cooking time is over, stir before standing time and salt or add herbs and butter.
Remark: the rice may not have absorbed all water after the cooking time is finished.

Pasta: Use a large glass pyrex bowl. Add boiling water, a pinch of salt and stir well. Cook uncovered.
Stir occasionally during and after cooking. Cover during standing time and drain thoroughly afterwards.

Food	Serving Size	Power	Time (min.)
White Rice (Parboiled)	250 g	800 W	16-17
	Instructions Add 500 ml cold water. Stand for 5 minutes.		
Brown Rice (Parboiled)	250 g	800 W	21-22
	Instructions Add 500 ml cold water. Stand for 5 minutes.		
Mixed Rice (Rice + Wild Rice)	250 g	800 W	17-18
	Instructions Add 500 ml cold water. Stand for 5 minutes.		
Mixed Corn (Rice + Grain)	250 g	800 W	18-19
	Instructions Add 400 ml cold water. Stand for 5 minutes.		
Pasta	250 g	800 W	11-12
	Instructions Add 1000 ml hot water. Stand for 5 minutes.		

MG23T5018CC_ST_DE68-04594R-00_EN.indd 32 24/6/2021 8:47:44 AM

Reheating

Your microwave oven will reheat food in a fraction of the time that conventional ovens hobs normally take.
Use the power levels and reheating times in the following chart as a guide. The times in the chart consider liquids with a room temperature of about +18 to +20 °C or a chilled food with a temperature of about +5 to +7 °C.

Arranging and covering

Avoid reheating large items such as joint of meat – they tend to overcook and dry out before the centre is piping hot. Reheating small pieces will be more successful.

Power levels and stirring

Some foods can be reheated using 800 W power while others should be reheated using 600 W, 450 W or even 300 W.
Check the tables for guidance. In general, it is better to reheat food using a lower power level, if the food is delicate, in large quantities, or if it is likely to heat up very quickly (mince pies, for example).
Stir well or turn food over during reheating for best results. When possible, stir again before serving.
Take particular care when heating liquids and baby foods. To prevent eruptive boiling of liquids and possible scalding, stir before, during and after heating.
Keep them in the microwave oven during standing time. We recommend putting a plastic spoon or glass stick into the liquids. Avoid overheating (and therefore spoiling) the food.
It is preferable to underestimate cooking time and add extra heating time, if necessary.

Heating and standing times

When reheating food for the first time, it is helpful to make a note of the time taken – for future reference.
Always make sure that the reheated food is piping hot throughout.
Allow food to stand for a short time after reheating - to let the temperature even out.
The recommended standing time after reheating is 2-4 minutes, unless another time is recommended in the chart.

Take particular care when heating liquids and baby food. See also the chapter with the safety precautions.

Reheating liquids

Always allow a standing time of at least 20 seconds after the oven has been switched off to allow the temperature to even out. Stir during heating, if necessary, and ALWAYS stir after heating. To prevent eruptive boiling and possible scalding, you should put a spoon or glass stick into the beverages and stir before, during and after heating.

Reheating baby food

Baby food:

Empty into a deep ceramic plate. Cover with plastic lid. Stir well after reheating! Let stand for 2-3 minutes before serving. Stir again and check the temperature. Recommended serving temperature: between 30-40 °C.

Baby milk:

Pour milk into a sterilised glass bottle. Reheat uncovered. Never heat a baby's bottle with teat on, as the bottle may explode if overheated. Shake well before standing time and again before serving ! Always carefully check the temperature of baby milk or food before giving it to the baby. Recommended serving temperature: ca. 37 °C.

Remark:

Baby food particularly needs to be checked carefully before serving to prevent burns. Use the power levels and times in the next table as a guide lines for reheating.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 33 24/6/2021 8:47:44 AM

Cooking guide

Reheating liquids and food

Use the power levels and times in this table as a guide lines for reheating.

Food	Serving Size	Power	Time (min.)
Drinks (Coffee, Tea and Water)	150 ml (1 cup) 250 ml (1 mug)	800 W	1-1½ 1½-2
	Instructions Pour into cup and reheat uncovered. Put cup / mug in the centre of turntable. Keep in microwave oven during standing time and stir well. Stand for 1-2 minutes.		
Soup (Chilled)	250 g	800 W	3-3½
	Instructions Pour into a deep ceramic plate. Cover with plastic lid. Stir well after reheating. Stir again before serving. Stand for 2-3 minutes.		
Stew (Chilled)	350 g	600 W	5½-6½
	Instructions Put stew in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving. Stand for 2-3 minutes.		
Pasta with Sauce (Chilled)	350 g	600 W	4½-5½
	Instructions Put pasta (e.g. spaghetti or egg noodles) on a flat ceramic plate. Cover with microwave cling film. Stir before serving. Stand for 3 minutes.		
Filled Pasta with Sauce (Chilled)	350 g	600 W	5-6
	Instructions Put filled pasta (e.g. ravioli, tortellini) in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving. Stand for 3 minutes.		
Plated Meal (Chilled)	350 g	600 W	5½-6½
	Instructions Plate a meal of 2-3 chilled components on a ceramic dish. Cover with microwave cling-film. Stand for 3 minutes.		

Reheating baby food and milk

Use the power levels and times in this table as guide lines for reheating.

Food	Serving Size	Power	Time
Baby Food (Vegetables + Meat)	190 g	600 W	30 sec.
	Instructions Empty into ceramic deep plate. Cook covered. Stir after cooking time. Before serving, stir well and check the temperature carefully. Stand for 2-3 minutes.		
Baby Porridge (Grain + Milk + Fruit)	190 g	600 W	20 sec.
	Instructions Empty into ceramic deep plate. Cook covered. Stir after cooking time. Before serving, stir well and check the temperature carefully. Stand for 2-3 minutes.		
Baby Milk	100 ml 200 ml	300 W	30-40 sec. 50 sec. to 1 min.
	Instructions Stir or shake well and pour into a sterilized glass bottle. Place into the centre of turn-table. Cook uncovered. Shake well and stand for at least 3 minutes. Before serving, shake well and check the temperature carefully. Stand for 2-3 minutes.		

MG23T5018CC_ST_DE68-04594R-00_EN.indd 34 24/6/2021 8:47:44 AM

Manual defrosting

Microwaves are an excellent way of defrosting frozen food. Microwaves gently defrost frozen food in a short period of time. This can be of great advantage, if unexpected guests suddenly show up.
Frozen poultry must be thoroughly thawed before cooking. Remove any metal ties and take it out of any wrapping to allow thawed liquid to drain away.
Put the frozen food on a dish without cover. Turn over half way, drain off any liquid and remove any giblets as soon as possible.
Check the food occasionally to make sure that it does not feel warm.
If smaller and thinner parts of the frozen food start to warm up, they can be shield by wrapping very small strips of aluminium foil around them during defrosting.
Should poultry start to warm up on the outer surface, stop thawing and allow it to stand for 20 minutes before continuing.
Leave the fish, meat and poultry to stand in order to complete defrosting. The standing time for complete defrosting will vary depending on the quantity defrosted. Please refer to the table below.

Hint: Flat food defrosts better than thick and smaller quantities need less time than bigger ones. Remember this hint while freezing and defrosting food.

For defrosting of frozen food with a temperature of about -18 to -20 °C, use the following table as a guide.

Food	Serving Size	Power	Time (min.)
Meat			
Minced Beef	250 g 500 g	180 W	6½-7½ 10-12
Pork Steaks	250 g	180 W	7½-8½
	Instructions Place the meat on a flat ceramic plate. Shield thinner edges with aluminium foil. Turn over after half of defrosting time! Stand for 5-25 minutes.		
Poultry			
Chicken Pieces	500 g (2 pcs.)	180 W	14½-15½
Whole Chicken	900 g	180 W	28-30
	Instructions First, put chicken pieces first skin-side down, whole chicken first breast-side-down on a flat ceramic plate. Shield the thinner parts like wings and ends with aluminium foil. Turn over after half of defrosting time! Stand for 15-40 minutes.		
Fish			
Fish Fillets	250 g (2 pcs.) 400 g (4 pcs.)	180 W	6-7 12-13
	Instructions Put frozen fish in the middle of a flat ceramic plate. Arrange the thinner parts under the thicker parts. Shield narrow ends with aluminium foil. Turn over after half of defrosting time! Stand for 5-15 minutes.		
Fruits			
Berries	250 g	180 W	6-7
	Instructions Distribute fruits on a flat, round glass dish (with a large diameter). Stand for 5-10 minutes.		
Bread			
Bread Rolls (Each about 50 g)	2 pcs. 4 pcs.	180 W	½-1 2-2½
Toast/Sandwich	250 g	180 W	4½-5
German Bread (Wheat + Rye Flour)	500 g	180 W	8-10
	Instructions Arrange rolls in a circle or bread horizontally on kitchen paper in the middle of turntable. Turn over after half of defrosting time! Stand for 5-20 minutes.		

MG23T5018CC_ST_DE68-04594R-00_EN.indd 35 24/6/2021 8:47:44 AM

Cooking guide

Grill

The grill-heating element is located underneath the ceiling of the cavity. It operates while the door is closed and the turntable is rotating. The turntable's rotation makes the food brown more evenly. Preheating the grill for 3-5 minutes will make the food brown more quickly.

Cookware for grilling:

Should be flameproof and may include metal. Do not use any type of plastic cookware, as it can melt.

Food suitable for grilling:

Chops, sausages, steaks, hamburgers, bacon and gammon rashers, thin fish portions, sandwiches and all kinds of toast with toppings.

Important remark:

Whenever the grill only mode is used, please remember that food must be placed on the high rack, unless another instruction is recommended.

Microwave + grill

This cooking mode combines the radiant heat that is coming from the grill with the speed of microwave cooking. It operates only while the door is closed and the turntable is rotating. Due to the rotation of the turntable, the food browns evenly. Three combination modes are available with this model:
600 W + Grill, 450 W + Grill and 300 W + Grill.

Cookware for cooking with microwaves + grill

Please use cookware that microwaves can pass through. Cookware should be flameproof. Do not use metal cookware with combination mode. Do not use any type of plastic cookware, as it can melt.

Food suitable for microwaves + grill cooking:

Food suitable for combination mode cooking include all kinds of cooked food which need reheating and browning (e.g. baked pasta), as well as foods which require a short cooking time to brown the top of the food. Also, this mode can be used for thick food portions that benefit from a browned and crispy top (e.g. chicken pieces, turning them over half way through cooking). Please refer to the grill table for further details.

Important remark:

Whenever the combination mode (microwave + grill) is used, the food should be placed on the high rack, unless another instruction is recommended. Please refer to the instructions in the following chart.

The food must be turned over, if it is to be browned on both sides.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 36 24/6/2021 8:47:44 AM

Grill Guide for frozen food

Use the power levels and times in this table as guide lines for grilling.

Frozen Food	Serving Size	Power	1 step (min.)	2 step (min.)
Bread Rolls (Each ca. 50 g)	2 pcs. 4 pcs.	MW + Grill	300 W + Grill 1-1½ 2-2½	Grill only 1-2 1-2
	Instructions Arrange rolls in a circle on rack. Grill the second side of the rolls up to the crisp you prefer. Stand for 2-5 minutes.			
Baguettes + Topping (Tomatoes, Cheese, Ham, Mushrooms)	250-300 g (2 pcs.)	450 W + Grill	8-9	-
	Instructions Put 2 frozen baguettes side by side on the rack. After grilling. Stand for 2-3 minutes.			
Gratin (Vegetables or Potatoes)	400 g	450 W + Grill	13-14	-
	Instructions Put frozen gratin into a small, round glass pyrex dish. Put the dish on the rack. After grilling. Stand for 2-3 minutes.			
Pasta (Cannelloni, Macaroni, Lasagne)	400 g	MW + Grill	300 W + Grill 18-19	Grill only 1-2
	Instructions Put frozen pasta into a small flat rectangular glass pyrex dish. Put the dish directly on the turntable. After grilling. Stand for 2-3 minutes.			
Chicken Nuggets	250 g	450 W + Grill	5-5½	3-3½
	Instructions Put chicken nuggets on the rack. Turn over after first time.			
Oven Chips	250 g	450 W + Grill	9-11	4-5
	Instructions Put oven chips evenly on baking paper on the rack.			

Grill Guide for fresh food

Preheat the grill with the grill-function for 3-4 minutes.
Use the power levels and times in this table as guide lines for grilling.

Fresh Food	Serving Size	Power	1 step (min.)	2 step (min.)
Toast Slices	4 pcs. (each 25 g)	Grill only	6-8	4-5½
	Instructions Put the toast slices side by side on the rack.			
Bread Rolls (Already Baked)	2-4 pieces	Grill only	2-3	2-3
	Instructions Put bread rolls first with the bottom side up in a circle directly on the turntable.			
Grilled Tomatoes	200 g (2 pcs.) 400 g (4 pcs.)	MW + Grill	300 W + Grill 4½-5½ 7-8	Grill only 2-3
	Instructions Cut tomatoes into halves. Put some cheese on top. Arrange in a circle in a flat glass pyrex dish. Place it on the rack.			
Toast Hawaii (Ham, Pineapple, Cheese Slices)	2 pcs. (300 g)	450 W + Grill	3½-4	-
	Instructions Toast the bread slices first. Put the toast with topping on the rack. Put 2 toasts opposite directly on the rack. Stand for 2-3 minutes.			
Baked Potatoes	250 g 500 g	600 W + Grill	4½-5½ 8-9	-
	Instructions Cut potatoes into halves. Put them in a circle on the rack with the cut side to the grill.			

MG23T5018CC_ST_DE68-04594R-00_EN.indd 37 24/6/2021 8:47:45 AM

Cooking guide

Fresh Food	Serving Size	Power	1 step (min.)	2 step (min.)
Chicken Pieces	450-500 g (2 pcs.)	300 W + Grill	10-12	12-13
	Instructions Prepare chicken pieces with oil and spices. Put them in a circle with the bones to the middle. Put 1 chicken piece not into the centre of the rack. Stand for 2-3 minutes.			
Lamb Chops/Beef Steaks (Medium)	400 g (4 pcs.)	Grill only	12-15	9-12
	Instructions Brush the lamb chops with oil and spices. Lay them in a circle on the rack. After grilling. Stand for 2-3 minutes.			
Pork Steaks	250 g (2 pcs.)	MW + Grill	300 W + Grill 7-8	Grill only 6-7
	Instructions Brush the pork steaks with oil and spices. Lay them in a circle on the rack. After grilling. Stand for 2-3 minutes.			
Baked Apples	1 apple (ca. 200 g) 2 apples (ca. 400 g)	300 W + Grill	4-4½ 6-7	-
	Instructions Core the apples and fill them with raisins and jam. Put some almond slices on top. Put apples on a flat glass pyrex dish. Place the dish directly on the turntable.			
Roast Chicken	1200 g	MW + Grill	450 W + Grill 22-24	300 W + Grill 23-25
	Instructions Brush chicken with oil and spices. Put chicken first breast side down, second breast side up on pyrex dish. Stand for 5 minutes after grilling.			

Tips and tricks

Melting crystallized honey

Put 20 g crystallized honey into a small deep glass dish.
Heat for 20-30 seconds using 300 W, until honey is melted.

Melting gelatine

Lay dry gelatine sheets (10 g) for 5 minutes into cold water.
Put drained gelatine into a small glass pyrex bowl.
Heat for 1 minute using 300 W.
Stir after melting.

Cooking glaze/icing (for cake and gateaux)

Mix instant glaze (approximately 14 g) with 40 g sugar and 250 ml cold water. Cook uncovered in a glass pyrex bowl for 3½ to 4½ minutes using 800 W, until glaze/icing is transparent. Stir twice during cooking.

Cooking jam

Put 600 g fruits (for example mixed berries) in a suitable sized glass pyrex bowl with lid. Add 300 g preserving sugar and stir well. Cook covered for 10-12 minutes using 800 W.
Stir several times during cooking. Empty directly into small jam glasses with twist-off lids. Stand on lid for 5 minutes.

Cooking pudding/custard

Mix pudding powder with sugar and milk (500 ml) by following the manufacturers instructions and stir well. Use a suitable sized glass pyrex bowl with lid. Cook covered for 6½ to 7½ minutes using 800 W.
Stir several times well during cooking.

Browning almond slices

Spread 30 g sliced almonds evenly on a medium sized ceramic plate.
Stir several times during browning for 3½ to 4½ minutes using 600 W.
Let it stand for 2-3 minutes in the oven. Use oven gloves while taking out!

MG23T5018CC_ST_DE68-04594R-00_EN.indd 38 24/6/2021 8:47:45 AM

Troubleshooting and information code

Troubleshooting

If you have any of the problems listed below try the solutions given.

Problem	Cause	Action
General		
The buttons cannot be pressed properly.	Foreign matter may be caught between the buttons.	Remove the foreign matter and try again.
	For touch models: Moisture is on the exterior.	Wipe the moisture from the exterior.
	Child lock is activated.	Deactivate Child lock.
The time is not displayed.	The Eco (power-saving) function is set.	Turn off the Eco function.
The microwave oven does not work.	Power is not supplied.	Make sure power is supplied.
	The door is open.	Close the door and try again.
	The door open safety mechanisms are covered in foreign matter.	Remove the foreign matter and try again.
The microwave oven stops while in operation.	The user has opened the door to turn food over.	After turning over the food, press the **START/+30s** button again to start operation.
The power turns off during operation.	The microwave oven has been cooking for an extended period of time.	After cooking for an extended period of time, let the microwave oven cool.
	The cooling fan is not working.	Listen for the sound of the cooling fan.
	Trying to operate the microwave oven without food inside.	Put food in the microwave oven.
	There is not sufficient ventilation space for the microwave oven.	There are intake/exhaust outlets on the front and rear of the microwave oven for ventilation. Keep the gaps specified in the product installation guide.
	Several power plugs are being used in the same socket.	Designate only one socket to be used for the microwave oven.
There is a popping sound during operation, and the microwave oven doesn't work.	Cooking sealed food or using a container with a lid may causes popping sounds.	Do not use sealed containers as they may burst during cooking due to expansion of the contents.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 39 24/6/2021 8:47:45 AM

Troubleshooting and information code

Problem	Cause	Action
The microwave oven exterior is too hot during operation.	There is not sufficient ventilation space for the microwave oven.	There are intake/exhaust outlets on the front and rear of the microwave oven for ventilation. Keep the gaps specified in the product installation guide.
	Objects are on top of the microwave oven.	Remove all objects on the top of the microwave oven.
The door cannot be opened properly.	Food residue is stuck between the door and microwave oven interior.	Clean the microwave oven and then open the door.
Heating including the Warm function does not work properly.	The microwave oven may not work, too much food is being cooked, or improper cookware is being used.	Put one cup of water in a microwave-safe container and run the microwave for 1-2 minutes to check whether the water is heated. Reduce the amount of food and start the function again. Use a cooking container with a flat bottom.
The thaw function does not work.	Too much food is being cooked.	Reduce the amount of food and start the function again.
The interior light is dim or does not turn on.	The door has been left open for a long time.	The interior light may automatically turn off when the Eco function operates. Close and reopen the door or press the **STOP/Eco** button.
	The interior light is covered by foreign matter.	Clean the inside of the microwave oven and check again.

Problem	Cause	Action
A beeping sound occurs during cooking.	If the Auto Cook function is being used, this beeping sound means it's time to turn over the food during thawing.	After turning over the food, press the **START/+30s** button again to restart operation.
The microwave oven is not level.	The microwave oven is installed on an uneven surface.	Make sure the microwave oven is installed on flat, stable surface.
There are sparks during cooking.	Metal containers are used during the microwave oven/ thawing functions.	Do not use metal containers.
When power is connected, the microwave oven immediately starts to work.	The door is not properly closed.	Close the door and check again.
There is electricity coming from the microwave oven.	The power or power socket is not properly grounded.	Make sure the power and power socket are properly grounded.
1. Water drips. **2.** Steam emits through a door crack. **3.** Water remains in the microwave oven.	There may be water or steam in some cases depending on the food. This is not an microwave oven malfunction.	Let the microwave oven cool and then wipe with a dry dish towel.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 40 24/6/2021 8:47:45 AM

Problem	Cause	Action
The brightness inside the microwave oven varies.	Brightness changes depending on power output changes according to function.	Power output changes during cooking are not malfunctions. This is not an microwave oven malfunction.
Cooking is finished, but the cooling fan is still running.	To ventilate the microwave oven, the cooling fan continues to run for about 3 minutes after cooking is complete.	This is not an microwave oven malfunction.
Turntable		
While turning, the turntable comes out of place or stops turning.	There is no roller ring, or the roller ring is not properly in place.	Install the roller ring and then try again.
The turntable drags while turning.	The roller ring is not properly in place, there is too much food, or the container is too large and touches the inside of the microwave.	Adjust the amount of food and do not use containers that are too large.
The turntable rattles while turning and is noisy.	Food residue is stuck to the bottom of the microwave oven.	Remove any food residue stuck to the bottom of the microwave oven.

Problem	Cause	Action
Grill		
Smoke comes out during operation.	During initial operation, smoke may come from the heating elements when you first use the microwave oven.	This is not a malfunction, and if you run the microwave oven 2-3 times, it should stop.
	Food is on the heating elements.	Let the microwave oven cool and then remove the food from the heating elements.
	Food is too close to the grill.	Put the food a suitable distance away while cooking.
	Food is not properly prepared and/or arranged.	Make sure food is properly prepared and arranged.
Microwave oven		
The microwave oven does not heat.	The door is open.	Close the door and try again.
Smoke comes out during preheating.	During initial operation, smoke may come from the heating elements when you first use the microwave oven.	This is not a malfunction, and if you run the microwave oven 2-3 times, it should stop.
	Food is on the heating elements.	Let the microwave oven cool and then remove the food from the heating elements.
There is a burning or plastic smell when using the microwave oven.	Plastic or non heat-resistant cookware is used.	Use glass cookware suitable for high temperatures.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 41 24/6/2021 8:47:45 AM

Troubleshooting and information code

Problem	Cause	Action
There is a bad smell coming from inside the microwave oven.	Food residue or plastic has melted and stuck to the interior.	Use the steam function and then wipe with a dry cloth. You can put a lemon slice inside and run the microwave oven to remove the odour more quickly.
The microwave oven does not cook properly.	The microwave oven door is frequently opened during cooking.	If you open the door often, the interior temperature will be lowered and this may affect the results of your cooking.
	The microwave oven controls are not correctly set.	Correctly set the microwave oven controls and try again.
	The grill or other accessories are not correctly inserted.	Correctly insert the accessories.
	The wrong type or size of cookware is used.	Use suitable cookware with flat bottoms.

Information code

Information code	Cause	Action
C-d0	Control buttons are pressed over 10 seconds.	Clean the keys and check if there is water on the surface around key. If it occurs again, turn off the microwave oven over 30 seconds and try setting again. If it appears again, call your local SAMSUNG Customer Care Centre.

NOTE

if the suggested solution does not solve the problem, contact your local SAMSUNG Customer Care Centre.

MG23T5018CC_ST_DE68-04594R-00_EN.indd 42 24/6/2021 8:47:45 AM

Technical specifications

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

Model	MG23T5018C*
Power source	220 V ~ 50 Hz AC
Power consumption Maximum power Microwave Grill (heating element)	 2250 W 1250 W 1050 W
Output power	100 W / 800 W - 6 levels (IEC-705)
Operating frequency	2450 MHz
Dimensions (W x H x D) Outside (Include Handle) Oven cavity	 489 x 275 x 381 mm 330 x 211 x 324 mm
Volume	23 liter
Weight Net	 12.7 kg approx.

Memo

MG23T5018CC_ST_DE68-04594R-00_EN.indd 43 24/6/2021 8:47:45 AM

SAMSUNG

Please be advised that the Samsung warranty does NOT cover service calls to explain product operation, correct improper installation, or perform normal cleaning or maintenance.

QUESTIONS OR COMMENTS ?

COUNTRY / LOCATION	CALL	OR VISIT US ONLINE AT
AUSTRALIA	1300 362 603	www.samsung.com/au/support
NEW ZEALAND	0800 726 786	www.samsung.com/nz/support
CHINA	400-810-5858	www.samsung.com/cn/support
HONG KONG	3698 4698	www.samsung.com/hk/support (Chinese) www.samsung.com/hk_en/support (English)
INDIA	1800 40 SAMSUNG (1800 40 7267864) (Toll-Free) 1800 5 SAMSUNG (1800 5 7267864) (Toll-Free)	www.samsung.com/in/support
BANGLADESH	08000-300-300 (Toll free) 09612-300-300	www.samsung.com/in/support
INDONESIA	021-5699-7777 0800-112-8888 (All Product, Toll Free)	www.samsung.com/id/support
JAPAN	0120-363-905	www.galaxymobile.jp/jp/support
MALAYSIA	1800-88-9999 +603-7713 7420 (Overseas contact)	www.samsung.com/my/support
PHILIPPINES	1-800-10-726-7864 [PLDT Toll Free] 1-800-8-726-7864 [Globe Landline and Mobile] 02-8-422-2111 [Standard Landline]	www.samsung.com/ph/support

COUNTRY / LOCATION	CALL	OR VISIT US ONLINE AT
SINGAPORE	1800 7267864 | 1800-SAMSUNG	www.samsung.com/sg/support
THAILAND	Hotline no : 1282 1800-29-3232 (Toll free for all product))	www.samsung.com/th/support
TAIWAN	0800-32-9999	www.samsung.com/tw/support
VIETNAM	1800 588 889	www.samsung.com/vn/support
MYANMAR	+95-1-2399-888	www.samsung.com/mm/support
MACAU	0800 333	www.samsung.com/hk/support (Chinese) www.samsung.com/hk_en/support (English)
SRI LANKA	011 SAMSUNG (011 7267864)	www.samsung.com/in/support
CAMBODIA	+855-23-993232 1800-20-3232 (Toll free)	www.samsung.com/th/support
LAOS	+856-214-17333	www.samsung.com/th/support
NEPAL	16600172667 (Toll Free for NTC Only) 9801572667 (Toll Free for Ncell users)	www.samsung.com/in/support

DE68-04594R-00