MG28H5125**

เตาไมโครเวฟ

คำแนะนำสำหรับผู้ใช้และคู่มือการอบอาหาร

imagine the possibilities

ขอขอบคุณที่เลือกซื้อผลิตภัณฑ์ Samsung

โปรดทราบว่าการรับประกันของ Samsung ไม่ครอบคลุมถึงการโทรรับบริการเพื่ออธิบายถึงการใช้งานผลิตภัณฑ์ แก้ไขการติดตั้งที่ไม่ถูกต้อง หรือการทำความสะอาดหรือบำรุงรักษาตามปกติ

SAMSUNG

MG28H5125NK_ST_DE68-04246J-05_TH.indd 1 2019-09-11 10:19:51

สารบัญ

คำแนะนำเพื่อความปลอดภัย **3**

การติดตั้ง **8**

อุปกรณ์เสริม 8

สถานที่ติดตั้ง 8

จานหมุน 8

การบำรุงรักษา **9**

การทำความสะอาด 9

การเปลี่ยนชิ้นส่วน (ซ่อมแซม) 9

การดูแลเมื่อไม่ได้ใช้งานเป็นเวลานาน 9

คุณสมบัติเตาอบ **10**

เตาอบ 10

แผงควบคุม 10

การใช้เตาอบ **11**

เตาอบไมโครเวฟทำงานอย่างไร 11

การตรวจสอบว่าเตาไมโครเวฟของคุณทำงานอย่างถูกต้อง 11

การตั้งเวลา 12

การอบ/อุ่นอาหาร 12

ระดับพลังงานและการปรับเวลา 13

การปรับเวลาอบอาหาร 13

การหยุดการอบอาหาร 13

การตั้งค่าโหมดประหยัดพลังงาน 14

การใช้คุณสมบัติเมนูเพื่อสุขภาพ 14

การใช้คุณสมบัติระบบเซ็นเซอร์ 16

การใช้คุณสมบัติเมนูอาหารไทย 19

การใช้คุณสมบัติละลายน้ำแข็ง 26

การย่าง 27

การใช้ไมโครเวฟร่วมกับการย่าง 27

การใช้จานอบเกรียม 28

การใช้ระบบทำความสะอาดด้วยไอน้ำ 29

การใช้คุณสมบัติกำจัดกลิ่น 30

การใช้ฟังก์ชันล็อคป้องกันเด็ก 30

การใช้คุณสมบัติการเปิด/ปิดจานหมุน 30

การปิดเสียงเตือน 30

คู่มือสำหรับอุปกรณ์การทำอาหาร **31**

คู่มือการอบอาหาร **32**

การแก้ไขปัญหาและรหัสข้อผิดพลาด **40**

การแก้ไขปัญหา 40

รหัสข้อผิดพลาด 41

ข้อมูลจำเพาะด้านเทคนิค **41**

MG28H5125NK_ST_DE68-04246J-05_TH.indd 2 2019-09-11 10:19:51

คำแนะนำเพื่อความปลอดภัย

คำแนะนำสำคัญเพื่อความปลอดภัย

โปรดอ่านให้ละเอียด และเก็บไว้เป็นข้อมูลอ้างอิงในอนาคต

คำเตือน: ห้ามใช้เตาอบหากประตูหรือซีลขอบประตูเสียหาย จนกว่าจะได้รับการซ่อมแซมจากช่างผู้ชำนาญ

คำเตือน: อาจเกิดอันตรายขึ้นได้ หากให้บุคคลที่ไม่ใช่ช่างที่มีความชำนาญเป็นผู้ซ่อมบำรุงซึ่งต้องมีการถอดฝาครอบของเครื่อง ซึ่งเป็นเครื่องป้องกันพลังงานไมโครเวฟ

คำเตือน: โปรดอย่าอุ่นของเหลวและอาหารอื่นในภาชนะที่ปิดสนิท เนื่องจากอาจระเบิดได้

คำเตือน: ไม่ควรให้เด็กใช้เครื่องไมโครเวฟตามลำพัง ยกเว้นกรณีที่เด็กได้รับคำแนะนำเพียงพอที่จะใช้เตาไมโครเวฟอย่างปลอดภัย และทราบถึงอันตรายจากการใช้ผิดวิธี

อุปกรณ์นี้ออกแบบมาสำหรับใช้ภายในครัวเรือนเท่านั้น และไม่ได้ออกแบบมาเพื่อใช้งานเช่น:

- พื้นที่ครัวพนักงานในร้านค้า สำนักงาน และสภาพแวดล้อมการทำงานแบบอื่นๆ
- โรงเรือนเกษตร
- โดยลูกค้าในโรงแรม โมเต็ล และสภาพแวดล้อมที่พักอาศัยอื่นๆ
- สภาพแวดล้อมแบบเบดแอนด์เบรกฟาสต์

โปรดใช้เฉพาะภาชนะที่เหมาะกับเตาไมโครเวฟเท่านั้น

เมื่ออุ่นอาหารในภาชนะพลาสติกหรือภาชนะกระดาษ โปรดระวังว่าอาจจะมีการติดไฟขึ้นในเตาอบ

เตาไมโครเวฟนี้ใช้สำหรับการให้ความร้อนกับอาหารและเครื่องดื่ม การทำให้อาหารหรือผ้าแห้ง และการให้ความร้อนกับแผ่นให้ความร้อน รองเท้าสวมในบ้าน ฟองน้ำ ผ้าหมาด และวัสดุอื่นในลักษณะเดียวกันอาจเกิดความเสี่ยงต่อการบาดเจ็บ ติดไฟ หรือเพลิงไหม้

ถ้าพบว่ามีควัน ให้ปิดหรือถอดปลั๊กอุปกรณ์ และอย่าเปิดประตูเตาอบ เพื่อมิให้เกิดเปลวไฟ

ระหว่างการอุ่นร้อนเครื่องดื่มด้วยไมโครเวฟ จะมีการเดือดที่ล่าช้าออกไป ดังนั้น โปรดใช้ความระมัดระวังเมื่อถือภาชนะ

ควรคนหรือเขย่าสิ่งที่บรรจุอยู่ในขวดนมเด็กและขวดอาหารเด็ก และตรวจสอบอุณหภูมิก่อนที่จะรับประทาน เพื่อลดความเสี่ยงของการลวก

ห้ามอุ่นร้อนหรือให้ความร้อนกับไข่ทั้งเปลือกหรือไข่ต้มในเตาไมโครเวฟ เนื่องจากอาจระเบิดได้ แม้ว่าจะสิ้นสุดการให้ความร้อนของไมโครเวฟแล้วก็ตาม

ทำความสะอาดและขจัดอาหารตกค้างอย่างสม่ำเสมอ

การไม่รักษาความสะอาดเตาอบอาจทำให้เกิดความเสียหายกับพื้นผิว ซึ่งอาจมีผลเสียต่อเตาอย่างมาก และอาจก่อให้เกิดอันตรายได้

เตาไมโครเวฟนี้ออกแบบมาสำหรับใช้งานบนเคาน์เตอร์ (ตั้งอิสระ) เท่านั้น ไม่ควรวางเตาไมโครเวฟไว้ในช่องของตู้

MG28H5125NK_ST_DE68-04246J-05_TH.indd 3 2019-09-11 10:19:52

ห้ามใช้ภาชนะที่เป็นโลหะสำหรับอาหารและเครื่องดื่มในระหว่างการปรุงอาหารในไมโครเวฟ

ควรระมัดระวังอย่าทำให้จานหมุนเคลื่อนในขณะที่นำภาชนะออกจากอุปกรณ์

อุปกรณ์นี้ไม่สามารถทำความสะอาดด้วยเครื่องพ่นไอน้ำ

อุปกรณ์นี้ไม่สามารถทำความสะอาดด้วยเครื่องฉีดน้ำ

อุปกรณ์นี้ไม่ได้ออกแบบมาสำหรับการติดตั้งในยานพาหนะบนท้องถนน คาราวาน และยานพาหนะในลักษณะเดียวกัน

อุปกรณ์นี้ไม่ได้มีไว้เพื่อใช้งานโดยบุคคล (รวมถึงเด็ก) ที่มีความสามารถของร่างกาย ประสาทสัมผัส หรือจิตใจที่บกพร่อง หรือขาดประสบการณ์และความรู้ ยกเว้นจะได้รับการดูแลหรือคำแนะนำเกี่ยวกับการใช้อุปกรณ์ โดยผู้ที่รับผิดชอบความปลอดภัยของบุคคลเหล่านั้น โปรดดูแลไม่ให้เด็กเล่นกับอุปกรณ์นี้

อุปกรณ์นี้สามารถใช้งานโดยเด็กอายุตั้งแต่ 8 ปีขึ้นไป และบุคคลที่มีความไม่สมบูรณ์ทางกายภาพ ความรู้สึก หรือจิตใจ หรือขาดประสบการณ์หรือความรู้ ถ้ามีการดูแลหรือให้คำแนะนำเกี่ยวกับการใช้อุปกรณ์อย่างปลอดภัย และทำความเข้าใจกับอันตรายที่อาจเกิดขึ้น ห้ามเด็กเล่นกับอุปกรณ์นี้ ห้ามเด็กทำความสะอาดหรือบำรุงรักษาอุปกรณ์โดยไม่มีการดูแล

กรณีที่ปลั๊กไฟของเครื่องใช้ไฟฟ้านี้เกิดเสียหาย ต้องให้ผู้ผลิต ตัวแทนให้บริการ หรือผู้ที่มีความชำนาญเป็นผู้เปลี่ยนสายไฟ เพื่อไม่ให้เกิดอันตราย

เตาอบนี้ควรอยู่ในตำแหน่งและความสูงที่เหมาะสม เพื่อให้สามารถเข้าถึงส่วนภายในเตาอบและบริเวณควบคุมได้ง่าย

ก่อนที่จะใช้เตาอบเป็นครั้งแรก ควรใช้งานเตาอบกับน้ำเป็นเวลา 10 นาที จากนั้นจึงค่อยใช้

ถ้าอุปกรณ์มีเสียงผิดปกติ มีควันหรือกลิ่นไหม้ ให้ถอดปลั๊กทันที และติดต่อศูนย์บริการใกล้บ้าน

เตาไมโครเวฟนี้จะต้องอยู่ในตำแหน่งที่คุณสามารถเอื้อมถึงปลั๊กโดยง่าย

MG28H5125NK_ST_DE68-04246J-05_TH.indd 4 2019-09-11 10:19:52

คำเตือน: เมื่อใช้งานอุปกรณ์นี้ในโหมดผสม ไม่ควรให้เด็กใช้งานอุปกรณ์โดยไม่มีผู้ใหญ่ดูแล เนื่องจากจะมีอุณหภูมิสูง

ระหว่างการใช้งานอุปกรณ์จะมีความร้อนสูง โปรดใช้ความระมัดระวังอย่าสัมผัสขดลวดความร้อน

คำเตือน: ชิ้นส่วนที่เข้าถึงได้อาจร้อนจัดหลังจากการใช้งาน ควรดูแลให้พ้นมือเด็ก

ห้ามใช้สารทำความสะอาดที่มีฤทธิ์ขัดถูหรือที่ขัดโลหะเพื่อทำความสะอาดประตูเตาอบ เนื่องจากจะทำให้พื้นผิวเป็นรอยและทำให้แก้วแตกได้

ห้ามใช้เครื่องทำความสะอาดด้วยไอน้ำ

คำเตือน: ตรวจสอบว่าปิดอุปกรณ์แล้ว ก่อนที่จะเปลี่ยนหลอดไฟ เพื่อป้องกันไฟฟ้าช็อต

ห้ามติดตั้งผลิตภัณฑ์นี้โดยมีประตูแบบตกแต่งเพิ่มเติม เพื่อป้องกันความร้อนสูงเกิน

คำเตือน: อุปกรณ์นี้และชิ้นส่วนที่เข้าถึงได้อาจร้อนจัดระหว่างการใช้งาน

โปรดใช้ความระมัดระวังอย่าสัมผัสขดลวดความร้อนภายในเตาอบ

ห้ามเด็กอายุต่ำกว่า 8 ขวบใช้อุปกรณ์ ยกเว้นกรณีที่มีผู้ดูแลใกล้ชิด

ข้อควรระวัง: ต้องมีผู้ดูแลการทำงานของเครื่องระหว่างกระบวนการปรุงอาหาร ต้องมีผู้ดูแลการทำงานของเครื่องอย่างต่อเนื่องระหว่างกระบวนการปรุงอาหารแบบสั้น

ประตูหรือพื้นผิวภายนอกอาจร้อนจัดเมื่ออุปกรณ์ทำงาน

อุณหภูมิของพื้นผิวที่สัมผัสได้อาจสูงมากเมื่ออุปกรณ์นี้ทำงาน

พื้นผิวอาจมีความร้อนสูงระหว่างการใช้งาน

อุปกรณ์นี้ไม่ได้ออกแบบมาเพื่อใช้งานด้วยเครื่องจับเวลาภายนอกหรือระบบรีโมทคอนโทรลแยกต่างหาก

อุปกรณ์นี้สามารถใช้งานโดยเด็กอายุตั้งแต่ 8 ปีขึ้นไป และบุคคลที่มีความไม่สมบูรณ์ทางกายภาพ ความรู้สึก หรือจิตใจ หรือขาดประสบการณ์หรือความรู้ ถ้ามีการดูแลหรือให้คำแนะนำเกี่ยวกับการใช้อุปกรณ์อย่างปลอดภัย และทำความเข้าใจกับอันตรายที่อาจเกิดขึ้น ห้ามเด็กเล่นกับอุปกรณ์นี้ ห้ามมิให้เด็กเป็นผู้ทำความสะอาดและบำรุงรักษา ยกเว้นเด็กที่มีอายุ 8 ปีขึ้นไปและมีการดูแลโดยผู้ใหญ่

ดูแลให้อุปกรณ์และสายไฟพ้นมือเด็กที่อายุต่ำกว่า 8 ปี

MG28H5125NK_ST_DE68-04246J-05_TH.indd 5 2019-09-11 10:19:52

ความปลอดภัยทั่วไป

การแก้ไขหรือซ่อมแซมจะต้องดำเนินการโดยช่างที่มีความชำนาญเท่านั้น
ห้ามให้ความร้อนอาหารหรือของเหลวที่ซีลไว้ในภาชนะสำหรับฟังก์ชันไมโครเวฟ
ห้ามใช้เบนซิน ทินเนอร์ แอลกอฮอล์ หรือเครื่องทำความสะอาดด้วยไอน้ำหรือเครื่องฉีดน้ำแรงดันสูงเพื่อทำความสะอาดเตาอบ
ห้ามติดตั้งเตาอบ: ใกล้กับเครื่องทำความร้อนหรือวัสดุที่ติดไฟง่าย ตำแหน่งที่มีความชื้น น้ำมัน ฝุ่น หรือถูกแสงอาทิตย์หรือน้ำโดยตรง หรือบริเวณที่ก๊าซรั่วไหล หรือพื้นผิวที่ไม่เรียบเสมอกัน
เตาอบนี้ต้องมีการลงกราวด์อย่างเหมาะสมตามข้อกำหนดของท้องถิ่นหรือของประเทศ
โปรดใช้ผ้าแห้งเช็ดสิ่งแปลกปลอมออกจากขั้วหรือผิวสัมผัสของปลั๊กไฟเป็นประจำ
ห้ามดึง บิดงอ หรือวางสิ่งของที่มีน้ำหนักมากทับสายไฟ
ถ้ามีก๊าซรั่วไหล (โพรเพน, LP เป็นต้น) ให้ระบายอากาศทันที อย่าสัมผัสสายไฟ
ห้ามสัมผัสสายไฟด้วยมือที่เปียก
ขณะที่เตาอบกำลังทำงานอยู่ โปรดอย่าปิดเครื่องด้วยการดึงสายไฟออก
ห้ามสอดนิ้วหรือสิ่งแปลกปลอม ถ้ามีสิ่งแปลกปลอมเข้าไปในเตาอบ ให้ดึงสายไฟออก และโปรดติดต่อศูนย์บริการของ Samsung ที่อยู่ใกล้บ้าน
ห้ามใช้แรงกดหรือกระแทกเตาอบ
ห้ามวางเตาอบบนวัตถุที่แตกหักง่าย
โปรดตรวจสอบว่าแรงดันไฟฟ้า ความถี่ และกระแสไฟฟ้าตรงตามข้อมูลจำเพาะของผลิตภัณฑ์
ต่อสายไฟเข้ากับเต้ารับไฟฟ้าที่ผนังอย่างแน่นหนา ห้ามใช้ตัวแปลงปลั๊ก สายต่อ หรือหม้อแปลงไฟฟ้า
ห้ามเกี่ยวสายไฟไว้กับวัตถุที่เป็นโลหะ โปรดตรวจสอบว่าสายไฟอยู่ระหว่างวัตถุหรือด้านหลังเตาอบ
ห้ามใช้ปลั๊กไฟหรือสายไฟที่เสียหาย หรือเต้ารับไฟฟ้าที่หลวม หากปลั๊กไฟหรือสายไฟเสียหาย โปรดติดต่อศูนย์บริการของ Samsung ที่อยู่ใกล้บ้าน
ห้ามฉีดพ่นน้ำบนเตาอบ
ห้ามวางสิ่งของบนเตาอบ ภายใน หรือบนประตูเตาอบ
ห้ามพ่นสารระเหย เช่น ยาฆ่าแมลงลงบนอุปกรณ์
โปรดอย่าเก็บวัสดุที่ติดไฟได้ไว้ในเตาอบ เนื่องจากไอของแอลกอฮอล์อาจสัมผัสส่วนที่ร้อนของเตาอบ โปรดใช้ความระมัดระวังเมื่อให้ความร้อนอาหารหรือเครื่องดื่มที่มีแอลกอฮอล์
เด็กอาจเดินชนหรือถูกประตูหนีบนิ้ว เมื่อเปิด/ปิดประตู โปรดให้เด็กอยู่ห่างๆ

คำเตือนเกี่ยวกับไมโครเวฟ

ระหว่างการให้ความร้อนเครื่องดื่มด้วยไมโครเวฟอาจมีการเดือดที่ล่าช้าออกไป โปรดใช้ความระมัดระวังเมื่อถือภาชนะ โปรดตั้งเครื่องดื่มพักไว้อย่างน้อย 20 วินาทีก่อนถือ ถ้าจำเป็น ให้คนในระหว่างให้ความร้อน โปรดคนหลังจากการให้ความร้อนเสมอ
ในกรณีที่ของเหลวลวก โปรดปฏิบัติตามคำแนะนำในการปฐมพยาบาล:

1. แช่บริเวณที่ถูกลวกในน้ำเย็นเป็นเวลาอย่างน้อย 10 นาที
2. พันด้วยผ้าพันแผลที่แห้งและสะอาด
3. โปรดอย่าทาครีม น้ำมัน หรือโลชั่น

เพื่อไม่ให้ถาดหรือชั้นวางเสียหาย โปรดอย่านำถาดหรือชั้นวางไปจุ่มน้ำหลังจากปรุงอาหารเสร็จไม่นาน
อย่าใช้เตาอบสำหรับการทอดน้ำมัน เนื่องจากจะไม่สามารถควบคุมอุณหภูมิของน้ำมันได้ ซึ่งอาจส่งผลให้น้ำมันที่ร้อนจัดมีความร้อนสูงเกินไป

ข้อควรระวังสำหรับเตาไมโครเวฟ

โปรดใช้ภาชนะสำหรับไมโครเวฟเท่านั้น ห้ามใช้ภาชนะที่เป็นโลหะ ภาชนะที่มีขอบทองหรือเงิน เหล็กเสียบ เป็นต้น
นำลวดที่ใช้ปิดถุงออก อาจเกิดประกายไฟฟ้า
ห้ามใช้เตาอบเพื่อทำให้หนังสือพิมพ์หรือผ้าแห้ง
ใช้เวลาสั้นลงสำหรับอาหารปริมาณน้อย เพื่อป้องกันความร้อนเกินหรือไหม้
โปรดเก็บสายไฟและปลั๊กไฟให้ห่างจากน้ำและความร้อน
เพื่อไม่ให้เกิดการระเบิด โปรดอย่าให้ความร้อนกับไข่ทั้งเปลือกหรืออุ่นไข่ต้มทั้งเปลือก ห้ามให้ความร้อนกับภาชนะที่ปิดสนิทหรือซีลด้วยสุญญากาศ ถั่ว มะเขือเทศ เป็นต้น
ห้ามปิดหรือบังช่องระบายอากาศด้านหลังของเตาด้วยผ้าหรือกระดาษ อาจทำให้เกิดอันตรายจากไฟไหม้ เตาอบอาจมีความร้อนสูงเกินไป และปิดการทำงานโดยอัตโนมัติ และจะไม่สามารถใช้งานได้จนกว่าจะเย็นลง
โปรดใช้ถุงมือกันความร้อนทุกครั้งเมื่อนำจานออก
คนของเหลวเมื่อถึงครึ่งหนึ่งของเวลาอุ่น หรือหลังจากสิ้นสุดการอุ่นร้อน และพักให้ของเหลวเย็นลงอย่างน้อย 20 วินาทีหลังจากให้ความร้อนเพื่อป้องกันการเดือดและกระเด็น
ยืนห่างจากเตาอบประมาณหนึ่งช่วงแขนเมื่อเปิดประตู เพื่อป้องกันไอน้ำหรืออากาศร้อนลวก
ห้ามใช้งานเตาอบเมื่อไม่มีอาหารอยู่ภายในเตา เตาอบจะปิดลงโดยอัตโนมัติหลังจากผ่านไป 30 นาทีเพื่อความปลอดภัย ขอแนะนำให้วางแก้วน้ำไว้ภายในเตาอบตลอดเวลาเพื่อดูดซับพลังงานไมโครเวฟ ในกรณีที่เตาอบทำงานโดยไม่ได้ตั้งใจ
ติดตั้งเตาอบตามระยะห่างในคู่มือนี้ (ดูที่ การติดตั้งเตาไมโครเวฟ)
โปรดใช้ความระมัดระวังเมื่อต่ออุปกรณ์ไฟฟ้าเข้ากับเต้าเสียบใกล้เตาอบ

MG28H5125NK_ST_DE68-04246J-05_TH.indd 6 2019-09-11 10:19:52

ข้อควรระวังสำหรับการใช้งานไมโครเวฟ

หากไม่ปฏิบัติตามข้อควรระวังเพื่อความปลอดภัยต่อไปนี้อาจทำให้ได้รับพลังงานไมโครเวฟที่เป็นอันตราย

- ห้ามใช้เตาอบขณะที่ประตูเปิดอยู่ ห้ามดัดแปลงแก้ไขล็อคเพื่อความปลอดภัย (สลักประตู) ห้ามสอดสิ่งแปลกปลอมในช่องของล็อคเพื่อความปลอดภัย
- ห้ามสอดวัตถุใดๆ ระหว่างประตูของเตาอบกับด้านหน้า หรือปล่อยให้มีอาหารหรือสารทำความสะอาดค้างอยู่ที่ผิวหน้าของซีล โปรดดูแลให้พื้นผิวประตูและซีลขอบประตูสะอาดอยู่เสมอ โดยเช็ดด้วยผ้าหมาดและเช็ดอีกครั้งด้วยผ้านุ่มที่แห้งหลังจากการใช้งานทุกครั้ง
- ห้ามใช้เตาอบหากมีความเสียหาย โปรดใช้งานหลังจากได้รับการซ่อมแซมโดยช่างที่มีความชำนาญแล้วเท่านั้น
  สำคัญ: ประตูเตาอบต้องปิดได้อย่างเหมาะสม ประตูเตาอบต้องไม่บิดงอ บานประตูต้องไม่แตกหักหรือหลวม ซีลประตูและพื้นผิวที่ซีลจะต้องไม่เสียหาย
- การปรับเปลี่ยนหรือการซ่อมแซมทั้งหมดต้องดำเนินการโดยช่างที่มีความชำนวญเท่านั้น

การรับประกันอย่างจำกัด

Samsung จะเรียกเก็บค่าบริการซ่อมแซม สำหรับการเปลี่ยนอุปกรณ์เสริมหรือซ่อมจุดบกพร่องที่ไม่ใช่ส่วนสำคัญ ถ้าความเสียหายของอุปกรณ์ และ/หรือความเสียหายหรือการสูญเสียอุปกรณ์เสริมนั้นเกิดจากการกระทำของผู้ใช้ รายการที่ครอบคลุมได้แก่:

- ประตู มือจับ แผงด้านนอก หรือแผงควบคุมที่รอยบุบ รอยขีดข่วน หรือแตกหัก
- ถาดแตกหรือสูญหาย ล้อเลื่อนนำทาง เฟืองวงแหวน หรือตะแกรงลวด

ใช้เตาอบนี้เพื่อวัตถุประสงค์ที่อธิบายในคู่มือคำแนะนำนี้เท่านั้น คำเตือนและคำแนะนำเพื่อความปลอดภัยในคู่มือนี้ไม่ได้ครอบคลุมถึงสภาวะและสถานการณ์ทั้งหมดที่สามารถเกิดขึ้นได้ คุณมีหน้าที่รับผิดชอบที่จะใช้สามัญสำนึก ความระมัดระวังและการใส่ใจเมื่อติดตั้ง บำรุงรักษา และใช้อุปกรณ์ เนื่องจากคำแนะนำในการใช้งานต่อไปนี้ใช้สำหรับหลายรุ่น ลักษณะของเตาอบของคุณอาจแตกต่างจากที่อธิบายในคู่มือนี้ และสัญญาณคำเตือนบางอย่างอาจไม่มีผล ถ้าคุณมีข้อซักถามหรือข้อกังวลใด โปรดติดต่อศูนย์บริการของ Samsung ที่อยู่ใกล้บ้าน หรือหาความช่วยเหลือและข้อมูลออนไลน์ได้ที่ www.samsung.com

โปรดใช้เตาอบนี้เพื่อให้ความร้อนอาหารเท่านั้น ใช้สำหรับการใช้งานภายในครัวเรือนเท่านั้น ห้ามให้ความร้อนกับผ้าทุกประเภทหรือเบาะที่มีไส้ซึ่งาจลุกไหม้ได้ ผู้ผลิตไม่มีส่วนรับผิดต่อความเสียหายที่เกิดจากการใช้เตาอบอย่างไม่ถูกต้องหรือไม่เหมาะสม


เพื่อป้องกันไม่ให้พื้นผิวของเตาอบเกิดความเสียหายและเกิดอันตราย โปรดดูแลรักษาให้เตาอบสะอาดอยู่เสมอ

MG28H5125NK_ST_DE68-04246J-05_TH.indd 7 2019-09-11 10:19:52


การติดตั้ง

อุปกรณ์เสริม

คุณจะได้รับอุปกรณ์เสริมหลายชนิด เพื่อนำมาใช้ร่วมกับเตาอบ โดยขึ้นอยู่กับรุ่นที่คุณซื้อ

	**1. วงแหวน** เพื่อวางไว้บริเวณส่วนกลางของเตาอบ **วัตถุประสงค์:** วงแหวนนี้จะรองรับน้ำหนักของจานหมุน
	**2. จานหมุน** วางเหนือวงแหวน โดยให้ส่วนกลางสวมพอดีกับเฟือง **วัตถุประสงค์:** จานหมุนทำหน้าที่เป็นพื้นที่หลักสำหรับอบอาหาร และสามารถถอดออกทำความสะอาดได้ง่าย
	**3. ตะแกรงสูง** สำหรับวางบนจานหมุน **วัตถุประสงค์:** คุณสามารถใช้ตะแกรงนี้เพื่ออบอาหารสองจานในเวลาเดียวกัน โดยวางจานเล็กไว้บนจานหมุน และวางจานที่สองบนตะแกรง **ตะแกรงโลหะสามารถใช้ได้ในการย่างและการอบอาหารแบบผสม**
	**4. จานอบเกรียม** โปรดดูหน้า 28 ถึง 29 **วัตถุประสงค์:** จานอบเกรียมนี้ใช้สำหรับอบอาหารให้เกรียมเป็นสีเหลืองในการอบอาหารแบบไมโครเวฟ ย่าง และแบบผสม และทำให้แป้งของอาหารประเภทเพสทรีและพิซซ่ากรอบ
	**5. ถ้วยน้ำสะอาด** โปรดดูหน้า 29 **วัตถุประสงค์:** ถ้วยน้ำสามารถใช้ในการทำความสะอาด

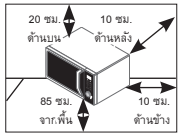
สถานที่ติดตั้ง



- เลือกพื้นผิวที่เรียบและได้ระดับ อยู่เหนือพื้นประมาณ 85 ซม. พื้นผิวต้องรองรับน้ำหนักของเตาอบได้
- ห้องที่สามารถระบายอากาศได้อย่างปลอดภัย อยู่ห่างจากผนังด้านหลังและผนังด้านข้างอย่างน้อย 10 ซม. และห่างจากผนังด้านบน 20 ซม.
- ห้ามติดตั้งเตาอบในบริเวณที่มีความร้อนและความชื้นสูง เช่น ถัดจาก เตาไมโครเวฟหรือเครื่องทำความร้อนอื่นๆ
- โปรดปฏิบัติตามข้อกำหนดของอุปกรณ์จ่ายไฟของเตาอบ ใช้สาย สำหรับต่อที่ได้รับการรับรองเท่านั้น ถ้าคุณจำเป็นต้องใช้
- เช็ดด้านในของซีลประตูด้วยผ้าหมาด ก่อนที่จะใช้เตาอบเป็นครั้งแรก

จานหมุน

นำวัสดุบรรจุภัณฑ์ออกจากภายในเตาอบ ติดตั้งวงแหวนและจานหมุน ทดลองว่าจานสามารถหมุนได้อย่างอิสระ



MG28H5125NK_ST_DE68-04246J-05_TH.indd 8 2019-09-11 10:19:53

การบำรุงรักษา

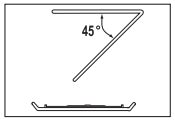
การทำความสะอาด

ทำความสะอาดเตาอบเป็นประจำเพื่อป้องกันสิ่งสกปรกจับตัวที่บนหรือด้านในเตาอบ
และโปรดให้การดูแลเป็นพิเศษสำหรับประตู ซีลประตู รวมทั้ง จานหมุนและวงแหวน (เฉพาะรุ่นที่มีให้เท่านั้น)
ถ้าไม่สามารถเปิดหรือปิดประตูได้อย่างสะดวก โปรดตรวจสอบว่าซีลประตูมีสิ่งสกปรกจับตัวอยู่หรือไม่
ให้ใช้ผ้านุ่มชุบน้ำยาล้างจานในการ ทำความสะอาดทั้งด้านในและด้านนอกเตาอบ ล้างให้สะอาดและเช็ดให้แห้ง

วิธีการขจัดสิ่งสกปรกภายในเตาอบที่มีกลิ่นเหม็นและล้างออกยาก

1. ในขณะที่เตาอบว่าง ให้วางถ้วยน้ำมะนาวที่กึ่งกลางจานหมุน
2. อบเตาเป็นเวลา 10 นาที โดยใช้พลังงานสูงสุด
3. เมื่อหมดเวลา ให้รอจนกว่าเตาอบจะเย็นลง จากนั้น ให้เปิดประตูแล้วทำความสะอาดช่องที่ใช้อบอาหาร

วิธีทำความสะอาดรุ่นที่มีขดลวดความร้อนหมุนได้อยู่ภายใน
ในการทำความสะอาดส่วนบนของช่องที่ใช้อบอาหาร
ให้ดึงขดลวดความร้อน ด้านบนลงประมาณ 45° ดังที่ปรากฏในภาพ
วิธีนี้จะช่วยให้สามารถทำ ความสะอาดด้านบนได้
เมื่อทำความสะอาดเสร็จแล้ว ให้ดันขดลวดความร้อน กลับเข้าที่



⚠ ข้อควรระวัง

- ดูแลประตูและซีลประตูให้สะอาดอยู่เสมอ และตรวจสอบว่าประตูสามารถเปิดและปิดได้สะดวก มิฉะนั้น อาจทำให้อายุการใช้งานเตาอบสั้นลง
- โปรดระวังอย่าให้น้ำกระเซ็นลงไปในช่องระบายอากาศของเตาอบ
- ห้ามใช้สารที่มีฤทธิ์ขัดถูหรือสารเคมีในการทำความสะอาด
- หลังจากใช้งานเตาอบทุกครั้ง ให้ใช้น้ำยาล้างอ่อนๆ เพื่อทำความสะอาดช่องภายในเตาอบ หลังจากรอให้เตาอบเย็นลงแล้ว

การเปลี่ยนชิ้นส่วน (ซ่อมแซม)

⚠ คำเตือน

เตาอบนี้ไม่มีชิ้นส่วนใดที่ผู้ใช้สามารถนำออกได้ โปรดอย่าเปลี่ยนชิ้นส่วนหรือซ่อมแซมเตาอบด้วยตนเอง

- ถ้าคุณพบปัญหาที่บริเวณบานพับ ซีล และ/หรือประตู โปรดติดต่อช่างที่มีประสบการณ์หรือศูนย์บริการของ Samsung ที่อยู่ใกล้บ้านเพื่อรับ ความช่วยเหลือด้านเทคนิค
- ถ้าคุณต้องการเปลี่ยนหลอดไฟ โปรดติดต่อศูนย์บริการของ Samsung ที่อยู่ใกล้บ้าน โปรดอย่าเปลี่ยนชิ้นส่วนด้วยตนเอง
- ถ้าคุณพบปัญหาที่บริเวณตัวเครื่องด้านนอกเตาอบ ให้ถอดสายไฟออกจากแหล่งพลังงาน แล้วติดต่อศูนย์บริการของ Samsung ที่อยู่ใกล้บ้าน

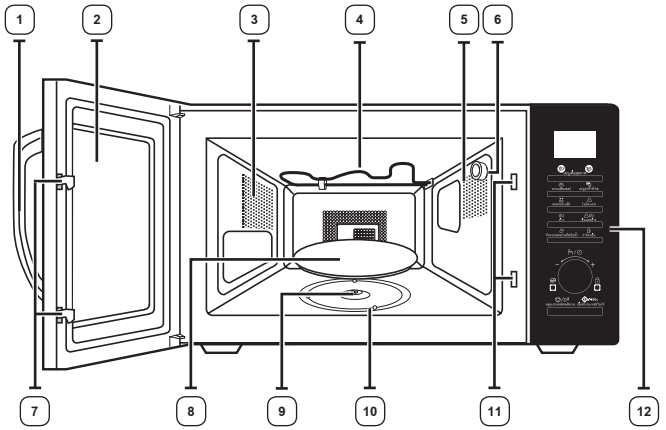
การดูแลเมื่อไม่ได้ใช้งานเป็นเวลานาน

ถ้าคุณไม่ได้ใช้งานเตาอบเป็นระยะเวลานาน ให้ถอดปลั๊กไฟออกและเคลื่อนย้ายเตาอบไปไว้ในที่แห้งและไม่มีฝุ่น ฝุ่นและความชื้นที่ก่อตัวภายในเตาอบอาจมีผลต่อประสิทธิภาพของเตาอบ

MG28H5125NK_ST_DE68-04246J-05_TH.indd 9 2019-09-11 10:19:54


คุณสมบัติเตาอบ

เตาอบ



1. ที่จับประตู
2. ประตู
3. ช่องระบายอากาศ
4. ขดลวดความร้อน
5. ไฟ
6. ที่ใส่ถ้วยน้ำ
7. สลักประตู
8. จานหมุน
9. เฟืองของจานหมุน
10. วงแหวน
11. ช่องล็อคเพื่อความปลอดภัย
12. แผงควบคุม

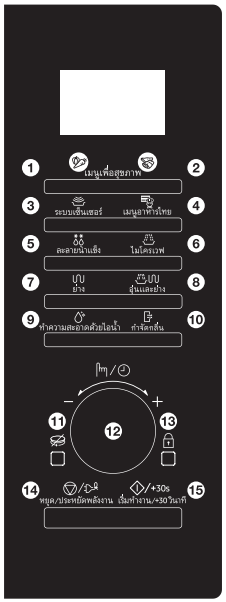แผงควบคุม



1. ปุ่มเมนูเพื่อสุขภาพ (ผัก, ธัญพืช)
2. ปุ่มเมนูเพื่อสุขภาพ (เนื้อสัตว์, ปลา)
3. ปุ่มระบบเซ็นเซอร์
4. ปุ่มเมนูอาหารไทย
5. ปุ่มละลายน้ำแข็ง
6. ปุ่มไมโครเวฟ
7. ปุ่มย่าง
8. ปุ่มอุ่นและย่าง
9. ปุ่มทำความสะอาดด้วยไอน้ำ
10. ปุ่มกำจัดกลิ่น
11. ปุ่มเปิด/ปิดจานหมุน
12. ปุ่มเลือกหลายฟังก์ชัน
13. ปุ่มล็อคป้องกันเด็ก
14. ปุ่มหยุด/ประหยัดพลังงาน
15. ปุ่มเริ่มทำงาน/+30วินาที

MG28H5125NK_ST_DE68-04246J-05_TH.indd 10 2019-09-11 10:19:55

การใช้เตาอบ


เตาอบไมโครเวฟทำงานอย่างไร

ไมโครเวฟเป็นคลื่นแม่เหล็กไฟฟ้าที่มีความถี่สูง พลังงานที่ปล่อยออกมาทำให้อาหารสุกหรือร้อนขึ้น โดยไม่มีการเปลี่ยนรูปร่างหรือสี

คุณสามารถใช้เตาไมโครเวฟเพื่อ:

- ละลายน้ำแข็ง
- อุ่นอาหาร
- อบอาหาร

หลักการอบอาหาร



1. ไมโครเวฟที่เกิดจากแม็กเนตรอนจะสะท้อนอยู่ในช่องเตาอบ และกระจายอย่างเป็นระเบียบ ในขณะที่อาหารหมุนอยู่บนจานหมุน ทำให้อาหารสุกทั่วถึงกัน
2. อาหารจะดูดซับไมโครเวฟลึกประมาณ 1 นิ้ว (2.5 ซม.) จากนั้นการอบอาหารจะเกิดขึ้นต่อไป เมื่อมีการถ่ายเทความร้อนภายในอาหาร
3. เวลาในการอบอาหารจะขึ้นอยู่กับภาชนะใส่อาหาร และคุณสมบัติของอาหารนั้นๆ:
   - ปริมาณและความหนาแน่น
   - ปริมาณน้ำภายในอาหาร
   - อุณหภูมิเริ่มต้น (มีการแช่เย็นไว้หรือไม่)

เนื่องจากส่วนกลางของอาหารสุกเนื่องจากการถ่ายเทความร้อน การอบอาหารจึงเกิดขึ้นแม้ว่าคุณจะนำอาหารออกจากเตาแล้วก็ตาม ดังนั้น โปรดปฏิบัติตามเวลาพักที่แนะนำในตำราอาหารและในคู่มือนี้เพื่อให้:

- อาหารสุกทั่วถึงกันจนถึงด้านใน
- อาหารมีอุณหภูมิเท่ากันทั้งหมด

การตรวจสอบว่าเตาไมโครเวฟของคุณทำงานอย่างถูกต้อง

กระบวนการง่ายๆ ต่อไปนี้ช่วยให้คุณสามารถตรวจสอบว่าเตาไมโครเวฟของคุณทำงานถูกต้องอยู่เสมอ หากคุณมีข้อสงสัย โปรดอ่านข้อมูลในหัวข้อ "การแก้ไขปัญหา" ในหน้า 40 ถึง 41

เตาอบจะต้องต่อเข้ากับปลั๊กไฟที่ผนังอย่างถูกต้อง จานหมุนจะต้องอยู่ในตำแหน่งที่ถูกต้องในเตา ถ้ามีการใช้พลังงานนอกเหนือจากระดับสูงสุด (100 % - 900 วัตต์) น้ำจะใช้เวลาเดือดนานขึ้น

เปิดประตูเตาอบโดยดึงที่จับที่ด้านขวาของประตู
วางแก้วใส่น้ำไว้บนจานหมุน ปิดประตู

/+30s เริ่มทำงาน/+30วินาที	กดปุ่ม **เริ่มทำงาน/+30วินาที** และตั้งเวลาเป็น 4 หรือ 5 นาที โดยกดปุ่ม **เริ่มทำงาน/+30วินาที** เป็นจำนวนครั้งที่เหมาะสม **ผลลัพธ์:** เตาจะให้ความร้อนกับน้ำเป็นเวลา 4 หรือ 5 นาที น้ำควรจะเดือด

MG28H5125NK_ST_DE68-04246J-05_TH.indd 11 2019-09-11 10:19:55

การตั้งเวลา

เมื่อมีการจ่ายไฟ ระบบจะแสดง “88:88” จากนั้นจะแสดง “12:00” บนหน้าจอแสดงผลโดยอัตโนมัติ
โปรดตั้งเวลาปัจจุบัน ซึ่งสามารถแสดงเวลาในระบบ 24 หรือ 12 ชั่วโมง คุณจะต้องตั้งเวลาของนาฬิกา:

- เมื่อติดตั้งเตาไมโครเวฟเป็นครั้งแรก
- หลังจากไฟฟ้าดับ

อย่าลืมปรับเวลา ถ้าคุณต้องสลับระหว่างเวลาของฤดูร้อนและฤดูหนาว


	**1.** กด **ปุ่มเลือกหลายฟังก์ชัน**
	**2.** หมุน **ปุ่มเลือกหลายฟังก์ชัน** เพื่อกำหนดประเภทการแสดงเวลา (12H หรือ 24H)
	**3.** กด **ปุ่มเลือกหลายฟังก์ชัน** เพื่อให้การตั้งค่าเสร็จสมบูรณ์
	**4.** หมุน **ปุ่มเลือกหลายฟังก์ชัน** เพื่อตั้งชั่วโมง
	**5.** กด **ปุ่มเลือกหลายฟังก์ชัน**
	**6.** หมุน **ปุ่มเลือกหลายฟังก์ชัน** เพื่อตั้งนาที
	**7.** เมื่อนาฬิกาแสดงเวลาถูกต้องแล้ว ให้กด **ปุ่มเลือกหลายฟังก์ชัน** เพื่อเริ่มต้นนาฬิกา **ผลลัพธ์:** เวลานี้จะปรากฏเมื่อใดก็ตามที่คุณไม่ได้ใช้เตาไมโครเวฟ

การอบ/อุ่นอาหาร

ขั้นตอนต่อไปนี้กล่าวถึงการอบและการอุ่นอาหาร

โปรดตรวจสอบการตั้งค่าการอบอาหารทุกครั้ง ก่อนที่จะปล่อยให้เตาอบทำงานตามลำพัง

เปิดประตู วางอาหารที่ส่วนกลางของจานหมุน ปิดประตู ห้ามเปิดเครื่อง หากเตาอบไมโครเวฟว่างเปล่า

	**1.** กดปุ่ม **ไมโครเวฟ** **ผลลัพธ์ :** หน้าจอจะแสดงผลดังนี้: (โหมดไมโครเวฟ)
	**2.** หมุน **ปุ่มเลือกหลายฟังก์ชัน** จนกว่าระดับพลังงานที่เหมาะสมจะปรากฏขึ้น เมื่อได้พลังงานที่เหมาะสม ให้กด **ปุ่มเลือกหลายฟังก์ชัน** เพื่อตั้งค่าระดับพลังงาน
	**3.** ตั้งเวลาในการอบอาหารด้วยการหมุน **ปุ่มเลือกหลายฟังก์ชัน** **ผลลัพธ์ :** เครื่องจะแสดงเวลาอบอาหารขึ้น
	**4.** กดปุ่ม **เริ่มทำงาน/+30วินาที** **ผลลัพธ์ :** ไฟของเตาอบจะสว่างขึ้น และจานหมุนจะเริ่มหมุน การอบอาหารจะเริ่มขึ้น และเมื่อเสร็จแล้ว: • เตาอบจะส่งเสียงและแสดง "End" กะพริบ 4 ครั้ง จากนั้นเตาอบจะส่งเสียงหนึ่งครั้งทุกนาที

MG28H5125NK_ST_DE68-04246J-05_TH.indd 12 2019-09-11 10:19:57

ระดับพลังงานและการปรับเวลา

ฟังก์ชันระดับพลังงานช่วยให้คุณสามารถปรับปริมาณพลังงานที่จะใช้ พร้อมทั้งเวลาที่ใช้ในการอบหรืออุ่นอาหาร ตามชนิดและปริมาณของอาหารนั้น คุณสามารถเลือกระดับพลังงานได้ถึงหกระดับ

ระดับพลังงาน	เปอร์เซ็นต์	กำลังไฟฟ้า
สูง	100 %	900 วัตต์
สูงปานกลาง	67 %	600 วัตต์
ปานกลาง	50 %	450 วัตต์
ต่ำปานกลาง	33 %	300 วัตต์
ละลายน้ำแข็ง	20 %	180 วัตต์
ต่ำ	11 %	100 วัตต์

เวลาอบอาหารที่ระบุในตำราอาหารและในคู่มือนี้จะสอดคล้องกับระดับพลังงานที่ระบุไว้

ถ้าคุณเลือก...	เวลาการอบอาหารจะเป็น...
ระดับพลังงานสูง ระดับพลังงานต่ำ	ลดลง เพิ่มขึ้น

การปรับเวลาอบอาหาร

คุณสามารถเพิ่มเวลาในการอบอาหาร โดยกดปุ่ม **เริ่มทำงาน/+30วินาที** หนึ่งครั้งสำหรับการเพิ่ม 30 วินาที

- ดูความคืบหน้าของการอบเมื่อใดก็ได้ โดยเปิดประตูของเตาอบ
- เพิ่มเวลาที่เหลือในการอบอาหาร

	ในการเพิ่มเวลาอบอาหาร ให้กดปุ่ม **เริ่มทำงาน/+30วินาที** หนึ่งครั้งต่อ 30 วินาทีที่คุณต้องการเพิ่ม • ตัวอย่าง: หากต้องการเพิ่มเวลาอบอีกสามนาที ให้กดปุ่ม **เริ่มทำงาน/+30วินาที** หกครั้ง
	เพียงหมุน **ปุ่มเลือกหลายฟังก์ชัน** เพื่อปรับเวลาในการอบอาหาร • หากต้องการเพิ่มเวลาในการอบอาหาร ให้หมุนไปทางขวา และหากต้องการลดเวลาในการอบอาหาร ให้หมุนไปทางซ้าย

การหยุดการอบอาหาร

คุณสามารถหยุดการอบอาหารได้ตลอดเวลา เพื่อ:

- ตรวจดูอาหาร
- พลิกด้านหรือคนอาหาร
- พักอาหาร

ในการหยุดการอบอาหาร...	จากนั้น...
ชั่วคราว	ชั่วคราว : เปิดประตูหรือกดปุ่ม **หยุด/ประหยัดพลังงาน** หนึ่งครั้ง **ผลลัพธ์ :** การอบจะหยุดลง หากต้องการอบอาหารต่อ ให้ปิดประตูอีกครั้งและกดปุ่ม **เริ่มทำงาน/+30วินาที**
โดยสิ้นเชิง	โดยสิ้นเชิง : กดปุ่ม **หยุด/ประหยัดพลังงาน** หนึ่งครั้ง **ผลลัพธ์ :** การอบจะหยุด หากคุณต้องการยกเลิกการตั้งค่าการอบ ให้กดปุ่ม **หยุด/ประหยัดพลังงาน** อีกครั้ง

MG28H5125NK_ST_DE68-04246J-05_TH.indd 13 2019-09-11 10:19:57

การตั้งค่าโหมดประหยัดพลังงาน

เตาอบมีโหมดประหยัดพลังงาน



- กดปุ่ม **หยุด/ประหยัดพลังงาน**

  ผลลัพธ์ : จอแสดงผลดับ

- หากต้องการออกจากโหมดประหยัดพลังงาน ให้เปิดประตูหรือกดปุ่ม **หยุด/ประหยัดพลังงาน** จากนั้นจอแสดงผลจะแสดงเวลาปัจจุบัน ขณะนี้เตาอบพร้อมใช้งานแล้ว

ฟังก์ชันประหยัดพลังงานอัตโนมัติ

ถ้าคุณไม่เลือกฟังก์ชันใดเลยเมื่ออุปกรณ์อยู่ระหว่างการตั้งค่าหรือทำงานโดยมีสถานะหยุดชั่วคราว ฟังก์ชันจะถูกยกเลิก และนาฬิกาจะแสดงผลหลังจากผ่านไป 25 นาที
ไฟของเตาอบจะดับลงหลังจากผ่านไป 5 นาทีโดยประตูเปิดอยู่

การใช้คุณสมบัติเมนูเพื่อสุขภาพ

คุณสมบัติ **เมนูเพื่อสุขภาพ** 17 แบบมีเวลาในการอบอาหารที่กำหนดไว้ล่วงหน้า โดยคุณไม่จำเป็นต้องตั้งเวลาอบหรือระดับพลังงานอีก

คุณสามารถปรับขนาดอาหารได้ด้วยการหมุน **ปุ่มเลือกหลายฟังก์ชัน**

ใช้กับผลิตภัณฑ์สำหรับไมโครเวฟเท่านั้น

เปิดประตู วางอาหารที่ส่วนกลางของจานหมุน ปิดประตู

	**1.** กดปุ่ม **เมนูเพื่อสุขภาพ** สำหรับการอบอาหารที่ต้องการ - ผักและธัญพืช - เนื้อสัตว์และปลา
	**2.** เลือกประเภทของอาหารที่อบ ด้วยการหมุน **ปุ่มเลือกหลายฟังก์ชัน** โปรดดูตารางในหน้าถัดไป เพื่อดูคำอธิบายการตั้งค่าต่างๆ ที่กำหนดไว้แล้ว
	**3.** กดปุ่ม **เริ่มทำงาน/+30วินาที** **ผลลัพธ์ :** เตาอบจะอบอาหารตามการตั้งค่าล่วงหน้าที่เลือกไว้ • เมื่อสิ้นสุดการอบอาหาร เตาจะส่งเสียงเตือน พร้อมกับกะพริบคำว่า "End" 4 ครั้ง หลังจากนั้นเตาอบจะส่งเสียงเตือนนาทีละครั้ง

MG28H5125NK_ST_DE68-04246J-05_TH.indd 14 2019-09-11 10:19:58

ตารางต่อไปนี้จะแสดงปริมาณและคำแนะนำที่เหมาะสมเกี่ยวกับตัวเลือกในการอบอาหาร 17 แบบ อันประกอบด้วยรายการผักและธัญพืช และ เนื้อสัตว์และปลา

ใช้ถุงมือกันความร้อนเมื่อนำออกจากเตา

1. ผักและธัญพืช

รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
1 **ถั่วเขียว**	250 ก.	ล้างทำความสะอาดถั่วเขียว ใส่ให้เสมอกันในชามแก้วที่มีฝาปิด เติมน้ำ 30 มล. (1 ช้อนโต๊ะ) ขณะที่อบอาหารหนัก 250 ก. วางชามบริเวณกึ่งกลางของจานหมุน อบโดยปิดฝา คนอาหารหลังการอบ พักอาหารเป็นเวลา 1-2 นาที
2 **ผักโขม**	150 ก.	ล้างทำความสะอาดผักโขม ใส่ในชามแก้วที่มีฝาปิด อย่าเติมน้ำ วางชามตรงกลางของจานหมุน อบโดยปิดฝา คนอาหารหลังการอบ พักอาหารเป็นเวลา 1-2 นาที
3 **ข้าวโพดฝัก**	500 ก. (2 ชิ้น)	ล้างและทำความสะอาดฝักข้าวโพด แล้ววางในจานแก้วทรงรี ปิดด้วยฟิล์มสำหรับไมโครเวฟและเจาะรูที่ฟิล์ม พักอาหารเป็นเวลา 1-2 นาที
4 **ข้าวกล้อง** (หุงพอสุก)	250 ก.	ใช้ชามแก้วขนาดใหญ่ที่ใช้สำหรับเตาอบและมีฝาปิด เติมน้ำเย็นสองเท่าของปริมาณอาหาร (500 มล.) อบโดยปิดฝา คนให้ทั่วก่อนพักอาหารไว้ แล้วเติมเกลือและสมุนไพรต่างๆ พักอาหารเป็นเวลา 5-10 นาที
5 **มักกะโรนี**	250 ก.	ใช้ชามแก้วขนาดใหญ่ที่ใช้สำหรับเตาอบและมีฝาปิด เติมน้ำร้อน 1 ลิตร เกลือเล็กน้อย และคนให้ทั่ว อบโดยไม่ปิดฝา อบโดยปิดฝา คนให้เข้ากันแล้วพักอาหารไว้ จากนั้นเทน้ำออกให้หมด พักอาหาร 1 นาที
6 **เมล็ดควินัว**	250 ก.	ใช้ชามแก้วขนาดใหญ่ที่ใช้สำหรับเตาอบและมีฝาปิด เติมน้ำเย็นสองเท่าของปริมาณอาหาร (500 มล.) อบโดยปิดฝา คนให้ทั่วก่อนพักอาหารไว้ แล้วเติมเกลือและสมุนไพรต่างๆ พักอาหารเป็นเวลา 1-3 นาที
7 **ข้าวสาลีบดบัลเกอร์**	250 ก.	ใช้ชามแก้วขนาดใหญ่ที่ใช้สำหรับเตาอบและมีฝาปิด เติมน้ำเย็นสองเท่าของปริมาณอาหาร (500 มล.) อบโดยปิดฝา คนให้ทั่วก่อนพักอาหารไว้ แล้วเติมเกลือและสมุนไพรต่างๆ พักอาหารเป็นเวลา 2-5 นาที
8 **กราแตงผัก**	500 ก.	วางผัก เช่น มันฝรั่งฝานบางๆ ที่อบไว้ล่วงหน้า ซูกินีฝาน และมะเขือเทศ รวมทั้งใส่ซอสลงในจานไพเร็กซ์แก้วขนาดพอเหมาะ ใส่ชีสปนที่ด้านบน วางจานบนตะแกรง พักอาหารเป็นเวลา 2-3 นาที
9 **มะเขือเทศย่าง**	400 ก.	ล้างทำความสะอาดมะเขือเทศ หั่นครึ่งและใส่ลงในจานที่ใช้สำหรับเตาอบ ใส่ชีสปนที่ด้านบน วางจานบนตะแกรง พักอาหารเป็นเวลา 1-2 นาที

MG28H5125NK_ST_DE68-04246J-05_TH.indd 15 2019-09-11 10:19:58

2. เนื้อสัตว์และปลา

รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
1 **อกไก่**	300 ก. (2 ชิ้น)	ล้างชิ้นไก่และวางในจานเซรามิค ปิดด้วยฟิล์มสำหรับไมโครเวฟ เจาะฟิล์ม วางจานบนจานหมุน พักอาหาร 2 นาที
2 **อกไก่งวง**	300 ก. (2 ชิ้น)	ล้างชิ้นไก่และวางในจานเซรามิค ปิดด้วยฟิล์มสำหรับไมโครเวฟ เจาะฟิล์ม วางจานบนจานหมุน พักอาหาร 2 นาที
3 **เนื้อปลาสด**	300 ก. (2 ชิ้น)	ล้างปลาและวางในจานเซรามิค เติมน้ำมะนาว 1 ช้อนโต๊ะ ปิดด้วยฟิล์มสำหรับไมโครเวฟ เจาะฟิล์ม วางจานบนจานหมุน พักอาหารเป็นเวลา 1-2 นาที
4 **เนื้อปลาแซลมอนสด**	300 ก. (2 ชิ้น)	ล้างปลาและวางในจานเซรามิค เติมน้ำมะนาว 1 ช้อนโต๊ะ ปิดด้วยฟิล์มสำหรับไมโครเวฟ เจาะฟิล์ม วางจานบนจานหมุน พักอาหารเป็นเวลา 1-2 นาที
5 **เนื้อกุ้งสด**	250 ก.	ล้างกุ้งและวางในจานเซรามิค เติมน้ำมะนาว 1 ช้อนโต๊ะ ปิดด้วยฟิล์มสำหรับไมโครเวฟ เจาะฟิล์ม วางจานบนจานหมุน พักอาหารเป็นเวลา 1-2 นาที
6 **เนื้อปลาเทราท์สด**	400 ก. (1-2 ตัว)	วางปลาสด 1-2 ตัวลงบนจานที่ใช้สำหรับเตาอบ เติมเกลือเล็กน้อย น้ำมะนาว 1 ช้อนโต๊ะ และสมุนไพรต่างๆ ปิดด้วยฟิล์มสำหรับไมโครเวฟ เจาะฟิล์ม วางจานบนจานหมุน พักอาหาร 2 นาที
7 **เนื้อปลาย่าง**	400 ก. (1 ตัว)	ทาน้ำมันให้ทั่วตัวปลา (ปลาเทราท์หรือปลากะพง) จากนั้นใส่สมุนไพรและเครื่องเทศ วางปลาเคียงข้างกัน โดยสลับหัวและหางไว้บนตะแกรงสูง พลิกกลับด้านเมื่อได้ยินเสียงเตือน พักอาหาร 3 นาที
8 **สเต็กปลาแซลมอนย่าง**	300 ก. (2 ชิ้น)	วางสเต็กปลาให้ทั่วบนตะแกรงสูง พลิกกลับด้านเมื่อได้ยินเสียงเตือน พักอาหาร 2 นาที

การใช้คุณสมบัติระบบเซ็นเซอร์

คุณสมบัติ **ระบบเซ็นเซอร์** 8 แบบประกอบด้วยเวลาในการอบอาหารที่กำหนดไว้แล้ว โดยคุณไม่จำเป็นต้องตั้งเวลาอบหรือระดับพลังงานอีก

คุณสามารถปรับประเภทของระบบเซ็นเซอร์ได้ด้วยการหมุน **ปุ่มเลือกหลายฟังก์ชัน**

ขั้นแรก วางอาหารที่กึ่งกลางของจานหมุน และปิดประตู

โปรดใช้กับผลิตภัณฑ์ที่ระบุว่าใช้กับไมโครเวฟได้เท่านั้น

ระบบเซ็นเซอร์	**1.** กดปุ่ม **ระบบเซ็นเซอร์**
	2. เลือกประเภทของอาหารที่อบ ด้วยการหมุน **ปุ่มเลือกหลายฟังก์ชัน** โปรดดูตารางในหน้าถัดไป เพื่อดูค่าอธิบายการตั้งค่าต่างๆ ที่กำหนดไว้แล้ว ในขั้นตอนนี้ให้กด **ปุ่มเลือกหลายฟังก์ชัน** เพื่อเลือกประเภทอาหาร
/+30s เริ่มทำงาน/+30วินาที	**3.** กดปุ่ม **เริ่มทำงาน/+30วินาที** **ผลลัพธ์ :** การอบจะเริ่มต้น และเมื่อเสร็จแล้ว 1) เตาอบจะส่งเสียงเตือน 4 ครั้ง 2) เตาอบจะส่งสัญญาณเตือน 3 ครั้ง (นาทีละครั้ง) 3) เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง

ใช้กับผลิตภัณฑ์สำหรับไมโครเวฟเท่านั้น

ถ้าอุณหภูมิด้านในสูงกว่า 60 °C พัดลมระบายอากาศจะทำงาน 3 นาที คุณจะไม่สามารถใช้ปุ่ม **ระบบเซ็นเซอร์** ได้ชั่วคราวจนกว่าเตาอบจะเย็นลงถึงอุณหภูมิที่กำหนดสำหรับโหมดปลอดภัยของเซ็นเซอร์

ตารางต่อไปนี้จะแสดงโปรแกรม **ระบบเซ็นเซอร์** 8 โปรแกรม ประกอบด้วยช่วงของน้ำหนักที่แนะนำต่อรายการหลังจากอบอาหารและคำแนะนำที่เหมาะสม ในช่วงต้นของโปรแกรม จอแสดงผลจะแสดงระยะเวลาของเซ็นเซอร์ เมื่อพ้นช่วงเวลานี้ เวลาในการอบอาหารและระดับพลังงานจะได้รับการคำนวณโดยอัตโนมัติ ตลอดจนเวลาอบที่เหลืออยู่จะปรากฏขึ้น กระบวนการอบอาหารจะควบคุมโดยระบบเซ็นเซอร์ เพื่อความสะดวกสูงสุดสำหรับคุณ

ใช้ถุงมือกันความร้อนเมื่อนำออกจากเตา

MG28H5125NK_ST_DE68-04246J-05_TH.indd 16 2019-09-11 10:19:59

รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
1 **เครื่องดื่ม**	150-250 ก.	รินเครื่องดื่ม (อุณหภูมิปกติ) ในถ้วยหรือแก้วเซรามิค อุ่นโดยไม่ปิดฝา วางตรงกลางของจานหมุน พักถ้วยไว้ในเตา คนเครื่องดื่มก่อนอบและหลังจากเวลาพักอาหาร โปรดระมัดระวังขณะที่นำถ้วยออกจากเตาไมโครเวฟ (โปรดดูคำแนะนำเพื่อความปลอดภัยสำหรับการอุ่นเครื่องดื่ม) พักอาหารเป็นเวลา 1-2 นาที
2 **บร็อคโคลี่**	200-500 ก.	ล้างทำความสะอาดบร็อกโคลี่ ใส่ให้เสมอกันในชามแก้วที่มีฝาปิด เติมน้ำ 30-45 มล. (2-3 ช้อนโต๊ะ) วางชามตรงกลางของจานหมุน อบโดยปิดฝา คนอาหารหลังการอบ โปรแกรมนี้เหมาะสำหรับบร็อกโคลี่ ตลอดจนซูกินี มะเขือม่วง ฟักทอง หรือพริกหวาน พักอาหารเป็นเวลา 1-2 นาที
3 **แครอทหั่นแว่น**	200-500 ก.	ล้างทำความสะอาดแครอท และฝานออกเป็นชิ้นๆ เท่ากัน ใส่ในชามแก้วที่มีฝาปิด เติมน้ำ 30-45 มล. (2-3 ช้อนโต๊ะ) วางชามตรงกลางของจานหมุน อบโดยปิดฝา คนอาหารหลังการอบ โปรแกรมนี้เหมาะสำหรับแครอทฝานบางๆ ตลอดจนช่อดอกกะหล่ำหรือหัวผักกาด พักอาหารเป็นเวลา 1-2 นาที
4 **มันฝรั่งปอกเปลือก**	200-800 ก.	ล้างและปอกเปลือกมันฝรั่งและหั่นเป็นชิ้นเท่าๆ กัน ใส่ในชามแก้วที่มีฝาปิด เติมน้ำ 45-60 มล. (3-4 ช้อนโต๊ะ) วางชามตรงกลางของจานหมุน อบโดยปิดฝา พักอาหารเป็นเวลา 2-3 นาที
5 **มันฝรั่งหั่นแบบไม่ปอกเปลือก**	200-800 ก.	ล้างทำความสะอาดมันฝรั่ง หัวละ 200 ก. ทาน้ำมันมะกอก แล้วใช้มีดเจาะเปลือก วางบนจานหมุน พักอาหารเป็นเวลา 2-3 นาที

รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
6 **ซุป/ซอส**	250-500 ก.	เทซุป/ซอสลงในจานเซรามิกกันลึกและครอบด้วยฝาพลาสติก วางบนจานหมุน คนให้ทั่วหลังจากนำออกมา พักอาหารเป็นเวลา 1-2 นาที
7 **ซุปแช่แข็ง**	250-500 ก.	เปิดฝาครอบของซุปแช่แข็งออกและวางบนจานหมุน ครอบด้วยฝาพลาสติก คนให้ทั่วหลังจากนำออกมา พักอาหารเป็นเวลา 1-2 นาที
8 **อาหารแช่แข็งพร้อมทาน**	300-500 ก.	เจาะฟิล์มของอาหารแช่แข็งสำเร็จรูปและวางบนจานหมุน โปรแกรมนี้เหมาะกับอาหารที่มีส่วนประกอบสองอย่าง พักอาหารเป็นเวลา 3-4 นาที

MG28H5125NK_ST_DE68-04246J-05_TH.indd 17 2019-09-11 10:19:59

คำแนะนำสำหรับการอบอาหารระบบเซ็นเซอร์อัตโนมัติ

การใช้ระบบเซ็นเซอร์อัตโนมัติช่วยให้คุณสามารถอบอาหารโดยอัตโนมัติ โดยจะตรวจสอบปริมาณก๊าซที่เกิดจากอาหารในขณะอบ

- ขณะที่อบอาหาร จะเกิดก๊าซหลายประเภท
  เซ็นเซอร์อัตโนมัติจะกำหนดเวลาและระดับพลังงานที่เหมาะสม โดยตรวจสอบก๊าซจากอาหาร ทำให้ไม่ต้องกำหนดเวลาอบและระดับพลังงาน
- เมื่อคุณปิดภาชนะด้วยฝา หรือฟิล์มพลาสติกระหว่างใช้การอบอาหารระบบเซ็นเซอร์ เซ็นเซอร์อัตโนมัติจะตรวจสอบก๊าซได้หลังจากที่ไอน้ำเต็มอยู่ในภาชนะแล้ว
  ถ้าใช้ฟิล์มสำหรับไมโครเวฟหรือพลาสติก โปรดเปิดช่องเล็ก ๆ ที่ขอบจานเพื่อระบายอากาศหรือโปรดเจาะรูสองถึงสามครั้ง
- หลังจากสิ้นสุดการอบ เวลาในการอบที่เหลือจะเริ่มนับถอยหลัง ซึ่งจะเป็นเวลาที่เหมาะสมในการหมุนหรือคนอาหารเพื่อให้อาหารสุกทั่วกัน
- ก่อนที่จะใช้การอบอาหารระบบเซ็นเซอร์อัตโนมัติ คุณสามารถปรุงรสอาหารด้วยเครื่องเทศ สมุนไพร หรือซอส แต่โปรดระมัดระวัง เนื่องจากเกลือหรือน้ำตาลอาจทำให้อาหารเป็นรอยไหม้ จึงควรเติมเครื่องปรุงประเภทนี้ภายหลังการอบอาหาร

ภาชนะและฝาปิดสำหรับการอบอาหารระบบเซ็นเซอร์

- เพื่อให้การอบอาหารด้วยฟังก์ชันนี้ได้ผลดี โปรดปฏิบัติตามคำแนะนำในการเลือกภาชนะและฝาที่เหมาะสมที่แสดงในตารางของคู่มือนี้
- โปรดใช้ภาชนะที่ใช้กับไมโครเวฟได้ และปิดฝาสำหรับภาชนะนั้น หรือฟิล์มพลาสติก เมื่อใช้ฟิล์มพลาสติก โปรดเปิดช่องไว้ที่มุมภาชนะเพื่อให้ไอน้ำระบายออกได้
- โปรดใช้เฉพาะฝาปิดสำหรับภาชนะที่ใช้เท่านั้น หากภาชนะนั้นไม่มีฝาปิด ให้ใช้ฟิล์มพลาสติก
- ใส่อาหารในภาชนะอย่างน้อยครึ่งหนึ่ง
- อาหารที่ต้องมีการคนหรือกลับ ควรจะคนหรือกลับเมื่อใกล้สิ้นสุดการอบอาหารระบบเซ็นเซอร์ หลังจากที่เวลาเริ่มนับถอยหลังในจอแสดงผล

ข้อมูลสำคัญ


- หลังจากติดตั้งเตาอบและต่อสายไฟเข้ากับเต้ารับไฟฟ้า โปรดอย่าถอดปลั๊กสายไฟ เซ็นเซอร์ตรวจจับก๊าซต้องใช้เวลาในการปรับสมดุล เพื่อให้สามารถอบอาหารได้อย่างเหมาะสม
- ไม่แนะนำให้ใช้คุณสมบัติการอบอาหารระบบเซ็นเซอร์อัตโนมัติกับการอบอาหารอย่างต่อเนื่อง กล่าวคือ มีการอบอาหารหลายๆ ครั้งติดต่อกัน
- ติดตั้งเตาอบในตำแหน่งที่มีอากาศถ่ายเท เพื่อให้มีการระบายความร้อนและอากาศ เพื่อให้เซ็นเซอร์ทำงานอย่างถูกต้อง
- เพื่อให้ได้ผลการอบอาหารที่ดี โปรดอย่าใช้เซ็นเซอร์อัตโนมัติเมื่ออุณหภูมิของห้องสูงหรือต่ำเกินไป
- ห้ามใช้น้ำยาทำความสะอาดที่เป็นสาระเหยในการทำความสะอาดเตาอบ ก๊าซที่เกิดจากน้ำยาทำความสะอาดจะมีผลกระทบต่อเซ็นเซอร์
- อย่าวางเตาอบในบริเวณที่มีความชื้นหรือมีก๊าซ เนื่องจากจะรบกวนการทำงานของเซ็นเซอร์
- รักษาความสะอาดของภายในเตาอบไมโครเวฟเสมอ เช็ดอาหารที่กระเด็นด้วยผ้าหมาด เตาอบนี้ได้รับการออกแบบเพื่อใช้งานในบ้านเท่านั้น

MG28H5125NK_ST_DE68-04246J-05_TH.indd 18 2019-09-11 10:19:59

การใช้คุณสมบัติเมนูอาหารไทย

คุณสมบัติ **เมนูอาหารไทย** 30 รายการประกอบด้วยเวลาในการอบอาหารที่กำหนดไว้แล้ว โดยคุณไม่จำเป็นต้องตั้งเวลาอบหรือระดับพลังงานอีก คุณสามารถปรับปริมาณอาหารได้ด้วยการหมุน **ปุ่มเลือกหลายฟังก์ชัน**

ขั้นแรก วางอาหารที่กึ่งกลางของจานหมุน และปิดประตู

	**1.** กดปุ่ม **เมนูอาหารไทย**
	**2.** เลือกประเภทของอาหารที่อบ ด้วยการหมุน **ปุ่มเลือกหลายฟังก์ชัน**
	**3.** กดปุ่ม **เริ่มทำงาน/+30วินาที** **ผลลัพธ์ :** การอบจะเริ่มต้น และเมื่อเสร็จแล้ว 1) เตาอบจะส่งเสียงเตือน 4 ครั้ง 2) เตาอบจะส่งสัญญาณเตือน 3 ครั้ง (นาทีละครั้ง) 3) เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง

ใช้กับผลิตภัณฑ์สำหรับไมโครเวฟเท่านั้น

ตารางต่อไปนี้จะแสดงโปรแกรม **เมนูอาหารไทย** รวมทั้งปริมาณและคำแนะนำต่างๆ ที่เหมาะสม

รหัส/อาหาร	ปริมาณอาหาร	ส่วนประกอบ
1 **หมูพันต้นหอมย่าง (หมูย่างหมัก)**	2 คน	เนื้อหมูแล่บาง - 200 ก., กะทิ - ¼ ถ้วย, ซอสถั่วเหลือง - 1 ช้อนโต๊ะ, ซีอิ๊วดำ - 1 ช้อนโต๊ะ, รากผักชีตำ - 4 ราก, กระเทียมสับ - 1 ช้อนโต๊ะ, พริกไทย - ½ ช้อนชา, น้ำตาล - ½ ช้อนโต๊ะ, น้ำมัน - 1 ช้อนโต๊ะ, ต้นหอมซอย - 1 ถ้วย
	คำแนะนำ ตำรากผักชี กระเทียม พริกไทยเข้าด้วยกันเพื่อนำไปหมักหมู ใช้เวลาหมัก 1 ชั่วโมง นำห่อหมูหมักที่โรยต้นหอมเสียบเข้าแกนหมุนที่ตะแกรงย่างในเตาอบ และเริ่มอบ เมื่อได้ยินสัญญาณเตือน ให้พลิกอาหารแล้วกดปุ่ม เริ่มทำงาน รับประทานได้	
2 **หมูย่างปลาเค็ม**	2 คน	ปลาเค็มแล่ - 30-50 ก., หมูสับ - 200 ก., กระเทียมสับ - 2 ช้อนโต๊ะ, พริกขี้หนูสับ - 1 ช้อนโต๊ะ, พริกไทย - ½ ช้อนชา, ผงปรุงรส - 1 ช้อนโต๊ะ, น้ำมันงา - 1 ช้อนชา, หัวหอมแดงสับ - ¼ ถ้วย, มะนาว - 1
	คำแนะนำ ผสมส่วนผสมและนำมาคลุกเคล้าเข้าด้วยกัน ยกเว้นหัวหอมแดงสับและมะนาว ปั้นเป็นก้อน 1 ซม. วางในถาดอบบนตะแกรงย่างในเตาอบ และเริ่มอบ เมื่อได้ยินสัญญาณเตือน ให้พลิกอาหารแล้วกดปุ่ม เริ่มทำงาน รับประทานกับหัวหอมแดงซอยและมะนาว	

MG28H5125NK_ST_DE68-04246J-05_TH.indd 19 2019-09-11 10:19:59

รหัส/อาหาร	ปริมาณอาหาร	ส่วนประกอบ
3 **คอหมูย่างจิ้มแจ่ว**	3-4 คน	คอหมู - 400 ก., ซอสถั่วเหลือง - 3 ช้อนโต๊ะ, ซอสหอยนางรม - 2 ช้อนโต๊ะ, น้ำตาล - 1 ช้อนโต๊ะ, พริกไทย - ½ ช้อนชา, เกลือ - 1 ช้อนชา, นมสด - 2 ช้อนโต๊ะ, ข้าวคั่ว - 2 ช้อนโต๊ะ น้ำราดรสเผ็ด พริกป่น - 1 ช้อนโต๊ะ, น้ำมะขาม - 2 ช้อนโต๊ะ, น้ำปลา - 1 ช้อนโต๊ะ, น้ำตาลปี๊บ - 2 ช้อนโต๊ะ, ข้าวคั่ว - 1 ช้อนโต๊ะ, ต้นหอม, ผักชี ตามต้องการ
	คำแนะนำ ผสมคอหมูย่างและส่วนผสมต่างๆ เข้าด้วยกัน แล้วนำไปหมักเป็นเวลา 1 ชั่วโมง วางบนตะแกรงย่างในเตาอบและอบ เมื่อได้ยินสัญญาณเตือน ให้พลิกอาหารแล้วกดปุ่ม เริ่มทำงาน • น้ำราดรสเผ็ด ผสมน้ำปลา น้ำตาลปี๊บเข้าด้วยกัน วางในเตาอบ แล้วเริ่มอบ 900 วัตต์เป็นเวลา 1 นาที เติมน้ำมะขาม ข้าวคั่ว ต้นหอม และผักชี ถ้าคุณชอบทาน รับประทานกับคอหมูย่าง	

รหัส/อาหาร	ปริมาณอาหาร	ส่วนประกอบ
4 **หมูแดง**	3-4 คน	เนื้อหมู - 500 ก., รากผักชีสับ - 5 ราก, กระเทียม - 10 กลีบ, พริกไทย - ½ ช้อนชา, เต้าหู้ยี้ - 1 ช้อนโต๊ะ, น้ำเต้าหู้ยี้ - 1 ช้อนโต๊ะ, ซอสถั่วเหลือง - 1 ช้อนโต๊ะ, น้ำผึ้ง - 2 ช้อนโต๊ะ, หมูตุ๋นในผงเกรวี่ - 2 ช้อนชา, เกลือ - ½ ช้อนชา
	คำแนะนำ ตำรากผักชี กระเทียม พริกไทยเข้าด้วยกัน และผสมกับหมู แล้วเพิ่มส่วนผสมอื่นๆ คลุกเคล้าและหมัก 1 ชั่วโมง วางบนตะแกรงย่างในเตาอบและอบ เมื่อได้ยินสัญญาณเตือน ให้พลิกอาหารแล้วกดปุ่ม เริ่มทำงาน หลังจากอบอาหารเสร็จแล้ว ให้หั่นและรับประทานพร้อมกับข้าวเหนียว	
5 **ข้าวหน้าหมูย่างซอสงา**	2 คน	เนื้อหมู - 250 ก., น้ำตาลทรายแดง - 2 ช้อนโต๊ะ, โชยุ - 3 ช้อนโต๊ะ, มิริน - 1½ ช้อนโต๊ะ, กระเทียมซอย - ¼ ถ้วย, ขิงสับ - ¼ ถ้วย, งาขาวคั่ว - 2 ช้อนโต๊ะ, ต้นหอมสับเพื่อโรยหน้า - 2 ช้อนโต๊ะ
	คำแนะนำ หมักหมูที่แล่ไว้กับส่วนผสมอื่นๆ ประมาณ 15 นาที วางหมูหมักบนตะแกรงย่างในเตาอบและอบ เมื่อได้ยินสัญญาณเตือน ให้พลิกอาหารแล้วกดปุ่ม เริ่มทำงาน หลังจากอบเสร็จให้รับประทานพร้อมกับข้าว ราดด้วยซอสหมักและต้นหอม • ซอสหมัก เทซอสหมักที่เหลืออยู่ แล้วเริ่มอบ 900 วัตต์เป็นเวลา 2 นาที	

MG28H5125NK_ST_DE68-04246J-05_TH.indd 20 2019-09-11 10:19:59

รหัส/อาหาร	ปริมาณอาหาร	ส่วนประกอบ
6 **เมี่ยงหมูย่างตะไคร้พริกสด**	2-4 คน	หมูสับ - 200 ก., ตะไคร้สับ - 2 ช้อนโต๊ะ, หัวหอมแดงสับ - 3 ช้อนโต๊ะ, ผักชีสับ - ¼ ถ้วย, พริกไทย - 1 ช้อนโต๊ะ, ซอสหอยนางรม - 1½ ช้อนโต๊ะ, น้ำตาล - ½ ช้อนโต๊ะ, ซอสถั่วเหลือง - 1½ ช้อนโต๊ะ, รากผักชี - 4 ราก, กระเทียม - 5 กลีบ, พริกไทย - ½ ช้อนชา, เส้นก๋วยเตี๋ยวลวก - 1 ถ้วย, ผักกาดหอม, หัวหอมแดง, ถั่ว, มะนาว หั่นเป็นลูกเต๋าขนาดเล็กสำหรับเป็นเครื่องเคียง ซอส น้ำส้มสายชู - ½ ถ้วย, น้ำตาล - ⅓ ถ้วย, เกลือ - ½ ช้อนชา, พริกแดงสับ - 1 ช้อนโต๊ะ
	คำแนะนำ ตำรากผักชี กระเทียม พริกไทยเข้าด้วยกัน และผสมกับหมูสับ หัวหอมแดง ผักชีสับ และตะไคร้ เติมซอสหอยนางรม น้ำตาล ซอสถั่วเหลือง จากนั้นผสมให้เข้ากัน แล้วปั้นเป็นก้อน วางบนตะแกรงย่างในเตาอบและอบ เมื่อได้ยินสัญญาณเตือน ให้พลิกอาหารแล้วกดปุ่มเริ่มทำงาน หลังจากอบเสร็จ ให้รับประทานพร้อมกับผัก เส้นก๋วยเตี๋ยวลวก หมูย่าง หัวหอมแดง ถั่ว มะนาว และซอส • ซอส ผสมน้ำส้มสายชู เกลือ น้ำตาลเข้าด้วยกัน วางในเตาอบ แล้วเริ่มอบ 900 วัตต์เป็นเวลา 2 นาที เมื่ออบเสร็จแล้ว ให้เติมพริกแดงสับ	

รหัส/อาหาร	ปริมาณอาหาร	ส่วนประกอบ
7 **ยำเนื้อย่างมะเขือเปราะ**	2-3 คน	เนื้อวัว - 300 ก., มะเขือเปราะ - 2-3 ลูก, ใบมะกรูด - 8 ใบ, หัวหอมแดง - ½ ถ้วย, ใบสะระแหน่ - ½ ถ้วย, น้ำปลา - 1 ช้อนโต๊ะ, น้ำตาล - 1 ช้อนโต๊ะ, น้ำมะนาว - 2 ช้อนโต๊ะ, พริกป่น - ½ ช้อนโต๊ะ, เกลือ - ¼ ช้อนชา, พริกไทย - ¼ ช้อนชา, น้ำมันมะกอก - ½ ช้อนโต๊ะ
	คำแนะนำ หมักเนื้อวัวกับเกลือ พริกไทย และน้ำมันมะกอกเป็นเวลา 1 ชั่วโมง วางบนตะแกรงย่างในเตาอบและอบ เมื่อได้ยินสัญญาณเตือน ให้พลิกอาหารแล้วกดปุ่ม เริ่มทำงาน หลังจากอบเสร็จ ให้แล่เนื้อย่างและผสมกับใบมะกรูด หัวหอมแดง มะเขือเปราะเข้ากับซอส ก่อนรับประทาน ให้โรยด้วยใบสะระแหน่และใบมะกรูด • ซอส ผสมน้ำตาล น้ำปลา น้ำมะนาว และพริกป่น ชิมรส	
8 **เนื้อย่างลูกผักชี**	2-4 คน	เนื้อวัว - 400 ก., เมล็ดพริกไทย - 1 ช้อนโต๊ะ, ลูกผักชี -1½ ช้อนโต๊ะ, กระเทียม - 1 กลีบ, เกลือ - 1 ช้อนชา, น้ำปลา - 2 ช้อนโต๊ะ, ซอสถั่วเหลือง - 2 ช้อนโต๊ะ, ซอสหอยนางรม - 2 ช้อนโต๊ะ, น้ำตาล - 2 ช้อนโต๊ะ, เหล้าจีน - 2 ช้อนโต๊ะ
	คำแนะนำ ตำพริกไทย ลูกผักชี กระเทียมเข้าด้วยกัน และผสมส่วนผสมอื่นๆ แล้วหมักกับเนื้อที่แล่ไว้เป็นเวลา 3-4 ชั่วโมง หลังจากหมักเสร็จ ให้ตากไว้อย่างน้อย 3-4 ชั่วโมง วางบนตะแกรงย่างในเตาอบและอบ เมื่อได้ยินสัญญาณเตือน ให้พลิกอาหารแล้วกดปุ่ม เริ่มทำงาน หลังจากอบอาหารเสร็จแล้ว ให้รับประทานพร้อมกับข้าวเหนียวและผักที่ชื่นชอบ	

MG28H5125NK_ST_DE68-04246J-05_TH.indd 21 2019-09-11 10:20:00

รหัส/อาหาร	ปริมาณอาหาร	ส่วนประกอบ
9 **สเต็กเนื้อเนยสมุนไพร**	2 คน	เนื้อวัว - 400 ก., ไวน์แดง - ¼ ถ้วย, พริกไทยดำ - 1 ช้อนชา, พริกไทย - 1 ช้อนชา, เกลือ - ½ ช้อนชา, น้ำมันมะกอก - 1 ช้อนโต๊ะ, เห็ดออรินจิหั่น - 1 ถ้วย, พริกหวาน 3 สี - 1 ถ้วย หั่นตามยาว เนยสมุนไพร เนยจืด - 3 ช้อนโต๊ะ, โรสแมรีสด - 1 ช้อนโต๊ะ, กระเทียมสับ - ½ ช้อนโต๊ะ, เกลือ - ¼ ช้อนชา
	คำแนะนำ ทุบหรือจิ้มเนื้อด้วยส้อมเพื่อให้นุ่ม ตำพริกไทยตำและผสมเกลือ พริกไทย ไวน์แดง น้ำมันมะกอก หมักเนื้อกับส่วนผสมเป็นเวลา 1 ชั่วโมง วางบนตะแกรงย่างในเตาอบพร้อมกับผักที่หั่นไว้ และเริ่มอบ เมื่อได้ยินสัญญาณเตือน ให้พลิกอาหารแล้วกดปุ่ม เริ่มทำงาน หลังจากอบเสร็จ ให้ใส่เนยสมุนไพรไว้บนเนื้อที่อบแล้ว และอบที่ความร้อน 900 วัตต์จนกว่าเนยจะละลาย รับประทานกับผักอบ • เนยสมุนไพร ผสมส่วนผสมเข้าด้วยกัน แล้วนำเข้าตู้เย็น	
10 **ไก่ย่างขมิ้น**	1-2 คน	น่องไก่ - 2 ชิ้น, ขมิ้น - 2 ช้อนโต๊ะ, กระเทียม - 10 กลีบ รากผักชี - 5 ราก, พริกไทย - ½ ช้อนชา, พริกไทยตำ - ½ ช้อนชา, เกลือ - ½ ช้อนชา, น้ำตาล - 1 ช้อนชา, ซีอิ๊วดำ - ½ ช้อนชา, น้ำมัน - 2 ช้อนโต๊ะ
	คำแนะนำ ตำรากผักชี กระเทียม พริกไทย ขมิ้น และผสมส่วนผสมอื่นๆ หมักไก่กับส่วนผสมเป็นเวลา 2-3 ชั่วโมง วางด้านหลังบนตะแกรงย่างในเตาอบก่อน และเริ่มอบ เมื่อได้ยินสัญญาณเตือน ให้พลิกอาหารแล้วกดปุ่ม เริ่มทำงาน หลังจากอบอาหารเสร็จแล้ว ให้รับประทานพร้อมกับข้าวเหนียว ผัก	

รหัส/อาหาร	ปริมาณอาหาร	ส่วนประกอบ
11 **ไก่ย่างใบเตย**	2 คน	น่องไก่ - 2 ชิ้น, ซอสหอยนางรม - 1½ ช้อนโต๊ะ, ซีอิ๊วขาว - 1½ ช้อนโต๊ะ, น้ำตาล - 1½ ช้อนโต๊ะ, พริกไทย - 1 ช้อนชา, น้ำมันงา - ½ ช้อนโต๊ะ, รากผักชี - 1 ช้อนโต๊ะ, กระเทียมสับ - 1 ช้อนโต๊ะ, ใบเตย - 8-10 ใบ, น้ำมัน - 2 ช้อนโต๊ะ
	คำแนะนำ แล่น่องไก่และหมักกับส่วนผสมต่างๆ เป็นเวลา 1 ชั่วโมง ห่อด้วยใบเตยแล้ววางบนตะแกรงย่างและอบ เมื่อได้ยินสัญญาณเตือน ให้พลิกอาหารแล้วกดปุ่ม เริ่มทำงาน เมื่ออบเสร็จแล้ว ให้รับประทานพร้อมกับซอสพริก	
12 **กุ้งย่างพริกไทยดำ**	1-2 คน	กุ้งลายเสือ - 10 ตัว, พริกไทยดำ - 1 ช้อนโต๊ะ, พริกหวานหั่นลูกเต๋าสามสี - ½ ถ้วย, รากผักชี - 1-2 ราก, กระเทียมไทย - 5 กลีบ, พริกป่น - 1 ช้อนชา, ผงหัวหอมใหญ่ - 1 ช้อนชา, น้ำตาลทรายแดง - ½ ช้อนโต๊ะ, เกลือ - ½ ช้อนชา, น้ำมันมะกอก - 2 ช้อนโต๊ะ, ไวน์ขาว - 2 ช้อนโต๊ะ
	คำแนะนำ ตำรากผักชี กระเทียม พริกไทย ผงหัวหอมใหญ่ หั่นกุ้งทั้งเปลือกและหมักกับส่วนผสมทั้งหมดเป็นเวลา 15 นาที วางกุ้งหมักบนตะแกรงย่างในเตาอบและอบ เมื่ออบเสร็จแล้ว ให้รับประทานพร้อมกับซอสหมัก • ซอส เทซอสหมักที่เหลืออยู่และพริกหวาน แล้วเริ่มอบ 900 วัตต์เป็นเวลา 1 นาที	

MG28H5125NK_ST_DE68-04246J-05_TH.indd 22 2019-09-11 10:20:00

รหัส/อาหาร	ปริมาณอาหาร	ส่วนประกอบ
13 **กุ้งย่างซอสสามรส**	2 คน	กุ้งแม่น้ำ - 4-6 ตัว, พริกป่น - 2 ช้อนชา, เกลือ - ¼ ช้อนชา, พริกไทย - ¼ ช้อนชา, น้ำมันมะกอก - 1 ช้อนโต๊ะ, น้ำปลา - 1 ช้อนโต๊ะ, น้ำตาลปี๊บ - 1½ ช้อนโต๊ะ, น้ำมะขาม - 3 ช้อนโต๊ะ, หัวหอมใหญ่ - ½ ถ้วย, มะเขือเทศสับ - ½ ถ้วย, น้ำมัน - 1 ช้อนโต๊ะ
	คำแนะนำ ล้างและหั่นกุ้งทั้งเปลือกและหมักกับเกลือ พริกไทย พริกป่น น้ำมันมะกอกเป็นเวลา 15 นาที วางกุ้งหมักบนตะแกรงย่างในเตาอบและอบ เมื่ออบเสร็จแล้ว ให้รับประทานกุ้งพร้อมกับซอสและน้ำมันที่ผสมไว้ • น้ำมัน ผสมหัวหอมแดงและน้ำมัน วางในเตาอบ แล้วเริ่มอบ 900 วัตต์เป็นเวลา 4 นาที • ซอส ผสมน้ำปลาและน้ำตาลปี๊บเข้าด้วยกัน เติมหัวหอมใหญ่และมะเขือเทศ วางในเตาอบ แล้วเริ่มอบ 900 วัตต์เป็นเวลา 4 นาที	
14 **ปลาอินทรีย์สดย่างน้ำปลาหอม**	2 คน	สเต็กปลาอินทรีย์สด - 2 ชิ้น, น้ำปลา - ½ ถ้วย, น้ำตาล - ½ ช้อนโต๊ะ, พริกไทย - ½ ช้อนชา, น้ำ - ½ ถ้วย, น้ำมัน - 1 ช้อนโต๊ะ
	คำแนะนำ หมักปลาอินทรีย์กับส่วนผสมที่ผสมไว้เป็นเวลา 1 ชั่วโมง หลังจากหมักเสร็จ ให้ตากไว้อย่างน้อย 3-4 ชั่วโมง หลังจากแห้งแล้ว ให้วางบนตะแกรงย่างในเตาอบและอบ เมื่อได้ยินสัญญาณเตือน ให้พลิกอาหารแล้วกดปุ่ม เริ่มทำงาน หลังจากอบเสร็จ สามารถนำมารับประทานได้	

รหัส/อาหาร	ปริมาณอาหาร	ส่วนประกอบ
15 **ปลากะพงย่างกะทิ**	2 คน	ปลากะพง - 2 ชิ้น, กะทิ - ½ ถ้วย, กะปิ - ½ ช้อนโต๊ะ, หัวหอมแดง - 5 หัว, พริกไทย - ½ ช้อนโต๊ะ, เกลือ - 1 ช้อนชา, น้ำตาลปี๊บ - 1½ ช้อนโต๊ะ, น้ำมะขาม - 2 ช้อนโต๊ะ, พริกทอด, ผักชีสำหรับตกแต่ง
	คำแนะนำ วางปลาบนตะแกรงย่างในเตาอบและอบ เมื่อได้ยินสัญญาณเตือน ให้พลิกอาหารแล้วกดปุ่ม เริ่มทำงาน หลังจากอบเสร็จ ให้ราดซอสกะทิลงไป ตกแต่งด้วยพริกทอดและผักชี รับประทานได้ • ซอสกะทิ ตำหัวหอมแดง พริกไทย เกลือ กะปิเข้าด้วยกัน และเติมกะทิ น้ำมะขาม น้ำตาลปี๊บ วางในเตาอบ แล้วเริ่มอบ 450 วัตต์เป็นเวลา 10 นาที	
16 **น้ำพริกปลาย่าง**	1-2 คน	ปลาย่าง - ½ ถ้วย, พริกแห้งเล็ก - 15 เม็ด, กระเทียมเล็ก - 15 กลีบ, หัวหอมแดง - 8 หัว, เกลือ - ¼ ช้อนชา, น้ำตาลปี๊บ - 1 ช้อนโต๊ะ, น้ำมะนาว - 1 ช้อนโต๊ะ
	คำแนะนำ วางปลาย่างบนตะแกรงย่างในเตาอบและอบ เมื่อมีเสียงเตือน ให้ใส่พริกแห้ง กระเทียม หัวหอมแดงที่ปลาย่าง และเริ่มอบ เมื่ออบเสร็จ ตัดปลาออกเป็นชิ้นๆ กระเทียม หัวหอมแดง และตำเข้าด้วยกัน เติมน้ำปลา น้ำตาลปี๊บ น้ำมะนาว รับประทานพร้อมกับผักหรือไข่ต้ม	

MG28H5125NK_ST_DE68-04246J-05_TH.indd 23 2019-09-11 10:20:00

รหัส/อาหาร	ปริมาณอาหาร	ส่วนประกอบ
17 **ยำปลาทูย่าง**	2 คน	เนื้อปลาทูย่าง - 200 ก., มะม่วงเปรี้ยวฝาน - ½ ถ้วย, ตะไคร้ฝาน - 2 ช้อนโต๊ะ, หัวหอมแดงซอย - ¼ ช้อนโต๊ะ, พาร์สลีย์สับ - 2 ช้อนโต๊ะ, ใบสะระแหน่ - 2 ช้อนโต๊ะ น้ำราดรสเผ็ด น้ำมะนาว - 2 ช้อนโต๊ะ, เกลือ - ½ ช้อนชา, น้ำตาล - 15 ช้อนโต๊ะ, พริกขี้หนูสับ - 1 ช้อนโต๊ะ
	คำแนะนำ วางปลาทูย่างบนตะแกรงย่างในเตาอบและอบ เมื่อได้ยินสัญญาณเตือน ให้พลิกอาหาร แล้วกดปุ่ม เริ่มทำงาน เมื่ออบเสร็จ ให้คลุกเคล้าปลาทูที่อบไว้แล้ว ใส่เนื้อปลาทูในชาม ผสมตะไคร้ หัวหอมแดง พาร์สลีย์ และใบสะระแหน่ ใส่น้ำราดรสเผ็ดลงในชามและผสมให้เข้ากัน รับประทานได้ • น้ำราดรสเผ็ด ผสมส่วนผสมทั้งหมดจนกว่าน้ำตาลจะละลายหมด เติมพริกซอย	
18 **แซลมอนย่างตะไคร้ซอสมะนาว**	2 คน	แซลมอน - 500 ก., ตะไคร้ทุบ - 2 ช้อนโต๊ะ, ผักชีสับ - 2 ช้อนโต๊ะ, เกลือ - 1 ช้อนชา, พริกไทย - ½ ช้อนชา, น้ำมันมะกอก - 1 ช้อนโต๊ะ, มะนาวฝาน - 2 ชิ้น ซอสมะนาว ไข่แดง - 2, นมข้นหวาน - 2 ช้อนโต๊ะ, น้ำมะนาว - 2 ช้อนชา, เกลือ - ½ ช้อนชา, มายองเนส - 2 ช้อนโต๊ะ
	คำแนะนำ หมักเนื้อแซลมอนกับเกลือ พริกไทย ผักชีสับ และน้ำมันมะกอกเป็นเวลา 10 นาที วางตะไคร้ มะนาว แซลมอน และมะนาวอีกครั้งบนตะแกรงย่างในเตาอบและอบ ให้หนังปลาแซลมอนอยู่ด้านล่างก่อน เมื่อได้ยินสัญญาณเตือน ให้พลิกอาหารแล้วกดปุ่ม เริ่มทำงาน เมื่ออบเสร็จแล้ว ให้รับประทานพร้อมกับซอสมะนาว • ซอสมะนาว ผสมไข่แดงและเกลือ ใส่มายองเนส นมข้นหวาน น้ำมะนาว คลุกเคล้าเข้าด้วยกัน วางในเตาอบ แล้วเริ่มอบ 900 วัตต์เป็นเวลา 30 วินาที	

รหัส/อาหาร	ปริมาณอาหาร	ส่วนประกอบ
19 **แซลมอนย่างน้ำจิ้มแช่บ**	2 คน	สเต็กแซลมอน - 2 ชิ้น, โรสแมรี - 1 ช้อนโต๊ะ, เกลือ - ½ ช้อนชา, พริกไทย - ½ ช้อนชา, น้ำมันมะกอก - 1 ช้อนโต๊ะ, บร็อกโคลี่ - 1 ถ้วย น้ำราดรสเผ็ด รากผักชี - 3 ราก, พริกขี้หนู - 10 เม็ด, กระเทียมสับ - 2 ช้อนโต๊ะ, น้ำตาล - ½ ช้อนชา, เกลือ - ¼ ช้อนชา, น้ำกระเทียมดอง - 1 ช้อนโต๊ะ, โยเกิร์ต - 2 ช้อนโต๊ะ
	คำแนะนำ หมักแซลมอนกับเกลือ พริกไทย โรสแมรี และน้ำมันมะกอกเป็นเวลา 30 นาที วางแซลมอนหมักบนตะแกรงย่างในเตาอบและอบ เมื่อได้ยินสัญญาณเตือน ให้พลิกอาหาร แล้วกดปุ่ม เริ่มทำงาน หลังจากอบอาหารเสร็จแล้ว ให้รับประทานแซลมอนพร้อมกับผัก • ผัก ล้างและหุ้มบร็อกโคลี่ในชาม วางในเตาอบ แล้วเริ่มอบ 900 วัตต์เป็นเวลา 3 นาที • น้ำราดรสเผ็ด ตำพริกขี้หนูและกระเทียม ผสมกับเกลือ น้ำตาล และน้ำกระเทียมดอง คลุกเคล้าเข้าด้วยกันและเติมโยเกิร์ตเป็นส่วนสุดท้าย	
20 **ห่อหมกทะเลย่าง**	2 คน	ปลาหมึก กุ้ง หอย - 200 ก., พริกแกง - 2 ช้อนโต๊ะ, กะทิ - ½ ถ้วย, ไข่ - 2, ใบสะระแหน่ - ½ ถ้วย, ใบมะกรูดหั่นฝอย - 3 ใบ, พริกสับ - 1, น้ำปลา - ½ ช้อนโต๊ะ, น้ำตาลปี๊บ - ½ ช้อนโต๊ะ, กระทิ - ¼ ถ้วย
	คำแนะนำ ผสมส่วนผสมทั้งหมดเข้าด้วยกัน แล้วใส่ไว้ในชาม วางบนตะแกรงย่างในเตาอบและอบ เมื่ออบเสร็จ ให้รับประทานพร้อมกับโรยใบมะกรูดและพริก	
21 **ข้าวพะแนงหมู**	1 คน	ข้าวพะแนงหมูแช่แข็ง - 1
	คำแนะนำ แกะพลาสติกหุ้มออกและเจาะฟิล์มสองถึงสามครั้ง ใส่ในเตาอบและอบ รับประทานได้	

MG28H5125NK_ST_DE68-04246J-05_TH.indd 24 2019-09-11 10:20:00

รหัส/อาหาร	ปริมาณอาหาร	ส่วนประกอบ
22 **ข้าวกะเพรา**	1 คน	ข้าวผัดกะเพราแช่แข็ง - 1
	คำแนะนำ แกะพลาสติกหุ้มออกและเจาะฟิล์มสองถึงสามครั้ง ใส่ในเตาอบและอบ รับประทานได้	
23 **ข้าวแกงส้มชะอมกุ้ง**	1 คน	ข้าวแกงส้มชะอมกุ้งแช่แข็ง - 1
	คำแนะนำ แกะพลาสติกหุ้มออกและเจาะฟิล์มสองถึงสามครั้ง ใส่ในเตาอบและอบ รับประทานได้	
24 **ข้าวกุ้งผัดพริกขี้หนู**	1 คน	ข้าวกุ้งผัดพริกขี้หนูแช่แข็ง - 1
	คำแนะนำ แกะพลาสติกหุ้มออกและเจาะฟิล์มสองถึงสามครั้ง ใส่ในเตาอบและอบ รับประทานได้	
25 **พิซซ่า Hawaiian**	2-4 คน	พิซซ่า Hawaiian แช่แข็ง - 1
	คำแนะนำ นำพลาสติกหุ้มออกและนำพิซซ่าออกมาจากกล่อง ใส่ในเตาอบและอบ รับประทานได้	
26 **สปาเก็ตตี้ไส้กรอกอิตาเลี่ยน**	1 คน	สปาเก็ตตี้ไส้กรอกอิตาเลี่ยน - 1
	คำแนะนำ แกะพลาสติกหุ้มออกและเจาะฟิล์มสองถึงสามครั้ง ใส่ในเตาอบและอบ รับประทานได้	

รหัส/อาหาร	ปริมาณอาหาร	ส่วนประกอบ
27 **น้ำเต้าหู้ข้าวกล้อง**	2-4 คน	ถั่วเหลืองแช่น้ำ - 6 ถ้วย, ข้าวกล้องแช่น้ำ - 2 ถ้วย, น้ำตาล - ½ ถ้วย, เกลือ - ½ ช้อนชา, น้ำ - 5 ถ้วย, ใบเตย - 1, ถั่วแดงหรือเยลลี่สำหรับรับประทาน
	คำแนะนำ แช่ถั่วเหลืองและข้าวกล้องในน้ำร้อนประมาณ 3-5 ชั่วโมงและปั่นกับน้ำ 5 ถ้วย กรองเอาเศษผงออก เทลงในชามพร้อมกับใบเตย น้ำตาล เกลือ ใส่ในเตาอบและอบ เมื่ออบเสร็จแล้ว ให้รับประทานขณะร้อนพร้อมกับถั่วแดงหรือธัญพืชอื่นๆ	
28 **Spicy hot choco**	4 คน	นม - 3 ถ้วย, น้ำตาล - ½ ถ้วย, ผงโกโก้ - 2-3, ผงอบเชย - ½ ช้อนโต๊ะ
	คำแนะนำ ผสมนม 1 ถ้วยกับส่วนผสมอื่น ใส่ในเตาอบและอบ เมื่อมีเสียงเตือน ให้เทนมที่เหลืออยู่แล้วกด เริ่มทำงาน รับประทานได้	
29 **น้ำพันช์ตะไคร้**	3-4 คน	ตะไคร้ทั้งต้น - 10, น้ำสับปะรด - ⅔ ถ้วย, ขิงฝาน - 4, น้ำผึ้ง - ¼ ถ้วย, น้ำ - 3 ถ้วย
	คำแนะนำ หั่นและคลุกเคล้าตะไคร้ นำไปต้มพร้อมกับขิงในน้ำ ใส่ในเตาอบและอบ เมื่ออบเสร็จ ให้ผสมส่วนผสมทั้งหมดเข้าด้วยกัน รับประทานพร้อมน้ำแข็ง	
30 **ชามิ้นต์เลมอน**	3-4 คน	ใบมิ้นต์ - 1 ถ้วย, น้ำตาลทรายแดง - ½ ถ้วย, น้ำมะนาวพร้อมกับชิ้นมะนาว - 2 ช้อนโต๊ะ, น้ำ - 4 ถ้วย
	คำแนะนำ ใส่ใบมิ้นต์ในน้ำ และนำเข้าเตาอบและอบ เมื่ออบเสร็จ ให้ผสมน้ำตาลทรายแดงและน้ำมะนาว รับประทานขณะร้อน	

MG28H5125NK_ST_DE68-04246J-05_TH.indd 25 2019-09-11 10:20:01

การใช้คุณสมบัติละลายน้ำแข็ง

คุณสมบัติ **ละลายน้ำแข็ง** ช่วยให้คุณละลายเนื้อวัว ไก่ ปลา ขนมปังและเค้กที่แช่แข็งไว้ได้ เวลาและระดับพลังงานจะถูกกำหนดโดยอัตโนมัติ คุณเพียงแต่เลือกโปรแกรมและน้ำหนักเท่านั้น

โปรดใช้ภาชนะที่ระบุว่าใช้กับไมโครเวฟได้เท่านั้น

เปิดประตู วางอาหารแช่แข็งบนภาชนะเซรามิกไว้บนส่วนกลางของจานหมุน ปิดประตู

ละลายน้ำแข็ง	**1.** กดปุ่ม **ละลายน้ำแข็ง**
	2. เลือกประเภทของอาหารที่อบ ด้วยการหมุน **ปุ่มเลือกหลายฟังก์ชัน** โปรดดูตารางในหน้าถัดไป เพื่อดูคำอธิบายการตั้งค่าต่างๆ ที่กำหนดไว้แล้วในขั้นตอนนี้ ให้กด **ปุ่มเลือกหลายฟังก์ชัน** เพื่อเลือกประเภทอาหาร
	3. เลือกปริมาณอาหารด้วยการหมุน **ปุ่มเลือกหลายฟังก์ชัน**
/+30s เริ่มทำงาน/+30วินาที	**4.** กดปุ่ม **เริ่มทำงาน/+30วินาที** **ผลลัพธ์ :** • การละลายน้ำแข็งจะเริ่มต้น • ในการละลายน้ำแข็ง เตาอบจะส่งเสียงเตือนให้ทราบว่าคุณต้องกลับอาหาร
/+30s เริ่มทำงาน/+30วินาที	**5.** กดปุ่ม **เริ่มทำงาน/+30วินาที** อีกครั้งเพื่อหยุดการละลายน้ำแข็ง **ผลลัพธ์ :** เมื่อสิ้นสุดการอบอาหาร เตาจะส่งเสียงเตือน พร้อมกับกะพริบคำว่า "End" 4 ครั้ง หลังจากนั้นเตาอบจะส่งเสียงเตือนนาทีละครั้ง

ตารางต่อไปนี้จะแสดงโปรแกรม **ละลายน้ำแข็ง** ต่างๆ รวมทั้งปริมาณและคำแนะนำต่างๆ ที่เหมาะสม โปรดนำบรรจุภัณฑ์ออกจากอาหารก่อนที่จะละลายน้ำแข็ง วางเนื้อ ไก่ ปลา และขนมปัง/เค้กบนจานแก้วแบนหรือจานกระเบื้อง

รหัส/อาหาร	ปริมาณอาหาร	คำแนะนำ
1 **เนื้อวัว**	200-1500 ก.	หุ้มส่วนขอบด้วยฟอยล์อะลูมิเนียม กลับเนื้อเมื่อได้ยินเสียงจากเตาอบ โปรแกรมนี้เหมาะสำหรับเนื้อ แกะ หมู สเต็ก เนื้อเป็นชิ้น เนื้อสับ พักอาหารเป็นเวลา 20-60 นาที
2 **เนื้อไก่**	200-1500 ก.	หุ้มขาและปลายปีกด้วยฟอยล์อะลูมิเนียม กลับเมื่อได้ยินเสียงจากเตาอบ โปรแกรมนี้เหมาะสำหรับไก่ทั้งตัว หรือไก่ที่หั่นเป็นชิ้น พักอาหารเป็นเวลา 20-60 นาที
3 **เนื้อปลา**	200-1500 ก.	หุ้มส่วนหางของปลาที่ยังไม่หั่นด้วยฟอยล์อะลูมิเนียม กลับเมื่อได้ยินเสียงจากเตาอบ โปรแกรมนี้เหมาะสำหรับปลาทั้งตัว หรือปลาชิ้น พักอาหารเป็นเวลา 20-50 นาที
4 **ขนมปัง**	125-1000 ก.	วางขนมปังบนกระดาษสำหรับเตาอบ และพลิกกลับด้านเมื่อได้ยินเสียงสัญญาณจากเตาอบ วางเค้กบนจานกระเบื้อง และพลิกกลับด้านเมื่อได้ยินเสียงสัญญาณจากเตาอบ (เตาอบจะทำงานต่อไป และจะหยุดเมื่อคุณเปิดประตู) โปรแกรมนี้เหมาะสำหรับขนมปังทุกประเภท ไม่ว่าจะเป็นแบบตัดหรือทั้งก้อน เช่นเดียวกับขนมปังก้อนและแท่งแบบฝรั่งเศส วางก้อนขนมปังเป็นวงกลม โปรแกรมนี้เหมาะกับยีสต์เค้ก บิสกิต ชีสเค้ก และพัฟทุกประเภท แต่ไม่เหมาะสำหรับขนมพาสทรีแบบชอตหรือคริสต์ เค้กผลไม้หรือครีม รวมทั้งเค้กราดช็อคโกแล็ต พักอาหารเป็นเวลา 5-20 นาที

MG28H5125NK_ST_DE68-04246J-05_TH.indd 26 2019-09-11 10:20:01

การย่าง

การย่างช่วยให้คุณอุ่นและทำให้อาหารเกรียมได้อย่างรวดเร็ว โดยไม่ต้องใช้ไมโครเวฟ

- โปรดใช้ถุงมือกันความร้อนทุกครั้งที่สัมผัสภาชนะในเตา เนื่องจากภาชนะเหล่านี้จะร้อนจัด
- คุณสามารถใช้ตะแกรงสูงเพื่อให้อาหารสุกยิ่งขึ้น และเหลืองน่ารับประทาน



1. เปิดประตูเตาอบและวางอาหารบนตะแกรง จากนั้นให้ปิดประตู



2. กดปุ่ม **ย่าง**

ผลลัพธ์ : หน้าจอจะแสดงผลดังนี้:


(โหมดการย่าง)

- คุณไม่สามารถกำหนดอุณหภูมิสำหรับการย่าง



3. ตั้งค่าเวลาในการย่างโดยหมุน **ปุ่มเลือกหลายฟังก์ชัน**

- เวลาย่างสูงสุดคือ 60 นาที



4. กดปุ่ม **เริ่มทำงาน/+30วินาที**

ผลลัพธ์ : เริ่มต้นการย่าง

- เมื่อสิ้นสุดการอบอาหาร เตาจะส่งเสียงเตือน พร้อมกับกะพริบคำว่า "End" 4 ครั้ง หลังจากนั้นเตาอบจะส่งเสียงเตือนนาทีละครั้ง

การใช้ไมโครเวฟร่วมกับการย่าง

คุณสามารถใช้ไมโครเวฟร่วมกับการย่าง เพื่อให้อาหารสุกเร็ว และเหลืองเกรียมในขณะเดียวกัน

ทุกครั้ง โปรดใช้ภาชนะและเครื่องครัวที่ใช้กับไมโครเวฟและเตาอบ จานแก้วหรือกระเบื้องเป็นภาชนะที่เหมาะสม เนื่องจากยอมให้ไมโครเวฟเข้าถึงอาหารได้ทั่วถึงกัน

ใช้ถุงมือกันความร้อนทุกครั้งที่สัมผัสภาชนะในเตา เนื่องจากภาชนะเหล่านี้จะร้อนจัด
คุณสามารถใช้ตะแกรงสูงเพื่อให้อาหารสุกยิ่งขึ้น และเหลืองน่ารับประทาน

เปิดประตู วางอาหารบนตะแกรงที่เหมาะกับอาหารที่จะอบ วางตะแกรงบนจานหมุน ปิดประตู



1. กดปุ่ม **อุ่นและย่าง**

ผลลัพธ์ : หน้าจอจะแสดงผลดังนี้:

(โหมดการใช้ไมโครเวฟผสมระบบย่าง)

600 วัตต์ (กำลังไฟฟ้า)



2. เลือกระดับพลังงานที่เหมาะสม โดยหมุน **ปุ่มเลือกหลายฟังก์ชัน** จนกว่าจอจะแสดงกำลังไฟที่ต้องการ (600, 450, 300 วัตต์) ในขั้นตอนนี้ ให้กด **ปุ่มเลือกหลายฟังก์ชัน** เพื่อตั้งค่าระดับพลังงาน

- คุณไม่สามารถกำหนดอุณหภูมิสำหรับการย่าง



3. ตั้งค่าเวลาอบอาหารโดยหมุน **ปุ่มเลือกหลายฟังก์ชัน**

- เวลาอบสูงสุดคือ 60 นาที



4. กดปุ่ม **เริ่มทำงาน/+30วินาที**



ผลลัพธ์ :

- การอบแบบผสมจะเริ่มต้น
- เมื่อสิ้นสุดการอบอาหาร เตาจะส่งเสียงเตือน พร้อมกับกะพริบคำว่า "End" 4 ครั้ง หลังจากนั้นเตาอบจะส่งเสียงเตือนนาทีละครั้ง

MG28H5125NK_ST_DE68-04246J-05_TH.indd 27 2019-09-11 10:20:02

การใช้จานอบเกรียม

คุณสามารถใช้จานอบเกรียมนี้เพื่อทำให้อาหารเหลืองเกรียม ไม่เพียงเฉพาะด้านบน แต่ยังรวมถึงด้านล่างของอาหารที่กรอบเหลืองด้วยอุณหภูมิของจานอบเกรียม คุณสามารถอบอาหารหลากหลายชนิดด้วยจานอบเกรียมนี้ ดังที่จะแสดงในตาราง (ดูหน้าถัดไป) จานอบเกรียมนี้ยังใช้ได้กับเบคอน ไข่ ไส้กรอก อีกด้วย

	**1.** วางจานอบเกรียมไว้บนจานหมุน และอุ่นด้วยการผสมโหมดไมโครเวฟ-ย่างที่ความร้อนสูงสุด [600 วัตต์ + ย่าง] ตามเวลาและคำแนะนำที่แสดงในตาราง
	**2.** ทาน้ำมันบนจาน ถ้าคุณต้องการทำอาหารเช่นเบคอนและไข่ดาว เพื่อให้อาหารสุกเกรียมน่ารับประทาน
	**3.** วางอาหารบนจานอบเกรียม
	**4.** วางจานอบเกรียมไว้บนตะแกรงโลหะ (หรือจานหมุน) ในไมโครเวฟ
	**5.** เลือกเวลาในการอบและพลังงานที่เหมาะสม (โปรดดูข้อมูลในตารางด้านข้าง)

- โปรดใช้ถุงมือกันความร้อนเสมอเมื่อจับจานสำหรับอบเกรียม เนื่องจากจานนี้จะร้อนจัด
- โปรดทราบว่าจานอบเกรียมนี้มีชั้นของเทฟล่อน ซึ่งจะไม่ทนต่อการขูดขีด โปรดอย่าใช้ของมีคมเช่นมีดเพื่อตัดอาหารบนจานอบเกรียม
- โปรดอย่าวางภาชนะที่ไม่ทนความร้อนบนจานอบเกรียม
- ห้ามวางจานอบเกรียมโดยไม่ใช้จานหมุนเด็ดขาด
- ทำความสะอาดจานอบเกรียมด้วยน้ำอุ่นและน้ำยาล้างจาน จากนั้นล้างออกด้วยน้ำสะอาด
- ห้ามใช้แปรงขัดหรือฟองน้ำที่แข็งหยาบเกินไป เนื่องจากจะทำให้ผิวหน้าของจานเสียหาย
- โปรดทราบว่าจานอบเกรียมนั้นไม่เหมาะที่จะใช้กับเครื่องล้างจาน

ขอแนะนำให้อุ่นจานอบเกรียมบนจานหมุนโดยตรง
อุ่นจานอบเกรียมด้วยฟังก์ชัน 600 วัตต์ + ย่าง เป็นเวลา 3-4 นาที
ใช้เวลาและคำแนะนำที่ปรากฏอยู่ในตาราง

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลาอบ (นาที)
เบคอน	4 ชิ้น (80 ก.)	600 วัตต์ + ย่าง	3-3½
	คำแนะนำ อุ่นจานอบเกรียมเป็นเวลา 3 นาที วางแผ่นเบคอนเรียงต่อกันบนจานอบเกรียม วางจานอบเกรียมบนตะแกรง พักอาหาร 3 นาที		
มะเขือเทศย่าง	200 ก. (2 ชิ้น)	450 วัตต์ + ย่าง	2½-3
	คำแนะนำ อุ่นจานอบเกรียมเป็นเวลา 3 นาที หั่นครึ่งมะเขือเทศ ใส่ซีสที่ด้านบน วางเป็นวงกลมบนจานอบเกรียม วางจานอบเกรียมบนตะแกรง พักอาหาร 3 นาที		
เบอร์เกอร์ (แช่แข็ง)	2 ชิ้น (125 ก.)	600 วัตต์ + ย่าง	6-6½
	คำแนะนำ อุ่นจานอบเกรียมเป็นเวลา 3 นาที วางเบอร์เกอร์แช่แข็งบนจานอบเกรียม วางจานอบเกรียมบนตะแกรง กลับด้านหลังจากผ่านไป 3-4 นาที แล้วพักอาหารไว้เป็นเวลา 3 นาที		
บาแกตต์ (แช่แข็ง)	200-250 ก. (2 ชิ้น)	450 วัตต์ + ย่าง	6-7
	คำแนะนำ อุ่นจานอบเกรียมเป็นเวลา 3 นาที วางบาแกตต์ที่โรยหน้า (เช่น มะเขือเทศ ชีส แฮม เป็นต้น) เคียงข้างกันบนจาน วางจานอบเกรียมบนตะแกรง พักอาหาร 3 นาที		
พิซซ่า (แช่แข็ง)	300-350 ก.	450 วัตต์+ย่าง	11-12
	คำแนะนำ อุ่นจานอบเกรียมเป็นเวลา 3 นาที วางพิซซ่าแช่แข็งบนจานอบเกรียม นำจานอบเกรียมไปวางบนจานหมุน พักอาหารเป็นเวลา 1-2 นาที		

MG28H5125NK_ST_DE68-04246J-05_TH.indd 28 2019-09-11 10:20:03


อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลาอบ (นาที)
พิซซ่าชิ้นเล็ก (แช่แข็ง)	9 X 30 ก. (270 ก.)	300 วัตต์ + ย่าง	9-10
	คำแนะนำ อุ่นจานอบเกรียมเป็นเวลา 3 นาที วางอาหารให้เสมอกันบนจานอบเกรียม วางจานบนจานหมุน พักอาหาร 3 นาที		
พิซซ่า (เย็น)	300-350 ก.	450 วัตต์ + ย่าง	5½-6½
	คำแนะนำ อุ่นจานอบเกรียมเป็นเวลา 5 นาที วางพิซซ่าเย็นบนจาน นำจานอบเกรียมไปวางบนจานหมุน พักอาหาร 3 นาที		
ฟิชฟิงเกอร์ (แช่แข็ง)	150 ก. (5 ชิ้น) 300 ก. (10 ชิ้น)	600 วัตต์ + ย่าง	6-7 8-9
	คำแนะนำ อุ่นจานอบเกรียมเป็นเวลา 4 นาที ทาจานด้วยน้ำมัน 1 ช้อนโต๊ะ วางชิ้นเนื้อปลาเป็นวงกลม พลิกกลับด้านหลังจาก 3 นาที (5 ชิ้น) หรือ 5 นาที (10 ชิ้น) พักอาหาร 3 นาที		
นักเก็ตไก่ (แช่แข็ง)	125 ก. 250 ก.	600 วัตต์ + ย่าง	4-5 6-7
	คำแนะนำ อุ่นจานอบเกรียมเป็นเวลา 4 นาที ทาจานด้วยน้ำมัน 1 ช้อนโต๊ะ วางนักเก็ตไก่บนจาน วางจานอบเกรียมบนตะแกรง พลิกกลับด้านหลังจากผ่านไป 2 นาที (125 ก.) หรือ 4 นาที (250 ก.) พักอาหาร 3 นาที		
มันฝรั่งอบ	250 ก. 500 ก.	600 วัตต์ + ย่าง	4-5 7-8
	คำแนะนำ อุ่นจานอบเกรียมเป็นเวลา 3 นาที หั่นครึ่งมันฝรั่ง วางบนจานอบเกรียมโดยให้ด้านที่หั่นอยู่ข้างล่าง วางเรียงเป็นวงกลม วางจานบนตะแกรง พักอาหาร 3 นาที		

การใช้ระบบทำความสะอาดด้วยไอน้ำ

ระบบทำความสะอาดด้วยไอน้ำจะพ่นไอน้ำไปทั่วพื้นผิวด้านในของช่องเตาอบ
หลังจากที่ใช้ฟังก์ชันนี้ คุณสามารถทำความสะอาดด้านในของช่องเตาอบได้อย่างง่ายดาย

ใช้ฟังก์ชันนี้เฉพาะหลังจากที่เตาอบเย็นสนิทเท่านั้น
(อุณหภูมิห้อง)


น้ำธรรมดาเท่านั้น ห้ามใช้น้ำกลั่น



1. เปิดประตู




2. เติมน้ำตามเส้นบอก (ระดับน้ำ) ภายนอกถ้วยน้ำ (เส้นนี้เท่ากับประมาณ 50 มล.)



3. ใส่ถ้วยน้ำในที่ใส่ถ้วยน้ำด้านบน ที่ผนังด้านขวาของภายในเตาอบ จากนั้นให้ปิดประตู



4. กดปุ่ม **ทำความสะอาดด้วยไอน้ำ**
อาจพบว่ามี **ละอองน้ำ** ระหว่างการทำงาน ซึ่งไม่ใช่การทำงานผิดปกติ
แต่ไอน้ำจะบดบังแสงภายใน



5. เปิดประตูและโปรดทำความสะอาดช่องเตาอบด้วยผ้าแห้งสำหรับเช็ดจาน นำจานหมุนออกให้เหลือเฉพาะตะแกรงด้านล่างและกระดาษอเนกประสงค์

คำเตือน ถ้วยใส่น้ำใช้ได้เฉพาะกับโหมด "**ทำความสะอาดด้วยไอน้ำ**" เท่านั้น
เมื่ออบอาหารที่ไม่ใช่ของเหลว ให้นำถ้วยใส่น้ำออก เพื่อไม่ให้เกิดความเสียหายและอาจทำให้ติดไฟได้

การเติมน้ำมากกว่า 50 มล. จะทำให้น้ำรั่วผ่านรูที่ด้านหลัง ตรวจสอบว่าน้ำไม่เกิน 50 มล.

MG28H5125NK_ST_DE68-04246J-05_TH.indd 29 2019-09-11 10:20:05

การใช้คุณสมบัติกำจัดกลิ่น

คุณสามารถใช้คุณสมบัตินี้หลังจากการอบอาหารที่มีกลิ่นแรง หรือเมื่อมีควันมากภายในเตา
ขั้นแรกให้ทำความสะอาดภายในเตา

	กดปุ่ม **กำจัดกลิ่น** หลังจากทำความสะอาดเสร็จ เมื่อคุณกดปุ่มกำจัดกลิ่น ระบบจะเริ่มการทำงานโดยอัตโนมัติ เมื่อดำเนินการเสร็จ เตาอบจะส่งเสียงเตือนสี่ครั้ง

เวลาในการกำจัดกลิ่นตั้งไว้ที่ 5 นาที คุณสามารถเพิ่มได้ครั้งละ 30 วินาที เมื่อกดปุ่ม **เริ่มทำงาน/+30วินาที**

เวลาในการกำจัดกลิ่นสูงสุดคือ 15 นาที

การใช้ฟังก์ชันล็อคป้องกันเด็ก

เตาไมโครเวฟของคุณมีโปรแกรมป้องกันเพื่อความปลอดภัยของเด็ก ซึ่งจะ “ล็อค” เตาอบไม่ให้เด็กหรือบุคคลที่ไม่คุ้นเคยสามารถใช้เตาอบได้

	**1.** กดปุ่ม **ล็อคป้องกันเด็ก** เป็นเวลา 3 วินาที **ผลลัพธ์ :** • เตาอบจะถูกล็อค (ไม่สามารถเลือกฟังก์ชันใดได้) • จอแสดงผลจะแสดงสัญลักษณ์ “L” 
	**2.** หากต้องการปลดล็อคเตาอบ ให้กดปุ่ม **ล็อคป้องกันเด็ก** เป็นเวลา 3 วินาที **ผลลัพธ์ :** คุณจะสามารถใช้เตาอบได้ตามปกติ

การใช้คุณสมบัติการเปิด/ปิดจานหมุน

ปุ่ม **เปิด/ปิด**จานหมุน ช่วยให้คุณสามารถใช้จานที่มีขนาดใหญ่เต็มเตา โดยหยุดการทำงานของจานหมุน (เฉพาะการอบอาหารด้วยตนเองเท่านั้น)

ผลการอบอาหารในกรณีนี้อาจไม่ดีเท่าที่ควร เนื่องจากทำได้ไม่ทั่วถึงดี ขอแนะนำให้คุณหมุนจานเองขณะที่อบอาหารไปได้ครึ่งหนึ่ง

ห้ามอบจานหมุนเปล่าๆ โดยที่ไม่มีอาหารในเตา
สาเหตุ: อาจทำให้เกิดไฟไหม้ หรือความเสียหายกับตัวเครื่อง

คำเตือน

	**1.** กดปุ่ม **เปิด/ปิดจานหมุน** **ผลลัพธ์ :** จานหมุนจะไม่ทำงาน
	**2.** ในการใช้งานจานหมุนเช่นเดิม ให้กดปุ่ม **เปิด/ปิดจานหมุน** อีกครั้ง **ผลลัพธ์ :** จานหมุนจะกลับมาทำงาน

ปุ่ม **เปิด/ปิดจานหมุน** จะสามารถใช้ได้ในขณะอบอาหารเท่านั้น

การปิดเสียงเตือน

คุณสามารถปิดเสียงเตือนของเตาอบได้ตามต้องการ

	**1.** กดปุ่ม **เริ่มทำงาน/+30วินาที** และ **หยุด/ประหยัดพลังงาน** พร้อมกัน **ผลลัพธ์ :** เตาอบจะไม่ส่งเสียงเตือนเมื่อจบการทำงาน
	**2.** ถ้าต้องการเปิดเสียงเตือนอีกครั้ง ให้กดปุ่ม **เริ่มทำงาน/+30วินาที** และ **หยุด/ประหยัดพลังงาน** พร้อมกันอีกครั้ง **ผลลัพธ์ :** เตาอบจะกลับมาทำงานตามปกติ

MG28H5125NK_ST_DE68-04246J-05_TH.indd 30 2019-09-11 10:20:06

คู่มือสำหรับอุปกรณ์การทำอาหาร

ในการอบอาหารด้วยเตาไมโครเวฟ คลื่นไมโครเวฟจะต้องสามารถแทรกเข้าสู่อาหาร โดยไม่มีการสะท้อนหรือดูดซับโดยภาชนะ

คุณจึงควรเลือกใช้อุปกรณ์อย่างรอบคอบ คุณควรเลือกภาชนะที่มีข้อความหรือเครื่องหมายว่าใช้กับไมโครเวฟได้ ตารางต่อไปนี้แสดงอุปกรณ์การทำอาหารประเภทต่างๆ และระบุว่าจะสามารถใช้กับเตาไมโครเวฟได้หรือไม่ และอย่างไร

อุปกรณ์	ใช้กับไมโครเวฟได้	หมายเหตุ
ฟอยล์อะลูมิเนียม	✓ ✗	สามารถใช้จำนวนเล็กน้อย เพื่อป้องกันส่วนที่ไม่ต้องการให้สุกเกินไป อาจมีประกายไฟ ถ้าฟอยล์อยู่ใกล้กับผนังของเตาอบมากเกินไป หรือใช้ฟอยล์มากเกินไป
จานอบเกรียม	✓	ห้ามอุ่นให้ร้อนเกิน 8 นาที
กระเบื้องและดินเผา	✓	กระเบื้องพอร์ซเลน ดินเผา ดินเผาเคลือบ และกระเบื้องเคลือบนั้นมักจะใช้ได้ดี ยกเว้นที่มีขอบโลหะ
จานโฟมหรือกระดาษแบบใช้แล้วทิ้ง	✓	อาหารแช่แข็งบางชนิดจะบรรจุในภาชนะประเภทนี้
บรรจุภัณฑ์ของอาหารจานด่วน		
• ถ้วยโฟม	✓	สามารถใช้อุ่นอาหาร ความร้อนสูงมากๆ จะทำให้โฟมละลาย
• ถุงกระดาษหรือหนังสือพิมพ์	✗	อาจติดไฟ
• กระดาษรีไซเคิลหรือขอบโลหะ	✗	อาจเกิดประกายไฟ
เครื่องแก้ว		
• อุปกรณ์บนโต๊ะอาหารที่สามารถใช้กับเตาอบ	✓	ใช้ได้ หากไม่ประดับด้วยขอบโลหะ
• เครื่องแก้วบาง	✓	สามารถใช้อุ่นอาหารหรือของเหลว แก้วที่บางมากอาจแตกหรือร้าวหากได้รับความร้อนทันที
• โถแก้ว	✓	ต้องใช้โดยไม่ปิดฝา เหมาะสำหรับการอุ่นอาหารเท่านั้น

อุปกรณ์	ใช้กับไมโครเวฟได้	หมายเหตุ
โลหะ		
• จาน	✗	อาจเกิดประกายหรือติดไฟ
• ลวดสำหรับมัดปากถุงแช่แข็ง	✗	
กระดาษ		
• จาน ถ้วย กระดาษเช็ดปาก และกระดาษเช็ดมือ	✓	สำหรับการอบเวลาสั้นๆ และการอุ่นอาหาร และใช้ซับของเหลวที่มากเกินไป
• กระดาษรีไซเคิล	✗	อาจเกิดประกายไฟ
พลาสติก		
• ภาชนะ	✓	โดยเฉพาะพลาสติกทนความร้อน พลาสติกชนิดอื่นอาจบิดหรือเปลี่ยนสีเมื่อโดนความร้อนสูง ห้ามใช้พลาสติกแบบเมลามีน
• ฟิล์มสำหรับปิดอาหาร	✓	สามารถใช้เก็บรักษาความชื้น ไม่ควรสัมผัสกับอาหารโดยตรง ใช้ความระมัดระวังขณะนำฟิล์มออก เนื่องจากอาจมีไอร้อนออกมาด้วย
• ถุงแช่แข็ง	✓ ✗	เฉพาะชนิดที่ต้มได้หรือใช้กับเตาอบได้ ไม่ควรเป็นแบบกักอากาศ ซึ่งต้องใช้ส้อมเจาะก่อน ถ้าจำเป็นต้องใช้
กระดาษมันหรือกระดาษไข	✓	สามารถใช้เก็บรักษาความชื้นหรือกันอาหารกระเด็น

✓ : แนะนำ ✓✗ : ใช้อย่างระมัดระวัง ✗ : ไม่ปลอดภัย

MG28H5125NK_ST_DE68-04246J-05_TH.indd 31 2019-09-11 10:20:07

คู่มือการอบอาหาร

ไมโครเวฟ

พลังงานไมโครเวฟจะแทรกซึมในอาหาร โดยจะมีการดูดซับโดยน้ำ ไขมัน และน้ำตาลในอาหาร
ไมโครเวฟทำให้โมเลกุลของอาหารเคลื่อนไหวอย่างรวดเร็ว การเคลื่อนไหวอย่างรวดเร็วนี้ทำให้เกิดแรงเสียดทานของโมเลกุล และความร้อนจากแรงเสียดทานนี้ทำให้อาหารสุก

การอบ

ภาชนะสำหรับอบด้วยไมโครเวฟ:
ภาชนะที่ใช้จะต้องยอมให้พลังงานไมโครเวฟผ่าน เพื่อให้การอบมีประสิทธิภาพ คลื่นไมโครเวฟจะสะท้อนกับโลหะ เช่น สเตนเลส อะลูมิเนียม และทองแดง แต่จะสามารถแทรกซึมผ่านดินเผา แก้ว กระเบื้อง และพลาสติก เช่นเดียวกับกระดาษและไม้ ห้ามอบอาหารในภาชนะโลหะเด็ดขาด

อาหารที่เหมาะสำหรับการอบด้วยไมโครเวฟ:
อาหารหลายชนิดเหมาะสำหรับการอบด้วยไมโครเวฟ เช่นผัก ผลไม้ พาสต้า ข้าว ธัญพืช ถั่ว ปลา และเนื้อ ซึ่งแช่แข็งหรือสด ซอส คัสตาร์ด ซุป พุดดิ้งอบ ของแห้งและของหมักดอง โดยทั่วไปแล้ว ไมโครเวฟเหมาะสำหรับการอบอาหารแทบทุกชนิดที่สามารถอบด้วยวิธีนึ่ง ตัวอย่างเช่น การละลายเนยหรือช็อคโกแล็ต (โปรดดูเคล็ดลับ เทคนิค และคำแนะนำประกอบ)

การปิดหรือครอบอาหาร
การปิดหรือครอบอาหารระหว่างการอบเป็นสิ่งที่สำคัญ เนื่องจากน้ำจะกลายเป็นไอและมีผลต่อการอบอาหาร คุณสามารถครอบอาหารได้หลายวิธีดังนี้: เช่น ใช้จานกระเบื้อง ฝาพลาสติก หรือฟิล์มปิดอาหารที่เหมาะกับไมโครเวฟ

เวลาพักอาหาร
เมื่อการอบอาหารเสร็จ เวลาพักอาหารจะช่วยให้อุณหภูมิในอาหารกระจายทั่วถึงกัน

คู่มือการอบอาหารสำหรับผักแช่แข็ง

ใช้อ่างแก้วทนไฟ (ไพเร็กซ์) ที่มีฝาปิด อบโดยปิดฝาและใช้เวลาน้อยที่สุด - โปรดดูในตาราง อบต่อไปเพื่อให้ได้ผลลัพธ์ตามต้องการ
คนอาหารสองครั้งระหว่างอบ และหนึ่งครั้งหลังการอบ เติมเกลือ เครื่องเทศ หรือเนยหลังการอบ ปิดฝาขณะพักอาหาร

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา (นาที)
ผักโขม	150 ก.	600 วัตต์	5-6
	คำแนะนำ เติมน้ำเย็น 15 มล. (1 ช้อนโต๊ะ) พักอาหารเป็นเวลา 2-3 นาที		
บร็อกโคลี่	300 ก.	600 วัตต์	8-9
	คำแนะนำ เติมน้ำเย็น 30 มล. (2 ช้อนโต๊ะ) พักอาหารเป็นเวลา 2-3 นาที		
ถั่ว	300 ก.	600 วัตต์	7-8
	คำแนะนำ เติมน้ำเย็น 15 มล. (1 ช้อนโต๊ะ) พักอาหารเป็นเวลา 2-3 นาที		
ถั่วเขียว	300 ก.	600 วัตต์	7½-8½
	คำแนะนำ เติมน้ำเย็น 30 มล. (2 ช้อนโต๊ะ) พักอาหารเป็นเวลา 2-3 นาที		
ผักรวม (แครอท/ถั่ว/ข้าวโพด)	300 ก.	600 วัตต์	7-8
	คำแนะนำ เติมน้ำเย็น 15 มล. (1 ช้อนโต๊ะ) พักอาหารเป็นเวลา 2-3 นาที		
ผักรวม (แบบจีน)	300 ก.	600 วัตต์	7½-8½
	คำแนะนำ เติมน้ำเย็น 15 มล. (1 ช้อนโต๊ะ) พักอาหารเป็นเวลา 2-3 นาที		

MG28H5125NK_ST_DE68-04246J-05_TH.indd 32 2019-09-11 10:20:07

คู่มือการอบอาหารสำหรับผักสด

ใช้อ่างแก้วทนไฟ (ไพเร็กซ์) ที่มีฝาปิด เติมน้ำเย็น 30-45 มล. (2-3 ช้อนโต๊ะ) สำหรับอาหาร 250 ก. ยกเว้นมีการแนะนำปริมาณน้ำนอกเหนือไปจากนี้ โปรดดูตาราง อบโดยปิดฝาและใช้เวลาน้อยที่สุด - โปรดดูในตาราง อบต่อไปเพื่อให้ได้ผลลัพธ์ตามต้องการ คนหนึ่งครั้งระหว่างและหลังการอบ เติมเกลือ เครื่องเทศ หรือเนยหลังการอบ ปิดฝาขณะพักอาหารเป็นเวลา 3 นาที

คำแนะนำ : ตัดผักสดออกเป็นชิ้นเท่าๆ กัน ผักชิ้นเล็กจะใช้เวลาอบน้อยกว่า

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา (นาที)
บร็อกโคลี่	250 ก. 500 ก.	900 วัตต์	4½-5 7-8
	คำแนะนำ หั่นเป็นช่อขนาดเท่ากัน วางส่วนก้านไว้ตรงกลาง พักอาหาร 3 นาที		
กะหล่ำบรัสเซล	250 ก.	900 วัตต์	6-6½
	คำแนะนำ เติมน้ำ 60-75 มล. (4-5 ช้อนโต๊ะ) พักอาหาร 3 นาที		
แครอท	250 ก.	900 วัตต์	4½-5
	คำแนะนำ ฝานแครอทเป็นชิ้นเท่าๆ กัน พักอาหาร 3 นาที		
ดอกกะหล่ำ	250 ก. 500 ก.	900 วัตต์	5-5½ 7½-8½
	คำแนะนำ หั่นเป็นช่อขนาดเท่ากัน หั่นแบ่งช่อขนาดใหญ่เป็นครึ่ง วางส่วนก้านไว้ตรงกลาง พักอาหาร 3 นาที		
ซูกินี	250 ก.	900 วัตต์	4-4½
	คำแนะนำ ฝานเป็นชิ้นบางๆ เติมน้ำ 30 มล. (2 ช้อนโต๊ะ) หรือเนย อบให้นุ่ม พักอาหาร 3 นาที		
มะเขือม่วง	250 ก.	900 วัตต์	3½-4
	คำแนะนำ ฝานมะเขือออกเป็นชิ้นบางๆ และเติมน้ำมะนาว 1 ช้อนโต๊ะ พักอาหาร 3 นาที		

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา (นาที)
กระเทียมต้น	250 ก.	900 วัตต์	4-4½
	คำแนะนำ หั่นเป็นชิ้นค่อนข้างหนา พักอาหาร 3 นาที		
เห็ด	125 ก. 250 ก.	900 วัตต์	1½-2 2½-3
	คำแนะนำ เตรียมเห็ดหัวเล็กทั้งหัว หรือหัวใหญ่ฝานเป็นแว่น อย่าเติมน้ำ ให้บีบน้ำมะนาวเล็กน้อย โรยเกลือและพริกไทย เหน้ำออกก่อนรับประทาน พักอาหาร 3 นาที		
หัวหอม	250 ก.	900 วัตต์	5-5½
	คำแนะนำ ฝานหัวหอมเป็นแว่น หรือหั่นครึ่ง เติมน้ำ 15 มล. (1 ช้อนโต๊ะ) พักอาหาร 3 นาที		
พริกหยวก	250 ก.	900 วัตต์	4½-5
	คำแนะนำ หั่นเป็นชิ้นบางๆ พักอาหาร 3 นาที		
มันฝรั่ง	250 ก. 500 ก.	900 วัตต์	4-5 7-8
	คำแนะนำ ชั่งน้ำหนักมันฝรั่งที่ปอกแล้ว และหั่นครึ่งหรือสี่ส่วน เป็นชิ้นเท่าๆ กัน พักอาหาร 3 นาที		
หัวผักกาด	250 ก.	900 วัตต์	5½-6
	คำแนะนำ หั่นเป็นชิ้นสี่เหลี่ยมลูกเต๋าขนาดเล็ก พักอาหาร 3 นาที		

MG28H5125NK_ST_DE68-04246J-05_TH.indd 33 2019-09-11 10:20:07

คู่มือการอบอาหารสำหรับข้าวและพาสต้า

ข้าว: ใช้ชามแก้วไพเร็กซ์ขนาดใหญ่ที่มีฝาปิด ข้าวจะมีปริมาณเพิ่มเป็นสองเท่าเมื่อหุงสุกแล้ว อบโดยปิดฝา
เมื่อหมดเวลาอบ คนให้ทั่วก่อนพักอาหาร และเติมเกลือหรือเครื่องเทศและเนยตามต้องการ
หมายเหตุ: ข้าวอาจไม่ดูดซับน้ำทั้งหมด หลังจากที่หมดเวลาอบแล้ว

พาสต้า: ใช้ชามไพเร็กซ์แก้วขนาดใหญ่ เติมน้ำร้อน เกลือเล็กน้อย และคนให้ทั่ว อบโดยปิดฝา
คนเป็นระยะระหว่างและหลังการอบ ปิดฝาขณะพักอาหาร และเทน้ำออกให้หมดหลังจากนั้น

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา (นาที)
ข้าว (หุงพอสุก)	250 ก. 375 ก.	900 วัตต์	15-16 17½-18½
	คำแนะนำ เติมน้ำเย็น 500 มล. (250 ก.) เติมน้ำเย็น 750 มล. (375 ก.) พักอาหาร 5 นาที		
ข้าวกล้อง (หุงพอสุก)	250 ก. 375 ก.	900 วัตต์	20-21 22-23
	คำแนะนำ เติมน้ำเย็น 500 มล. (250 ก.) เติมน้ำเย็น 750 มล. (375 ก.) พักอาหาร 5 นาที		
ข้าวผสม (ข้าว + ข้าวกล้อง)	250 ก.	900 วัตต์	16-17
	คำแนะนำ เติมน้ำเย็น 500 มล. พักอาหาร 5 นาที		
ข้าวโพดผสม (ข้าว + ธัญพืช)	250 ก.	900 วัตต์	17-18
	คำแนะนำ เติมน้ำเย็น 400 มล. พักอาหาร 5 นาที		
พาสต้า	250 ก.	900 วัตต์	10-11
	คำแนะนำ เติมน้ำร้อน 1000 มล. พักอาหาร 5 นาที		

การอุ่น

เตาไมโครเวฟของคุณสามารถอุ่นอาหารโดยใช้เวลาเพียงเสี้ยวของการอุ่นด้วยเตาอบแบบเก่าหรือลังถึง
ใช้ระดับพลังงานและเวลาในการอุ่นตามแผนผังต่อไปนี้ เวลาในแผนผังนี้ใช้กับอาหารที่เป็นของเหลว และมีอุณหภูมิปกติ คือประมาณ +18 ถึง +20 °C หรืออาหารแช่เย็นที่มีอุณหภูมิ +5 ถึง +7 °C

การจัดวางและการปิดครอบ

ไม่ควรอุ่นอาหารที่มีขนาดใหญ่ เช่น ก้อนเนื้อ เนื่องจากอาหารจะสุกและแห้งจนเกินไปก่อนที่ส่วนกลางจะร้อน การอุ่นอาหารที่เป็นชิ้นเล็กๆ จะได้ผลดีกว่า

ระดับพลังงานและการคน

อาหารบางอย่างสามารถอุ่นได้โดยใช้พลังงาน 900 วัตต์ แต่อาหารบางอย่างควรอุ่นโดยใช้พลังงาน 600 วัตต์, 450 วัตต์ หรือ 300 วัตต์
โปรดดูตารางต่อไปนี้เป็นแนวทาง โดยทั่วไป คุณควรอุ่นอาหารโดยใช้ระดับพลังงานต่ำ หากอาหารนั้นละเอียดอ่อน มีปริมาณมาก หรือถ้าเป็นอาหารชนิดที่ร้อนเร็ว (เช่น พายเนื้อสับ เป็นต้น)
คนให้ทั่ว หรือกลับด้านระหว่างการอุ่นอาหาร เพื่อให้ได้ผลดีที่สุด ถ้าเป็นไปได้ ควรคนอีกครั้งก่อนรับประทาน
ใช้ความระมัดระวังเป็นพิเศษเมื่ออุ่นอาหารเหลวและอาหารสำหรับทารก เพื่อป้องกันการเดือดและกระเด็น ซึ่งอาจทำให้อาหารลวกมือ คุณควรคนอาหารก่อน ระหว่าง และหลังการอุ่น ปล่อยทิ้งไว้ในเตาไมโครเวฟขณะพักอาหาร ขอแนะนำให้คุณใส่ช้อนพลาสติกหรือแท่งแก้วในอาหารที่เป็นของเหลว ระวังอย่าให้อาหารร้อนเกินไป (ซึ่งจะทำให้เสียรสชาติ)
ขอแนะนำให้คุณประมาณเวลาอบให้น้อยลง และเพิ่มเวลาในการอุ่นอาหาร ถ้าจำเป็น

เวลาในการอุ่นและพักอาหาร

เมื่ออุ่นอาหารเป็นครั้งแรก คุณควรบันทึกเวลาที่ใช้ในการอุ่นไว้ เพื่อใช้ประโยชน์ในอนาคต
โปรดอุ่นอาหารให้เดือดทั่วกันทุกครั้ง
พักอาหารไว้ชั่วขณะหลังจากการอุ่น เพื่อให้อุณหภูมิสม่ำเสมอทั่วกัน
เวลาพักอาหารที่เหมาะสมสำหรับการอุ่นก็คือ 2 - 4 นาที นอกจากที่แนะนำเป็นอย่างอื่นในแผนผัง
ใช้ความระมัดระวังเป็นพิเศษเมื่ออุ่นอาหารเหลวและอาหารสำหรับทารก โปรดอ่านข้อมูลเพิ่มเติมในเรื่องข้อควรระวังเพื่อความปลอดภัย

MG28H5125NK_ST_DE68-04246J-05_TH.indd 34 2019-09-11 10:20:07

การอุ่นของเหลว

กำหนดเวลาพักอาหารอย่างน้อย 20 วินาทีหลังจากที่ปิดเตาอบทุกครั้ง เพื่อให้มีการปรับอุณหภูมิ คนอาหารระหว่างให้ความร้อนถ้าจำเป็น และคนทุกครั้งหลังจากอุ่น เพื่อป้องกันการเดือดกระเด็นและอันตรายจากน้ำร้อนลวก โปรดใส่ช้อนหรือแท่งแก้วในเครื่องดื่ม และคนก่อน ระหว่าง และหลังการอุ่น

การอุ่นอาหารสำหรับทารก

อาหารสำหรับทารก:

เทใส่จานกระเบื้องกันลึก ครอบด้วยฝาพลาสติก คนให้ทั่วหลังการอุ่น พักอาหารเป็นเวลา 2-3 นาทีก่อนรับประทาน คนอีกครั้ง และตรวจสอบอุณหภูมิ อุณหภูมิที่แนะนำในการป้อน: ระหว่าง 30-40 °C

นมสำหรับทารก:

เทนมในขวดแก้วที่ทำความสะอาดแล้ว อุ่นโดยไม่ปิดฝา ห้ามอุ่นขวดนมเด็กโดยปิดจุกนมไว้ เนื่องจากขวดอาจระเบิดเมื่อได้รับความร้อนสูง เขย่าก่อนพักอาหาร และเขย่าอีกครั้งก่อนนำไปป้อนทารก ทุกครั้ง จะต้องตรวจสอบอุณหภูมิของอาหารหรือนมสำหรับทารกก่อนที่จะนำไปป้อน อุณหภูมิที่แนะนำในการป้อน: ประมาณ 37 °C

หมายเหตุ:

โปรดตรวจสอบอุณหภูมิของอาหารสำหรับทารกอย่างละเอียดก่อนที่จะนำไปป้อน เพื่อป้องการอาหารร้อนลวก ใช้ระดับพลังงานและเวลาในการอุ่นตามแผนผังต่อไปนี้

การอุ่นของเหลวและอาหาร

ใช้ระดับพลังงานและเวลาในการอุ่นตามแผนผังต่อไปนี้

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา (นาที)
เครื่องดื่ม (กาแฟ ชา และน้ำ)	150 มล. (1 ถ้วย) 300 มล. (2 ถ้วย) 450 มล. (3 ถ้วย) 600 มล. (4 ถ้วย)	900 วัตต์	1-1½ 2-2½ 3-3½ 3½-4
	คำแนะนำ เทในถ้วยและอุ่นโดยไม่ปิดฝา: วาง 1 ถ้วยตรงกลาง 2 ถ้วยตรงข้ามกัน และ 3 ถ้วยเป็นวงกลม ทิ้งไว้ในเตาไมโครเวฟระหว่างพักอาหาร และคนให้ทั่ว พักอาหารเป็นเวลา 1-2 นาที		
ซุป (เย็น)	250 ก. 350 ก. 450 ก. 550 ก.	900 วัตต์	2½-3 3-3½ 3½-4 4½-5
	คำแนะนำ เทในจานหรือชามกระเบื้องกันลึก ปิดด้วยฝาพลาสติก คนให้ทั่วหลังการอุ่น คนอีกครั้งก่อนรับประทาน พักอาหารเป็นเวลา 2-3 นาที		
สตูว์ (เย็น)	350 ก.	600 วัตต์	4½-5½
	คำแนะนำ เทสตูว์ในจานกระเบื้องก้นลึก ปิดด้วยฝาพลาสติก คนเป็นระยะระหว่างการอุ่น และคนอีกครั้งก่อนการพักอาหาร และก่อนรับประทาน พักอาหารเป็นเวลา 2-3 นาที		

MG28H5125NK_ST_DE68-04246J-05_TH.indd 35 2019-09-11 10:20:07

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา (นาที)
พาสต้าราดซอส (เย็น)	350 ก.	600 วัตต์	3½-4½
	คำแนะนำ ใส่พาสต้า (เช่น สปาเกตตี้หรือบะหมี่ไข่) ในจานกระเบื้องแบน ปิดด้วยฟิล์มสำหรับไมโครเวฟ คนอาหารก่อนรับประทาน พักอาหารเป็นเวลา 3 นาที		
พาสต้ามีไส้ราดซอส (เย็น)	350 ก.	600 วัตต์	4-5
	คำแนะนำ วางพาสต้าแบบมีไส้ (เช่น ราวิโอลี ทอร์เทลลินี) ในจานกระเบื้องกันลึก ครอบด้วยฝาพลาสติก คนเป็นระยะระหว่างการอุ่น และคนอีกครั้งก่อนพักอาหารและรับประทาน พักอาหาร 3 นาที		
อาหารชุด (เย็น)	350 ก. 450 ก.	600 วัตต์	4½-5½ 5½-6½
	คำแนะนำ จัดอาหารชุดซึ่งมีส่วนประกอบแช่เย็น 2 - 3 อย่างในจานกระเบื้อง ปิดด้วยฟิล์มสำหรับไมโครเวฟ พักอาหาร 3 นาที		
ซีสฟองดูพร้อมรับประทาน (แช่เย็น)	400 ก.	600 วัตต์	6-7
	คำแนะนำ ใส่ซีสฟองดูที่พร้อมรับประทานในชามแก้วไพเร็กซ์ที่มีฝาปิด คนเป็นระยะระหว่างและหลังการอุ่น คนก่อนรับประทาน พักอาหารเป็นเวลา 1-2 นาที		

การอุ่นอาหารและนมสำหรับทารก

ใช้ระดับพลังงานและเวลาในการอุ่นตามแผนผังต่อไปนี้

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา
อาหารสำหรับทารก (ผัก + เนื้อสัตว์)	190 ก.	600 วัตต์	30 วินาที
	คำแนะนำ เทใส่จานกระเบื้องกันลึก อบโดยปิดฝา คนอาหารหลังการอบ คนให้ทั่วก่อนนำไปป้อน และตรวจสอบอุณหภูมิอย่างละเอียด พักอาหารเป็นเวลา 2-3 นาที		
โจ๊กสำหรับทารก (ธัญพืช + นม + ผลไม้)	190 ก.	600 วัตต์	20 วินาที
	คำแนะนำ เทใส่จานกระเบื้องกันลึก อบโดยปิดฝา คนอาหารหลังการอบ คนให้ทั่วก่อนนำไปป้อน และตรวจสอบอุณหภูมิอย่างละเอียด พักอาหารเป็นเวลา 2-3 นาที		
นมสำหรับทารก	100 มล. 200 มล.	300 วัตต์	30-40 วินาที 1 นาที ถึง 1 นาที 10 วินาที
	คำแนะนำ เขย่าหรือคนให้ทั่ว และเทลงในขวดแก้วที่ฆ่าเชื้อแล้ว วางตรงกลางของจานหมุน อุ่นโดยไม่ปิดฝา เขย่าพร้อมกับพักอาหารอย่างน้อย 3 นาที ก่อนนำไปรับประทาน โปรดเขย่าและตรวจสอบอุณหภูมิอย่างระมัดระวัง		

MG28H5125NK_ST_DE68-04246J-05_TH.indd 36 2019-09-11 10:20:07

การละลายน้ำแข็ง

ไมโครเวฟเป็นวิธีการละลายอาหารแช่แข็งที่ดีเยี่ยม เนื่องจากจะค่อยๆ ละลายอาหารแช่แข็งได้ภายในเวลาอันสั้น ซึ่งจะมีประโยชน์เป็นอย่างมาก หากมีแขกมาเยี่ยมเยียนโดยไม่ได้เตรียมตัว

ไก่แช่แข็งจะต้องได้รับการละลายน้ำแข็งทั่วทั้งตัว ก่อนที่จะสามารถนำไปอบอาหาร นำที่รัดซึ่งเป็นโลหะออก และนำอาหารออกจากวัสดุห่อหุ้ม เพื่อให้น้ำซึ่งจะละลายสามารถไหลออกมาจากอาหาร

วางอาหารแช่แข็งในจานโดยไม่มีฝาครอบ กลับด้านหนึ่งครั้ง เทของเหลวออก และนำเครื่องในออกโดยเร็วที่สุด ตรวจดูอาหารเป็นระยะ เพื่อไม่ให้อุ่นจนเกินไป
หากส่วนที่มีขนาดเล็กหรือบางของอาหารแช่แข็งเริ่มอุ่น คุณสามารถหุ้มส่วนเหล่านั้นด้วยฟอยล์อะลูมิเนียมชิ้นเล็กๆ ระหว่างการละลายน้ำแข็ง

ถ้าเปิดไก่เริ่มอุ่นที่ผิวนอก ให้หยุดละลายน้ำแข็ง เพื่อให้เป็นการพักอาหาร 20 นาที ก่อนที่จะดำเนินการต่อ พักปลา เนื้อ และไก่ไว้สักครู่ เพื่อให้น้ำแข็งละลายทั่วถึงกัน เวลาพักอาหารเพื่อละลายน้ำแข็งจะขึ้นอยู่กับปริมาณของอาหาร โปรดดูตารางต่อไปนี้

คำแนะนำ: อาหารที่มีลักษณะแบนจะละลายน้ำแข็งได้เร็วกว่า และปริมาณที่ไม่มากจะใช้เวลาน้อยกว่า โปรดนึกถึงคำแนะนำนี้ เมื่อแช่แข็งและละลายอาหาร

สำหรับการละลายอาหารแช่แข็งที่มีอุณหภูมิระหว่าง -18 ถึง -20 °C โปรดใช้ตารางด้านล่างเป็นแนวทาง

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา (นาที)
เนื้อวัว			
เนื้อสับ	250 ก. 500 ก.	180 วัตต์	6-7 9-12
สเต็กหมู	250 ก.	180 วัตต์	5-7
	คำแนะนำ วางเนื้อบนจานหมุน หุ้มส่วนที่บางด้วยฟอยล์อะลูมิเนียม กลับด้านเมื่อถึงครึ่งของเวลาละลายน้ำแข็ง พักอาหารเป็นเวลา 15-30 นาที		
เนื้อไก่			
ไก่เป็นชิ้น	500 ก. (2 ชิ้น)	180 วัตต์	14-15
ไก่ทั้งตัว	1200 ก.	180 วัตต์	32-34
	คำแนะนำ ขั้นแรก ให้วางไก่เป็นชิ้นบนจานกระเบื้องแบบเรียบ โดยให้ด้านที่เป็นหนังอยู่ข้างล่าง ส่วนไก่ทั้งตัวให้เอาด้านหน้าอกลง หุ้มส่วนที่บางและเล็ก เช่น ปีก หรือก้นด้วยฟอยล์อะลูมิเนียม กลับด้านเมื่อถึงครึ่งของเวลาละลายน้ำแข็ง พักอาหารเป็นเวลา 15-60 นาที		

อาหาร	ปริมาณอาหาร	ระดับพลังงาน	เวลา (นาที)
เนื้อปลา			
เนื้อปลา (ฟิเลต์)	200 ก.	180 วัตต์	6-7
ปลาทั้งตัว	400 ก.	180 วัตต์	11-13
	คำแนะนำ วางปลาแช่แข็งกลางจานกระเบื้องแบบเรียบ โดยให้ส่วนที่เล็กอยู่ใต้ส่วนที่หนากว่า หุ้มส่วนที่บางและหางปลาด้วยฟอยล์อะลูมิเนียม กลับด้านเมื่อถึงครึ่งของเวลาละลายน้ำแข็ง พักอาหารเป็นเวลา 10-25 นาที		
ผลไม้			
เบอร์รี่	300 ก.	180 วัตต์	6-7
	คำแนะนำ วางผลไม้ให้กระจายบนจานแก้วกลมแบบเรียบ (และมีเส้นผ่าศูนย์กลางใหญ่) พักอาหารเป็นเวลา 5-10 นาที		
ขนมปัง			
ขนมปังก้อน (ก้อนละประมาณ 50 ก.)	2 ชิ้น 4 ชิ้น	180 วัตต์	1-1½ 2½-3
ขนมปังแผ่น / แซนด์วิช	250 ก.	180 วัตต์	4-4½
ขนมปังเยอรมัน (แป้งสาลี + ไรย์)	500 ก.	180 วัตต์	7-9
	คำแนะนำ วางก้อนขนมปังเป็นวง หรือวางขนมปังแผ่นเป็นแนวนอนบนกระดาษเช็ดปากไว้กลางจานหมุน กลับด้านเมื่อถึงครึ่งของเวลาละลายน้ำแข็ง พักอาหารเป็นเวลา 5-20 นาที		

MG28H5125NK_ST_DE68-04246J-05_TH.indd 37 2019-09-11 10:20:08

ย่าง

ขดลวดสำหรับการย่างอยู่บริเวณใต้ผนังด้านบนของเตาอบ และจะทำงานเมื่อปิดประตูและจานหมุนทำงาน การหมุนของจานหมุนจะทำให้อาหารเกรียมทั่วถึงกัน อุ่นเตาเพื่อเตรียมการย่างเป็นเวลา 3-5 นาที เพื่อให้อาหารเกรียมเร็วขึ้น

ภาชนะสำหรับการย่าง:
อุปกรณ์จะต้องไม่ติดไฟและอาจมีส่วนประกอบของโลหะได้ ห้ามใช้อุปกรณ์ที่เป็นพลาสติก เนื่องจากจะละลายได้

อาหารที่เหมาะสำหรับการย่าง:
เนื้อเป็นชิ้น ไส้กรอก สเต็ก แฮมเบอร์เกอร์ เบคอนและขาหมูรมควัน เนื้อปลาที่แล่บางๆ แซนด์วิช และขนมปังปิ้งแบบมีท็อปปิง

หมายเหตุสำคัญ:
เมื่อใดก็ตามที่ใช้เฉพาะโหมดย่าง โปรดทราบว่าอาหารจะต้องอยู่บนตะแกรงสูง นอกจากที่มีคำแนะนำเป็นอย่างอื่น

ไมโครเวฟ + ย่าง

การอบอาหารแบบนี้เป็นการผสมผสานความร้อนจากขดลวดเข้ากับความเร็วของไมโครเวฟ และจะทำงานเมื่อปิดประตูและจานหมุนทำงาน การหมุนของจานหมุนจะทำให้อาหารเหลืองเกรียมได้รวดเร็ว คุณสามารถใช้วิธีอบอาหารร่วมกันได้สามแบบสำหรับรุ่นนี้
600 วัตต์ + ย่าง, 450 วัตต์ + ย่าง และ 300 วัตต์ + ย่าง

อุปกรณ์สำหรับการอบอาหารด้วยไมโครเวฟ + การย่าง
โปรดใช้อุปกรณ์ที่คลื่นไมโครเวฟสามารถผ่านได้ และจะต้องไม่ติดไฟ โปรดอย่าใช้อุปกรณ์หรือภาชนะที่เป็นโลหะกับการทำงานแบบผสม ห้ามใช้อุปกรณ์ที่เป็นพลาสติก เนื่องจากจะละลายได้

อาหารที่เหมาะสำหรับการอบด้วยไมโครเวฟ + ย่าง:
อาหารที่เหมาะสำหรับการอบแบบผสมนี้ประกอบด้วยอาหารที่สุกแล้วทุกชนิด ซึ่งจะต้องมีการอุ่นและทำให้เหลือง (เช่น พาสต้าอบ) เช่นเดียวกับอาหารที่ต้องใช้เวลาอบไม่นาน เพื่อให้ส่วนบนเหลืองเกรียม นอกจากนี้ การทำงานแบบนี้ยังใช้กับอาหารที่มีลักษณะหนา และควรมีส่วนบนที่เกรียมกรอบ (เช่น ไก่เป็นชิ้น ซึ่งควรกลับด้านเมื่ออบได้ครึ่งของระยะเวลา) โปรดดูรายละเอียดเพิ่มเติมในตารางการย่าง

หมายเหตุสำคัญ:
เมื่อใดก็ตามที่ใช้โหมดผสม (ไมโครเวฟ + ย่าง) โปรดทราบว่าอาหารจะต้องอยู่บนตะแกรงสูง นอกจากที่มีคำแนะนำเป็นอย่างอื่น โปรดดูคำแนะนำในแผนผังต่อไปนี้
คุณจะต้องกลับอาหาร หากต้องการให้เหลืองเกรียมทั้งสองด้าน

MG28H5125NK_ST_DE68-04246J-05_TH.indd 38 2019-09-11 10:20:08

คู่มือการย่างสำหรับอาหารสดและอาหารแช่แข็ง

อุ่นเตาอบด้วยการย่างเป็นเวลา 3 นาที
ใช้ระดับพลังงานและเวลาในการย่างตามแผนผังต่อไปนี้

☛ ใช้ถุงมือกันความร้อนเมื่อนำออกจากเตา

อาหารสด	ปริมาณอาหาร	ระดับพลังงาน	ขั้นตอนที่ 1 (นาที)	ขั้นตอนที่ 2 (นาที)
ขนมปังแผ่น	4 ชิ้น (ชิ้นละ 25 ก.)	ย่างเท่านั้น	3-4	2-3
	คำแนะนำ วางแผ่นขนมปังคู่กันบนตะแกรง			
มะเขือเทศย่าง	400 ก. (2 ชิ้น)	300 วัตต์ + ย่าง	5-6	-
	คำแนะนำ หั่นครึ่งมะเขือเทศ ใส่ชีสที่ด้านบน วางเป็นรูปวงกลมบนจานแก้วไพเร็กซ์แบบเรียบ วางบนตะแกรงสูง พักอาหารเป็นเวลา 2-3 นาที			
มะเขือเทศ-ชีสโทสต์	4 ชิ้น (300 ก.)	300 วัตต์ + ย่าง	4 -5	-
	คำแนะนำ ปิ้งขนมปังก่อน วางขนมปังปิ้งพร้อมท็อปปิ้งบนตะแกรงสูง พักอาหารเป็นเวลา 2-3 นาที			
มันฝรั่งอบ	500 ก.	600 วัตต์ + ย่าง	7-8	-
	คำแนะนำ หั่นแป้งมันฝรั่งเป็นครึ่งหัว วางบนตะแกรงเป็นวงกลม โดยให้ด้านที่หั่นอยู่ข้างล่าง			
ลาซาญญ่าแช่แข็ง	400 ก.	300 วัตต์ + ย่าง ย่างเท่านั้น	18½-19½ 1-2	-
	คำแนะนำ วางกราแตงสดในจานที่ใช้สำหรับเตาอบขนาดเล็ก วางจานบนจานหมุน พักอาหารเป็นเวลา 2-3 นาที			
แอปเปิ้ลอบ	แอปเปิล 2 ผล (ประมาณ 400 ก.)	300 วัตต์ + ย่าง	7-8	-
	คำแนะนำ ควักไส้แอปเปิ้ลและยัดด้วยลูกเกดและแยม ใส่อัลมอนด์ฝานบางๆ ไว้ด้านบน วางแอปเปิ้ลบนจานแก้วไพเร็กซ์แบบเรียบ วางจานบนตะแกรงต่ำ			
ไก่เป็นชิ้น	500 ก. (2 ชิ้น)	300 วัตต์ + ย่าง	8-10	6-8
	คำแนะนำ ใช้แปรงทาน้ำมันและเครื่องเทศให้ทั่วชิ้นไก่ วางเป็นวงบนตะแกรงสูง หลังจากย่างแล้วให้พักอาหาร 2-3 นาที			
ไก่อบ	1200 ก.	450 วัตต์ + ย่าง กลับข้าง 300 วัตต์ + ย่าง	21-22	 21-22
	คำแนะนำ ใช้แปรงทาน้ำมันและเครื่องเทศให้ทั่วเนื้อไก่ ใส่ในจานสำหรับเตาอบและวางบนจานหมุน พักอาหารเป็นเวลา 5 นาทีหลังการอบ			
เนื้อปลาย่าง	400-500 ก.	300 วัตต์ + ย่าง	5-7	5½-6½
	คำแนะนำ ทาน้ำมันให้ทั่วตัวปลา จากนั้นใส่สมุนไพรและเครื่องเทศ วางปลาสองตัวคู่กัน (สลับด้านหัวและหาง) บนตะแกรงแบบสูง หลังจากย่างแล้วให้พักอาหาร 2-3 นาที			

MG28H5125NK_ST_DE68-04246J-05_TH.indd 39 2019-09-11 10:20:08

การละลายผลึกน้ำผึ้ง
ใส่เกล็ดน้ำผึ้ง 20 ก. ในจานแก้วกันลึก
ให้ความร้อนเป็นเวลา 20-30 วินาที ใช้พลังงาน 300 วัตต์จนน้ำผึ้งละลาย

การละลายเจลาติน
วางแผ่นเจลาตินแห้ง (10 ก.) ไว้ในน้ำเย็นเป็นเวลา 5 นาที
นำน้ำออก และใส่เจลาตินในถ้วยแก้วไพเร็กซ์ขนาดเล็ก
ให้ความร้อน 1 นาทีโดยใช้พลังงาน 300 วัตต์
คนหลังการละลาย

การอบหน้าเค้ก/ไอซ์ซิ่ง (สำหรับเค้กและขนม)
ผสมหน้า (ประมาณ 14 ก.) กับน้ำตาล 40 ก. และน้ำเย็น 250 มล.
อบโดยไม่ต้องปิดฝา ในถ้วยแก้วไพเร็กซ์ เป็นเวลา 3½ ถึง 4½ โดยใช้พลังงาน 900 วัตต์ จนกระทั่งหน้าเค้ก/ไอซ์ซิ่งใส
คนสองครั้งระหว่างการอบ

การทำแยม
ใส่ผลไม้ 600 ก. (เช่น เบอร์รี่ชนิดต่างๆ) ในชามแก้ว ไพเร็กซ์ที่มีขนาดเหมาะสมและมีฝาปิด เติมน้ำตาล 300 ก. และคนให้ทั่ว
อบโดยปิดฝาเป็นเวลา 10-12 นาที โดยใช้กำลังไฟ 900 วัตต์
คนบ่อยๆ ระหว่างการอบ เทลงในโถแก้วใส่แยม ที่มีฝาปิดเกลียว พักโดยปิดฝาไว้ 5 นาที

การทำพุดดิ้ง/ คัสตาร์ด
ผสมผงพุดดิ้งกับน้ำตาลและนม (500 มล.) ตามคำแนะนำของผู้ผลิต จากนั้นคนให้เข้ากัน ใช้อ่างแก้วไพเร็กซ์ที่มีฝาปิด
อบโดยปิดฝาเป็นเวลา 6½ ถึง 7½ นาที โดยใช้พลังงาน 900 วัตต์
คนบ่อยๆ ระหว่างการอบ

การอบเมล็ดอัลมอนด์แผ่น
นำเมล็ดอัลมอนด์ฝานเป็นแผ่น 30 ก. มาใส่ในจานกระเบื้องให้เสมอกัน
คนหลายๆ ครั้งระหว่างที่เริ่มเหลืองเป็นเวลา 3½ ถึง 4½ โดยใช้ความร้อน 600 วัตต์
พักในเตาเป็นเวลาประมาณ 2-3 นาที ใช้ถุงมือกันความร้อนเมื่อนำออกจากเตา

การแก้ไขปัญหาและรหัสข้อผิดพลาด

การแก้ไขปัญหา

ถ้าคุณประสบปัญหาอย่างใดอย่างหนึ่งที่ปรากฏด้านล่าง โปรดลองใช้วิธีแก้ไขปัญหาที่ให้มา

ซึ่งเป็นอาการปกติ

- เกิดไอน้ำเกาะตัวในเตาอบ
- มีอากาศหมุนเวียนใกล้ประตูและด้านนอกของเตาอบ
- มีแสงสะท้อนใกล้ประตูและด้านนอกของเตาอบ
- มีไอน้ำออกมาจากข้างประตูหรือช่องระบายอากาศ

เตาอบไม่เริ่มทำงานเมื่อกดปุ่ม เริ่มทำงาน/+30วินาที

- ประตูปิดเรียบร้อยหรือไม่

อาหารไม่สุกเลย

- คุณกำหนดเวลาถูกต้อง และ/หรือกดปุ่ม **เริ่มทำงาน/+30วินาที** แล้วหรือไม่
- ประตูปิดเรียบร้อยหรือไม่
- คุณใช้วงจรไฟฟ้าเกินกำลัง และทำให้ฟิวส์ขาดหรือทำให้เบรกเกอร์ตัดไฟหรือไม่

อาหารสุกเกินไปหรือไม่สุกพอ

- คุณใช้ระยะเวลาในการอบอาหารเหมาะสมกับชนิดของอาหารหรือไม่
- ระดับพลังงานที่เลือกถูกต้องหรือไม่

หลอดไฟไม่สว่าง

- ห้ามเปลี่ยนหลอดไฟด้วยตนเอง เพื่อความปลอดภัย โปรดติดต่อศูนย์บริการลูกค้าที่ได้รับอนุญาตของ Samsung ที่อยู่ใกล้ เพื่อนัดหมายให้ช่างที่มีคุณสมบัติเป็นผู้เปลี่ยนหลอดไฟให้

เตาอบทำให้เกิดสัญญาณรบกวนวิทยุหรือโทรทัศน์

- คุณอาจพบสัญญาณรบกวนโทรทัศน์หรือวิทยุบ้างเล็กน้อย เมื่อเตาอบทำงาน ซึ่งเป็นอาการปกติ นี่เป็นอาการปกติในการแก้ไขปัญหานี้ โปรดติดตั้งเตาไมโครเวฟให้ห่างจากเครื่องรับโทรทัศน์ วิทยุ และเสาอากาศ
- ถ้าไมโครโปรเซสเซอร์ของเตาอบพบสัญญาณรบกวน อาจจะมีการรีเซ็ตจอแสดงผล ในการแก้ปัญหานี้ ให้ถอดปลั๊กและต่อใหม่อีกครั้ง ตั้งเวลาใหม่

MG28H5125NK_ST_DE68-04246J-05_TH.indd 40 2019-09-11 10:20:08

มีประกายไฟหรือเสียงแตกเกิดขึ้นภายในเตาอบ (เกิดประกายไฟ)

- คุณใช้จานที่มีขอบโลหะหรือไม่
- คุณลืมช้อนหรือเครื่องใช้ในครัวที่เป็นโลหะไว้ในเตาอบหรือไม่
- แผ่นฟอยล์อะลูมิเนียมใกล้กับผนังด้านในของเตาอบหรือไม่

มีควันและกลิ่นเหม็นเมื่อเริ่มต้นใช้งาน

- เป็นอาการที่เกิดขึ้นชั่วคราวเนื่องจากชิ้นส่วนใหม่ได้รับความร้อน ควันและกลิ่นเหม็นจะหายไปหลังจากใช้งานประมาณ 10 นาที
  ถ้าต้องการให้ควันและกลิ่นหายไปเร็วยิ่งขึ้น โปรดใช้งานเตาไมโครเวฟโดยใส่มะนาวหรือน้ำมะนาวไว้ในเตาอบ

ถ้าคำแนะนำข้างต้นไม่สามารถแก้ไขปัญหาได้ โปรดติดต่อศูนย์บริการลูกค้า SAMSUNG ใกล้บ้านคุณ โปรดเตรียมข้อมูลต่อไปนี้ให้พร้อม

- หมายเลขรุ่นและหมายเลขผลิตภัณฑ์ ซึ่งมักจะพิมพ์ไว้ที่ด้านหลังของเตาอบ
- รายละเอียดของการรับประกัน
- คำอธิบายปัญหาอย่างชัดเจน

จากนั้นติดต่อผู้แทนจำหน่าย หรือฝ่ายบริการหลังการขายของ SAMSUNG

รหัสข้อผิดพลาด

ข้อความ “SE” หมายถึง

- ทำความสะอาดปุ่มและตรวจสอบว่ามีน้ำที่พื้นผิวรอบๆ ปุ่มหรือไม่ ปิดเตาอบไมโครเวฟและลองตั้งค่าอีกครั้ง ถ้ายังมีข้อความนี้ปรากฏอีก โปรดติดต่อศูนย์บริการลูกค้า SAMSUNG ในพื้นที่

ข้อความ “E-12” หมายถึง

- ข้อความ “E-12” คือเซ็นเซอร์ก๊าซช็อต ข้อผิดพลาดนี้อาจปรากฏขึ้นเนื่องจากมีความชื้นสูงในช่องเตาอบเมื่อคุณใช้งานเตาอบไมโครเวฟต่อทันทีหลังจากเสร็จสิ้นการใช้งานก่อนหน้านี้
  ในกรณีนี้ อาจเป็นไปได้ว่าเซ็นเซอร์ก๊าซไม่ได้ชำรุด โปรดปิดเตาอบไมโครเวฟและลองตั้งค่าอีกครั้ง
  ถ้ายังมีข้อผิดพลาดนี้ปรากฏอีก โปรดติดต่อศูนย์บริการลูกค้า SAMSUNG ในพื้นที่

สำหรับรหัสที่ไม่ปรากฏข้างต้น หรือถ้าคำแนะนำไม่สามารถแก้ไขปัญหาได้ โปรดติดต่อศูนย์บริการลูกค้า Samsung ในพื้นที่

ข้อมูลจำเพาะด้านเทคนิค

SAMSUNG มุ่งมั่นที่จะพัฒนาผลิตภัณฑ์อยู่เสมอ ดังนั้นรายละเอียดของเครื่องและคำแนะนำสำหรับผู้ใช้นี้จึงอาจมีการเปลี่ยนแปลง โดยไม่ได้แจ้งให้ทราบ

รุ่น	MG28H5125**
การจ่ายไฟ	220 V ~ 50 Hz
การใช้พลังงาน พลังงานสูงสุด ไมโครเวฟ ระบบย่าง (ขดลวดความร้อน)	 2750 วัตต์ 1400 วัตต์ 1350 วัตต์
กำลังไฟฟ้า	100 วัตต์ / 900 วัตต์ - 6 ระดับ (IEC-705)
ความถี่ของคลื่นขณะทำงาน	2450 เมกะเฮิรตซ์
ขนาด (กว้าง x ลึก x สูง) ด้านนอก ช่องของเตาอบ	 517 x 441.6 x 297.3 มม. 358 x 351 x 236 มม.
ปริมาตร	28 ลิตร
น้ำหนัก สุทธิ	 16.1 กก. โดยประมาณ

MG28H5125NK_ST_DE68-04246J-05_TH.indd 41 2019-09-11 10:20:08

SAMSUNG

ถ้าคุณมีคำถามหรือข้อคิดเห็น

ประเทศ/ที่ตั้ง	โทรศัพท์	หรือเยี่ยมชมเว็บไซต์ของเราที่
AUSTRALIA	1300 362 603	www.samsung.com/au/support
NEW ZEALAND	0800 726 786	www.samsung.com/nz/support
CHINA	400-810-5858	www.samsung.com/cn/support
HONG KONG	3698 4698	www.samsung.com/hk/support (Chinese) www.samsung.com/hk_en/support (English)
INDIA	1800 40 SAMSUNG (1800 40 7267864) (Toll-Free) 1800 5 SAMSUNG (1800 5 7267864) (Toll-Free)	www.samsung.com/in/support
BANGLADESH	09612300300 08000300300 (Toll free)	www.samsung.com/support
INDONESIA	021-5699-7777 0800-112-8888 (All Product, Toll Free)	www.samsung.com/id/support
JAPAN	0120-363-905	www.galaxymobile.jp/jp/support
MALAYSIA	1800-88-9999 +603-7713 7420 (Overseas contact)	www.samsung.com/my/support
PHILIPPINES	1-800-10-726-7864 [PLDT Toll Free] 1-800-8-726-7864 [Globe Landline and Mobile] 02-422-2111 [Standard Landline]	www.samsung.com/ph/support

ประเทศ/ที่ตั้ง	โทรศัพท์	หรือเยี่ยมชมเว็บไซต์ของเราที่
SINGAPORE	1800 7267864 | 1800-SAMSUNG	www.samsung.com/sg/support
THAILAND	0-2689-3232 1800-29-3232 (Toll free)	www.samsung.com/th/support
TAIWAN	0800-32-9999	www.samsung.com/tw/support
VIETNAM	1800 588 889	www.samsung.com/vn/support
MYANMAR	+95-1-2399-888	www.samsung.com/mm/support
MACAU	0800 333	www.samsung.com/hk/support (Chinese) www.samsung.com/hk_en/support (English)
SRI LANKA	011 SAMSUNG (011 7267864)	www.samsung.com/support
CAMBODIA	+855-23-993232 1800-20-3232 (Toll free)	www.samsung.com/th/support
LAOS	+856-214-17333	www.samsung.com/th/support
NEPAL	16600172667 (Toll Free for NTC Only) 9801572667 (Toll Free for Ncell users)	www.samsung.com/support

DE68-04246J-05

MG28H5125**

Microwave Oven

Owner's instructions & Cooking guide

Please be advised that the Samsung warranty does NOT cover service calls to explain product operation, correct improper installation, or perform normal cleaning or maintenance.

imagine the possibilities

Thank you for purchasing this Samsung product.

SAMSUNG

MG28H5125NK_ST_DE68-04246J-05_EN.indd 1 2019-08-29 5:47:57

contents

Safety instructions 3

Installation 8

Accessories 8
Installation site 8
Turntable 8

Maintenance 9

Cleaning 9
Replacement (repair) 9
Care against an extended period of disuse 9

Oven features 10

Oven 10
Control panel 10

Oven use 11

How a microwave oven works 11
Checking that your oven is operating correctly 11
Setting the time 12
Cooking/Reheating 12
Power levels and time variations 13
Adjusting the cooking time 13
Stopping the cooking 13
Setting the energy save mode 14
Using the healthy cooking features 14
Using the sensor cook features 16
Using the thai menu features 19
Using the power defrost features 26
Grilling 27
Combining microwaves and grill 27
Using the crusty plate 28
Using the steam cleaning 29
Using the deodorisation features 30
Using the child lock features 30
Using the turntable on/off features 30
Switching the beeper off 30

Cookware guide 31

Cooking guide 32

Troubleshooting and error code 40

Troubleshooting 40
Error code 41

Technical specifications 41

MG28H5125NK_ST_DE68-04246J-05_EN.indd 2 2019-08-29 5:47:57

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode.

WARNING: Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

This appliance is intended to be used in household only and it is not intended to be used such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential environments;
- bed and breakfast type environments.

Only use utensils that are suitable for use in microwave ovens.

When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.

The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

If smoke is observed (emitted), switch off or unplug the appliance and keep the door closed in order to stifle any flames.

Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.

The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.

MG28H5125NK_ST_DE68-04246J-05_EN.indd 3 2019-08-29 5:47:57

The oven should be cleaned regularly and any food deposits removed.

Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

The microwave oven is intended to be used on the counter top (freestanding) use only, the microwave oven shall not be placed in a cabinet.

Metallic containers for food and beverages are not allowed during microwave cooking.

The care should be taken not to displace the turntable when removing containers from the appliance.

The appliance shall not be cleaned with a steam cleaner.

The appliance should not be cleaned with a water jet.

The appliance is not intended for installing in road vehicles, caravans and similar vehicles etc.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This oven should be positioned proper direction and height permitting easy access to cavity and control area.

Before using the your oven first time, oven should be operated with the water during 10 minute and then used.

If the oven generates a strange noise, a burning smell, or smoke is emitted, unplug the power plug immediately and contact your nearest service center.

The microwave oven has to be positioned so that plug is accessible.

MG28H5125NK_ST_DE68-04246J-05_EN.indd 4 2019-08-29 5:47:57

WARNING: When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.

WARNING: Accessible parts may become hot during use. Young children should be kept away.

Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

A steam cleaner is not to be used.

WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

The appliance must not be installed behind a decorative door in order to avoid overheating.

WARNING: The appliance and its accessible parts become hot during use.

Care should be taken to avoid touching heating elements.

Children less than 8 years of age shall be kept away unless continuously supervised.

CAUTION: The cooking process has to be supervised. A short term cooking process has to be supervised continuously.

The door or the outer surface may get hot when the appliance is operating.

The temperature of accessible surfaces may be high when the appliance is operating.

The surfaces are liable to get hot during use.

The appliances are not intended to be operated by means of an external timer or separate remote-control system.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

Keep the appliance and its cord out of reach of children less than 8 years.

MG28H5125NK_ST_DE68-04246J-05_EN.indd 5 2019-08-29 5:47:57

General safety

Any modifications or repairs must be performed by qualified personnel only.
Do not heat food or liquids sealed in containers for the microwave function.
Do not use benzene, thinner, alcohol, or steam or high-pressure cleaners to clean the oven.
Do not install the oven: near a heater or flammable material; locations that are humid, oily, dusty or exposed to direct sunlight or water; or where gas may leak; or an uneven surface.
This oven must be properly grounded in accordance with local and national codes.
Regularly use a dry cloth to remove foreign substances from the power plug terminals and contacts.
Do not pull, excessively bend, or place heavy objects on the power cord.
If there is a gas leak (propane, LP, etc) ventilate immediately. Do not touch the power cord.
Do not touch the power cord with wet hands.
While the oven is operating, do not turn it off by unplugging the power cord.
Do not insert fingers or foreign substances. If foreign substances enter the oven, unplug the power cord and contact a local Samsung service centre.
Do not apply excessive pressure or impact to the oven.
Do not place the oven over fragile objects.
Ensure the power voltage, frequency, and current matches the product specifications.
Firmly plug the power plug into the wall socket. Do not use multiple plug adapters, extension cords, or electric transformers.
Do not hook the power cord on metal objects. Make sure the cord is between objects or behind the oven.
Do not use a damaged power plug, power cord, or loose wall socket. For damaged power plugs or cords, contact a local Samsung service centre.
Do not pour or directly spray water onto the oven.
Do not place objects on the oven, inside, or on the oven door.
Do not spray volatile materials such as insecticide on the oven.
Do not store flammable materials in the oven. Because alcohol vapours can contact hot parts of the oven, use caution when heating food or drinks containing alcohol.
Children may bump themselves or catch their fingers on the door. When opening/closing the door, keep children away.

Microwave warning

Microwave heating of beverages may result in delayed eruptive boiling; always use caution when handling the container. Always allow beverages to stand at least 20 seconds before handling. If necessary, stir during heating. Always stir after heating.
In the event of scalding, follow these First Aid instructions:

1. Immerse the scalded area in cold water for at least 10 minutes.
2. Cover with a clean, dry dressing.
3. Do not apply any creams, oils, or lotions.

To avoid damaging the tray or rack, do not put the tray or rack in water shortly after cooking.
Do not use the oven for deep fat frying because the oil temperature cannot be controlled. This could result in a sudden boil over of hot oils.

Microwave oven precautions

Only use microwave-safe utensils. Do not use metallic containers, gold or silver trimmed dinnerware, skewers, etc.
Remove wire twist ties. Electric arcing may occur.
Do not use the oven to dry papers or clothes.
Use shorter times for small amounts of food to prevent overheating or burning.
Keep the power cord and power plug away from water and heat sources.
To avoid the risk of explosion, do not heat eggs with shells or hard-boiled eggs. Do not heat airtight or vacuum-sealed containers, nuts, tomatoes, etc.
Do not cover the ventilation slots with cloth or paper. This is a fire hazard. The oven may overheat and turn off automatically and will remain off until it cools sufficiently.
Always use oven mitts when removing a dish.
Stir liquids halfway during heating or after heating ends and allow the liquid stand at least 20 seconds after heating to prevent eruptive boiling.
Stand at arms length from the oven when opening the door to avoid getting scalded by escaping hot air or steam.
Do not operate the oven when it is empty. The oven will automatically shut down for 30 minutes for safety purposes. We recommend placing a glass of water inside the oven at all times to absorb microwave energy in case the oven is started accidentally.
Install the oven in compliance with the clearances in this manual. (See Installing your microwave oven.)
Use caution when connecting other electrical appliances to sockets near the oven.

MG28H5125NK_ST_DE68-04246J-05_EN.indd 6 2019-08-29 5:47:57

Microwave operation precautions

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

- Do not operate the oven with the door open. Do not tamper with the safety interlocks (door latches). Do not insert anything into the safety interlock holes.
- Do not place any object between the oven door and front face or allow food or cleaner residue to accumulate on sealing surfaces. Keep the door and door sealing surfaces clean by wiping with a damp cloth and then with a soft, dry cloth after each use.
- Do not operate the oven if it is damaged. Only operate after it has been repaired by a qualified technician.
  Important: the oven door must close properly. The door must not be bent; the door hinges must not be broken or loose; the door seals and sealing surfaces must not be damaged.
- All adjustments or repairs must be done by a qualified technician.

Limited warranty

Samsung will charge a repair fee for replacing an accessory or repairing a cosmetic defect if the damage to the unit or accessory was caused by the customer. Items this stipulation covers include:



- Door, handles, out-panel, or control panel that are dented, scratched, or broken.
- A broken or missing tray, guide roller, coupler, or wire rack.

Use this oven only for its intended purpose as described in this instruction manual. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your oven.
Because these following operating instructions cover various models, the characteristics of your microwave oven may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact a local Samsung service centre or find help and information online at www.samsung.com.
Use this oven for heating food only. It is intended for domestic use only. Do not heat any type of textiles or cushions filled with grains. The manufacturer cannot be held liable for damage caused by improper or incorrect use of the oven.
To avoid deterioration of the oven surface and hazardous situations, always keep the oven clean and well maintained.


MG28H5125NK_ST_DE68-04246J-05_EN.indd 7 2019-08-29 5:47:57

ACCESSORIES

Depending on the model that you have purchased, you are supplied with several accessories that can be used in a variety of ways.

	**1. Roller ring**, to be placed in the centre of the oven. **Purpose:** The roller ring supports the turntable.
	**2. Turntable**, to be placed on the roller ring with the centre fitting on to the coupler. **Purpose:** The turntable serves as the main cooking surface; it can be easily removed for cleaning.
	**3. High rack,** to be placed on the turntable. **Purpose:** The metal racks can be used to cook two dishes at the same time. A small dish may be placed on the turntable and a second dish on the rack. **The metal rack can be used in grill and combination cooking.**
	**4. Crusty plate,** see page 28 to 29. **Purpose:** The crusty plate is used to brown food better in the microwave or grill combination cooking modes. It helps keep pastry and pizza dough crisp.
	**5. Clean water bowl,** see page 29. **Purpose:** The water bowl can be used to clean.

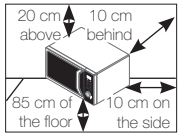
INSTALLATION SITE



- Select a flat, level surface approx. 85 cm above the floor. The surface must support the weight of the oven.
- Secure room for ventilation, at least 10 cm from the rear wall and both sides, and 20 cm from above.
- Do not install the oven in hot or damp surroundings, such as next to other microwave ovens or radiators.
- Conform to the power supply specifications of this oven. Use only approved extension cables if you need to use.
- Wipe the interior and the door seal with a damp cloth before using your oven for the first time.

TURNTABLE

Remove all packing materials inside the oven. Install the roller ring and turntable. Check that the turntable rotates freely.



MG28H5125NK_ST_DE68-04246J-05_EN.indd 8 2019-08-29 5:47:58

CLEANING

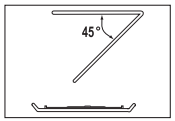
Clean the oven regularly to prevent impurities from building up on or inside the oven. Also pay special attention to the door, door sealing, and turntable and roller ring (applicable models only).
If the door won't open or close smoothly, first check if the door seals have built up impurities. Use a soft cloth in soapy water to clean both the inner and outer sides of the oven. Rinse and dry well.

To remove stubborn impurities with bad smells from inside the oven

1. With an empty oven, put a cup of diluted lemon juice on the centre of the turntable.
2. Heat the oven for 10 minutes at max power.
3. When the cycle is complete, wait until the oven cools down. Then, open the door and clean the cooking chamber.

To clean inside swing-heater models

To clean the upper area of the cooking chamber, lower the top heating element by 45° as shown. This will help clean the upper area. When done, reposition the top heating element.



⚠ CAUTION

- Keep the door and door sealing clean and ensure the door opens and closes smoothly. Otherwise, the oven's lifecycle may be shortened.
- Take caution not to spill water into the oven vents.
- Do not use any abrasive or chemical substances for cleaning.
- After each use of the oven, use a mild detergent to clean the cooking chamber after waiting for the oven to cool down.

REPLACEMENT (REPAIR)

⚠ WARNING

This oven has no user-removable parts inside. Do not try to replace or repair the oven yourself.

- If you encounter a problem with hinges, sealing, and/or the door, contact a qualified technician or a local Samsung service centre for technical assistance.
- If you want to replace the light bulb, contact a local Samsung service centre. Do not replace it yourself.
- If you encounter a problem with the outer housing of the oven, first unplug the power cord from the power source, and then contact a local Samsung service centre.

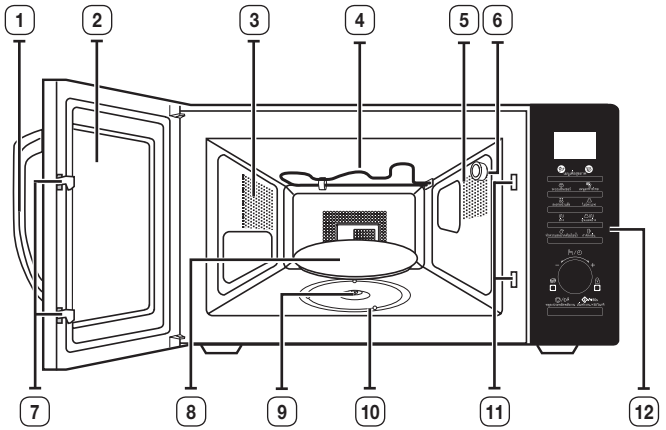
CARE AGAINST AN EXTENDED PERIOD OF DISUSE

If you don't use the oven for an extended period of time, unplug the power cord and move the oven to a dry, dust-free location. Dust and moisture that builds up inside the oven may affect the performance of the oven.

MG28H5125NK_ST_DE68-04246J-05_EN.indd 9 2019-08-29 5:47:58

oven features

OVEN



1. DOOR HANDLE
2. DOOR
3. VENTILATION HOLES
4. HEATING ELEMENT
5. LIGHT
6. WATER BOWL HOLDER
7. DOOR LATCHES
8. TURNTABLE
9. COUPLER
10. ROLLER RING
11. SAFETY INTERLOCK HOLES
12. CONTROL PANEL

CONTROL PANEL



1. HEALTHY COOKING BUTTON (VEGETABLES, GRAINS)
2. HEALTHY COOKING BUTTON (POULTRY, FISH)
3. SENSOR COOK BUTTON
4. THAI MENU BUTTON
5. POWER DEFROST BUTTON
6. MICROWAVE BUTTON
7. GRILL BUTTON
8. COMBI BUTTON
9. STEAM CLEAN BUTTON
10. DEODORISATION BUTTON
11. TURNTABLE ON/OFF BUTTON
12. MULTI FUNCTION SELECTOR DIAL
13. CHILD LOCK BUTTON
14. STOP/ECO BUTTON
15. START/+30s BUTTON

MG28H5125NK_ST_DE68-04246J-05_EN.indd 10 2019-08-29 5:47:58


HOW A MICROWAVE OVEN WORKS

Microwaves are high-frequency electromagnetic waves; the energy released enables food to be cooked or reheated without changing either the form or the colour.

You can use your microwave oven to:

- Defrost
- Reheat
- Cook

Cooking principle.



1. The microwaves generated by the magnetron reflected at cavity and are distributed uniformly as the food rotates on the turntable. The food is thus cooked evenly.
2. The microwaves are absorbed by the food up to a depth of about 1 inch (2.5 cm). Cooking then continues as the heat is dissipated within the food.
3. Cooking times vary according to the container used and the properties of the food:
   - Quantity and density
   - Water content
   - Initial temperature (refrigerated or not)

As the centre of the food is cooked by heat dissipation, cooking continues even when you have taken the food out of the oven. Standing times specified in recipes and in this booklet must therefore be respected to ensure:

- Even cooking of the food right to the centre.
- The same temperature throughout the food.

CHECKING THAT YOUR OVEN IS OPERATING CORRECTLY

The following simple procedure enables you to check that your oven is working correctly at all times. If you are in doubt, refer to the section entitled “Troubleshooting” on the page 40-41.

The oven must be plugged into an appropriate wall socket. The turntable must be in position in the oven. If a power level other than the maximum (100 % - 900 W) is used, the water takes longer to boil.

Open the oven door by pulling the handle on the right side of the door.
Place a glass of water on the turntable. Close the door.



Press the **START/+30s** button and set the time to 4 or 5 minutes, by pressing the **START/+30s** button the appropriate number of times.

Result: The oven heats the water for 4 or 5 minutes. The water should then be boiling.

MG28H5125NK_ST_DE68-04246J-05_EN.indd 11 2019-08-29 5:47:59

SETTING THE TIME

When power is supplied, “88:88” and then “12:00” is automatically displayed on the display.
Please set the current time. The time can be displayed in either the 24-hour or 12-hour notation. You must set the clock:

- When you first install your microwave oven
- After a power failure

Do not forget to reset the clock when you switch to and from summer and winter time.



	**1.** Press the **Multi Function Selector Dial**.
	**2.** Turn the **Multi Function Selector Dial** to set time display type. (12H or 24H)
	**3.** Press the **Multi Function Selector Dial** to complete the setup.
	**4.** Turn the **Multi Function Selector Dial** to set the hour.
	**5.** Press the **Multi Function Selector Dial**.
	**6.** Turn the **Multi Function Selector Dial** to set the minute.
	**7.** When the right time is displayed, press the **Multi Function Selector Dial** to start the clock. **Result:** The time is displayed whenever you are not using the microwave oven.

COOKING/REHEATING

The following procedure explains how to cook or reheat food.

ALWAYS check your cooking settings before leaving the oven unattended.

Open the door. Place the food in the centre of the turntable. Close the door. Never switch the microwave oven on when it is empty.

	**1.** Press the **Microwave** button. **Result:** The following indications are displayed: (microwave mode)
	**2.** Turn the **Multi Function Selector Dial** until the appropriate power level is displayed. At that time, press the **Multi Function Selector Dial** to set the power level.
	**3.** Set the cooking time by turning the **Multi Function Selector Dial**. **Result:** The cooking time is displayed.
	**4.** Press the **START/+30s** button. **Result:** The oven light comes on and the turntable starts rotating. Cooking starts and when it has finished. • The oven beep and flash “End” 4 times. The oven will then beep one time per minute.

MG28H5125NK_ST_DE68-04246J-05_EN.indd 12 2019-08-29 5:47:59

POWER LEVELS AND TIME VARIATIONS

The power level function enables you to adapt the amount of energy dissipated and thus the time required to cook or reheat your food, according to its type and quantity. You can choose between six power levels.

Power level	Percentage	Output
HIGH	100 %	900 W
MEDIUM HIGH	67 %	600 W
MEDIUM	50 %	450 W
MEDIUM LOW	33 %	300 W
DEFROST	20 %	180 W
LOW	11 %	100 W


The cooking times given in recipes and in this booklet correspond to the specific power level indicated.

If you select a...	Then the cooking time must be...
Higher power level Lower power level	Decreased Increased

ADJUSTING THE COOKING TIME

You can increase the cooking time by pressing the **START/+30s** button once for each 30 seconds to be added.

- Check how cooking is progressing at any time simply by opening the door
- Increase the remaining cooking time

	To increase the cooking time of your food during cooking, press the **START/+30s** button once for each 30 seconds that you wish to add. • Example: To add three minutes, press the **START/+30s** button six times.
	Just turning **Multi Function Selector Dial** to adjust cooking time. • To increase cooking time, turn to right and to decrease cooking time, turn to left.

STOPPING THE COOKING

You can stop cooking at any time so that you can:

- Check the food
- Turn the food over or stir it
- Leave it to stand

To stop the cooking...	Then...
Temporarily	Temporarily : Open the door or press the **STOP/ECO** button once. **Result:** Cooking stops. To resume cooking, close the door again and press the **START/+30s** button.
Completely	Completely : Press the **STOP/ECO** button once. **Result:** Cooking stops. If you wish to cancel the cooking settings, press the **STOP/ECO** button again.

MG28H5125NK_ST_DE68-04246J-05_EN.indd 13 2019-08-29 5:48:00

SETTING THE ENERGY SAVE MODE

The oven has an energy save mode.

	• Press the **STOP/ECO** button. **Result:** Display off. • To remove energy save mode, open the door or press the **STOP/ECO** button and then display shows current time. The oven is ready for use.

Auto energy saving function

If you do not select any function when appliance is in the middle of setting or operating with temporary stop condition, function is canceled and clock will be displayed after 25 minutes.

Oven Lamp will be turned off after 5 minutes with door open condition.


USING THE HEALTHY COOKING FEATURES

The 17 **Healthy Cooking** features provide pre-programmed cooking times. You do not need to set either the cooking times or the power level.

You can adjust the size of the serving by turning the **Multi Function Selector Dial**.

Use only recipients that are microwave-safe.

Open the door. Place the food in the centre of the turntable. Close the door.

	**1.** Press the **Healthy Cooking** button for the required cooking. - Vegetables & Grains - Poultry & Fish
	**2.** Select the type of food that you are cooking by turning the **Multi Function Selector Dial**. Refer to the table on the following page for a description of the various pre-programmed settings.
	**3.** Press the **START/+30s** button. **Result:** The food is cooked according to the pre-programmed setting selected. • When cooking has finished, the oven will beep and flash “End” 4 times. The oven will then beep one time per minute.

MG28H5125NK_ST_DE68-04246J-05_EN.indd 14 2019-08-29 5:48:00

The following table presents quantities and appropriate instructions about 17 pre-programmed cooking options. This is composed of Vegetables & Grains and Poultry & Fish.

Use oven gloves when taking out food.

1. Vegetables & Grains

Code/Food	Serving Size	Instructions
1 Green Beans	250 g	Rinse and clean green beans. Put them evenly into a glass bowl with lid. Add 30 ml (1 tbsp) water when cooking 250 g. Put bowl in the centre of turntable. Cook covered. Stir after cooking. Stand for 1-2 minutes.
2 Spinach	150 g	Rinse and clean spinach. Put into a glass bowl with lid. Do not add water. Put bowl in the centre of turntable. Cook covered. Stir after cooking. Stand for 1-2 minutes.
3 Corn on the Cob	500 g (2 pcs)	Rinse and clean corn on the cobs and put into an oval glass dish. Cover with microwave cling film and pierce film. Stand for 1-2 minutes.
4 Brown Rice (parboiled)	250 g	Use a large glass ovenware dish with lid. Add double quantity of cold water (500 ml). Cook covered. Stir before standing time and add salt and herbs. Stand for 5-10 minutes.
5 Wholemeal Macaroni	250 g	Use a large glass ovenware dish with lid. Add 1 L hot boiling water, a pinch of salt and stir well. Cook uncovered. Cook covered. Stir before standing time and drain thoroughly afterwards. Stand for 1 minutes.
6 Quinoa	250 g	Use a large glass ovenware dish with lid. Add double quantity of cold water (500 ml). Cook covered. Stir before standing time and add salt and herbs. Stand for 1-3 minutes.
7 Bulgur	250 g	Use a large glass ovenware dish with lid. Add double quantity of cold water (500 ml). Cook covered. Stir before standing time and add salt and herbs. Stand for 2-5 minutes.
8 Vegetable Gratin	500 g	Put the vegetables, such as precooked potato slices, courgette slices and tomatoes and sauce into a suitable sized glass pyrex dish. Add grated cheese on top. Put dish on the rack. Stand for 2-3 minutes.
9 Grilled Tomatoes	400 g	Rinse and clean tomatoes, cut them into halves and put in an ovenware dish. Add grated cheese on top. Put dish on rack. Stand for 1-2 minutes.

MG28H5125NK_ST_DE68-04246J-05_EN.indd 15 2019-08-29 5:48:00

2. Poultry & Fish



Code/Food	Serving Size	Instructions
1 Chicken Breasts	300 g (2 pcs)	Rinse pieces and put on a ceramic plate. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 2 minutes.
2 Turkey Breasts	300 g (2 pcs)	Rinse pieces and put on a ceramic plate. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 2 minutes.
3 Fresh Fish Fillets	300 g (2 pcs)	Rinse fish and put on a ceramic plate, add 1 tbsp lemon juice. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 1-2 minutes.
4 Fresh Salmon Fillets	300 g (2 pcs)	Rinse fish and put on a ceramic plate, add 1 tbsp lemon juice. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 1-2 minutes.
5 Fresh Prawns	250 g	Rinse prawns on a ceramic plate, add 1 tbsp lemon juice. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 1-2 minutes.
6 Fresh Trout	400 g (1-2 fish)	Put1- 2 fresh whole fish into an ovenproof dish. Add a pinch salt, 1 tbsp lemon juice and herbs. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 2 minutes.
7 Roast Fish	400 g (1 fish)	Brush skin of whole fish (trout or gilthead) with oil and add herbs and spices. Put fish side by side, head to tail on the high rack. Turnover, as soon as the beep sounds. Stand for 3 minutes.
8 Grilled Salmon Steaks	300 g (2 steaks)	Put fish steaks evenly on the high rack. Turnover, as soon as the beep sounds. Stand for 2 minutes.

USING THE SENSOR COOK FEATURES

The 8 **Sensor Cook** features include/provide pre-programmed cooking times.
You do not need to set either the cooking times or the power level.
You can adjust the Sensor Cook type of food by turning the **Multi Function Selector Dial**.

First, place the food in the centre of the turntable and close the door.

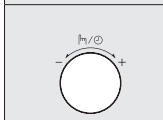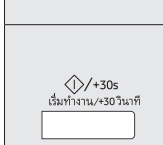Use only dishes that are microwave-safe.

	**1.** Press the **Sensor Cook** button.
	**2.** Select the type of food that you are cooking by turning the **Multi Function Selector Dial**. Refer to the table on the following page for a description of the various pre-programmed settings. At that time, press the **Multi Function Selector Dial** to select the type of food.
	**3.** Press the **START/+30s** button. **Result:** Cooking starts. When it has finished. 1) The oven beeps 4 times. 2) The end reminder signal will beep 3 times (once every minute). 3) The current time is displayed again.

Use only recipients that are microwave-safe.

If the inside temperature is over the 60 °C, cooling fan will operate for 3 minutes. You can't use **Sensor Cook** button temporarily until oven get cool to a desired temperature for sensor safe mode.

The following table presents 8 **Sensor Cook** programmes. It contains its recommended weight range per item after cooking and appropriate instructions. In the beginning of the programme the display shows the sensor period. After this period the cooking time and power level is calculated automatically and the remaining cooking time will be displayed. The cooking process is controlled by the sensor system for your convenience.

Use oven gloves while taking out!

MG28H5125NK_ST_DE68-04246J-05_EN.indd 16 2019-08-29 5:48:01

Code/Food	Serving Size	Instructions
1 Drinks	150-250 g	Pour the liquid (room-temperature) into ceramic cup or mug. Reheat uncovered. Place in the centre of turntable. Leave them to stand in the oven. Stir drinks before and after standing time. Be careful while taking the cup out (see safety instructions for liquids). Stand for 1-2 minutes.
2 Broccoli Florets	200-500 g	Rinse and clean broccoli florets. Put them evenly into a glass bowl with lid. Add 30-45 ml water (2-3 tbsp). Put bowl in the centre of turntable. Cook covered. Stir after cooking. This programme is suitable for broccoli as well as sliced courgette, egg plant, pumpkin or pepper. Stand for 1-2 minutes.
3 Sliced Carrots	200-500 g	Rinse and clean carrots cut into round slices evenly. Put them into a glass bowl with lid. Add 30-45 ml water (2-3 tbsp). Put bowl in the centre of turntable. Cook covered. Stir after cooking. This programme is suitable for sliced carrots as well as cauliflower florets or turnip cabbage. Stand for 1-2 minutes.
4 Peeled Potatoes	200-800 g	Wash and peel the potatoes and cut into a similar size. Put them into a glass bowl with lid. Add 45-60 ml (3-4 tbsp) water. Put bowl in the centre of turntable. Cook covered. Stand for 2-3 minutes.
5 Jacket Potatoes	200-800 g	Rinse and clean potatoes, each 200 g. Brush with olive oil and pierce skin with a knife. Put on turntable. Stand for 2-3 minutes.

Code/Food	Serving Size	Instructions
6 Soup/Sauce	250-500 g	Pour soup/sauce into a ceramic deep plate and cover with plastic lid. Put on turntable. Stir well after taking out. Stand for 1-2 minutes.
7 Frozen Soup	250-500 g	Remove cover of frozen ready soup and put on turntable. Cover with plastic lid. Stir well after taking out. Stand for 1-2 minutes.
8 Frozen Ready Meal	300-500 g	Pierce film of frozen ready meal and put on turntable. This programme is suitable for meals with two components. Stand for 3-4 minutes.

MG28H5125NK_ST_DE68-04246J-05_EN.indd 17 2019-08-29 5:48:01

Auto sensor cooking instructions

The Auto Sensor allows you to cook your food automatically by detecting the amount of gases generated from the food while cooking.

- When cooking food, many kinds of gases are generated.
  The Auto Sensor determines the proper time and power level by detecting these gases from the food, eliminating the need to set the cooking time and power level.
- When you cover a container with its lid or plastic wrap during Sensor Cooking, the Auto Sensor will detect the gases generated after the container has been saturated with steam.
  If using cling film or plastic wrap be sure to leave a small opening near the edge of dish for ventilation or be sure to pierce at several times.
- Shortly before cooking ends, the remaining cooking time will begin its count down. This will be a good time for you to rotate or stir the food for even cooking if it is necessary.
- Before auto sensor cooking food may be seasoned with herbs, spices or browning sauces. A word of caution though, salt or sugar may cause burn spots on food so these ingredients should be added after cooking.

Utensils & Cover for sensor cooking

- To obtain good cooking results with this function, follow the directions for selecting appropriate containers and covers in the charts in this book.
- Always use microwave-safe containers and cover them with their lids or with plastic wrap. When using plastic wrap, turn back one corner to allow steam to escape at the proper rate.
- Always cover with the lid intended for the utensil being used. If the utensil does not have its own lid, use plastic wrap.
- Fill containers at least half full.
- Foods that require stirring or rotating should be stirred or turned toward the end of the Sensor Cook cycle, after the time has started to count down on the display.

Important


- After installing the oven and plugging into an electrical outlet, do not unplug the power cord. The gas sensor needs time to stabilize in order to cook satisfactorily.
- It is not advisable to use the auto sensor cooking feature on a continuous cooking operation, i.e. one cooking operation immediately after another.
- Install the oven in a well ventilated location for proper cooling and airflow and to ensure the sensor will operate accurately.
- To avoid poor results, do not use the Auto sensor when the room ambient temperature is too high or too low.
- Do not use volatile detergent to clean your oven. Gas resulting from this detergent may affect the sensor.
- Avoid placing the oven near high moisture or gas emitting appliances, since this will interfere with the proper performance of the Auto Sensor.
- Always keep the inside of the oven clean. Wipe all spills with a damp cloth. This oven is designed for household use only.

MG28H5125NK_ST_DE68-04246J-05_EN.indd 18 2019-08-29 5:48:01

USING THE THAI MENU FEATURES

The 30 **Thai Menu** features include/provide pre-programmed cooking times. You do not need to set either the cooking times or the power level. You can adjust the number of servings by turning the **Multi Function Selector Dial**.

First, place the food in the centre of the turntable and close the door.

	**1.** Press the **Thai Menu** button.
	**2.** Select the type of food that you are cooking by turning the **Multi Function Selector Dial**.
	**3.** Press the **START/+30s** button. **Result:** Cooking starts. When it has finished. 1) The oven beeps 4 times. 2) The end reminder signal will beep 3 times (once every minute). 3) The current time is displayed again.

Use only recipients that are microwave-safe.

The following table presents the **Thai Menu** programmes, quantities and appropriate instructions.

Code/Food	Serving Size	Ingredients
1 Pork Wrapped Roasted Spring Onion (Marinated Grilled Pork)	2 person	Pork sirloin slide - 200 g, Coconut milk - ¼ cup, Soy sauce - 1 tbs, Sweet black soy sauce - 1 tbs, Crush coriander root - 4 root, Chopped garlic - 1 tbs, Pepper - ½ ts, Sugar - ½ tbs, Oil - 1 tbs, Sliced spring onion - 1 cup
	Instructions Crush coriander root, garlic, pepper together for marinating pork with ingredients at 1 hour. Put a marinated pork wrap with spring onion on skewers on the grill rack in oven and cook. When the beep, turn the food over and press start. Serve.	
2 Roasted Pork with Salted Fish	2 person	Carved salted fish - 30-50 g, Minced pork - 200 g, Shredded garlic - 2 tbs, Shredded thin bird chili - 1 tbs, Pepper - ½ ts, Seasoning powder - 1 tbs, Sesame oil - 1 ts, Shredded shallots - ¼ cup, Lime - 1
	Instructions Mix ingredients and mash together, except shredded shallots and lime. Form clots 1 cm, put them in baking pan on the grill rack in oven and cook. When the beep, turn the food over and press start. Serve for sliced shallots and lime.	

MG28H5125NK_ST_DE68-04246J-05_EN.indd 19 2019-08-29 5:48:01

Code/Food	Serving Size	Ingredients
3 Roasted Pork Neck with Spicy Sauce	3-4 person	Pork neck - 400 g, Soy sauce - 3 tbs, Oyster sauce - 2 tbs, Sugar - 1 tbs, Pepper - ½ ts, Salt - 1 ts, Fresh condensed milk - 2 tbs, Roasted rice - 2 tbs Spicy sauce. Cayenne - 1 tbs, Tamarind juice - 2 tbs, Fish sauce - 1 tbs, Palm sugar - 2 tbs, Roasted rice - 1 tbs, Spring onion, coriander. As you like it.
	Instructions Mix a Roast pork neck and ingredients together for marinating at 1 hour. Put them on the grill rack in oven and cook. When the beep, turn the food over and press start. • Spicy sauce Mix fish sauce, palm sugar together. Put them and cook at 900 W for 1 minutes. Add tamarind juice, roasted rice, spring onion and coriander, if you like. Serve with roasted pork neck.	
4 Roasted Red Pork	3-4 person	Pork sirloin - 500 g, Chopped coriander root - 5 root, Garlic - 10 piece, White pepper - ½ ts, Pickled bean curd - 1 tbs, Pickled bean curd water - 1 tbs, Soy sauce - 1 tbs, Honey - 2 tbs, Pork stewed in gravy power - 2 ts, Salt - ½ ts
	Instructions Crush coriander root, garlic, pepper together and mix with pork, add another ingredients. Mash and marinate for 1 hour. Put them on the grill rack in oven and cook. When the beep, turn the food over and press start. After cooking, chopping and serve with Sticky rice.	

Code/Food	Serving Size	Ingredients
5 Rice with Roasted Pork and Sesame Sauce	2 person	Pork sirloin - 250 g, Red sugar - 2 tbs, Shoyu - 3 tbs, Mirin - 1½ tbs, Sliced garlic - ¼ cup, Shredded ginger - ¼ cup, Roasted white sesame - 2 tbs, Shredded spring onion for sprinkle on top - 2 tbs
	Instructions Marinate sliced pork with other ingredients for 15 minutes. Put marinated pork on the grill rack in oven and cook. When the beep, turn the food over and press start. After cooking, serve with rice sprinkled with marinade sauce and spring onion. • Marinade Sauce Put remaining marinated sauce and cook at 900 W for 2 minutes.	

MG28H5125NK_ST_DE68-04246J-05_EN.indd 20 2019-08-29 5:48:01

Code/Food	Serving Size	Ingredients
6 Grilled Pork lemongrass and Chili Wrapped in leaves	2-4 person	Minced pork - 200 g, Chopped lemongrass - 2 tbs, Crush shallots - 3 tbs, Minced coriander - ¼ cup, Pepper - 1 tbs, Oyster sauce - 1½ tbs, Sugar - ½ tbs, Soy sauce - 1½ tbs, Coriander root - 4 root, Garlics - 5 piece, Pepper - ½ ts, Parboil noodles - 1 cup, Lettuce, shallots, peas, lemon, Diced small for side dishes. Sauce. Vinegar - ½ cup, Sugar - ⅓ cup, Salt - ½ ts, Crush red pepper - 1 tbs
	Instructions Crush coriander root, garlic, pepper together and mix with minced pork, shallots, minced coriander and lemongrass. Add oyster sauce, sugar, soy sauce and form pieces and mix well. Put them on the grill rack in oven and cook. When the beep, turn the food over and press start. After cooking, serve together with vegetables, parboil noodles, grilled pork, shallots, peas, lemon and sauce. • Sauce Mix vinegar, salt, sugar together. Put them and cook at 900 W for 2 minutes. After cooking, add crush red.	

Code/Food	Serving Size	Ingredients
7 Spicy Salad Roasted Beef with Brinjal	2-3 person	Beef sirloin - 300 g, Brinjal - 2-3 pieces, Kaffir lime leaves - 8 leaves, Shallots - ½ cup, Mint leaves - ½ cup, Fish sauce - 1 tbs, Sugar - 1 tbs, Lime juice - 2 tbs, Cayenne - ½ tbs, Salt - ¼ ts, Pepper - ¼ ts, Olive oil - ½ tbs
	Instructions Marinate beef with salt, pepper, and olive oil for 1 hour. Put them on the grill rack in oven and cook. When the beep, turn the food over and press start. After cooking, slice roasted beef and mix kaffir lime leaves, shallots, brinjal together with sauce. Before serving, sprinkled with sliced mint leaves and kaffir lime leaves. • Sauce Mix sugar, fish sauce, lime juice, and cayenne. Taste.	
8 Roasted Beef with Coriander seeds	2-4 person	Beef sirloin - 400 g, pepper seeds - 1 tbs, Coriander seeds -1½ tbs, Garlic - 1 piece, Salt - 1 ts, Fish sauce - 2 tbs, Soy sauce - 2 tbs, Oyster sauce - 2 tbs, Sugar - 2 tbs, Chinese liquor - 2 tbs
	Instructions Crush pepper, coriander seeds, garlic together and mix other ingredients and marinate with sliced beef for 3-4 hours. After marinating, dry for more 3-4 hours. Put them on the grill rack in oven and cook. When the beep, turn the food over and press start. After cooking, serve with sticky rice and favorite vegetable.	

MG28H5125NK_ST_DE68-04246J-05_EN.indd 21 2019-08-29 5:48:01

Code/Food	Serving Size	Ingredients
9 Beef Steak with Herb Butter	2 person	Beef sirloin - 400 g, Red wine - ¼ cup, Pepper corn - 1 ts, Pepper - 1 ts, Salt - ½ ts, Olive oil - 1 tbs, Sliced Eringii Mushroom - 1 cup, 3 color bell peppers - 1 cup, Cut long lines Herb Butter Unsalted butter - 3 tbs, Fresh rosemary - 1 tbs, Chopped garlic - ½ tbs, Salt - ¼ ts
	Instructions Pound or dipping beef with fork to make soft. Crush pepper corn and mix salt, pepper, red wine, olive oil. Marinate beef with mixture for 1 hour. Put them with chopped vegetables on the grill rack in oven and cook. When the beep, turn the food over and press start. After cooking, put herb butter on cooked beef and cook at 900 W until melting butter. Serve with roasted vegetables. • Herb butter Mix ingredients together, take in the fridge.	
10 Turmeric Grilled Chicken	1-2 person	Thigh chicken with drumsticks - 2 pieces, Turmeric - 2 tbs, Garlic - 10 piece. Coriander root - 5 root, White pepper - ½ ts, Black pepper - ½ ts, Salt - ½ ts, Sugar - 1 ts, Black soy sauce - ½ ts, Oil - 2 tbs
	Instructions Crush coriander root, garlic, pepper, turmeric and mix other ingredients. Marinate chicken with them for 2-3 hours. Put back side first on the grill rack in oven and cook. When the beep, turn the food over and press start. After cooking, serve with sticky rice, vegetables.	

Code/Food	Serving Size	Ingredients
11 Pandan Grilled Chicken	2 person	Thigh chicken - 2 pieces, Oyster sauce - 1½ tbs, White soy sauce - 1½ tbs, Sugar - 1½ tbs, Pepper - 1 ts, Sesame oil - ½ tbs, Coriander root - 1 tbs, Chopped garlic - 1 tbs, Pandan leaf - 8-10 leaves, Oil - 2 tbs
	Instructions Slice thigh chicken and marinate with ingredients for 1 hour. Warp with pandan and put them on the grill rack and cook. When the beep, turn the food over and press start. After cooking, serve with chili sauce.	
12 Grilled Shrimp with Black Pepper	1-2 person	Tiger shrimp - 10, Black pepper - 1 tbs, Diced small sweet peppers three colors - ½ cup, Coriander root - 1-2 root, Thai garlic - 5 piece, Cayenne - 1 ts, Pepper onion - 1 ts, Red sugar - ½ tbs, Salt - ½ ts, Olive oil - 2 tbs, White wine - 2 tbs
	Instructions Crush coriander root, garlic, pepper, pepper onion. Cut in both shell shrimp and marinate with all ingredients for 15 minutes. Put marinated shrimps on the grill rack in oven and cook. After cooking, serve with marinated sauce. • Sauce Mix remaining marinade sauce and sweet pepper, put them and cook at 900 W for 1 minute.	

MG28H5125NK_ST_DE68-04246J-05_EN.indd 22 2019-08-29 5:48:01

Code/Food	Serving Size	Ingredients
13 Grilled Shrimp with Three Flavor Sauce	2 person	River shrimp - 4-6, Cayenne - 2 ts, Salt - ¼ ts, Pepper - ¼ ts, Olive oil - 1 tbs, Fish sauce - 1 tbs, Palm sugar - 1½ tbs, Tamarind juice - 3 tbs, Onion - ½ cup, Chopped tomato - ½ cup, Oil - 1 tbs
	Instructions Wash and cut in both shell shrimp and marinate it with salt, pepper, cayenne, olive oil for 15 minutes. Put marinated shrimps on the grill rack in oven and cook. After cooking, serve shrimp with sauce and mixed oil. • Oil Mix shallot and oil, put them and cook at 900 W for 4 minutes. • Sauce Mix fish sauce and palm sugar together, add onion and tomato, put them in oven and cook at 900 W for 4 minutes.	
14 Grilled King Mackerel with Fish Sauce	2 person	Fresh king mackerel steak - 2 pieces, Fish sauce - ½ cup, Sugar - ½ tbs, Pepper - ½ ts, Water - ½ cup, Oil - 1 tbs
	Instructions Marinate king mackerel with mixed ingredients for 1 hour. Additional, dry it for 3-4 hours. After drying, put them on the grill rack in oven and cook. When the beep, turn the food over and press start. After cooking, serve.	

Code/Food	Serving Size	Ingredients
15 Grilled Snapper with Coconut Milk	2 person	Snapper - 2 pieces, Coconut milk - ½ cup, Shrimp paste - ½ tbs, Shallots - 5, White pepper - ½ tbs, Salt - 1 ts, Palm sugar - 1½ tbs, Tamarind juice - 2 tbs, Fried chili, coriander for decoration.
	Instructions Put front fish on the grill rack in oven and cook. When the beep, turn the food over and press start. After cooking, pour with coconut milk sauce, decorate with fried chili and coriander. Serve. • Coconut milk Sauce Crush shallots, pepper, salt, Shrimp paste together and add coconut milk, tamarind juice, palm sugar. Put them and cook at 450 W for 10 minutes.	

(continued)

Code/Food	Serving Size	Ingredients
16 Grilled Fish Chilli Paste	1-2 person	Grilled fish - ½ cup, Dried small chilies - 15, Small garlic - 15 pieces, Shallots - 8, Salt - ¼ ts, Palm sugar - 1 tbs, Lime juice - 1 tbs
	Instructions Put grilled fish on the grill rack in oven and cook. When the beep, put dried chilies, garlic, shallots on grilled fish and cook. After cooking, pared fish, garlic, shallots, and crush together and add fish sauce, palm sugar, lime juice. Serve with vegetables or boiled egg.	

MG28H5125NK_ST_DE68-04246J-05_EN.indd 23 2019-08-29 5:48:01

Code/Food	Serving Size	Ingredients
17 Spicy Salad Grilled Mackerel	2 person	Grilled mackerel meat - 200 g, Sliced sour mango - ½ cup, Sliced thin lemongrass - 2 tbs, Sliced shallots - ¼ tbs, Chopped parsley - 2 tbs, Mint leaves - 2 tbs Spicy sauce. lemonade - 2 tbs, Salt - ½ ts, Sugar - 15 tbs, Shredded bird chili - 1 tbs
	Instructions Put grill fresh mackerel on the grill rack in oven and cook. When the beep, turn the food over and press start. After cooking, mash cooked mackerel. Put mackerel meat in bowl, mix lemongrass, shallots, parsley, and mint leaves. Take spicy sauce in the blow and mix. Serve. • Spicy sauce Mix all ingredients, until sugar dissolves. Add sliced chili.	
18 Grilled Salmon with Lemongrass and Lemon Sauce	2 person	Salmon - 500 g, Pounded lemongrass - 2 tbs, Chopped coriander - 2 tbs, Salt - 1 ts, Pepper - ½ ts, Olive oil - 1 tbs, Sliced lemon - 2 pieces Lemon sauce. Yolk - 2, Sweetened condensed milk - 2 tbs, Lemonade - 2 ts, Salt - ½ ts, Mayonnaise - 2 tbs
	Instructions Marinate salmon with salt, pepper, chopped coriander, and olive oil together for 10 minutes. Put lemongrass, lemon, salmon and lemon again on the grill rack in oven and cook. Salmon skin down first. When the beep, turn the food over and press start. After cooking, serve with Lemon sauce. • Lemon sauce Mix yolk and salt, add mayonnaise, sweetened condensed milk, lemonade. Mash together, put them and cook at 900 W for 30 seconds.	

Code/Food	Serving Size	Ingredients
19 Grilled Salmon with Spicy Sauce	2 person	Salmon steak - 2 pieces, Rosemary - 1 tbs, Salt - ½ ts, Pepper - ½ ts, Olive oil - 1 tbs, Broccoli - 1 cup Spicy sauce. Coriander root - 3 root, Bird chili - 10, Chopped garlic - 2 tbs, Sugar - ½ ts, Salt - ¼ ts, Pickled garlic juice - 1 tbs, Yogurt - 2 tbs
	Instructions Marinate salmon with salt, pepper, rosemary, and olive oil for 30 minutes. Put marinated salmon on the grill rack in oven and cook. When the beep, turn the food over and press start. After cooking, Serve with salmon and vegetables. • Vegetables Wash and warp broccoli in the bowl. Put them and cook at 900 W for 3 minutes. • Spicy sauce Crush bird chili and garlic, mix with salt, sugar, and pickled garlic juice. Mash together and add yogurt at last.	
20 Homok Grilled Seafood	2 person	Squid shrimp - 200 g, Mussels together, Chili curry - 2 tbs, Coconut milk - ½ cup, Egg - 2, Mint - ½ cup, Shredded kaffir lime leaves - 3 leaves, Shredded chili - 1, Fish sauce - ½ tbs, Palm sugar - ½ tbs, Coconut meat - ¼ cup
	Instructions Mix all ingredients together and put in bowl. Put them on the grill rack in oven and cook. After cooking, serve sprinkle on kaffir lime leaves and chili.	
21 Pork Panang Curry with Rice	1 person	Pork panang curry with rice frozen - 1
	Instructions Remove sleeve and pierce film several time. Put it in oven and cook. Serve.	

MG28H5125NK_ST_DE68-04246J-05_EN.indd 24 2019-08-29 5:48:01

Code/Food	Serving Size	Ingredients
22 Stir Fried Chicken and Basil with Rice	1 person	Stir fried chicken and basil with rice frozen - 1
	Instructions Remove sleeve and pierce film several time. Put it in oven and cook. Serve.	
23 Rice with Sweet & Sour Soup	1 person	Rice with sweet & sour soup frozen - 1
	Instructions Remove sleeve and pierce film several time. Put it in oven and cook. Serve.	
24 Stir Fried Shrimp and Chilli with Rice	1 person	Stir fried shrimp and chilli with rice frozen - 1
	Instructions Remove sleeve and pierce film several time. Put it in oven and cook. Serve.	
25 Hawaiian Pizza	2-4 person	Hawaiian pizza frozen - 1
	Instructions Remove sleeve and take pizza out of the box. Put it in oven and cook. Serve.	
26 Spaghetti with Italian Sausage	1 person	Spaghetti with Italian sausage - 1
	Instructions Remove sleeve and pierce film several time. Put it in oven and cook. Serve.	
27 Brown rice & Soybean Milk	2-4 person	Soybean soak - 6 cup, Brown rice soak - 2 cup, Sugar - ½ cup, Salt - ½ tsp., Water - 5 cup, Pandan leaf - 1, Redbean or jelly for serving
	Instructions Soak soybean & brown rice in hot water for 3-5 hours and Blend with 5 cup of water. Filter grounds, pour in bowl with pandan leaf, sugar salt. Put them in oven and cook. After cooking, serve hot with red bean or other grain.	

Code/Food	Serving Size	Ingredients
28 Spicy Hot Choco	4 person	Milk - 3 cup, Sugar - ½ cup, Coco powder - 2-3, Ground cinnamon - ½ tbps
	Instructions Mix 1 cup of milk with other ingredients. Put them in oven and cook. When the beep, pour remaining milk and press start. Serve.	
29 Lemon Grass Punch	3-4 person	Whole lemon grass - 10, Pineapple juice - ⅔ cup, Slide of ginger - 4, Honey - ¼ cup, Water - 3 cup
	Instructions Cut and smash lemon grass bring to boil with ginger in water. Put them in oven and cook. After cooking, mix all together. Serve with ice.	
30 Mint Tea with Lemon	3-4 person	Mint leaf - 1 cup, Brown sugar - ½ cup, Lemon juice with lemon pieces - 2 tbps, Water - 4 cup
	Instructions Put mint leaf with water in oven and cook. After cooking, mix with brown sugar and lemon juice. Serve hot.	



MG28H5125NK_ST_DE68-04246J-05_EN.indd 25 2019-08-29 5:48:01

USING THE POWER DEFROST FEATURES

The **Power Defrost** features enable you to defrost meat, poultry, fish, bread and cake. The defrost time and power level are set automatically. You simply select the programme and the weight.

Use only containers that are microwave-safe.

Open the door. Place the frozen food on a ceramic in the centre of the turntable. Close the door.

	**1.** Press the **Power Defrost** button.
	**2.** Select the type of food that you are cooking by turning the **Multi Function Selector Dial**. Refer to the table on the following page for a description of the various pre-programmed settings. At that time, press the **Multi Function Selector Dial** to select the type of food.
	**3.** Select the size of the serving by turning the **Multi Function Selector Dial**.
	**4.** Press the **START/+30s** button. **Result:** • Defrosting begins. • The oven beeps through defrosting to remind you to turn the food over.
	**5.** Press the **START/+30s** button again to finish defrosting. **Result:** When cooking has finished, the oven will beep and flash “End” 4 times. The oven will then beep one time per minute.

The following table presents the various **Power Defrost** programmes, quantities and appropriate instructions.

Remove all kind of package material before defrosting. Place meat, poultry, fish and bread/cake on a flat glass dish or ceramic plate.


Code/Food	Serving Size	Instructions
1 Meat	200-1500 g	Shield the edges with aluminium foil. Turn the meat over, when the oven beeps. This programme is suitable for beef, lamb, pork, steaks, chops, minced meat. Stand for 20-60 minutes.
2 Poultry	200-1500 g	Shield the leg and wing tips with aluminium foil. Turn the poultry over, when the oven beeps. This programme is suitable for whole chicken as well as for chicken portions. Stand for 20-60 minutes.
3 Fish	200-1500 g	Shield the tail of a whole fish with aluminium foil. Turn the fish over, when the oven beeps. This programme is suitable for whole fishes as well as for fish fillets. Stand for 20-50 minutes.
4 Bread/Cake	125-1000 g	Put bread on a piece of kitchen paper and turn over, as soon as the oven beeps. Place cake on a ceramic plate and if possible, turn over, as soon as the oven beeps. (Oven keeps operating and is stopped, when you open the door.) This programme is suitable for all kinds of bread, sliced or whole, as well as for bread rolls and baguettes. Arrange bread rolls in a circle. This programme is suitable for all kinds of yeast cake, biscuit, cheese cake and puff pastry. It is not suitable for short/crust pastry, fruit and cream cakes as well as for cake with chocolate topping. Stand for 5-20 minutes.

MG28H5125NK_ST_DE68-04246J-05_EN.indd 26 2019-08-29 5:48:02

GRILLING

The grill enables you to heat and brown food quickly, without using microwaves.

- Always use oven gloves when touching the recipients in the oven, as they will be very hot.
- You can get better cooking and grilling results, if you use the high rack.

	**1.** Open the door and put the food on the rack and then close the door.
	**2.** Press the **Grill** button. **Result:** The following indications are displayed: (grill mode) • You cannot set the temperature of the grill.
	**3.** Set the grilling time by turning the **Multi Function Selector Dial**. • The maximum grilling time is 60 minutes.
	**4.** Press the **START/+30s** button. **Result:** Grilling starts. • When cooking has finished, the oven will beep and flash “End” 4 times. The oven will then beep one time per minute.


COMBINING MICROWAVES AND GRILL

You can also combine microwave cooking with the grill, to cook quickly and brown at the same time.

- ALWAYS use microwave-safe and oven-proof cookware. Glass or ceramic dishes are ideal as they allow the microwaves to penetrate the food evenly.
- ALWAYS use oven gloves when touching the recipients in the oven, as they will be very hot.

  You can improve cooking and grilling, if you use the high rack.



Open the door. Place the food on the rack best suited to the type of food to be cooked. Place the rack on the turntable. Close the door.

	**1.** Press the **Combi** button. **Result:** The following indications are displayed: (microwave & grill combi mode) 600 W (output power)
	**2.** Select the appropriate power level by turning the **Multi Function Selector Dial** until the corresponding output power is displayed (600, 450, 300 W). At that time, press the **Multi Function Selector Dial** to set the power level. • You cannot set the temperature of the grill.
	**3.** Set the cooking time by turning the **Multi Function Selector Dial**. • The maximum cooking time is 60 minutes.
	**4.** Press the **START/+30s** button. **Result:** • Combination cooking starts. • When cooking has finished, the oven will beep and flash “End” 4 times. The oven will then beep one time per minute.

MG28H5125NK_ST_DE68-04246J-05_EN.indd 27 2019-08-29 5:48:02

USING THE CRUSTY PLATE

This crusty plate allows you to brown food not only on the top with the grill, but also the bottom of the food turns crispy and brown due to the high temperature of the crusty plate. Several items which you can prepare on the crusty plate can be found in the chart (see next page). The crusty plate can also be used for bacon, eggs, sausages, etc.

	**1.** Place the crusty plate directly on the turntable and preheat it with highest Microwave-Grill-Combination [600 W + Grill] by following the times and instructions in the chart.
	**2.** Brush the plate with oil if you are cooking food, such as bacon and eggs, in order to brown the food nicely.
	**3.** Place the food on the crusty plate.
	**4.** Place the crusty plate on the metal rack (or turntable) in the microwave.
	**5.** Select the appropriate cooking time and power. (Refer to the table on the side)

- Always use oven gloves to take out the crusty plate, as will become very hot.
- Please note that the crusty plate has a teflon layer which is not scratch-resistant. Do not use any sharp objects like a knife to cut on the crusty plate.
- Do not place any objects on the crusty plate that are not heat-resistant.
- Never place the crusty plate in the oven without turntable.
- Clean the crusty plate with warm water and detergent and rinse off with clean water.
- Do not use a scrubbing brush or a hard sponge otherwise the top layer will be damaged.
- Please note that the crust plate is not dish washer-safe.

We recommend to preheat the crusty plate directly on the turntable.
Preheat crusty plate with 600 W + Grill function for 3-4 minutes.
Follow the times and instructions in the table.

Food	Serving Size	Power	Cooking time (min.)
Bacon	4 slices (80 g)	600 W + Grill	3-3½
	Instructions Preheat crust plate for 3 minutes. Put slices side by side on crust plate. Put crust plate on rack. Stand for 3 minutes.		
Grilled Tomatoes	200 g (2 pcs)	450 W + Grill	2½-3
	Instructions Preheat crust plate for 3 minutes. Cut tomatoes in halves. Put some cheese on top. Arrange in a circle on crust plate. Put crust plate on rack. Stand for 3 minutes.		
Burger (Frozen)	2 pieces (125 g)	600 W + Grill	6-6½
	Instructions Preheat crust plate for 3 minutes. Put frozen burger on the crust plate. Put crust plate on rack. Turn over after 3-4 min. Stand for 3 minutes.		
Baguettes (Frozen)	200-250 g (2 pcs)	450 W + Grill	6-7
	Instructions Preheat crust plate for 3 minutes. Put baguettes with topping (e.g. tomato-cheese) side by side on the plate. Put crust plate on rack. Stand for 3 minutes.		
Pizza (Frozen)	300-350 g	450 W+Grill	11-12
	Instructions Preheat the crust plate for 3 minutes. Put the frozen pizza on the crust plate. Put crust plate on the turntable. Stand for 1-2 minutes.		

MG28H5125NK_ST_DE68-04246J-05_EN.indd 28 2019-08-29 5:48:03


Food	Serving Size	Power	Cooking time (min.)
Mini Pizza-Snack (Frozen)	9 X 30 g (270 g)	300 W + Grill	9-10
	Instructions Preheat crust plate for 3 minutes. Distribute pizza snacks evenly on crust plate. Put the plate on the Turntable. Stand for 3 minutes.		
Pizza (Chilled)	300-350 g	450 W + Grill	5½-6½
	Instructions Preheat crust plate for 5 minutes. Put the chilled pizza on the plate. Put crust plate on the Turntable. Stand for 3 minutes.		
Fish Fingers (Frozen)	150 g (5 pcs) 300 g (10 pcs)	600 W + Grill	6-7 8-9
	Instructions Preheat crust plate for 4 minutes. Brush plate with 1 tbsp oil. Put fish fingers in a circle on the plate. Turn over after 3 min (5 pcs) or after 5 min. (10 pcs). Stand for 3 minutes.		
Chicken Nuggets (Frozen)	125 g 250 g	600 W + Grill	4-5 6-7
	Instructions Preheat crust plate for 4 minutes. Brush plate with 1 tbsp oil. Put chicken nuggets on the plate. Put crust plate on rack. Turn over after 2 min (125 g) or 4 min. (250 g). Stand for 3 minutes.		
Baked Potatoes	250 g 500 g	600 W + Grill	4-5 7-8
	Instructions Preheat crust plate for 3 minutes. Cut potatoes in halves. Put them on the crust plate with the cut-side to the bottom. Arrange in a circle. Put the plate on the rack. Stand for 3 minutes.		

USING THE STEAM CLEANING


The steam provided by steam clean system will soak the cavity surface.
After using steam clean function, you can easily clean the cavity of oven.

Use this function only after the oven has completely cooled. (Room temperature)


Use normal water only, and no distilled water.




1. Open the Door.




2. Fill with water following guide line (water level) outside the water bowl. (The line is about 50 ml.)



3. Insert water bowl into upper water bowl holder on the right wall of cooking chamber. At that time close the door.



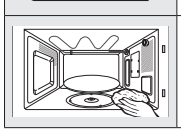4. Press the **Steam Clean** button.
It can be seen **MISTY** during steam cleaning. but it is not a defect **BUT STEAM SHIELDS THE** light **INSIDE.**



5. Open the door and please clean cavity of oven with dried dishtowel. Remove the turntable and only under rack with kitchen paper.


WARNING Water Bowl only can be use during "**Steam Clean**" mode.
When cooking non-liquid items, remove water bowl because It will damage and cause fire to the microwave oven.

More than 50 ml water may cause a leak at the back through the hole. Ensure that it is not more than 50 ml.

MG28H5125NK_ST_DE68-04246J-05_EN.indd 29 2019-08-29 5:48:04

USING THE DEODORISATION FEATURES

Use this features after cooking odorous food or when there is a lot of smoke in the oven interior.
First clean the oven interior.

	Press the **Deodorisation** button after you have finished cleaning. As soon as you press the Deodorisation button, the operation will start automatically. when it has finished, the oven beeps four times.

The deodorisation time has been specified as 5 minutes. It increases by 30 seconds whenever the **START/+30s** button is pressed.

The maximum deodorisation time is 15 minutes.

USING THE CHILD LOCK FEATURES

Your microwave oven is fitted with a special child lock programme, which enables the oven to be “locked” so that children or anyone unfamiliar with it cannot operate it accidentally.

	**1.** Press the **Child Lock** button for 3 second. **Result:** • The oven is locked (no functions can be selected). • The display shows “L”. 
	**2.** To unlock the oven, press the **Child Lock** button for 3 second. **Result:** The oven can be used normally.

USING THE TURNTABLE ON/OFF FEATURES

The **Turntable On/Off** button enables you to use large dishes which fill the whole oven by stopping the turntable from rotating (only manual cooking mode).

The results will be less satisfactory in this case as the cooking is less even. We recommend that you turn the dish by hand halfway through the cooking process.


WARNING Never operate the turntable without food in the oven.
Reason: This may cause fire or damage to the unit.

	**1.** Press the **Turntable On/Off** button. **Result:** The turntable will not rotate.
	**2.** To switch the turntable rotating back on, press the **Turntable On/Off** button again. **Result:** The turntable will rotate.

This **Turntable On/Off** button is available only during cooking.

SWITCHING THE BEEPER OFF

You can switch the beeper off whenever you want.

	**1.** Press the **START/+30s** and **STOP/ECO** button at the same time. **Result:** The oven does not beep to indicate the end of a function.
	**2.** To switch the beeper back on, press the **START/+30s** and **STOP/ECO** button again at the same time. **Result:** The oven operates normally.

MG28H5125NK_ST_DE68-04246J-05_EN.indd 30 2019-08-29 5:48:05

cookware guide

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used.
Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry.
The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-safe	Comments
Aluminum foil	✓✗	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
Crust plate	✓	Do not preheat for more than 8 minutes.
China and earthenware	✓	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
Disposable polyester cardboard dishes	✓	Some frozen foods are packaged in these dishes.
Fast-food packaging		
• Polystyrene cups containers	✓	Can be used to warm food. Overheating may cause the polystyrene to melt.
• Paper bags or newspaper	✗	May catch fire.
• Recycled paper or metal trims	✗	May cause arcing.
Glassware		
• Oven-to-tableware	✓	Can be used, unless decorated with a metal trim.
• Fine glassware	✓	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.
• Glass jars	✓	Must remove the lid. Suitable for warming only.
Metal		
• Dishes	✗	May cause arcing or fire.
• Freezer bag twist ties	✗	
Paper		
• Plates, cups, napkins and kitchen paper	✓	For short cooking times and warming. Also to absorb excess moisture.
• Recycled paper	✗	May cause arcing.
Plastic		
• Containers	✓	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic.
• Cling film	✓	Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
• Freezer bags	✓✗	Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
Wax or grease-proof paper	✓	Can be used to retain moisture and prevent spattering.

✓ **: Recommended** ✓✗ **: Use caution** ✗ **: Unsafe**

MG28H5125NK_ST_DE68-04246J-05_EN.indd 31 2019-08-29 5:48:05

cooking guide

MICROWAVES

Microwave energy actually penetrates food, attracted and absorbed by its water, fat and sugar content.
The microwaves cause the molecules in the food to move rapidly. The rapid movement of these molecules creates friction and the resulting heat cooks the food.

COOKING

Cookware for microwave cooking:
Cookware must allow microwave energy to pass through it for maximum efficiency. Microwaves are reflected by metal, such as stainless steel, aluminium and copper, but they can penetrate through ceramic, glass, porcelain and plastic as well as paper and wood. So food must never be cooked in metal containers.

Food suitable for microwave cooking:
Many kinds of food are suitable for microwave cooking, including fresh or frozen vegetables, fruit, pasta, rice, grains, beans, fish, and meat. Sauces, custard, soups, steamed puddings, preserves, and chutneys can also be cooked in a microwave oven. Generally speaking, microwave cooking is ideal for any food that would normally be prepared on a hob. Melting butter or chocolate, for example (see the chapter with tips, techniques and hints).

Covering during cooking
To cover the food during cooking is very important, as the evaporated water rises as steam and contributes to cooking process. Food can be covered in different ways: e.g. with a ceramic plate, plastic cover or microwave suitable cling film.

Standing times
After cooking is over food the standing time is important to allow the temperature to even out within the food.

Cooking Guide for frozen vegetables

Use a suitable glass pyrex bowl with lid. Cook covered for the minimum time – see table. Continue cooking to get the result you prefer.
Stir twice during cooking and once after cooking. Add salt, herbs or butter after cooking. Cover during standing time.

Food	Serving Size	Power	Time (min.)
Spinach	150 g	600 W	5-6
	Instructions Add 15 ml (1 tbsp) cold water. Stand for 2-3 minutes.		
Broccoli	300 g	600 W	8-9
	Instructions Add 30 ml (2 tbsp) cold water. Stand for 2-3 minutes.		
Peas	300 g	600 W	7-8
	Instructions Add 15 ml (1 tbsp) cold water. Stand for 2-3 minutes.		
Green Beans	300 g	600 W	7½-8½
	Instructions Add 30 ml (2 tbsp) cold water. Stand for 2-3 minutes.		
Mixed Vegetables (Carrots/Peas/ Corn)	300 g	600 W	7-8
	Instructions Add 15 ml (1 tbsp) cold water. Stand for 2-3 minutes.		
Mixed Vegetables (Chinese Style)	300 g	600 W	7½-8½
	Instructions Add 15 ml (1 tbsp) cold water. Stand for 2-3 minutes.		

MG28H5125NK_ST_DE68-04246J-05_EN.indd 32 2019-08-29 5:48:05

Cooking Guide for fresh vegetables

Use a suitable glass pyrex bowl with lid. Add 30-45 ml cold water (2-3 tbsp) for every 250 g unless another water quantity is recommended – see table. Cook covered for the minimum time – see table. Continue cooking to get the result you prefer. Stir once during and once after cooking. Add salt, herbs or butter after cooking. Cover during a standing time of 3 minutes.

Hint: Cut the fresh vegetables into even sized pieces. The smaller they are cut, the quicker they will cook.

Food	Serving Size	Power	Time (min.)
Broccoli	250 g 500 g	900 W	4½-5 7-8
	Instructions Prepare even sized florets. Arrange the stems to the centre. Stand for 3 minutes.		
Brussels Sprouts	250 g	900 W	6-6½
	Instructions Add 60-75 ml (4-5 tbsp) water. Stand for 3 minutes.		
Carrots	250 g	900 W	4½-5
	Instructions Cut carrots into even sized slices. Stand for 3 minutes.		
Cauliflower	250 g 500 g	900 W	5-5½ 7½-8½
	Instructions Prepare even sized florets. Cut big florets into halves. Arrange stems to the centre. Stand for 3 minutes.		
Courgettes	250 g	900 W	4-4½
	Instructions Cut courgettes into slices. Add 30 ml (2 tbsp) water or a knob of butter. Cook until just tender. Stand for 3 minutes.		
Egg Plants	250 g	900 W	3½-4
	Instructions Cut egg plants into small slices and sprinkle with 1 tbsp lemon juice. Stand for 3 minutes.		
Leeks	250 g	900 W	4-4½
	Instructions Cut leeks into thick slices. Stand for 3 minutes.		
Mushrooms	125 g 250 g	900 W	1½-2 2½-3
	Instructions Prepare small whole or sliced mushrooms. Do not add any water. Sprinkle with lemon juice. Spice with salt and pepper. Drain before serving. Stand for 3 minutes.		
Onions	250 g	900 W	5-5½
	Instructions Cut onions into slices or halves. Add only 15 ml (1 tbsp) water. Stand for 3 minutes.		
Pepper	250 g	900 W	4½-5
	Instructions Cut pepper into small slices. Stand for 3 minutes.		
Potatoes	250 g 500 g	900 W	4-5 7-8
	Instructions Weigh the peeled potatoes and cut them into similar sized halves or quarters. Stand for 3 minutes.		
Turnip Cabbage	250 g	900 W	5½-6
	Instructions Cut turnip cabbage into small cubes. Stand for 3 minutes.		

MG28H5125NK_ST_DE68-04246J-05_EN.indd 33 2019-08-29 5:48:05

Cooking Guide for rice and pasta

Rice: Use a large glass pyrex bowl with lid – rice doubles in volume during cooking. Cook covered.
After the cooking time is over, stir before standing time and salt or add herbs and butter.
Remark: the rice may not have absorbed all water after the cooking time is finished.

Pasta: Use a large glass pyrex bowl. Add boiling water, a pinch of salt and stir well. Cook uncovered.
Stir occasionally during and after cooking. Cover during standing time and drain thoroughly afterwards.

Food	Serving Size	Power	Time (min.)
White Rice (Parboiled)	250 g 375 g	900 W	15-16 17½-18½
	Instructions Add 500 ml cold water.(250 g), Add 750 ml cold water.(375 g) Stand for 5 minutes.		
Brown Rice (Parboiled)	250 g 375 g	900 W	20-21 22-23
	Instructions Add 500 ml cold water.(250 g), Add 750 ml cold water.(375 g) Stand for 5 minutes.		
Mixed Rice (Rice + Wild Rice)	250 g	900 W	16-17
	Instructions Add 500 ml cold water. Stand for 5 minutes.		
Mixed Corn (Rice + Grain)	250 g	900 W	17-18
	Instructions Add 400 ml cold water. Stand for 5 minutes.		
Pasta	250 g	900 W	10-11
	Instructions Add 1000 ml hot water. Stand for 5 minutes.		

REHEATING

Your microwave oven will reheat food in a fraction of the time that conventional ovens hobs normally take.
Use the power levels and reheating times in the following chart as a guide. The times in the chart consider liquids with a room temperature of about +18 to +20 °C or a chilled food with a temperature of about +5 to +7 °C.

Arranging and covering

Avoid reheating large items such as joint of meat – they tend to overcook and dry out before the centre is piping hot. Reheating small pieces will be more successful.

Power levels and stirring

Some foods can be reheated using 900 W power while others should be reheated using 600 W, 450 W or even 300 W.
Check the tables for guidance. In general, it is better to reheat food using a lower power level, if the food is delicate, in large quantities, or if it is likely to heat up very quickly (mince pies, for example).
Stir well or turn food over during reheating for best results. When possible, stir again before serving.
Take particular care when heating liquids and baby foods. To prevent eruptive boiling of liquids and possible scalding , stir before, during and after heating. Keep them in the microwave oven during standing time. We recommend putting a plastic spoon or glass stick into the liquids. Avoid overheating (and therefore spoiling) the food.
It is preferable to underestimate cooking time and add extra heating time, if necessary.

Heating and standing times

When reheating food for the first time, it is helpful to make a note of the time taken – for future reference.
Always make sure that the reheated food is piping hot throughout.
Allow food to stand for a short time after reheating - to let the temperature even out.
The recommended standing time after reheating is 2-4 minutes, unless another time is recommended in the chart.
Take particular care when heating liquids and baby food. See also the chapter with the safety precautions.

MG28H5125NK_ST_DE68-04246J-05_EN.indd 34 2019-08-29 5:48:05

REHEATING LIQUIDS

Always allow a standing time of at least 20 seconds after the oven has been switched off to allow the temperature to even out. Stir during heating, if necessary, and ALWAYS stir after heating. To prevent eruptive boiling and possible scalding, you should put a spoon or glass stick into the beverages and stir before, during and after heating.

REHEATING BABY FOOD

BABY FOOD:

Empty into a deep ceramic plate. Cover with plastic lid. Stir well after reheating! Let stand for 2-3 minutes before serving. Stir again and check the temperature. Recommended serving temperature: between 30-40 °C.

BABY MILK:

Pour milk into a sterilised glass bottle. Reheat uncovered. Never heat a baby's bottle with teat on, as the bottle may explode if overheated. Shake well before standing time and again before serving ! Always carefully check the temperature of baby milk or food before giving it to the baby. Recommended serving temperature: ca. 37 °C.

REMARK:

Baby food particularly needs to be checked carefully before serving to prevent burns. Use the power levels and times in the next table as a guide lines for reheating.

Reheating Liquids and Food

Use the power levels and times in this table as a guide lines for reheating.

Food	Serving Size	Power	Time (min.)
Drinks (Coffee, Tea and Water)	150 ml (1 cup) 300 ml (2 cups) 450 ml (3 cups) 600 ml (4 cups)	900 W	1-1½ 2-2½ 3-3½ 3½-4
	Instructions Pour into cups and reheat uncovered: 1 cup in the centre, 2 cups opposite of each other, 3 cups in a circle. Keep in microwave oven during standing time and stir well. Stand for 1-2 minutes.		
Soup (Chilled)	250 g 350 g 450 g 550 g	900 W	2½-3 3-3½ 3½-4 4½-5
	Instructions Pour into a deep ceramic plate or deep ceramic bowl. Cover with plastic lid. Stir well after reheating. Stir again before serving. Stand for 2-3 minutes.		
Stew (Chilled)	350 g	600 W	4½-5½
	Instructions Put stew in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving. Stand for 2-3 minutes.		

MG28H5125NK_ST_DE68-04246J-05_EN.indd 35 2019-08-29 5:48:05

Food	Serving Size	Power	Time (min.)
Pasta with Sauce (Chilled)	350 g	600 W	3½-4½
	Instructions Put pasta (e.g. spaghetti or egg noodles) on a flat ceramic plate. Cover with microwave cling film. Stir before serving. Stand for 3 minutes.		
Filled Pasta with Sauce (Chilled)	350 g	600 W	4-5
	Instructions Put filled pasta (e.g. ravioli, tortellini) in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving. Stand for 3 minutes.		
Plated Meal (Chilled)	350 g 450 g	600 W	4½-5½ 5½-6½
	Instructions Plate a meal of 2-3 chilled components on a ceramic dish. Cover with microwave cling-film. Stand for 3 minutes.		
Cheese Fondue Ready-To-Serve (Chilled)	400 g	600 W	6-7
	Instructions Put the ready-to-serve cheese fondue in a suitable sized glass pyrex bowl with lid. Stir occasionally during and after reheating. Stir well before serving. Stand for 1-2 minutes.		

Reheating Baby Food and Milk

Use the power levels and times in this table as guide lines for reheating.

Food	Serving Size	Power	Time
Baby Food (Vegetables + Meat)	190 g	600 W	30 sec.
	Instructions Empty into ceramic deep plate. Cook covered. Stir after cooking time. Before serving, stir well and check the temperature carefully. Stand for 2-3 minutes.		
Baby Porridge (Grain + Milk + Fruit)	190 g	600 W	20 sec.
	Instructions Empty into ceramic deep plate. Cook covered. Stir after cooking time. Before serving, stir well and check the temperature carefully. Stand for 2-3 minutes.		
Baby Milk	100 ml 200 ml	300 W	30-40 sec. 1 min. to 1 min. 10 sec.
	Instructions Stir or shake well and pour into a sterilised glass bottle. Place into the centre of turn-table. Cook uncovered. Shake well and stand for at least 3 minutes. Before serving, shake well and check the temperature carefully.		

MG28H5125NK_ST_DE68-04246J-05_EN.indd 36 2019-08-29 5:48:05

DEFROSTING

Microwaves are an excellent way of defrosting frozen food. Microwaves gently defrost frozen food in a short period of time. This can be of great advantage, if unexpected guests suddenly show up.

Frozen poultry must be thoroughly thawed before cooking. Remove any metal ties and take it out of any wrapping to allow thawed liquid to drain away.

Put the frozen food on a dish without cover. Turn over half way, drain off any liquid and remove any giblets as soon as possible. Check the food occasionally to make sure that it does not feel warm.
If smaller and thinner parts of the frozen food start to warm up, they can be shield by wrapping very small strips of aluminium foil around them during defrosting.

Should poultry start to warm up on the outer surface, stop thawing and allow it to stand for 20 minutes before continuing. Leave the fish, meat and poultry to stand in order to complete defrosting. The standing time for complete defrosting will vary depending on the quantity defrosted. Please refer to the table below.

Hint: Flat food defrosts better than thick and smaller quantities need less time than bigger ones. Remember this hint while freezing and defrosting food.

For defrosting of frozen food with a temperature of about -18 to - 20 °C, use the following table as a guide.

Food	Serving Size	Power	Time (min.)
Meat			
Minced Meat	250 g 500 g	180 W	6-7 9-12
Pork Steaks	250 g	180 W	5-7
	Instructions Place the meat on turntable. Shield thinner edges with aluminium foil. Turn over after half of defrosting time! Stand for 15-30 minutes.		

Food	Serving Size	Power	Time (min.)
Poultry			
Chicken Pieces	500 g (2 pcs)	180 W	14-15
Whole Chicken	1200 g	180 W	32-34
	Instructions First, put chicken pieces first skin-side down, whole chicken first breast-side-down on a flat ceramic plate. Shield the thinner parts like wings and ends with aluminium foil. Turn over after half of defrosting time! Stand for 15-60 minutes.		
Fish			
Fish Fillets	200 g	180 W	6-7
Whole Fish	400 g	180 W	11-13
	Instructions Put frozen fish in the middle of a flat ceramic plate. Arrange the thinner parts under the thicker parts. Shield narrow ends of fillets and tail of whole fish with aluminium foil. Turn over after half of defrosting time! Stand for 10-25 minutes.		
Fruit			
Berries	300 g	180 W	6-7
	Instructions Spread fruit on a flat, round glass dish (with a large diameter). Stand for 5-10 minutes.		
Bread			
Bread Rolls (Each ca. 50 g)	2 pcs 4 pcs	180 W	1-1½ 2½-3
Toast/Sandwich	250 g	180 W	4-4½
German Bread (Wheat + Rye Flour)	500 g	180 W	7-9
	Instructions Arrange rolls in a circle or bread horizontally on kitchen paper in the middle of turntable. Turn over after half of defrosting time! Stand for 5-20 minutes.		

MG28H5125NK_ST_DE68-04246J-05_EN.indd 37 2019-08-29 5:48:05

GRILL

The grill-heating element is located underneath the ceiling of the cavity. It operates while the door is closed and the turntable is rotating. The turntable's rotation makes the food brown more evenly. Preheating the grill for 3-5 minutes will make the food brown more quickly.

Cookware for grilling:
Should be flameproof and may include metal. Do not use any type of plastic cookware, as it can melt.

Food suitable for grilling:
Chops, sausages, steaks, hamburgers, bacon and gammon rashers, thin fish portions, sandwiches and all kinds of toast with toppings.

Important remark:
Whenever the grill only mode is used, please remember that food must be placed on the high rack, unless another instruction is recommended.

MICROWAVE + GRILL

This cooking mode combines the radiant heat that is coming from the grill with the speed of microwave cooking. It operates only while the door is closed and the turntable is rotating. Due to the rotation of the turntable, the food browns evenly. Three combination modes are available with this model:
600 W + Grill, 450 W + Grill and 300 W + Grill.

Cookware for cooking with microwaves + grill
Please use cookware that microwaves can pass through. Cookware should be flameproof. Do not use metal cookware with combination mode. Do not use any type of plastic cookware, as it can melt.

Food suitable for microwaves + grill cooking:
Food suitable for combination mode cooking include all kinds of cooked food which need reheating and browning (e.g. baked pasta), as well as foods which require a short cooking time to brown the top of the food. Also, this mode can be used for thick food portions that benefit from a browned and crispy top (e.g. chicken pieces, turning them over half way through cooking). Please refer to the grill table for further details.

Important remark:
Whenever the combination mode (microwave + grill) is used, the food should be placed on the high rack, unless another instruction is recommended. Please refer to the instructions in the following chart.
The food must be turned over, if it is to be browned on both sides.

MG28H5125NK_ST_DE68-04246J-05_EN.indd 38 2019-08-29 5:48:05

Grill Guide for fresh and frozen foods

Preheat the grill with the grill-function for 3 minutes.
Use the power levels and times in this table as guide lines for grilling.

Use oven gloves when taking out.

Fresh Food	Serving Size	Power	1 step (min.)	2 step (min.)
Toast Slices	4pcs (each 25 g)	Grill only	3-4	2-3
	Instructions Put toast slices side by side on the high rack.			
Grilled Tomatoes	400 g (2 pcs)	300 W + Grill	5-6	-
	Instructions Cut tomatoes into halves. Put some cheese on top. Arrange in a circle in a flat glass pyrex dish. Place it on the high rack. Stand for 2-3 minutes.			
Tomato-Cheese Toast	4 pcs (300 g)	300 W + Grill	4 -5	-
	Instructions Toast the bread slices first. Put the toast with topping on the high rack. Stand for 2-3 minutes			
Baked Potatoes	500 g	600 W + Grill	7-8	-
	Instructions Cut potatoes into halves. Put them in a circle on the high rack with the cut side to the grill.			
Frozen Lasagne	400 g	300 W + Grill Grill only	18½-19½ 1-2	-
	Instructions Put the fresh gratin into a small ovenproof dish. Put the dish on the turntable. After cooking stand for 2-3 minutes.			
Baked Apples	2 apples (ca. 400 g)	300 W + Grill	7-8	-
	Instructions Core the apples and fill them with raisins and jam. Put some almond slices on top. Put apples on a flat glass pyrex dish. Place the dish directly on the low rack.			
Chicken Pieces	500 g (2 pcs)	300 W + Grill	8-10	6-8
	Instructions Brush chicken pieces with oil and spices. Put them in a circle on the high rack. After grilling stand for 2-3 minutes.			
Roast Chicken	1200 g	450 W + Grill turnover 300 W + Grill	21-22	 21-22
	Instructions Brush the chicken oil and spices. Put in an ovenproof dish and place on turntable. After grilling stand for 5 minutes.			
Roast Fish	400-500 g	300 W + Grill	5-7	5½-6½
	Instructions Brush skin of whole fish with oil and add herbs and spices. Put two fish side by side (head to tail) on the high rack. After grilling stand for 2-3 minutes.			

MG28H5125NK_ST_DE68-04246J-05_EN.indd 39 2019-08-29 5:48:05

TIPS AND TRICKS

MELTING CRYSTALLIZED HONEY

Put 20 g crystallized honey into a small deep glass dish.
Heat for 20-30 seconds using 300 W, until honey is melted.

MELTING GELATINE

Lay dry gelatine sheets (10 g) for 5 minutes into cold water.
Put drained gelatine into a small glass pyrex bowl.
Heat for 1 minute using 300 W.
Stir after melting.

COOKING GLAZE/ICING (FOR CAKE AND GATEAUX)

Mix instant glaze (approximately 14 g) with 40 g sugar and 250 ml cold water.
Cook uncovered in a glass pyrex bowl for 3½ to 4½ minutes using 900 W, until glaze/icing is transparent. Stir twice during cooking.

COOKING JAM

Put 600 g fruits (for example mixed berries) in a suitable sized glass pyrex bowl with lid.
Add 300 g preserving sugar and stir well.
Cook covered for 10-12 minutes using 900 W.
Stir several times during cooking. Empty directly into small jam glasses with twist-off lids.
Stand on lid for 5 minutes.

COOKING PUDDING/ CUSTARD

Mix pudding powder with sugar and milk (500 ml) by following the manufacturers instructions and stir well. Use a suitable sized glass pyrex bowl with lid. Cook covered for 6½ to 7½ minutes using 900 W.
Stir several times well during cooking.

BROWNING ALMOND SLICES

Spread 30 g sliced almonds evenly on a medium sized ceramic plate.
Stir several times during browning for 3½ to 4½ minutes using 600 W.
Let it stand for 2-3 minutes in the oven. Use oven gloves while taking out!

troubleshooting and error code

TROUBLESHOOTING

If you have any of the problems listed below try the solutions given.

This is normal.

- Condensation inside the oven.
- Air flow around the door and outer casing.
- Light reflection around the door and outer casing.
- Steam escaping from around the door or vents.

The oven does not start when you press the START/+30s button.

- Is the door completely closed?

The food is not cooked at all.

- Have you set the timer correctly and/or pressed the **START/+30s** button?
- Is the door closed?
- Have you overloaded the electric circuit and caused a fuse to blow or a breaker to be triggered?

The food is either overcooked or undercooked.

- Was the appropriate cooking length set for the type of food?
- Was an appropriate power level chosen?

The light bulb is not working.

- The Light bulb should not be replaced in person for safety reasons. Please contact nearest authorised Samsung customer care, to arrange for a qualified engineer to replace the bulb.

The oven causes interference with radios or televisions.

- Slight interference may be observed on televisions or radios when the oven is operating. This is normal. To solve this problem, install the oven away from televisions, radios and aerials.
- If interference is detected by the oven's microprocessor, the display may be reset. To solve this problem, disconnect the power plug and reconnect it. Reset the time.

MG28H5125NK_ST_DE68-04246J-05_EN.indd 40 2019-08-29 5:48:05

Sparking and cracking occur inside the oven (arcing).

- Have you used a dish with metal trimmings?
- Have you left a fork or other metal utensil inside the oven?
- Is aluminum foil too close to the inside walls?

Smoke and bad smell when initial operating.

- It's a temporary condition by new component heating. Smoke and smell will disappear completely after 10 minutes operation.
  To remove smell more quickly, please operate microwave oven with putting lemon formation or lemon juice in the cabinet.

If the above guidelines do not enable you to solve the problem, then contact your local SAMSUNG customer service centre.
Please have the following information read;

- The model and serial numbers, normally printed on the rear of the oven
- Your warranty details
- A clear description of the problem

Then contact your local dealer or SAMSUNG aftersales service.

ERROR CODE

"SE" message indicates.

- Clean the keys and check if there is water on the surface around key. Turn off the microwave oven and try setting again. If it occurs again, call your local SAMSUNG Customer Care Centre.

"E-12" message indicates.

- The "E-12" message is Gas Sensor Short. This error may occur because of the high humidity in the cavity when you operate the microwave oven once again shortly after the previous operation of microwave oven for some food is finished.
  In this case, because there is a possibility that the Gas Sensor is not out of order turn off the microwave oven and try setting again. If this error occurs again, call your local SAMSUNG Customer Care Centre.

For any codes not listed above, or if the suggested solution does not solve the problem, contact your local SAMSUNG Customer Care Centre.

technical specifications

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

Model	MG28H5125**
Power source	220 V ~ 50 Hz
Power consumption Maximum power Microwave Grill (heating element)	 2750 W 1400 W 1350 W
Output power	100 W / 900 W - 6 levels (IEC-705)
Operating frequency	2450 MHz
Dimensions (W x D x H) Outside Oven cavity	 517 x 441.6 x 297.3 mm 358 x 351 x 236 mm
Volume	28 liter
Weight Net	 16.1 kg approx.

MG28H5125NK_ST_DE68-04246J-05_EN.indd 41 2019-08-29 5:48:06

SAMSUNG

QUESTIONS OR COMMENTS?

COUNTRY / LOCATION	CALL	OR VISIT US ONLINE AT
AUSTRALIA	1300 362 603	www.samsung.com/au/support
NEW ZEALAND	0800 726 786	www.samsung.com/nz/support
CHINA	400-810-5858	www.samsung.com/cn/support
HONG KONG	3698 4698	www.samsung.com/hk/support (Chinese) www.samsung.com/hk_en/support (English)
INDIA	1800 40 SAMSUNG (1800 40 7267864) (Toll-Free) 1800 5 SAMSUNG (1800 5 7267864) (Toll-Free)	www.samsung.com/in/support
BANGLADESH	09612300300 08000300300 (Toll free)	www.samsung.com/support
INDONESIA	021-5699-7777 0800-112-8888 (All Product, Toll Free)	www.samsung.com/id/support
JAPAN	0120-363-905	www.galaxymobile.jp/jp/support
MALAYSIA	1800-88-9999 +603-7713 7420 (Overseas contact)	www.samsung.com/my/support
PHILIPPINES	1-800-10-726-7864 [PLDT Toll Free] 1-800-8-726-7864 [Globe Landline and Mobile] 02-422-2111 [Standard Landline]	www.samsung.com/ph/support

COUNTRY / LOCATION	CALL	OR VISIT US ONLINE AT
SINGAPORE	1800 7267864 | 1800-SAMSUNG	www.samsung.com/sg/support
THAILAND	0-2689-3232 1800-29-3232 (Toll free)	www.samsung.com/th/support
TAIWAN	0800-32-9999	www.samsung.com/tw/support
VIETNAM	1800 588 889	www.samsung.com/vn/support
MYANMAR	+95-1-2399-888	www.samsung.com/mm/support
MACAU	0800 333	www.samsung.com/hk/support (Chinese) www.samsung.com/hk_en/support (English)
SRI LANKA	011 SAMSUNG (011 7267864)	www.samsung.com/support
CAMBODIA	+855-23-993232 1800-20-3232 (Toll free)	www.samsung.com/th/support
LAOS	+856-214-17333	www.samsung.com/th/support
NEPAL	16600172667 (Toll Free for NTC Only) 9801572667 (Toll Free for Ncell users)	www.samsung.com/support

DE68-04246J-05