Auto-chess board markers

Print at 100% (no 'fit to page'). Marker size 15 mm. Cut each one out, keeping its white margin.

Tape one flat on the board near each corner: all four must never move relative to the board.

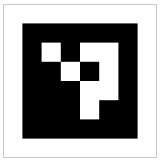

0: a1 corner

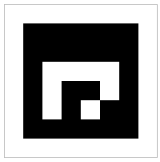

1: h1 corner

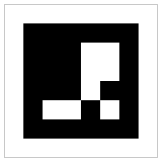

2: a8 corner

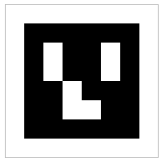

3: h8 corner

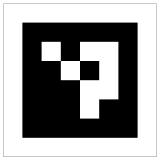

0: a1 corner

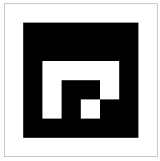

1: h1 corner

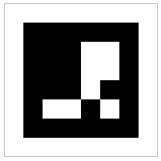

2: a8 corner

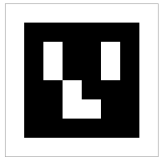

3: h8 corner