beekeeb

DASBOB Keyboard

Copy

Github Repo: https://github.com/GroooveBob/DASBOB ↗

Layout Tester

You can view this at 100% on a computer screen, or a tablet. You can also print this on a paper.

dasbob-keyboard.pdf
PDF · 568KB
Download Open

Compiled Vial Firmware (RP2040)

dasbob_vial_rp2040.uf2
93KB
Download Open

DIY Kit / Pre-built Dasbob

https://shop.beekeeb.com/product/dasbob-split-keyboard-pcb-kit/ ↗


https://shop.beekeeb.com/product/dasbob-split-keyboard-pcb-kit/
shop.beekeeb.com

Photo Build Logs

Step 1: Flash and test the controllers


1. Connect the Sea Picro to the computer using a USB data cable.
2. Use tweezers to briefly connect the GND and RST pins for 2 seconds. Avoid shorting the 5V and GND pins to prevent controller damage.

3. Drag the .uf2 file of the DASBOB firmware onto the RPI-RP2 drive to flash the controller.
4. Open VIAL and check if the "DASBOB" keyboard is detected after flashing the controller.
5. If VIAL successfully recognizes the keyboard, then you are ready to proceed to the next step.

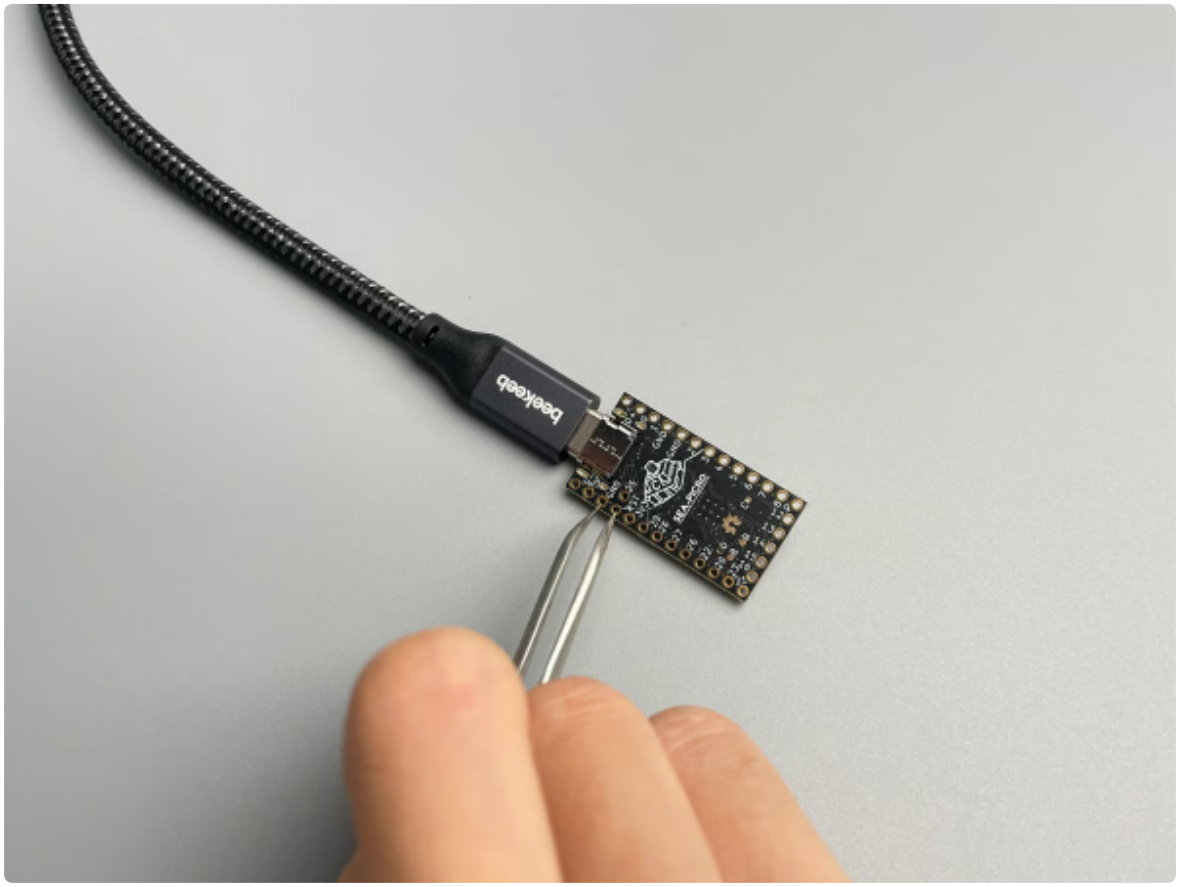

Step 2: Solder the components on the board

Here is the photo of the Right board of DASBOB

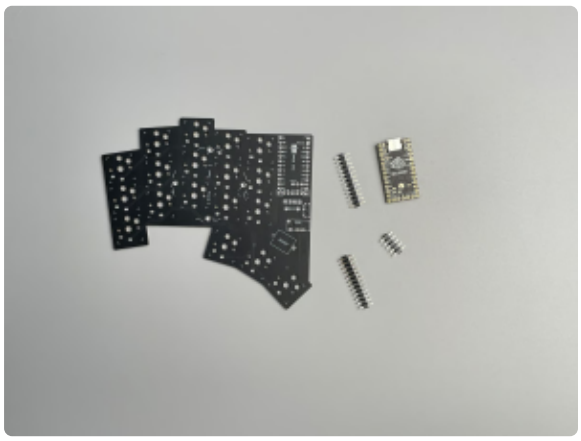



Front side of the Left board




Back side of the Left board (with the hotswap socket footprints)

To connect the controller, you will need to use the 12p and 5p pins. Insert these pins into the front side of the board, ensuring that the controller components are facing down towards the PCB.

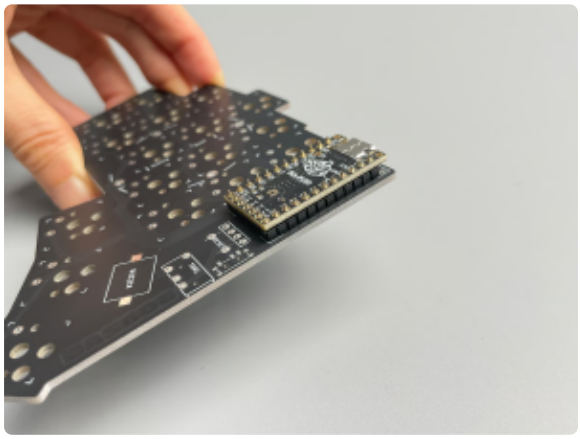


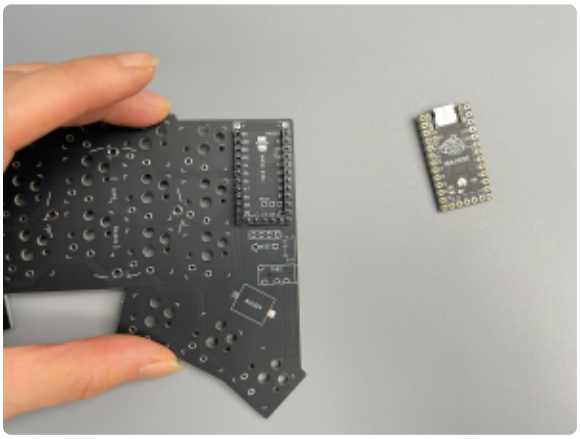


Solder the pins (I normally solder the pins on the back side first)

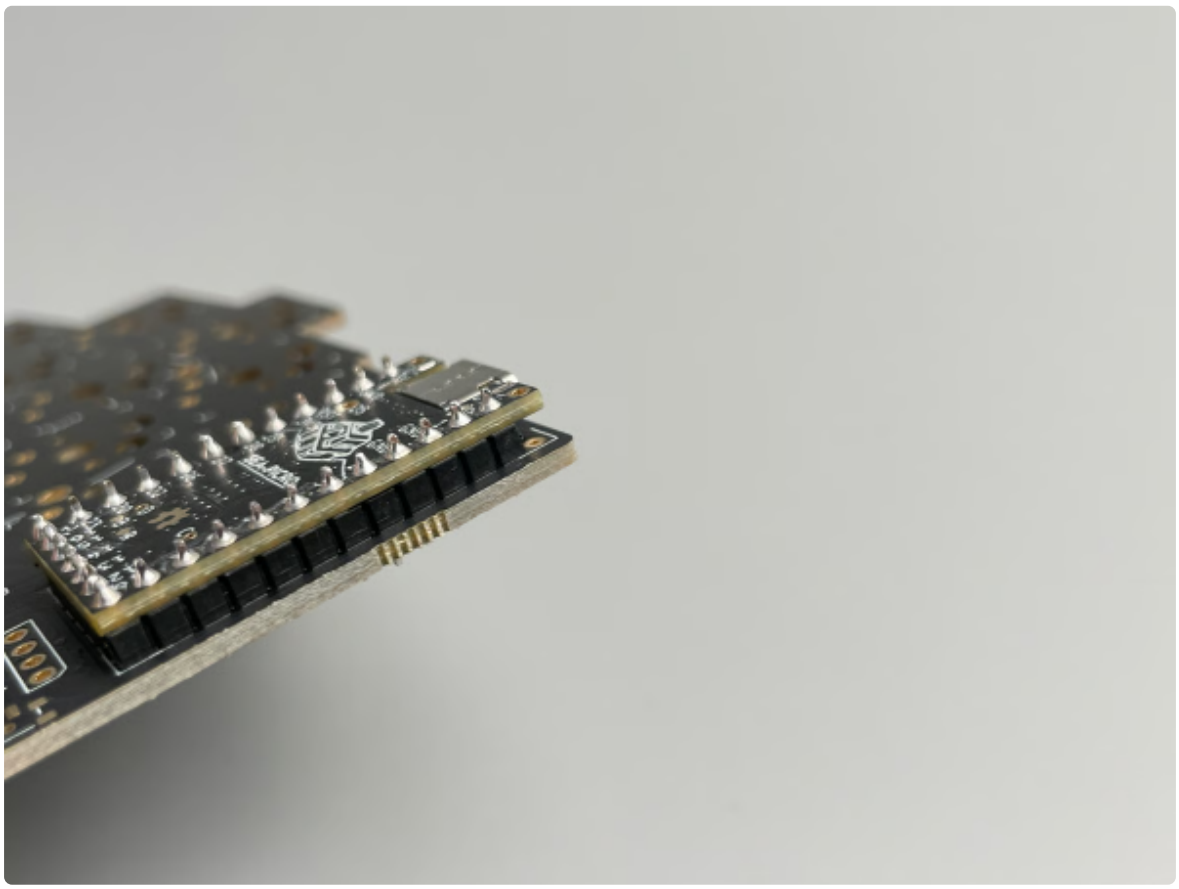

Solder the other components (reset buttons, TRRS jacks and hotswap sockets) to the board

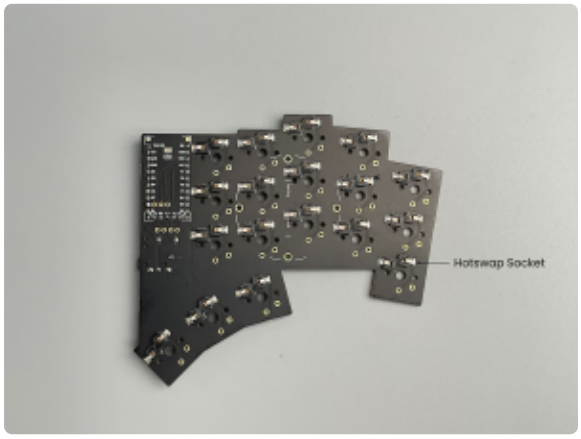


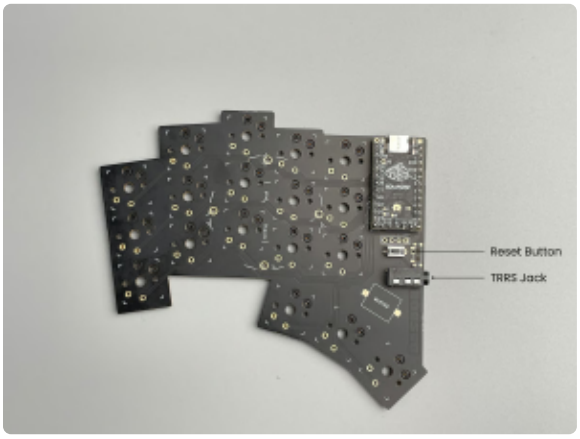

Last Step: Jumpers for Wired Builds

For wired builds, you'll need to close two solder bridge jumpers as shown below.

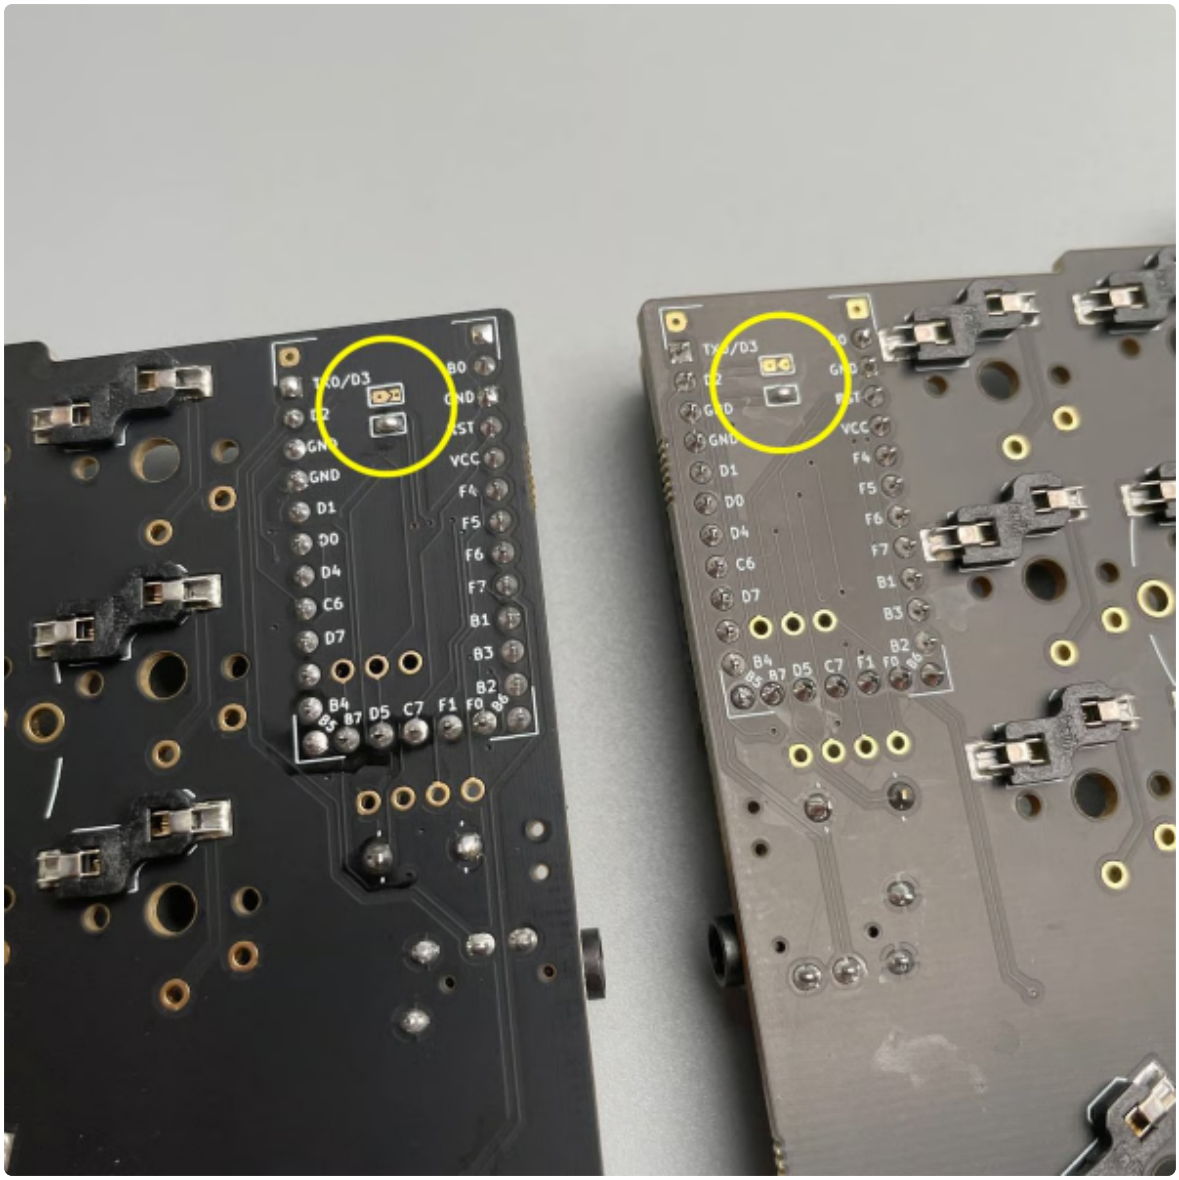



TX0/D3
RX1/D2
GND
GND
D1
D0
D4
C6
D7
B4
B5
B7
D5
C7
F1
F0
B6
B2
B3
B1
F7
F6
F5
F4
VCC
RST
GND
D0

Done :)

After cleaning the board, you can insert the key switches to the hotswap sockets and connect the 2 halves of the board using the TRRS cable.

Important: Please fully connect the TRRS cable, then connect the USB data cable. Do not plug/unplug the TRRS cable when the keyboard is powered.

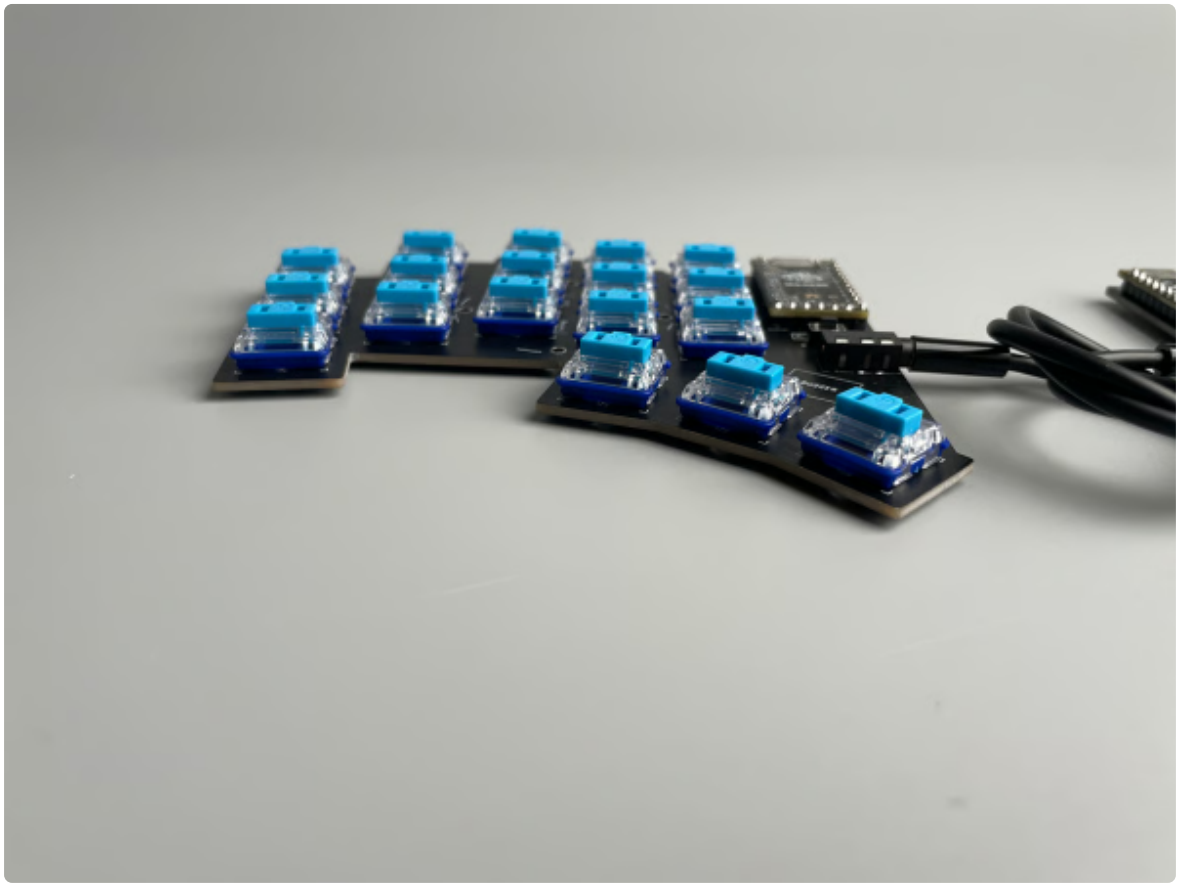

Previous
Dao Choc BLE Keyboard

Next
FelixKeeb

Last updated 2 years ago