KNOWLES & SKRODERMOOSE

THE ALL HALLOWS

SPOOKY PUMPKIN EYES™


The WiFi Brain Transplant

New in 2026

- **DESIGN YOUR OWN SHOW.** Line up effects and your own messages on your phone: it plays them every time it's switched on.
- **A BUTTON PAD ON YOUR PHONE.** About 50 effects (creepers, a witch on a broomstick, Pac-Man, a Nether portal, lots more Minecraft), each cutting in instantly.
- **A TALKING PUMPKIN.** Your phone speaks along.
- **YOUR OWN WORDS** scroll across its glowing eyes.
- **NO LAPTOP OR CABLE.** It lives on your home WiFi.
- **NEW EFFECTS LATER** by WiFi: no more brain surgery.
- **KINDER TO BATTERIES.** WiFi switches itself off when nobody's using it (switch off and on to wake it).

1 **SWITCH OFF.** Switch the battery pack off (the switch is on its back).

2 **MOVE THE WIRES.** Unplug each wire from the old Pico (keep it: it still works) and push it onto the new ESP32-C3 by where its other end goes. **Your wire colours may not match the drawing** (only red + and black – are usual).

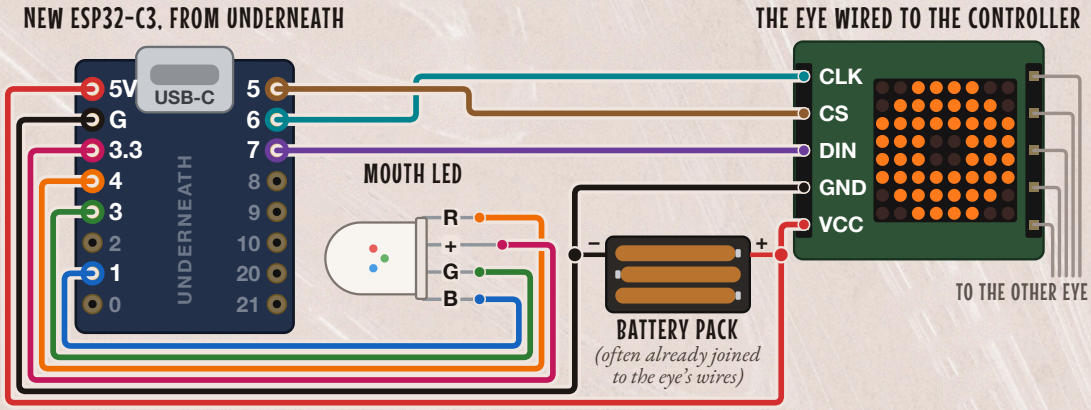

The mouth LED's long leg (+) must go on 3.3. Short legs mixed up? Any order works: the mouth just shows other colours. Two separate + (or –) wires? Twist both onto the pin. **Match the pin names printed on the ESP32-C3.**

3 **SWITCH ON.** The eyes start their show and, the first time, scroll the WiFi details for step 4. It's alive!

4 **INTRODUCE IT TO YOUR WIFI** (first time only). On a phone, join the WiFi called **Spooky Pumpkin**, password **spookyeyes** (if it says "no internet", choose *Use without internet* or *Stay connected*). A page pops up (if not within 20 seconds, open **192.168.4.1**): name your pumpkin (e.g. *Jack's Pumpkin*), pick your home WiFi, enter its password and tap **Check and save**. It only sees 2.4 GHz WiFi: pick your main network, not a guest one (if there are two, the one ending *2.4G*).

5 **PLAY.** It restarts, joins your home WiFi and scrolls its address, made from its name, e.g. **http://jacks-pumpkin.local** or numbers like **192.168.1.23**: open it on a phone or computer on your WiFi for everything above, and Settings (if the name won't open, common on Android, use the numbers). Eyes say *Join WiFi* again? Probably a wrong password: join the pumpkin's WiFi and retry (the page says what went wrong).



ON THE DOORSTEP? If it loses your home WiFi for 3 minutes, it makes its own: join it and open **192.168.4.1**. It goes back to your WiFi by itself.

BOOT BUTTON: a quick press repeats the address, or the setup message (which stops after 15 minutes). Hold it for 5 seconds to forget your home WiFi.

HUNGRY BRAIN: fresh AA batteries, or a USB power bank in the USB-C socket (battery pack off). WiFi switches off after 10 minutes with nobody using it; switch off and on (or press BOOT) to get it back.