KNOWLES & SKRODERMOOSE

THE ALL HALLOWS

SPOOKY PUMPKIN EYES™


The WiFi Brain Transplant

New in 2026

DESIGN YOUR OWN SHOW · A BUTTON PAD TO TRIGGER EFFECTS · A TALKING PUMPKIN · YOUR OWN WORDS · LONGER BATTERY LIFE

1 SWITCH OFF.

2 **MOVE THE WIRES.** Unplug each wire from the old Pico and push it onto the new ESP32-C3 by where its other end goes. **Your wire colours may not match the drawing** (except red and black, which are standard).

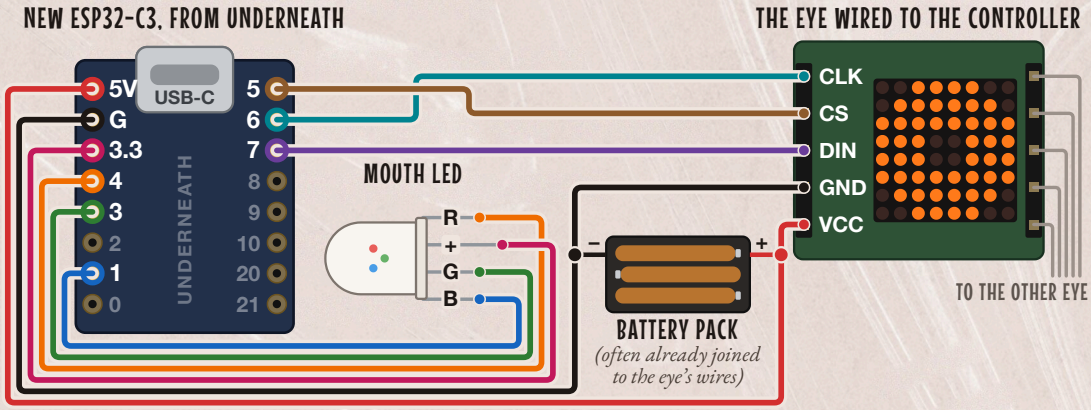

The mouth LED's long leg (+) must go on 3.3. Short legs mixed up? Any order works: the mouth just shows other colours. Two separate + (or −) wires? Twist both onto the pin. **Match the pin names printed on the ESP32-C3.**

3 **BRING YOURSELF BACK ONLINE, DOLORES.** Turn it on. The eyes start their show. It's alive!

JOIN	**Spooky Pumpkin**	SETUP PAGE	**192.168.4.1**
PASSWORD	**spookyeyes**	ON YOUR WIFI	**http://pumpkin.local**

4 **INTRODUCE IT TO YOUR WIFI** (optional). On a phone, tablet or laptop, join the pumpkin's WiFi (above). A setup page pops up: name your pumpkin, pick your home WiFi (2.4 GHz, not a guest one), enter its password and tap **Check and save**. Your password stays on the pumpkin: it's never sent anywhere else. No WiFi? It plays its show anyway.

5 **PLAY.** It restarts, joins your WiFi, scrolls its address once and carries on with its show. Open **http://pumpkin.local** on a phone, tablet or laptop on your WiFi (on Android, type the numbers it scrolls instead).

Page won't open? With nobody using it for 10 minutes, the WiFi sleeps to save batteries: press BOOT, or switch off and on.

On the doorstep? Away from your WiFi for 3 minutes, it makes its own again: join it and open 192.168.4.1. It goes back to your WiFi by itself.

BOOT button (on the board): a quick press repeats the address or WiFi details; hold it for 5 seconds to forget your home WiFi.