KNOWLES & SKRODERMOOSE


THE ALL HALLOWS

SPOOKY PUMPKIN EYES™

The WiFi Brain Transplant

1 **SWITCH OFF.** Switch the battery pack off (the switch is on its back).

2 **MOVE THE WIRES.** Move the 9 wires to the new board **one at a time**: pull a wire off the Pico, check which pin it was on, push it onto the matching new pin. Colours vary, so go by the pins (the eye board has its pin names printed on it; the mouth LED's long leg is +). Keep the Pico: it still works.

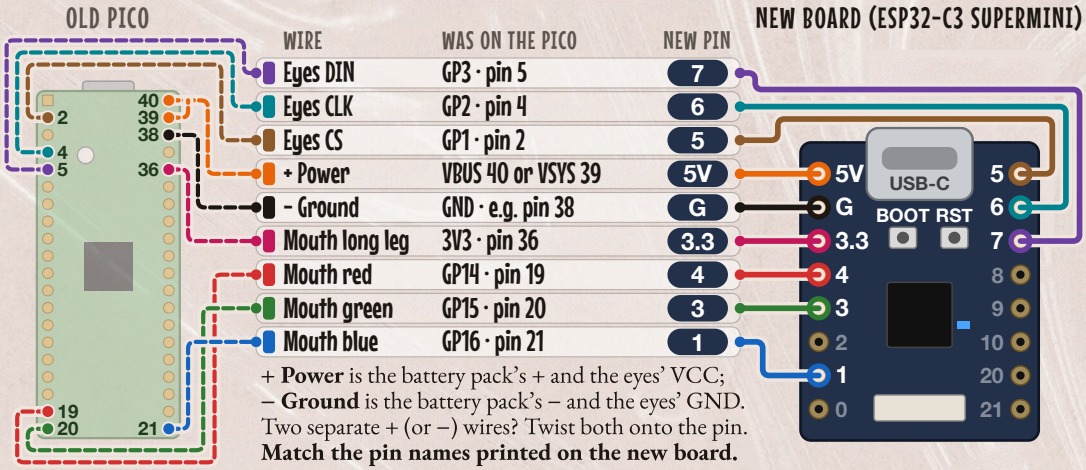

+ Power is the battery pack's + and the eyes' VCC;
– Ground is the battery pack's – and the eyes' GND.
Two separate + (or –) wires? Twist both onto the pin.
Match the pin names printed on the new board.

3 **SWITCH ON.** The eyes may stare for up to 30 seconds while it looks for WiFi, then (the first time) scroll the WiFi name, password and address for step 4. It's alive!

4 **INTRODUCE IT TO YOUR WIFI** (first time only). On a phone, join the WiFi called **Spooky Pumpkin**, password **spookyeyes**. If the phone says "no internet", choose *Use without internet* or *Stay connected*. A page pops up (if not within 20 seconds, open **192.168.4.1**): give your pumpkin a name (e.g. *Jack's Pumpkin*), pick your home WiFi, enter its password and tap **Save**. It only sees 2.4 GHz WiFi: pick your main network, not a guest one (if there are two, the one ending *2.4G*).

5 **PLAY.** It restarts, joins your home WiFi and scrolls its address, made from its name, e.g. **http://jacks-pumpkin.local** or numbers like **192.168.1.23**. Open it on a phone or computer on your WiFi for the button page: dozens of effects, a talking pumpkin (your phone speaks), your own words on the eyes, and Settings for brightness and name. If the name won't open (common on Android), use the numbers. Eyes say *Join WiFi* again? Probably a wrong password: join the pumpkin's WiFi and try again (the page says what went wrong).

ON THE DOORSTEP? If it loses your home WiFi for 3 minutes, it makes its own: join it and open **192.168.4.1**. It goes back to your WiFi by itself.

BOOT BUTTON: a quick press repeats the address, or the setup message (which stops after 15 minutes). Hold it for 5 seconds to forget your home WiFi.

HUNGRY BRAIN: fit fresh AA batteries, or plug a USB power bank into the USB-C socket (battery pack off).