KNOWLES & SKRODERMOOSE

THE ALL HALLOWS

SPOOKY PUMPKIN EYES™

The WiFi Brain Transplant

COLOUR PDF


or visit
github.com/Pharkie/pico-pumpkin

New in 2026

- DESIGN YOUR OWN SHOW
- A BUTTON PAD TO TRIGGER EFFECTS
- A TALKING PUMPKIN *(on your phone)*
- YOUR OWN WORDS
- LONGER BATTERY LIFE

1 **SWITCH SPOOKY EYES OFF.**

2 **CONNECT THE WIRES.** Connect each wire to the new ESP32-C3.

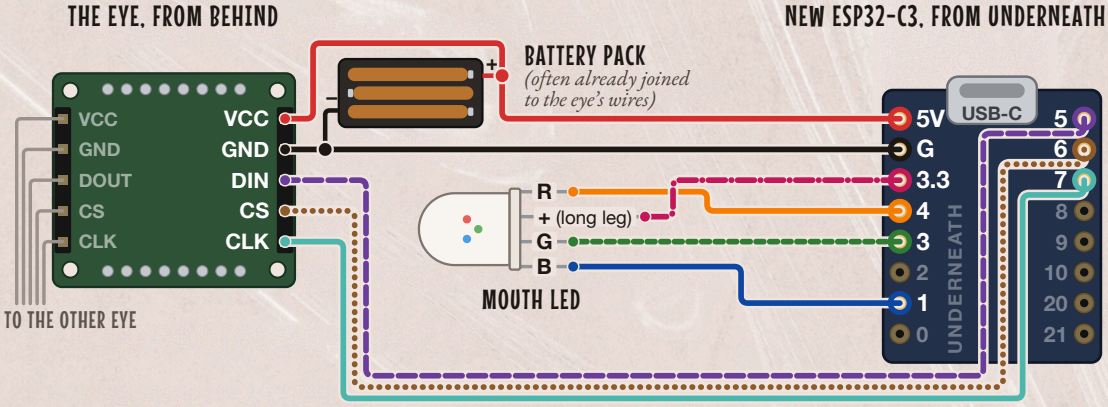

3 **POWER ON.** Switch Spooky Eyes on: the eyes start their show.

4 **CONNECT TO YOUR WIFI** (optional). On a phone, tablet or laptop, join the WiFi Spooky Eyes makes:

NETWORK	PASSWORD	SETUP PAGE
Spooky Pumpkin	**spookyeyes**	**pumpkin.local** or **192.168.4.1**

After a few seconds, a setup page should open (if not, tap **Sign in** or open the setup page above): name your pumpkin, pick your WiFi (2.4 GHz), enter your WiFi password and tap **Connect**.

5 **ENJOY.** Open **http://pumpkin.local** on your phone (if that doesn't work, type the numbers the eyes scroll instead).
Then try the buttons, design your own show and make Spooky Eyes talk!

Setup page won't open? Forget Spooky Pumpkin in your phone's WiFi settings, switch Spooky Eyes off and on, then join again (switching mobile data off can help).

Spooky Pumpkin WiFi gone? Unused for 10 minutes, it switches off to save batteries: press BOOT.

Page won't open later? Check your phone is on your WiFi, or switch Spooky Eyes off and on.

On the doorstep? Out of reach of your WiFi for 3 minutes, Spooky Eyes brings back the Spooky Pumpkin WiFi: join and open pumpkin.local. Back indoors? Switch off and on to rejoin your WiFi.

BOOT button (on the board): press to repeat the address; hold 5 seconds to forget your WiFi (do this before passing Spooky Eyes on).

No WiFi to hand? On the setup page, "just use the buttons" works on Spooky Eyes' own WiFi.