KNOWLES & SKRODERMOOSE

THE ALL HALLOWS

SPOOKY PUMPKIN EYES™

The WiFi Brain Transplant

COLOUR PDF


or visit
github.com/Pharkie/spooky-eyes

New in 2026

- DESIGN YOUR OWN SHOW
- A BUTTON FOR EVERY EFFECT
- A TALKING PUMPKIN *(on your phone)*
- LONGER BATTERY LIFE

1 **SWITCH SPOOKY EYES OFF.**

2 **CONNECT THE WIRES.** Connect each wire to the new ESP32-C3.

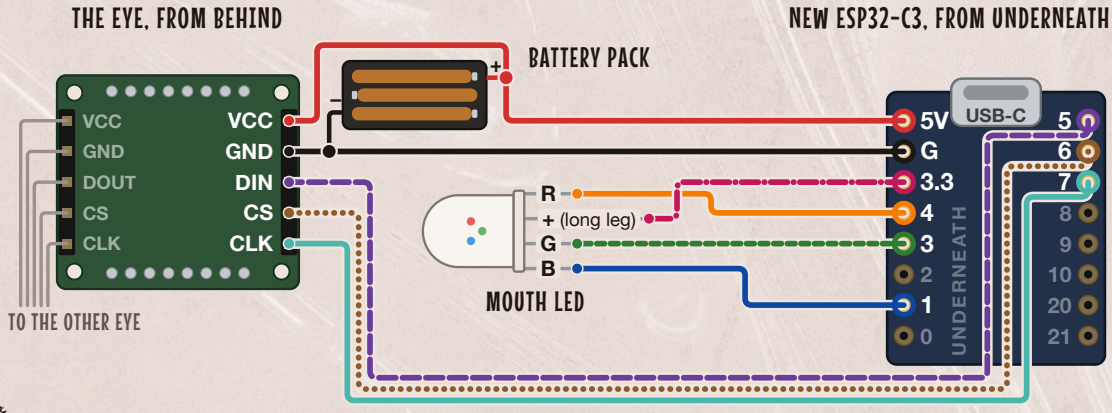

3 **POWER ON.** Switch Spooky Eyes on: the eyes start their show.

4 **CONNECT SPOOKY EYES TO YOUR WIFI** (optional). Join its WiFi on a phone, tablet or laptop:

NETWORK	PASSWORD	SETUP PAGE
Spooky Pumpkin	**spookyeyes**	**pumpkin.local** or **192.168.4.1**

After a few seconds, a setup page should open (if not, tap **Sign in** or open the setup page above): name your pumpkin, pick your WiFi (2.4 GHz), enter your WiFi password and tap **Connect**.

5 **ENJOY.** Open **http://pumpkin.local** on your phone (if that doesn't work, type the numbers the eyes scroll instead).
Then try the buttons, design your own show and make Spooky Eyes talk!

Setup page won't open? Forget Spooky Pumpkin in your phone's WiFi settings, switch Spooky Eyes off and on, then join again (switching mobile data off can help).

Spooky Pumpkin WiFi gone? Unused for 10 minutes, it switches off to save batteries: press BOOT.

Page won't open later? Check your phone is on your WiFi, or switch Spooky Eyes off and on.

Out of reach of your WiFi? Out of range for 3 minutes, Spooky Eyes brings back the Spooky Pumpkin WiFi: join and open pumpkin.local. Back in range? Switch off and on to rejoin your WiFi.

BOOT button (on the board): press to repeat the address; hold 5 seconds to forget your WiFi (do this before passing Spooky Eyes on).

No WiFi to hand? On the setup page, "just use the buttons" works on Spooky Eyes' own WiFi.