KNOWLES & SKRODERMOOSE

THE ALL HALLOWS

SPOOKY PUMPKIN EYES™


The WiFi Brain Transplant

New in 2026

DESIGN YOUR OWN SHOW · A BUTTON PAD TO TRIGGER EFFECTS · A TALKING PUMPKIN · YOUR OWN WORDS · LONGER BATTERY LIFE

1 SWITCH SPOOKY EYES OFF.

2 **MOVE THE WIRES.** Move each wire from the old Pico to the new ESP32-C3, by where the wire's other end goes. **Your wire colours may not match the drawing** (except red and black, which are standard).

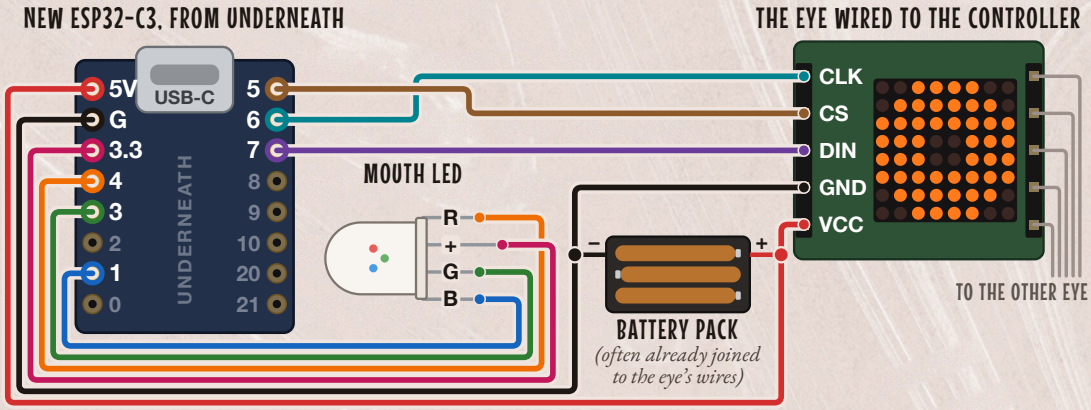

The mouth LED's long leg (+) must go on 3.3. Short legs mixed up? Any order works: the mouth just shows other colours. **Match the pin names printed on the ESP32-C3.**

3 **BRING YOURSELF BACK ONLINE, DOLORES.** Switch Spooky Eyes on. The eyes start their show. It's alive!

JOIN	**Spooky Pumpkin**	SETUP PAGE	**192.168.4.1**
PASSWORD	**spookyeyes**	ON YOUR WIFI	**http://pumpkin.local**

4 **INTRODUCE SPOOKY EYES TO YOUR WIFI** (optional). On a phone, tablet or laptop, join the Spooky Pumpkin WiFi (above). After a few seconds, a setup page should open: name your pumpkin, pick your home WiFi (2.4 GHz), enter the WiFi password and tap **Check and save**. Your WiFi password never leaves Spooky Eyes.

5 **PLAY.** Spooky Eyes restarts, joins your WiFi, scrolls the address once and carries on with the show. Open **http://pumpkin.local** on a phone, tablet or laptop on your WiFi (on Android, type the scrolled numbers instead).

Setup page won't open? Forget Spooky Pumpkin in your phone's WiFi settings, switch Spooky Eyes off and on, then join again (switching mobile data off can help).

Page won't open later? After 10 minutes unused, Spooky Eyes switches WiFi off to save batteries: press BOOT, or switch off and on.

On the doorstep? Out of reach of your WiFi for 3 minutes, Spooky Eyes brings back the Spooky Pumpkin WiFi: join and open 192.168.4.1. Back in range, Spooky Eyes rejoins your WiFi by itself.

BOOT button (on the board): a quick press repeats the address or WiFi details; hold for 5 seconds to forget your home WiFi.