KNOWLES & SKRODERMOOSE

THE ALL HALLOWS

SPOOKY PUMPKIN EYES™


The WiFi Brain Transplant

New in 2026

DESIGN YOUR OWN SHOW · A BUTTON PAD TO TRIGGER EFFECTS · A TALKING PUMPKIN · YOUR OWN WORDS · LONGER BATTERY LIFE

1 SWITCH SPOOKY EYES OFF.

2 **MOVE THE WIRES.** Move each wire from the old Pico to the new ESP32-C3, by where the wire's other end goes. **Your wire colours may not match the drawing** (except red and black, which are standard).

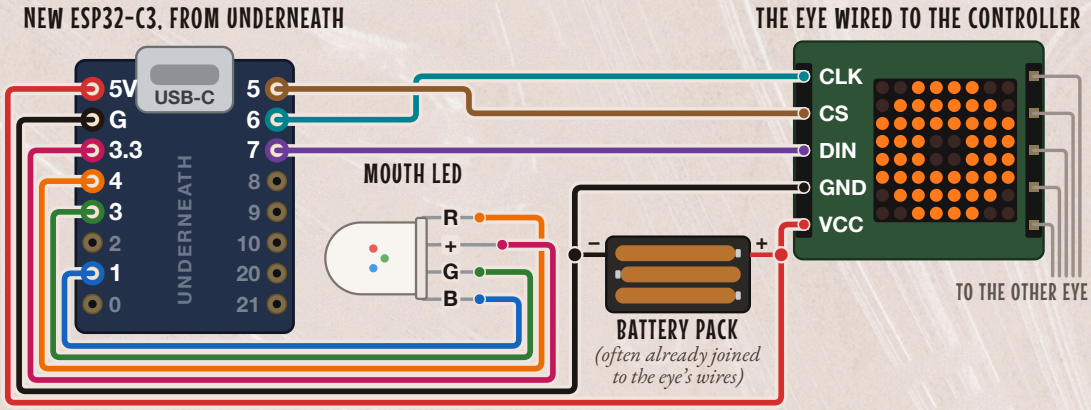

The mouth LED's long leg (+) must go on 3.3. Short legs mixed up? Any order works: the mouth just shows other colours. **Match the pin names printed on the ESP32-C3.**

3 **BRING YOURSELF BACK ONLINE, DOLORES.** Switch Spooky Eyes on. The eyes start their show. It's alive!

JOIN	**Spooky Pumpkin**	SETUP PAGE	**192.168.4.1**
PASSWORD	**spookyeyes**	ON YOUR WIFI	**http://pumpkin.local**

4 **INTRODUCE SPOOKY EYES TO YOUR WIFI** (optional). On a phone, tablet or laptop, join the Spooky Pumpkin WiFi (above). After a few seconds, a setup page should open: name your pumpkin, pick your home WiFi (2.4 GHz), enter the WiFi password and tap **Check and save**. Your WiFi password never leaves Spooky Eyes.

5 **PLAY.** Spooky Eyes restarts, joins your WiFi, scrolls the address once and carries on with the show. Open **http://pumpkin.local** on a phone, tablet or laptop on your WiFi (on Android, type the scrolled numbers instead).

Page won't open? After 10 minutes unused, Spooky Eyes switches WiFi off to save batteries: press BOOT, or switch off and on.

On the doorstep? Out of reach of your WiFi for 3 minutes, Spooky Eyes brings back the Spooky Pumpkin WiFi: join and open 192.168.4.1. Back in range, Spooky Eyes rejoins your WiFi by itself.

BOOT button (on the board): a quick press repeats the address or WiFi details; hold for 5 seconds to forget your home WiFi.