


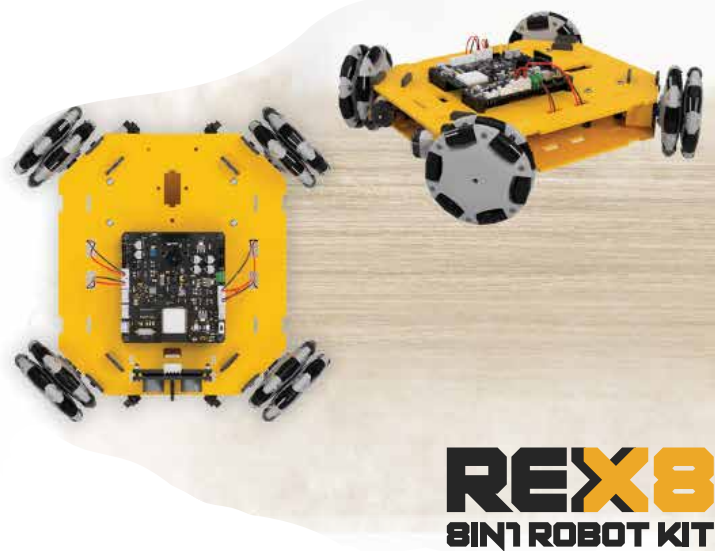


Contents

What is PicoBricks Go?.....	2
How to download PicoBricks Go?.....	2
How to use REX Robots with PicoBricks Go?.....	3
Arduino IDE.....	3
Connection.....	8
Thonny IDE.....	11
Connection.....	17
REX Blocks IDE.....	20
Connection.....	28
How to Use BerryBot with PicoBricks Go?.....	31
Arduino IDE.....	32
Connection.....	37
Thonny IDE.....	39
Connection.....	44
PicoBricks IDE.....	47
Connection.....	52

What is PicoBricks Go?



PicoBricks Go is a mobile application that allows you to control BerryBot, the REX 8 in 1 Robot Kit, and PicoBricks.

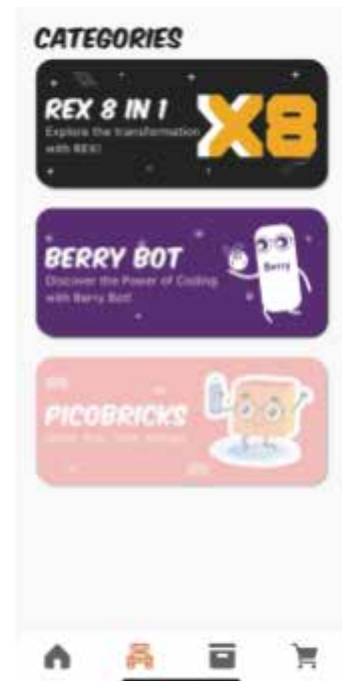

How to download PicoBricks Go?

You can download PicoBricks Go from the Apple Store or Google Play Store according to the operating system of your phone or tablet. Use the QR codes below to download PicoBricks Go.



rbt.is/picoios



rbt.is/picoandroid

How to Use REX Robots with PicoBricks Go?

To enable communication between REX robots and PicoBricks Go via Bluetooth, you need to upload software to the REX motherboard. This software processes the data you send via BLE through PicoBricks Go, allowing the robot to move and perform the desired tasks.

You can scan the QR code below or click the link to visit the REX GitHub page.




rbt.ist/rexgithub

To control REX robots with the PicoBricks Go mobile application, you can upload the required code to the REX motherboard using three different programming languages. These languages are C, Python, and PicoBricks IDE block-based programming. Let's examine how to upload this software to the REX motherboard using each of these languages in order.

Arduino IDE

You can upload the C code required to control the REX robots with PicoBricks Go to your motherboard using the Arduino IDE.



1. After going to the GitHub page, open the **PicoBricks Go App** folder.




2. Inside the folder, there are two folders named V4 and V5. Enter the one that matches the version of your REX motherboard.



You can check the diagram below to find out the version number of your REX motherboard.

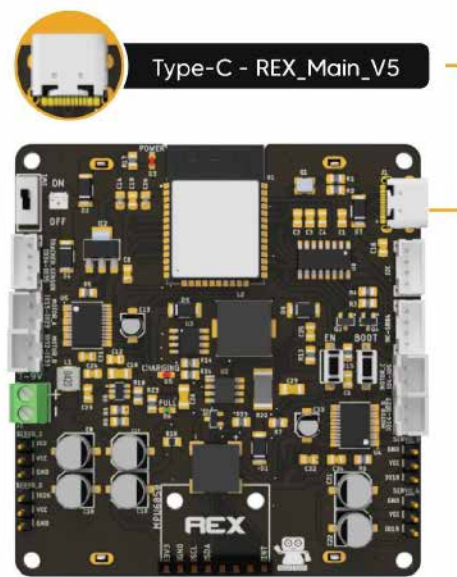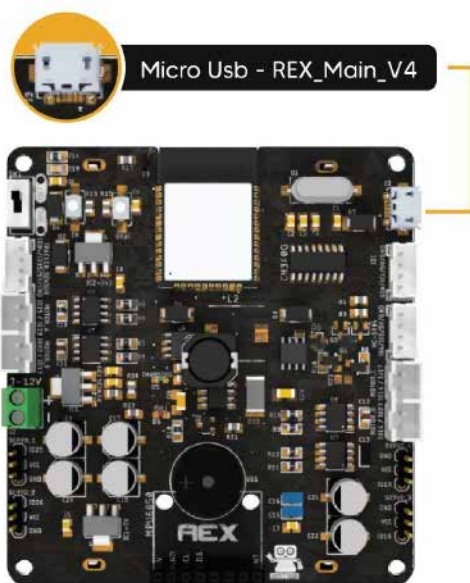

3. After entering the version folder, go into the Arduino folder.

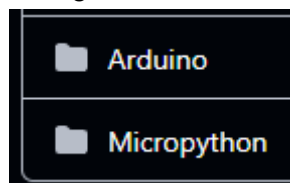

4. Inside the Arduino folder, there is a rex.ino code file. You can either download this file or copy and paste it into the Arduino IDE.



Inside the Arduino folder, there is a rex.ino code file. You can either download this file or copy and paste it into the Arduino IDE.




5. Open the **rex.ino** file in the Arduino IDE.

```


rex.ino
1 // Libraries
2 #include <BLEDevice.h>
3 #include <BLEServer.h>
4 #include <BLEUtils.h>
5 #include <BLE2902.h>
6 #include <ESP32Servo.h>
7
8 // Define BLE UUIDs (Universally Unique Identifiers) for the custom service and characteristic
9 #define SERVICE_UUID "6E400001-B5A3-F393-E0A9-E50E24DCCA9E" // Custom Service UUID for identifying the BLE service
10 #define CHARACTERISTIC_UUID "6E400002-B5A3-F393-E0A9-E50E24DCCA9E" // Custom Characteristic UUID for data transfer
11

```


6. The REX motherboard is an ESP32-based board. To connect the REX motherboard to the Arduino IDE, download the ESP32 board version 3.2.0 from the “**Boards Manager**” section.

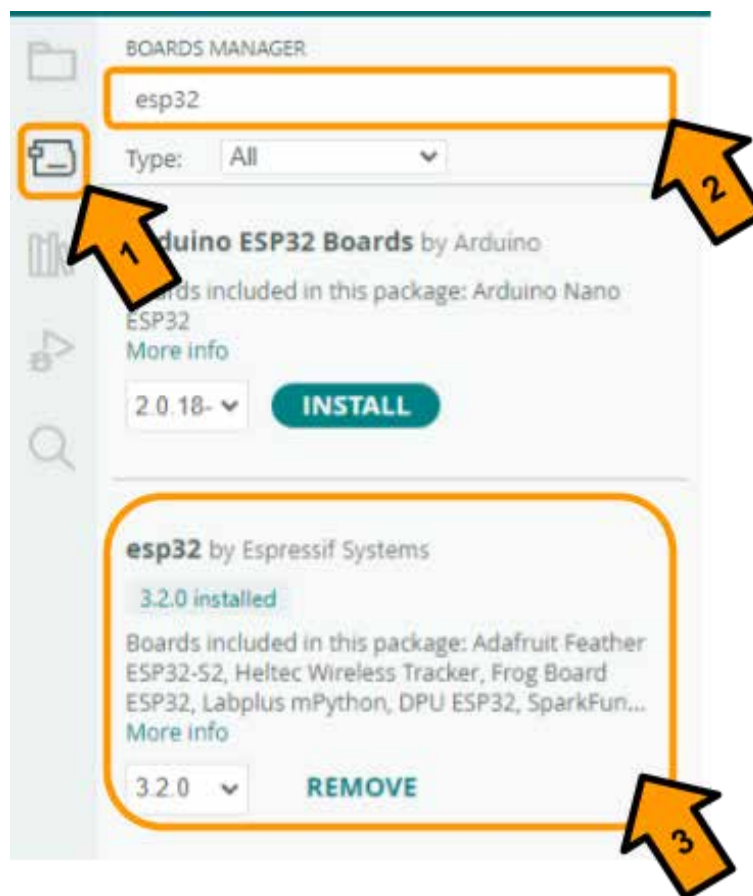

- Let's select the ESP32 board we installed in the previous step by navigating to **Tools > Board > esp32 > ESP32 Dev Module**.

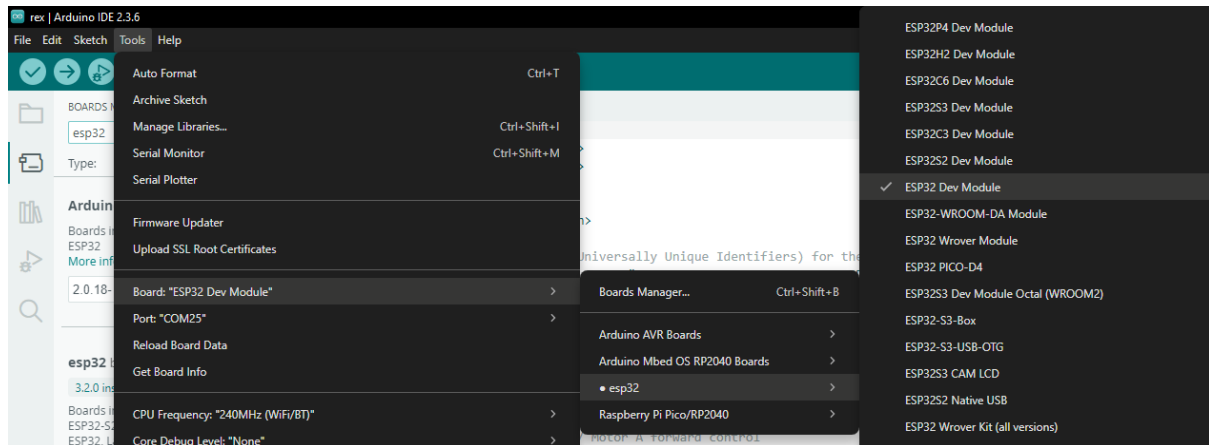


- To establish the connection between the Arduino IDE and the REX motherboard, connect one end of the cable to the REX motherboard and the other end to your computer.
- To establish the connection, follow **Tools > Port** and select the port to which the REX motherboard is connected.

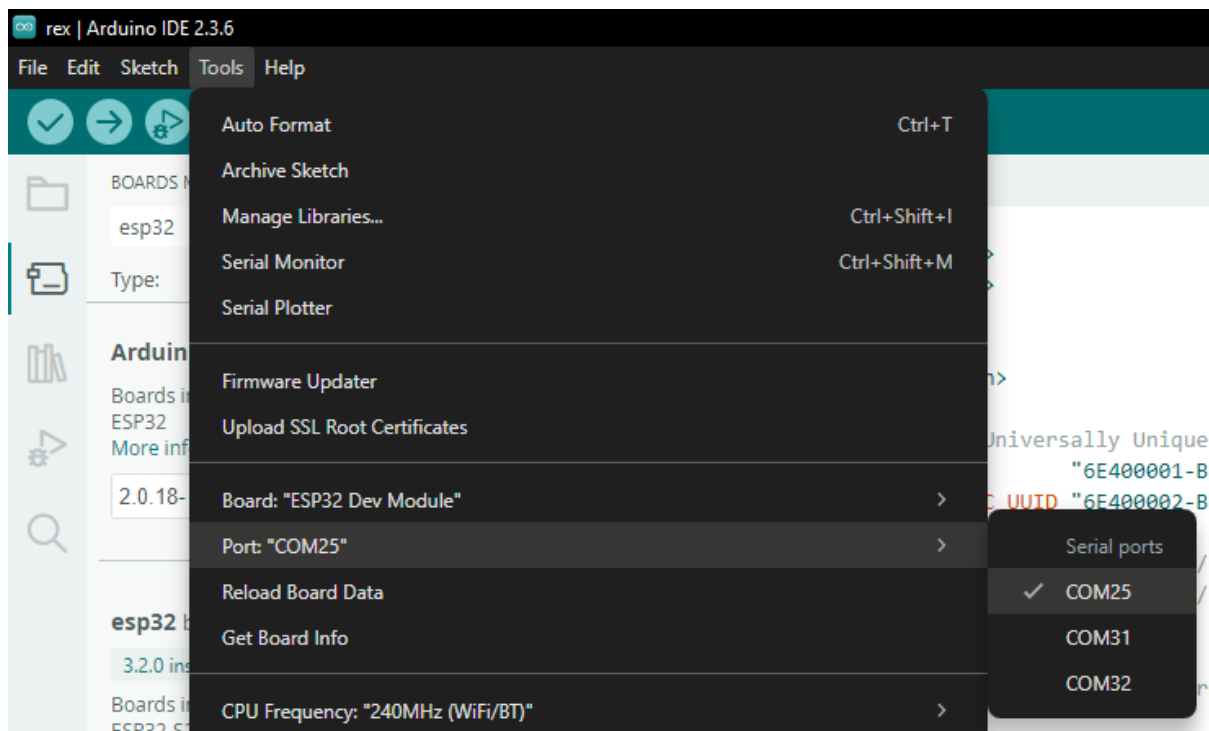

- Click the **Upload** button to upload the code to the REX motherboard.



11. When the code upload starts, you can see the upload percentage on the Output screen.


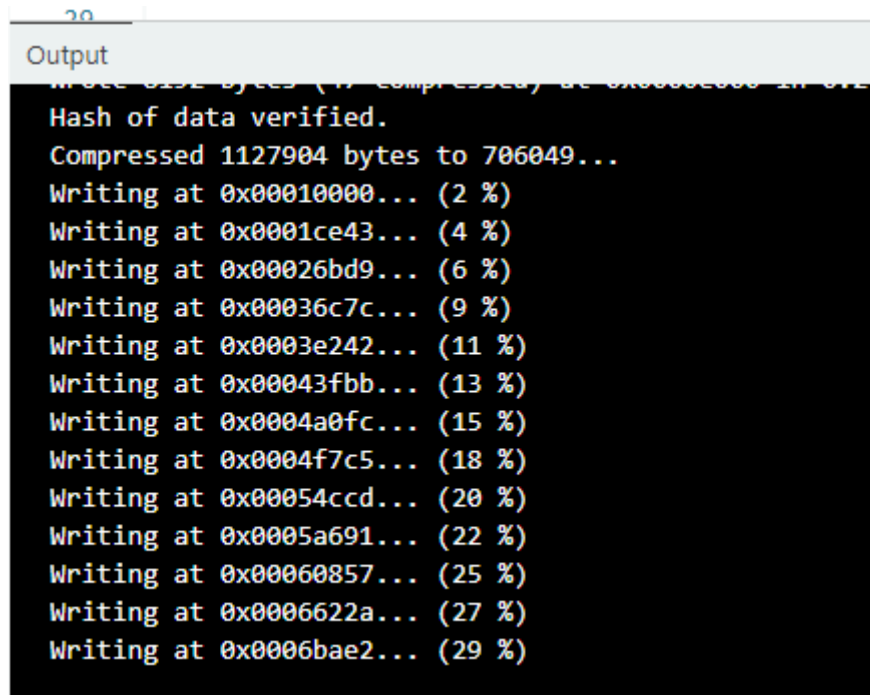


12. After the code is successfully uploaded, you will receive a "Upload Complete" notification at the bottom right corner.




WARNING!!!

If you get an **exit status 2** error after the code is uploaded, check your connection. If your connections and port number are correct, click the **Upload** button again. While the code is uploading, hold down the BOOTSEL button on the board and release it as soon as you see the upload percentage start.

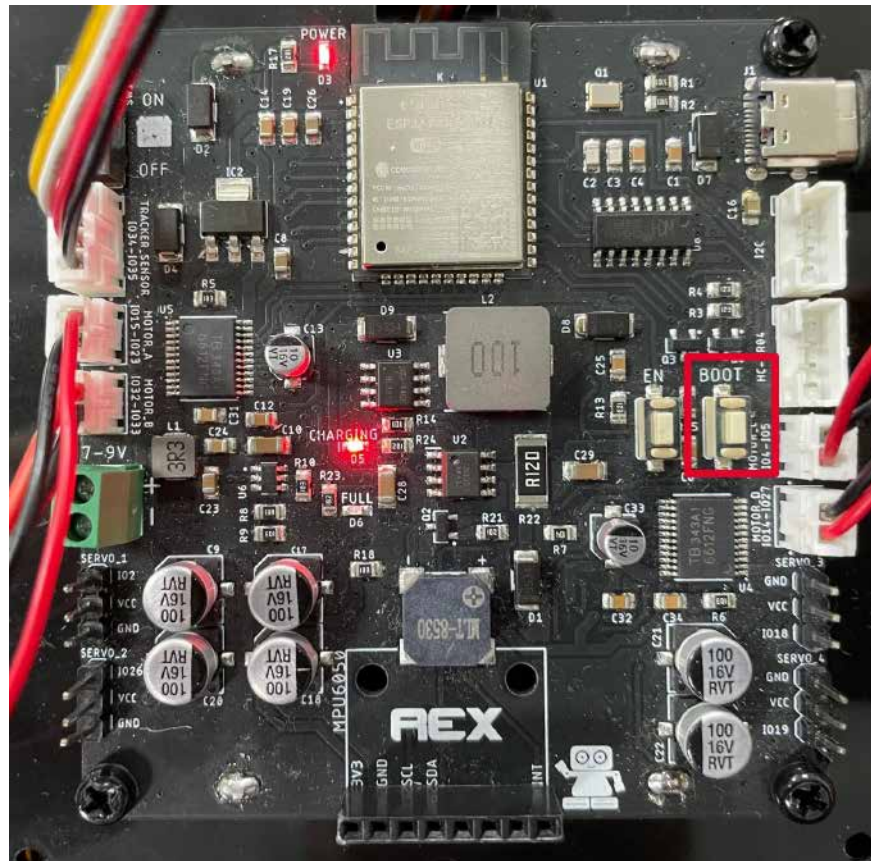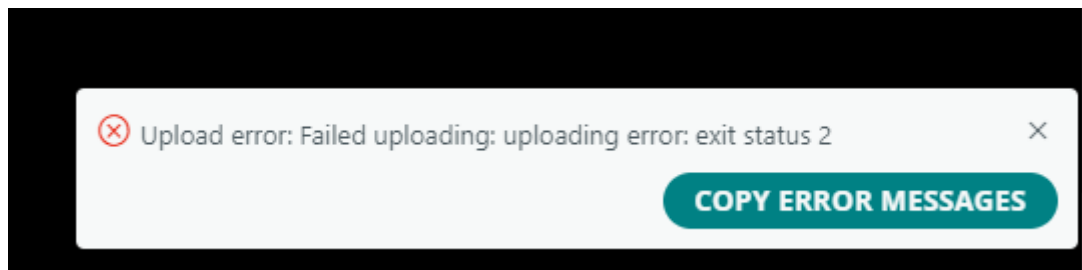

Connection


1. After the code is uploaded, disconnect the cable from the REX motherboard and switch the switch located at the top left corner of the board to the ON position.

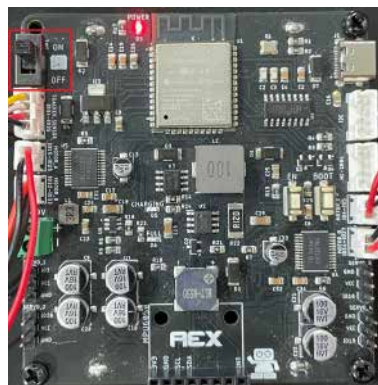

2. Open the PicoBricks Go mobile application on your phone.



3. From the main menu, click the robot button at the top left.

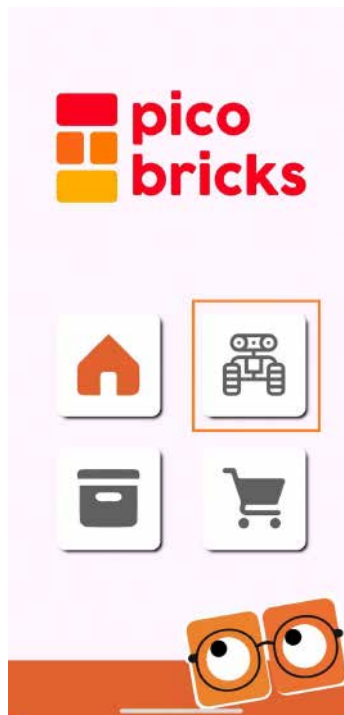


4. Select the REX 8 IN 1 robots from the categories.




5. Select the REX 8 IN 1 robots from the categories.



6. From the “Select Device” menu that appears, select the top option: REX 8in1.

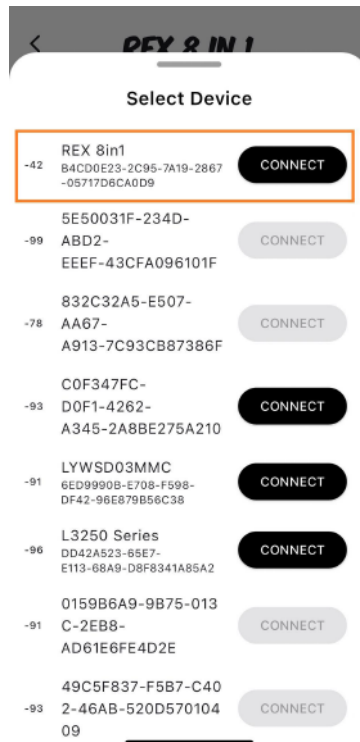

7. You can control your REX robot from the console that opens.

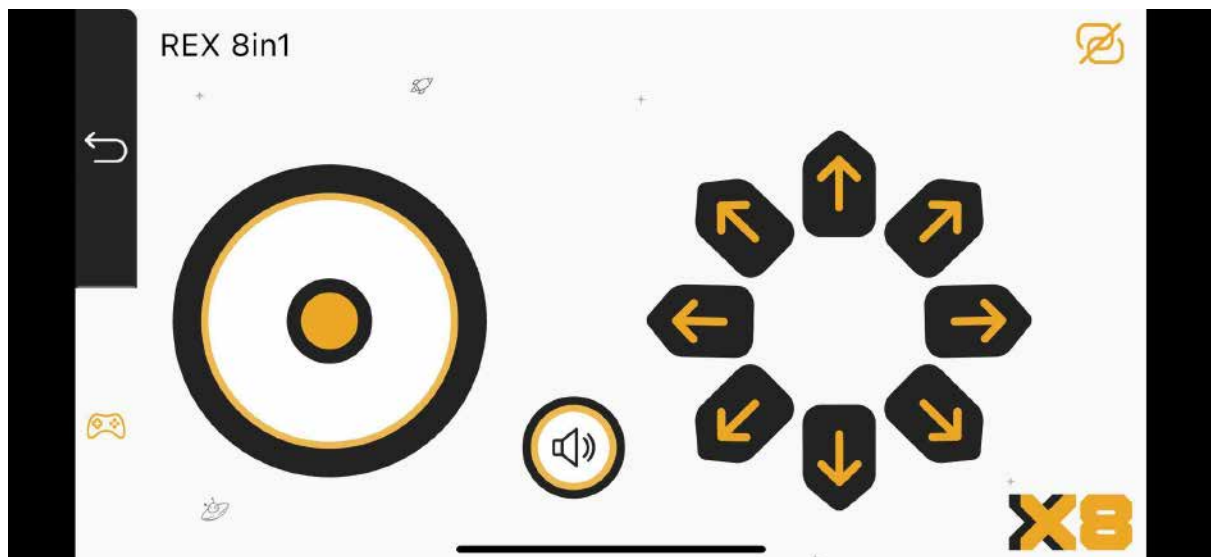


Thonny IDE

You can upload the Python code required to control the REX robots with PicoBricks Go to your motherboard using Thonny IDE.

To upload Python code to the REX motherboard using Thonny IDE, you must first install the MicroPython firmware file onto the REX motherboard.

To perform this process, you can follow the steps below.


1. Download and install Thonny IDE by visiting <https://thonny.org/>.

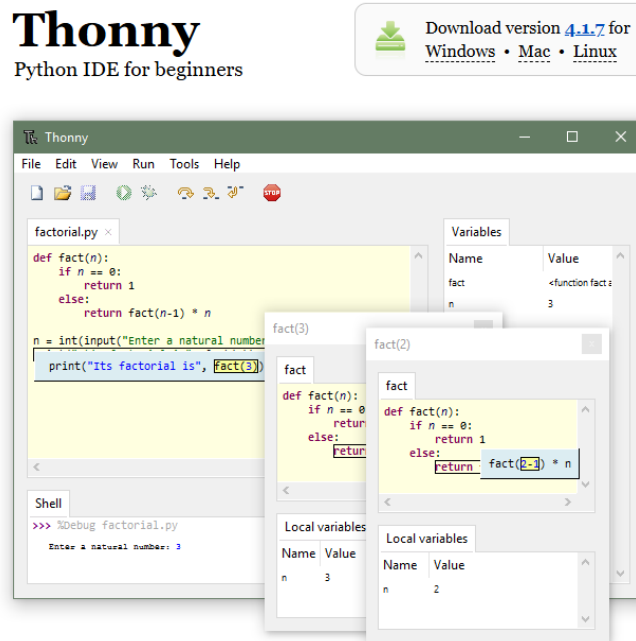


2. Open Thonny IDE.



3. Connect the REX motherboard to the computer.

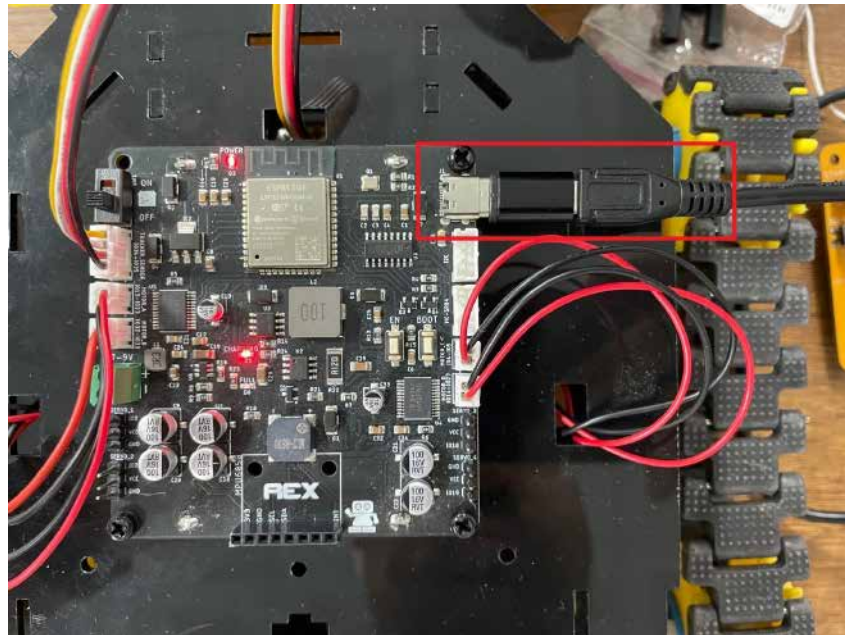


4. From the Thonny IDE menu, select **Run > Configure Interpreter**.

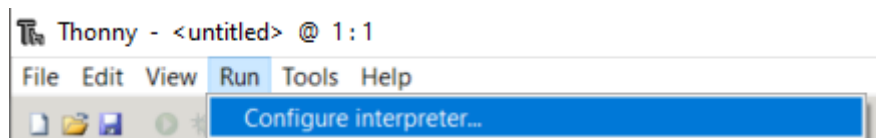

5. In the opened window, select the **“Install or update MicroPython (esptool)”** option at the bottom right corner.




6. In the opened window, select the port where your REX motherboard is connected. Then set the MicroPython family to ESP32, the variant to Espressif ESP32 / WROOM, and the version to 1.25.0.

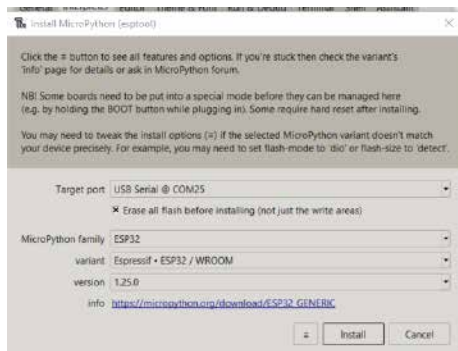


7. Click the **“Install”** button.



8. When the installation is complete, you will receive a “Done!” notification like the one below. After this notification, you can close the windows. The firmware installation is complete.



- After the firmware is loaded, you can select your port from the opened window by choosing **Run > Configure Interpreter**.

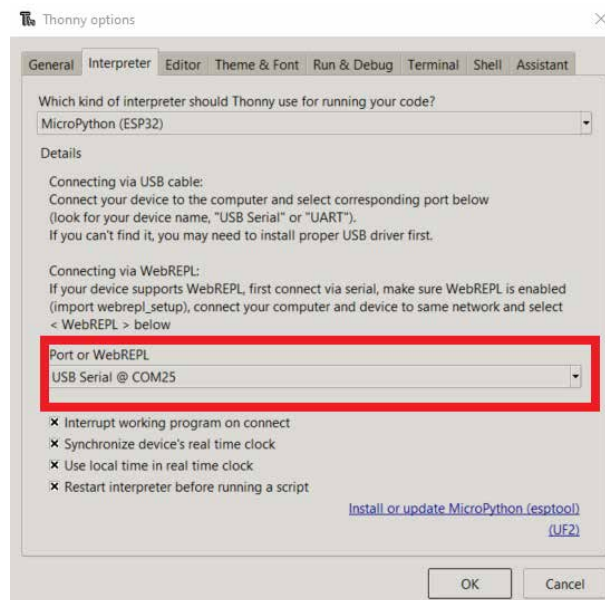


- After completing this process, a MicroPython device area will open in the file section as shown below. If this area does not open, enable it by selecting **View > Files**.




Now, let's look at how to upload the PicoBricks Go Python software to the REX motherboard.


- After going to the GitHub page, open the **PicoBricks Go App** folder.



- Inside the folder, there are two folders named V4 and V5. Enter the one that matches the version of your REX motherboard.

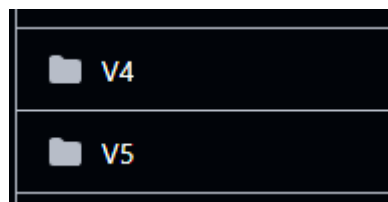


- You can check the diagram below to find out the version number of your REX motherboard.

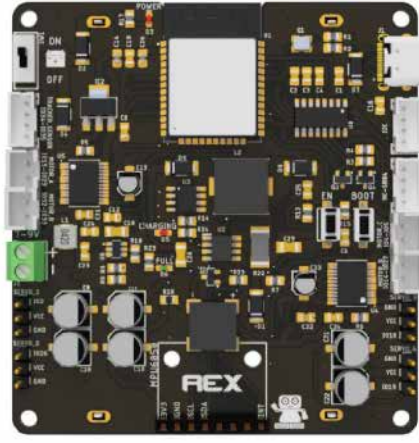


- After entering the version folder, go into the Micropython folder.




- Download the [rex.py](#) and [main.py](#) files from the Micropython folder to your computer.

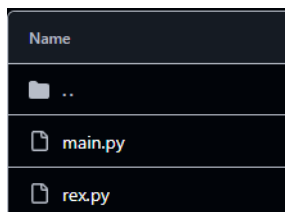

To download the files, open the code file you want to download and click the button below. Follow the same steps for both code files to download them to your computer.

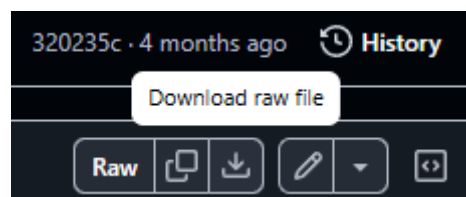


- Open the [rex.py](#) and [main.py](#) files in Thonny IDE.

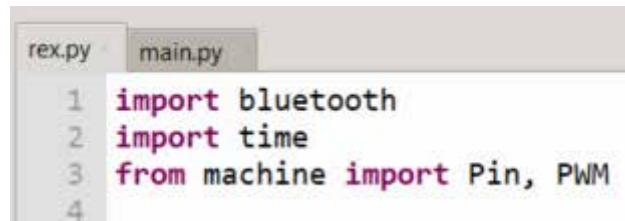


```
rex.py  main.py
1  import bluetooth
2  import time
3  from machine import Pin, PWM
4
```


7. Enter the **rex.py** file. This file is the Python library written for REX robots. We need to save this file to the REX motherboard as **rex.py**. To do this, while inside the file, choose **File > Save As** (or press **Ctrl + Shift + S**).

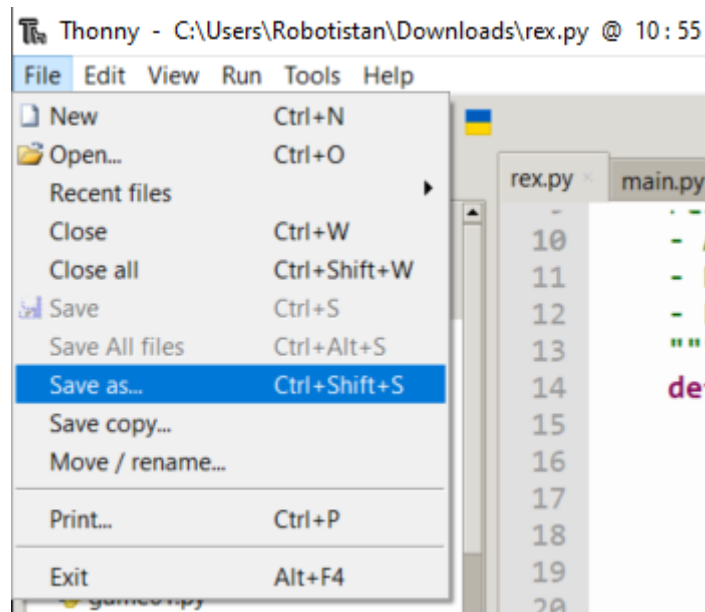


8. In the window that opens, select the **MicroPython device** option.

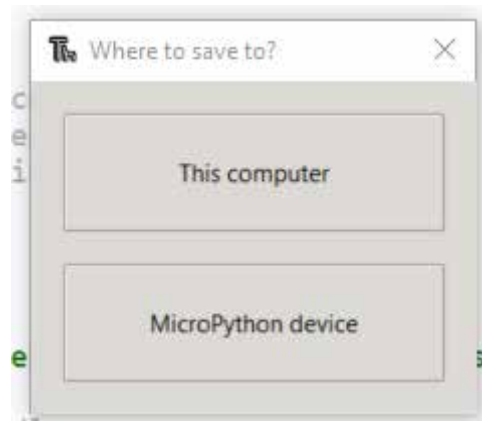


9. In the opened window, type [rex.py](#) into the **File name:** field and click the **OK** button.

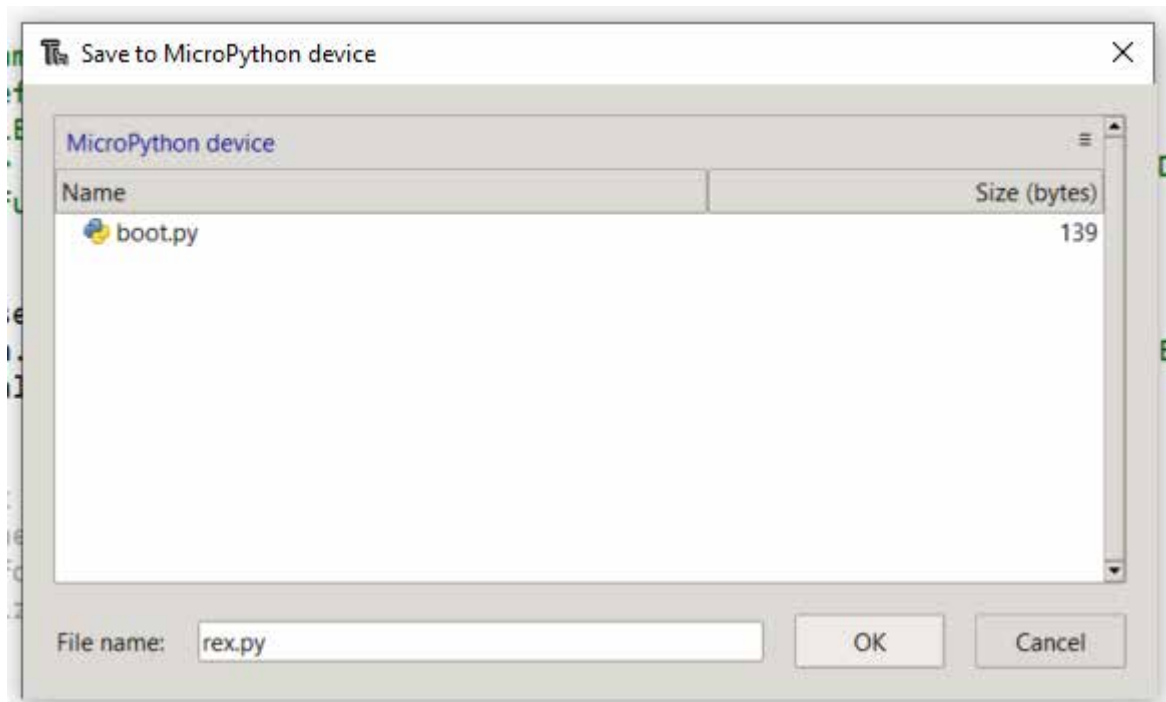

10. Now, open the [main.py](#) file and do the same process for this file as well.

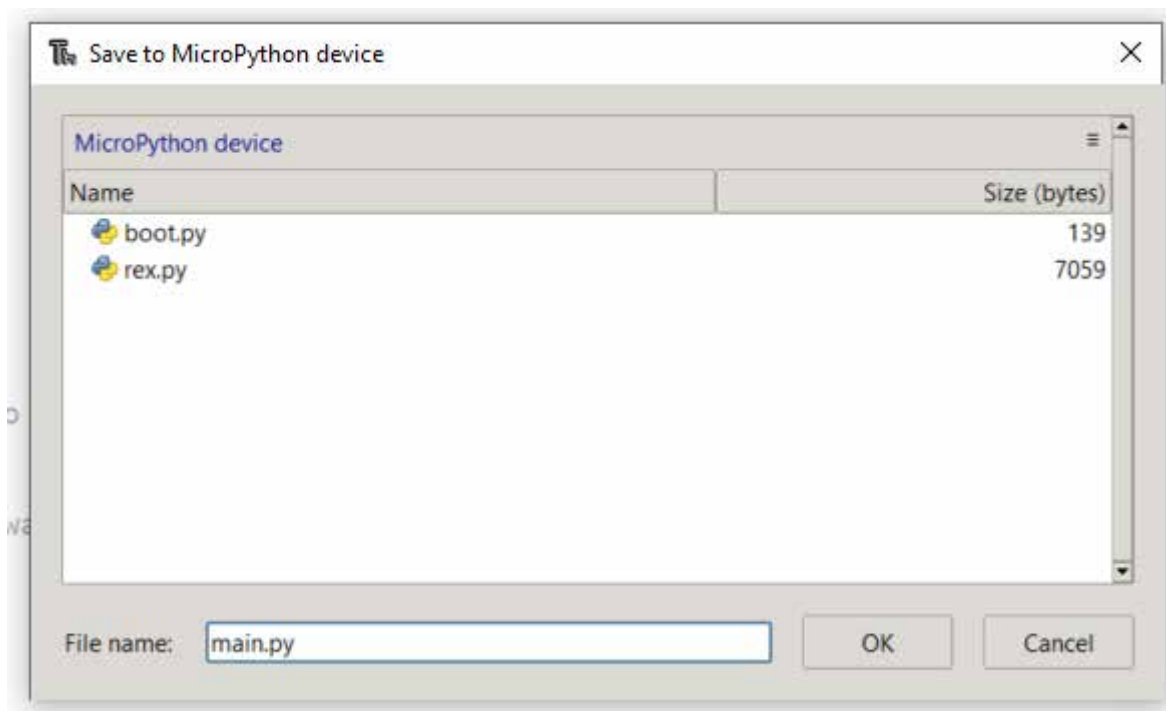


11. Our file upload process is complete.

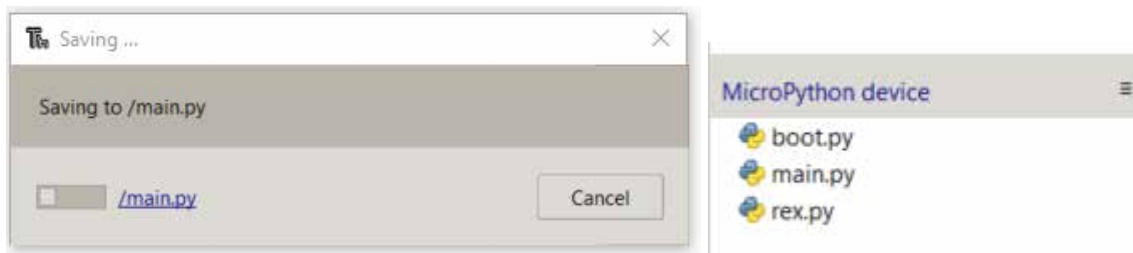

Connection


1. After the code is uploaded, disconnect the cable from the REX motherboard and switch the switch located at the top left corner of the board to the ON position.

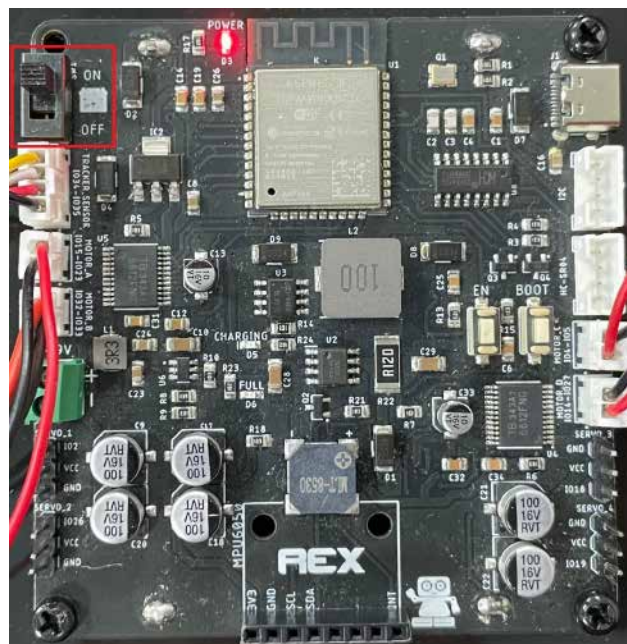


2. Open the PicoBricks Go mobile application on your phone.



3. From the main menu, click the robot button at the top left.

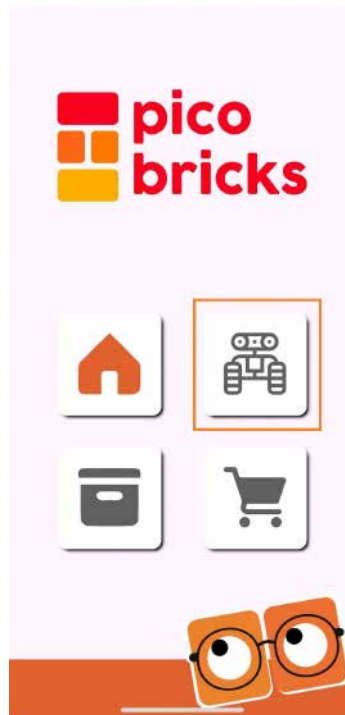


4. Select the REX 8 IN 1 robots from the categories.

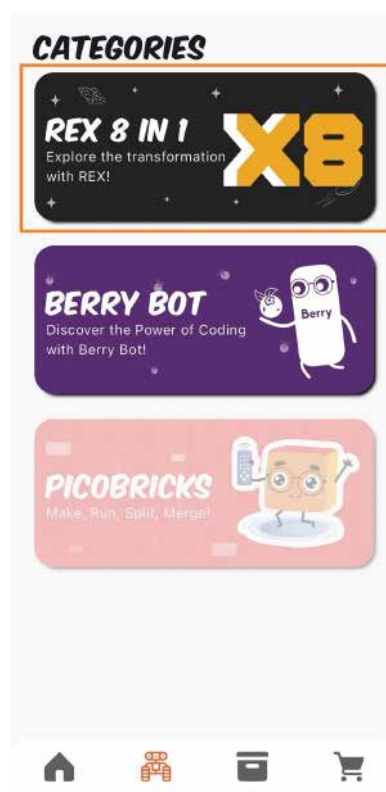


5. From the menu that opens, select the REX robot you want to control.



6. From the “**Select Device**” menu that opens, select the top option: MPY ESP32.

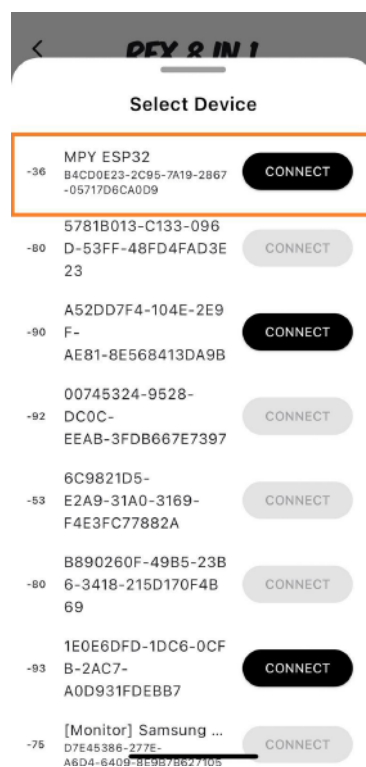

7. You can control your REX robot from the console that opens.

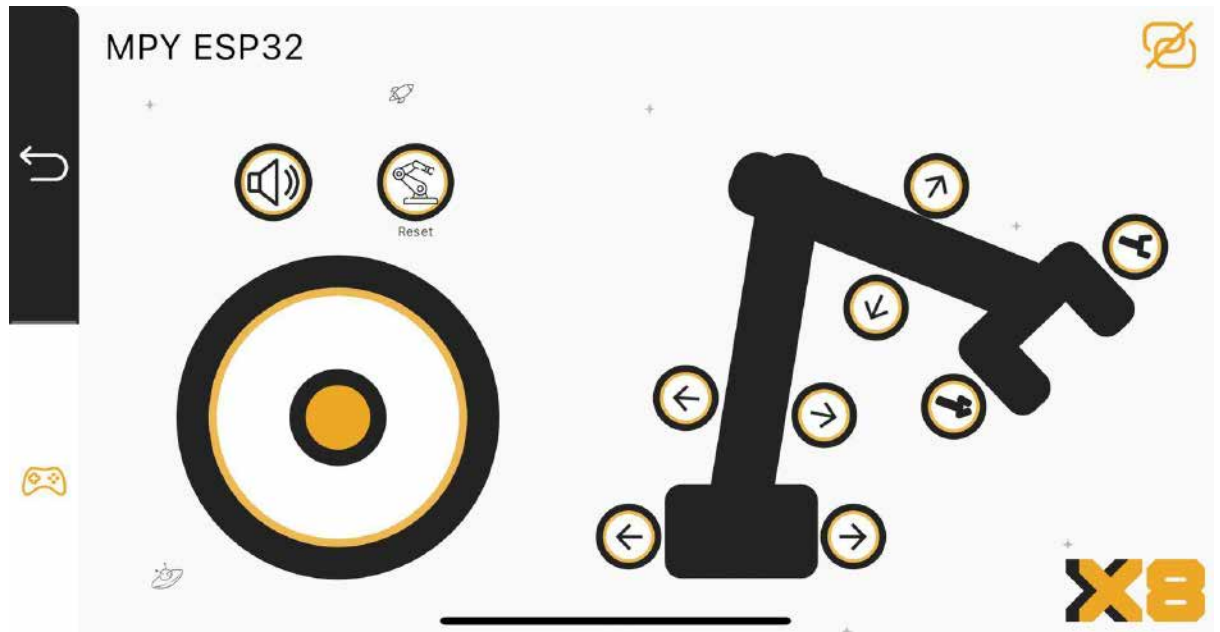

REX Blocks IDE

REX Blocks IDE is a web-based editor that allows us to program REX robots using block programming. With this editor, you can create block-based projects by using data from the buttons and joystick on the **PicoBricks Go** consoles.


In this article, instead of controlling all REX robots with a single REX Blocks IDE code, we will learn how to use the buttons in **PicoBricks Go** within REX Blocks IDE.

To program REX robots with REX Blocks IDE, you need to upload the firmware file to the REX motherboard.


1. Go to the web address <https://ide.picobricks.com/rex-main/verticalblocks.html?0> to open REX Blocks IDE.




2. Click the **“Upload Firmware”** button.

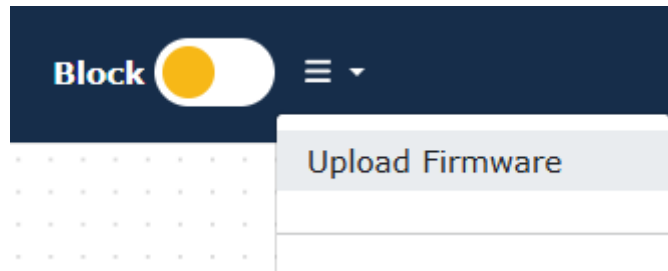


3. In the opened window, click the upload button to download the necessary files to upload the firmware.

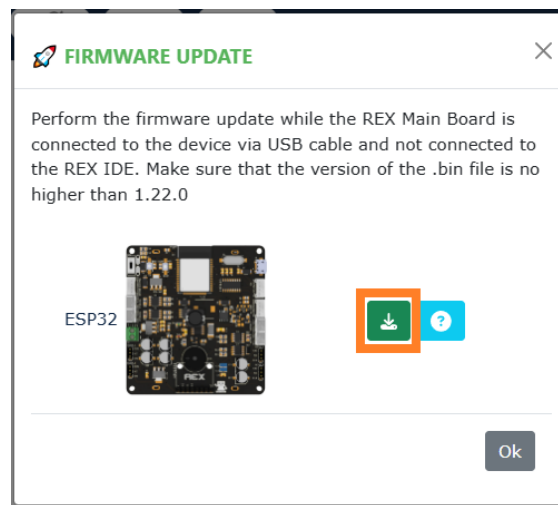


When you click the question mark button, step-by-step instructions on how to perform the firmware upload process are provided.

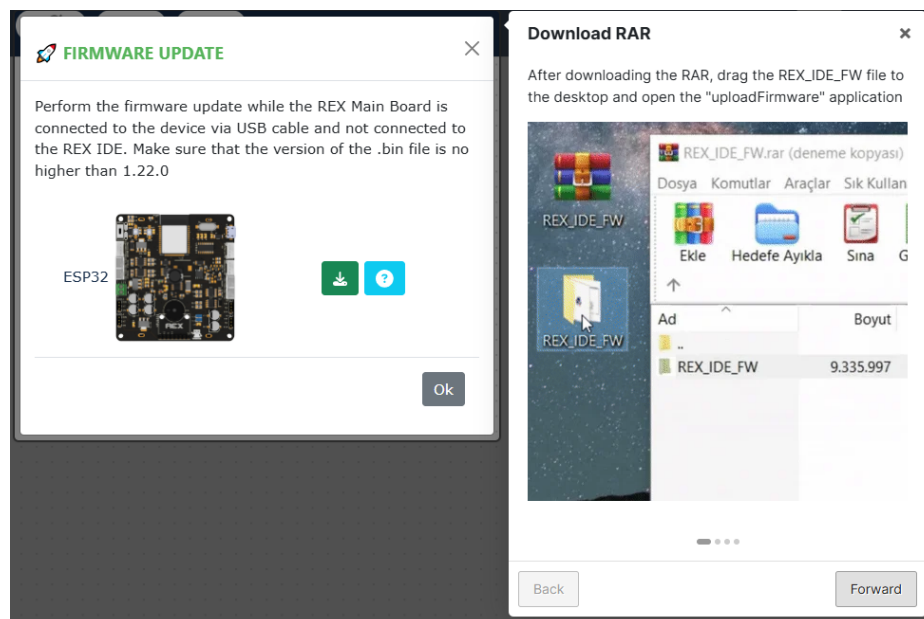


4. Open the downloaded “REX_IDE_FW” folder.

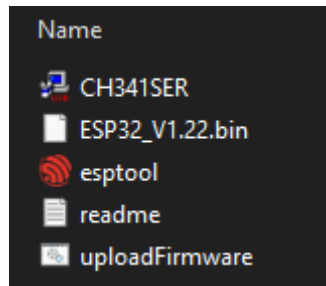


5. If the **CH341SER** driver is not installed, please install it.



6. Connect the REX to your computer.

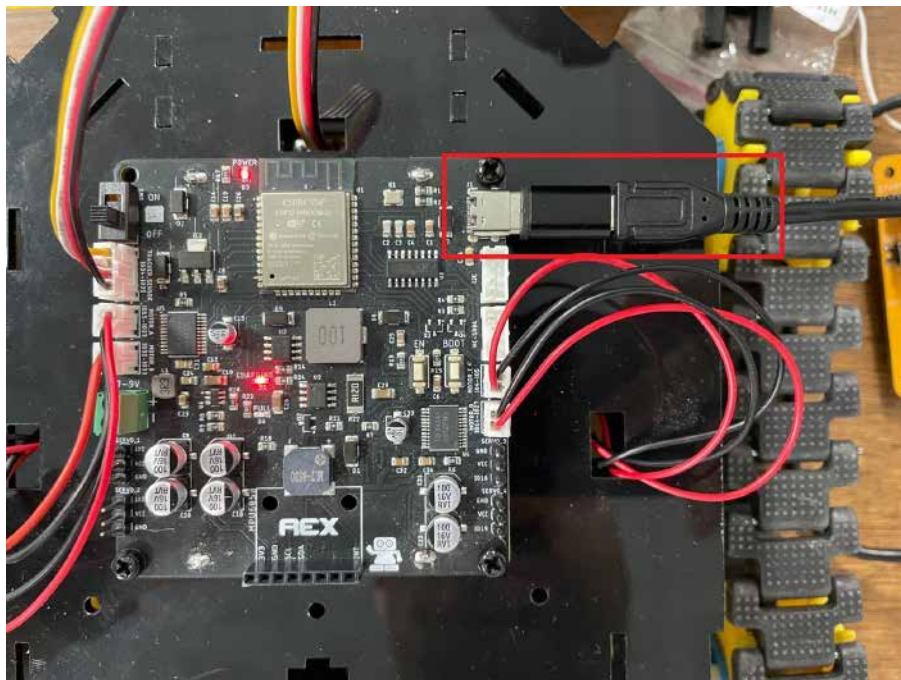

7. Open the **uploadFirmware** file.



8. In the opened window, enter the COM Port number your REX robot is connected to in the format "**comXX**".

```
C:\WINDOWS\system32\cmd.exe

=====
Robotistan INC - 2024
REX Board MicroPython Flasher
=====
Listing COM ports and device paths...
\Device\BthModem1      COM Port: COM31
\Device\BthModem0      COM Port: COM32
\Device\Serial2        COM Port: COM25

Please enter the COM port you want to use (example: COM3):
COM Port: com25_
```

9. When you press the ENTER key, the firmware file will start uploading.

```
=====
Robotistan INC - 2024
REX Board MicroPython Flasher
=====
Listing COM ports and device paths...
\Device\BthModem1      COM Port: COM31
\Device\BthModem0      COM Port: COM32
\Device\Serial2        COM Port: COM25

Please enter the COM port you want to use (example: COM3):
COM Port: com25
Erasing ESP32 flash...
esptool.py v4.8.1
Serial port com25
Connecting...
Failed to get PID of a device on com25, using standard reset sequence.
.....
```

WARNING!!!

If you get an error after the firmware file is uploaded, close and reopen the .exe file. Enter your COM Port number again and press the Enter key. While the firmware is uploading, hold down the BOOTSEL button on the REX motherboard until you see the upload percentage. Once you see the upload percentage, you can release the BOOTSEL button.

```
Configuring flash size...
Flash will be erased from 0x00001000 to 0x001a9fff...
Compressed 1737664 bytes to 1143562...
Writing at 0x00027032... (7 %)
```


10. When the upload is complete, you can close the screen by pressing any key.

```
Leaving...
Hard resetting via RTS pin...
Process completed successfully.
Press any key to continue . . .
```

11. Let's open REX Blocks IDE and connect to the REX robot. Click the connection icon.




12. From the window that opens, select your Port number and click the Connect button.

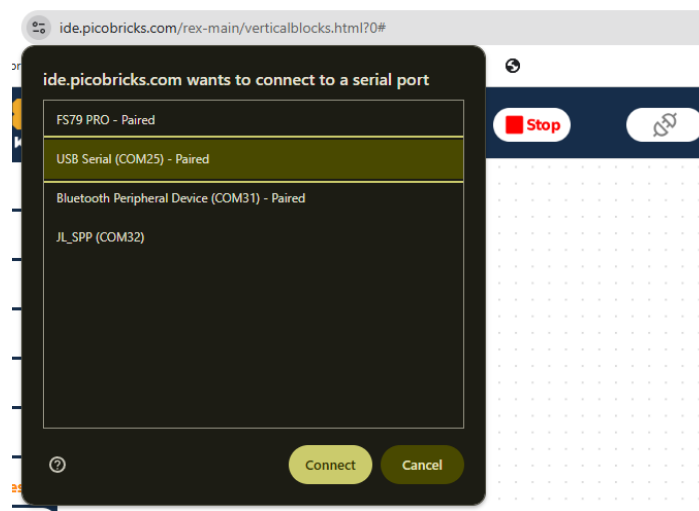

When connected, the icon will change as shown below.




13. Now that the connection is established, we can upload the necessary libraries to the REX motherboard. Click the **"Upload REX Library"** button.

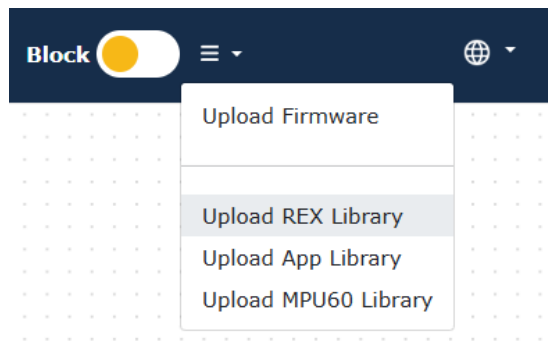

The upload is complete when the progress bar reaches 100%.




14. To perform operations with PicoBricks Go, click the **“Upload APP Library”** button to upload the PicoBricks Go library to the REX motherboard.

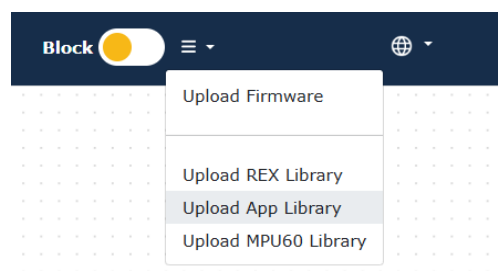

Now we are ready to start developing projects with PicoBricks Go. First, let's get to know the PicoBricks Go blocks in REX Blocks IDE.




To write code in REX Blocks IDE with PicoBricks Go, you first need to create the following code template. This template is valid for all REX robots. Inside the empty if block, you can add the block that reads the data coming from the robot buttons in PicoBricks Go and start developing projects with the console of the robot you want.

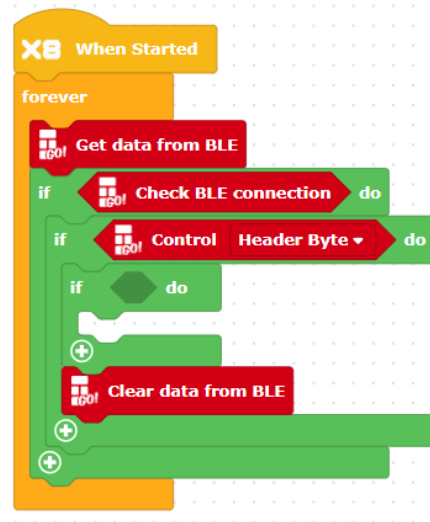

Let's develop a project using the **forward**, **backward**, **right**, and **left** buttons on the **WIBOT / ROVERBOT** console in the **PicoBricks Go** mobile app.


1. Drag the “**Select Wibot and RoverBot**” block inside the if block to select the **WIBOT / ROVERBOT** console.

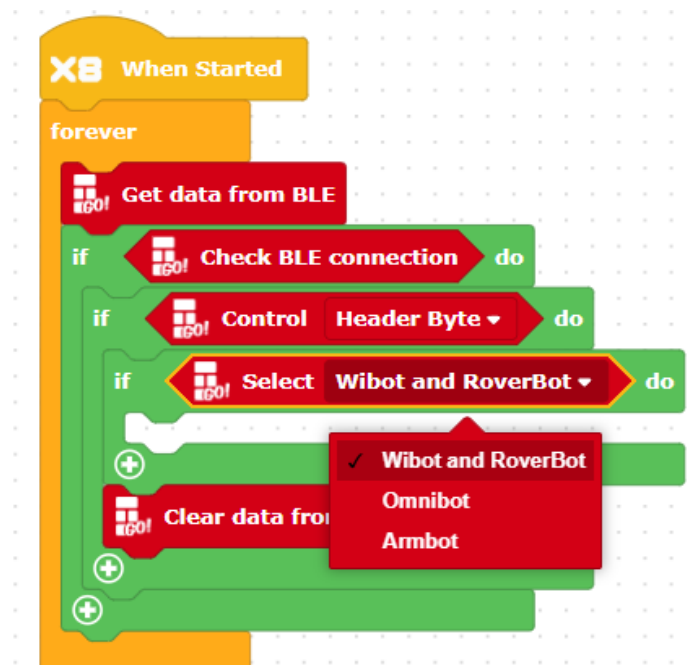

2. Let's add another conditional structure inside this if block to define how the robot should respond when the buttons are pressed or not pressed.




- Let's upload the block code we prepared to the REX motherboard using the “**Upload Python File to Board**” button.

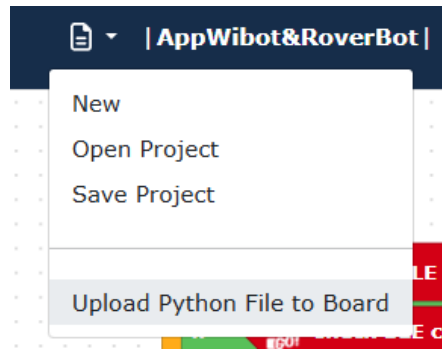

WARNING!!!


If nothing appears on the **Serial Monitor** while uploading to the REX motherboard, please disconnect the connection and switch your REX robot's switch to the **"ON"** position. Then reconnect and upload the code to the REX motherboard again.

If you see an output like the one below on the **Serial Monitor**, it means your code has been successfully uploaded.

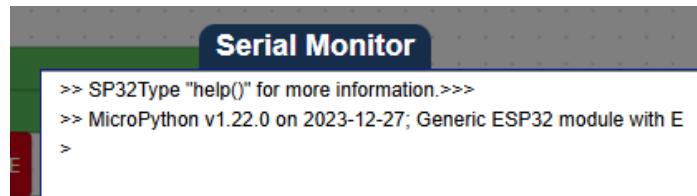

Bağlantı


1. After the code is uploaded, disconnect the cable from the REX motherboard and switch the switch located at the top left corner of the board to the ON position.

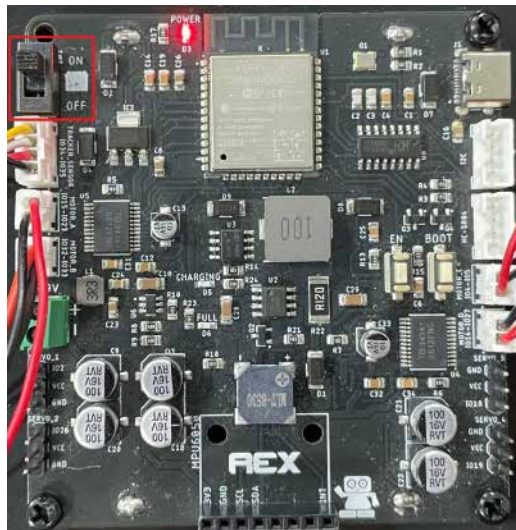

2. Open the PicoBricks Go mobile application on your phone.



3. From the main menu, click the robot button at the top left.

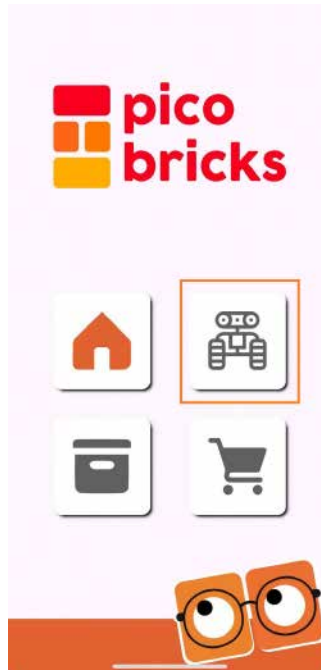


4. Select the REX 8 IN 1 robots from the categories.




5. From the menu that opens, select the WIBOT / ROVERBOT REX robot.



6. From the opened “**Select Device**” menu, find and select the MPY ESP32 option.

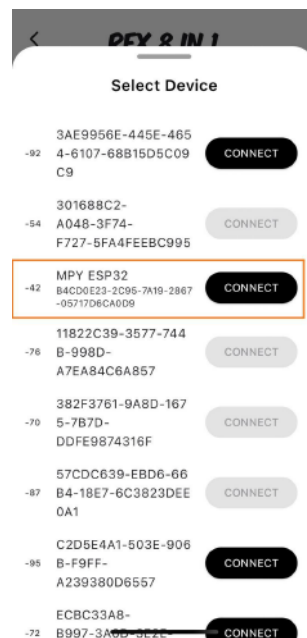

7. You can control your REX robot from the console screen that opens.

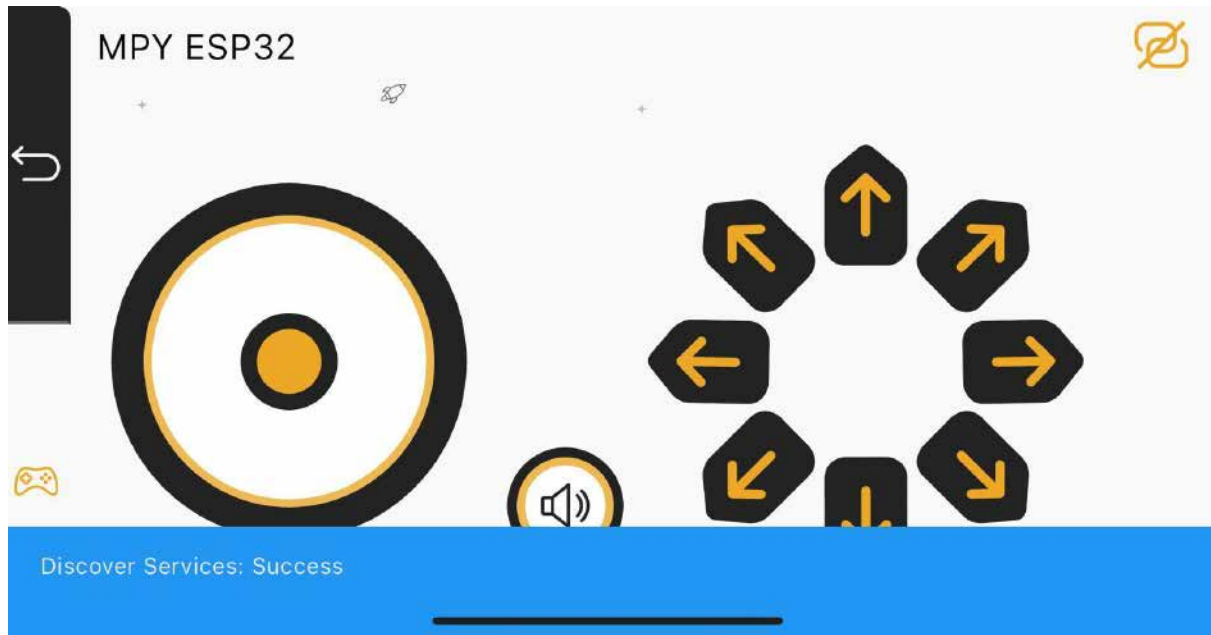

How to Use BerryBot with PicoBricks Go?

To enable communication between BerryBot and the PicoBricks Go mobile app, software needs to be uploaded to the BerryBot motherboard. This software processes the data you send via BLE through PicoBricks Go, allowing the BerryBot to move and perform the desired tasks.

To visit the BerryBot GitHub page, you can scan the QR code below or go to the link.



rbt.ist/berrybotgithub


You can upload the code needed to control BerryBot with the PicoBricks Go mobile app to the BerryBot motherboard using three different programming languages. These languages

are C, Python, and PicoBricks IDE block programming. Let's examine how to upload these softwares to the BerryBot motherboard in sequence using these languages.

Arduino IDE

You can upload the necessary C code to control BerryBot with PicoBricks Go to your motherboard using Arduino IDE.


1. After opening the GitHub page, follow the path Codes > Arduino > Pre-Installed Code > berry_bot.ino to open the code.

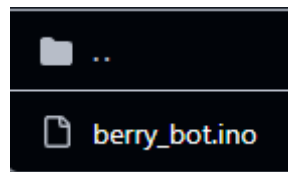


To copy or download the code, you can follow the diagram below.




2. Open the code in Arduino IDE.

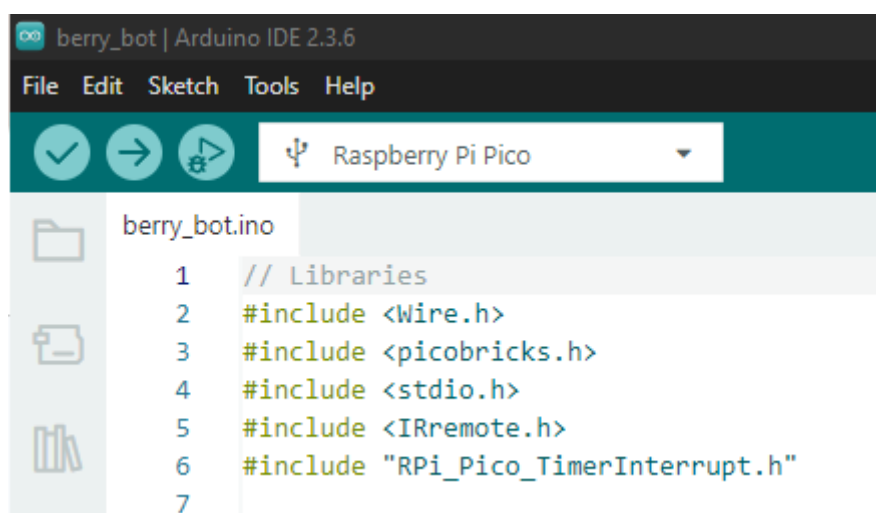

3. Before uploading the code, we need to install the Raspberry Pi Pico boards in Arduino IDE. To do this, follow the path **File > Preferences...** to open the Preferences screen.

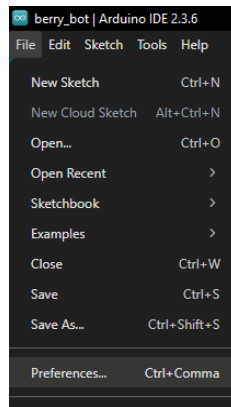


4. In the opened screen, click the button to the right of the "**Additional Boards Manager URLs:**" field.

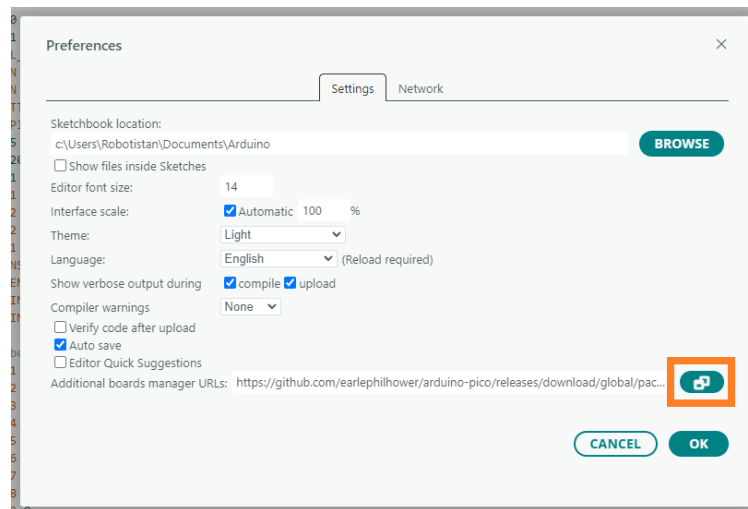

5. In the opened window, paste the following link into the "**Additional Boards Manager URLs:**" field and click the "**OK**" button.


Raspberry Pi Boards:

https://github.com/earlephilhower/arduino-pico/releases/download/global/package_rp2040_index.json

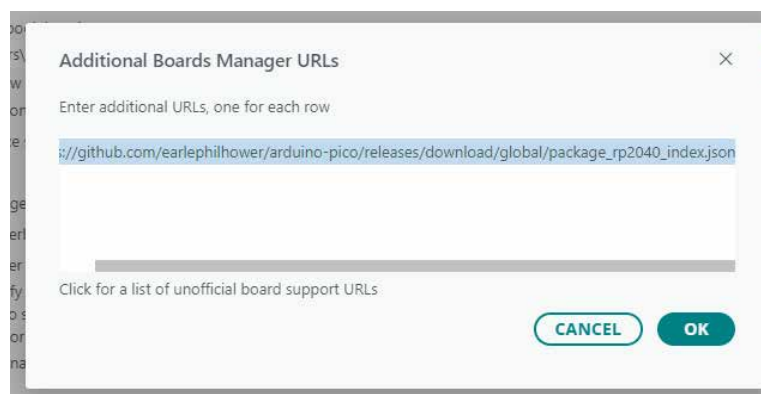


6. Open the **BOARDS MANAGER** in Arduino IDE (**Tools > Board > Board Manager...**). Then, type "**Raspberry Pi Pico**" in the search field. From the options


that appear, download the second one, “**Raspberry Pi Pico/RP2040**,” with the latest version number.

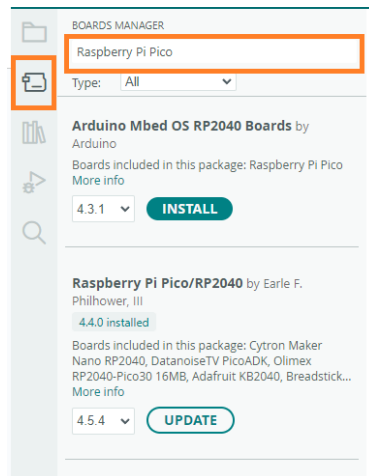

7. As shown in the image below, select the Raspberry Pi Pico board by navigating to **Tools > Board > Raspberry Pi Pico / RP2040 > Raspberry Pi Pico**.

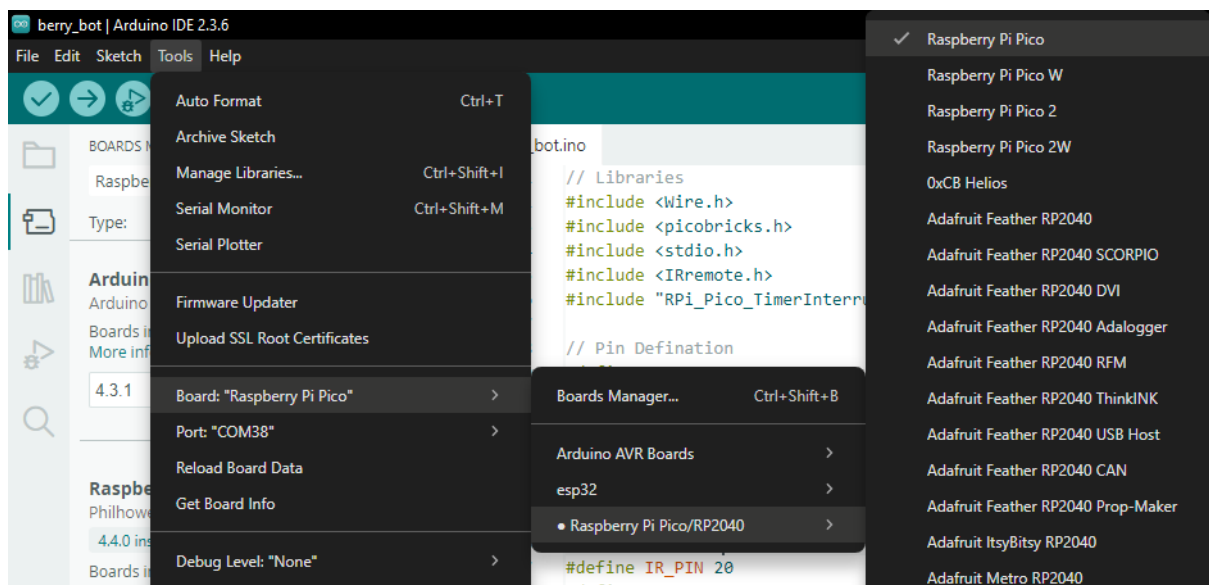


8. After this step, connect your BerryBot board to the computer while holding down the BOOTSEL button.

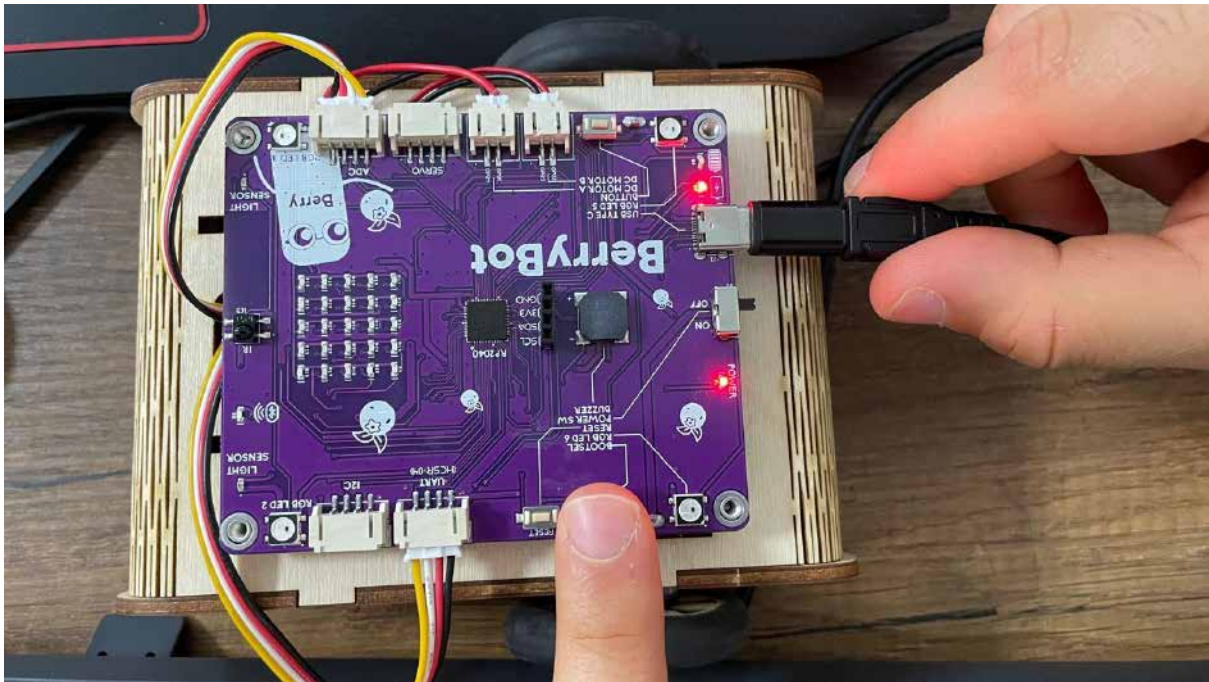


Note: After performing this operation, your BerryBot board will enter BOOT mode. Your computer will recognize the BerryBot board as a drive named RPI-RP2. When this happens, a new window for this drive will open automatically, and you can close that window.


9. After this step, from the top menu in Arduino IDE, select **Tools > Port > UF2 Board**.

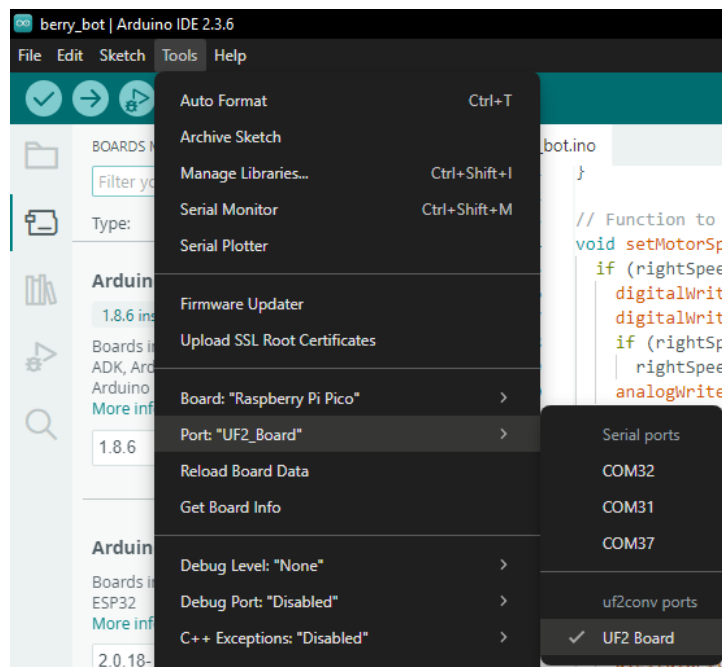


10. Click the “Upload” button in Arduino IDE to upload the UF2 file to the BerryBot motherboard.




When the UF2 file is uploaded, you will see a “Done uploading” message like the one below. The BerryBot RGB LEDs will start blinking blue.

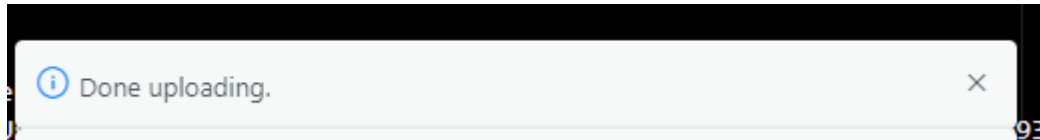


11. In Arduino IDE, establish the connection to BerryBot by selecting **Tools > Port > COMXX** (choose the port number to which BerryBot is connected).

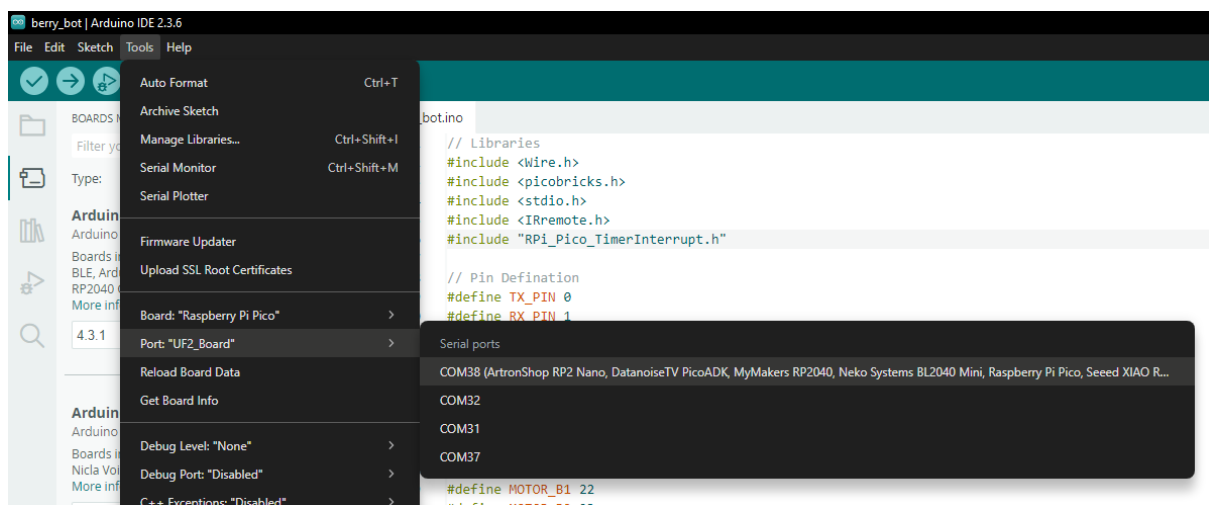

12. Now that the connection is established, you can upload the code to the BerryBot motherboard by clicking the “**Upload**” button.

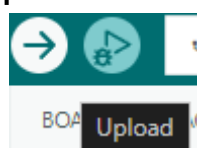

When the code is uploaded, you will see a “Done uploading” message like the one below. Once you see this message, you can disconnect the cable.

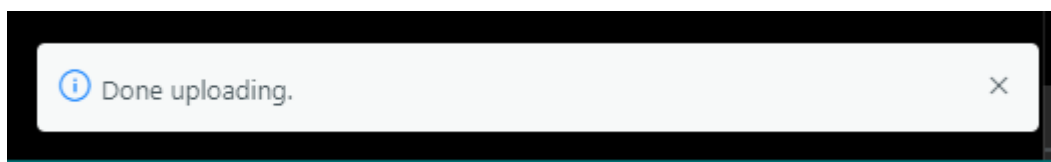

Connection

1. After the code is uploaded, disconnect the cable from the BerryBot motherboard and switch the toggle on the top left of the board to the ON position.



2. Open the PicoBricks Go mobile application on your phone.




3. From the main menu, tap the robot icon in the top left corner.




- From the categories, select BerryBot.



- From the “Select Devices” menu, you can select the top option, “BerryBot.”

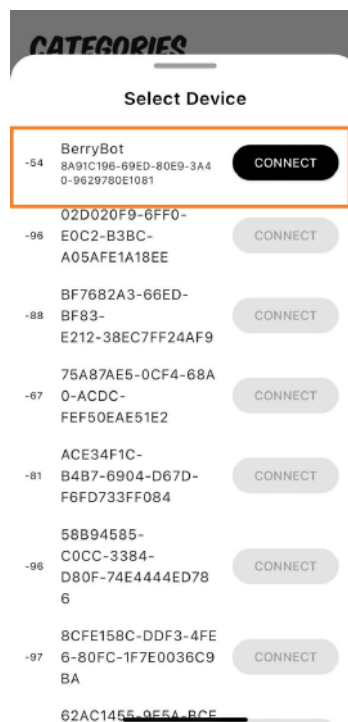

6. From the opened console screen, you can control the BerryBot. If you wish, you can switch to any console screen from the menu to also control BerryBot's matrix LEDs or RGB LEDs.

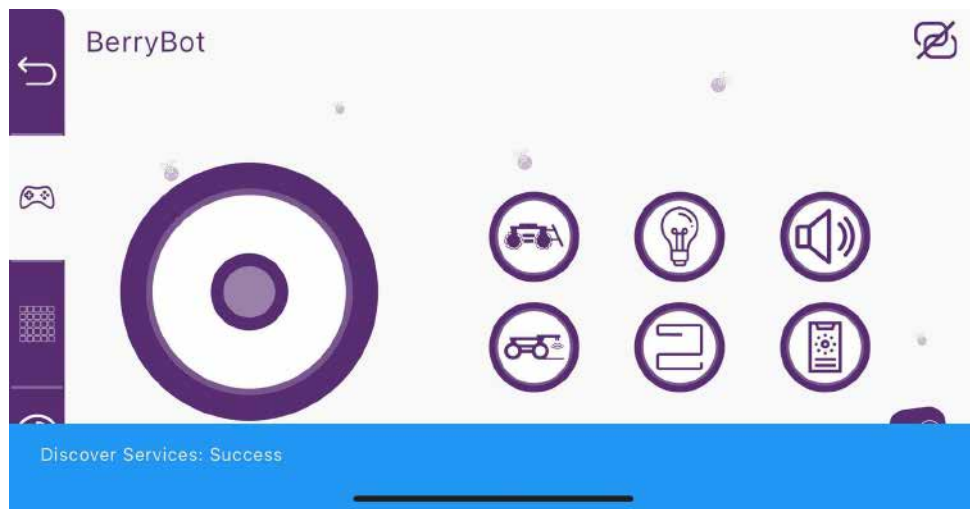

Thonny IDE

You can upload the Python code necessary to control BerryBot with PicoBricks Go to your motherboard using Thonny IDE.


To upload Python code to the BerryBot motherboard using Thonny IDE, you first need to load the MicroPython Firmware file onto the BerryBot motherboard.

You can follow the steps below to perform this operation.

1. Download and install Thonny IDE by visiting <https://thonny.org/>.

Thonny
Python IDE for beginners


Download version **4.1.7** for
Windows • Mac • Linux

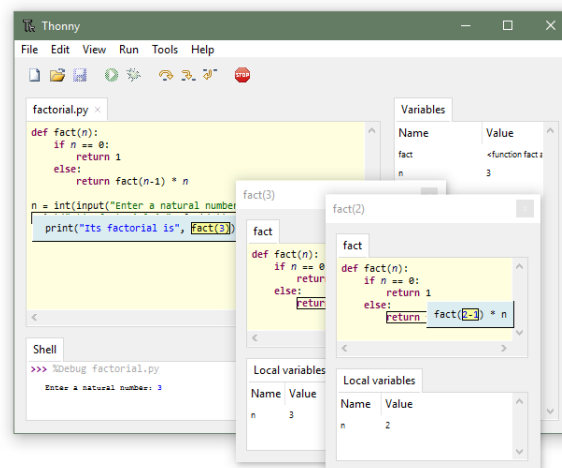

2. Open Thonny IDE.




3. Hold down the BOOTSEL button on BerryBot while connecting the cable.

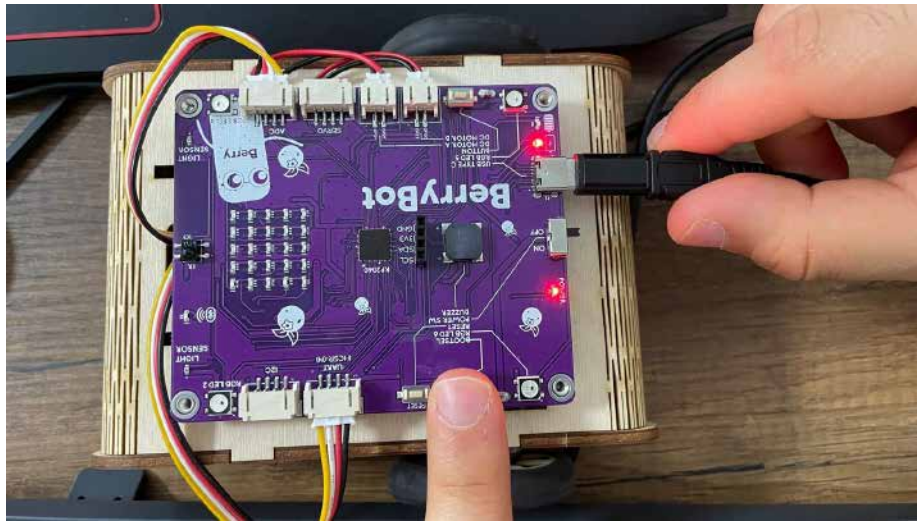

Note: After performing this operation, your BerryBot board will enter BOOT mode. Your computer will recognize the BerryBot board as a drive named RPI-RP2.


4. BerryBot works like a USB flash drive in BOOTSEL mode. This drive is named RPI-RP2.

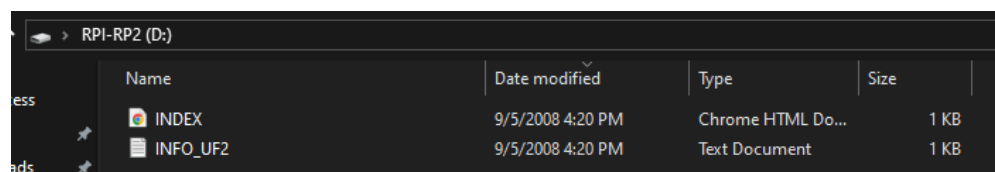

5. From GitHub, go to <https://github.com/Robotistan/BerryBot/blob/main/Bootloader/firmware.uf2> (Bootloader > firmware.uf2) and download the firmware.uf2 file. Then, save this file to the RPI-RP2 (D:) drive.




6. Upload the UF2 file you downloaded from GitHub to the RPI-RP2 (D:) drive.

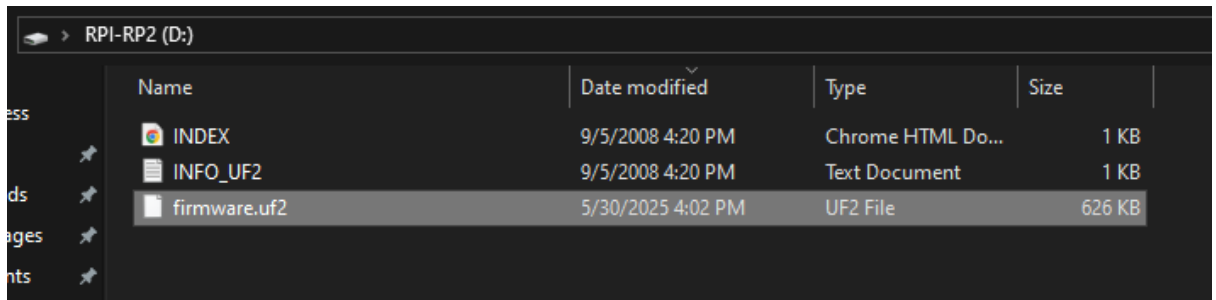

7. The BOOT process is complete; now we can switch to Thonny IDE. In Thonny IDE, select **Run > Configure Interpreter**, and in the window that opens, choose the port to which BerryBot is connected.


NOTE :For the question “Which kind of interpreter should Thonny use for running your code?”, don’t forget to select the “MicroPython (Raspberry Pi Pico)” option.

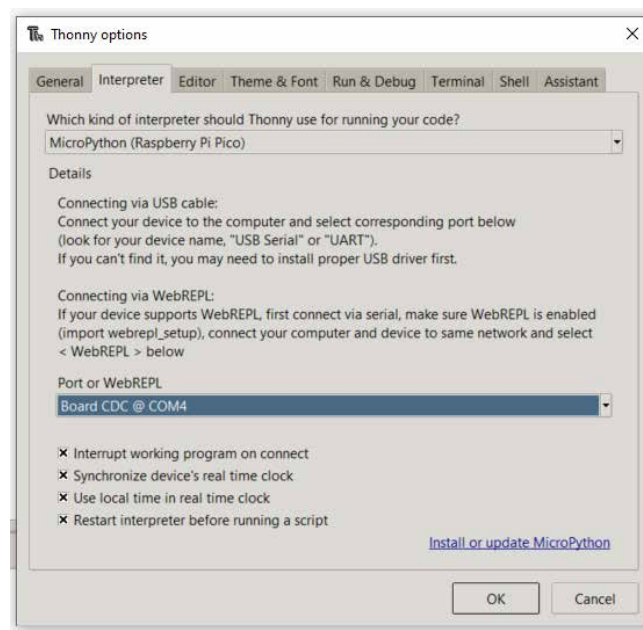


8. BerryBot is now connected to Thonny IDE. We can proceed with the code uploading process.




9. Go to the BerryBot GitHub page and navigate to **Codes > MicroPython > Pre-Installed Code**, then download the [berrybot.py](#) and [main.py](#) code files to your computer.

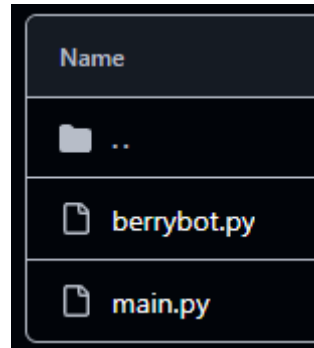


10. Open the [berrybot.py](#) and [main.py](#) files you downloaded in Thonny IDE.

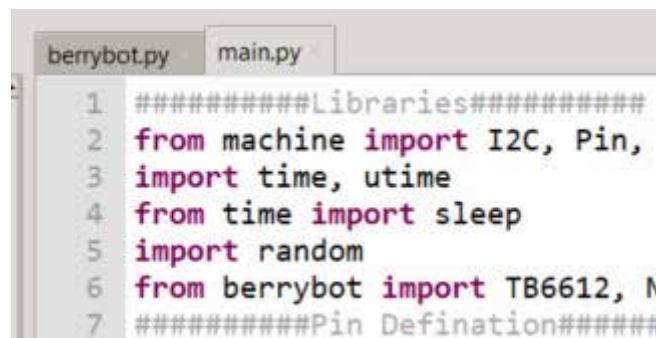


11. First, open the [berrybot.py](#) file. Then follow the path **File > Save as...** (or press **Ctrl + Shift + S**) and click the **Save as...** button.

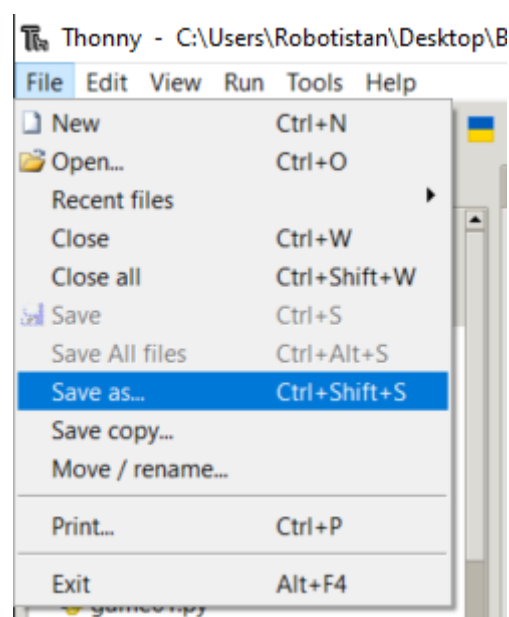


12. In the small window that opens, select **Raspberry Pi Pico**.

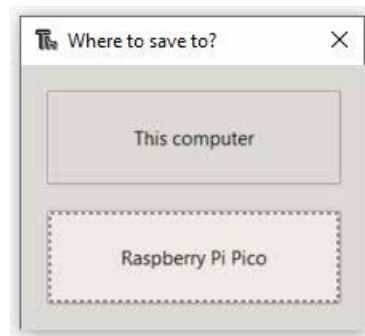


13. Save the file by naming it [berrybot.py](#)

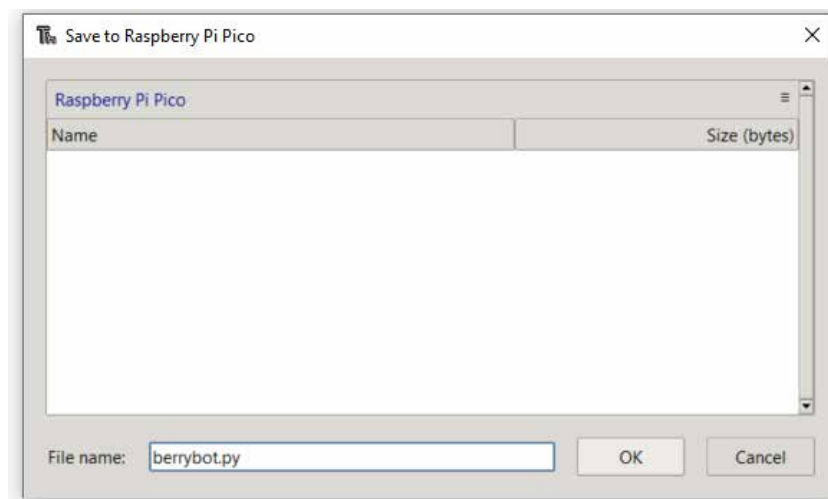

14. Let's do the same for the [main.py](#) file. Open the [main.py](#) file and follow the path **File > Save as...** (Ctrl + Shift + S), then click the **Save as...** button. In the window that appears, select **Raspberry Pi Pico** and save the file with the name [main.py](#).

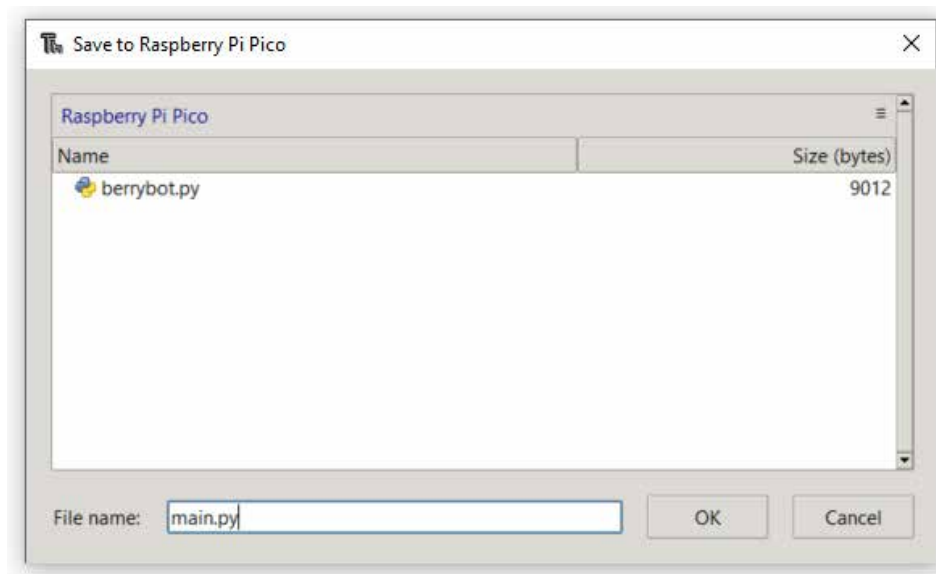


After this process, the [berrybot.py](#) and [main.py](#) files will be saved inside the BerryBot mainboard.

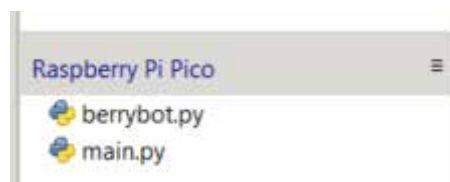

The code upload process is complete. You can now disconnect the cable and connect to BerryBot using your phone.

Contents


1. After the code is uploaded, disconnect the cable from the BerryBot mainboard and switch the toggle on the top left of the board to the **on** position.

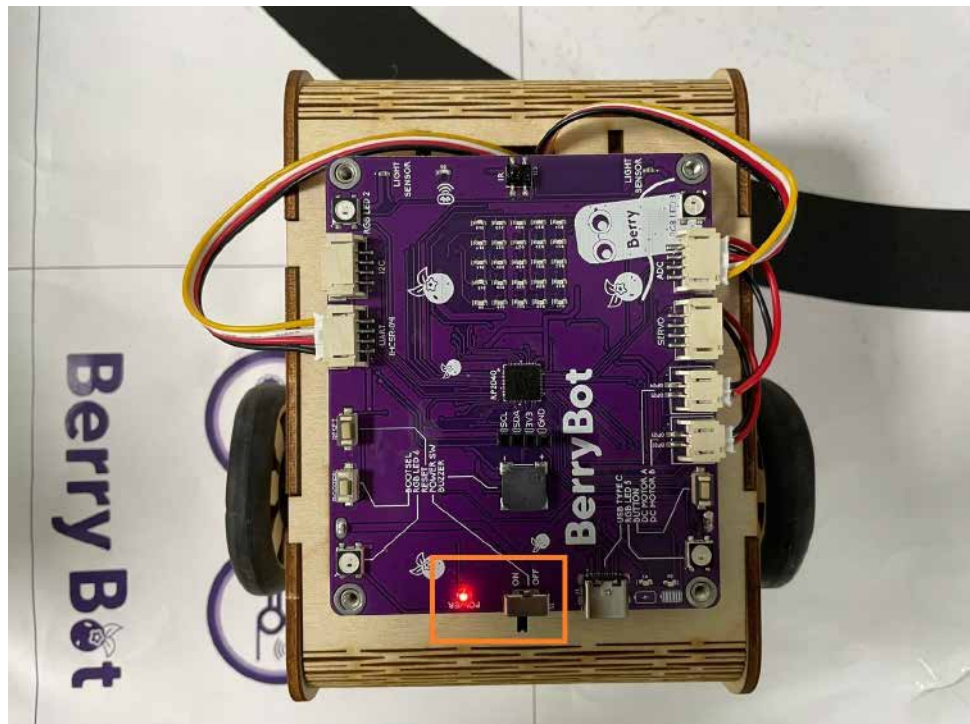

2. Open the PicoBricks Go mobile app on your phone.




3. From the main menu, click the robot button at the top left.

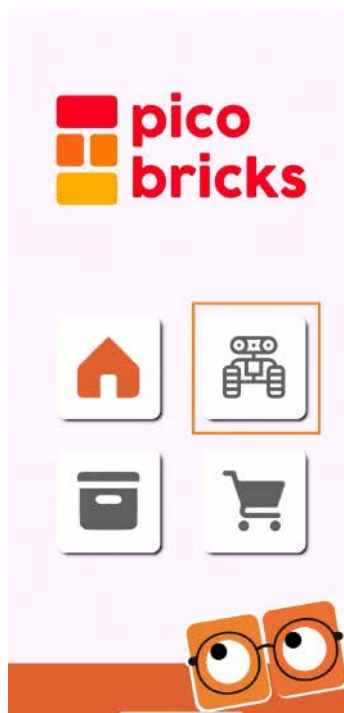


4. Select BerryBot from the categories.



5. From the “Select Devices” menu, you can select the topmost “BerryBot” device.

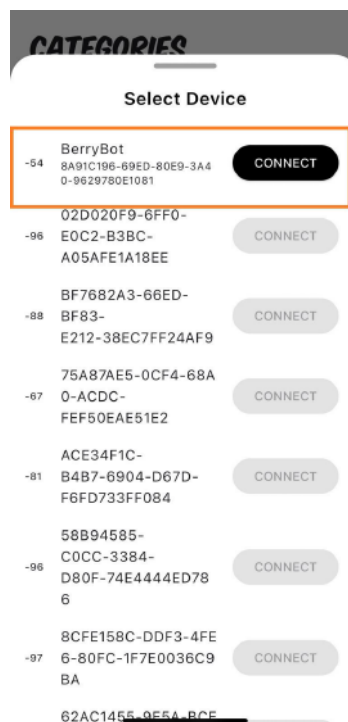

6. You can control the BerryBot from the opened console screen. If you want, you can switch to any console screen from the menu to also control BerryBot's matrix LEDs or RGB LEDs.

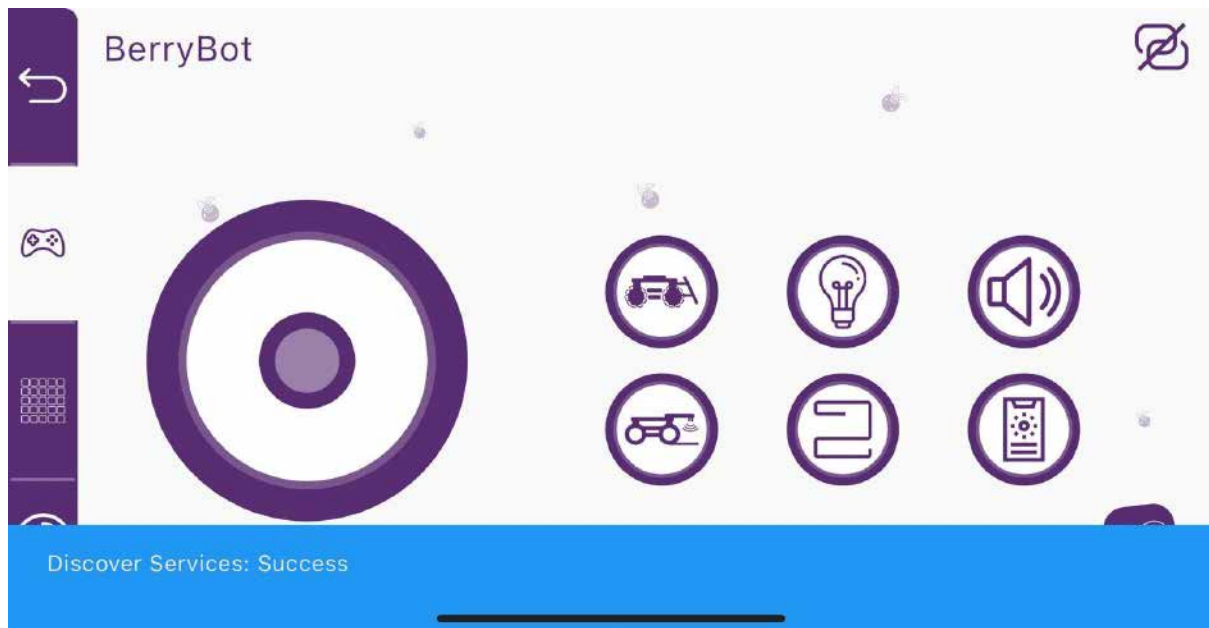


PicoBricks IDE

PicoBricks IDE is a web-based editor that allows us to code BerryBot and PicoBricks robots using block programming. With this editor, you can create block-based projects by using the data from buttons and joysticks on the PicoBricks Go consoles.


In this article, instead of controlling BerryBot with a single PicoBricks IDE code, we will learn how to use the buttons in **PicoBricks Go** within PicoBricks IDE..

To program BerryBot with PicoBricks IDE, you need to upload the firmware file into the BerryBot mainboard.

1. Go to the web address <https://ide.picobricks.com/verticalblocks.html?0> to open the PicoBricks IDE.

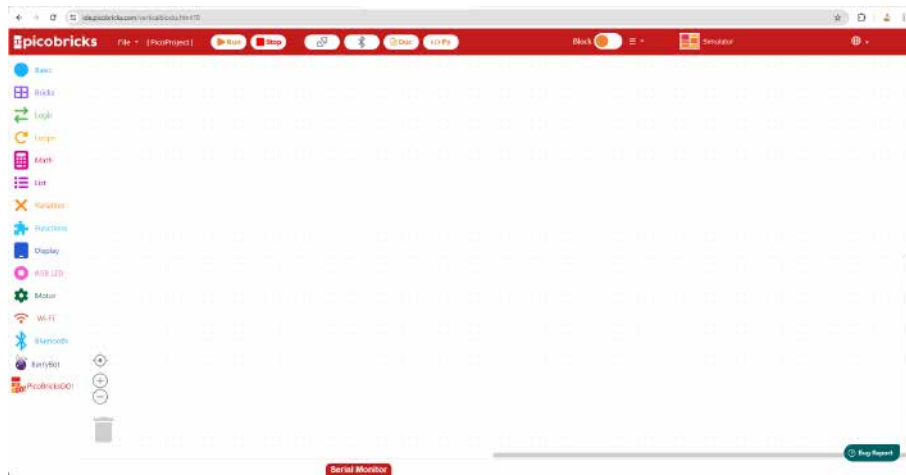

2. Hold down the BOOTSEL button while connecting the cable.

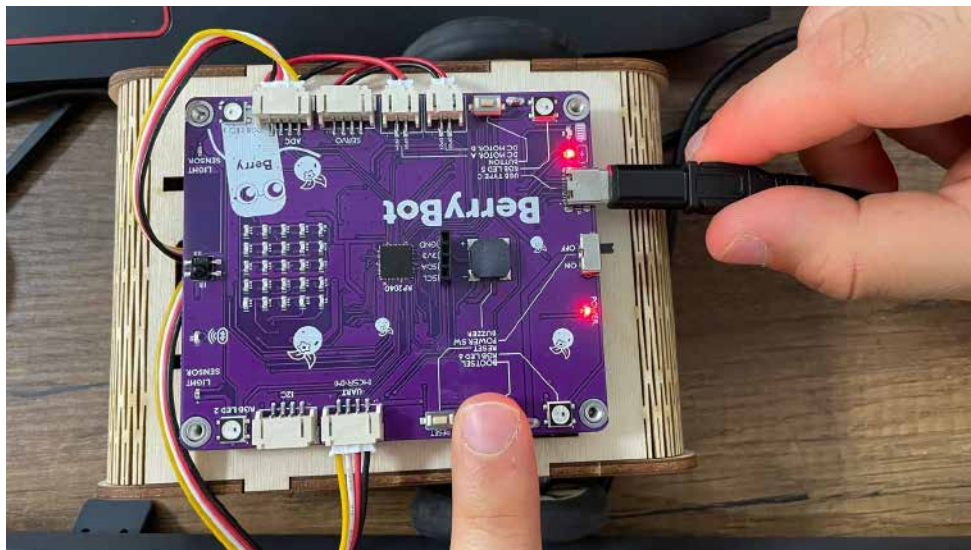


Note: After performing this operation, your BerryBot board will enter BOOT mode. Your computer will recognize the BerryBot board as a drive named RPI-RP2.


While in BOOTSEL mode, BerryBot functions like a USB flash drive. This drive is named RPI-RP2.

RPI-RP2 (D:)				
	Name	Date modified	Type	Size
	INDEX	9/5/2008 4:20 PM	Chrome HTML Do...	1 KB
	INFO_UF2	9/5/2008 4:20 PM	Text Document	1 KB


3. Click the **“Upload BerryBot’s Firmware”** button.

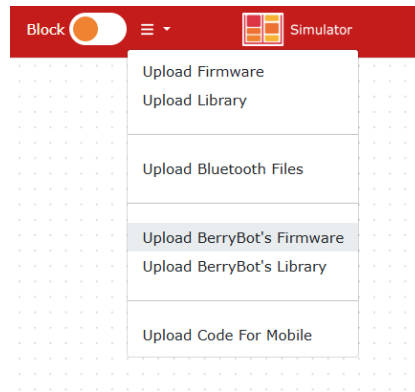

4. From the opened window, we need to select where to upload the firmware file. Since we will upload the firmware file to the BerryBot motherboard, select the RPI-RP2 (D:) drive and click the **“Save”** button.

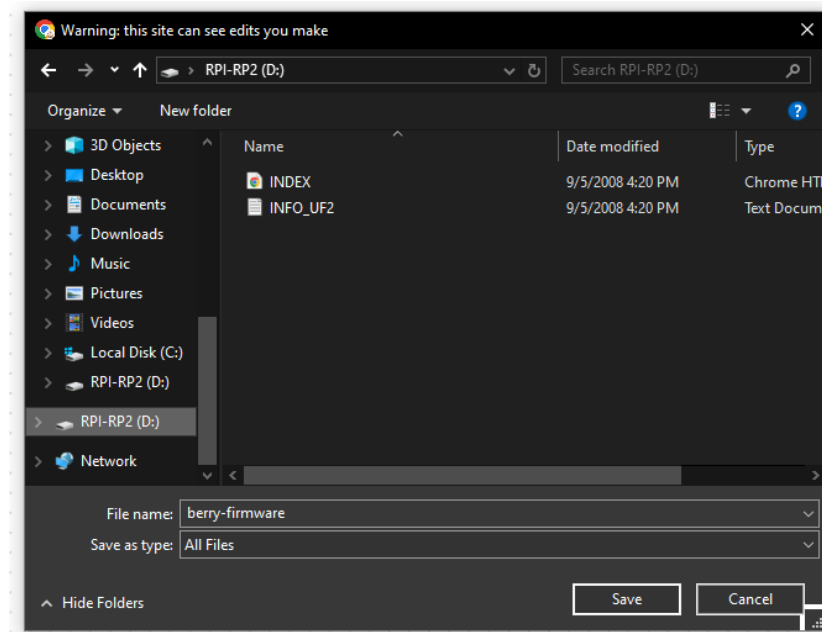


5. Since our firmware file has been uploaded to the BerryBot motherboard, we can now connect BerryBot to the PicoBricks IDE. Click on the connection icon, select the port to which the BerryBot is connected, and then click the Connect button.

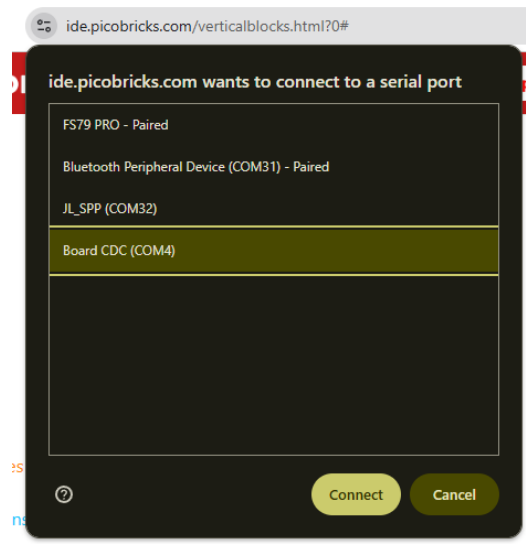

When the connection is established, the icon will change as shown below.



- Let's upload the BerryBot library into the BerryBot motherboard using the **"Upload BerryBot's Library"** button.

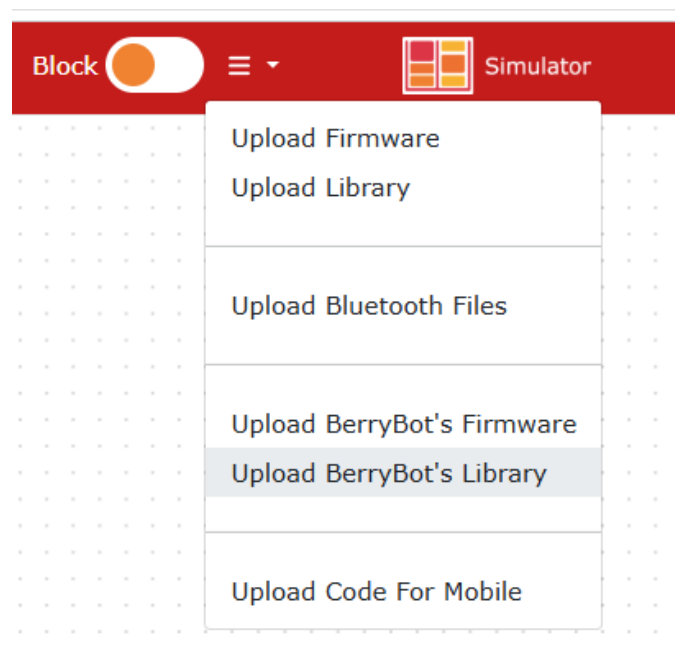

While the library is loading, please wait for the loading bar below to fill up.




7. We have completed the connection and library processes. Now we can start writing code. To explain the use of the PicoBricks IDE with the PicoBricks Go mobile app, let's start creating the code to control the BerryBot using the joystick controller of the BerryBot console.


The PicoBricks Go blocks and their uses in the PicoBricks IDE are as follows

Block Name	Description
Connect with BLE	Starts the BLE connection.
Check BLE connection	Checks the BLE connection.
Select mode: Horn	Checks which button is pressed in the app.
Definition LED Matrix	Use the LED Matrix console in the app.
Select LED Matrix menu	Checks whether the LED Matrix or RGB LED console is selected.
Set RGB LED to blink every 0.25 second	Sets the blinking duration of the RGB LEDs.
Joystick X definition	Defines the x and y angles coming from the joystick on the BerryBot console.
Joystick X value	Allows us to use the x and y angles coming from the joystick on the BerryBot console.
Joystick Right motor speed	Adjusts the speed of the right and left motors according to the angles received from the joystick.
Joystick Motor Speeds	Transfers the set speeds to the motors.


8. To control the BerryBot together with PicoBricks Go, you need to create the following structure in the PicoBricks IDE.

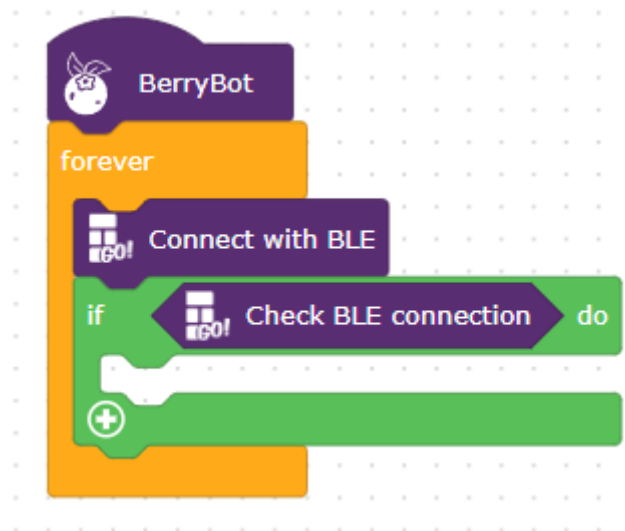

9. Let's add the following conditional structure to select the mode or console with which we will control the BerryBot.

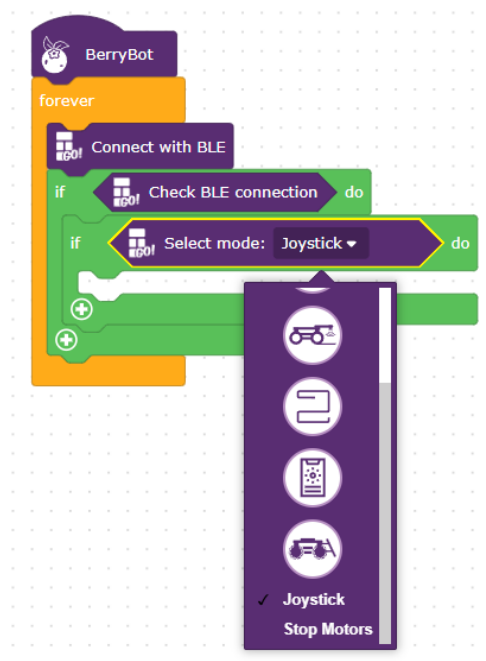

10. When we release the joystick, that is, when the joystick is at the center point, to make it stop, and to make the motors move according to the joystick's position, create the following conditional structure and complete the code.

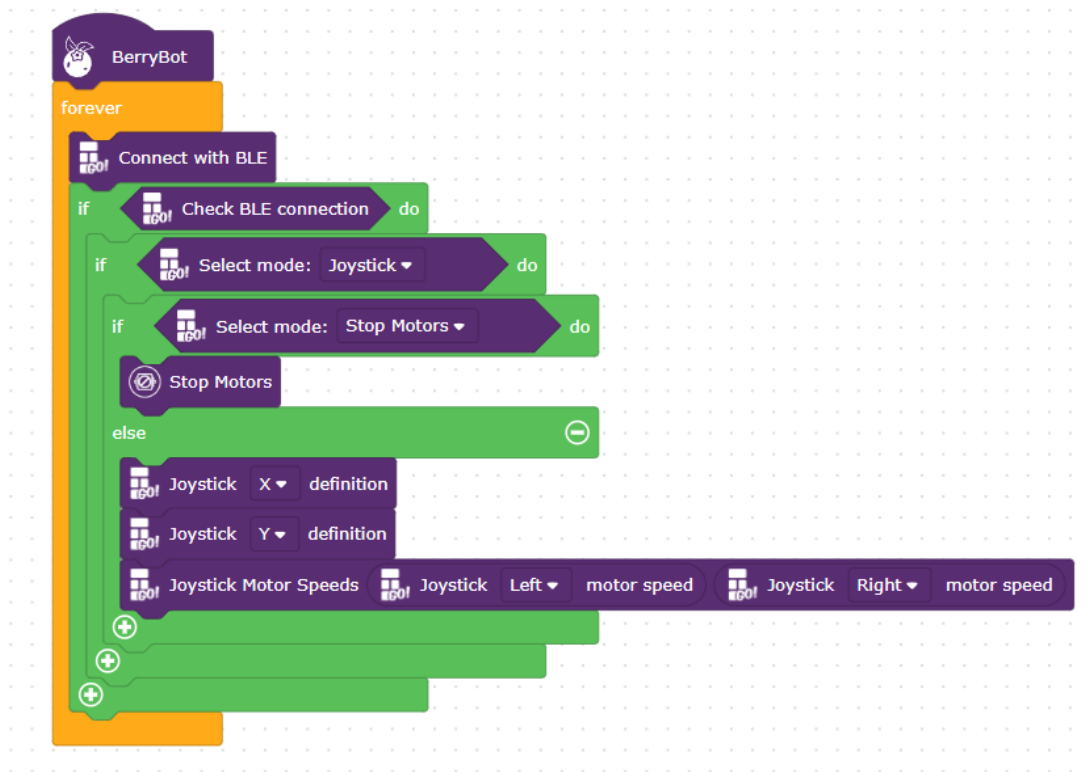

We have prepared the code; now we can proceed with the connection process. You may disconnect the cable.

Contents


1. Once the code is loaded, disconnect the cable from the BerryBot motherboard and turn the switch on the top left corner of the board to on.



2. Open the PicoBricks Go mobile app on your phone.




3. From the main menu, click on the robot button on the top left.

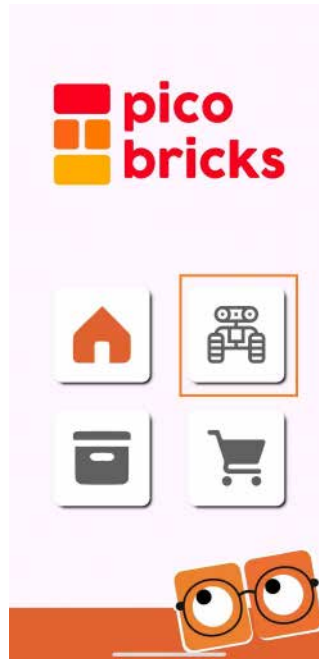


4. Select BerryBot from the categories.



5. From the “**Select Devices**” menu you can select the topmost device “**BerryBot**”.

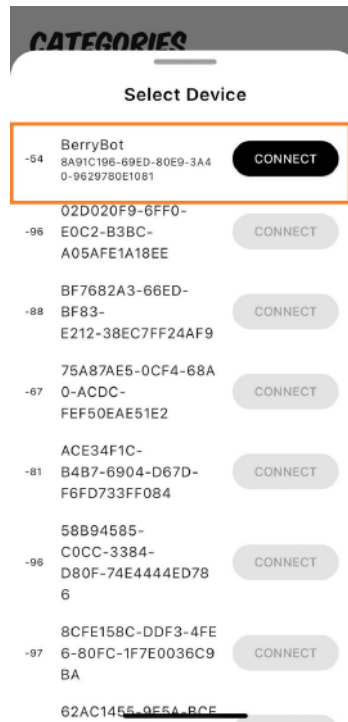

6. You can control BerryBot using the joystick from the console screen that opens.

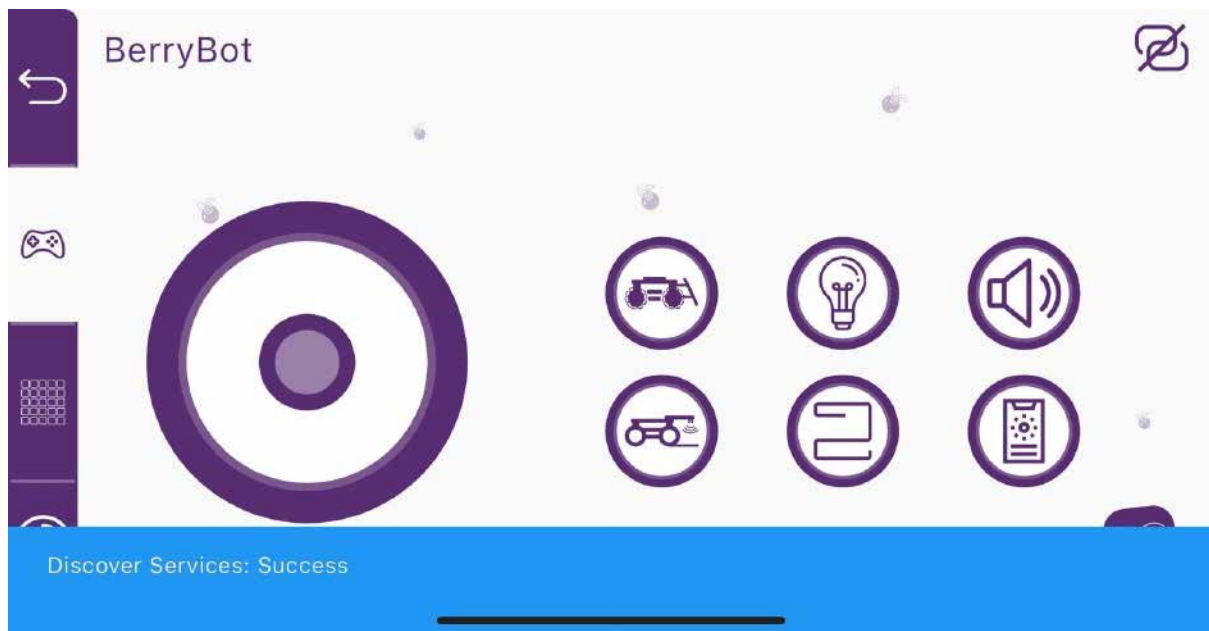



ROBOTISTAN

Selim GAYRETLI (Educational Technologist and Content)

Atakan OZTURK (Electrical and Electronics Engineer)

Elanur TOKALAK (Graphic Designer)