

## Ordering a supersession:


1. Open the catalogue and enter the VIN into the search bar and hit "GO"

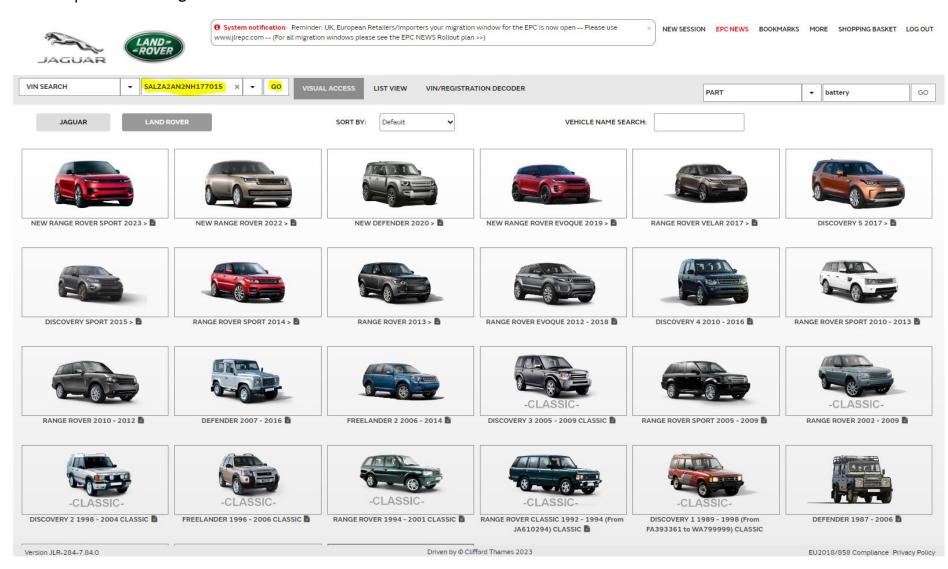


## 2. Find the part/callout item that you need

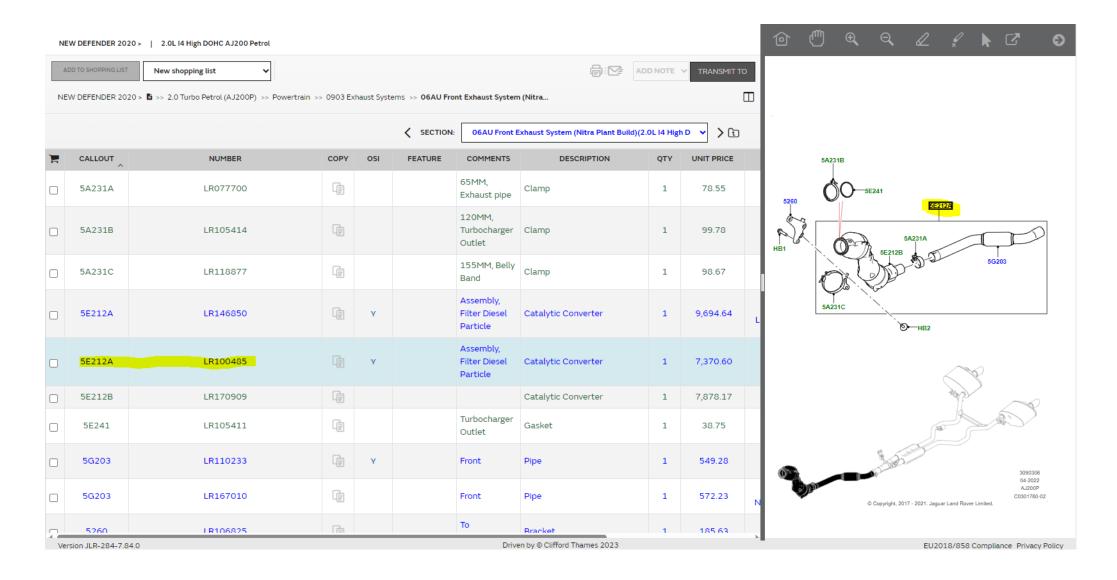

## 3. Click on the "Y" in the OSI column for the item

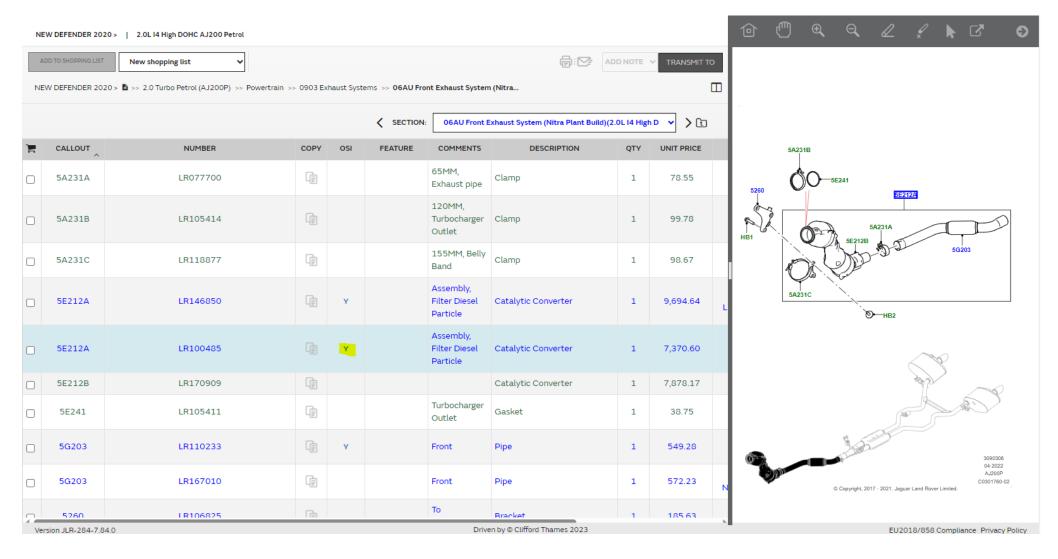

## 4. A list will present itself showcasing the supersession list for the item

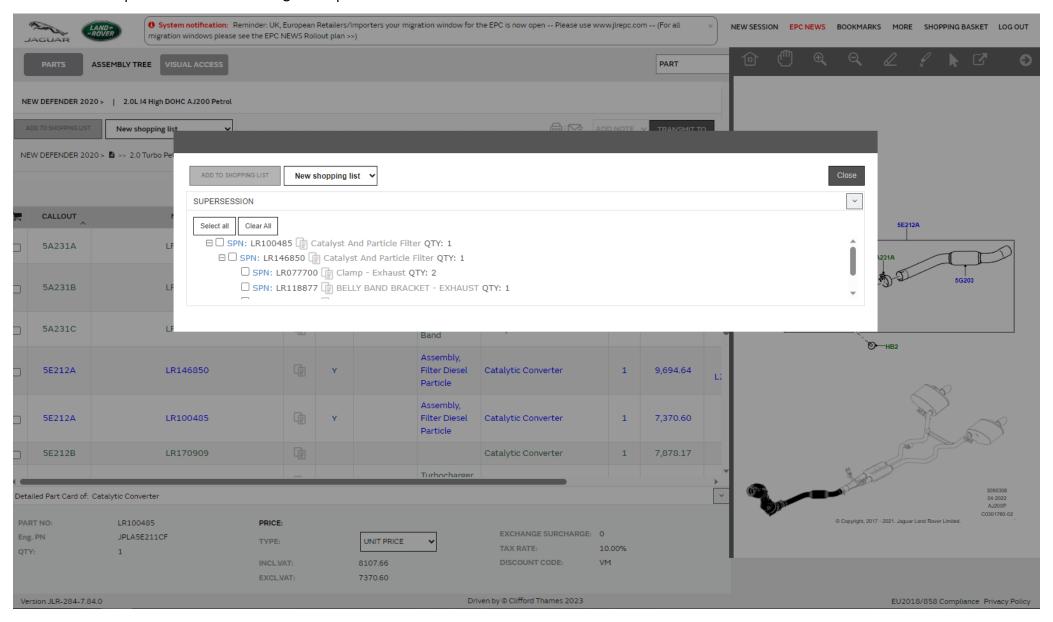

5. Take note of the layout of the white square boxes in relation to column position. As example this item has two supersessions from the original OEM part number noted by column 2 and items in 3. In addition, note that column 3 has a list of parts. This whole parts list is required to replace the original item as it seems JLR has split it up into individualised parts to make it possible to only replace individual items instead of having to buy the entire system just to get a clamp for example.

