



TECHNICAL SERVICE BULLETIN

Ambient Air Temperature Not Displayed

26-2218

09 July 2026

Model:

Ford 2021-2026 Next-Generation Ranger (RA)	Build Date: Up to 12 November 2025
2022-2026 Next-Generation Ranger (RB)	Build Date: Up to 16 March 2026
2021-2026 Next-Generation Everest	Build Date: Up to 12 November 2025

Issue: Some 2021-2026 Next-Generation Ranger and Everest vehicles may experience the ambient (outside) air temperature is not being displayed. A possible cause for this concern is a faulty ambient air temperature sensor.

Action: Should a vehicle present with the above condition, Technicians are advised to refer to the Service Procedure below.

Parts

Service Part Number	Claim Quantity	Package Order Quantity	Description	Note
HC3Z-12A647-B	1	1	Ambient Air Temperature Sensor	
PC3Z-14A411-D	1	1	Pigtail	
3U2Z-14A088-AB	1	1	Terminal Kit	
-	1	1	Wiring Harness Tape/felt/fleece Tape	(Obtain Locally)

Labor Times

Description	Operation No.	Time
Remove/Install the ambient air temperature sensor and repair the ambient air temperature sensor wiring pigtail kit as per the given service procedure	262218A	0.5 Hrs.

Repair/Claim Coding

Causal Part:	12A647
Condition Code:	42


PDR Table

PDR Code	Description	Time
TSB262218	Remove/Install the ambient air temperature sensor and repair the ambient air temperature sensor wiring pigtail kit as per the given service procedure	0.5 Hrs.

Service Procedure


1. Remove and detach the ambient air temperature sensor and bezel. Refer Workshop Manual (WSM) Section 412-00. (Figure 1)

Figure 1

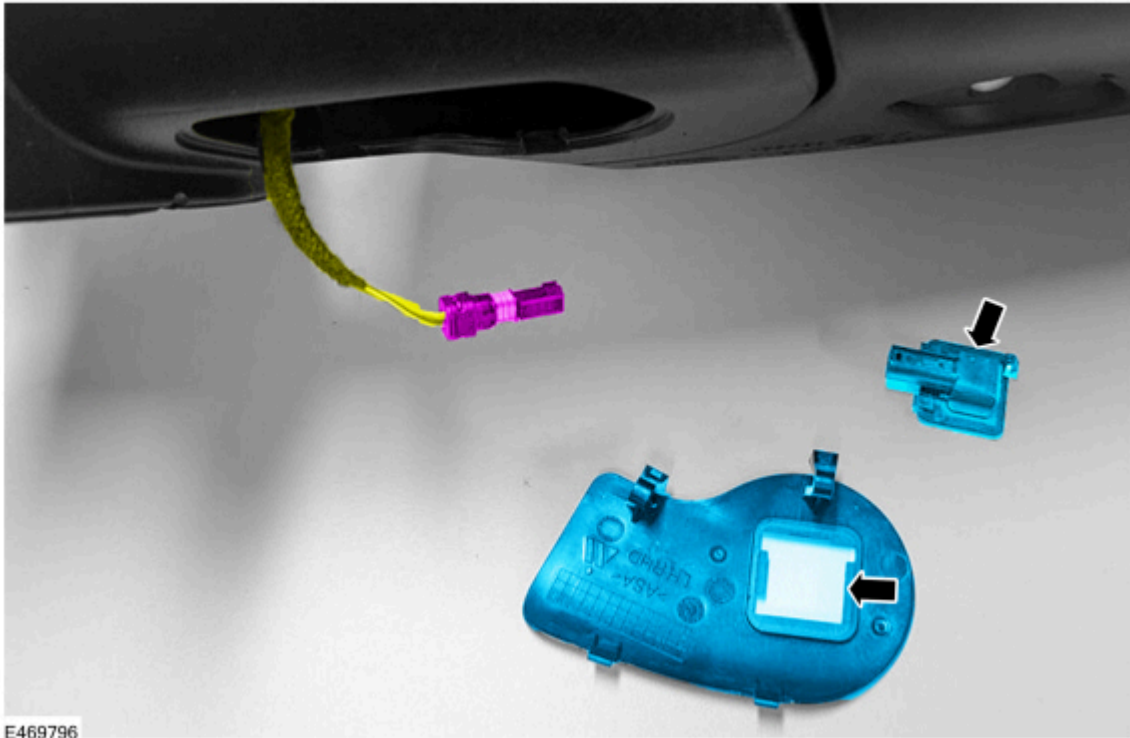


2. Cut the ambient air temperature sensor wiring harness and connector as close to the connector as possible. (Figure 2)

Figure 2

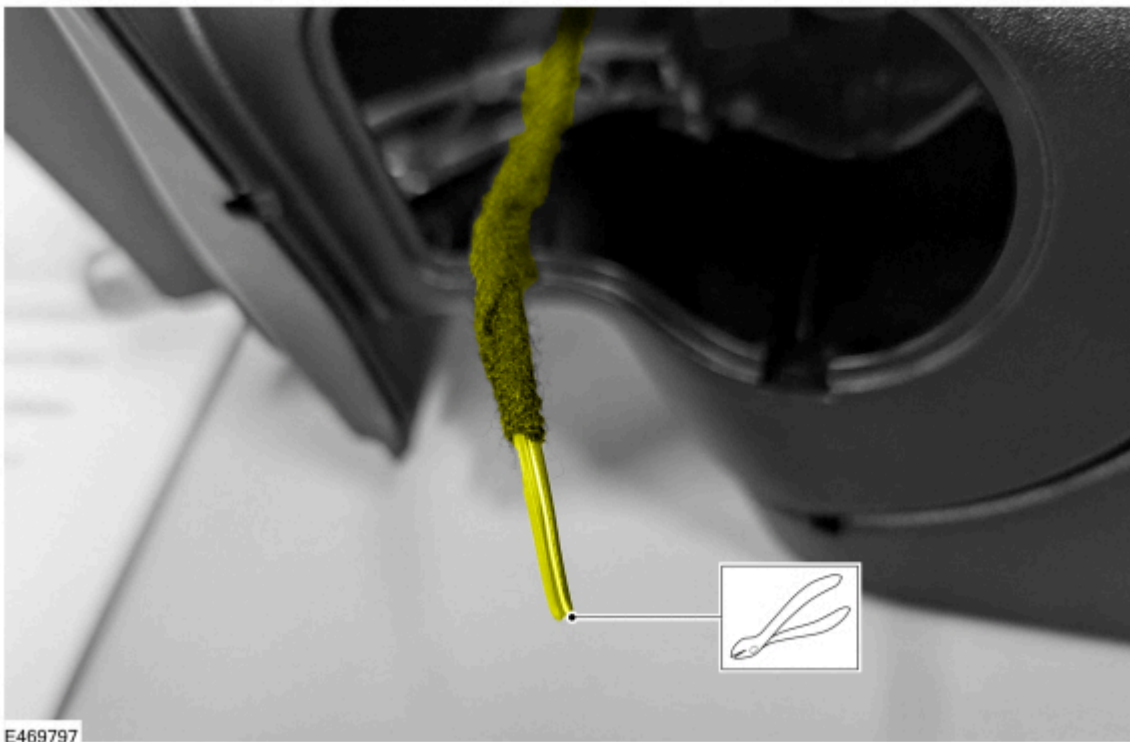

3. Cut the new ambient air temperature sensor wiring pigtail kit, 80mm back from the connector. (Figure 3)


Figure 3

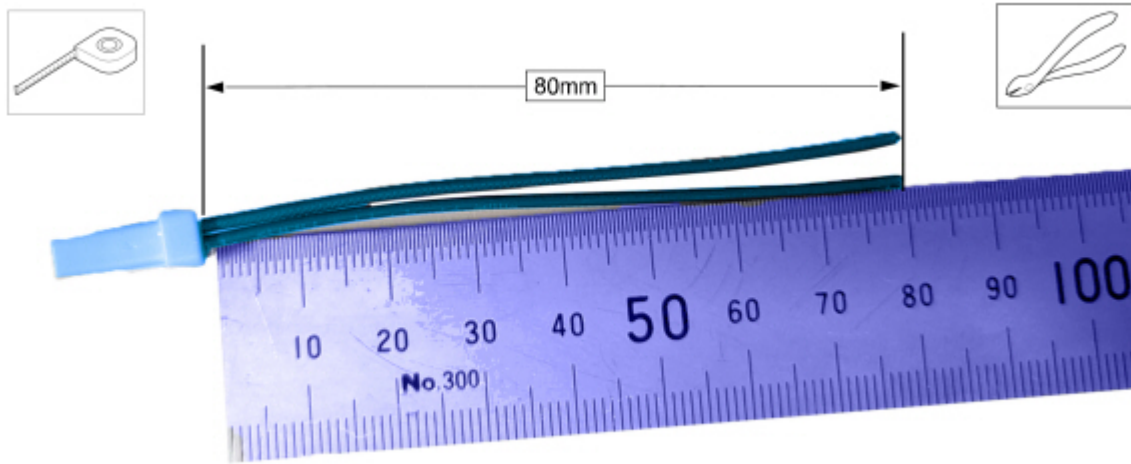

E469798

4. Splice the new ambient air temperature sensor wiring pigtail kit to the harness using the solder method. Refer to the Wiring Diagram for soldering details. (Figure 4)

Figure 4

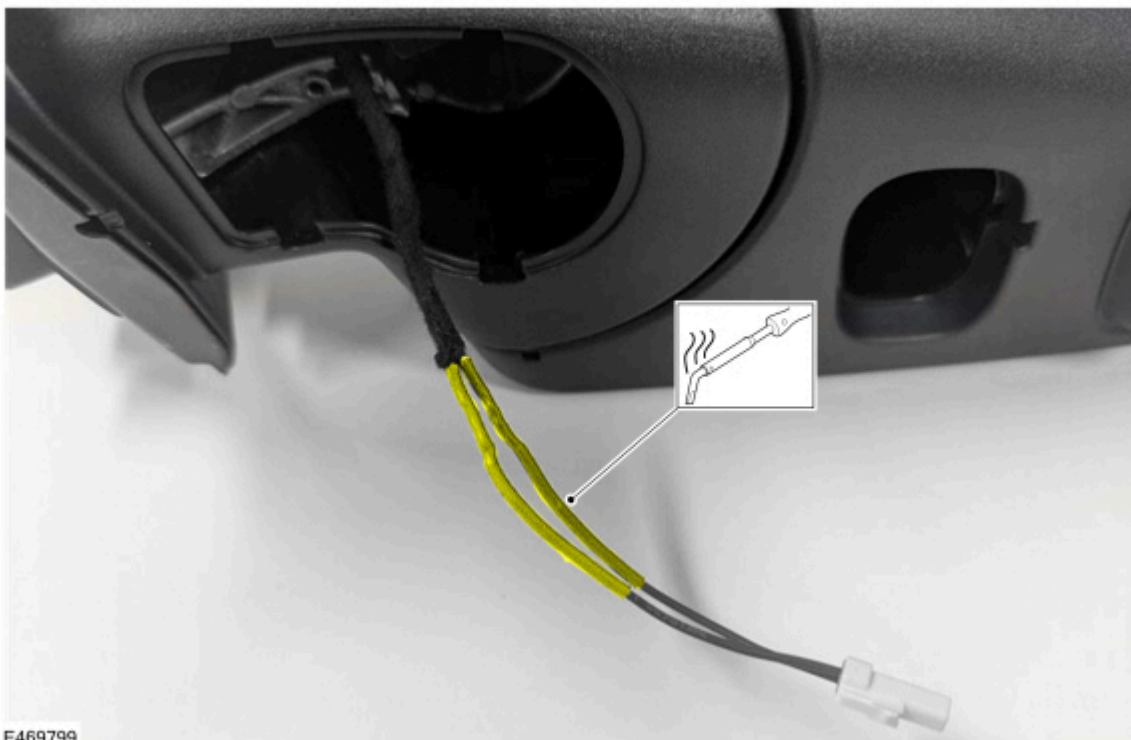

E469799


5. Wrap the new section of wiring (including the shrink tube) with felt/fleece adhesive tape. (Figure 5)

Figure 5



6. Fit the new ambient air temperature sensor to the bezel. (Figure 6)

Figure 6

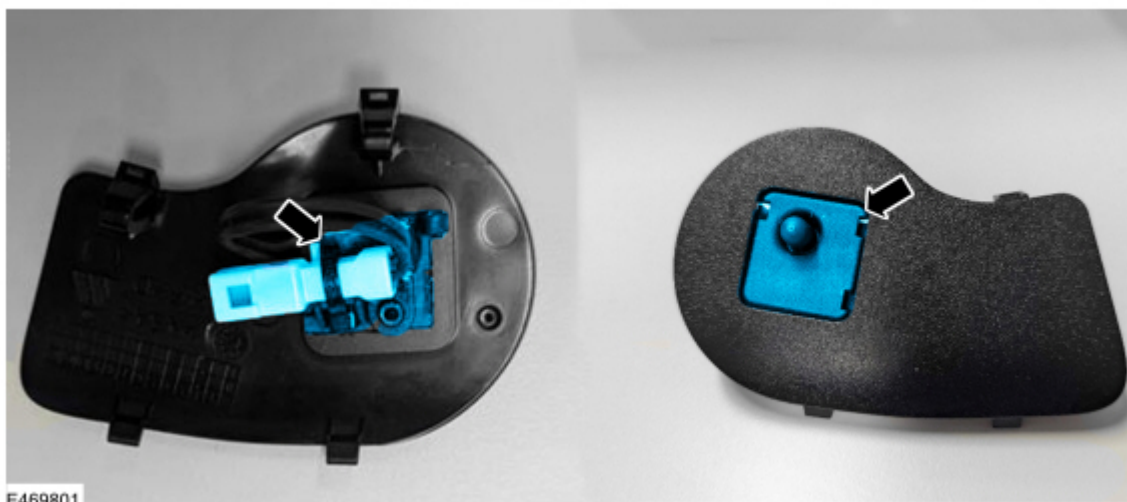

7. Install the new ambient air temperature sensor. Refer WSM Section 412-00.

NOTE: An ambient air temperature sensor reset must be performed. Refer to Reset the Outside Air Temperature Sensor Learned Values in WSM Section 412-00.

© 2026 Ford Motor Company
All rights reserved.

This bulletin represents technical service information only. Without exception all gratis repairs and replacements are subject to the individual warranty and policy procedures of the supervisory Ford Company. The illustrations, technical information, data and descriptive text in this issue, to the best of our knowledge, were correct at the time of publication.