

2016.0 RANGE ROVER (LG), 501-03

BODY CLOSURES

FRONT DOOR (G1509216)

REMOVAL AND INSTALLATION

REMOVAL

NOTE:


Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-01 Battery, Mounting and Cables, Specifications).

2.

NOTE:


Left hand shown, Right hand similar.

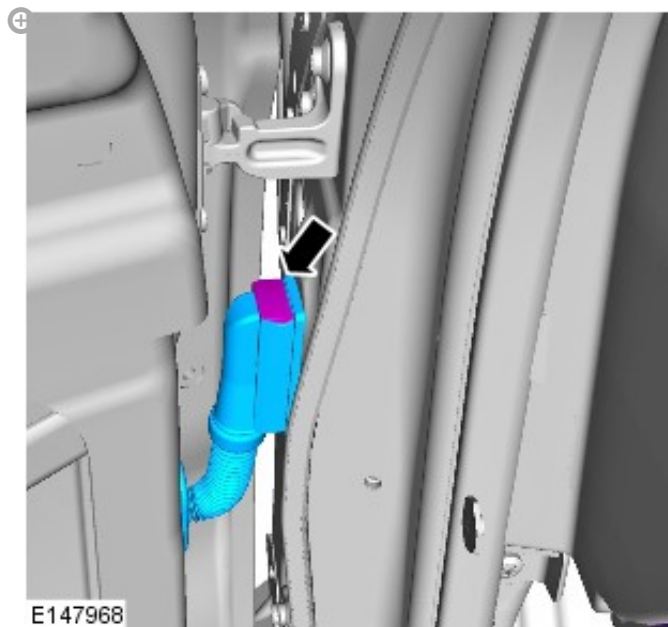

3.

NOTES:

- Left hand shown, Right hand similar.
- This step requires the aid of another technician

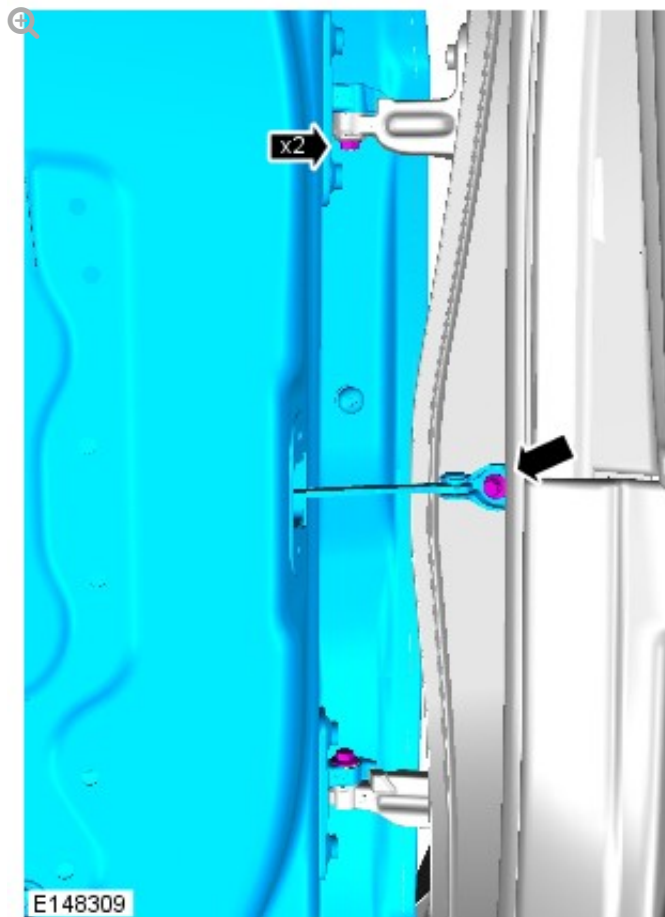

Torque:

Check arm bolt **24 Nm**

Hinge bolt **13 Nm**

NOTE:

Do not disassemble further if the component is remove for access only.


4. Refer to: [Front Door Window Regulator Motor](#) (501-11 Glass, Frames and Mechanisms, Removal and Installation).
5. Refer to: [Exterior Mirror](#) (501-09 Rear View Mirrors, Removal and Installation).
6. Refer to: [Exterior Front Door Handle](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).

7. Refer to: [Front Door Latch](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
8. Refer to: [Front Door Check Arm](#) (501-03 Body Closures, Removal and Installation).

9.

NOTE:

Left hand shown, Right hand similar.

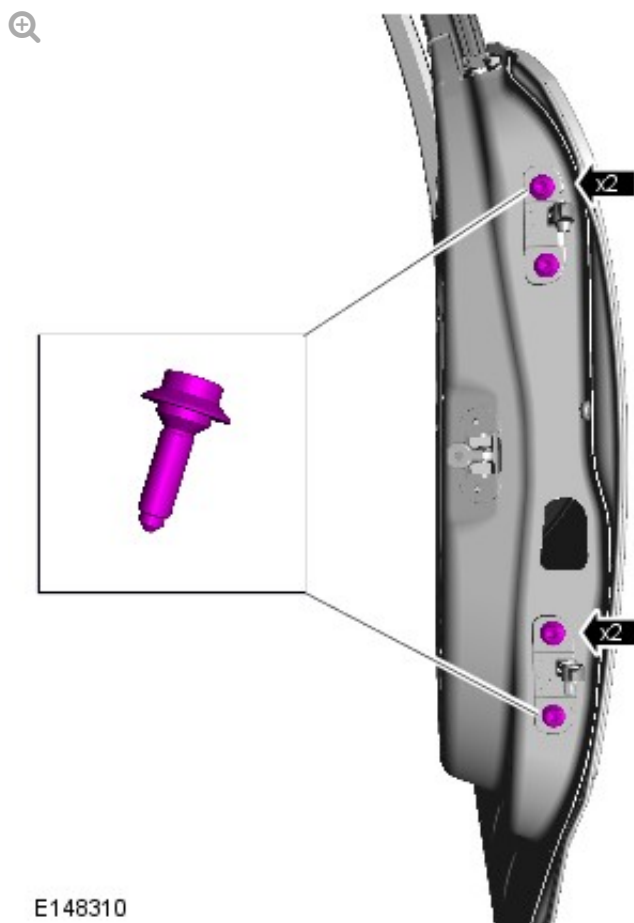

E148310

Torque: 35 Nm


10.

CAUTION:

Protect the surrounding paintwork to avoid damage.

NOTE:

Right hand shown, Left hand similar.

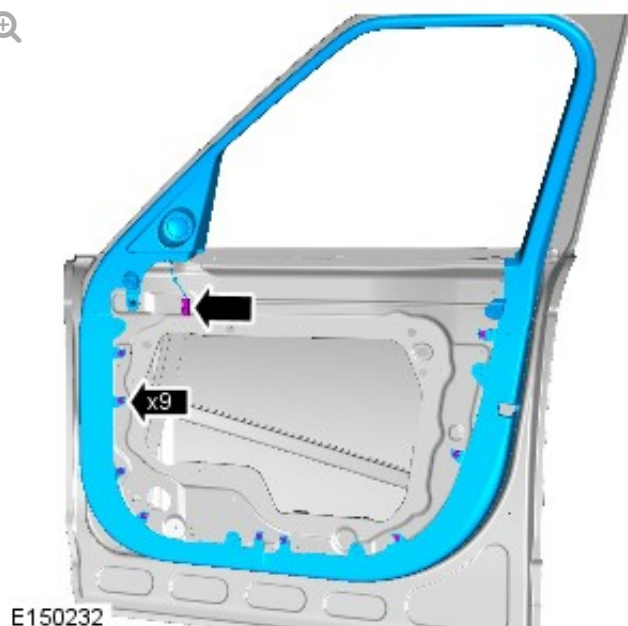

11.

CAUTION:

Protect the surrounding paintwork to avoid damage.

NOTE:

Right hand shown, Left hand similar.




12.

CAUTION:

Protect the surrounding paintwork to avoid damage.

NOTE:

Right hand shown, Left hand similar.

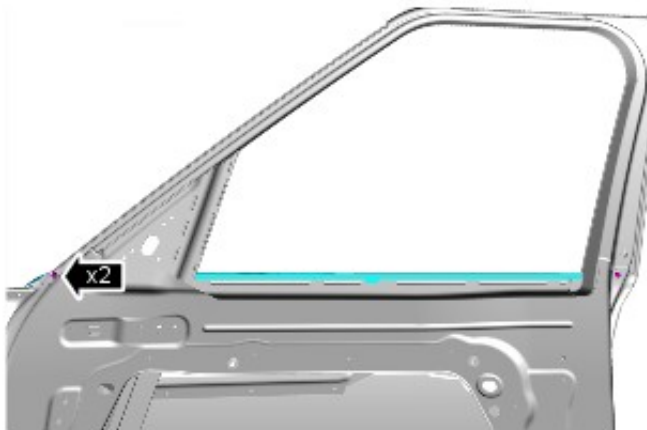

E147946

Torque: 1.2 Nm


13.

CAUTION:

Protect the surrounding paintwork to avoid damage.

NOTE:

Right hand shown, Left hand similar.

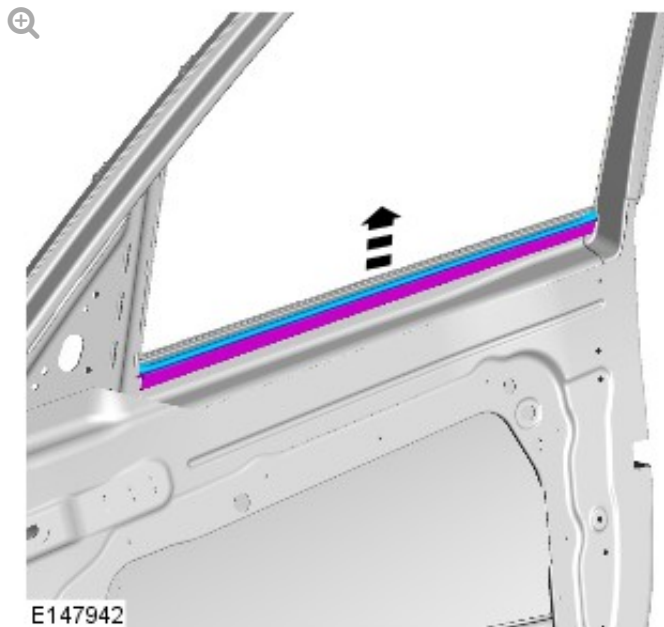


14.

CAUTION:

Protect the surrounding paintwork to avoid damage.

NOTE:

Right hand shown, Left hand similar.

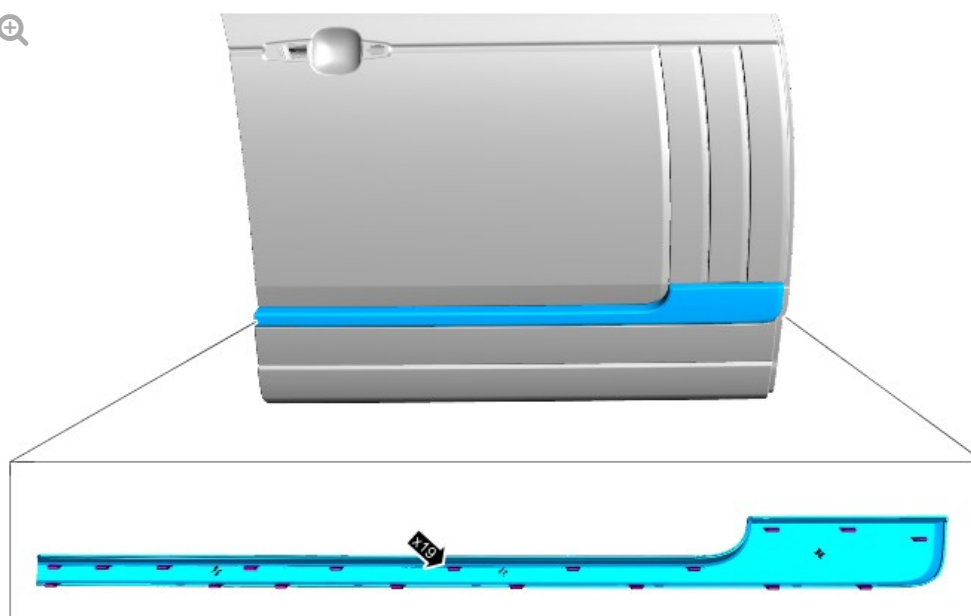

E147952


15.

CAUTION:

Protect the surrounding paintwork to avoid damage.

NOTE:

Right hand shown, Left hand similar.

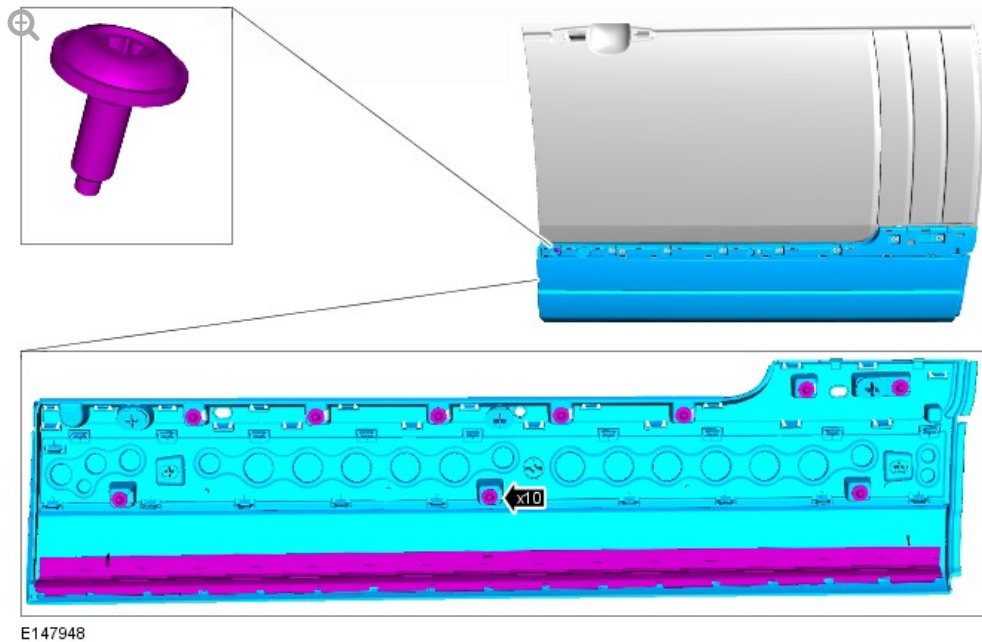

Torque: 1.2 Nm


16.

CAUTION:

Protect the surrounding paintwork to avoid damage.

NOTE:


Right hand shown, Left hand similar.

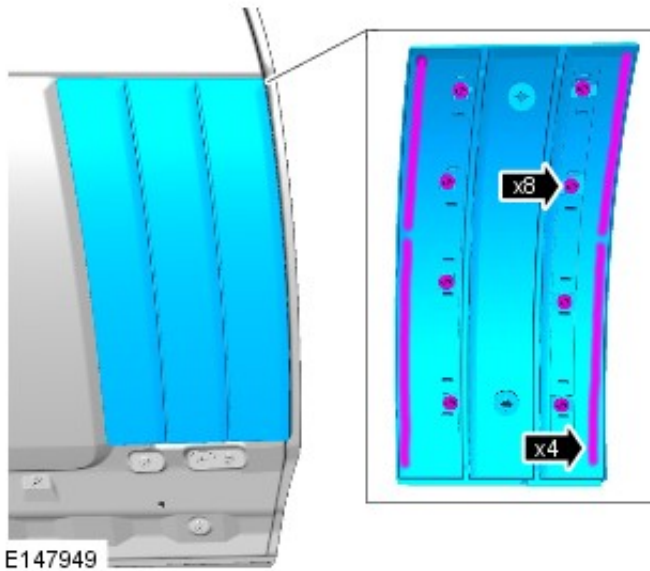

17.

NOTE:


Right hand shown, Left hand similar.

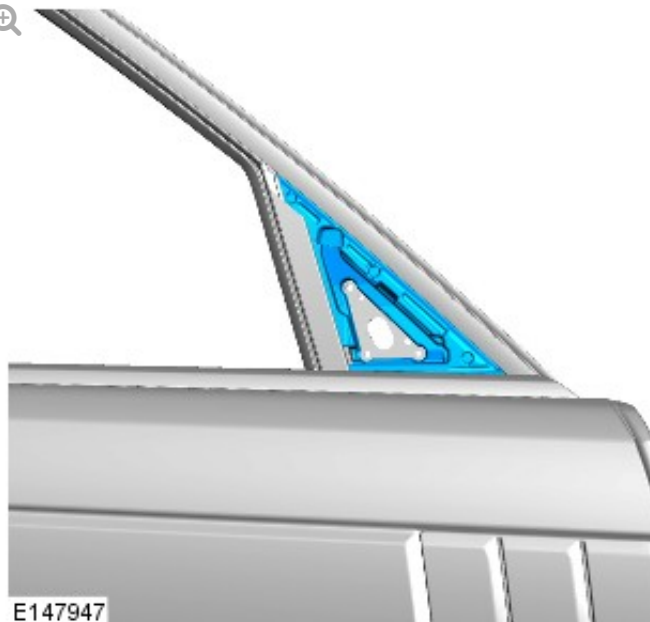

18.

NOTE:

Right hand shown, Left hand similar.

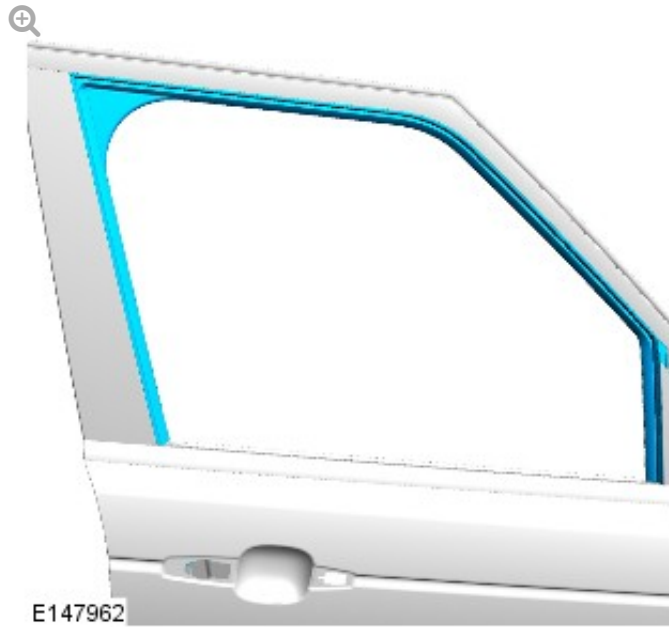


19.

CAUTION:

Protect the surrounding paintwork to avoid damage.

NOTE:

Right hand shown, Left hand similar.

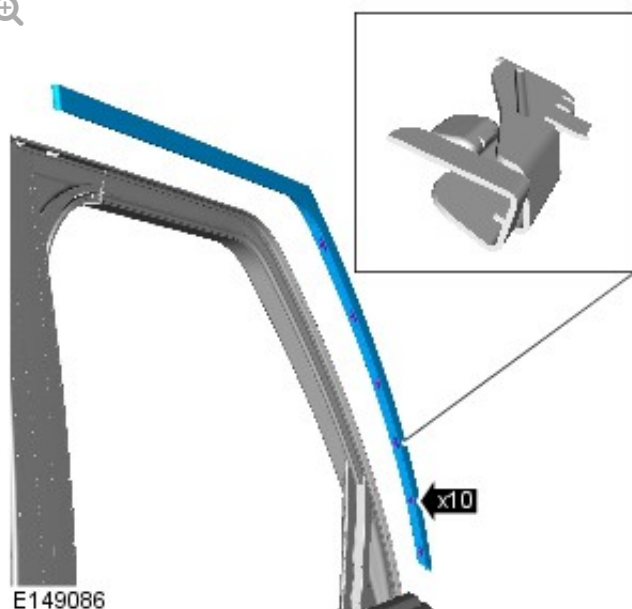

E149086


20.

NOTE:

Right hand shown, Left hand similar.



E149084

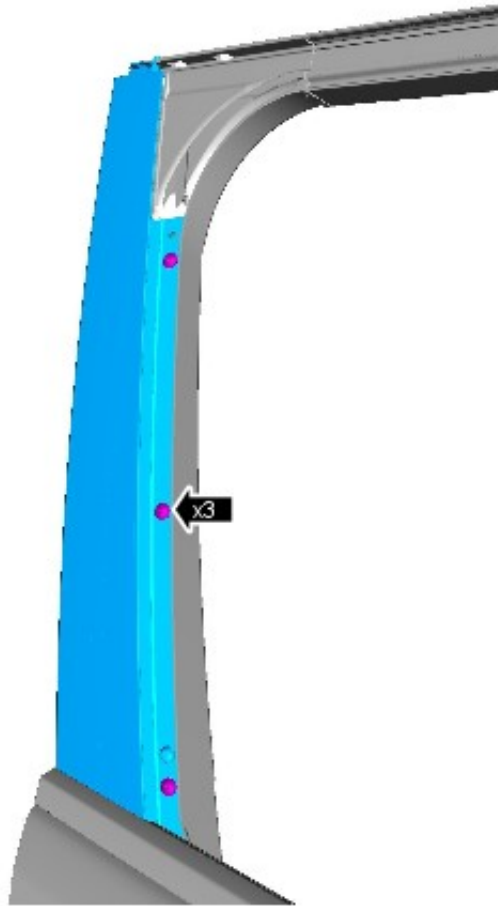


Torque: 1.2 Nm

21.

NOTE:


Right hand shown, Left hand similar.

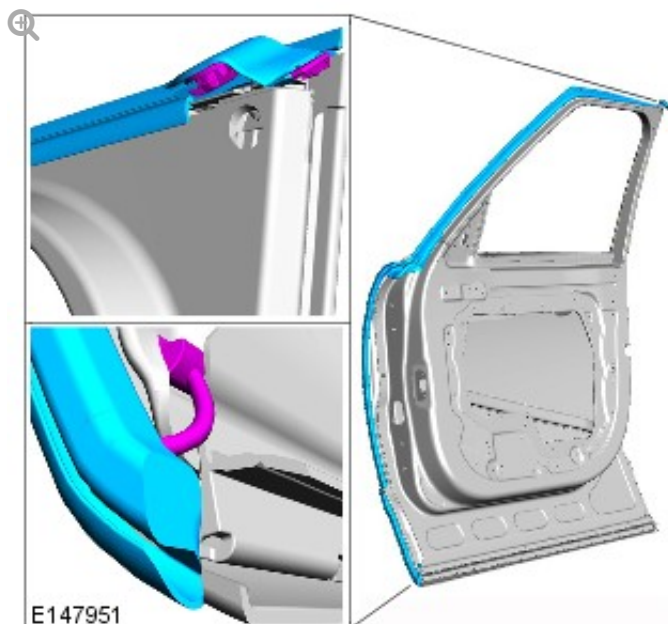

22.

NOTE:

Left hand shown, Right hand similar.

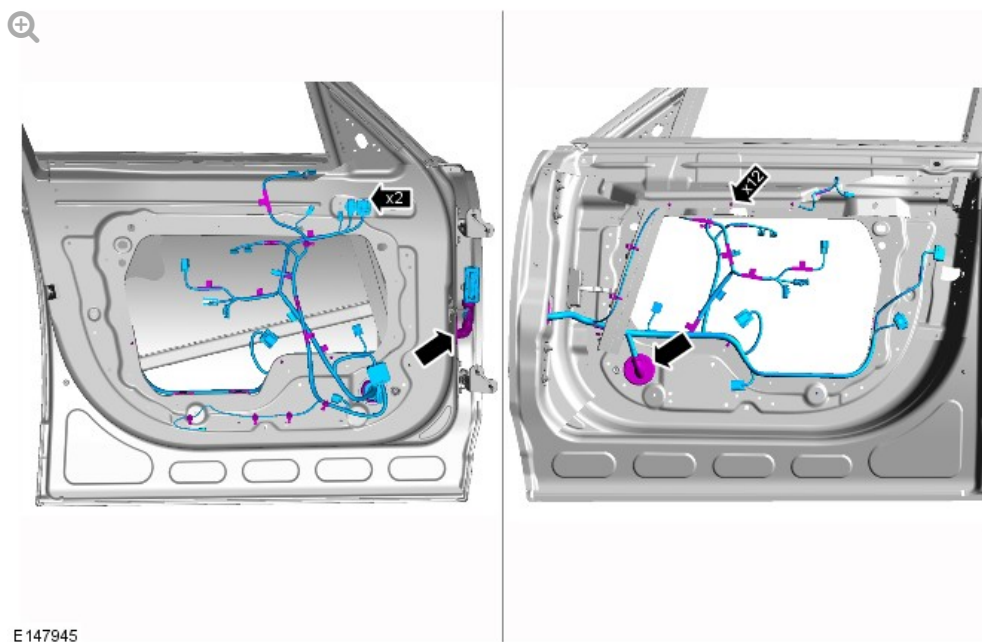

NOTE:

Do not disassemble further if the component is remove for access only.

INSTALLATION

1.

NOTE:


Right hand shown, Left hand similar.



2.

NOTES:

- Right hand shown, Left hand similar.
- Using a suitable clean agent, Clean the door panel in the area of the seal prior to installation.
- Install a new seal.

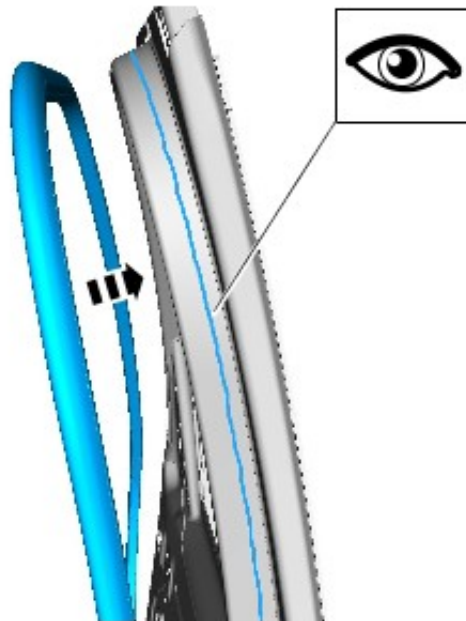

E150237

3.

NOTE:


Make sure all components are clean and free from foreign material.

To install, reverse the removal procedure.

4.

NOTE:

Left hand shown, Right hand similar.

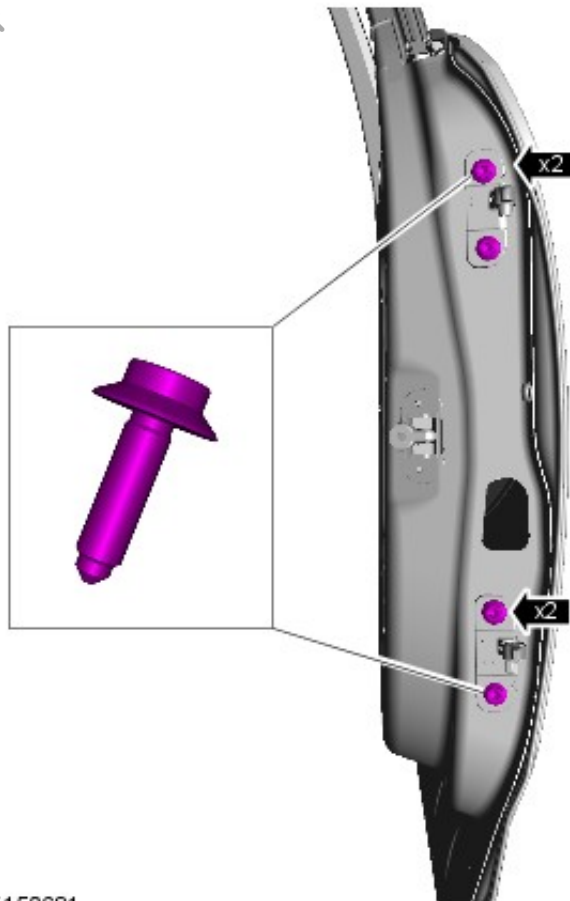

E150681

If a new door is installed the bolts shown should be replaced with plain shank bolts to allow for correct door alignment.

Torque: 35 Nm

5.

NOTE:

Check the gap and profiles of the door are correct.

Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).