

2016.0 RANGE ROVER (LG), 501-03

BODY CLOSURES

REAR DOOR – LONG WHEEL BASE [G1706875]

REMOVAL AND INSTALLATION


REMOVAL

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.

1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).


2.

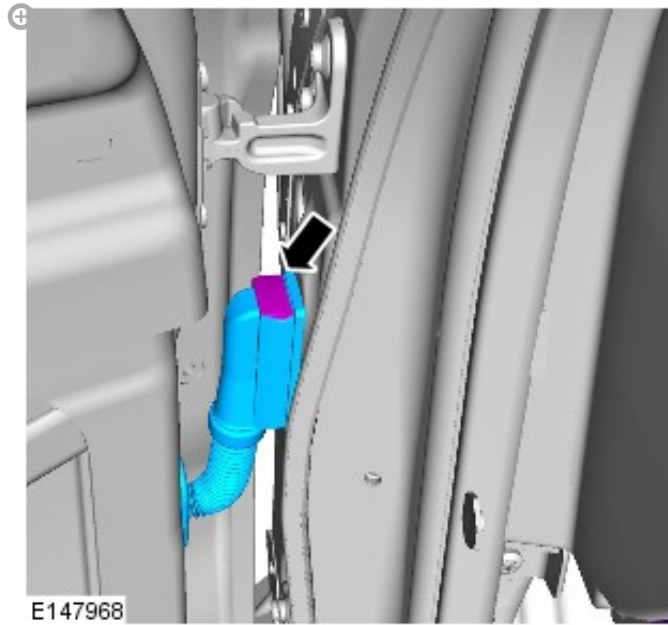

3.

NOTE:

This step requires the aid of another technician.

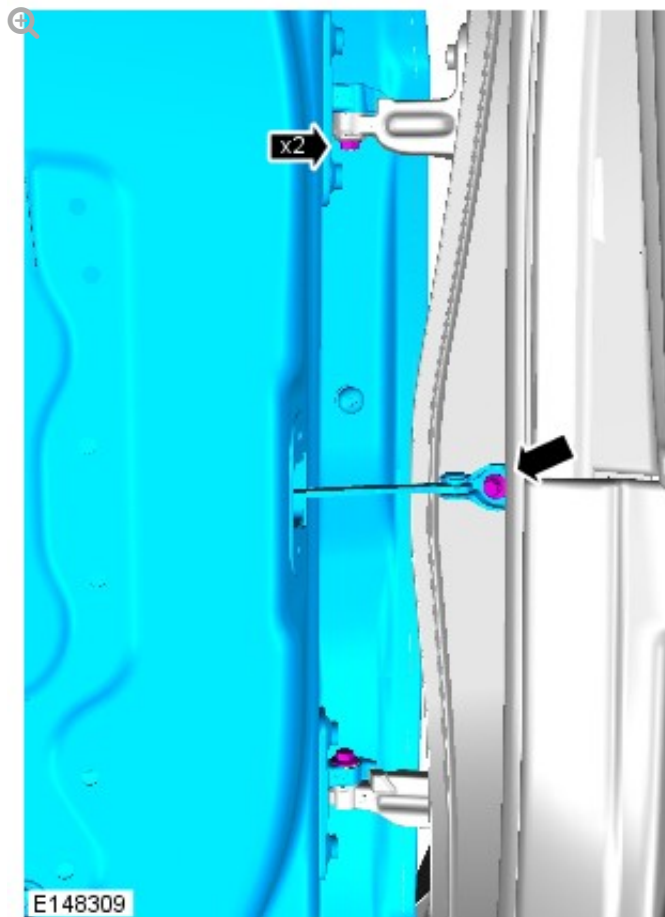


Torque:

M8 24 Nm

M7 13 Nm

4. Refer to: [Rear Door Window Glass - Long Wheel Base \(501-11 Glass, Frames and Mechanisms, Removal and Installation\)](#).


5.

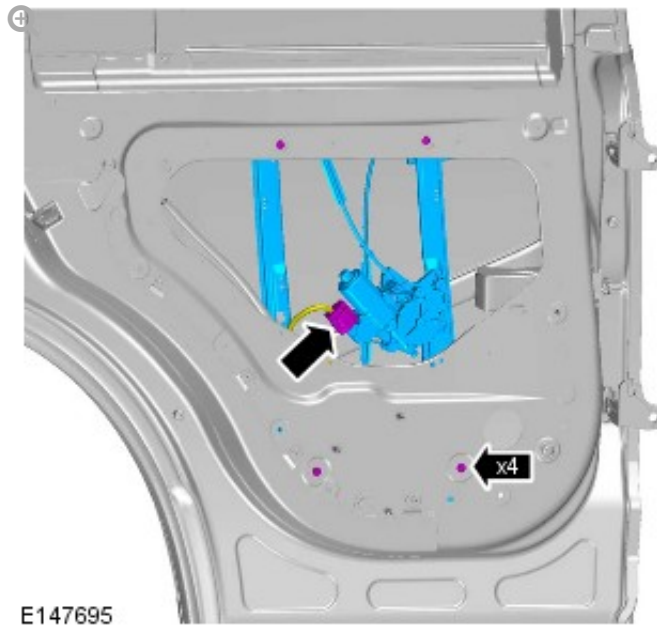


Torque: 8 Nm

6. Refer to: [Rear Door Latch - Long Wheel Base](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).

7.

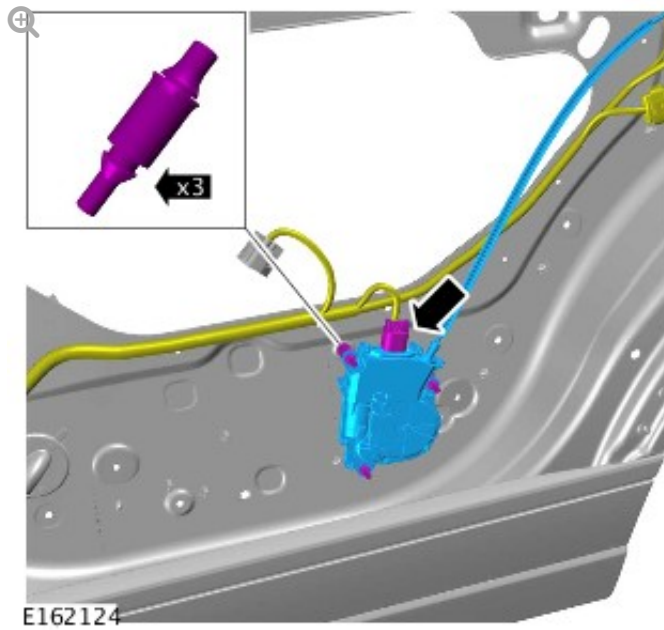


8.

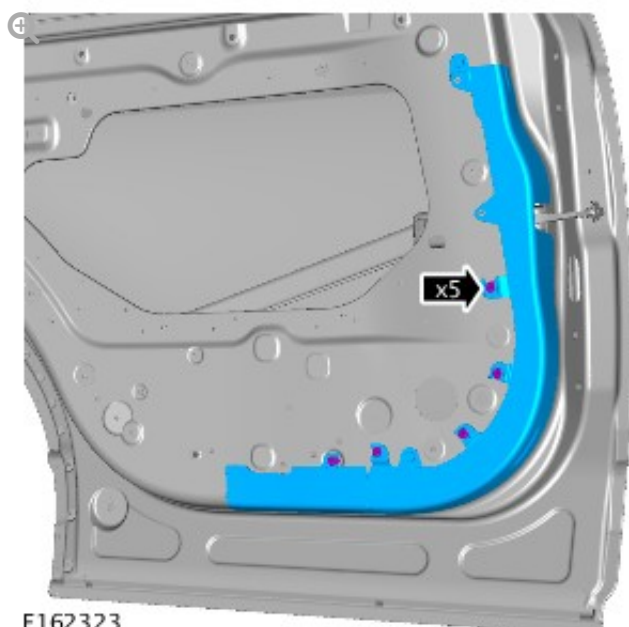


E162323

9.

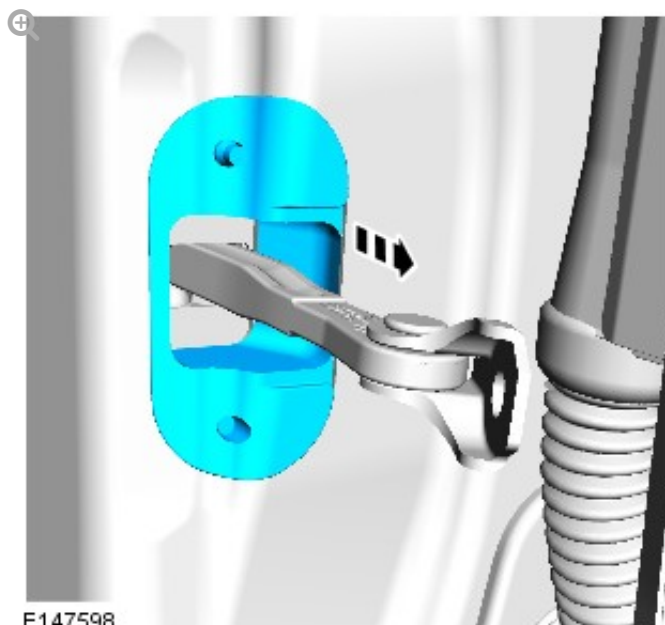


E147598

10.

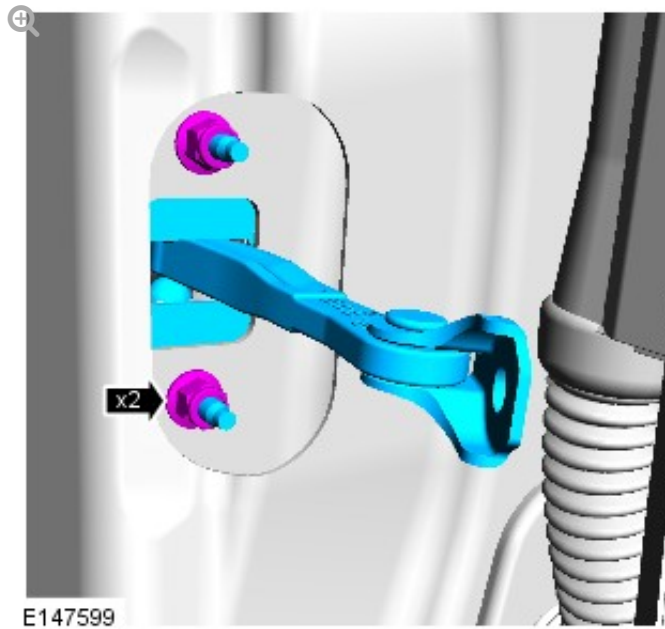


Torque: 11 Nm

11.

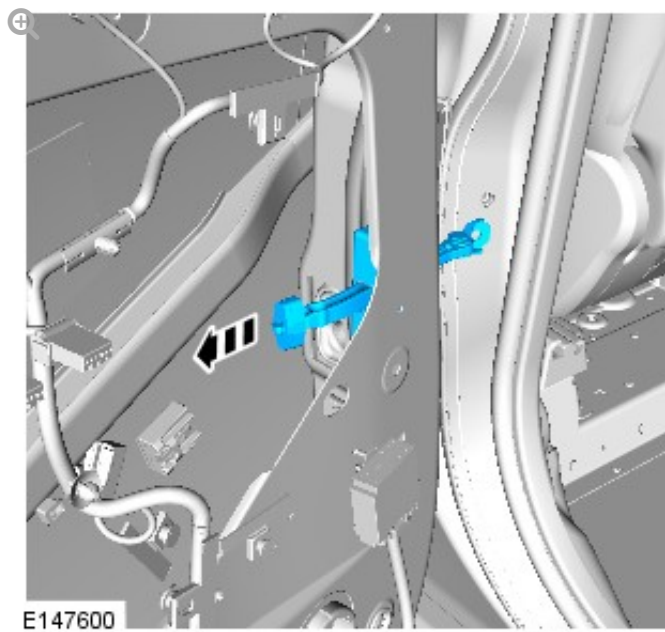

12.

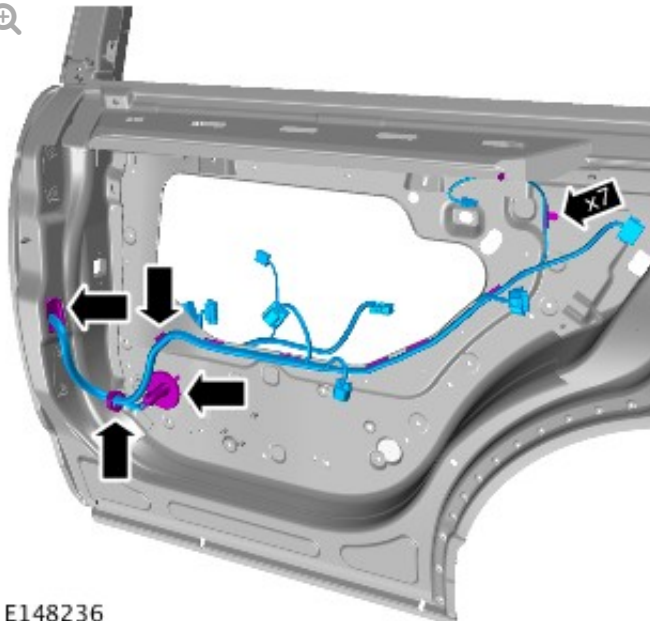

E148236

13.

CAUTION:

Protect the surrounding paintwork to avoid damage.





E162125

14.

CAUTION:


Protect the surrounding paintwork to avoid damage.

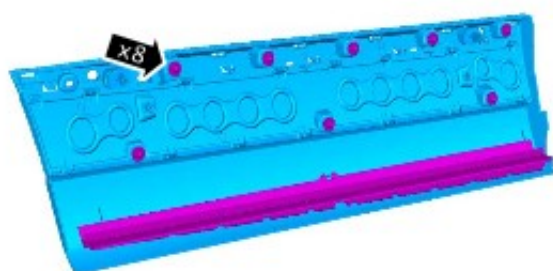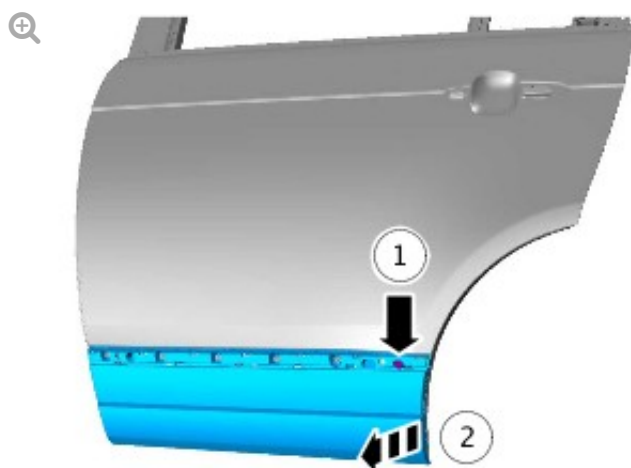

E162123


Torque: 1.2 Nm

15.

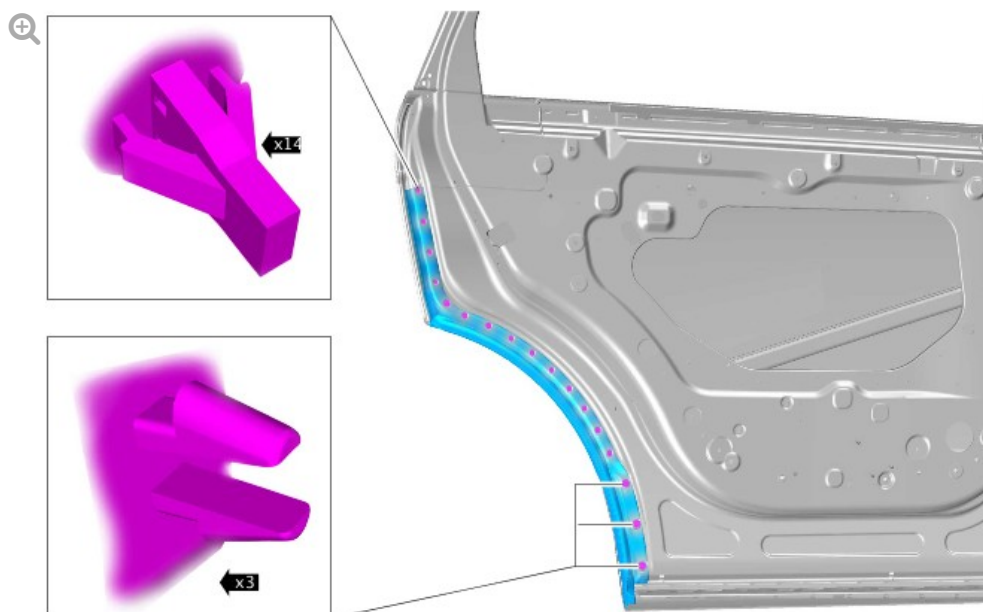


E162129

16.

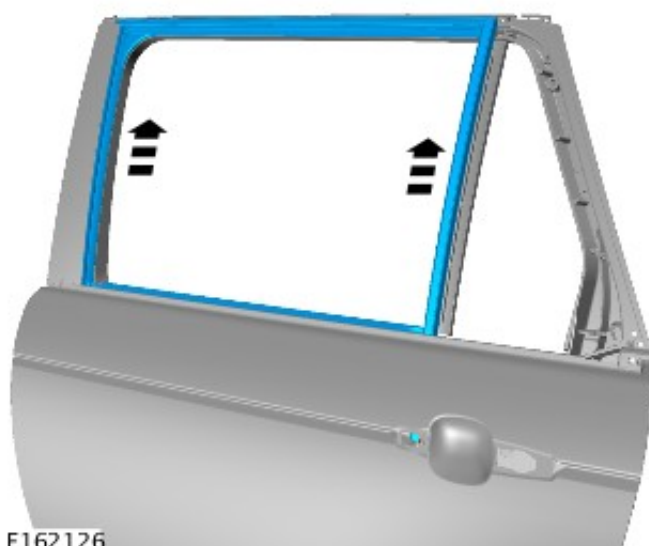

E162126


17.

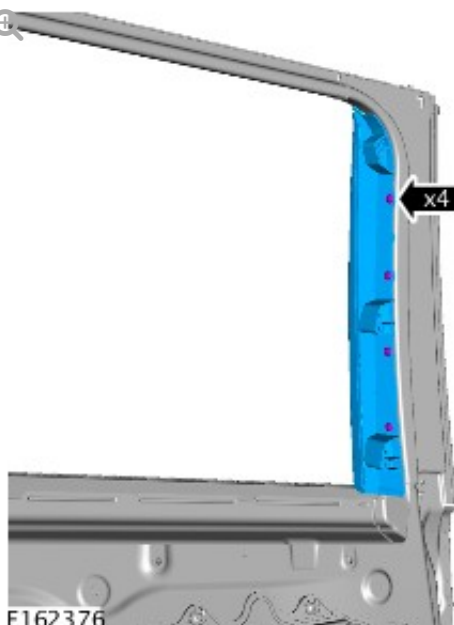

E162376


Torque: 3.2 Nm

18.

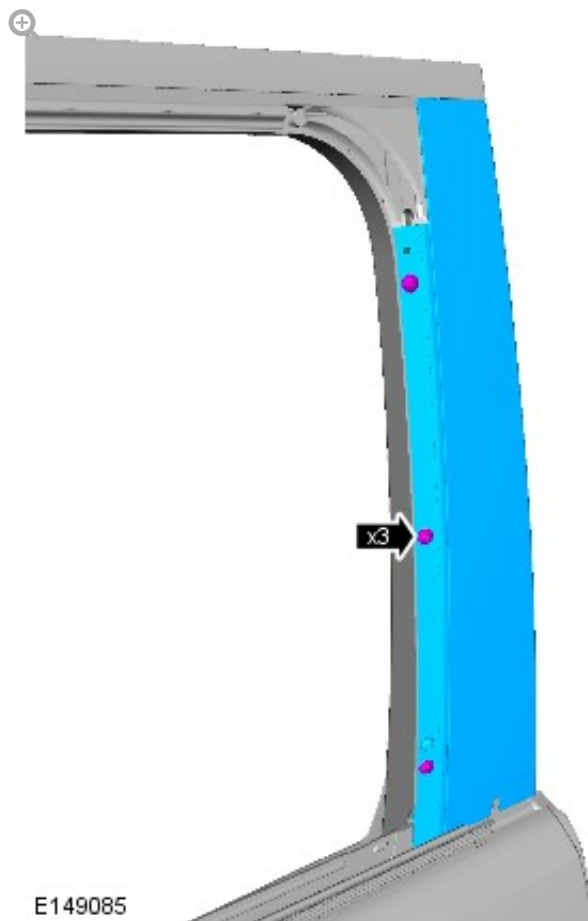


Torque: 1.2 Nm

19.

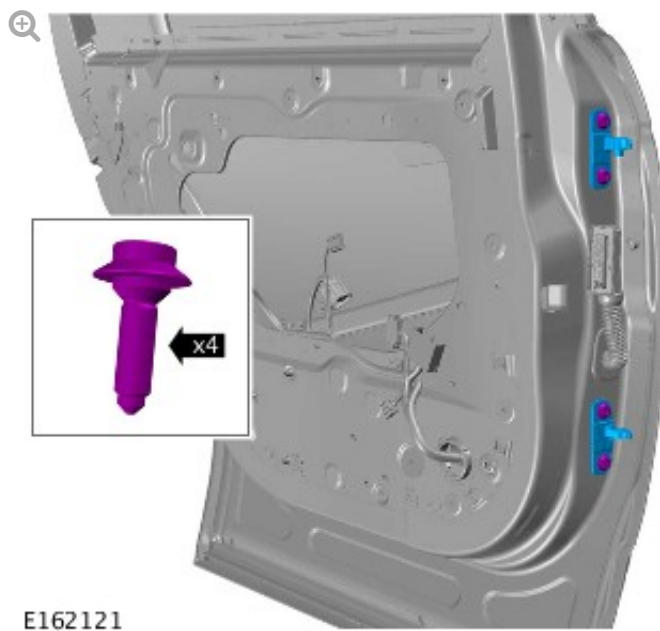

1.

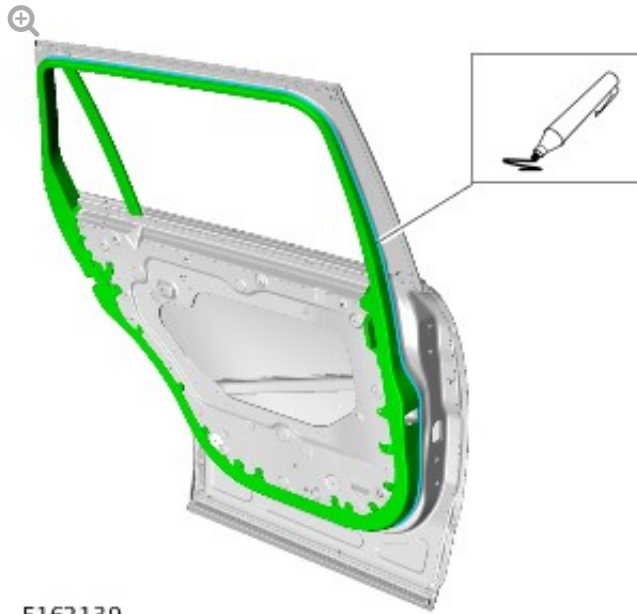


E162139

1. Position the door inner finisher for access.
2. Mark the position of the inner edge to aid the door seal installation.
3. Remove the door inner finisher.

2.

CAUTIONS:

- Make sure all mating faces are clean and dry before applying sealant.
- Make sure that the installation marks are aligned.
- Install new seal.

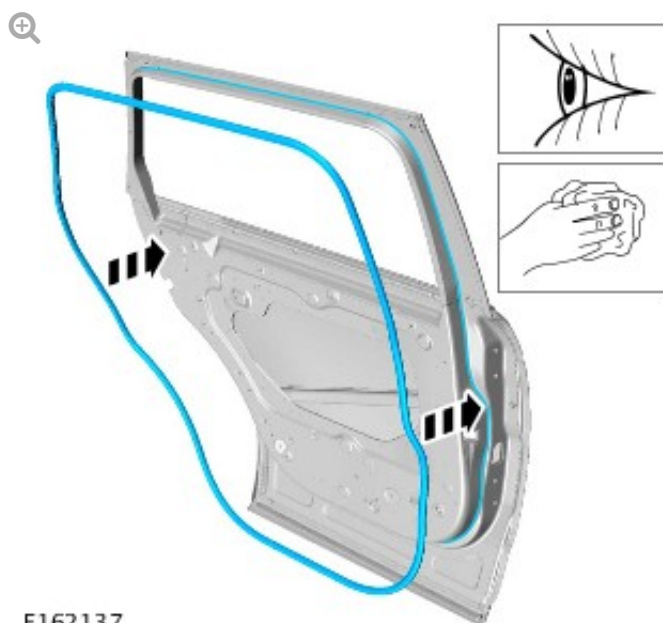


E162137

3.

NOTE:

If a new door is to be installed the hinge bolts should be replaced with plain shank bolts to allow the correct door alignment.

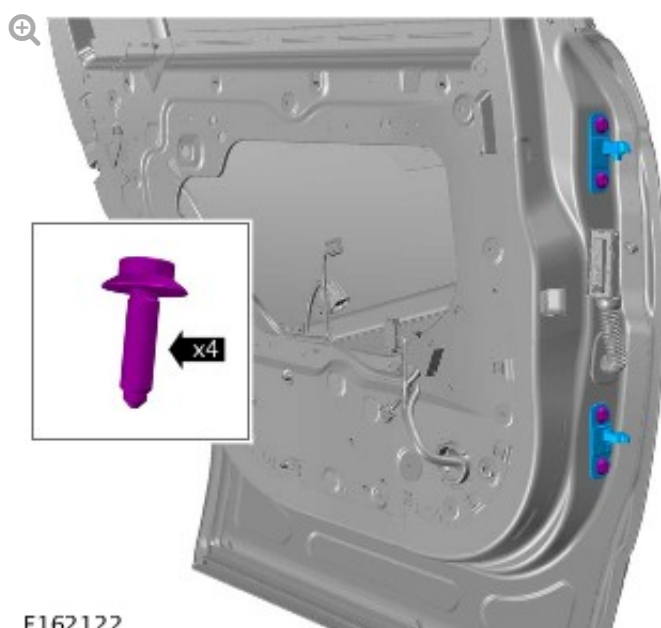

E162122

Torque: 35 Nm

4. To install, reverse the removal procedure.

5. Check the gap and profiles of the door are correct.

Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).