

2016.0 RANGE ROVER (LG), 501-03

BODY CLOSURES

REAR DOOR – STANDARD WHEEL BASE (G1509222)

REMOVAL AND INSTALLATION

REMOVAL


NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.
- Right hand shown, left hand similar.

1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-01 Battery, Mounting and Cables, Specifications).

2. **NOTE:**


Left hand shown, Right hand similar.

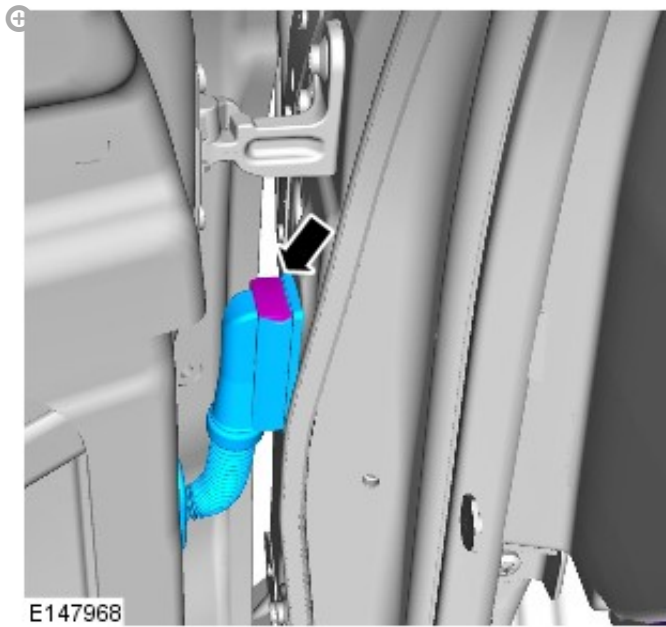

3.

NOTES:

- This step requires the aid of another technician
- Left hand shown, Right hand similar.

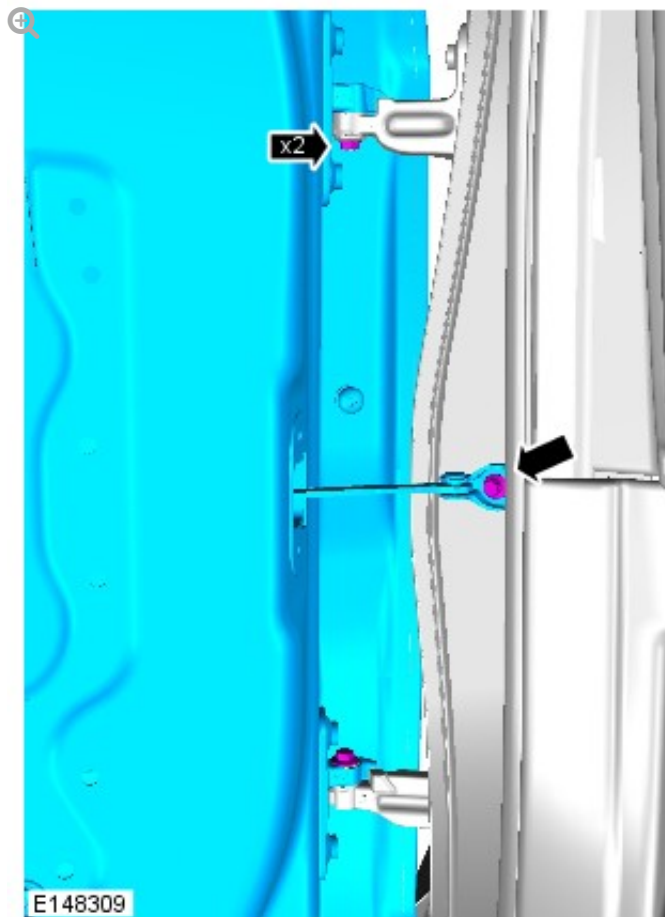

Torque:

Check arm bolt **24 Nm**

Hinge bolt **13 Nm**

NOTE:

Do not disassemble further if the component is remove for access only.


4. Refer to: [Rear Door Fixed Window Glass - Long Wheel Base](#) (501-11 Glass, Frames and Mechanisms, Removal and Installation).
5. Refer to: [Rear Door Window Glass - Long Wheel Base](#) (501-11 Glass, Frames and Mechanisms, Removal and Installation).
6. Refer to: [Rear Door Window Regulator Motor - Long Wheel Base](#) (501-11 Glass, Frames and Mechanisms, Removal and Installation).

7. Refer to: [Rear Door Latch - Long Wheel Base](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
8. Refer to: [Exterior Rear Door Handle - Long Wheel Base](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
9. Refer to: [Rear Door Check Arm](#) (501-03 Body Closures, Removal and Installation).

10.

NOTE:

Left hand shown, Right hand similar.

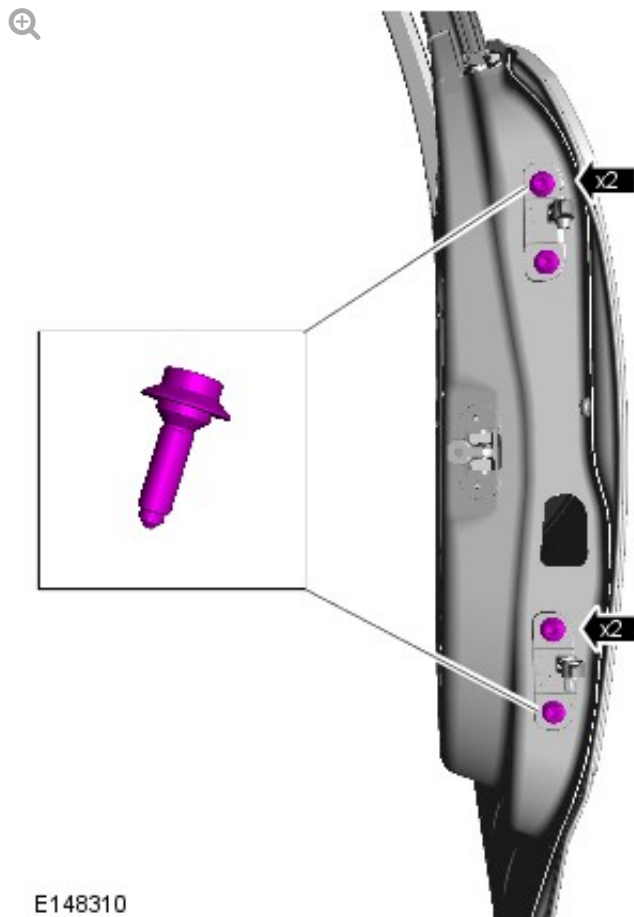


E148310

11.

CAUTION:

Protect the surrounding paintwork to avoid damage.

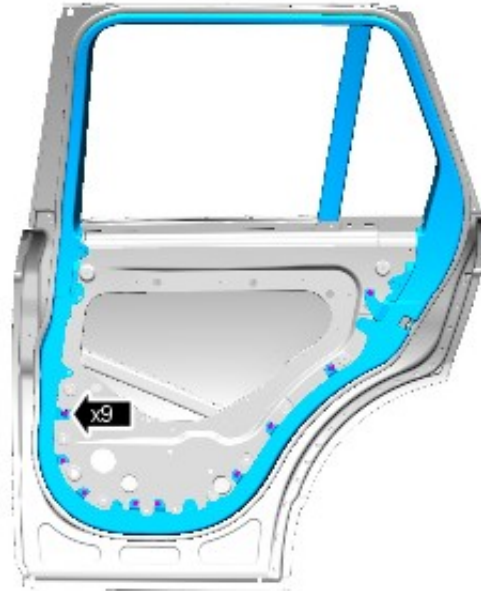


E150235

12.

CAUTION:


Protect the surrounding paintwork to avoid damage.

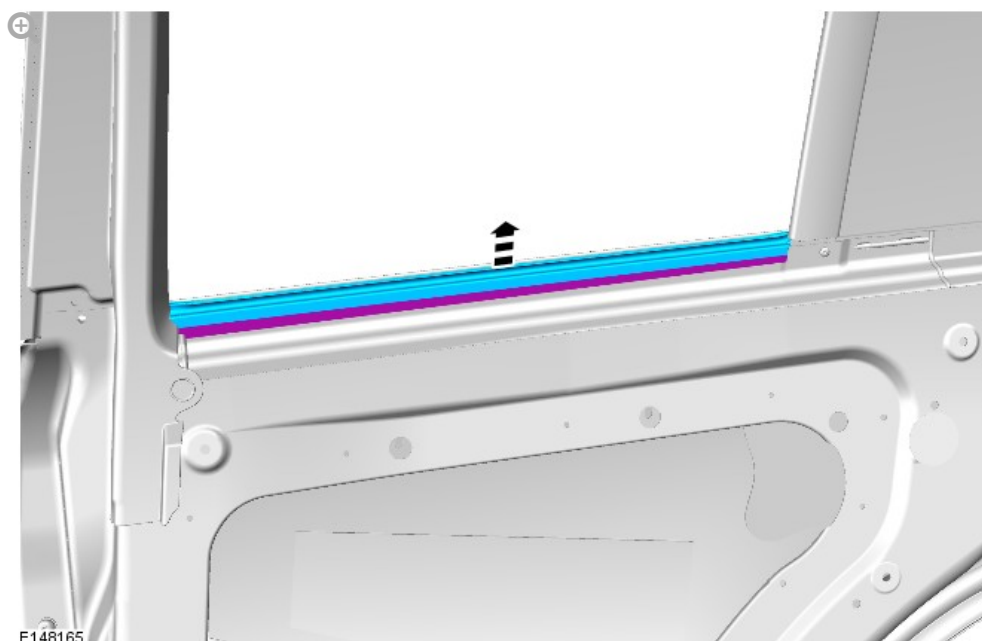

13.

CAUTION:

Protect the surrounding paintwork to avoid damage.

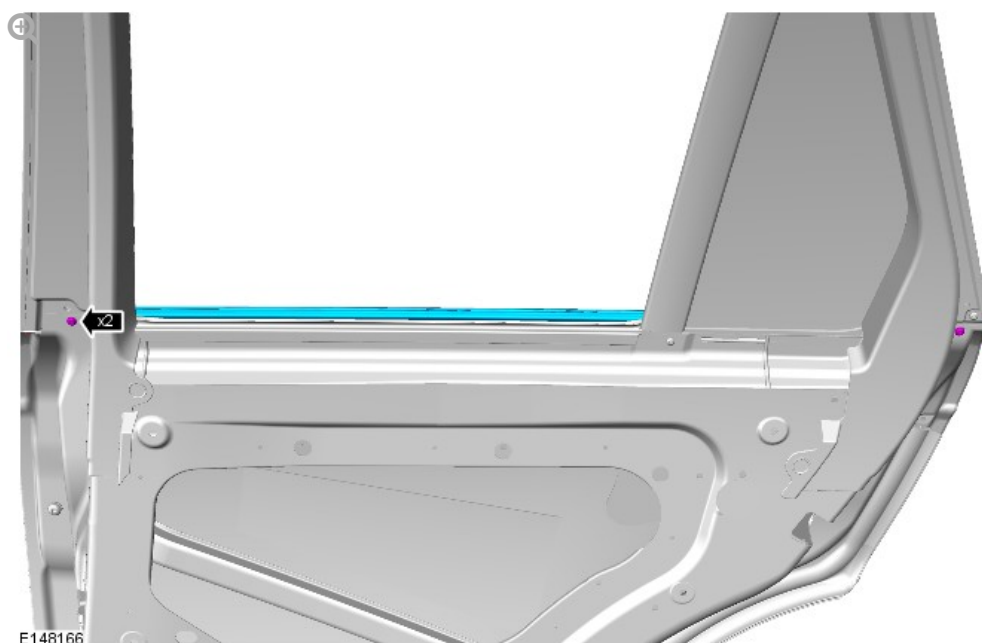


Torque: 1.2 Nm

14.

CAUTION:


Protect the surrounding paintwork to avoid damage.

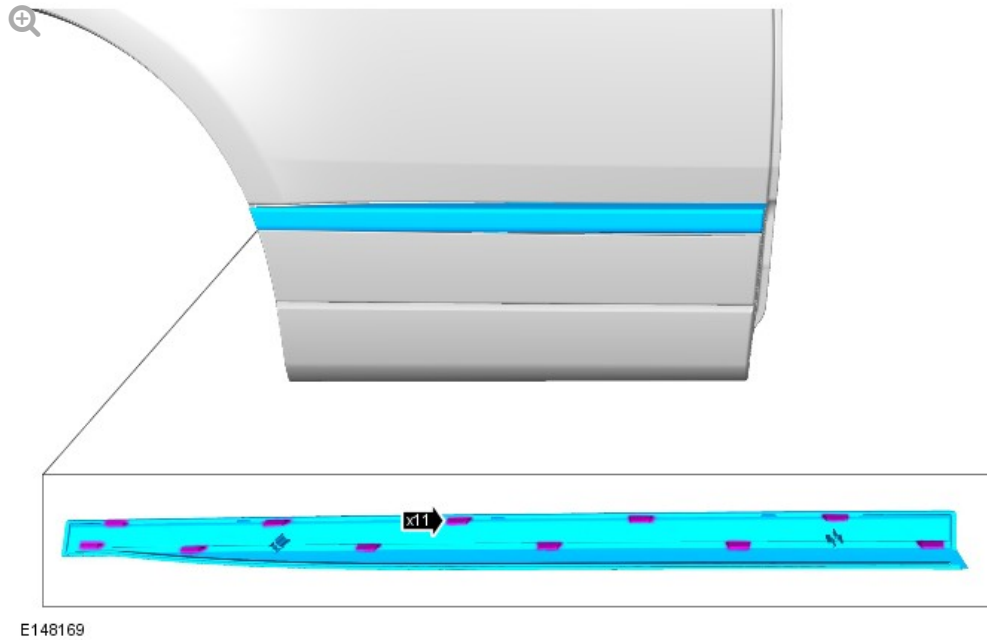

15.

CAUTION:

Protect the surrounding paintwork to avoid damage.

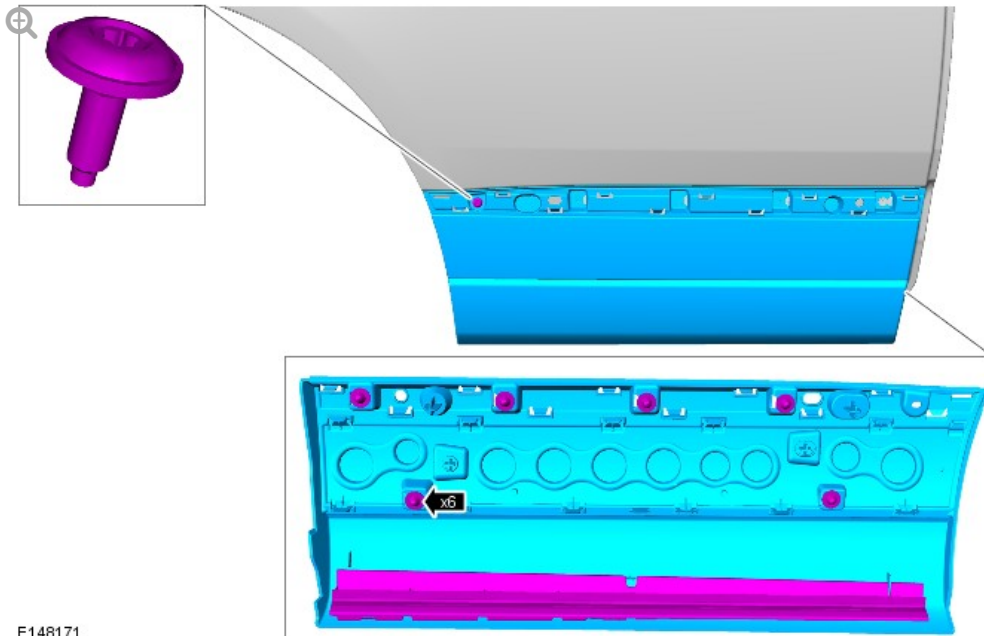

E148171

Torque: 1.2 Nm



16.

CAUTION:

Protect the surrounding paintwork to avoid damage.


NOTE:

Left hand shown, Right hand similar.

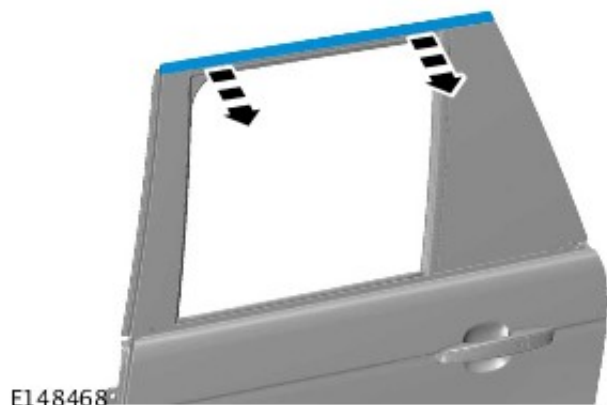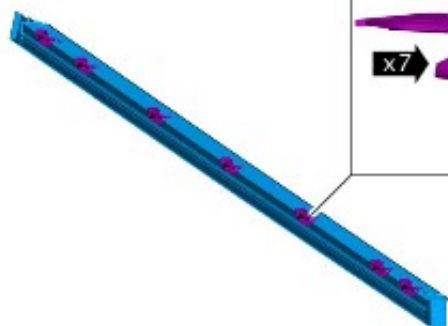


E148468

17.

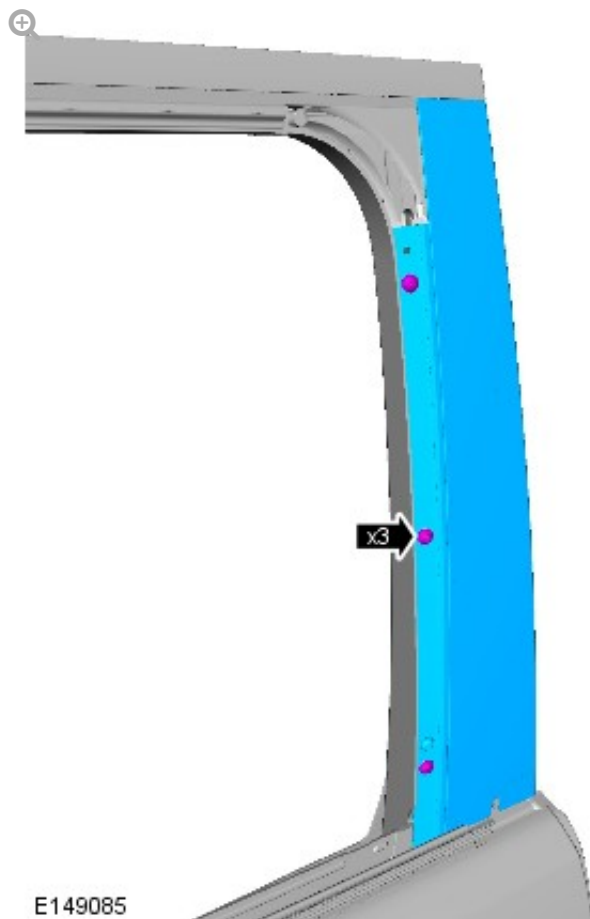


Torque: 1.2 Nm

18.

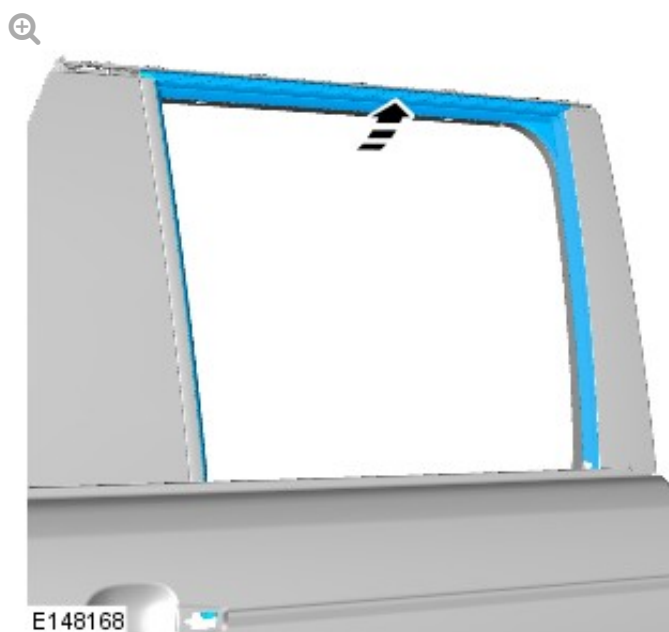


19.

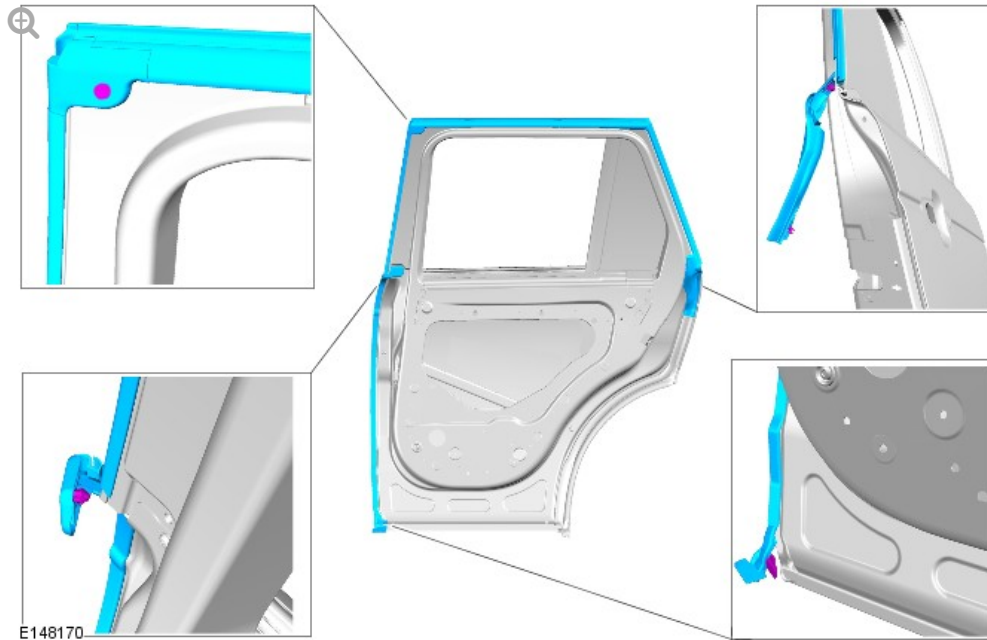


20.

CAUTION:

Protect the surrounding paintwork to avoid damage.

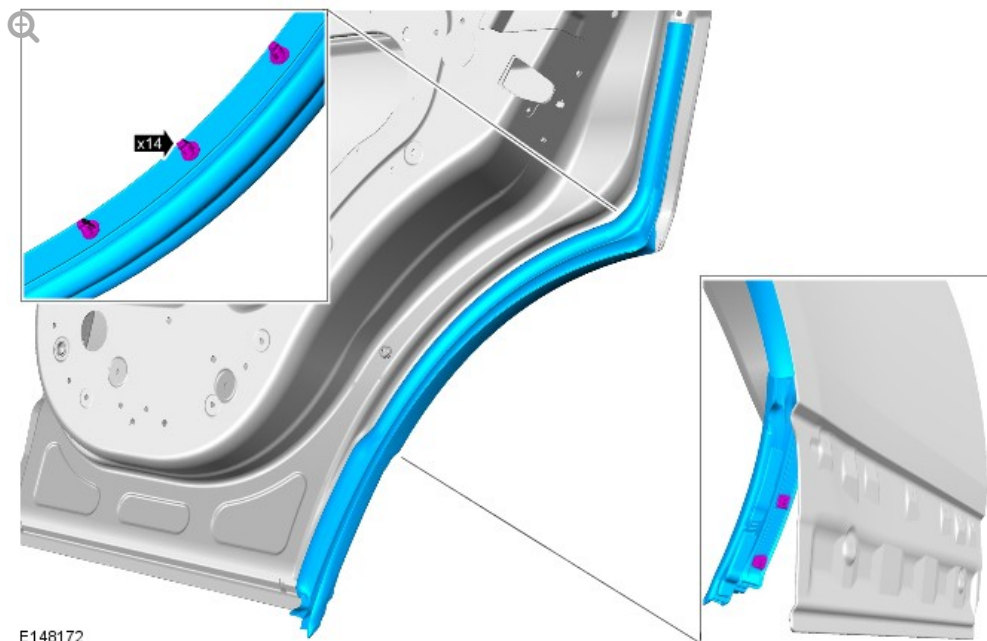

21.

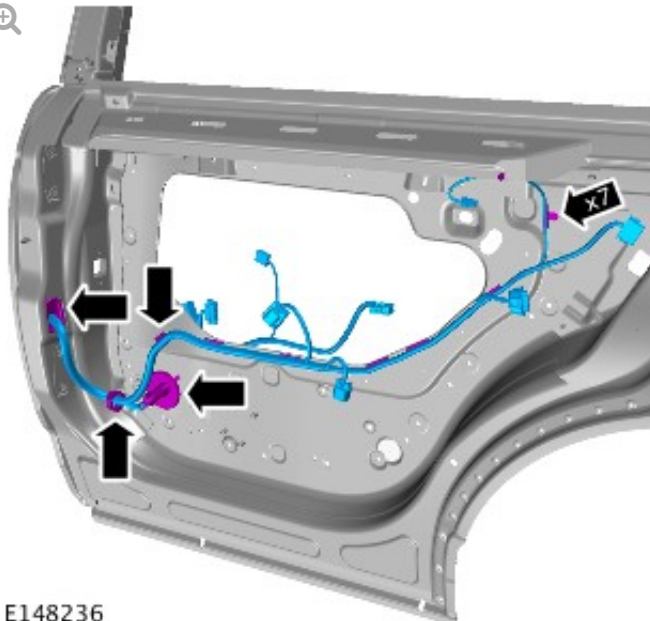


E148236

NOTE:

Do not disassemble further if the component is remove for access only.

INSTALLATION

1.

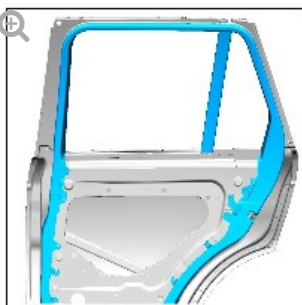


E150236

2.

NOTES:

- Using a suitable cleaning agent, Clean the door panel in the area of the seal prior to installation.
- Install a new seal.

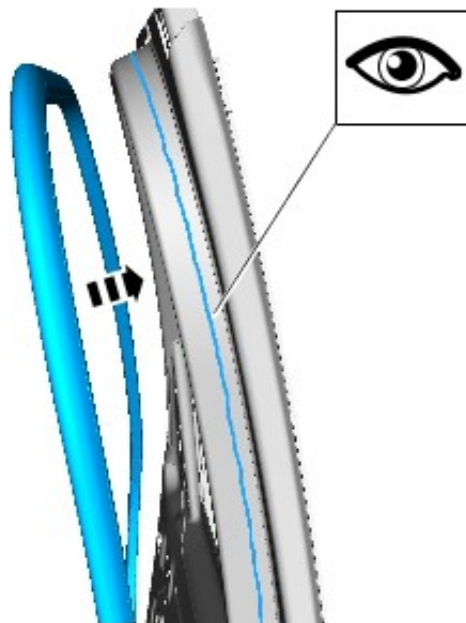

E150237

3.

NOTE:


Make sure all components are clean and free from foreign material.

To install, reverse the removal procedure.

4.

NOTE:

Left hand shown, Right hand similar.

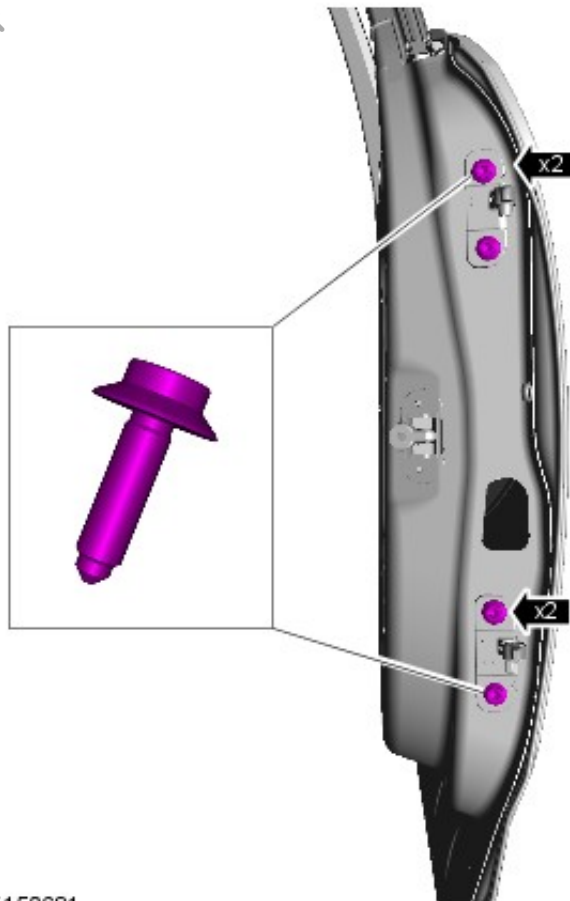

E150681

If a new door is installed the bolts shown should be replaced with plain shank bolts to allow for correct door alignment.

Torque: 35 Nm

5.

NOTE:

Check the gap and profiles of the door are correct.

Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).