

2016.0 RANGE ROVER (LG), 501-25

BODY REPAIRS - GENERAL INFORMATION

BODY CLOSURE / NOISE VIBRATION AND HARSHNESS SEALING (G1987892)

GENERAL PROCEDURES

ACTIVATION


NOTE:

If the door is not supplied with the Noise Vibration and Harshness (NVH) pad and seam sealant bead then follow this procedure.



All vehicles


1.

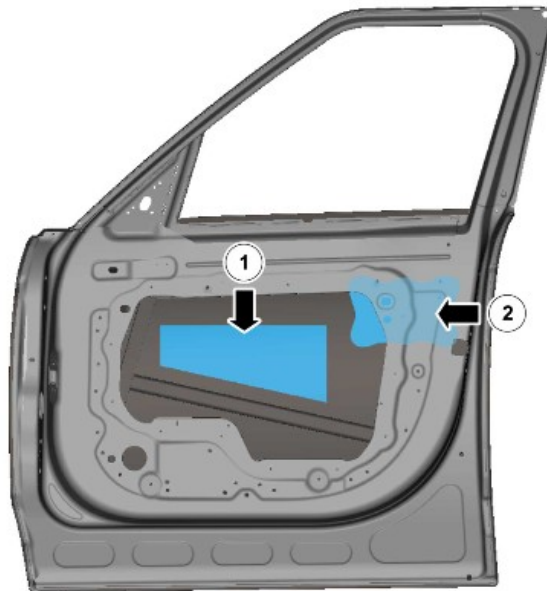

E193304

Install a 400 mm x 180 mm Noise, Vibration and Harshness (NVH) pad as indicated.


2.

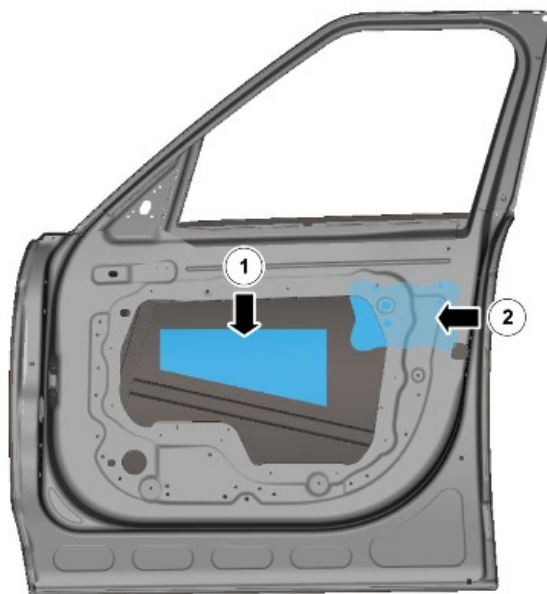

E193304

Install a 160 mm x 250 mm Noise, Vibration and Harshness (NVH) pad as indicated.

3.

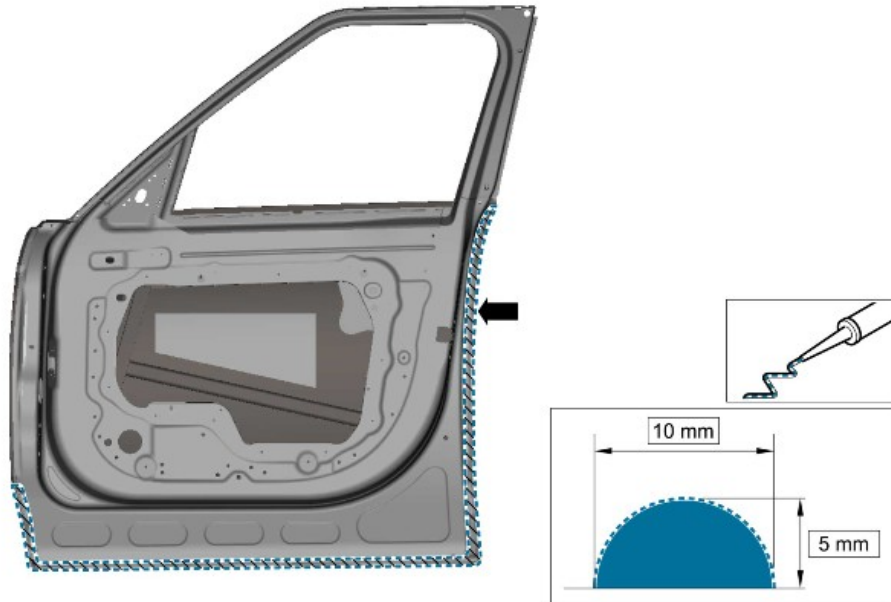


E193303

Apply the seam sealant to the door as indicated.



Short wheelbase


3.

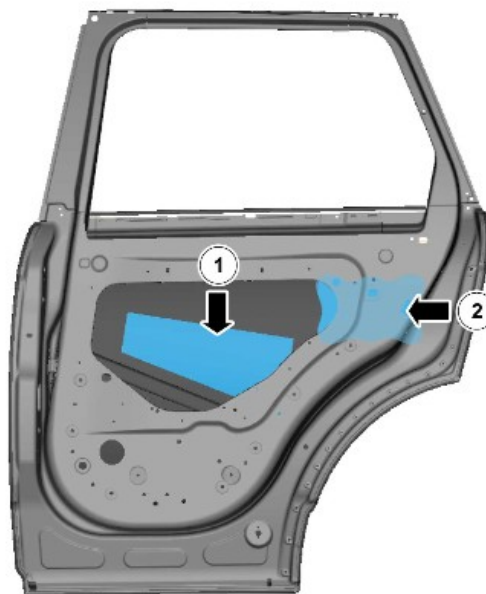

E193308

Install a 400 mm x 180 mm Noise, Vibration and Harshness (NVH) pad as indicated.


4.

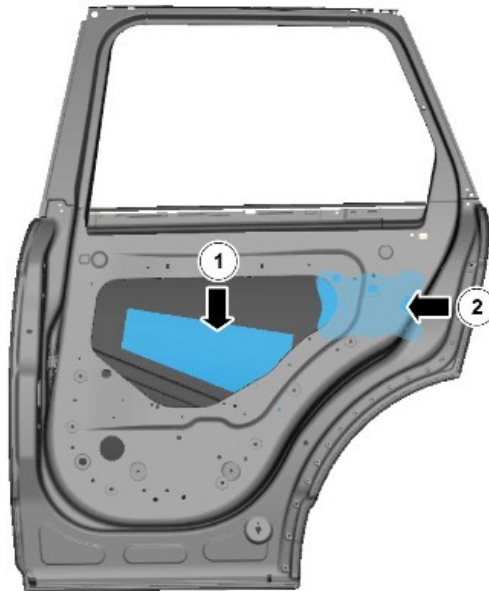

E193308

Install a 160 mm x 250 mm Noise, Vibration and Harshness (NVH) pad as indicated.

5.

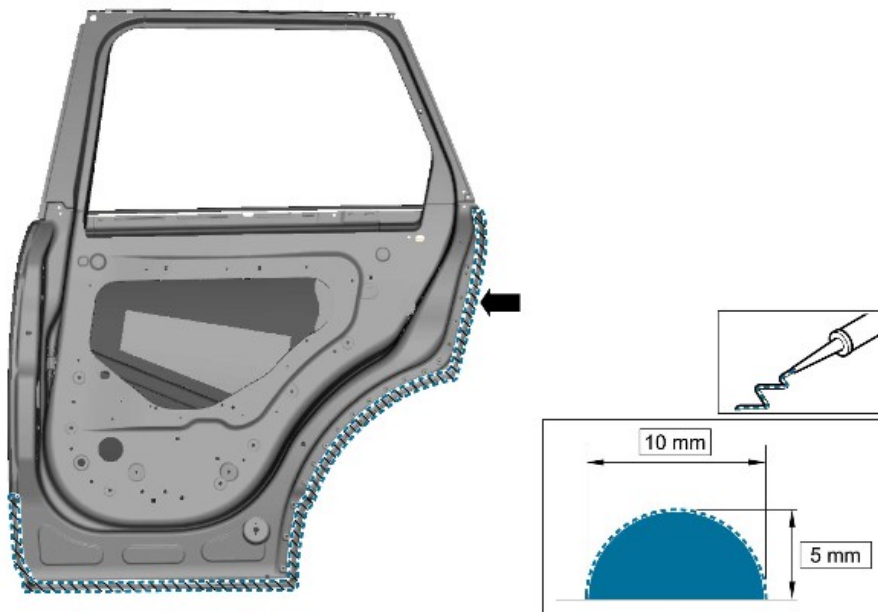


E193306

Apply the seam sealant to the door as indicated.



Long wheelbase


5.

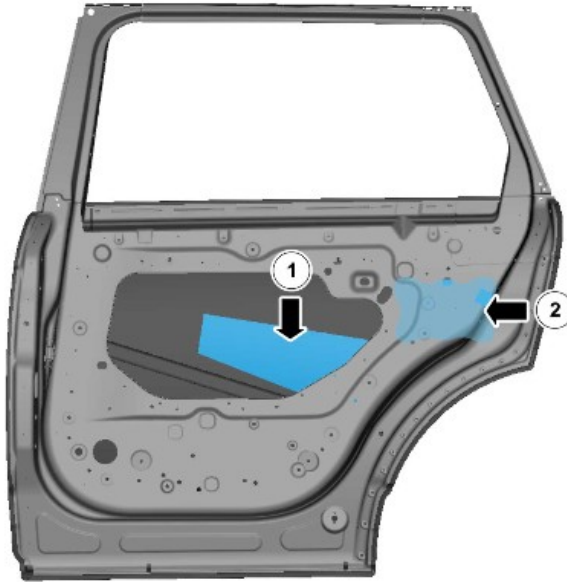

E193307

Install a 400 mm x 180 mm Noise, Vibration and Harshness (NVH) pad as indicated.


6.

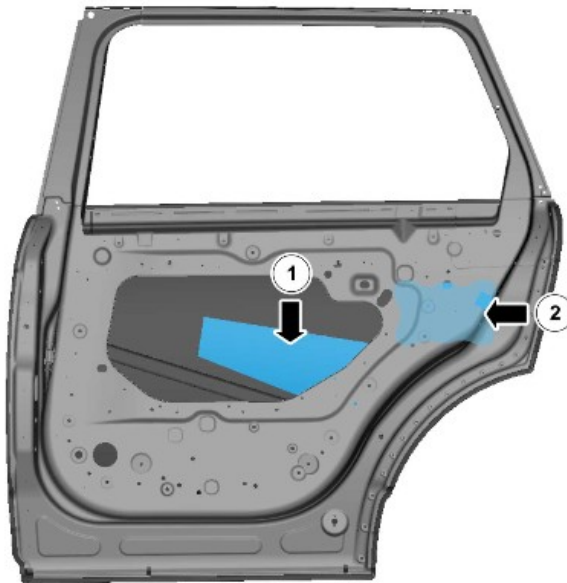

E193307

Install a 250 mm x 160 mm Noise, Vibration and Harshness (NVH) pad as indicated.

7.

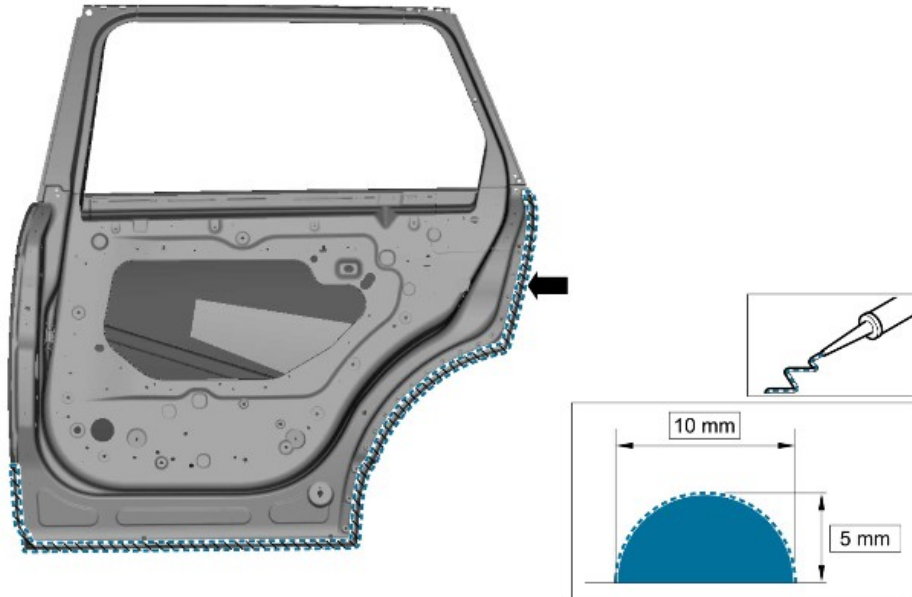

E193305

Apply the seam sealant to the door as indicated.