

2016.0 RANGE ROVER (LG), 501-02

FRONT END BODY PANELS

HOOD (G1549305)

REMOVAL AND INSTALLATION


REMOVAL

NOTES:

- Removal steps in this procedure may contain installation details.
- The hood is manufactured from aluminium.


1. Refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
2. Refer to: Body Construction (501-25 Body Repairs - General Information, Description and Operation).
3. Refer to: Corrosion Prevention (501-25 Body Repairs - General Information, Description and Operation).
4. Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).

5.

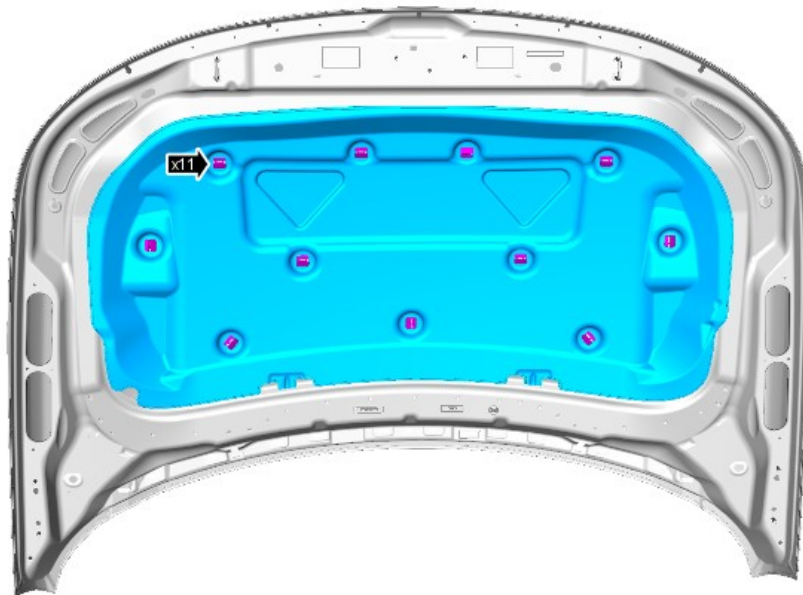

E146133

6.

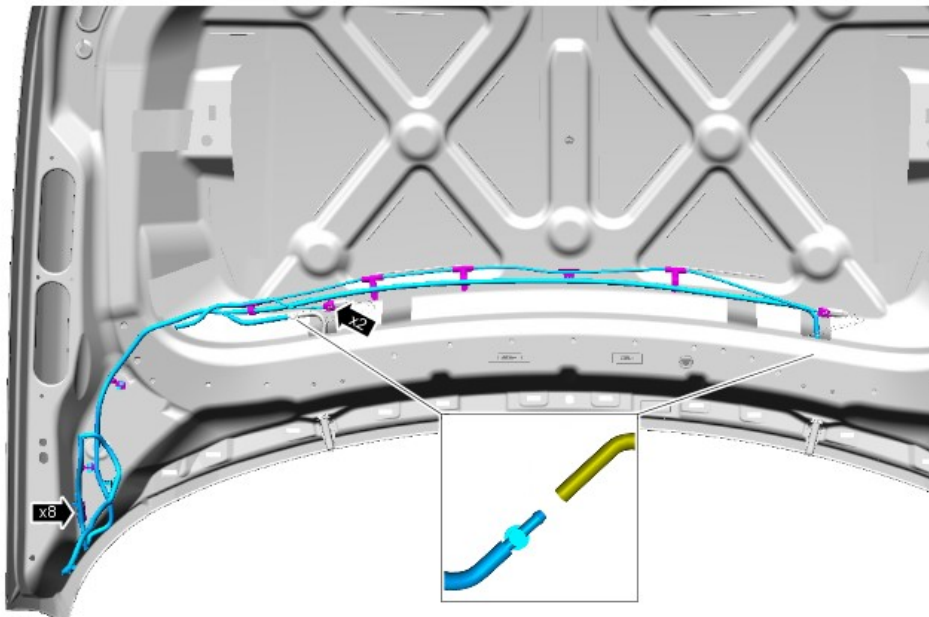


E146108

7.

WARNING:

This step requires the aid of another technician.

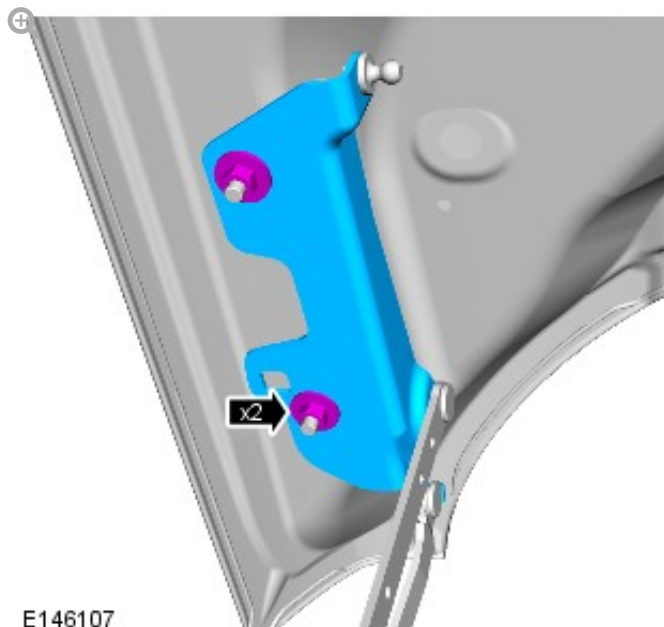

Torque: 24 Nm


NOTE:

Do not disassemble further if the component is removed for access only.

8.


CAUTION:

Make sure to protect the paintwork

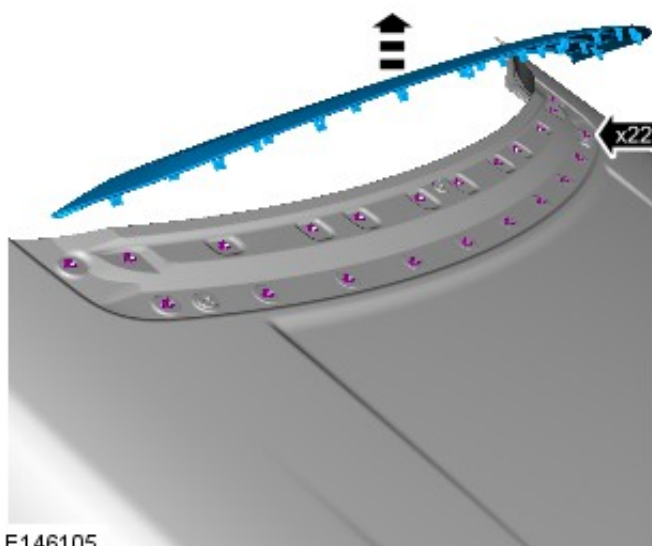


E146105

9.

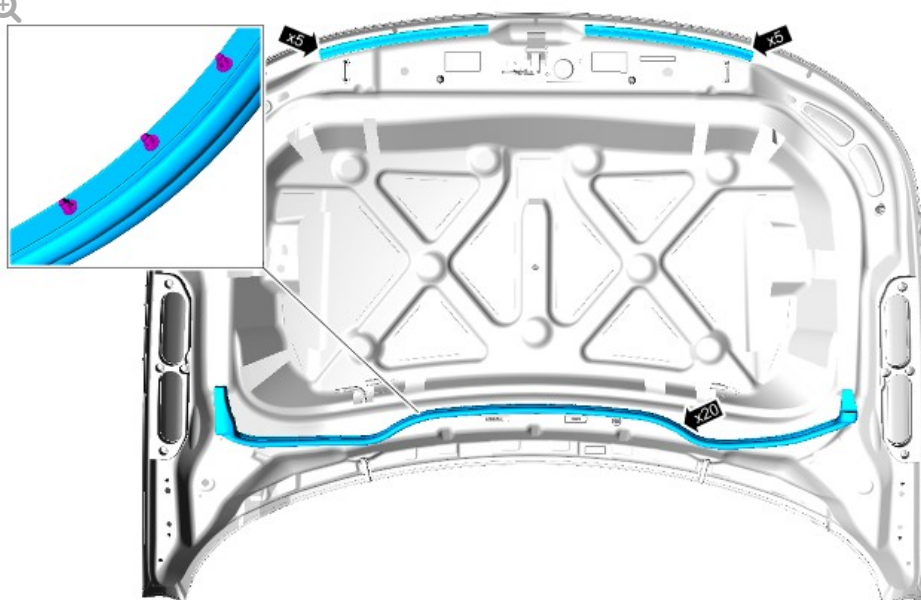


E146111

10.

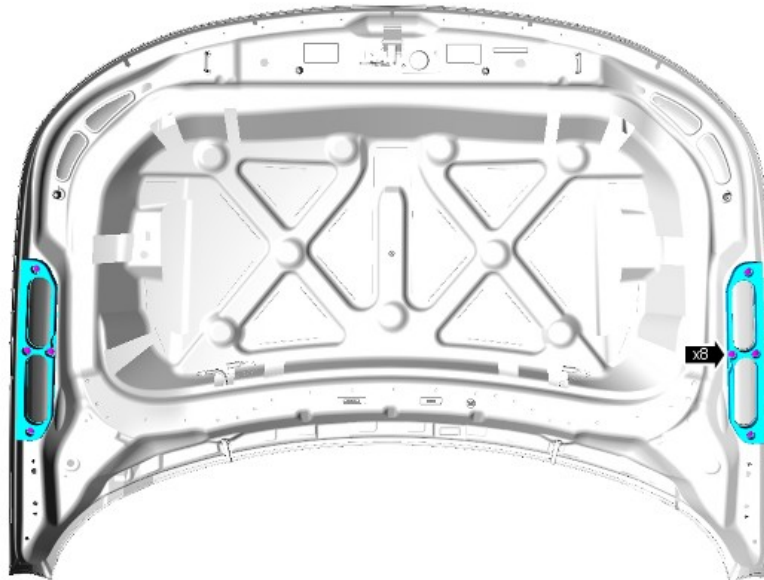

E146106


11.

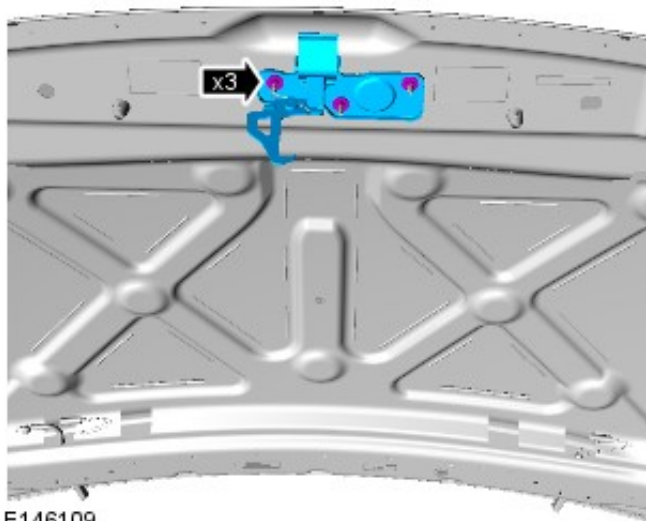

E146109

Torque: 9 Nm


12.

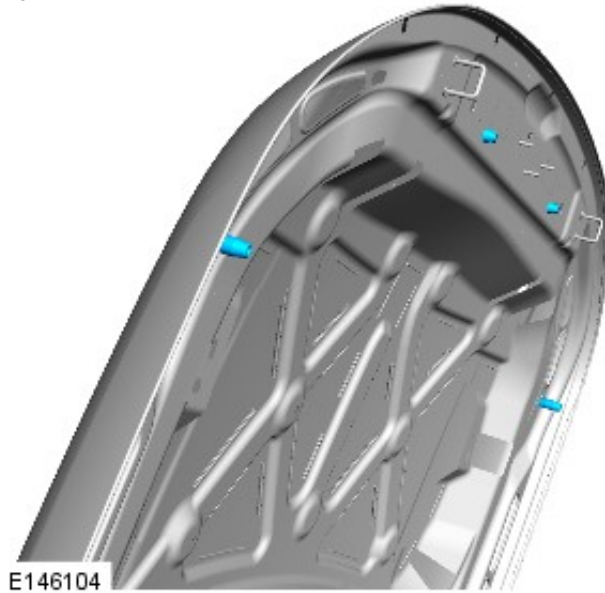

E146104

Note the orientation of the components prior to removal.

13.

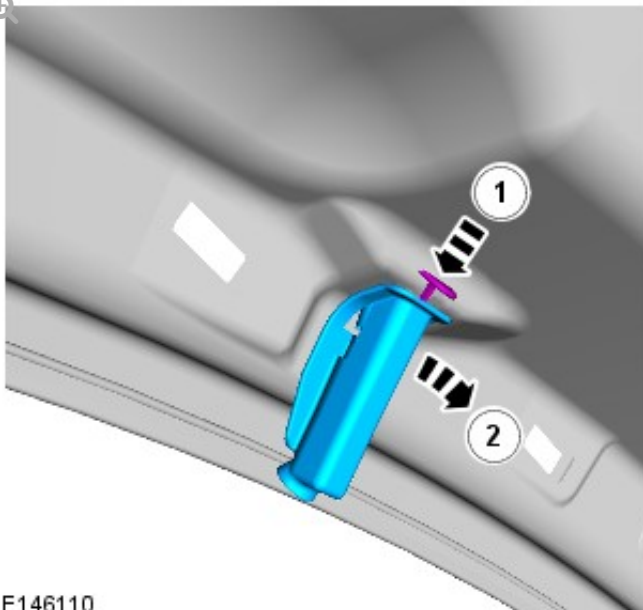


E146110

NOTE:

Do not disassemble further if the component is removed for access only.

INSTALLATION

1.

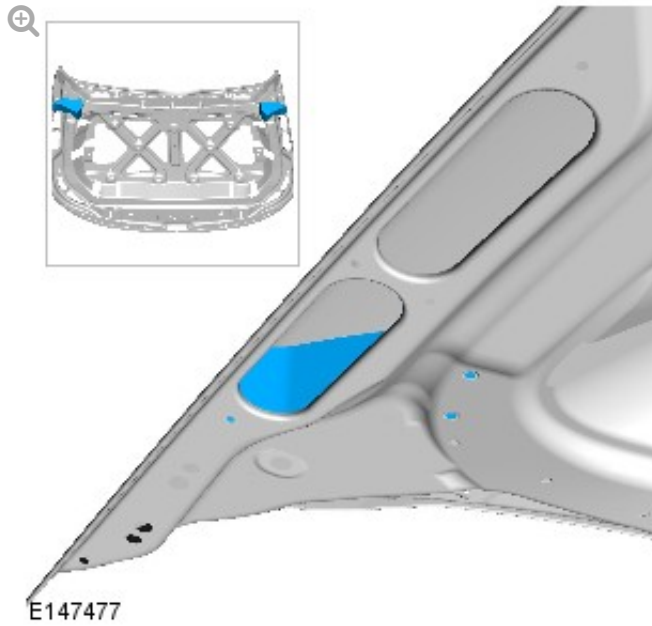


Install new noise, vibration and harshness pads as shown and then pierce the bag to fill the void.

2. To install, reverse the removal procedure

3.

NOTE:

Check the gap and profiles of the hood are correct.

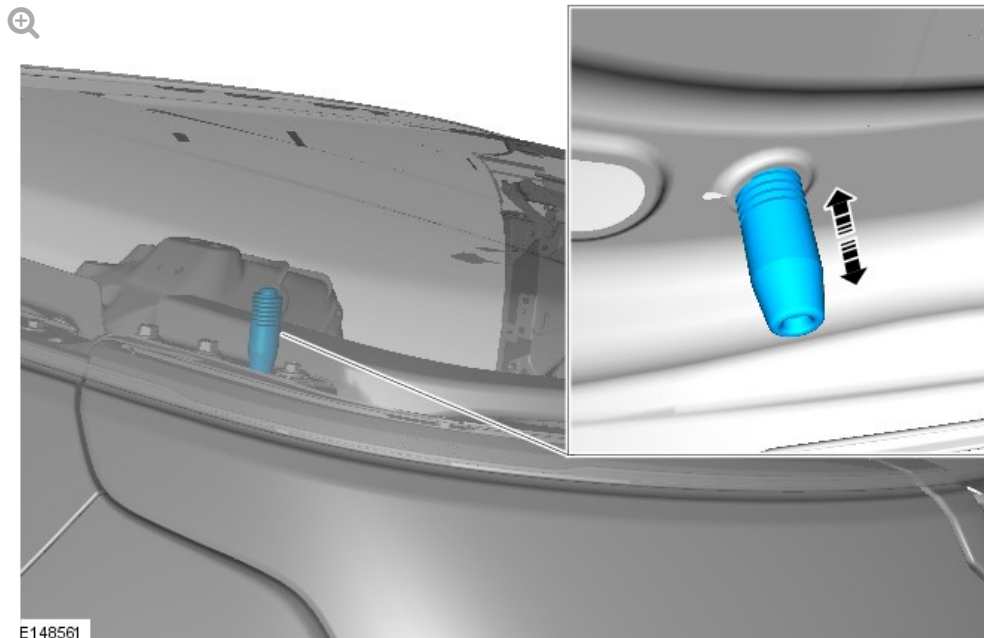

E148561

After the gaps and profiles have been set, make sure that the Adjustable Rubber Bump Stops are in contact with the body. Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).