

2016.0 RANGE ROVER (LG), 501-27

FRONT END SHEET METAL REPAIRS

HOOD LATCH PANEL MOUNTING BRACKET (G1531550)

REMOVAL AND INSTALLATION


REMOVAL

NOTE:

The hood latch panel mounting bracket is installed in conjunction with:

- Hood latch panel
 - Front fender
-

1.

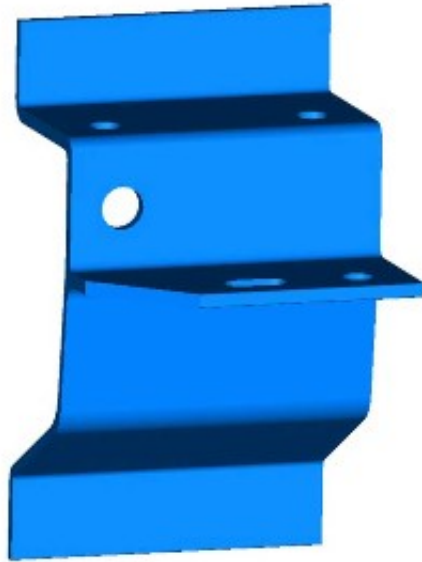

E143229

The hood latch panel mounting bracket is serviced as indicated.

-
2. Before commencing this procedure make sure that you are aware of all Health and Safety requirements.

For additional information, refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

-
3. For further information on the methods, tools and fixings used in this procedure refer to the body repairs - general information section.

NOTES:

- Where breakstem fasteners (BSF) removal is instructed remove fastener shaft with a 4mm punch and remove the head with a 6.5mm drill bit. Make sure all the drilled holes are free from debris.
- Where self piercing rivets (SPR) removal is instructed use either the approved SPR tool or 5.3mm drill bit.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.
- Right hand indicated, left hand similar.

-
4. For additional information, refer to: [Fender](#) (501-02 Front End Body Panels, Removal and Installation).
-

5. For additional information, refer to: [Hood Latch Panel](#) (501-27 Front End Sheet Metal Repairs, Removal and Installation).
-

6. 



E143230

Remove the SPR's as indicated.

-
7. Remove the hood latch panel mounting bracket.
-

INSTALLATION

CAUTION:

Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.

NOTES:

- BSF installation involves using the Land Rover approved BSF installation tool and requires a hole diameter of 6.5mm.
- SPR installation requires using the Land Rover approved SPR tool.

1. Remove rivet remnants.

2. Offer up the hood latch panel mounting bracket and clamp into position. Check alignment, if correct, proceed to next step, if not rectify and recheck before proceeding.

3. 



E143230

Install the SPR's and BSF's as indicated.

4. Make sure corrosion protection is applied to all areas affected by repair.

5. The installation of associated panels and components is the reversal of removal procedure.

