

2016.0 RANGE ROVER (LG), 501-27

FRONT END SHEET METAL REPAIRS

HOOD LATCH PANEL (G1454604)

REMOVAL AND INSTALLATION

REMOVAL

NOTES:

- Where Self Piercing Rivets (SPR's) removal is instructed use either the approved SPR tool or 5.3mm drill bit
- Where Breakstem Fasteners (BSF) removal is instructed remove fastener shaft with a 4mm punch and remove the head with a 6.5mm drill bit

-
1. The hood latch panel is a category B repair.
-

2.



E143299

The hood latch panel is serviced as a separate bolt-on panel.


-
3. For additional information, refer to:
[Health and Safety Precautions](#) (100-00 General Information, Description and Operation),
Corrosion Prevention (501-25 Body Repairs - General Information, Description and Operation),
[Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).

 4. Disconnect the battery ground cable.
For additional information, refer to: [Battery](#) (414-01 Battery, Mounting and Cables, Removal and Installation).

 5. Remove the front Bumper Cover.
For additional information, refer to: [Front Bumper Cover](#) (501-19 Bumpers, Removal and Installation).

 6. Remove both headlamps.
For additional information, refer to: [Headlamp Assembly](#) (417-01 Exterior Lighting, Removal and Installation).
-

7. 

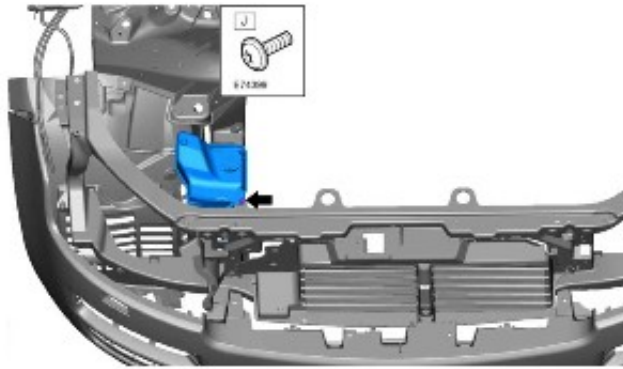


I

Release the windshield washer reservoir and position it to one side.

8. Remove both air deflectors.

9. 

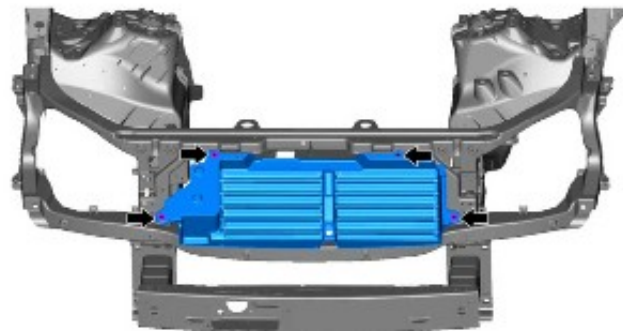

E143300

Remove the active vanes.

10. Release the hood latch panel wiring harness and position it to one side.

11.




E143305

Remove both crash sensors.

For additional information, refer to: [Airbag Supplemental Restraint System](#) (501-20B Supplemental Restraint System, Diagnosis and Testing).

12. Release the front bonnet seal in the area of the hood latch panel.


13.

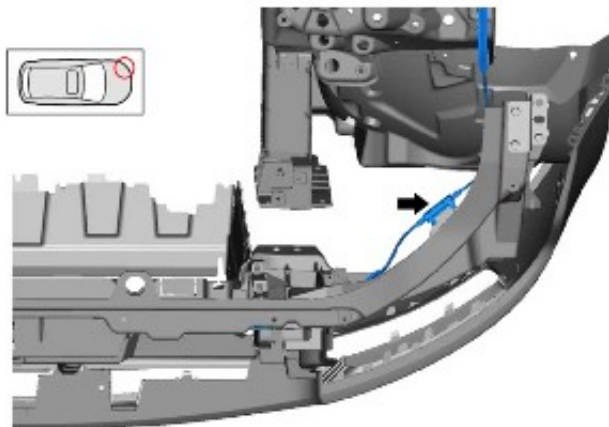

E143304

Disconnect the hood latch panel release cable.


14.

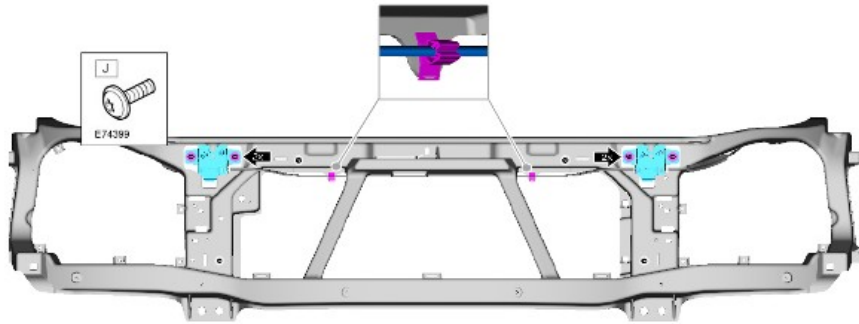

E143306

Remove both hood latches.

15.

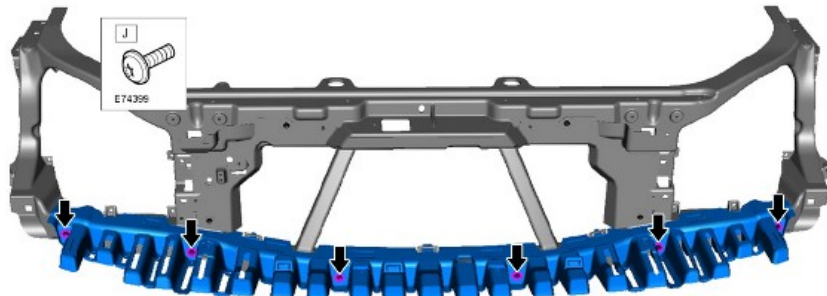


E143307

Remove the front bumper cover retaining strip.

16. Release the front bonnet seal in the area of the hood latch panel.


17.

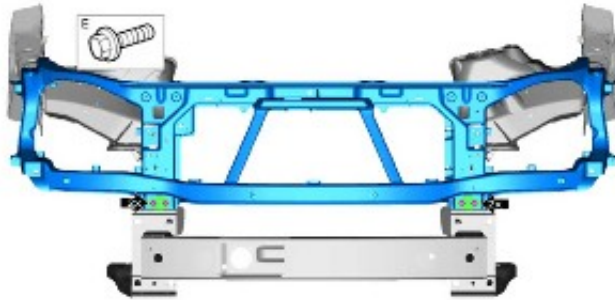

E143302

Remove the hood latch panel retaining bolts.

18.

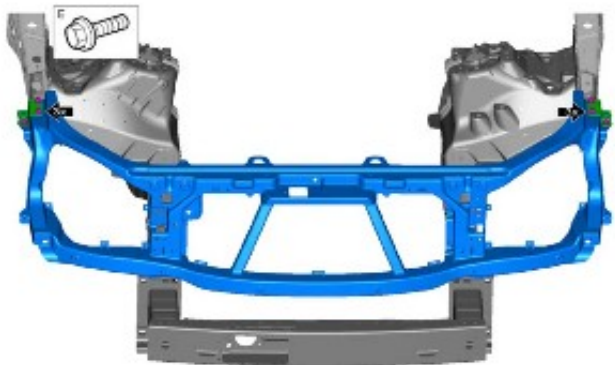

E143301

Remove the hood latch panel retaining bolts.

19.

CAUTION:

Protect the front fender paintwork and take care not to damage the front fender panels.

Remove the hood latch panel and disconnect the radiator splash

shield.

INSTALLATION

CAUTION:

Make sure any panel joints containing adhesive are fully clamped to avoid any separation prior to the installation of external panels. These joints must be left clamped until the adhesive has cured

NOTES:

- Breakstem Fastener (BSF) installation involves using the Land Rover approved BSF installation tool and requires a hole diameter of 6.5mm
- Self Piercing Rivet (SPR) installation requires using the Land Rover approved SPR tool

-
1. Offer up the hood latch panel. Check alignment, if correct, proceed to next step, if not rectify and recheck before proceeding.

-
2. Install the hood latch panel.

- **NOTE:**

Bolts are pre-coated to inhibit galvanic corrosion and can be reused only if the coating is not damaged.

Tighten to 25 Nm.

-
3. The installation of associated panels and components is the reversal of removal procedure.

