

2016.0 RANGE ROVER (LG), 501-11

GLASS, FRAMES AND MECHANISMS

FRONT DOOR WINDOW REGULATOR MOTOR (G1549836)

REMOVAL AND INSTALLATION

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.

1.

WARNING:


To avoid accidental deployment, the restraints control module backup power supply must be depleted. Wait at least two minutes after disconnecting the battery ground cable(s) before commencing any repair or adjustment to the supplemental restraint system (SRS), or any component(s) adjacent to the SRS sensors. Failure to follow these instructions may result in personal injury.

Make the SRS system safe.


Refer to: Standard Workshop Practices (100-00, Description and Operation).

2. Refer to: Front Door Trim Panel (501-05, Removal and Installation).


3.

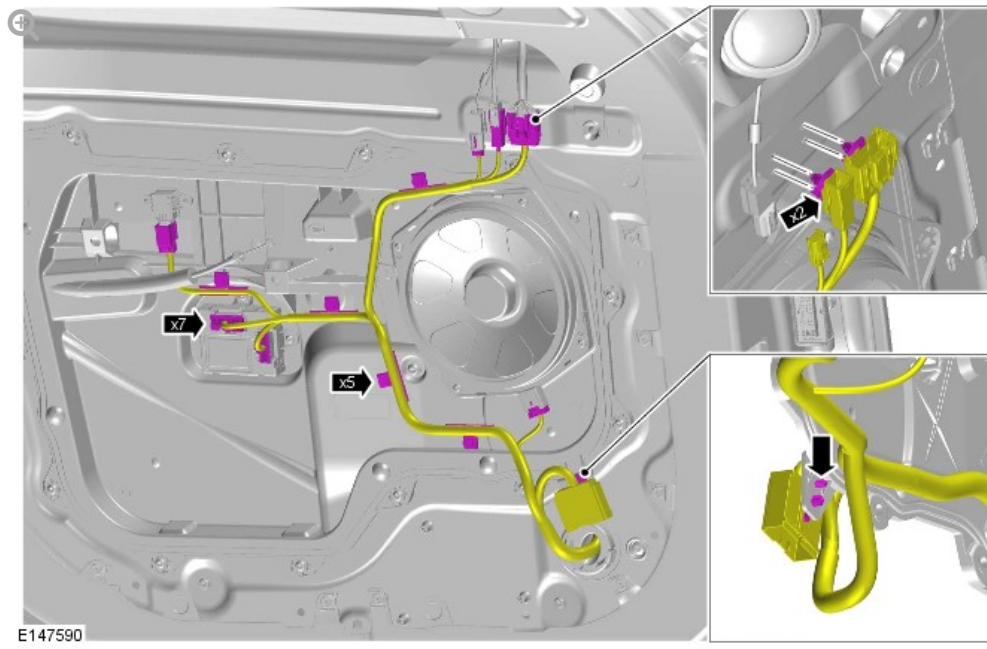

4.

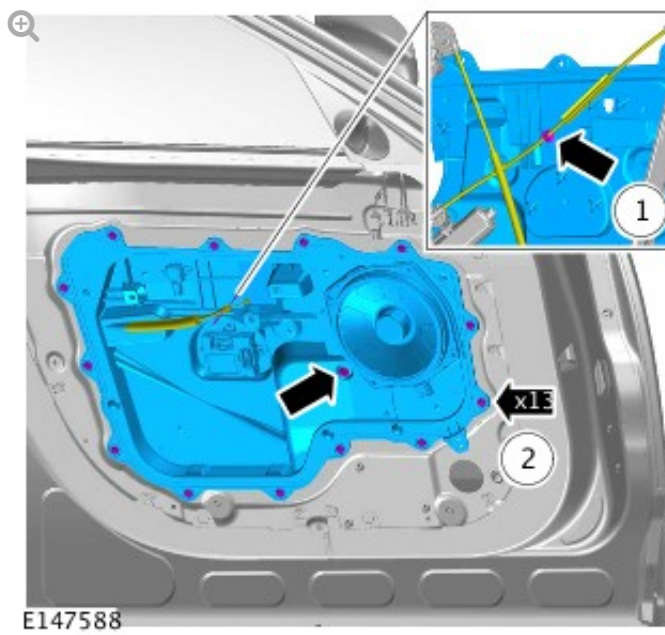


5.

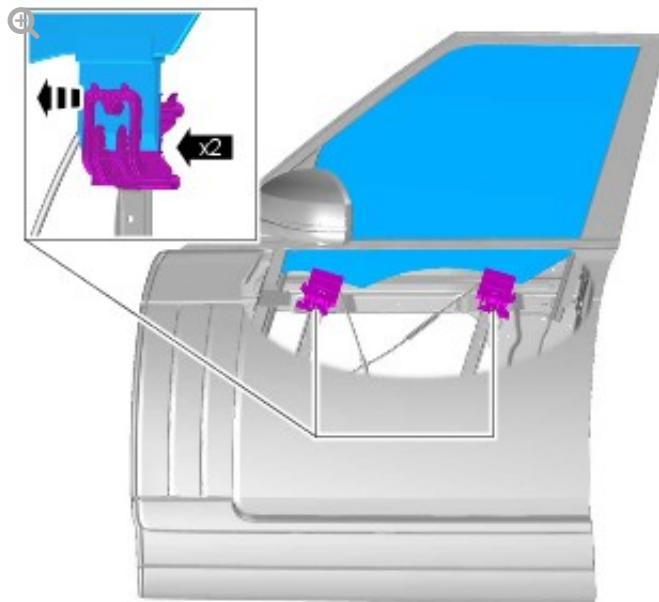

E147589

1. Raise the glass and secure it at the top of the door frame.
2. Secure with adhesive tape.

6.

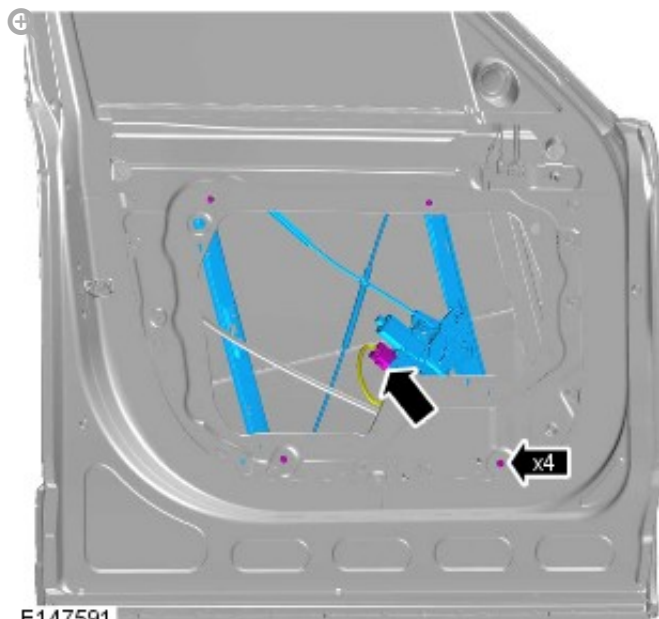


E147591

Torque: 8 Nm

7.

NOTE:

Do not disassemble further if the component is removed for access only.

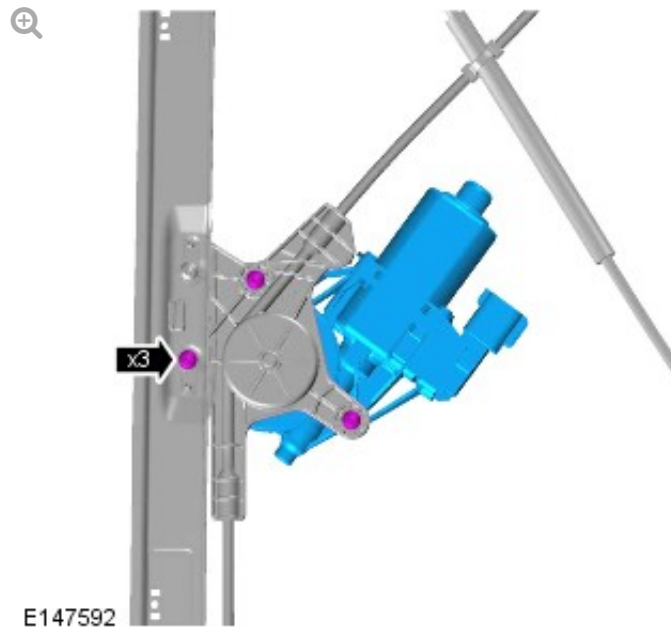

Torque: 4.5 Nm

INSTALLATION

1. To install, reverse the removal procedure.