

2016.0 RANGE ROVER (LG), 501-11

GLASS, FRAMES AND MECHANISMS

FRONT GLASS ROOF PANEL

[G1551685]


REMOVAL AND INSTALLATION

REMOVAL

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.


1. 

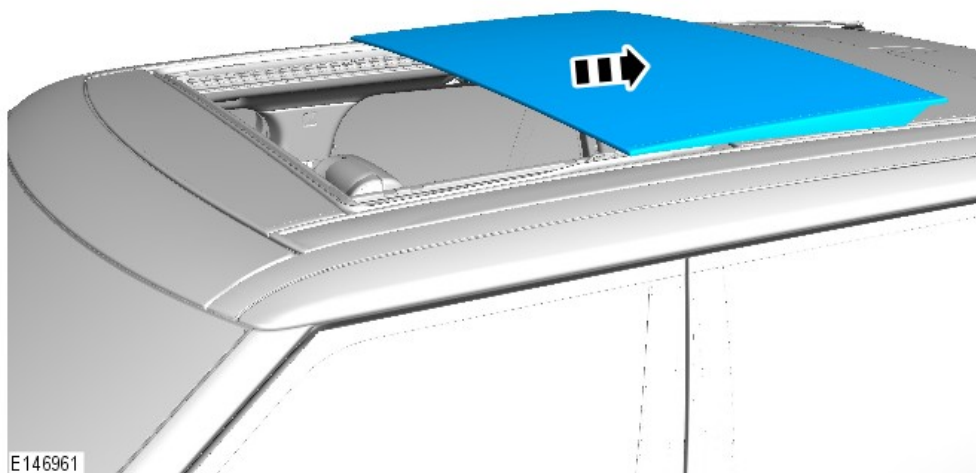

Operate the opening roof panel fully rearwards.

2. Refer to: [Air Deflector](#) (501-17 Roof Opening Panel, Removal and Installation).

3.

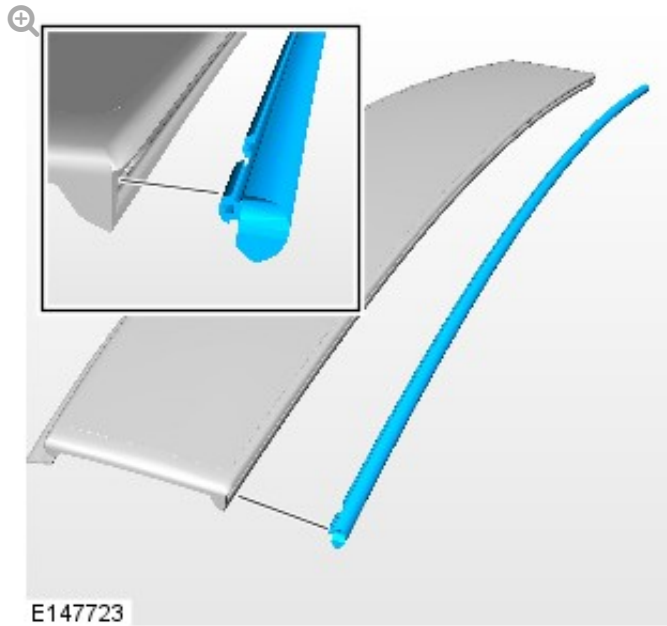


Remove the glass panel rear seal.

4.

CAUTION:


Use suitable tape to protect the roof opening panel weather strip.

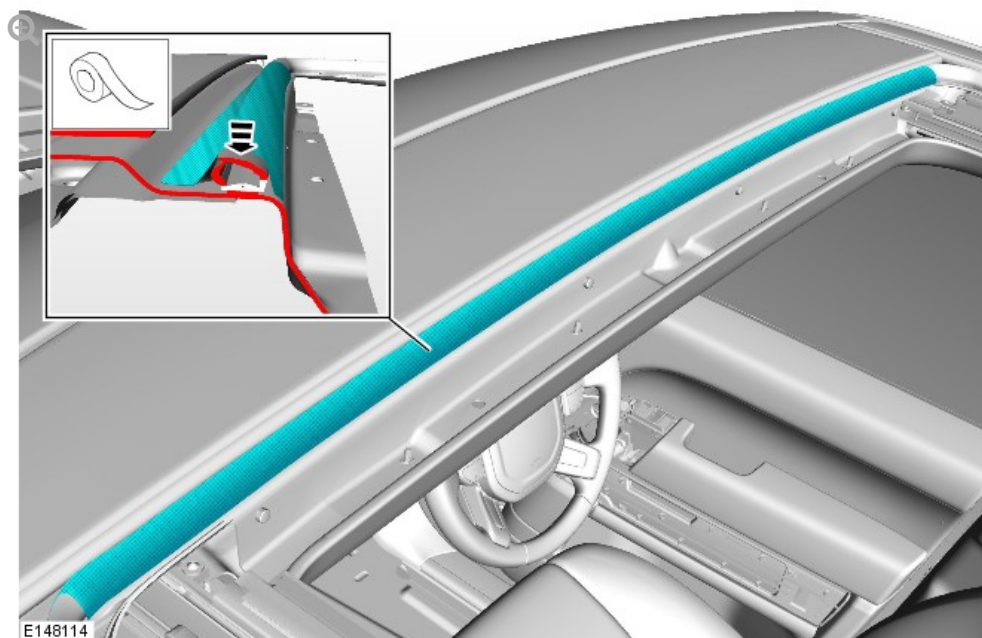

5.

CAUTION:


A metal strip should be installed between the bottom of the blade and the taped-down components. This will reduce friction and allow the blade to cut easier.

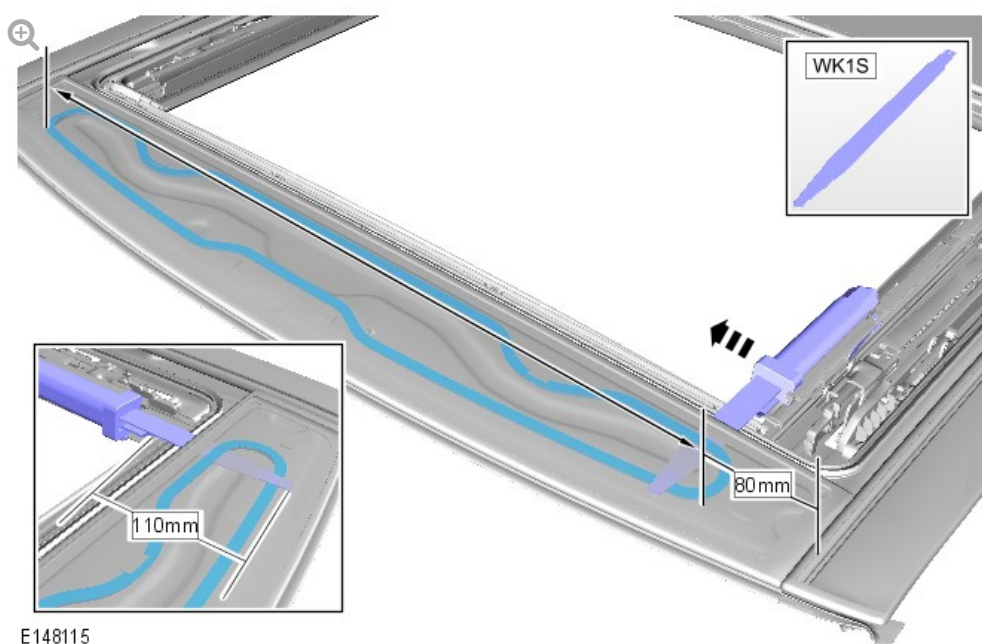

- Cut the sealant in the area shown, use a WK1S blade, and set

the controller arm set to a 110mm cut depth.

6.

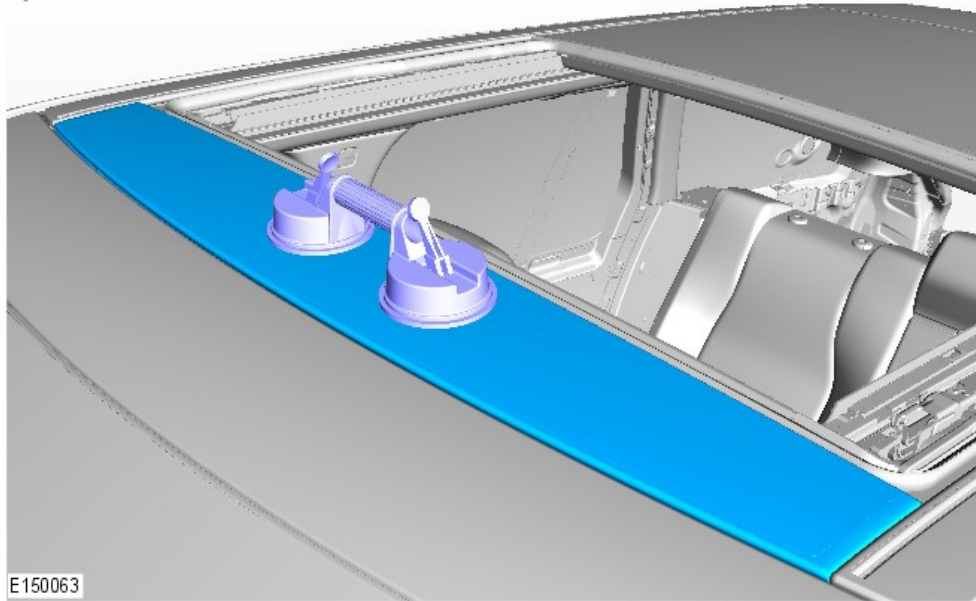


INSTALLATION

1.

NOTE:


Remove the tape.

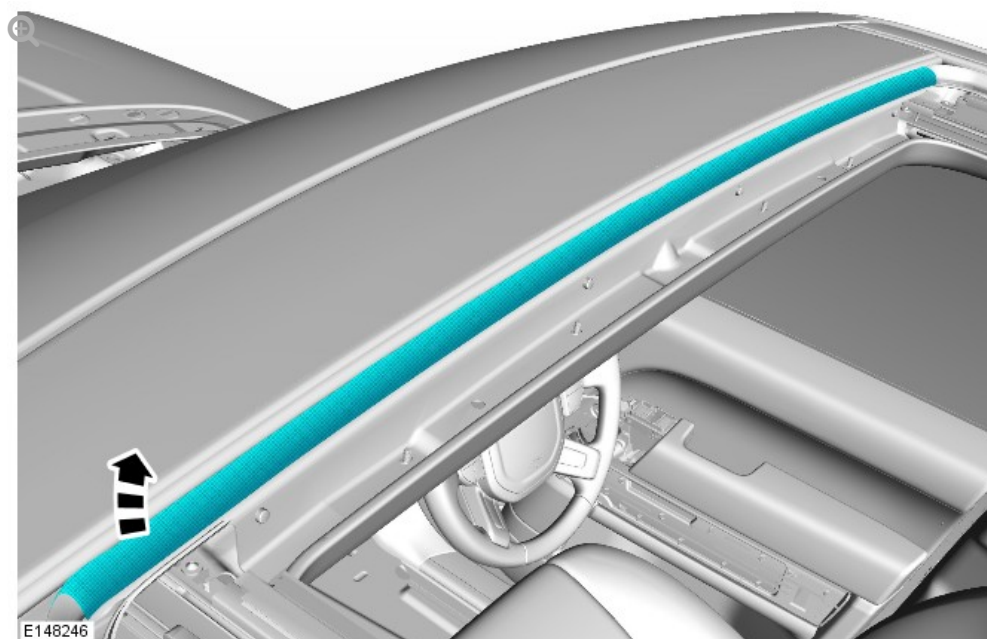

2.

CAUTIONS:

- Make sure that the mating faces are clean and free of foreign material.
- Correct preparation of body apertures "post painting" to ensure satisfactory glass adhesion, must be carried out in line with industry practise.

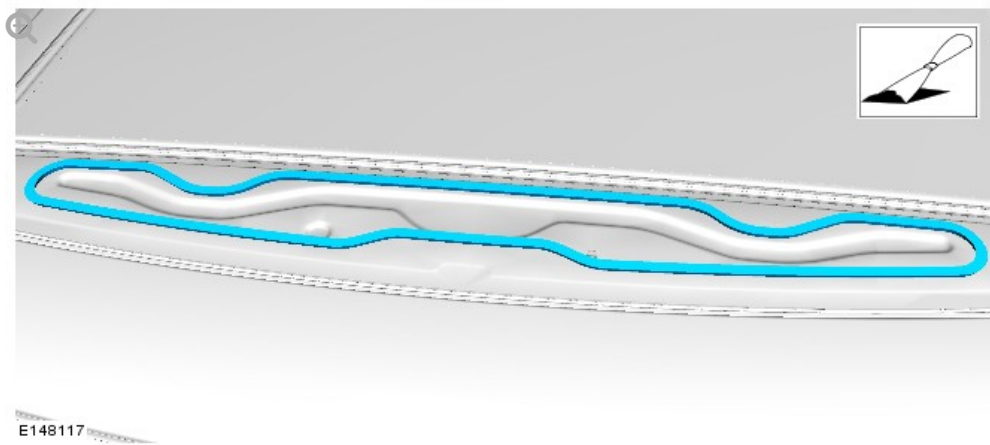

- Prepare the window glass, window glass flange and trimmed PU adhesive in accordance with the instructions included with the PU adhesive kit.


3.

CAUTION:


Touching the adhesive surface will impair rebonding.

NOTE:

Install new spacers.

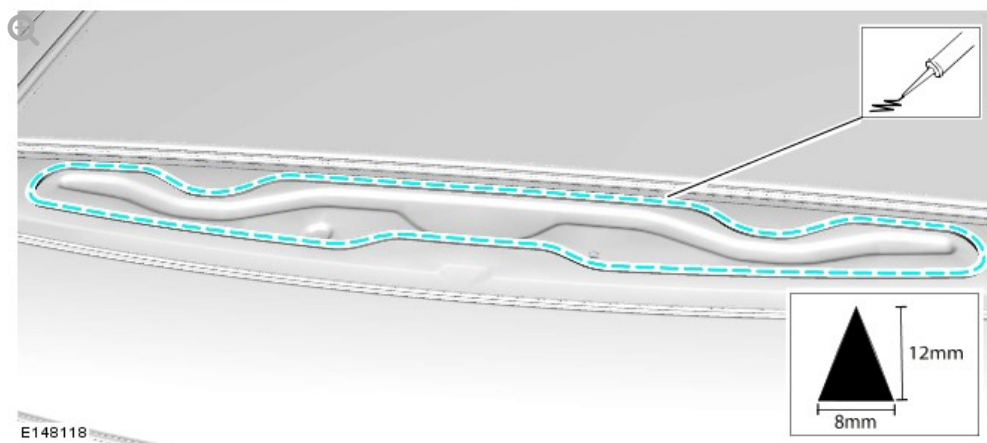


4.

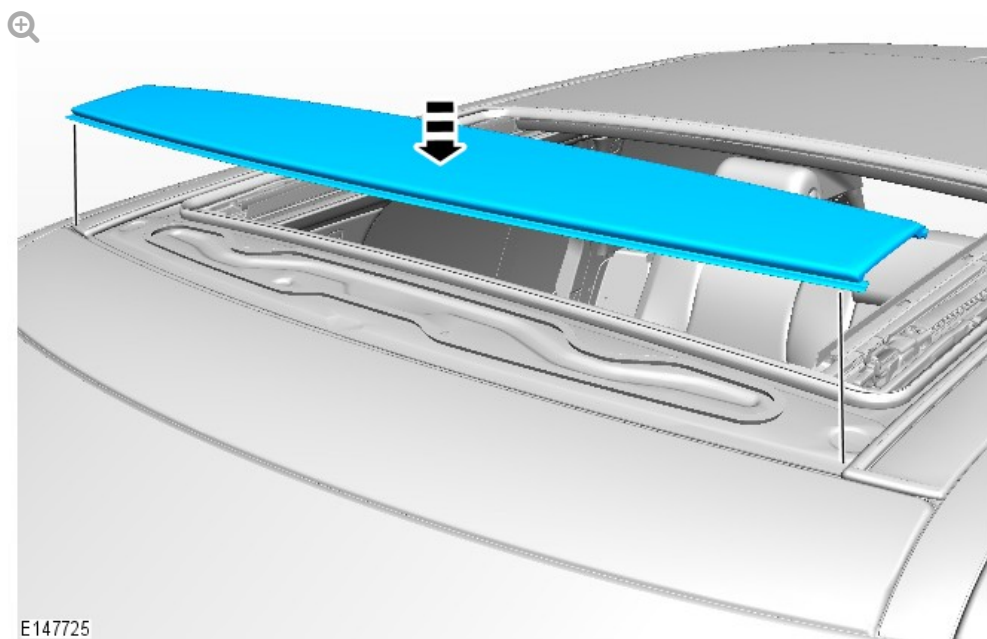

- Make sure the component is aligned with the measurements taken prior to removal. Failure to follow this instruction may result in damage to the glass panels during operation of the roof opening panel.
- Use suitable weights or straps, apply a downward pressure to the glass to achieve the correct curvature of the glass.
- Allow up to 1 hour, depending on temperature and humidity, to allow the adhesive to set before continuing with the procedure.

5.

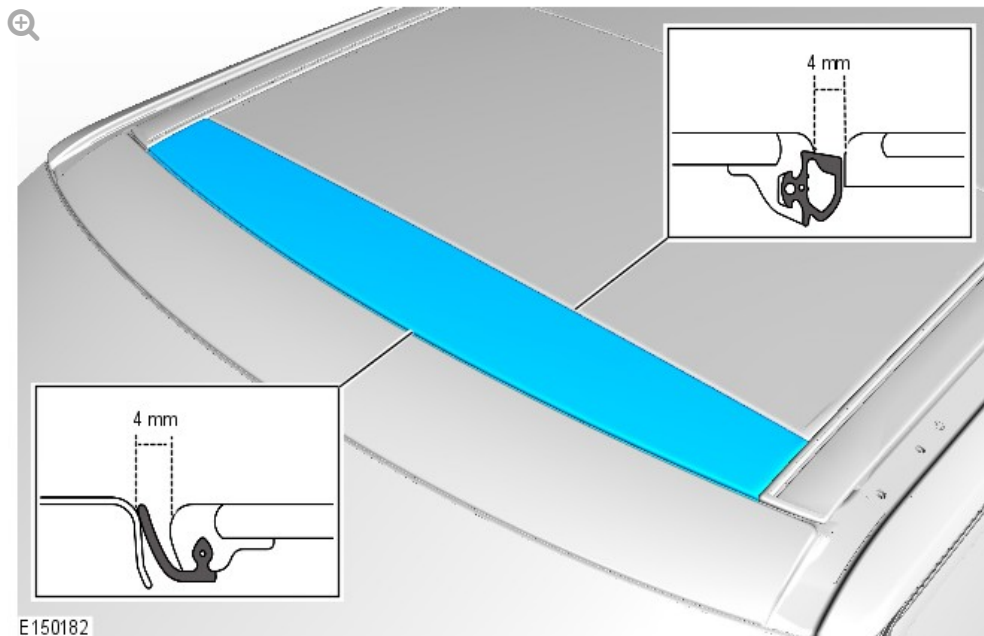


E150182

6.

NOTE:

With the roof opening panel closed, check the alignment of the glass to the roof panel. The glass should be central in its aperture. Profile of rear glass panel to body: front edge, set flush or up to 1.0 mm (0.040") low; rear edge, set flush or up to 1.0 mm (0.040") high.

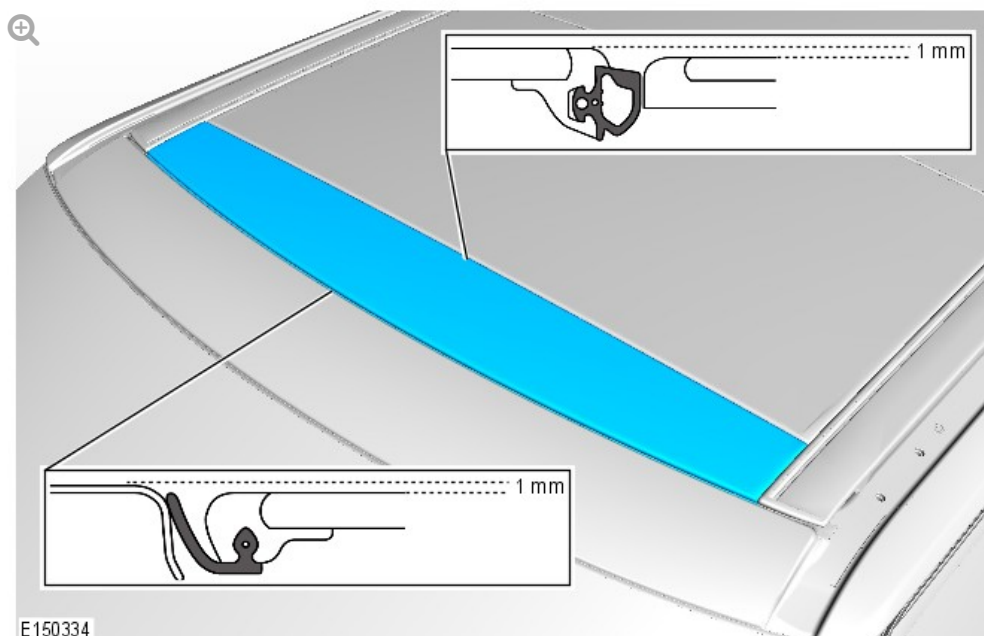


E150334

7.

CAUTION:

Make sure that no excess sealant residue is evident.

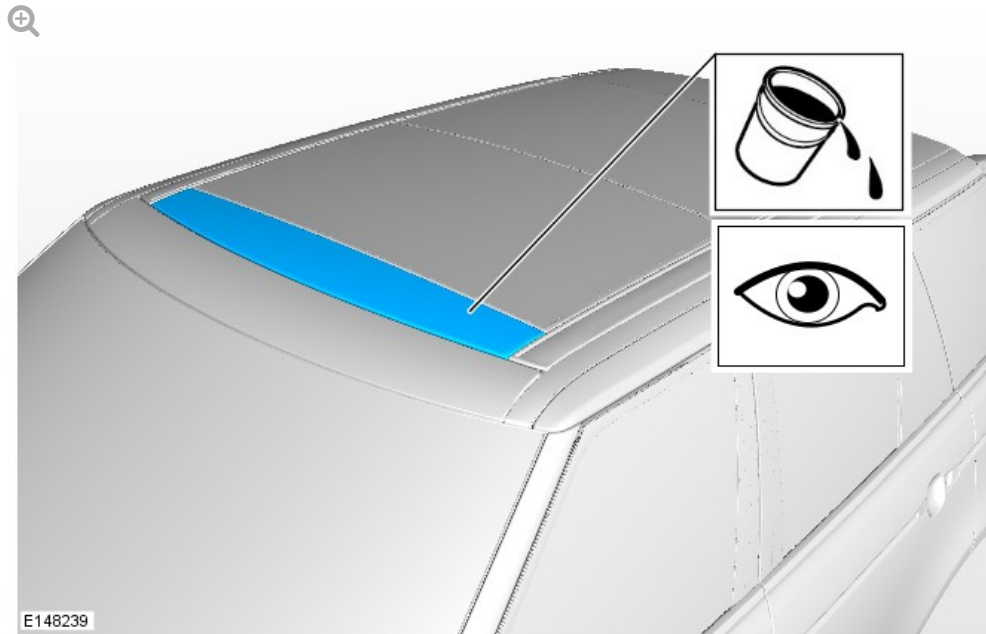

- If water is used as a means for the leak check, then allow sealant to dry before testing.
- Spray water around the windshield glass, mark any area that leaks. Dry the windshield glass and sealant before applying additional sealant.