

2016.0 RANGE ROVER (LG), 501-11

GLASS, FRAMES AND MECHANISMS

GLASS ROOF PANEL (G1780760)

REMOVAL AND INSTALLATION

REMOVAL

CAUTION:


Always protect paintwork and glass when removing exterior components.

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.


1. Refer to: [Headliner](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Refer to: [Roof Opening Panel Blind](#) (501-17 Roof Opening Panel, Removal and Installation).

3.

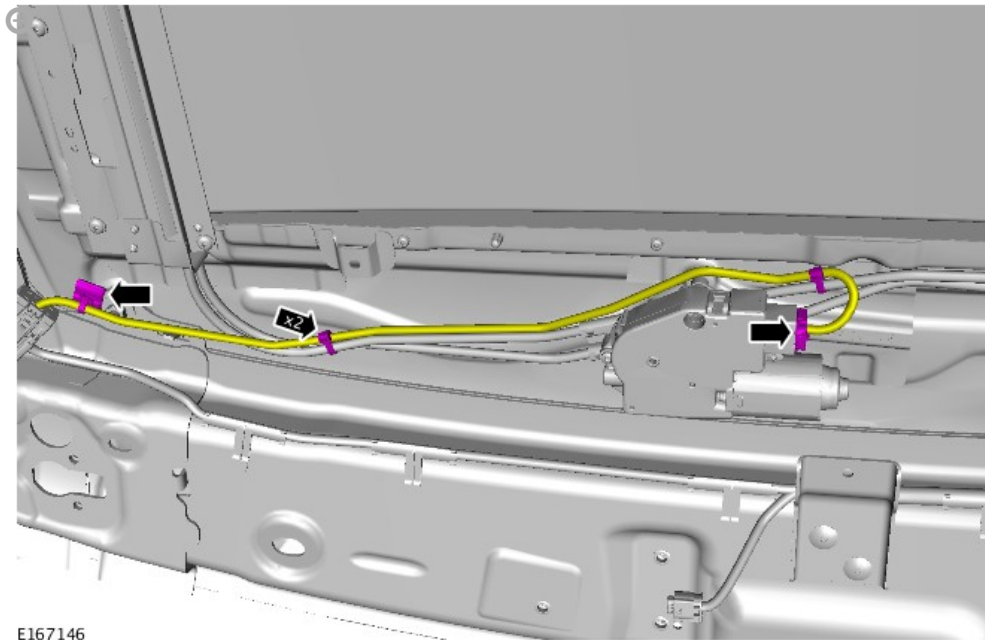

E167146

4.

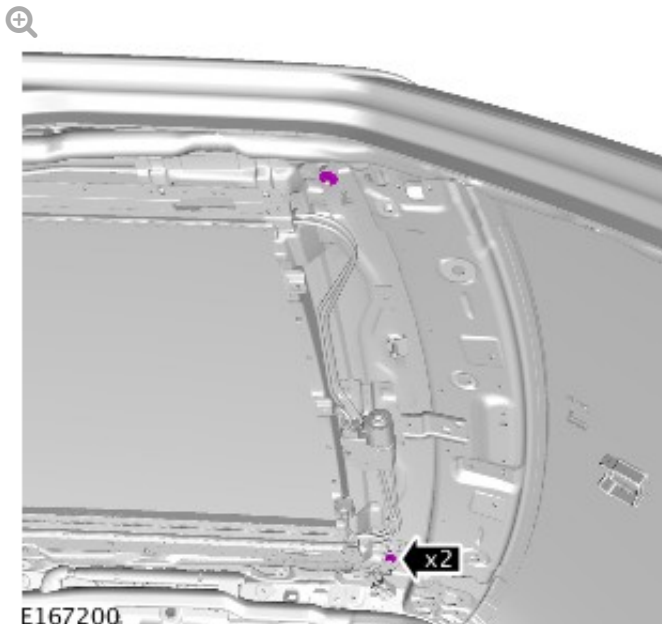


E167200

5.

NOTE:


Repeat the step for the other side.

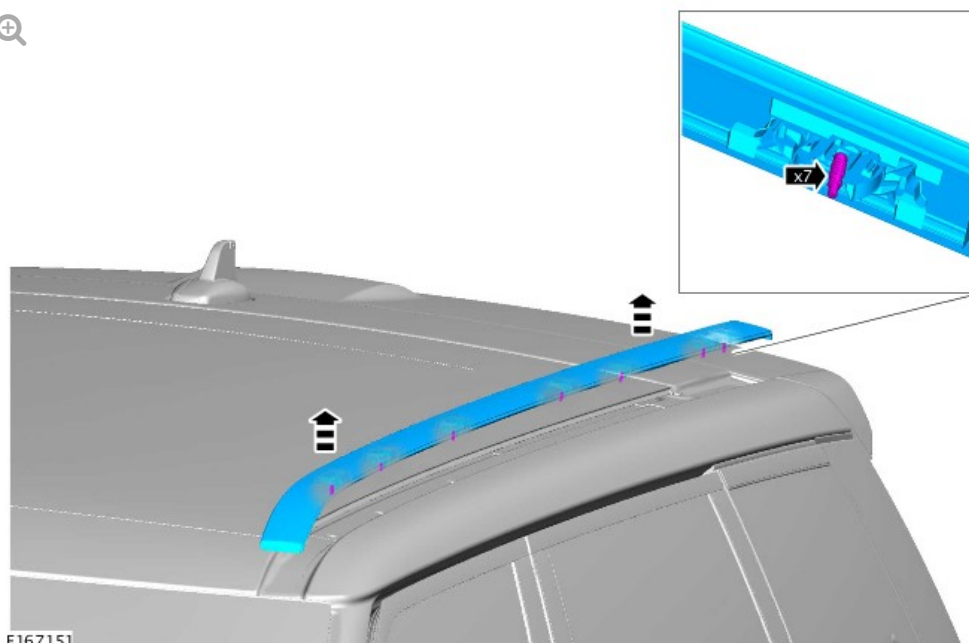

6.

CAUTIONS:

- Protect the surrounding paintwork to avoid damage.
- Protect the surrounding components.

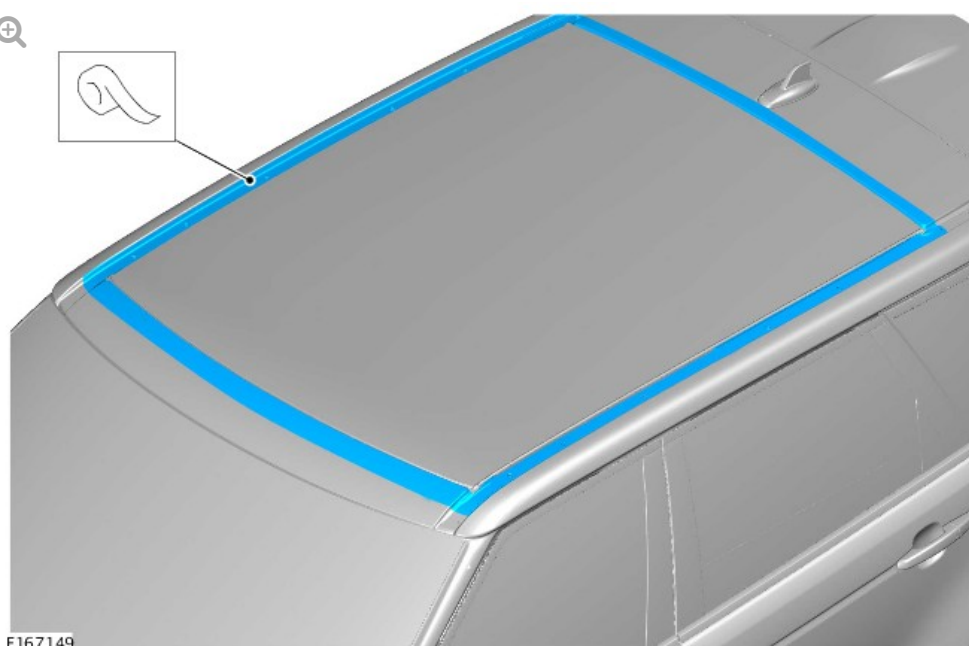

7.




WARNING:

Wear safety goggles and protective gloves.

CAUTION:


Protect the surrounding paintwork to avoid damage.

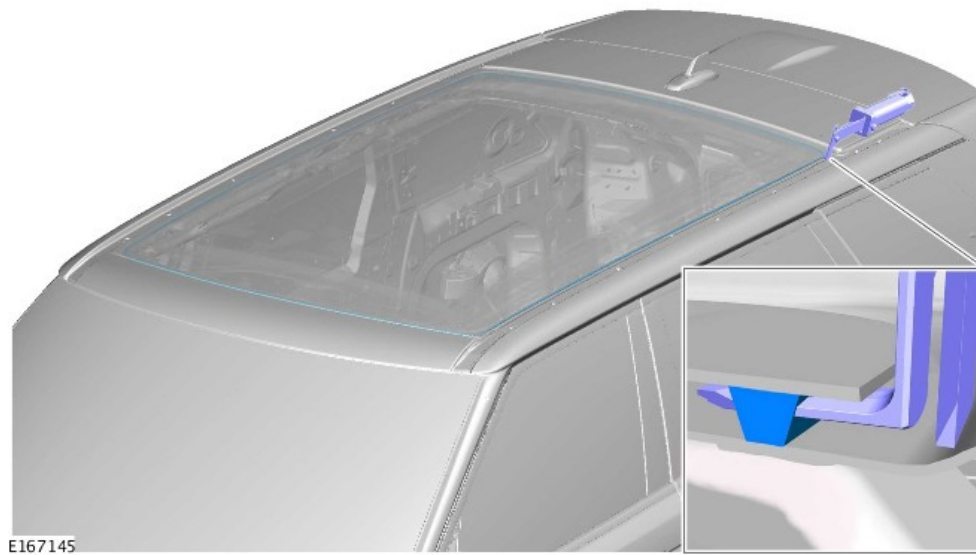

8.

NOTE:

This step requires the aid of another technician.

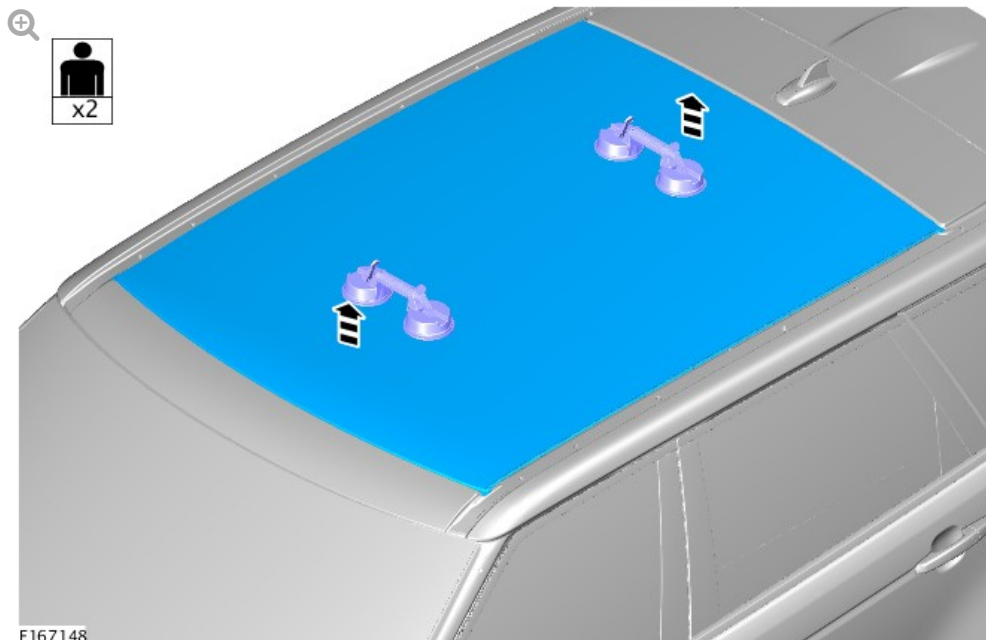


INSTALLATION

1.


CAUTION:

Make sure that the mating faces are clean and free of foreign material.

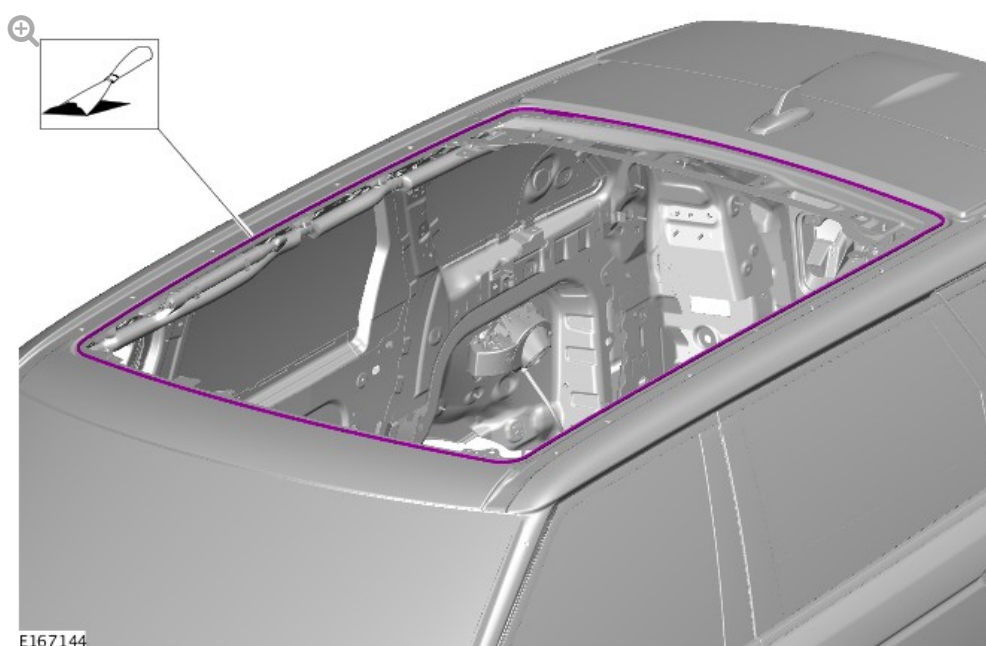

2. Prepare the glass roof panel, glass roof panel flange and trimmed PU adhesive in accordance with the instructions.

3.

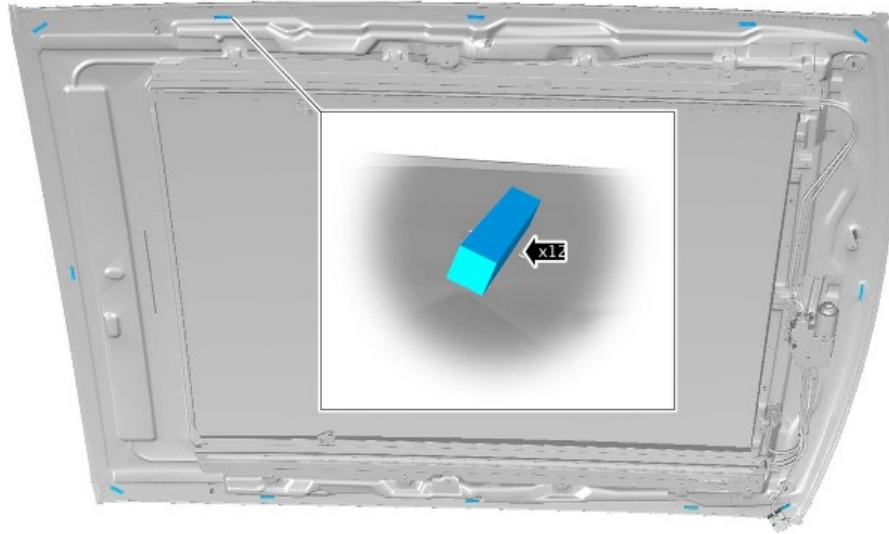

E167152

Check the spacer blocks for damage. If damage is evident, install new spacer blocks


4.

CAUTION:

Touching the adhesive surface will impair rebonding.

NOTE:

Make sure that a Hi-modulus sealer (for example, Wurth Ultimate adhesive) is used when bonding the component to the vehicle.

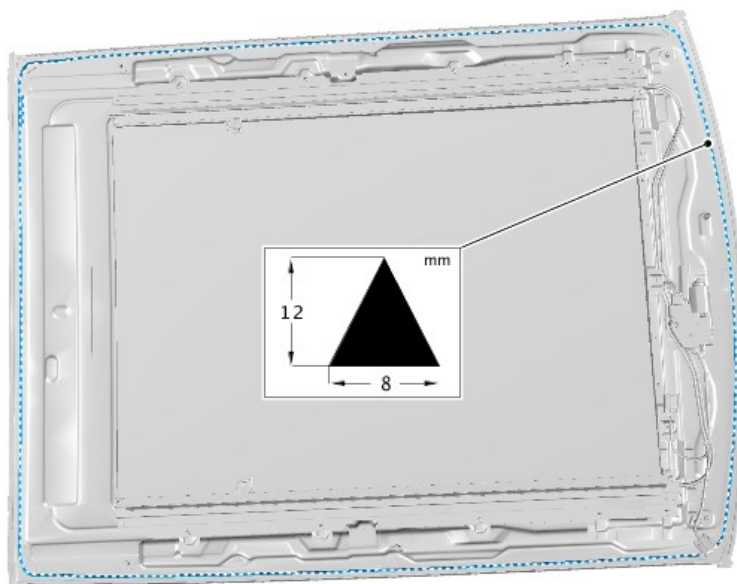

E167140


5.

CAUTION:

Note the orientation of the locating pins prior to installation.

NOTE:

Make sure that the front locating pin is installed first.

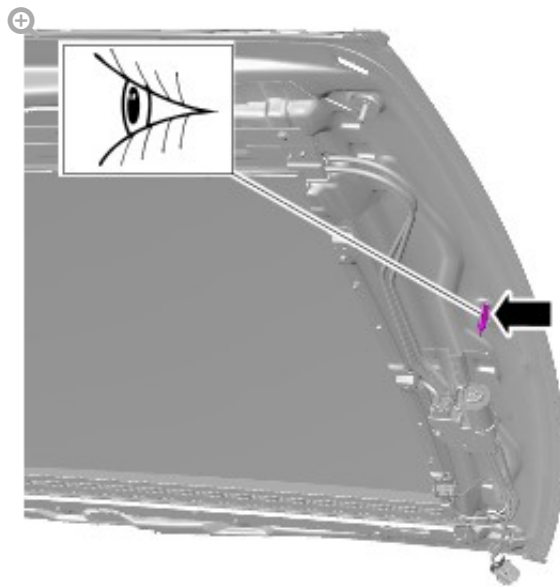

E167147


6.

WARNING:

This step requires the aid of another technician.


CAUTION:

Make sure that equal pressure is applied to the full length of the component.

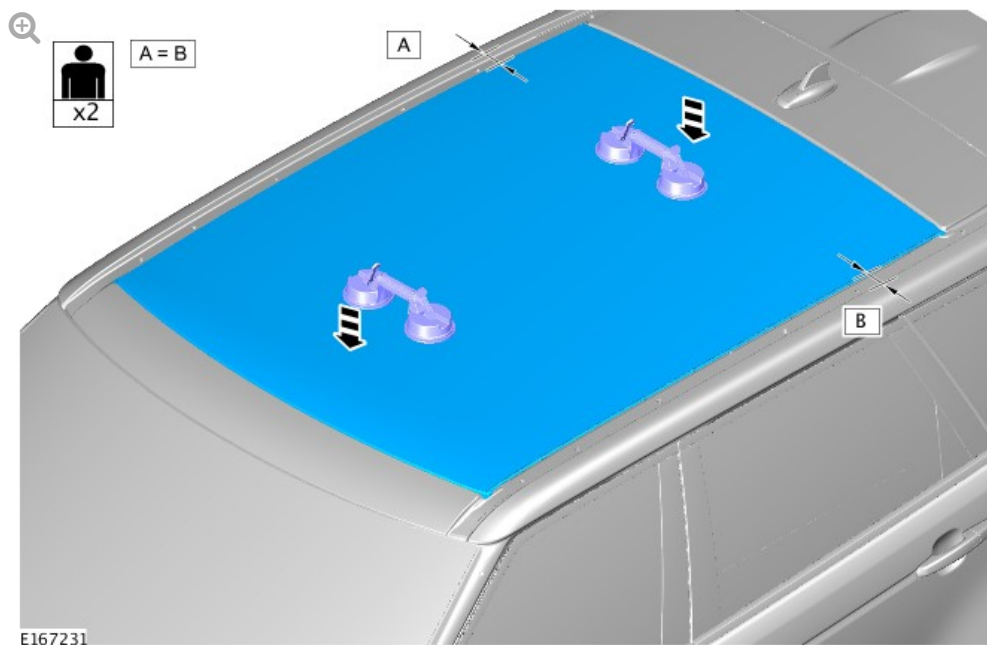

- If the ambient temperature falls below 10 degrees C, apply warm air (25 degrees C) continuously for 15 minutes.
2. Lightly press the glass roof panel to seat the sealer.

7.

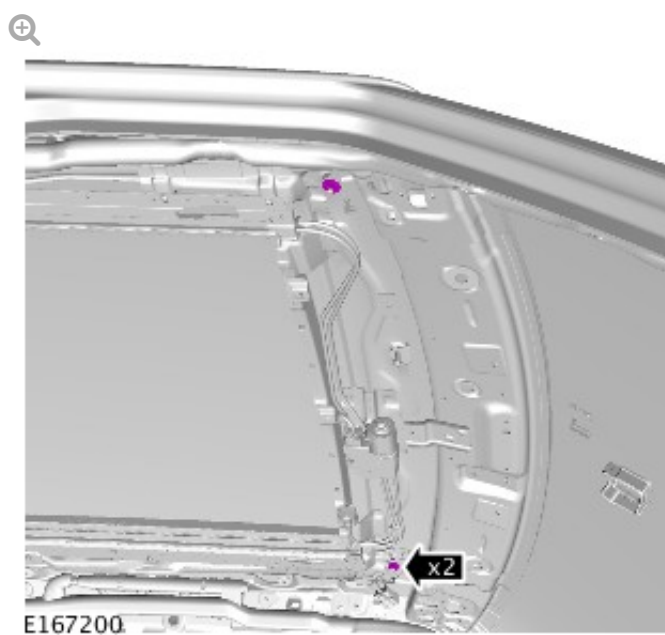


Torque: 9 Nm

8.

NOTE:


Make sure that the gap around the component is even.

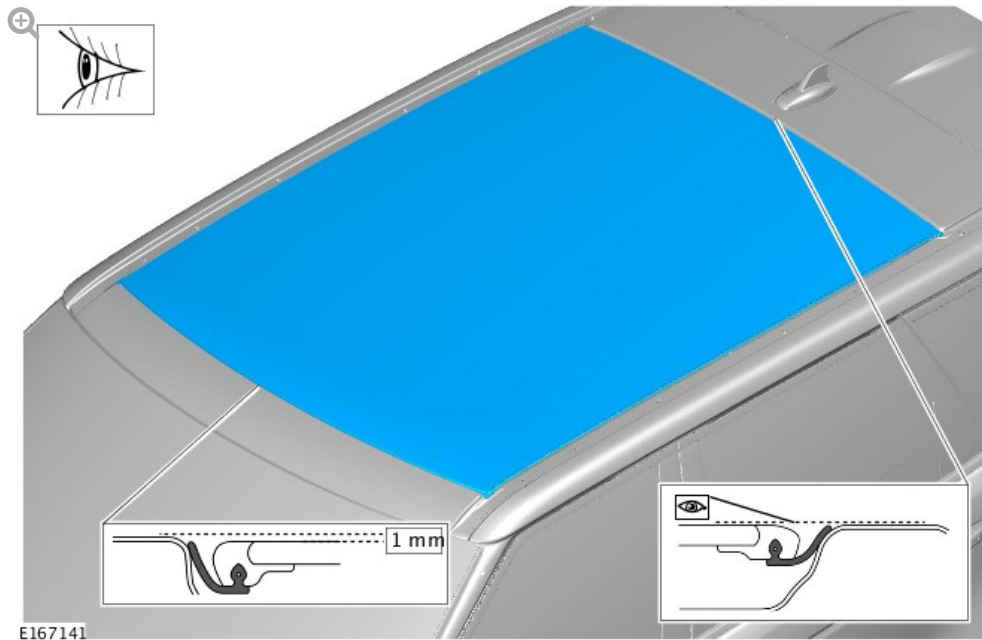

9.


CAUTIONS:

- Make sure that no excess sealant residue is evident.
- Make sure that the sealant is allowed to dry in accordance with the instructions included with the PU adhesive kit.
- If using heat to dry the water from the vehicle after water testing the glass roof panel, **do not** use excessive heat

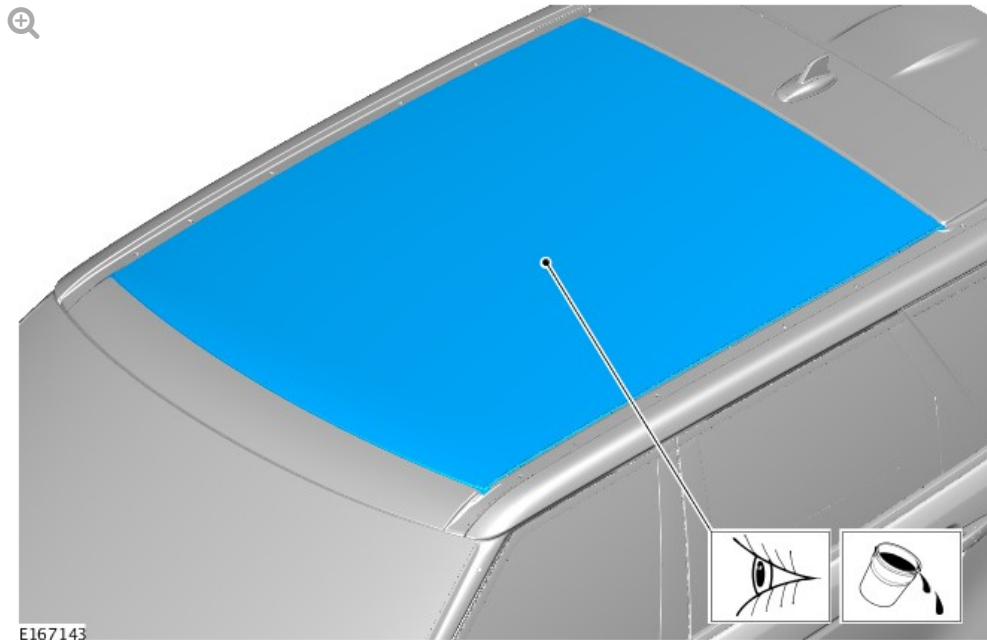

- If water is used as a means for the leak check, then allow sealant to dry before testing.
2. Spray water around the glass roof panel, mark any area that leaks. Dry the glass roof panel and sealant before applying additional sealant.

10.

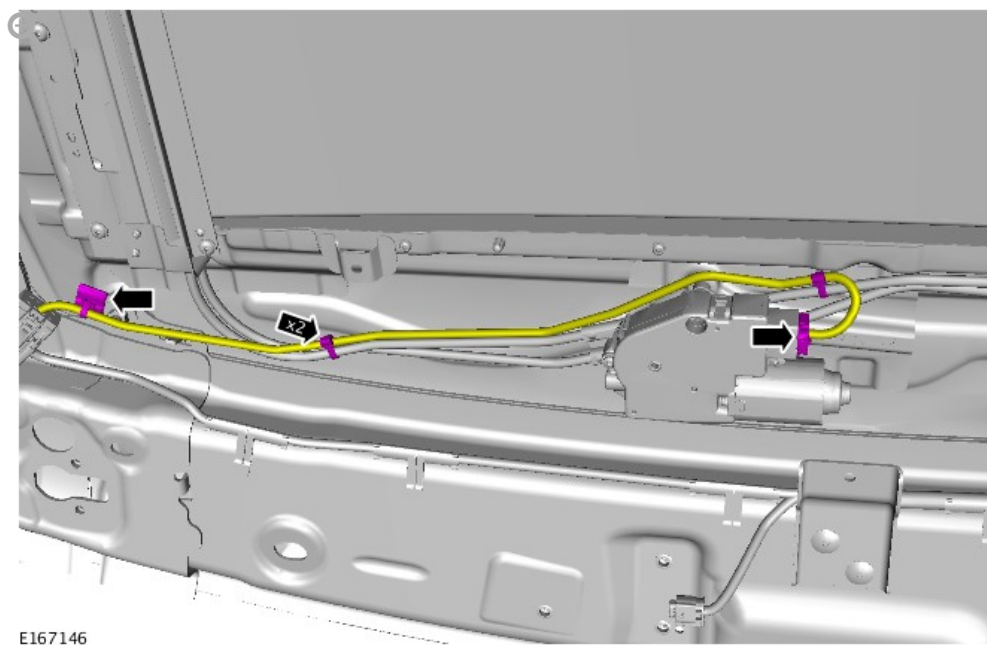

11. Refer to: [Roof Opening Panel Blind](#) (501-17 Roof Opening Panel, Removal and Installation).

12. Refer to: [Headliner](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).